RVP-6000QMB/QMT
RM-1270

SERVICE MANUAL

AEP Model

Chassis No. SCC-D82B-A

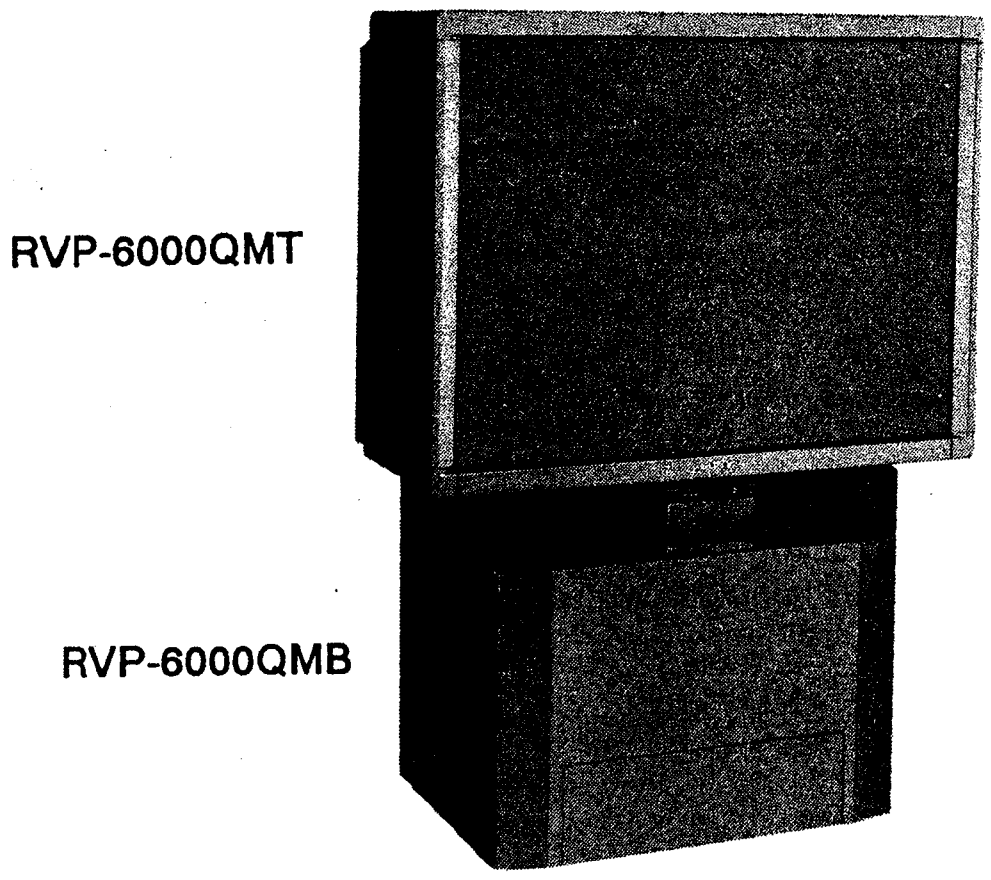

Note: The service manual for RM-1270 has been issued separatly.

MODELS OF THE SAME SERIES	
RVP-6000QMB/QMT	
HDIR-550MB/MT	
VPH-1270QM	

SPECIFICATIONS

Optical

Projection system	3 picture tubes, 3 lenses, Horizontal inline system, Rear projection type
Picture tube	7-inch high-brightness monochrome tubes, with coolant sealed
Projection lens	HACC (High-resolution Aspherical and Color Corrected) lenses F 1.1/116 mm
Projected picture size	Factory-adjusted to 60 inches measured diagonally
Luminance	150 ft-L (white peak)

General

Color system	PAL, SECAM, NTSC and NTSC$_{4.43}$ systems, switched automatically
Resolution	1280 DOTs (RGB input at 15 kHz) 700 TV lines (VIDEO input)
RGB inputs	Horizontal frequency: 15 kHz – 65 kHz Vertical frequency: 38 Hz – 150 Hz
Test signal	Cross hair test pattern generator is incorporated.
Speaker	Total 10 W + 10 W
Inputs	**VIDEO input** VIDEO IN Y/C: 4-pin mini DIN connector Y (luminance) signal: 1 Vp-p±2dB, sync negative, 75 ohms terminated C (chrominance) signal: burst 0.286 Vp-p±2dB, 75 ohms terminated (NTSC) 0.3 Vp-p±2dB, 75 ohms teminated (PAL) VIDEO: BNC connector Composite video input, 1 Vp-p±2dB, sync negative, 75 ohms terminated AUDIO IN: phono jack 435 mVrms, Impedance: more than 47 kohms

— Continued on next page —

COLOR REAR VIDEO PROJECTOR

SONY®

MICROFILM

	RGB input R: BNC connector Red input, 0.7 Vp-p±2dB, 75 ohms terminated, positive G/G SYNC: BNC connector Green input, 0.7 Vp-p±2dB, 75 ohms terminated, positive Green with sync input, 1 Vp-p±2dB, 75 ohms terminated, positive B: BNC connector Blue input, 0.7 Vp-p±2dB, 75 ohms terminated, positive SYNC/HD: BNC connector Composite sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative Horizontal sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative VD: BNC connector Vertical sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative AUDIO IN L (MONO)/R: phono jacks REMOTE 1 connector: 14-pin connector (see "Signal assignment") REMOTE 2 connector: 9-pin connector (see "Signal assignment") CONTROL S IN: minijack, 5 Vp-p
Outputs	VIDEO OUT: BNC connector Composite video output, 1 Vp-p±2dB, impedance 75 ohms, output video signal from the VIDEO IN connector CONTROL S OUT: minijack, 5Vp-p
Power requirements	220–240 V AC, 50/60 Hz
Power consumption	430 W (Video input) 480 W (RGB input)
Dimensions	1,340 × 1,815 × 990 mm (w/h/d) (52 7/8 × 71 1/2 × 39 inches)
Weight	Approx 210 kg (462 lb 16 oz)
Accessories supplied	Remote Commander RM-1270 (1) with 3 R6 (AA) batteries Remote Commander cable (1) AC power cord (1)

Optional accessories

Shielded cable	SMF-506 (D-sub 25-pin ↔ 4 BNC)
CCQ BRS cables	
Interface board	IFB-10 (5 BNC) IFB-20 (9-pin) IFB-30 (9-pin) IFB-1000 (9-pin) (Video, Y/C)
Signal interfaceswitcher	PC-1270/1270M

Signal assignment

REMOTE 1 connector (14-pin)

Pin No.	Signal
1	GND
2	HD/Composite Sync
3	SIRCS
4	NC
5	GND(SIRCS)
6	B/C
7	GND(B/C)
8	GND(G/Y)
9	G/Y
10	RGB/Video
11	R/Composite Video
12	Composite Video/YC
13	AUDIO
14	VD

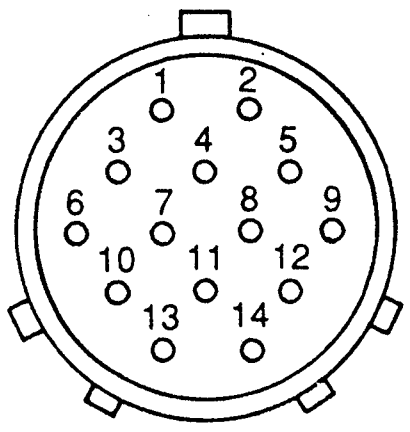

REMOTE 2 connector (D-sub 9-pin)

Pin No.	Signal
1	Frame Ground
2	$\overline{\text{Transit A}}$
3	Receive B
4	Receive Common
5	Spare
6	Transmit Common
7	Transmit B
8	$\overline{\text{Receive A}}$
9	Frame Ground

RS-422 format



Y/C Connector (4-pin mini: DIN)

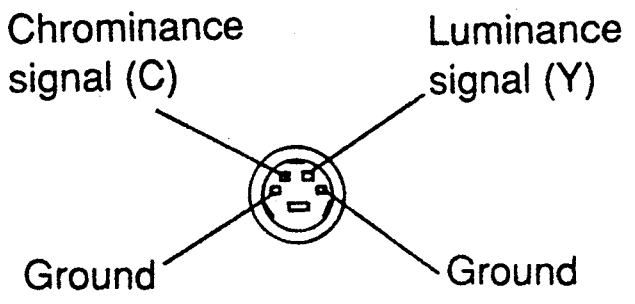

RVP-6000QMB

SERVICE MANUAL

AEP Model

Chassis No. SCC-D82B-A

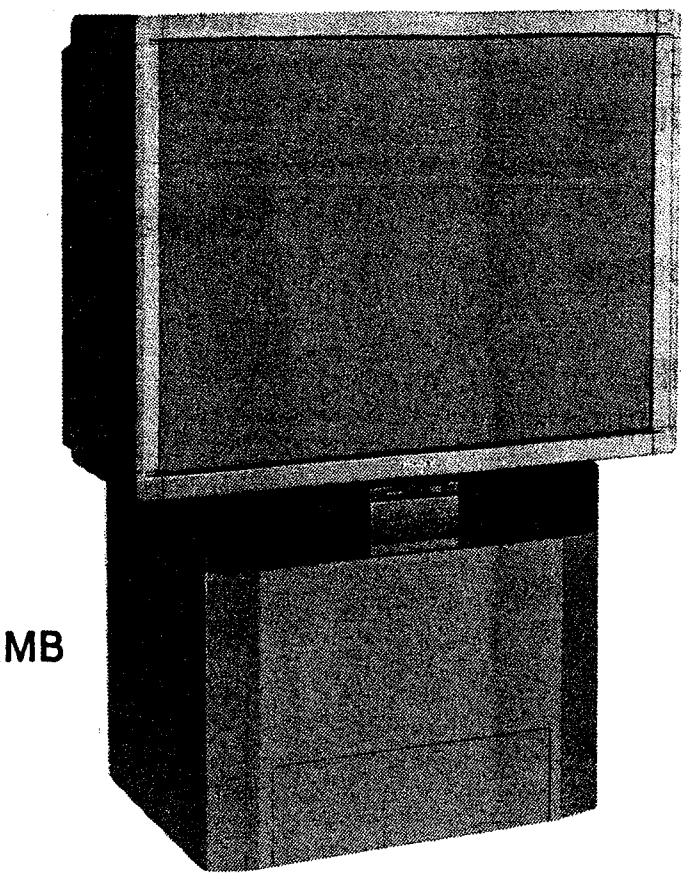

RVP-6000QMB

MODELS OF THE SAME SERIES	
RVP-6000QMB/QMT	
HDIR-550MB/MT	
VPH-1270QM	

SPECIFICATIONS

Optical

Projection system	3 picture tubes, 3 lenses, Horizontal inline system, Rear projection type
Picture tube	7-inch high-brightness monochrome tubes, with coolant sealed
Projection lens	HACC (High-resolution Aspherical and Color Corrected) lenses F 1.1/116 mm
Projected picture size	Factory-adjusted to 60 inches measured diagonally
Luminance	150 ft-L (white peak)

General

Color system	PAL, SECAM, NTSC and NTSC$_{4.43}$ systems, switched automatically
Resolution	1280 DOTs (RGB input at 15 kHz) 700 TV lines (VIDEO input)
RGB inputs	Horizontal frequency: 15 kHz – 65 kHz Vertical frequency: 38 Hz – 150 Hz
Test signal	Cross hair test pattern generator is incorporated.
Speaker	Total 10 W + 10 W
Inputs	**VIDEO input** VIDEO IN Y/C: 4-pin mini DIN connector Y (luminance) signal: 1 Vp-p±2dB, sync negative, 75 ohms terminated C (chrominance) signal: burst 0.286 Vp-p±2dB, 75 ohms terminated (NTSC) 0.3 Vp-p±2dB, 75 ohms teminated (PAL) VIDEO: BNC connector Composite video input, 1 Vp-p±2dB, sync negative, 75 ohms terminated AUDIO IN: phono jack 435 mVrms, Impedance: more than 47 kohms

– Continued on next page –

COLOR REAR VIDEO PROJECTOR

SONY®

MICROFILM

	RGB input R: BNC connector Red input, 0.7 Vp-p±2dB, 75 ohms terminated, positive G/G SYNC: BNC connector Green input, 0.7 Vp-p±2dB, 75 ohms terminated, positive Green with sync input, 1 Vp-p±2dB, 75 ohms terminated, positive B: BNC connector Blue input, 0.7 Vp-p±2dB, 75 ohms terminated, positive SYNC/HD: BNC connector Composite sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative Horizontal sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative VD: BNC connector Vertical sync input, 0.3–4 Vp-p, 75 ohms terminated, positive/negative AUDIO IN L (MONO)/R: phono jacks REMOTE 1 connector: 14-pin connector (see “Signal assignment”) REMOTE 2 connector: 9-pin connector (see “Signal assignment”) CONTROL S IN: minijack, 5 Vp-p
Outputs	VIDEO OUT: BNC connector Composite video output, 1 Vp-p±2dB, impedance 75 ohms, output video signal from the VIDEO IN connector CONTROL S OUT: minijack, 5Vp-p
Power requirements	220–240 V AC, 50/60 Hz
Power consumption	430 W (Video input) 480 W (RGB input)
Accessories supplied	Remote Commander RM-1270 (1) with 3 R6 (AA) batteries Remote Commander cable (1) AC power cord (1)

Optional accessories

Shielded cable	SMF-506 (D-sub 25-pin ↔ 4 BNC)
CCQ BRS cables	
Interface board	IFB-10 (5 BNC) IFB-20 (9-pin) IFB-30 (9-pin) IFB-1000 (9-pin) (Video, Y/C)
Signal interfaceswitcher	PC-1270/1270M

Signal assignment

REMOTE 1 connector (14-pin)

Pin No.	Signal
1	GND
2	HD/Composite Sync
3	SIRCS
4	NC
5	GND(SIRCS)
6	B/C
7	GND(B/C)
8	GND(G/Y)
9	G/Y
10	RGB/Video
11	R/Composite Video
12	Composite Video/YC
13	AUDIO
14	VD

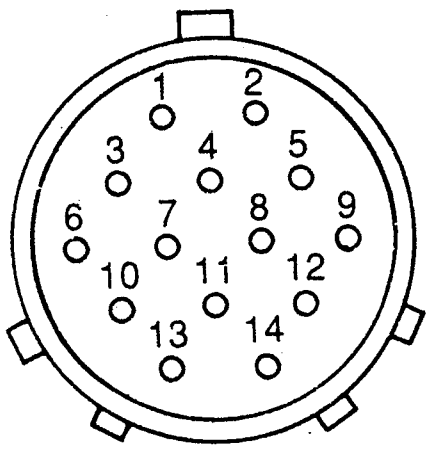

REMOTE 2 connector (D-sub 9-pin)

Pin No.	Signal
1	Frame Ground
2	$\overline{\text{Transit A}}$
3	Receive B
4	Receive Common
5	Spare
6	Transmit Common
7	Transmit B
8	$\overline{\text{Receive A}}$
9	Frame Ground

RS-422 format



Y/C Connector (4-pin mini: DIN)

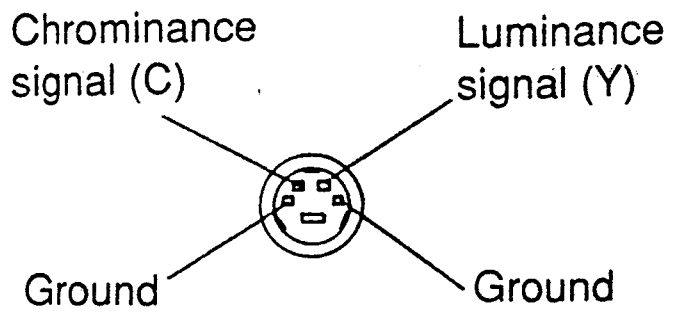

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

NOTE:
Be careful as the following is described in the form including the upper cabinet (RVP-6000QMT, packed separately).

TABLE OF CONTENTS

Section *Title* *Page*

1. GENERAL

1-1. Location and Function of Controls ··· 7
1-2. Projecting ··· 12
1-3. Centering Adjustment ··· 20
1-4. System Connections ··· 22
1-5. Parts List ··· 25
1-6. Installation ··· 26
1-7. For System-Up ··· 29
1-8. Remote Control Operation ··· 31
1-9. Adjustment Procedure ··· 34
1-10. Test Patterns ··· 35
1-11. Registration Adjustment ··· 36
1-12. White Balance Adjustment ··· 46
1-13. Other Adjustments ··· 47
1-14. Memory of Adjustment Data ··· 48
1-15. Date Reset ··· 50
1-16. To Make the Servicing Keys Inoperable ··· 51
1-17. List of the Messages ··· 52

2. DISASSEMBLY

2-1. Remove the Front Cover and Enclosuer ··· 55
2-2. Remove the Chassis Assembly ··· 56
2-3. Remove the Lens ··· 56
2-4. Remove the Picture Tube ··· 56
2-5. Remove the Power Source Block Assembly ··· 57
2-6. Remove the High-Voltage Current Block Assembly ··· 57
2-7. Remove the R. G. B. Unit, BA Board and BB Block Assembly ··· 58
2-8. Remove the CF-1, CF-2, CA (RG) and CA(B) Boards ··· 58
2-9. Remove the Y, DA, DB and DM Boards ··· 59
2-10. Attachment Direction for the DC Fan ··· 60

3. CIRCUIT DESCRIPTIONS

3-1. Circuit Board BA ··· 61
3-2. Circuit Board BB ··· 66
3-3. Circuit Board DA ··· 74
3-4. Circuit Board DB ··· 78
3-5. Circuit Board DC ··· 80
3-6. Circuit Board K ··· 81
3-7. Circuit Board Y ··· 82
3-8. Circuit Boards PA and PB ··· 83
3-9. Series E board Circuit Operation ··· 85
3-10. Circuit Board KA ··· 87
3-11. Circuit Board KB ··· 89
3-12. SOPS-1008 ··· 89

4. SET-UP ADJUSTMENTS

4-1. Neck Assembly Installation ··· 91
4-2. Adjusting Screen Inclination by Main DY ··· 91
4-3. Sub-DY Adjustment ··· 91
4-4. GREEN Focus Adjustment ··· 91
4-5. RED Focus Adjustment ··· 92
4-6. BLUE Focus Adjustment ··· 92
4-7. Registration Adjustment ··· 92
4-8. White Balance Adjustment by Maintenance Man ··· 94

5. SAFETY ADJUSTMENTS ··· 96

6. CIRCUIT ADJUSTMENTS

6-1. BA Board Adjustment ··· 100
6-2. BB Board Adjustment ··· 102
6-3. E Board Adjustment ··· 102
6-4. DA Board Adjustment ··· 102

7. DIAGRAMS

7-1. Circuit Boards Location ··· 103
7-2. Quick Reference ··· 104
7-3. Block Diagrams ··· 105
7-4. Frame Schematic Diagram ··· 117
7-5. Schematic Diagrams and Printed Wiring Boards ··· 120
7-6. Semiconductors ··· 246

8. EXPLODED VIEWS

8-1. Cabinet (L) Block ··· 249
8-2. Power Block and ED Block ··· 250
8-3. C Shield Block ··· 251
8-4. CRT Block ··· 252

9. ELECTRICAL PARTS LIST ··· 253

RVP-6000QMT/RM-1270 ··· 303

SECTION 1
GENERAL

1-1. LOCATION AND FUNCTION OF CONTROLS

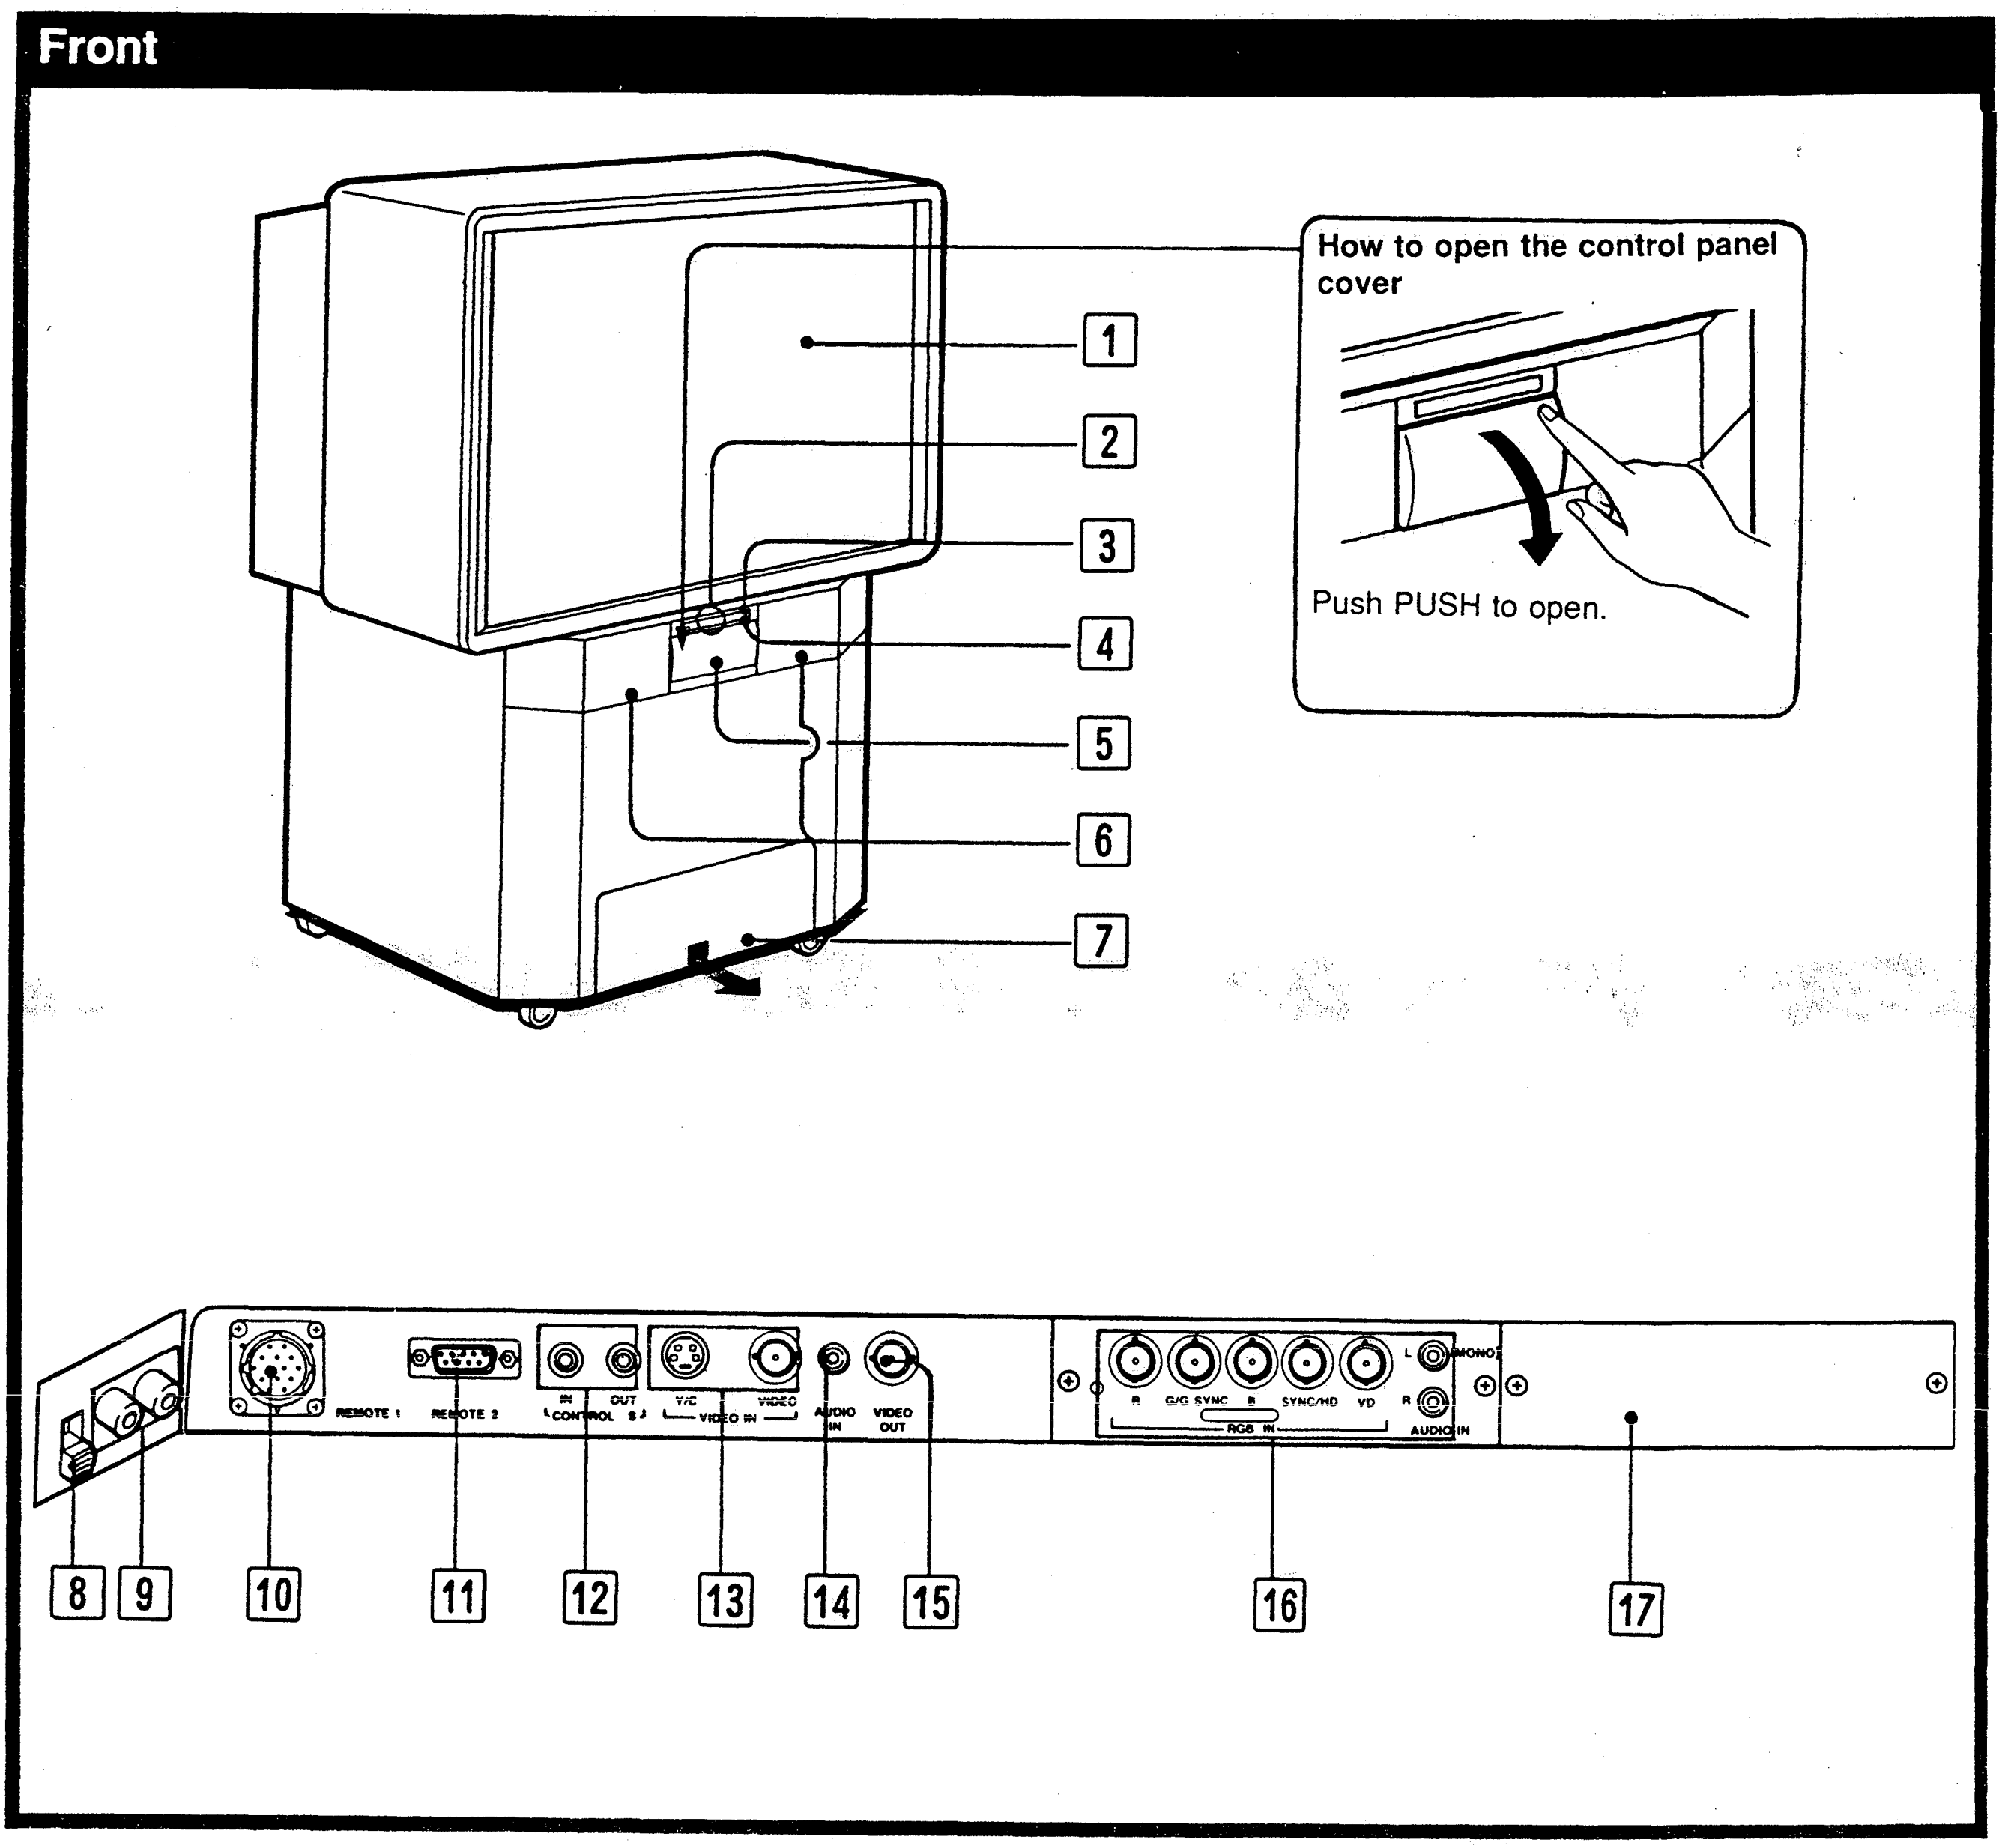

Front

How to open the control panel cover

Push PUSH to open.

1
2
3
4
5
6
7
REMOTE 1
REMOTE 2
IN
OUT
CONTROL S
Y/C
VIDEO
VIDEO IN
AUDIO IN
VIDEO OUT
R
G/G SYNC
B
SYNC/HD
VD
RGB IN
L
MONO
R
AUDIO IN
8
9
10
11
12
13
14
15
16
17

1 **Screen**

2 **Remote control detector**

3 **POWER indicator**
Green indicator is on when the power is turned on.

4 **STANDBY indicator**
When the MAIN POWER is on, the red light indicating standby will be on. When the red light is on, the projector can be controlled with the Remote Commander.

Note
When the MAIN POWER is turned off, there will be a slight delay before the red light goes off.

5 **Control panel**
The keys inside the panel cover are the same as the Remote Commander.

6 **Speaker**

7 **Connector cover**
The location of the connector is indicated on the back.

8 **SPEAKER switch**
Set to ON to use the built-in speakers.
Set to OFF when you do not use the built-in speakers.

9 **AUDIO OUT (VARIABLE) connectors**
Connect to an audio amplifier. The output level can be adjusted with the VOL keys of the supplied Remote Commander.

10 **REMOTE 1 connector** (14 pin)
Connect to REMOTE 1 connector of the optional switcher PC-1270/1270M.

11 **REMOTE 2 connector** (9 pin)
Connect RSS-422 interface for interactive communication with the external equipment. Take off the red cap before use.

12 **CONTROL S IN/OUT connectors**
Connect to the CONTROL S connectors of other Sony equipment. It is then possible to control the whole system with a single Remote Commander.
CONTROL S IN: Connect to the CONTROL S OUT of the Remote Commander to be used as a wired commander.

13 **VIDEO IN connectors**
Y/C (4-pin): Connect to the Y/C output of a VCR.
VIDEO (BNC type): Connect to the video out put of a video equipment.

Note
The VIDEO connector is disconnected automatically when a cable is connected to the Y/C connector.

14 **AUDIO IN jack** (phono)
Connect to the audio output of video equipment.

15 **VIDEO OUT connector** (BNC type)
Loop-through output of the VIDEO connector. Connect to the video input of a VCR or another monitor. The signal input from Y/C connector is not output from this connector.

16 **INPUT A connectors** (BNC type)
R, G/G SYNC, B, SYNC/HD, VD connectors: Connect to the RGB outputs of a computer or a video camera.

17 **INPUT B connectors section**
To expand the system connection, install the optional interface board IFB-10, 20, 30, or 1000.

Rear

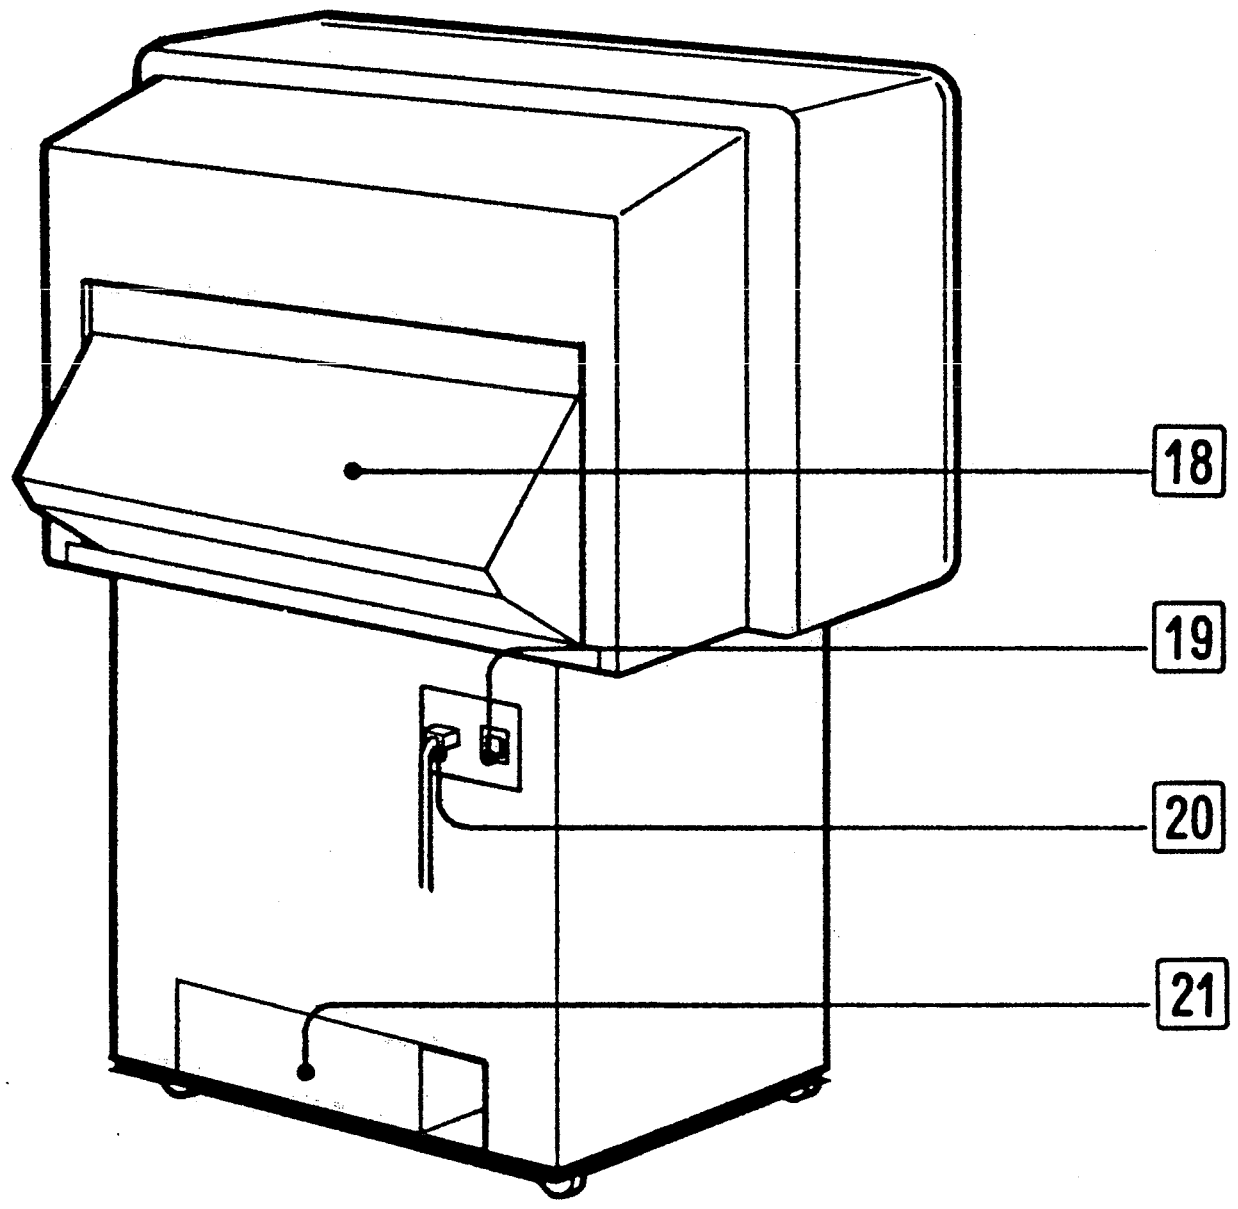

18 **Mirror cover**
This can be aligned to the back of the cabinet for transportation.

19 **MAIN POWER switch (▂ON/■OFF)**

20 **AC IN socket**
Connect the supplied AC power cord (mains lead).

21 **Rack**

How to align the mirror cover to the back of the cabinet for transportation

1 Remove the wing screws.

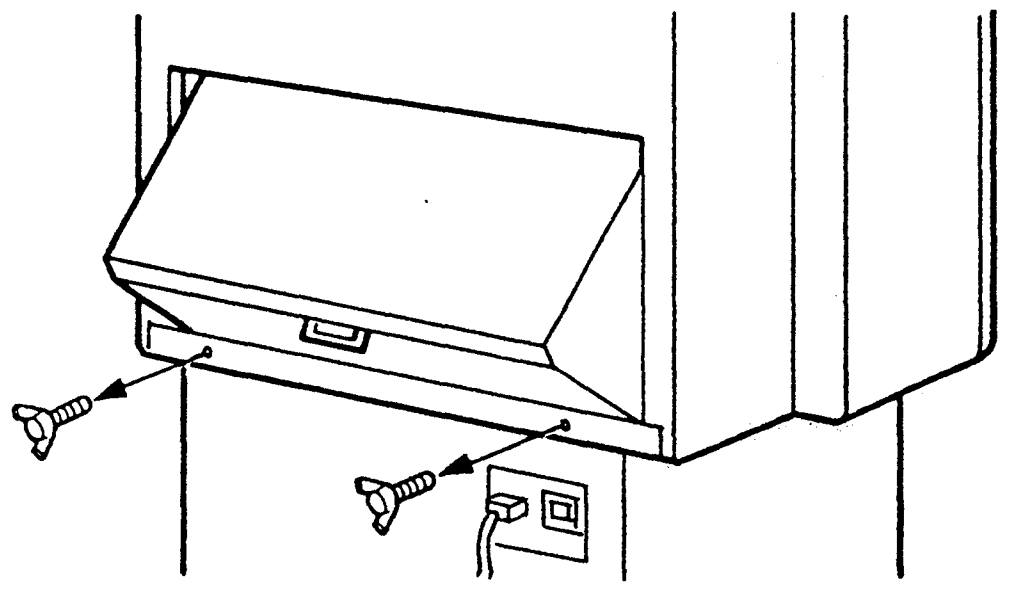

2 Hold the handle, and press the mirror cover into the cabinet until it clicks.

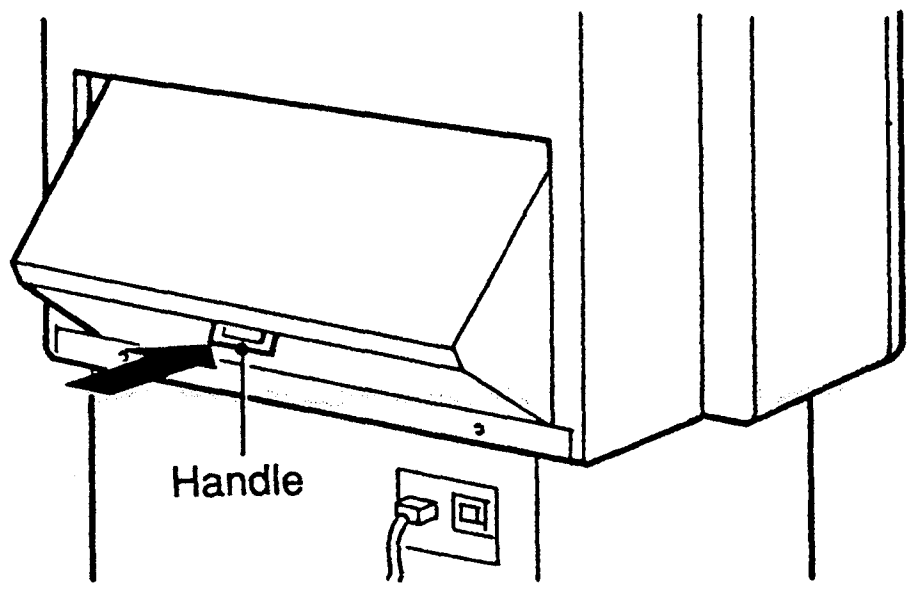

3 Secure the mirror cover with the metal plate.

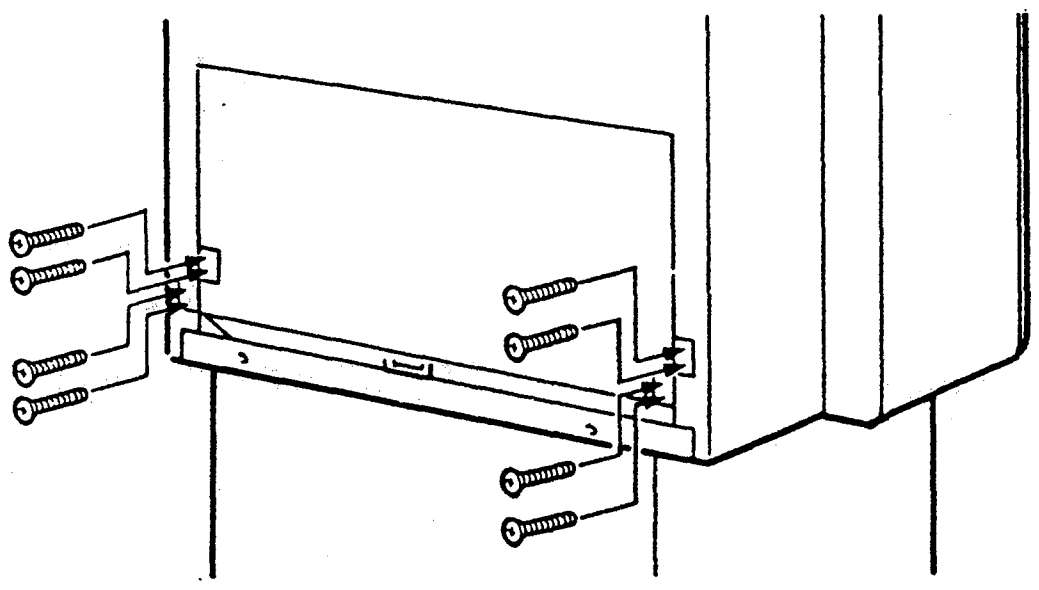

After transportation, pull the mirror cover fully out and secure it with the wing screws.

(RM-1270, packed separately)

Remote Commander RM-1270

The same keys are inside the control panel of the projector.

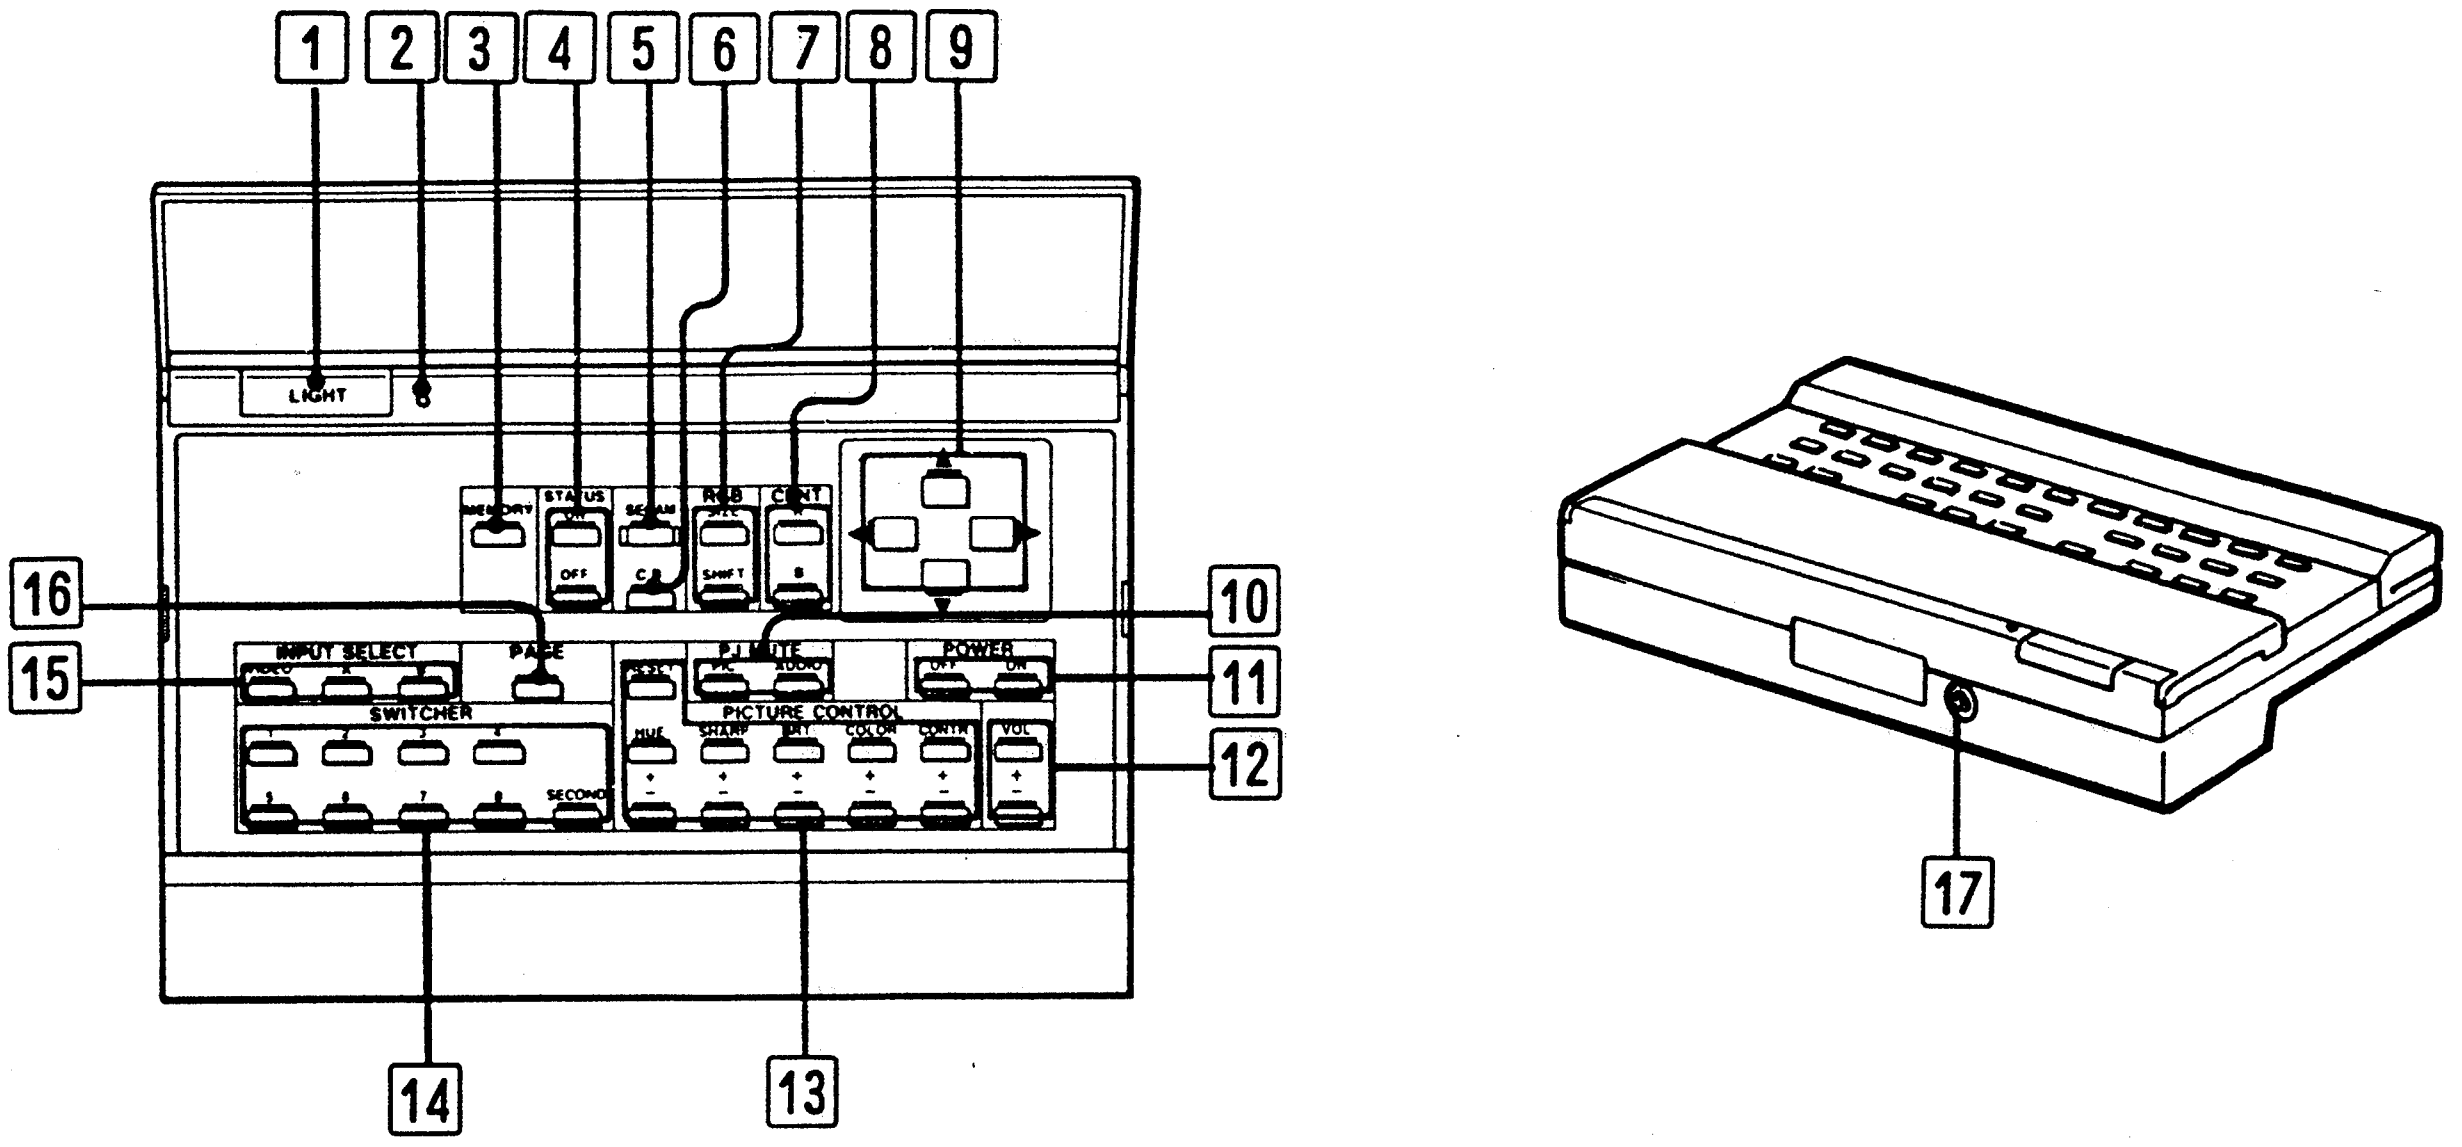

1 **LIGHT button**
Press to illuminate the indications on the Commander. The light will go off in about 10 seconds after the operation.

2 **Indicator**
Lights when any of the buttons on the Commander is pressed. If the indicator does not light, battery replacement is required.

3 **MEMORY key**
Press to store the adjustment data.

4 **STATUS ON/OFF key**
Press OFF key to cut the on-screen display. However, PAGE is displayed even when in OFF mode. "OFF" indication will be displayed if a key is pressed when in OFF mode. Press ON key to restore the on-screen display.

5 **SECAM key**
Press when the color of a picture from SECAM color source is incorrect. Press again to switch over to other standard system sources, NTSC or PAL.

6 **C.B.** (Clear Blue) **key**
Press to make the blue color clear in the picture input from RGB IN connectors. Press again to restore the normal condition.

7 **RGB SIZE/SHIFT keys**
Press to adjust the picture input from RGB IN connectors.

SIZE: Press to enter the size adjustment mode. The size adjustment of the picture is performed using the four arrow keys.

◀ ....to reduce horizontal size
▶ ....to expand horizontal size
▲ ....to expand vertical size
▼ ....to reduce vertical size

SHIFT: Press to enter the shift adjustment mode. The shift adjustment of the picture is performed using the four arrow keys. The picture shifts according to the direction of the arrow.

8 **CENT R/B keys**
Press for centering adjustments of the red or blue.
R: Press to enter the red centering adjustment mode.
B: Press to enter the blue centering adjustment mode.
The centering adjustments are performed using the four arrow keys.

9 **Arrow keys**
Used for various adjustment functions.

10 **PJ MUTE keys**

PIC: Press to cut off the picture. To restore the picture, press PIC again or CONTR +.

AUDIO: Press to cut off the sound. To restore the previous sound level, press AUDIO again or VOL +.

11 **POWER ON/OFF keys**
Press to turn on and off the projector (when the MAIN POWER is ON).

12 **VOL +/– keys**
Press to adjust volume.
+: to increase volume
–: to decrease volume

13 **PICTURE CONTROL keys**
Press to adjust picture condition: hue, sharpness, brightness, color, and contrast. Press RESET key to restore the factory preset levels

14 **SWITCHER keys**
When the PC-1270/1270M switcher is connected to the projector, press the number key to select the input from the switcher. SECOND key is used when there are two switchers. To control the second switcher (SINGLE/SECOND/REMOTE switch is set to SECOND), first press SECOND key and then the number key.

15 **INPUT SELECT keys**
Press to select the input signal.
VIDEO: to select the signal input from VIDEO IN (Y/C or VIDEO) connectors
A: to select the signal input from RGB IN connectors
B: to select the signal input from the connectors of "B" section (optional interface board)

Note
For the location of "A" and "B", see page 12.

16 **PAGE key**
Press to display and switch the following four on-screen displays. (On PAGE 1, 2, and 3, adjustment can also be done.)
PAGE 1: Displays STATUS ON/OFF, PIC MUTE ON/OFF, AUDIO MUTE ON/OFF, CLEAR BLUE ON/OFF, and SECAM ON/OFF.
PAGE 2: Displays the picture conditions; contrast, color, brightness, sharpness, hue, and volume levels.
PAGE 3: Displays the color temperature level.
PAGE 4: Displays the input signal conditions; fH, fV, H/C-sync, V-sync, Sync on Green, and input signal.

17 **CONTROL S OUT connector**
Connect the supplied cable to this connector and to CONTROL S IN connector of the projector for wired Commander application.

Battery installation

1 **Push to open the lid.**

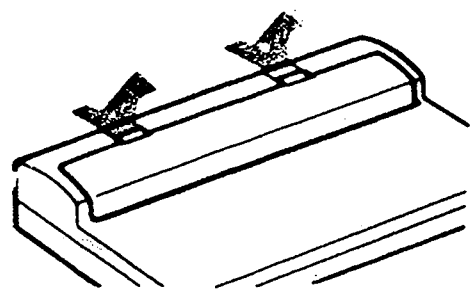

2 **Install three R6 (AA) batteries with the correct polarity.**

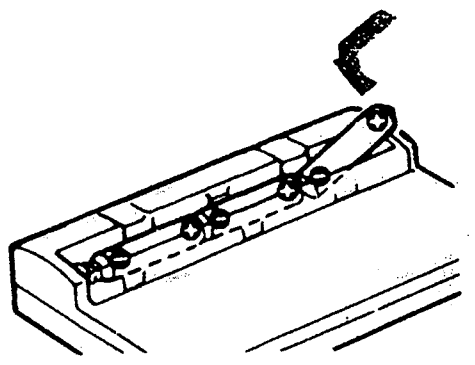

3 **Replace the lid.**

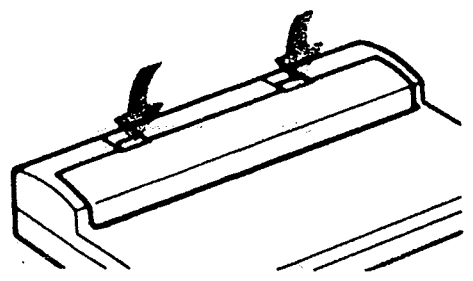

- If the projector does not operate properly, the batteries might be worn out. Replace all of them with new batteries.
- The life of the batteries depends on how often you use the Commander. If they wear out quickly, replace them with new alkaline batteries.
- To avoid damage from possible battery leakage, remove the batteries when the Commander will not be used for a long time.
- Be sure that there are no obstructions between the Commander and the unit.
- Operable range is limited. The shorter the distance between the Commander and the projector, the wider the angle within which the Commander can control the projector.

To connect the Remote Commander to the projector

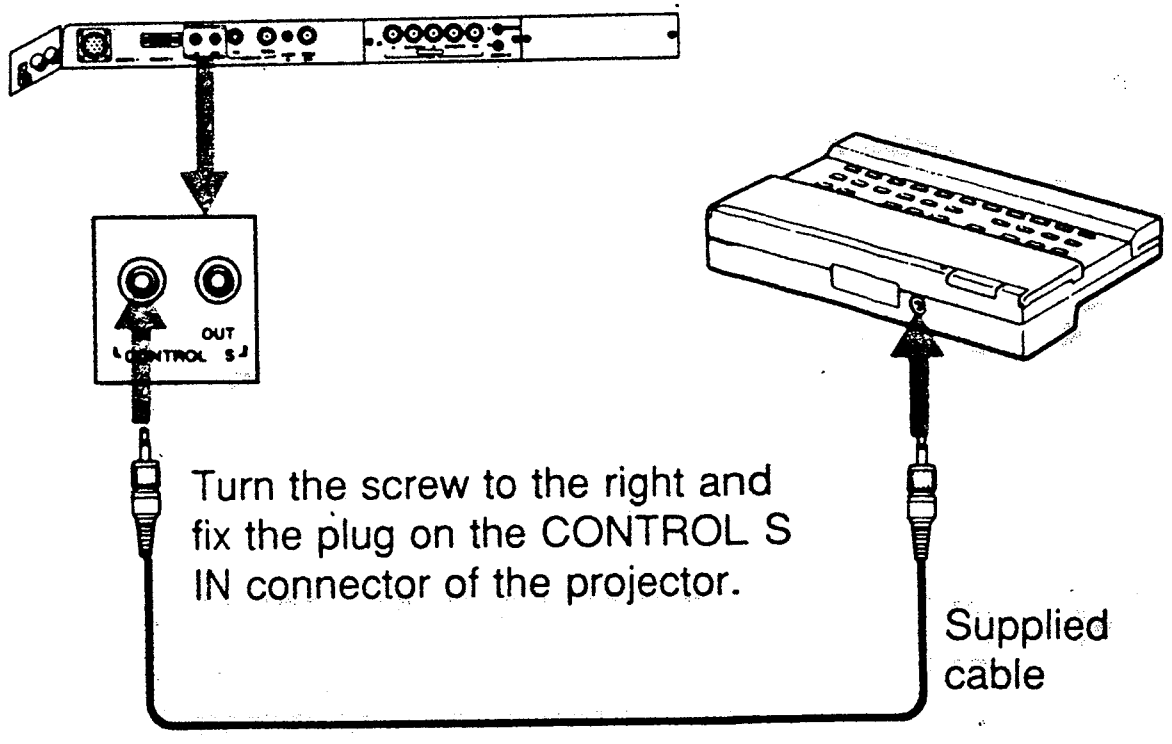

Turn the screw to the right and fix the plug on the CONTROL S IN connector of the projector.

Supplied cable

- When the connection is made, the remote control detectors of the projector will not function.
- For wireless operation, make sure to disconnect both plugs after using the Commander wired.

1-2. PROJECTING

The keys on the control panel of the projector are the same as those found on the Remote Commander.

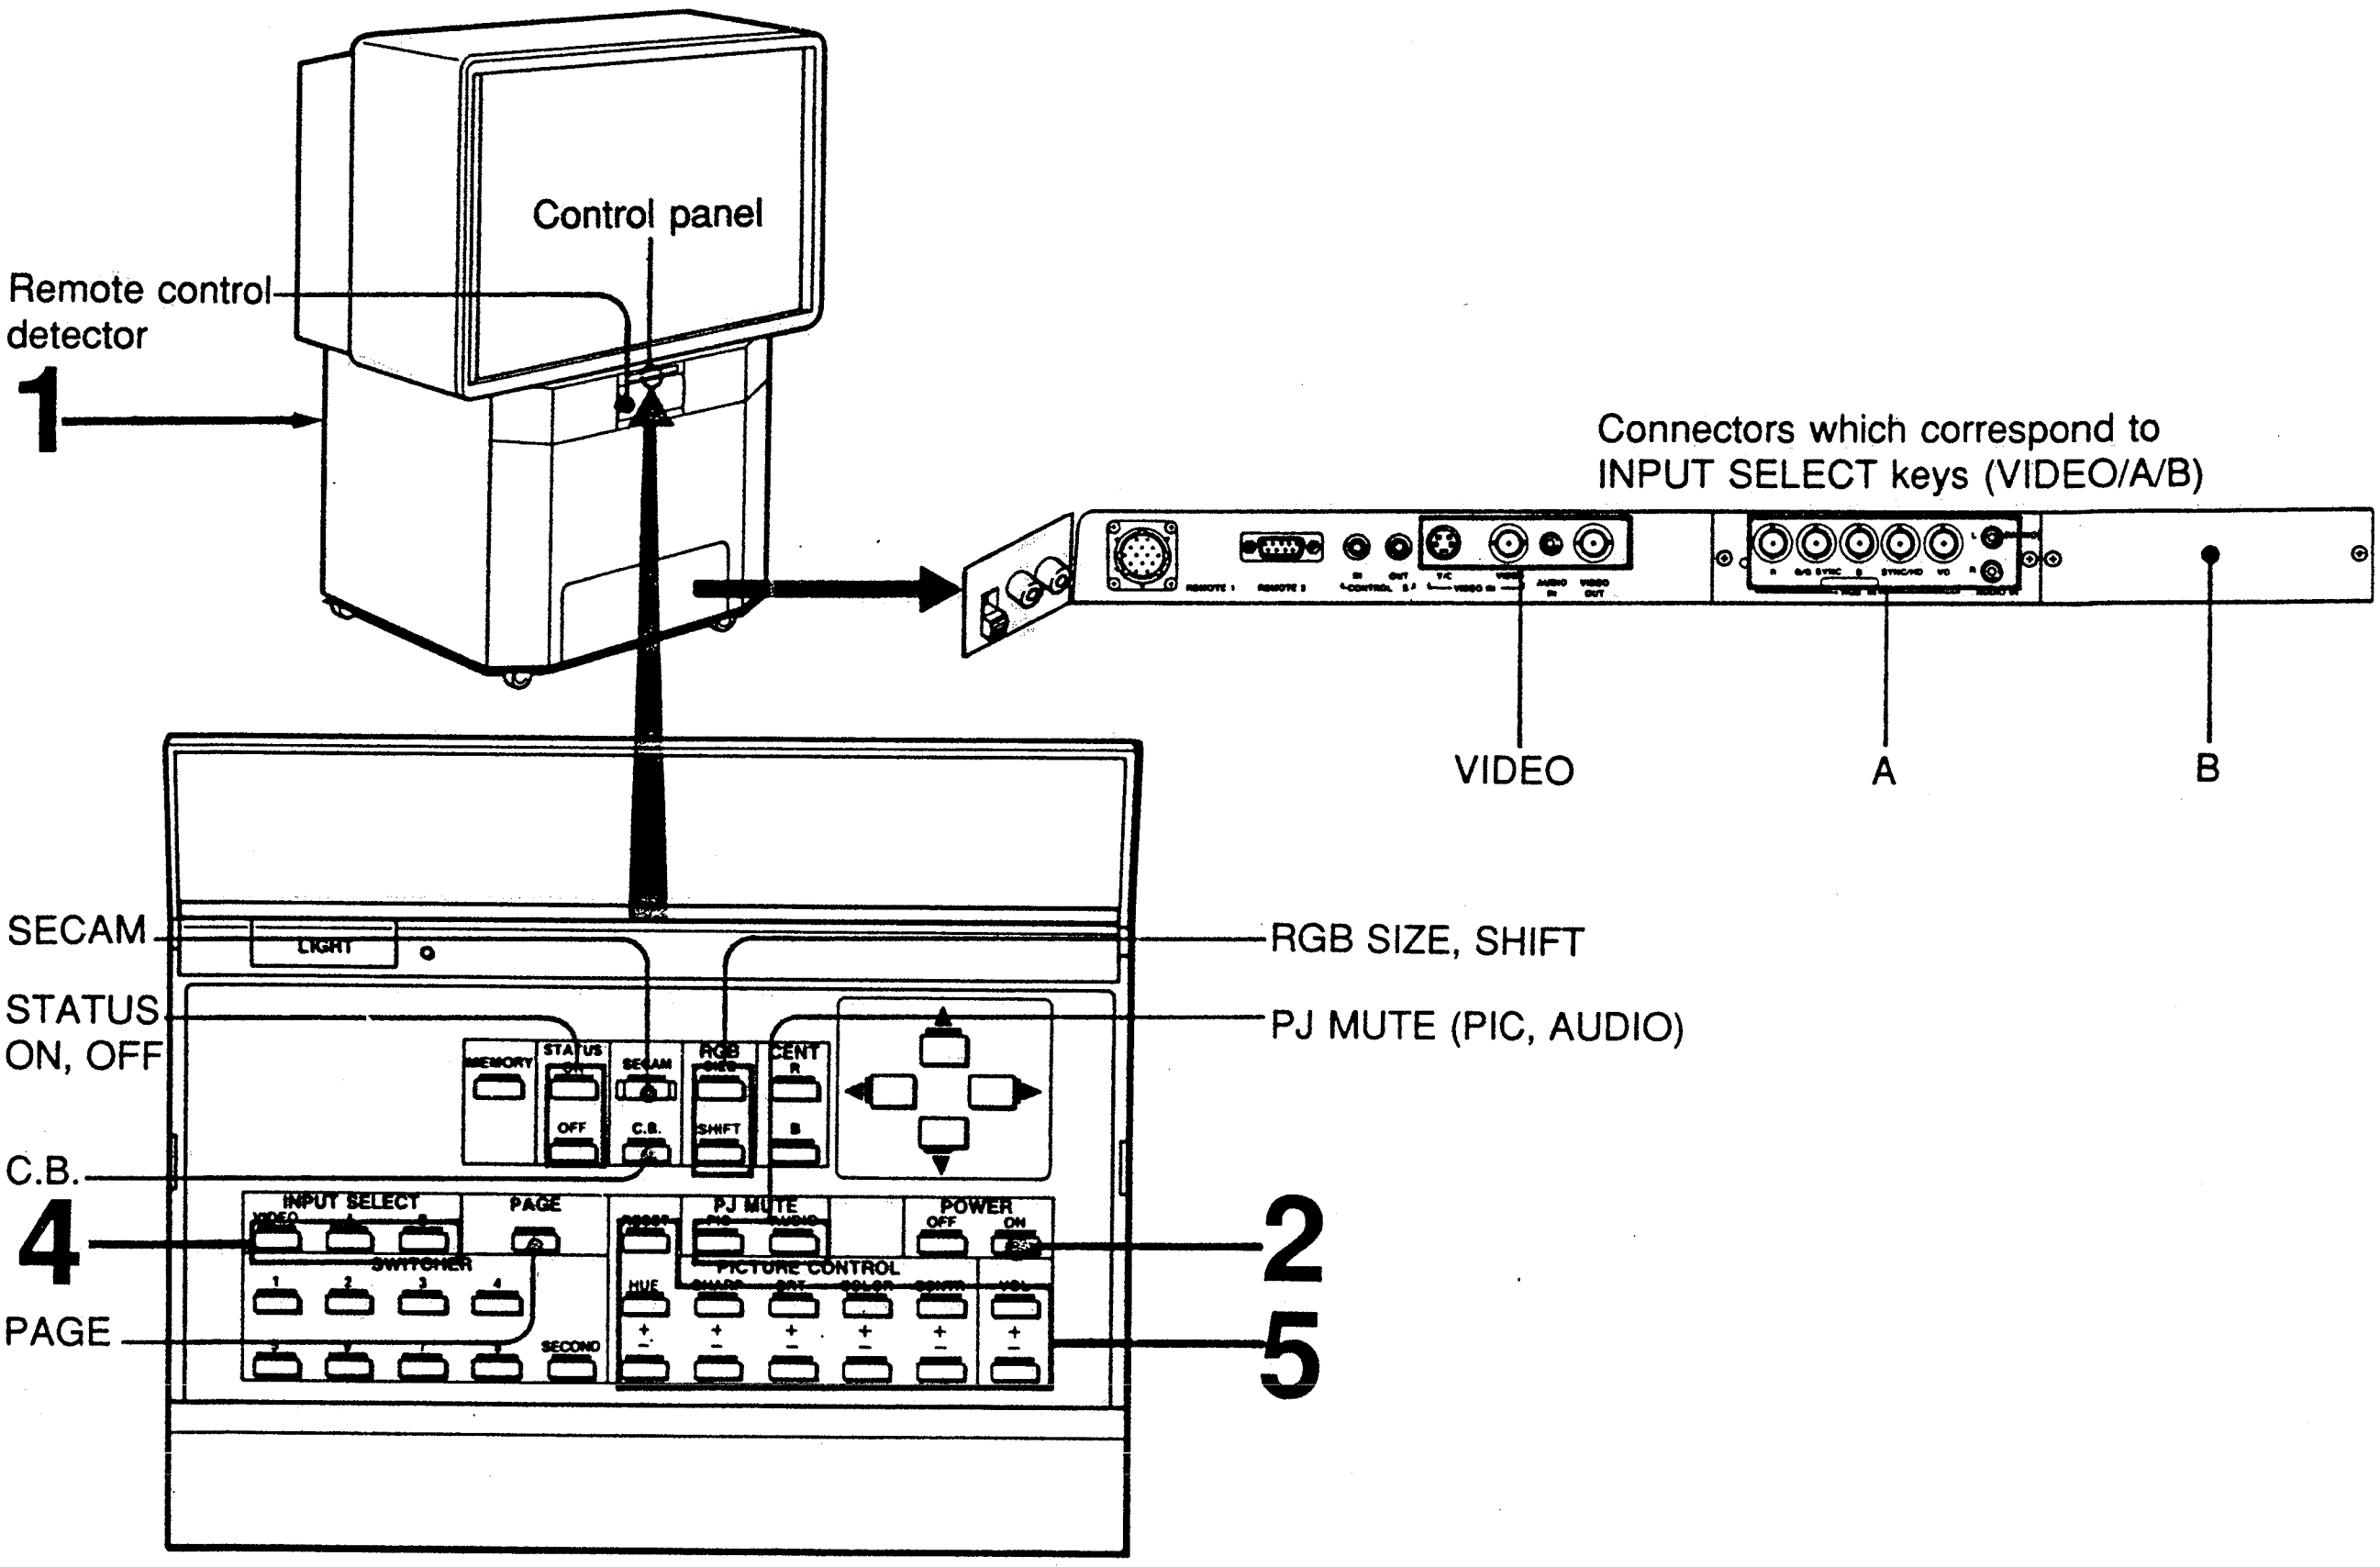
Control panel
Remote control detector
1
Connectors which correspond to INPUT SELECT keys (VIDEO/A/B)
VIDEO
A
B
SECAM
STATUS ON, OFF
C.B.
4
PAGE
RGB SIZE, SHIFT
PJ MUTE (PIC, AUDIO)
2
5
LIGHT
MEMORY
STATUS
SECAM
RGB
CENT
OFF
C.B.
SHIFT
INPUT SELECT
PAGE
PJ MUTE
POWER
OFF
ON
SWITCHER
PICTURE CONTROL
HUE
SECOND

1 **Depress MAIN POWER switch at the rear (▬ ON).**

2 **Press POWER ON key on the Remote Commander or the control panel.**

3 **Turn on the connected equipment.**

4 **Select the input signal to be projected by pressing INPUT SELECT key** (VIDEO, A or B).
VIDEO: to select the signal input from VIDEO IN (Y/C or VIDEO) connectors
A: to select the signal input from RGB IN connectors
B: to select the signal input from the connectors of "B" section (optional interface board)

5 **Adjust the picture and sound.**

To cut the on-screen display

Press STATUS OFF key.
However, PAGE is displayed even when in OFF mode.
To restore the on-screen display, press STATUS ON key.

To cut off the sound or picture

To mute the sound
Press PJ MUTE AUDIO key. To restore the previous sound level, press PJ MUTE AUDIO key again or VOL + key.

To cut off the picture
Press PJ MUTE PIC key. To restore the previous brightness level, press PJ MUTE PIC key again or CONTR + key

Notes on projecting a picture input from RGB IN connectors

- To make the blue color clear, press C.B. key. Press again to restore the normal condition.
- If necessary, adjust the size and shift of the picture using the RGB SIZE/SHIFT and arrow keys.

If the SECAM color source is incorrect

Press SECAM key. Press again to switch over to other standard system sources, NTSC or PAL.
If you wish to keep the C.B. ON/OFF or SECAM ON/OFF setting, store the data (see page 18).

Adjusting the Picture and Sound

Use the VOL and PICTURE CONTROL keys on the Remote Commander.
The adjustment levels are digitally displayed on the screen having a range of MIN, 1, 2, ..., 98, 99, MAX.

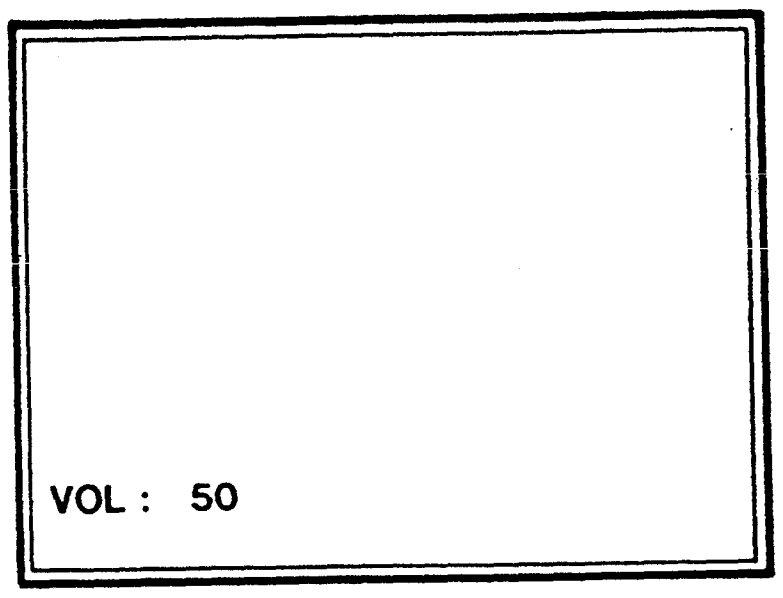

VOL : 50

VOL +/– keys	+ : to increase volume – : to decrease volume
CONTR +/– keys	+ : to increase picture contrast – : to decrease picture contrast
COLOR +/– keys	+ : to increase color intensity – : to decrease color intensity
BRT +/– keys	+ : to make the picture brighter – : to make the picture darker
SHARP +/– keys	+ : to make the picture sharper – : to make the picture softer
HUE +/– keys	+ : to make skin tones greenish – : to make skin tones purplish

- COLOR, SHARP and HUE controls do not function on the picture input from RGB IN.
- HUE control does not function with PAL or SECAM color source.

To restore the factory preset levels

Press RESET key. The factory preset levels will be displayed on the screen.

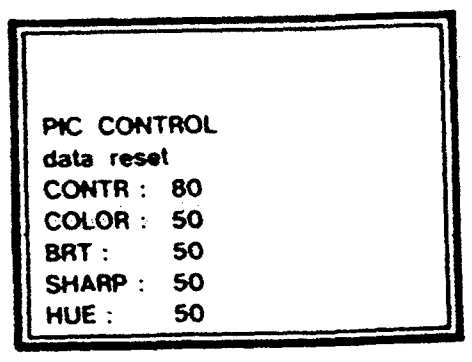

PIC CONTROL
data reset
CONTR : 80
COLOR : 50
BRT : 50
SHARP : 50
HUE : 50

To Display the Current Control Settings and Conditions

Press PAGE key for displaying the following four on-screen displays. Adjustment can also be done on PAGE 1, 2, and 3. The displays will switch as follows every time PAGE key is pressed:

PAGE 1 → PAGE 2 → PAGE 3 → PAGE 4
OFF

PAGE 1

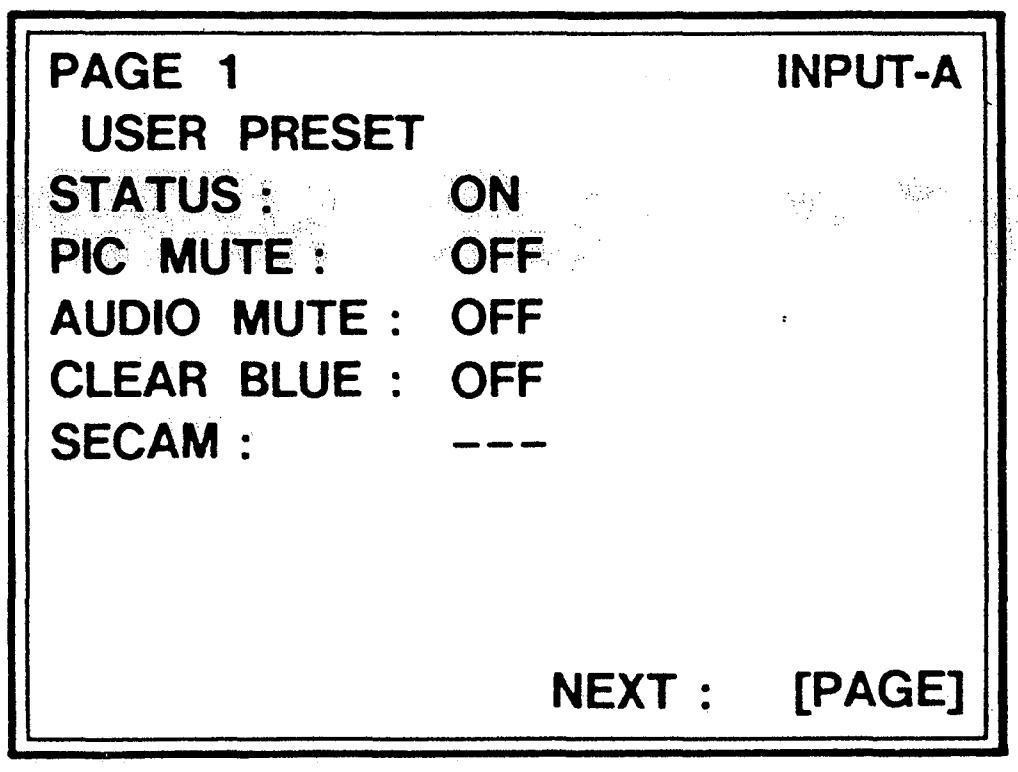

```
PAGE 1                    INPUT-A
 USER PRESET
STATUS :        ON
PIC MUTE :      OFF
AUDIO MUTE :    OFF
CLEAR BLUE :    OFF
SECAM :         ---

                 NEXT :  [PAGE]
```

The STATUS ON/OFF, PIC MUTE ON/OFF, AUDIO MUTE ON/OFF, CLEAR BLUE (C.B.) ON/OFF, and SECAM ON/OFF settings are displayed. "— —" indicates that the control does not function with the current input signal.
To change the settings, adjust with appropriate key.

PAGE 2

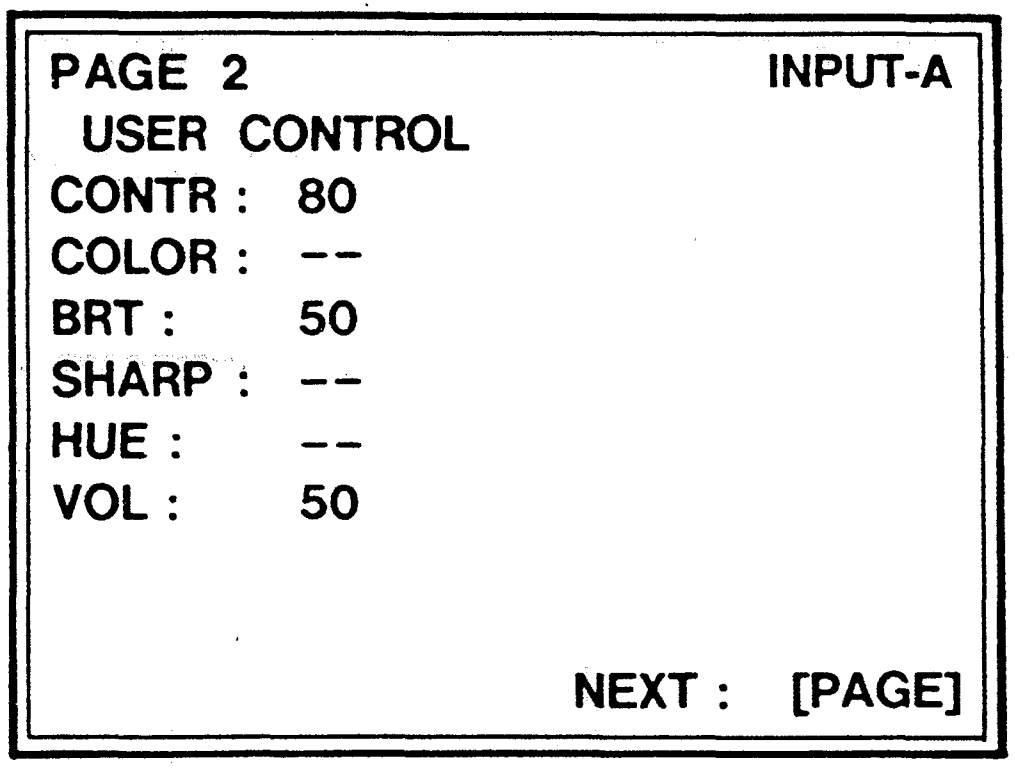

```
PAGE 2                    INPUT-A
 USER CONTROL
CONTR :  80
COLOR :  --
BRT :    50
SHARP :  --
HUE :    --
VOL :    50

                 NEXT :  [PAGE]
```

The picture conditions; contrast, color, brightness, sharpness, hue, and volume levels are displayed.
"— —" indicates that the control does not function with the current input signal. (In this case, the input signal is PAL or SECAM.)
To change the levels, adjust with VOL and PICTURE CONTROL keys.

PAGE 3

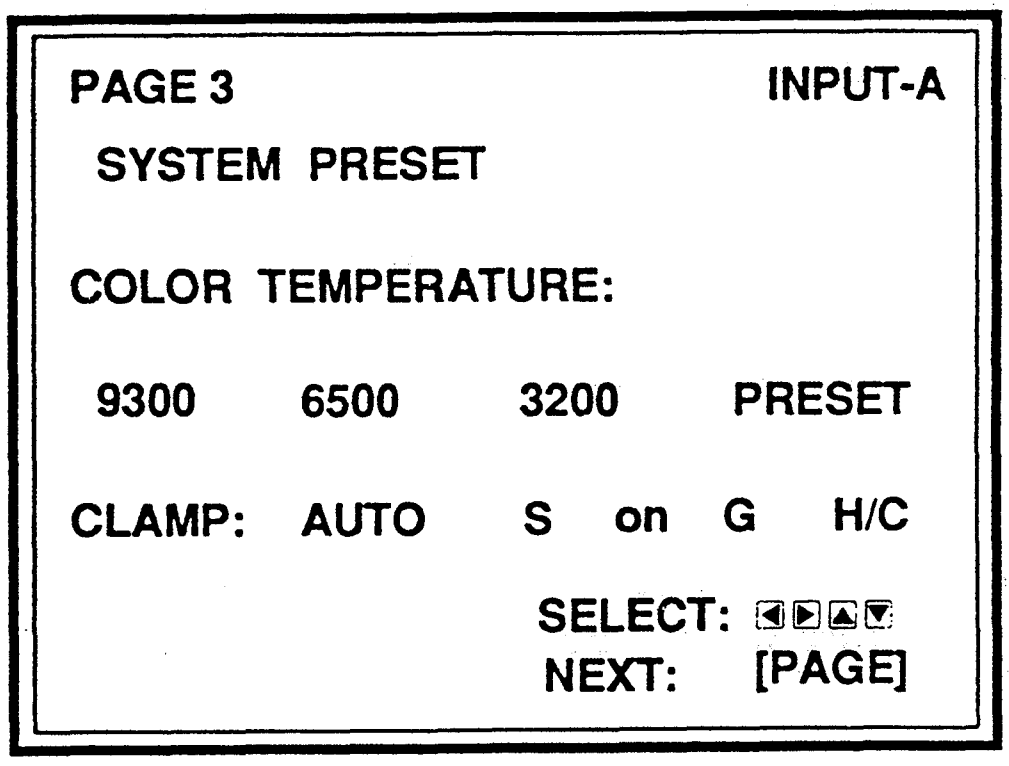

PAGE 3 INPUT-A
SYSTEM PRESET

COLOR TEMPERATURE:

9300 6500 3200 PRESET

CLAMP: AUTO S on G H/C

SELECT: ◀▶▲▼
NEXT: [PAGE]

The color temperature and clamp settings are displayed. The selected item blinks in green.
To change the setting, adjust by pressing ◀, ▶, ▲, or ▼ keys.
For details of the clamp setting, see "If the luminance of the picture is incorrect — clamp setting" on page 19.

Note
"CLAMP" is not displayed when the input mode is VIDEO.

PAGE 4

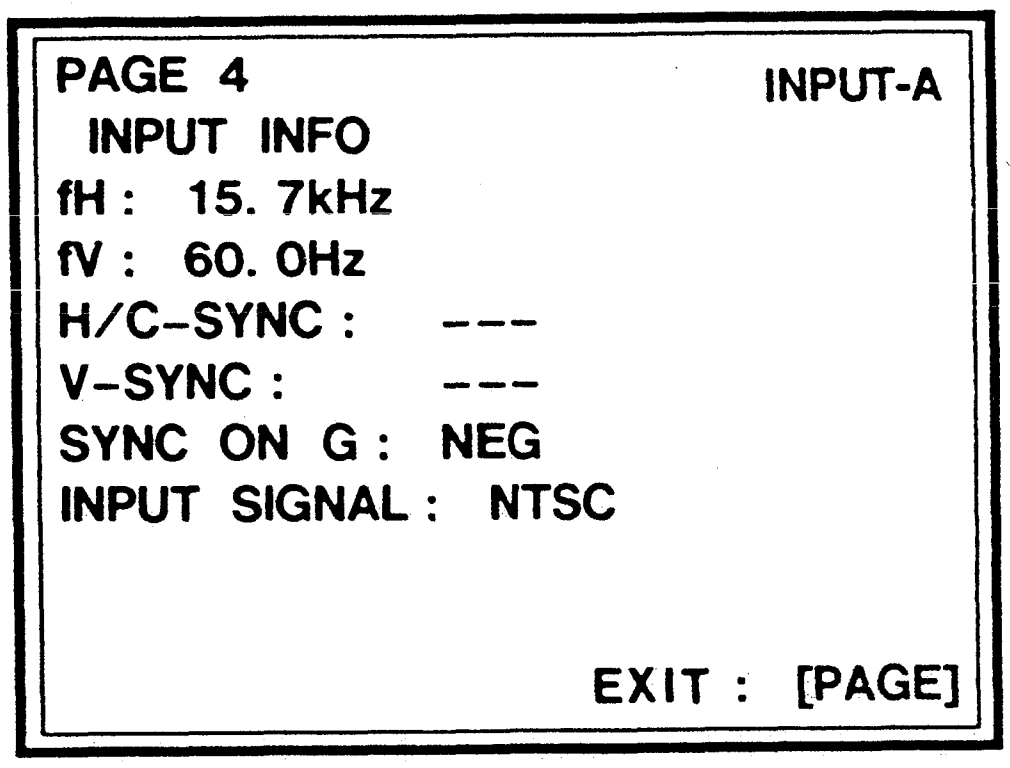

PAGE 4 INPUT-A
INPUT INFO
fH : 15. 7kHz
fV : 60. 0Hz
H/C-SYNC : ---
V-SYNC : ---
SYNC ON G : NEG
INPUT SIGNAL : NTSC

EXIT : [PAGE]

The signal input conditions are displayed.

fH: The horizontal frequency of the input signal
fV: The vertical frequency of the input signal
H/C-SYNC: The polarity of the H/C-SYNC
V-SYNC: The polarity of the V-SYNC
SYNC ON G: The polarity of the SYNC on the Green
INPUT SIGNAL: The current input signal

POS: positive
NEG: negative
— —: no input

Each indication means the following input signal:

Y/C:	S video signal
RGB:	RGB signal
NTSC:	Video signal of NTSC system
PAL:	Video signal of PAL system
SECAM:	Video signal of SECAM system
B&W:	Black and white video signal
Internal Oscillation:	Internal oscillation mode when no signal is input

The projector operates with the sync signal indicated in green.

Adjusting the picture input from RGB IN

If necessary, adjust the size and shift of the picture using the RGB SIZE/SHIFT and arrow keys.
This adjustment does not function with input signal from VIDEO IN connectors.

After the RGB SIZE/SHIFT adjustment, press the selected INPUT SELECT key (A or B) to cut the on-screen display.
If you wish to keep the current adjustment setting, save the data (see page 18).

RGB SHIFT adjustment

If size of the picture does not fit the screen, adjust RGB SIZE.

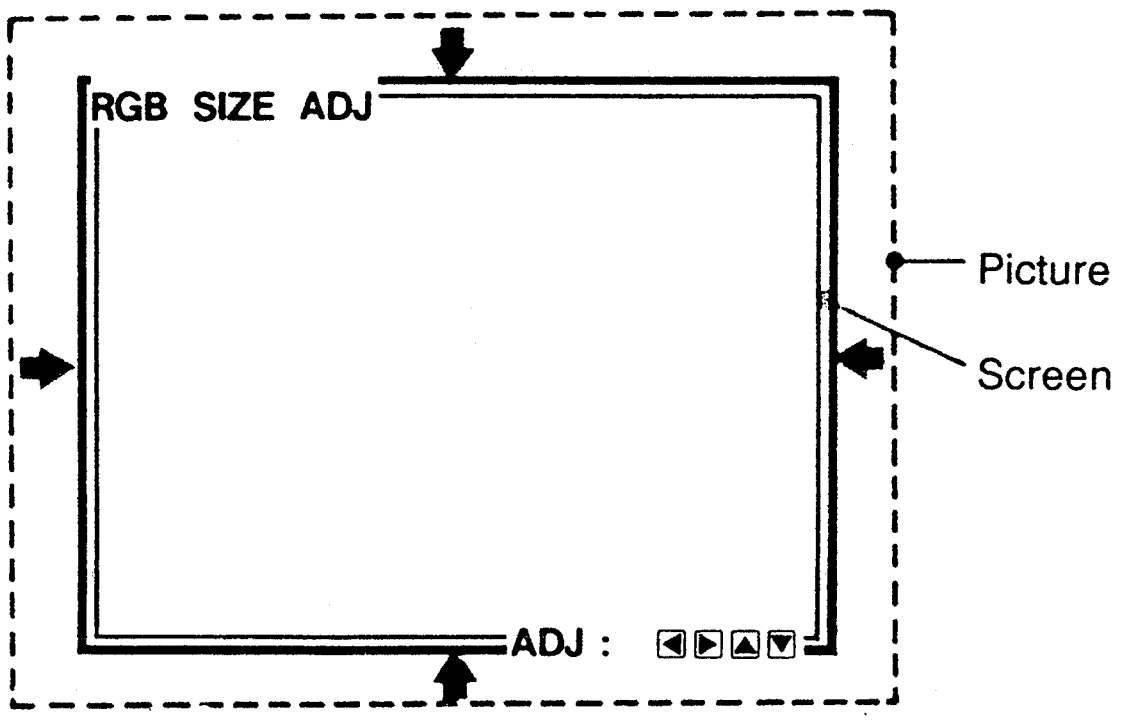

1 **Press RGB SIZE key.**

2 **Adjust by pressing arrow keys so that the picture fits the screen.**

- ◀ to reduce horizontal size
- ▶ to expand horizontal size
- ▲ to expand vertical size
- ▼ to reduce vertical size

RGB SIZE adjustment

If the picture needs to be shifted to fit the screen, adjust RGB SHIFT.

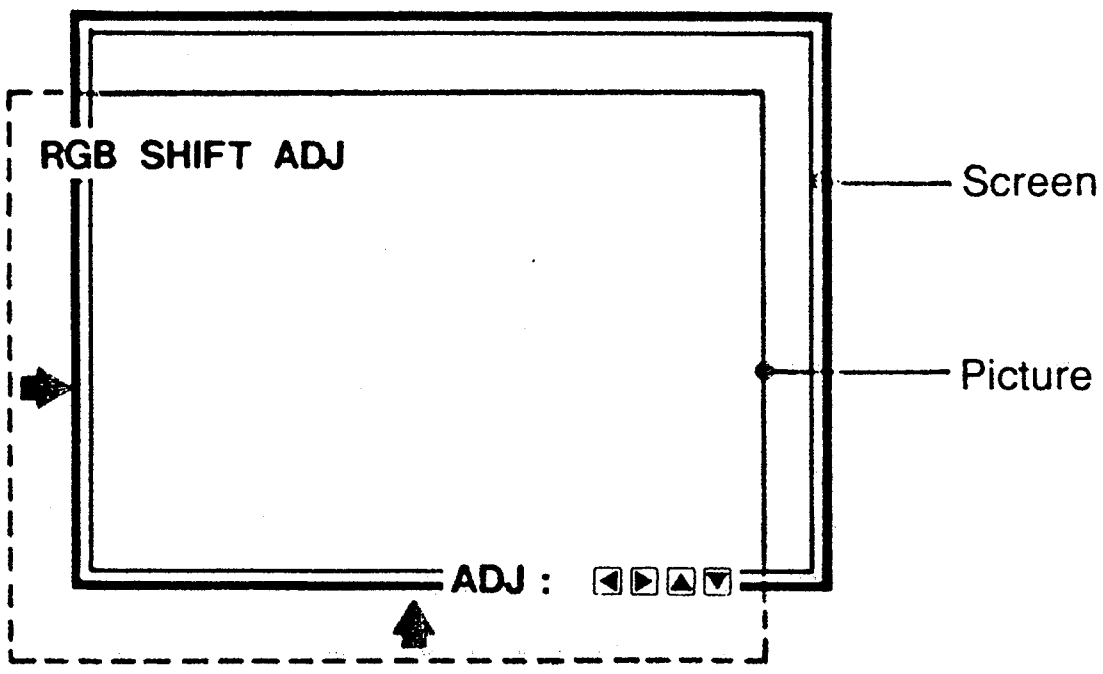

1 **Press RGB SHIFT key.**

2 **Adjust by pressing arrow keys so that the picture fits the screen.**
The picture shifts according to the direction of the arrow.

After the RGB SIZE/SHIFT adjustment, press the selected INPUT SELECT key (A or B) to cut the on-screen display.

If you wish to keep the current adjustment setting, store the data (see page 18).

Resetting RGB SIZE/SHIFT to factory preset condition

1 **Press RGB SIZE or SHIFT key.**

2 **Press ◀ and ▶ keys simultaneously.**
The following on-screen display appears on the screen.

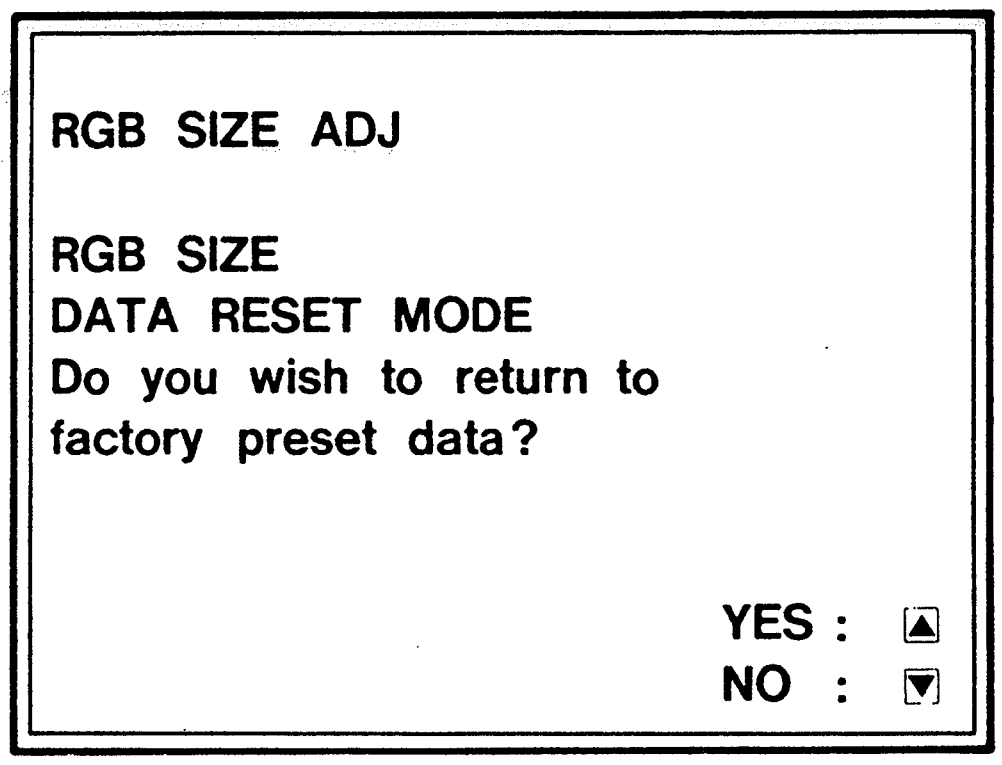

RGB SIZE ADJ

RGB SIZE
DATA RESET MODE
Do you wish to return to
factory preset data?

YES : ▲
NO : ▼

3 **Press ▲ key.**
The following on-screen display appears on the screen to confirm that resetting was completed.
To keep the current setting instead of resetting, press ▼ key.

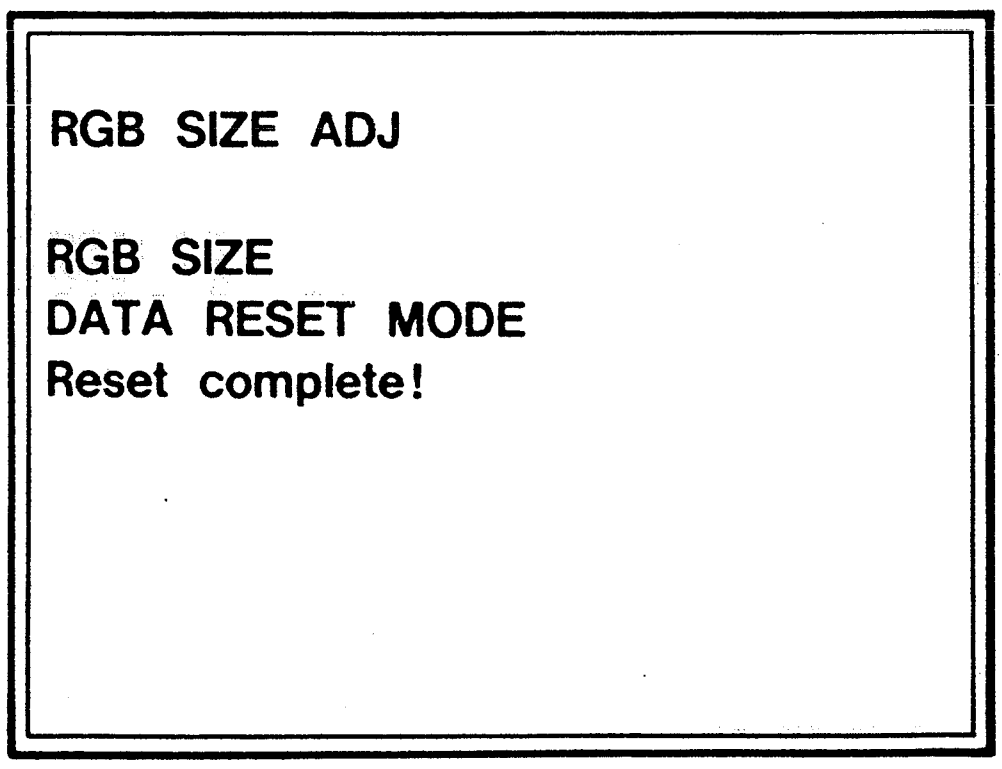

RGB SIZE ADJ

RGB SIZE
DATA RESET MODE
Reset complete!

To Store the Adjustment Levels

If you wish to save the picture adjustment changes, you must store them in memory.
The following conditions can be stored:

SECAM ON/OFF setting
CLEAR BLUE (C.B.) ON/OFF setting
COLOR TEMPERATURE setting on PAGE 3
RGB SIZE/SHIFT adjustment levels

1 **After the adjustment, press MEMORY key.**
The following on-screen display appears to indicate that storing has begun. While the display is on, no other key will function.

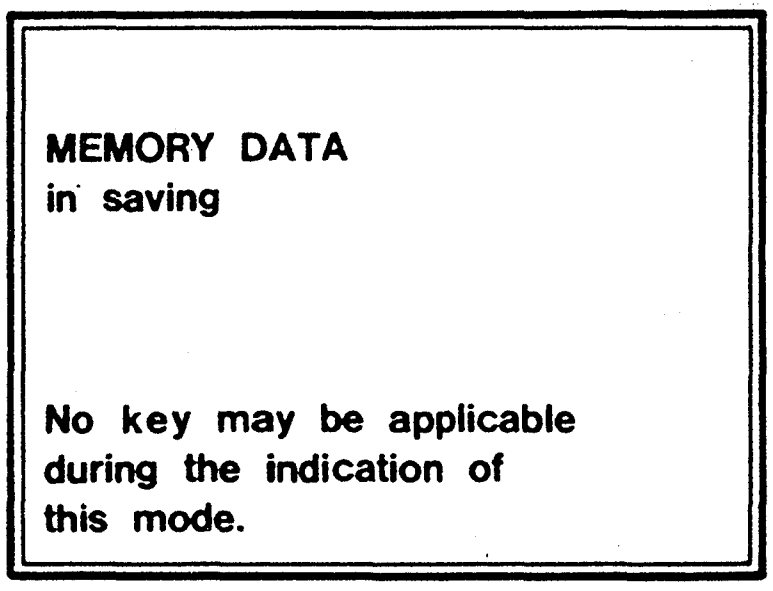

MEMORY DATA
in saving

No key may be applicable
during the indication of
this mode.

2 **The following on-screen display appears to confirm that storing has been completed.**

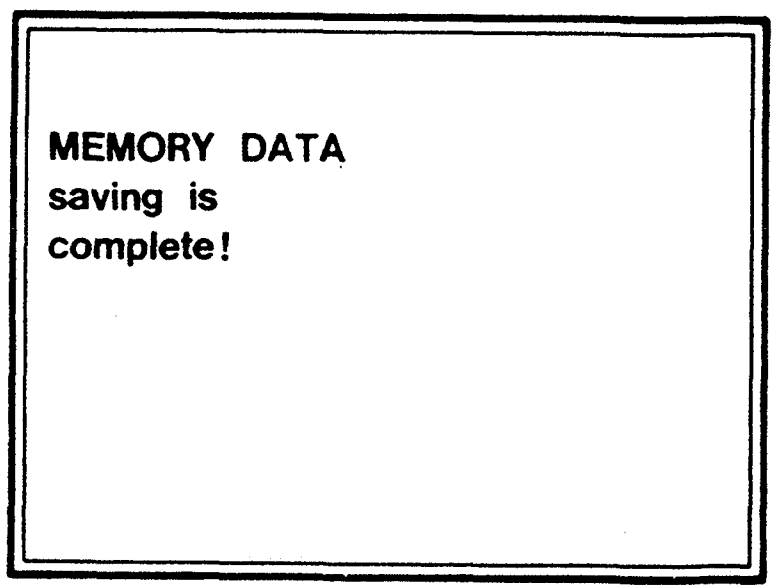

MEMORY DATA
saving is
complete!

Messages on the Screen

The meaning of the color
Four colors are used in the letters of on-screen display.

Color	Meaning
Green	Function and condition
Cyan	Operation guide and messages
Yellow	Caution and error messages
White	Item being adjusted

Error messsage
When you perform an error in operation, the following messages will be displayed.

Messages	Meaning
Not applicable!	The control dose not function with the current input.
PIC MUTE	PIC MUTE is set to ON. If you want to adjust the picture controls, press PJ MUTE PIC key to cancel the PIC MUTE mode.
Overflow!	RGB SIZE/SHIFT and CENT R/B adjustment range limit has been reached.
OFF	STATUS is set to OFF to cut the on-screen display. To restore the on-screen display, press STATUS ON key.

If the Luminance of the Picture is Incorrect – Clamp Setting

Clamp is used as a standard for setting the black level of the picture correctly. The standard position of the clamp depends on the kind of the sync signal. Normally the CPU may judges the signal and sets the clamp position automatically.

However, the CPU may misjudge the signal because of noise. If the luminance of the picture seems to be incorrect, (too dark, the black color is too light, or the luminance is unstable) the clamp position may needs to be changed.
In such case, change the clamp position following the procedure below.

1 **Press Page key 3 times.**

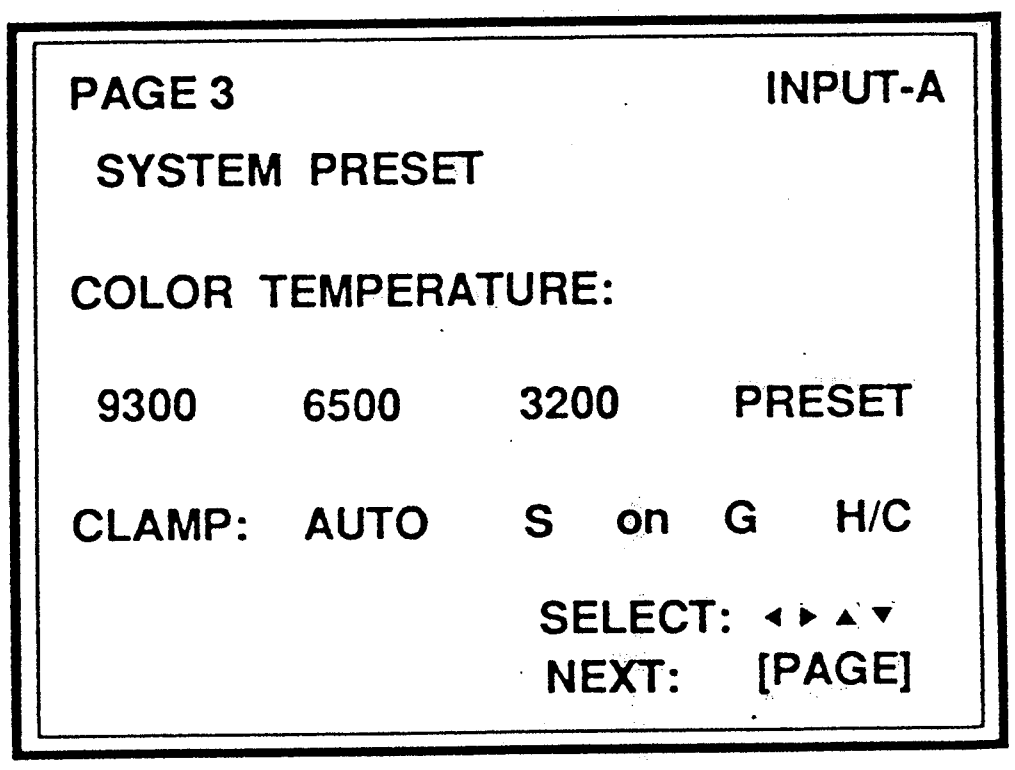

```
PAGE 3                          INPUT-A
 SYSTEM  PRESET

COLOR  TEMPERATURE:

 9300     6500     3200     PRESET

CLAMP:   AUTO     S   on   G    H/C
                   SELECT:  ◄ ► ▲ ▼
                   NEXT:    [PAGE]
```

2 **Select the clamp postion by pressing ◄, ►, ▲ and ▼ keys.**

AUTO: Automatic setting mode. Normally, set to this position.
S on G:If the black color is too light or seems to be green, set to this position.
H/C: If the picture is too dark or the luminance is unstable, set to this position.

3 **Press MEMORY key to save the data.**

If the luminance is still incorrect after changing the clamp setting
There may be other problem with the input signal or connection. Check the input signal.

1-3. CENTERING ADJUSTMENT

The three colors red, green and blue must converge for proper projection. If they do not converge, centering adjustment is necesssary.

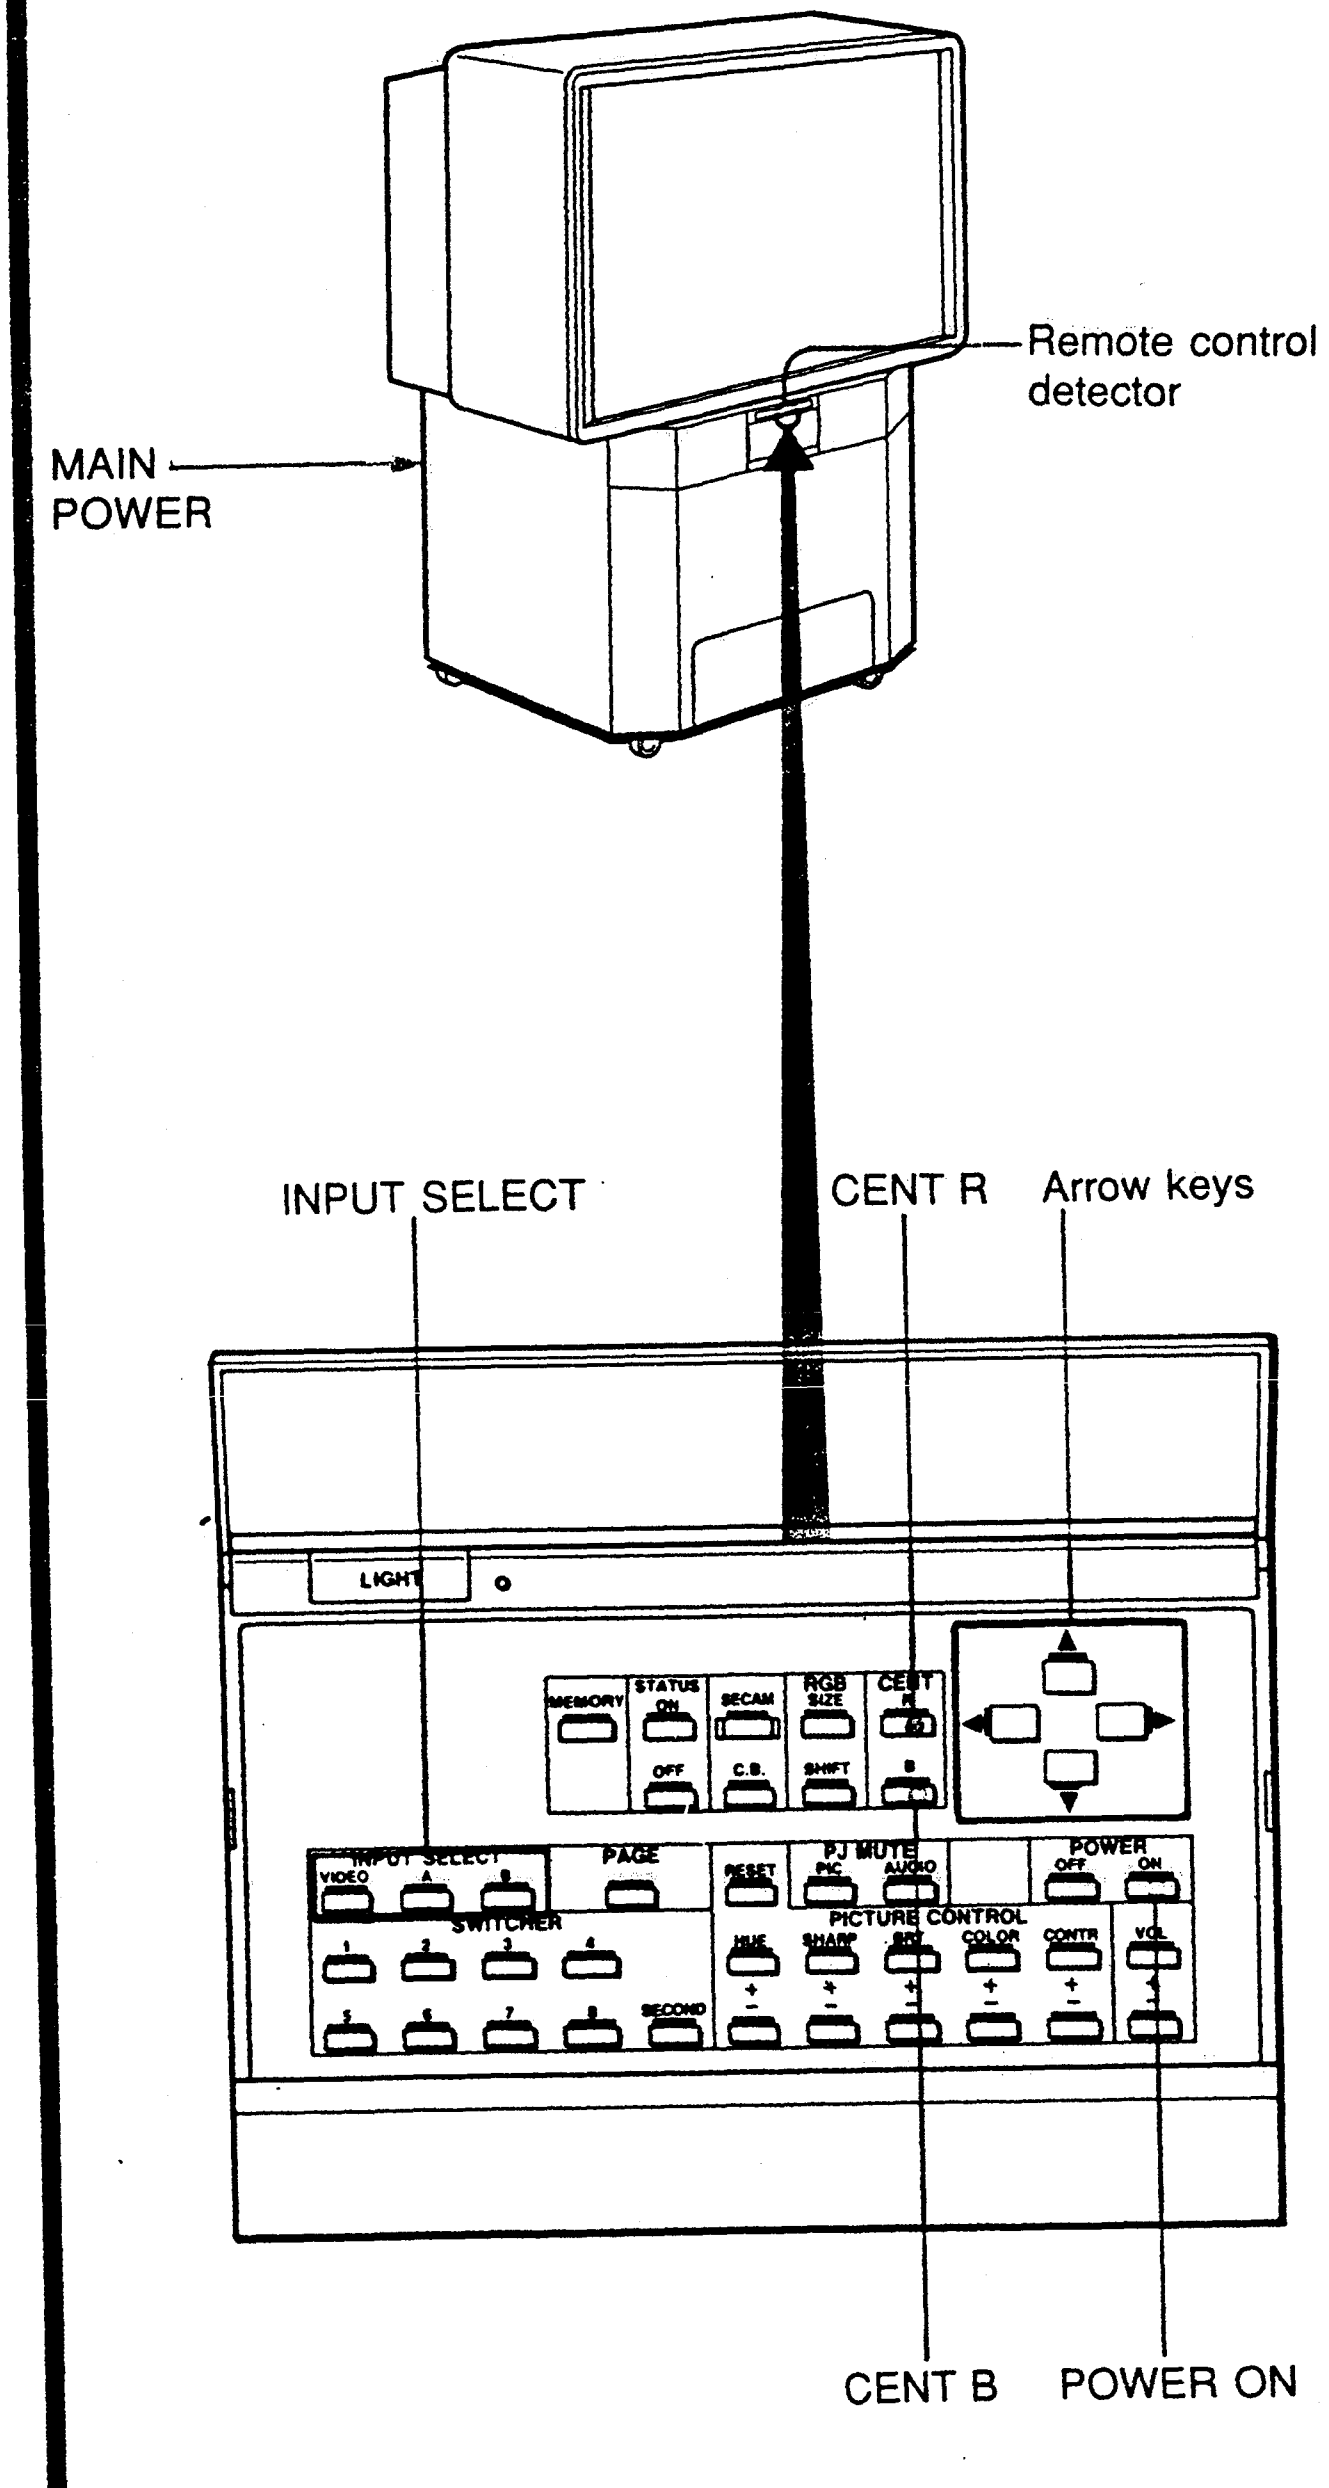
Remote control detector
MAIN POWER
INPUT SELECT
CENT R
Arrow keys
LIGHT
MEMORY
STATUS ON
SECAM
RGB SIZE
CENT R
OFF
C.B.
SHIFT
B
INPUT SELECT
VIDEO
A
B
PAGE
RESET
PJ MUTE
PIC
AUDIO
POWER
OFF
ON
SWITCHER
1
2
3
4
5
6
7
8
SECOND
PICTURE CONTROL
HUE
SHARP
BRT
COLOR
CONTR
VOL
CENT B
POWER ON

1 **Press MAIN POWER switch of the projector and press POWER ON key of the Remote Commander.**

2 **Press CENT R key.**
The built-in cross hair test pattern will be displayed and the red line will be operable.

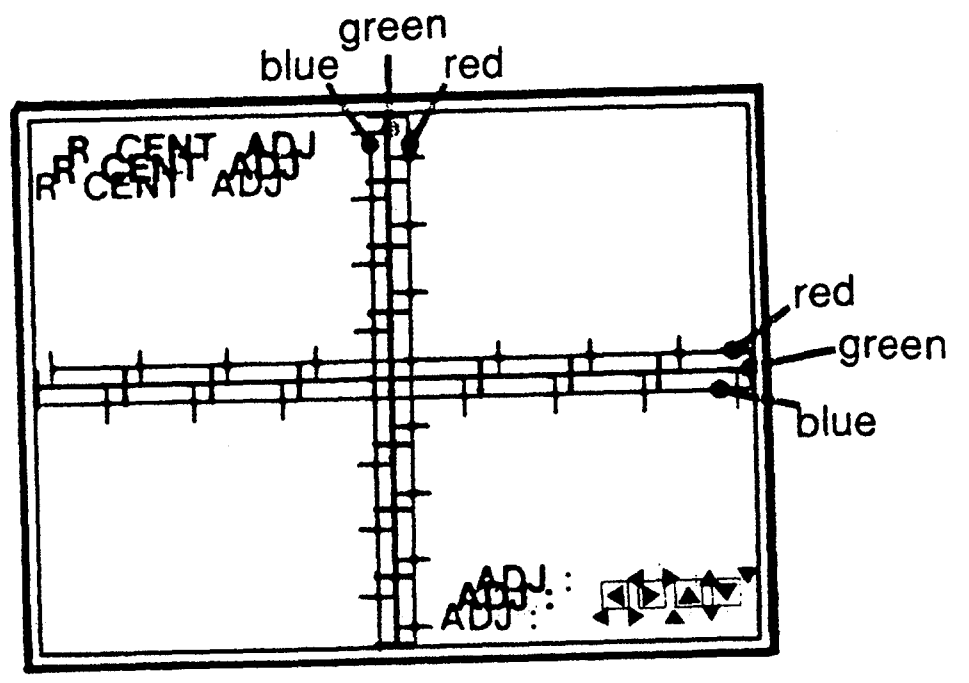
green
blue
red
R CENT ADJ
red
green
blue
ADJ :

(Three colors do not converge.)

3 **Press arrow keys to move the red line until the red and green lines converge and are seen as yellow.**
The red line will move according to the direction of the arrow.

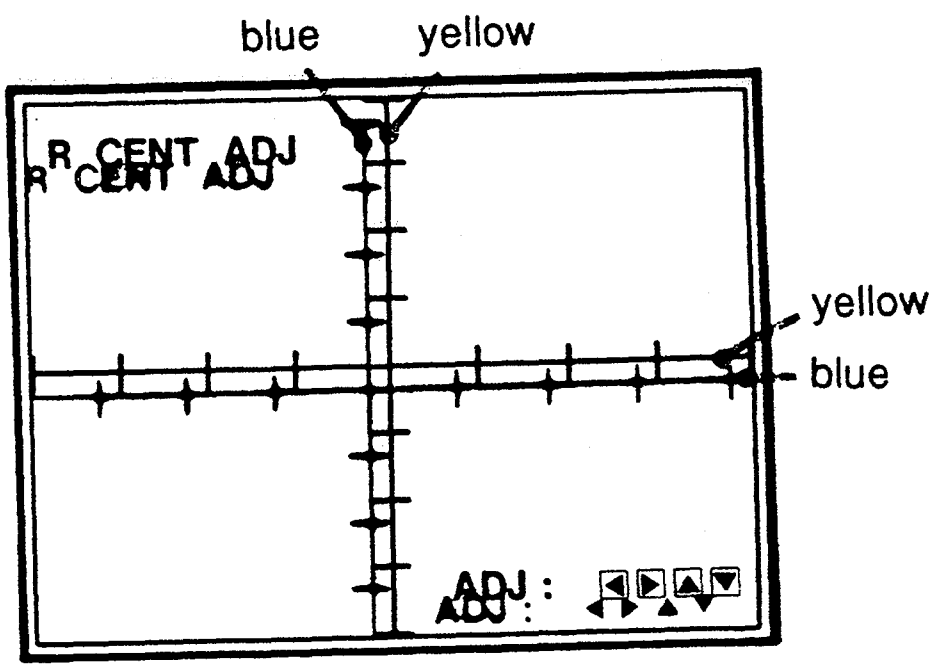
blue
yellow
R CENT ADJ
yellow
blue
ADJ :

(Green and red converged.)

4 **Press CENT B key.**
The blue line will be operable.

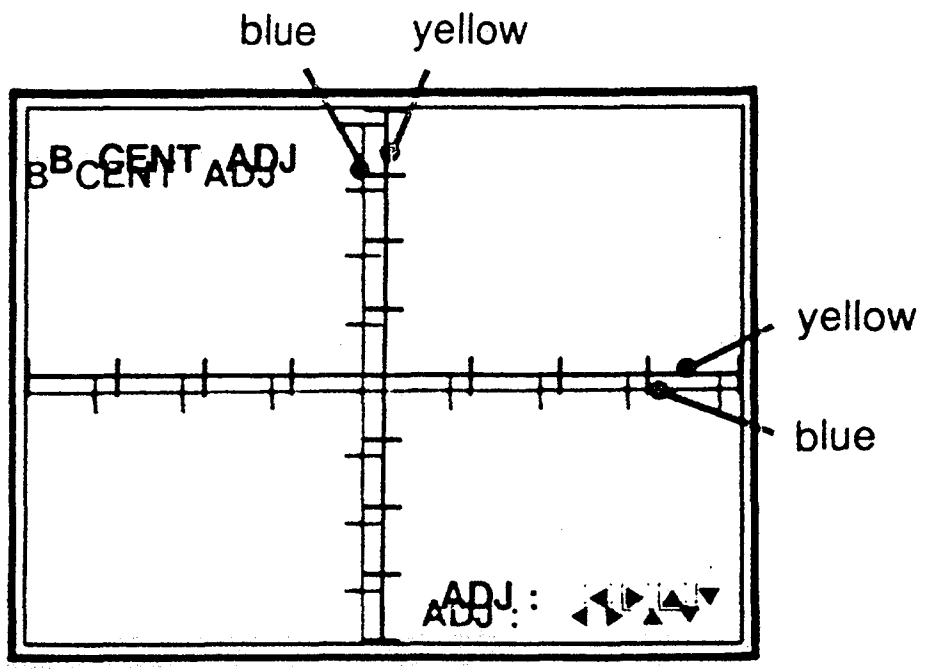
blue
yellow
B CENT ADJ
yellow
blue
ADJ :

5 **Press arrow keys to move the blue line until the blue and yellow lines converge.**
When all three color lines converge, the pattern will be seen as white.

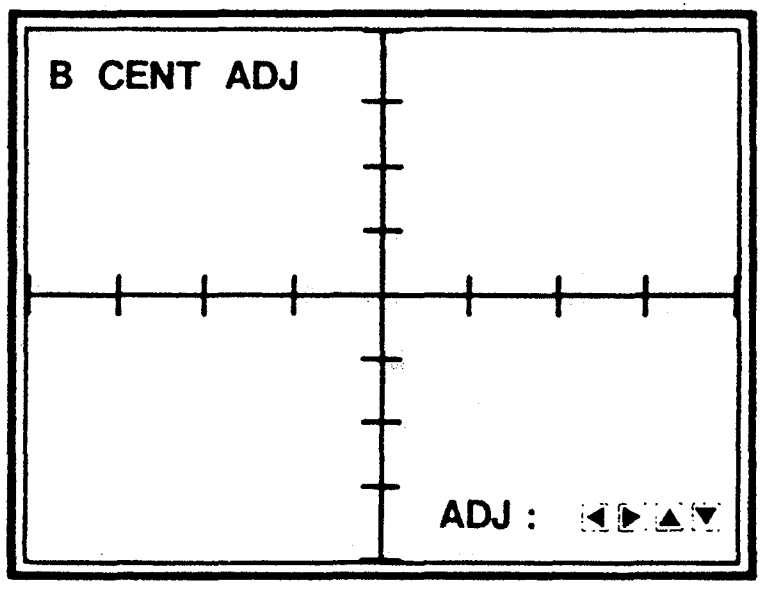
B CENT ADJ
ADJ :

(Three colors converged.)

6 **Press the selected INPUT SELECT key (VIDEO, A or B) to exit the test pattern mode.**

1-4. SYSTEM CONNECTIONS

Notes on connection

- First make sure that the power to each piece of equipment is turned off.
- Use connecting cables suitable for the equipment to be connected.
- The cable connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.
- To disconnect the cable, pull it out by grasping the plug. Never pull the cable itself.
- For connection to the REMOTE 1 connector, the connecting cable may be extended to maximum 50 m for VIDEO input and 25 m for RGB input. If the connecting cable is longer than that, picture quality may be impaired somewhat. To extend the connecting cable for RGB input longer than 25 m, please consult the qualified Sony personnel.
- Read the instruction manual of the equipment to be connected.

Connecting to the Projector Directly

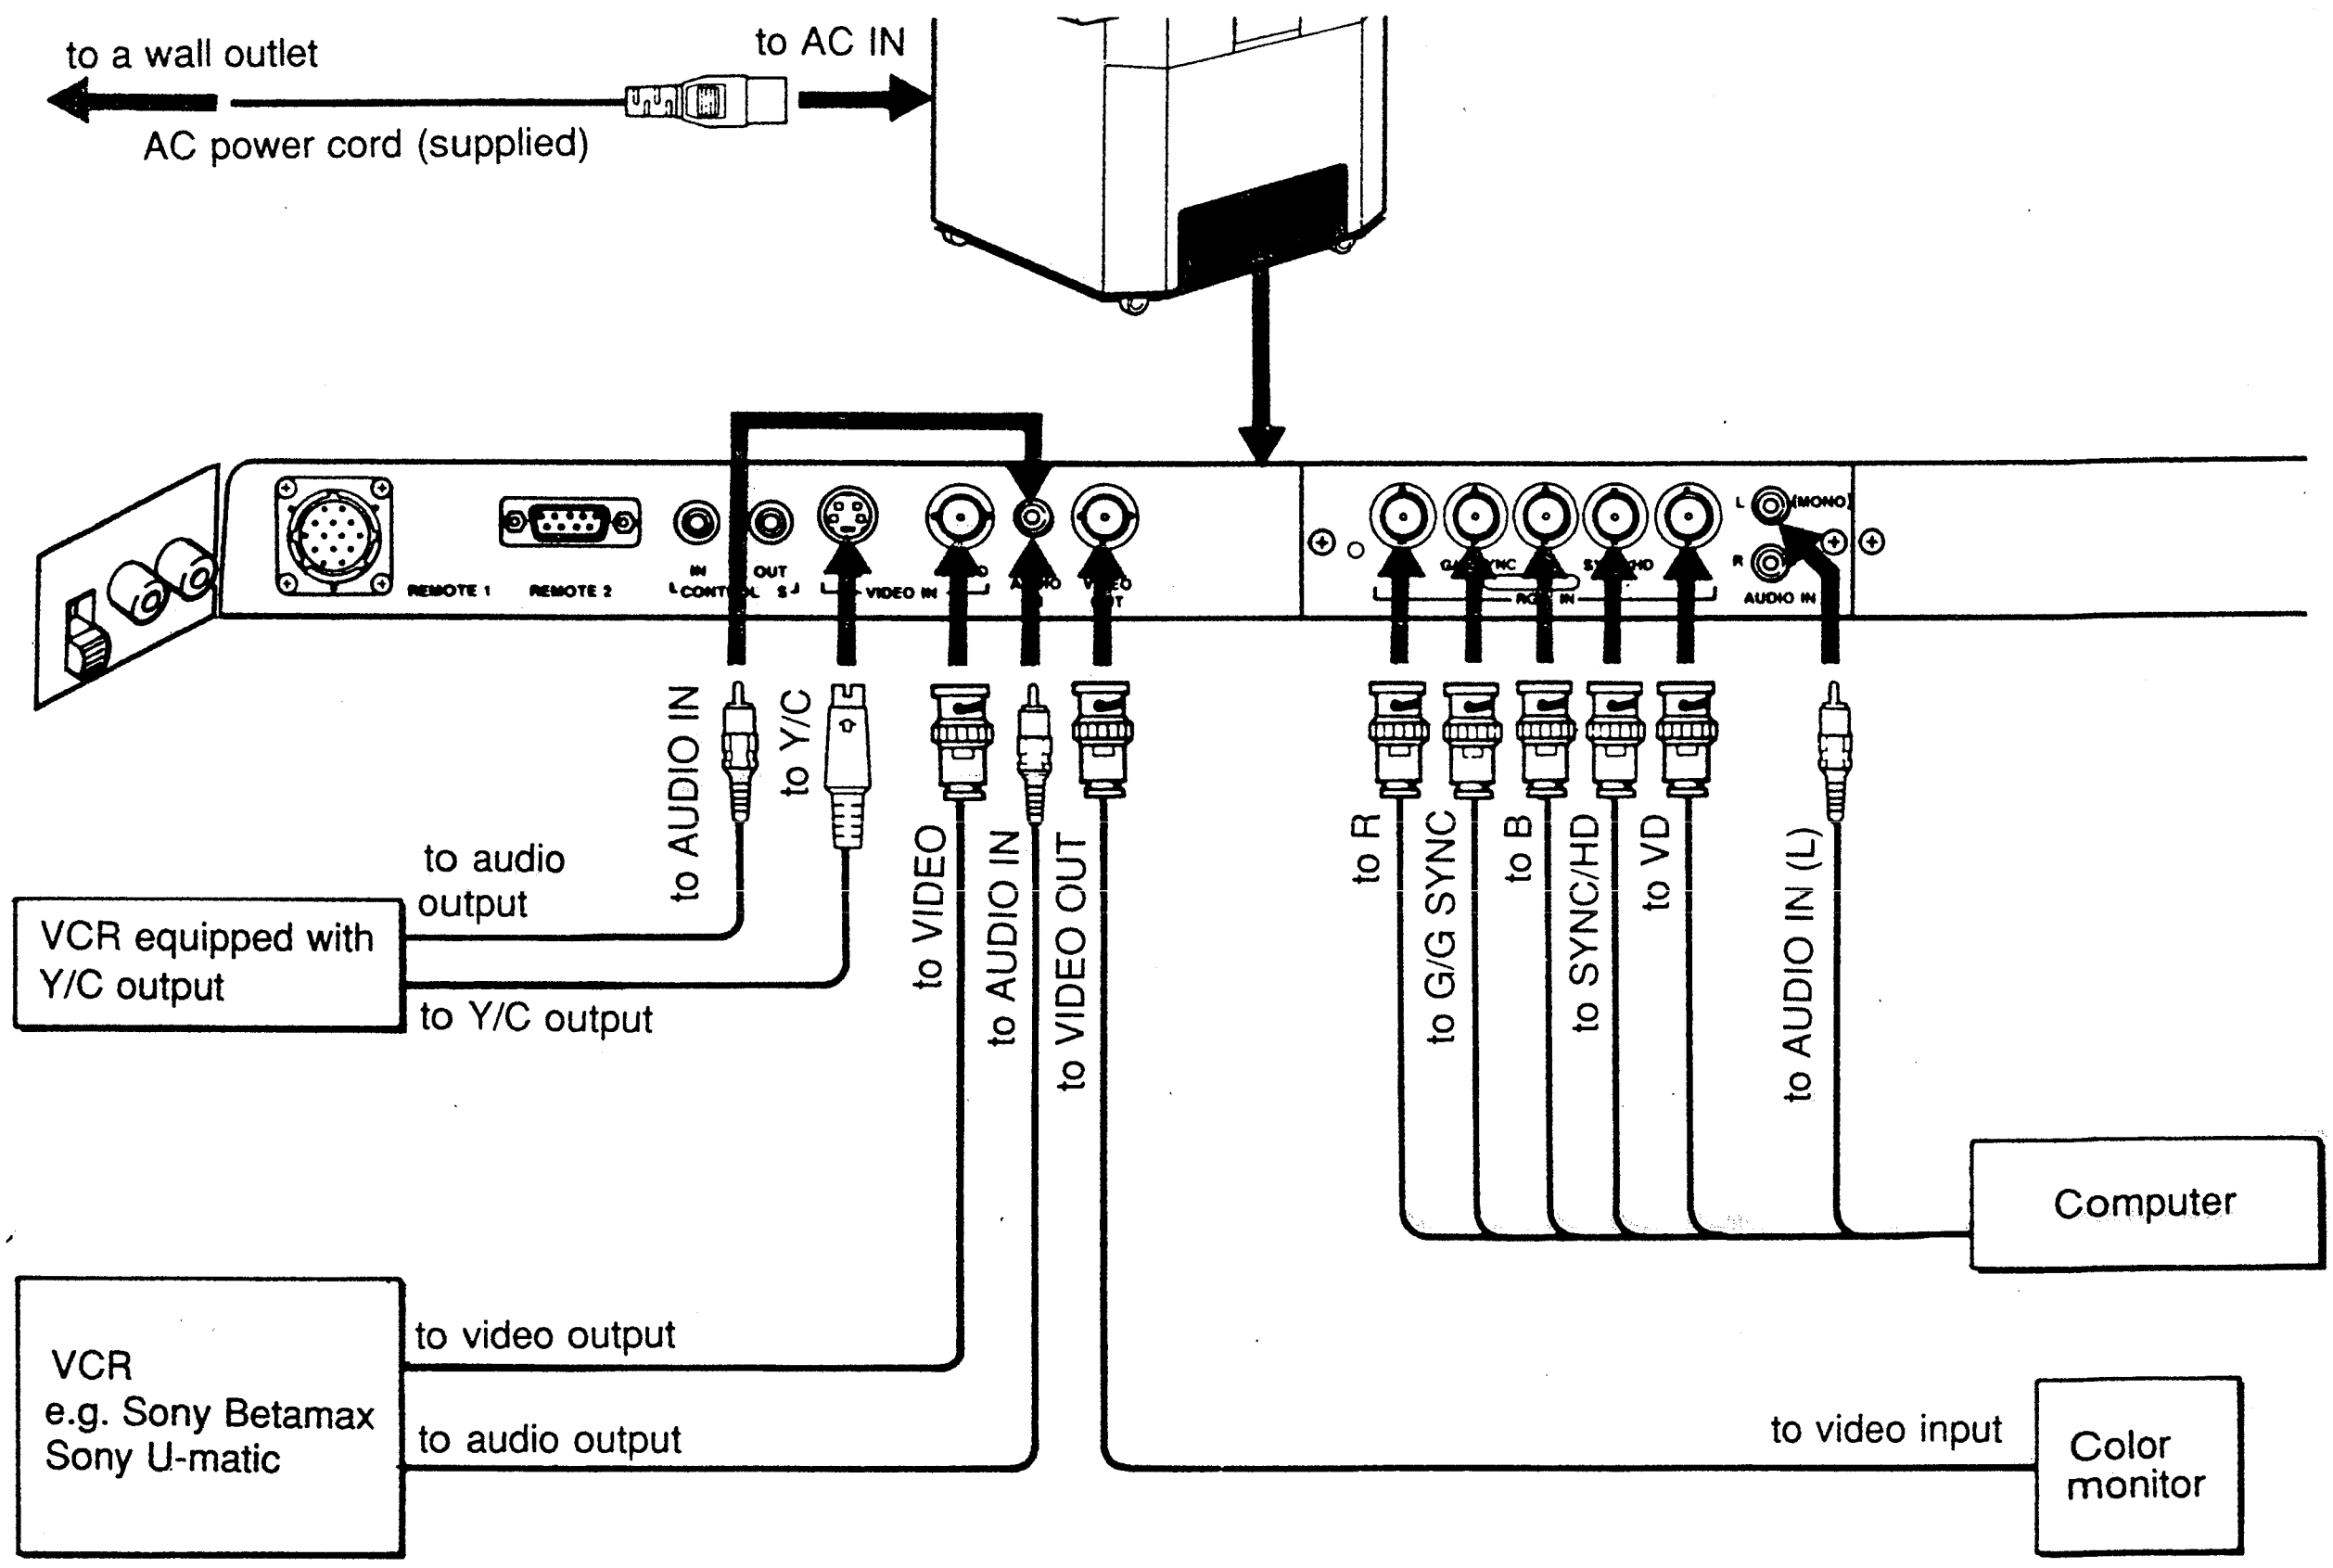
to a wall outlet
to AC IN
AC power cord (supplied)
REMOTE 1
REMOTE 2
to AUDIO IN
to Y/C
to VIDEO
to AUDIO IN
to VIDEO OUT
to audio output
VCR equipped with Y/C output
to Y/C output
to R
to G/G SYNC
to B
to SYNC/HD
to VD
to AUDIO IN (L)
Computer
VCR
e.g. Sony Betamax
Sony U-matic
to video output
to audio output
to video input
Color monitor

Notes

- The VIDEO connector is disconnected automatically when a cable is connected to the Y/C connector.
- The external sync signal has priority over the internal sync signal. However, when the external sync signal is incomplete, the internal sync signal has priority.

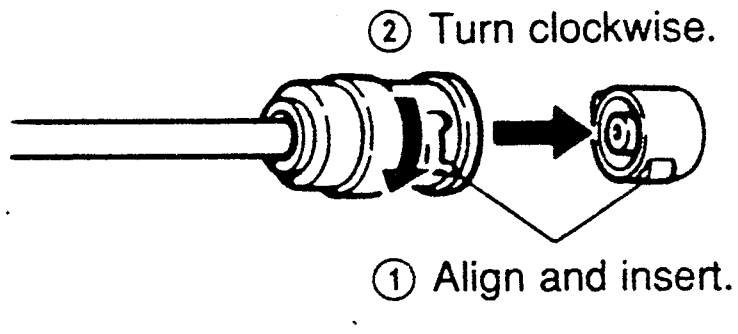
② Turn clockwise.
① Align and insert.

Notes

- Do not leave a still picture from a computer or video disc player projected for more than one hour.
- Depending on the computer, the dimensions of the character display area may change or the picture may be uncentered. This is not a fault of the projector.
- If your computer is equipped with a composite video output, connect it to the VIDEO IN VIDEO connector of the projector.
- If necessary, adjust the size and shift of the picture using RGB SIZE/SHIFT and arrow keys (see page 16).

Using the Interface Board

Use the optional interface board IFB-10, 20, 30, or 1000 to expand the system connections.

Example: Using the IFB-30 interface board

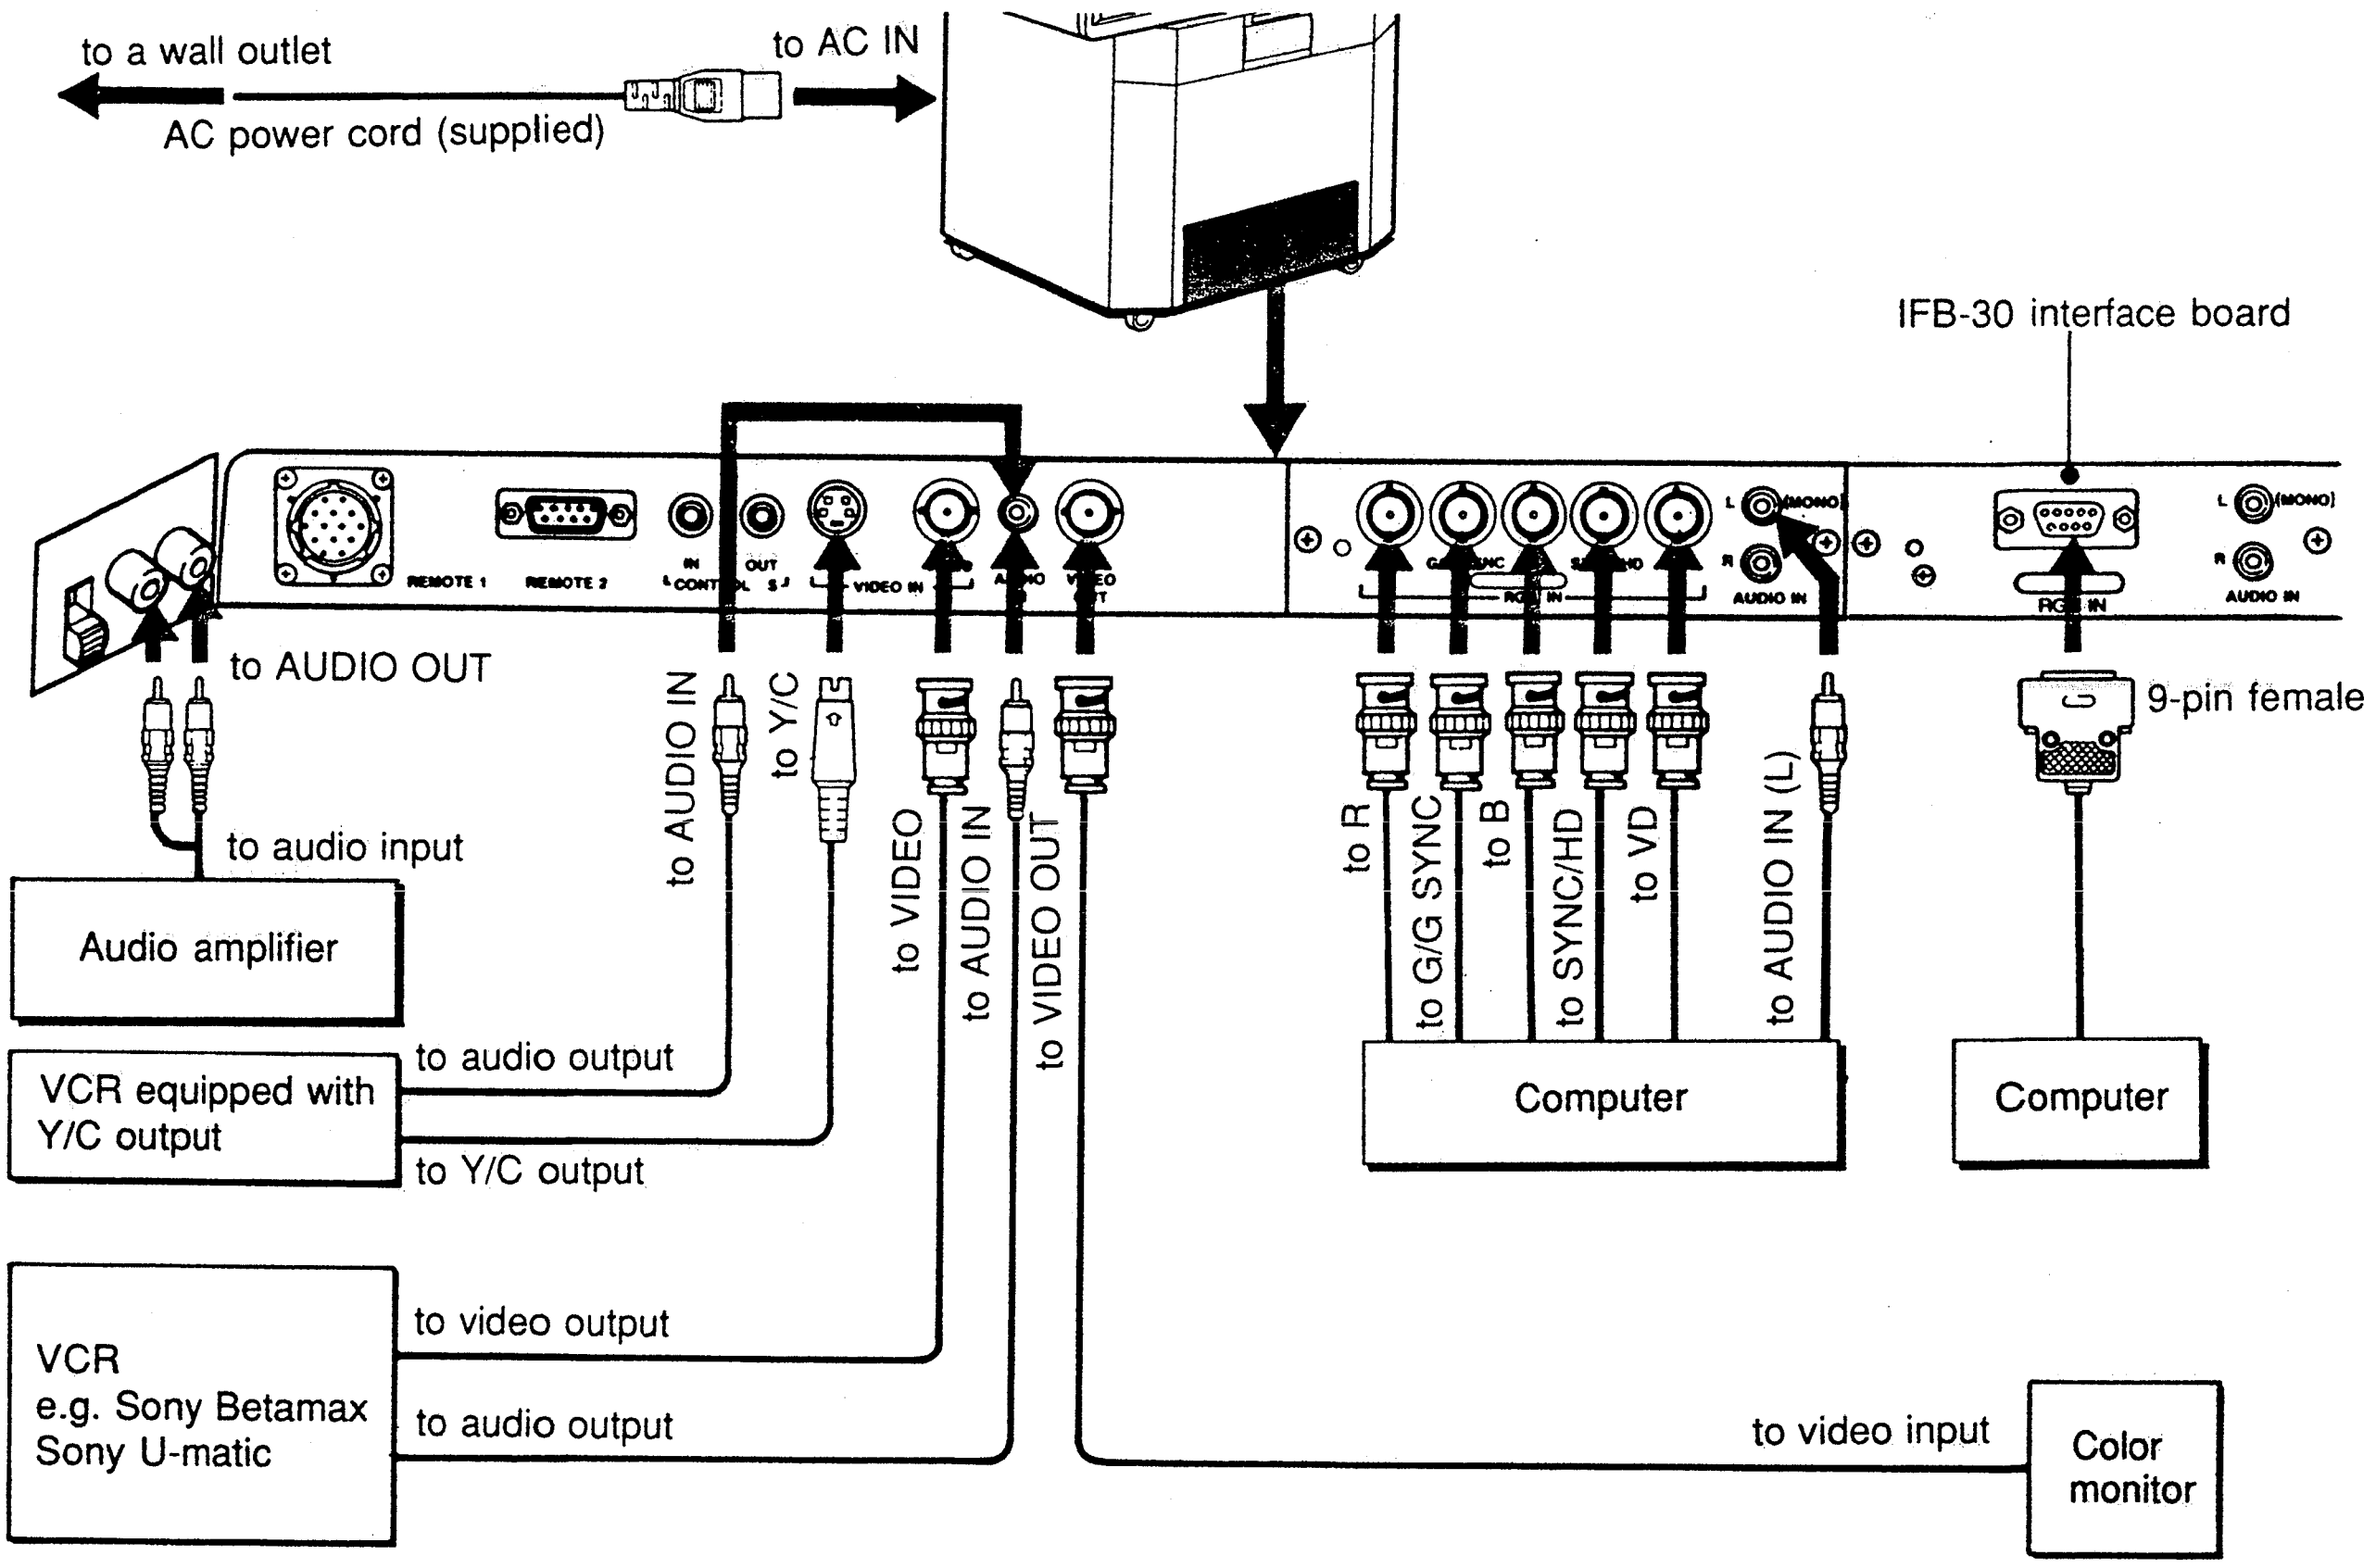
to a wall outlet
to AC IN
AC power cord (supplied)
IFB-30 interface board
to AUDIO OUT
to audio input
Audio amplifier
to AUDIO IN
to Y/C
to VIDEO
to AUDIO IN
to VIDEO OUT
VCR equipped with Y/C output
to audio output
to Y/C output
VCR
e.g. Sony Betamax
Sony U-matic
to video output
to audio output
to R
to G/G SYNC
to B
to SYNC/HD
to VD
to AUDIO IN (L)
Computer
9-pin female
Computer
to video input
Color monitor
REMOTE 1
REMOTE 2
VIDEO IN
RGB IN
AUDIO IN

For installing the interface board, consult the qualified Sony personnel.

Using the Switcher

Use the optional switcher PC-1270/1270M for connecting various video equipment. The input is selected by pressing the SWITCHER keys on the Remote Commander.

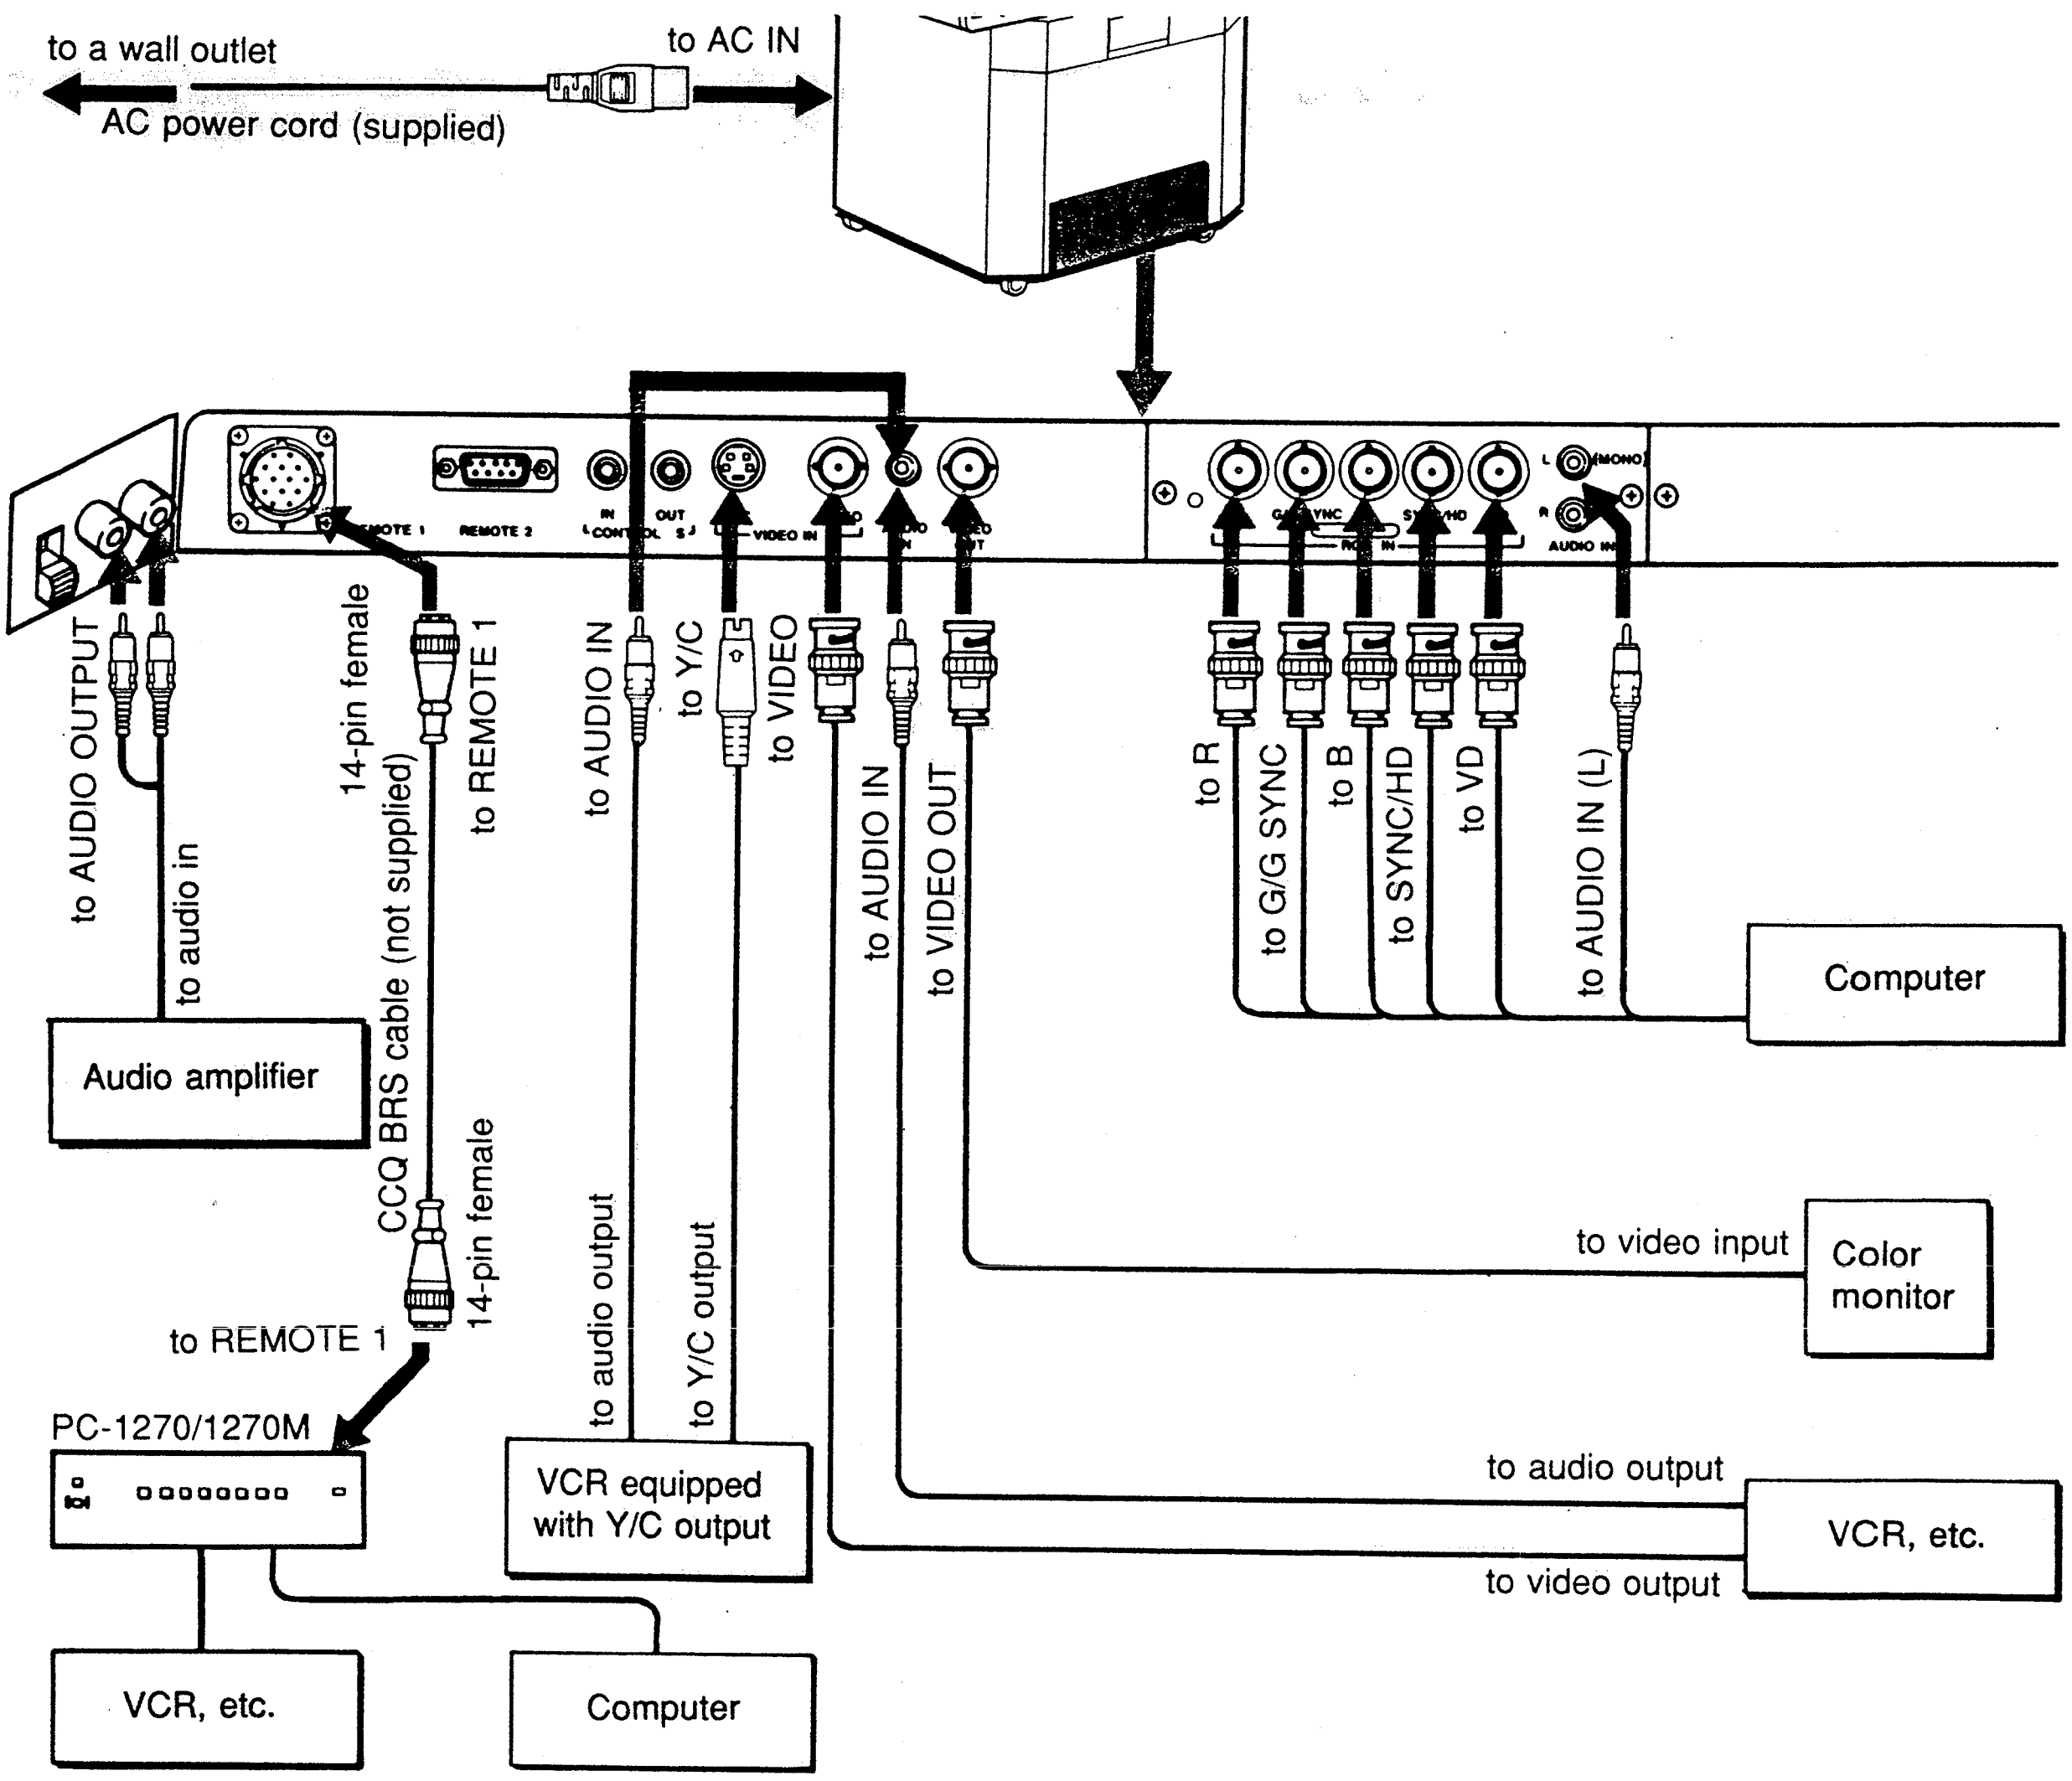
to a wall outlet
to AC IN
AC power cord (supplied)
to AUDIO OUTPUT
to audio in
Audio amplifier
14-pin female
CCQ BRS cable (not supplied)
to REMOTE 1
14-pin female
to REMOTE 1
PC-1270/1270M
VCR, etc.
Computer
to AUDIO IN
to Y/C
to VIDEO
to audio output
to Y/C output
VCR equipped with Y/C output
to AUDIO IN
to VIDEO OUT
to R
to G/G SYNC
to B
to SYNC/HD
to VD
to AUDIO IN (L)
Computer
to video input
Color monitor
to audio output
to video output
VCR, etc.

The equipment can be connected to VIDEO IN and RGB IN connectors even when the switcher is connected.

Using the SWITCHER keys on the Remote Commander

Press the number key from 1 to 8 to select the input number of the switcher. SECOND key is used when there are two switchers.

To control the second switcher (SINGLE/SECOND/REMOTE switch is set to SECOND), first press SECOND key and then the number key.

14-pin connector


① Align the pins and insert.
CCQ BRS cable
② Turn clockwise.

1-5. PARTS LIST

Make sure that all parts are supplied.

Upper cabinet (1) (RVP-6000QMT, packed separately) 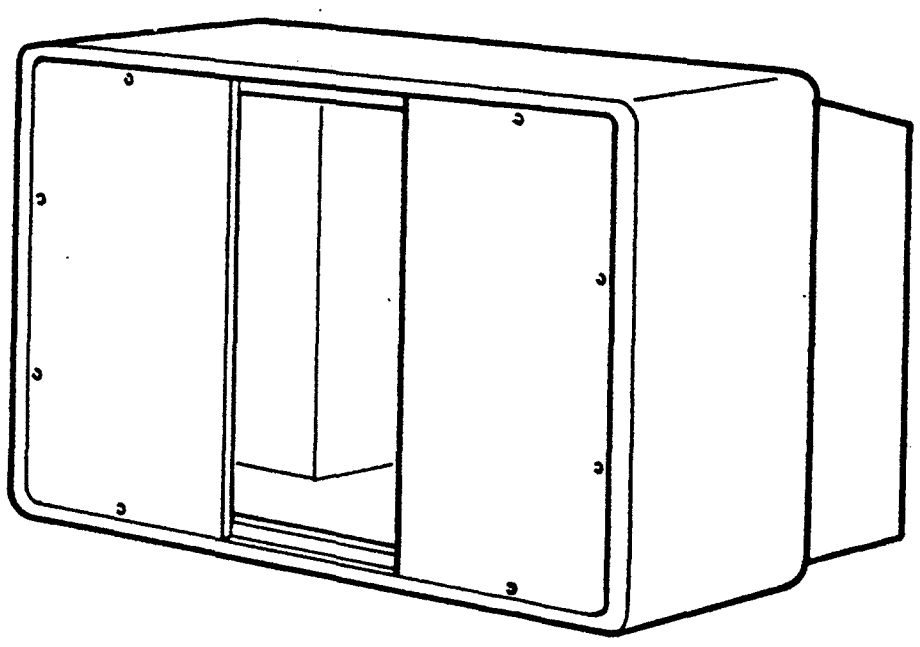	**Lower cabinet** (1) The projector is mounted. 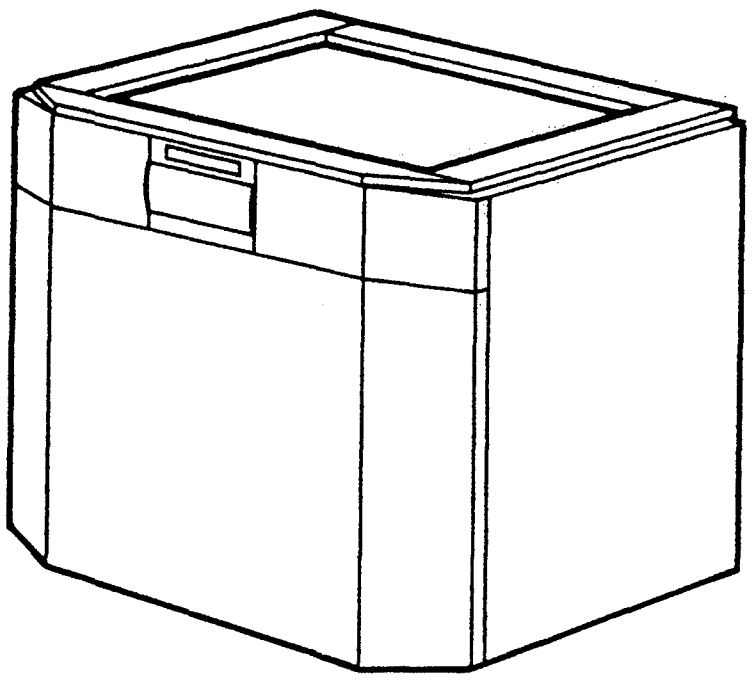
Screen (1) (RVP-6000QMT, packed separately) 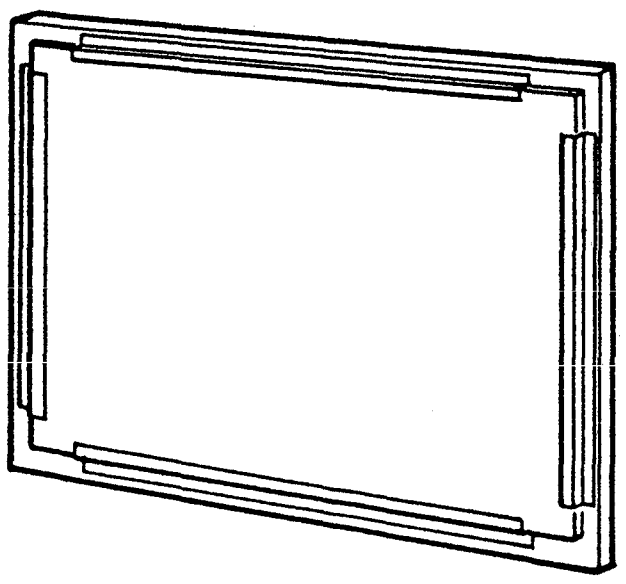	**Screen frame** (1) (RVP-6000QMT, packed separately) 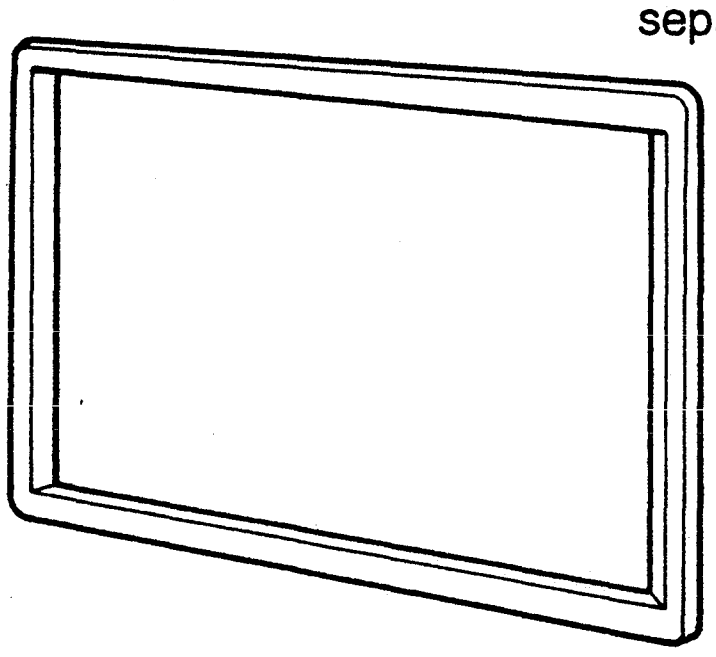

ⓐ **Wing screw** M6 × 40 (6) (RVP-6000QMT, packed separately) 	ⓑ **Wing screw** M6 × 15 (2) (RVP-6000QMT, packed separately) 	ⓒ **Screw** M4 × 40 (2) (RVP-6000QMT, packed separately) 

1-6. INSTALLATION

1 Place the upper cabinet on the lower cabinet.

1 Place the projection at the bottom of the upper cabinet inside the frame of the lower cabinet.

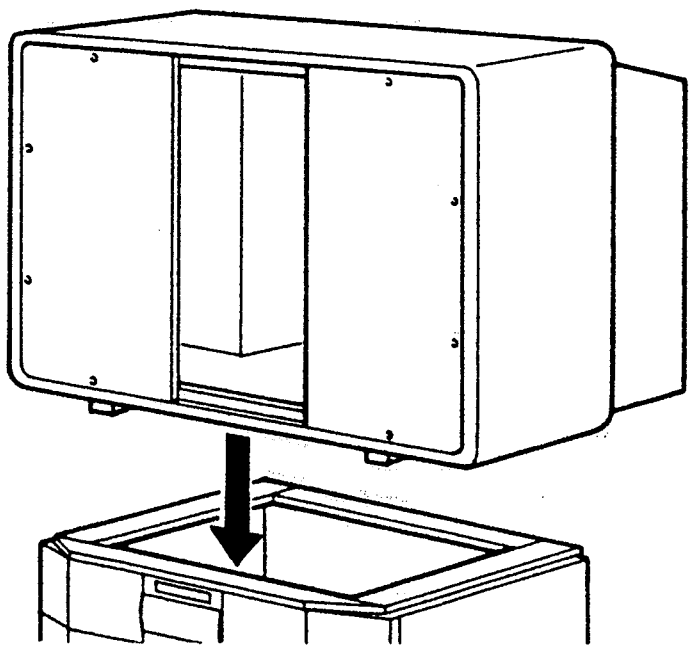

2 Press the upper cabinet backward until it stops so that the back of upper and lower cabinets align.

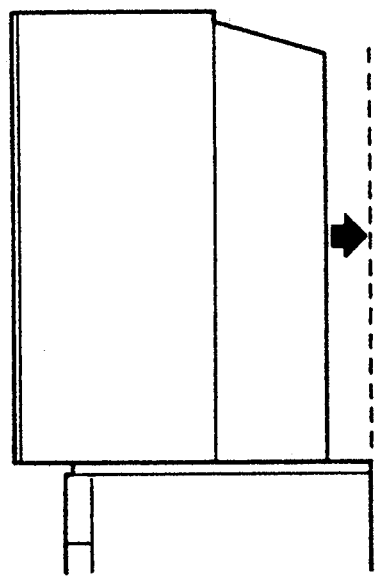

3 Remove the cabinet board.

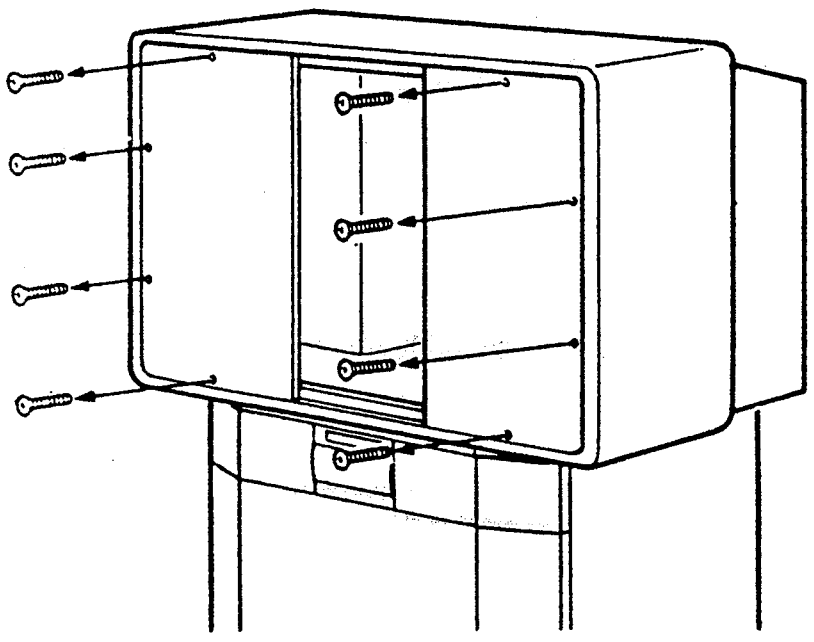

4 Secure with wing screws.

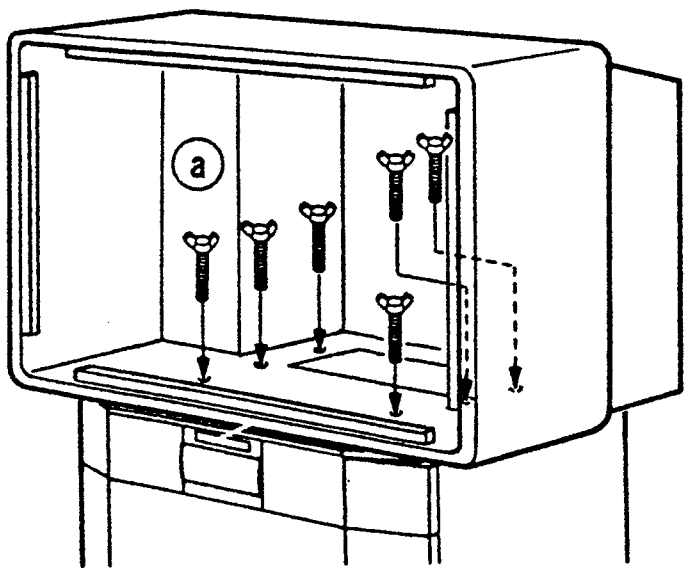

2 Pull out the mirror cover.

1 Remove the screws and metal plates.

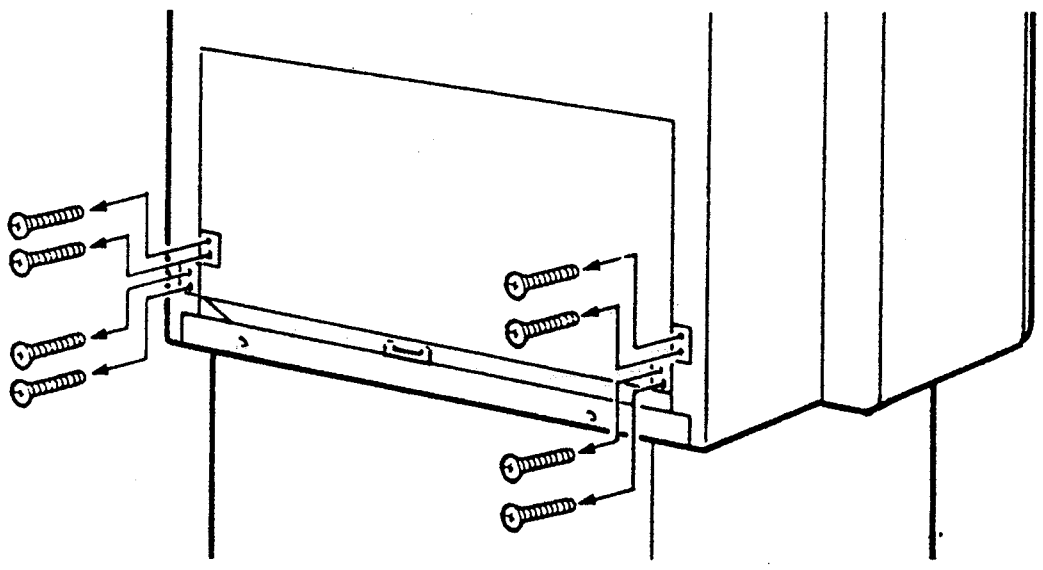

Note

Store the screws and metal plates. Use them to align the mirror cover for transportation.

2 Hold the handle and pull the mirror cover fully out.

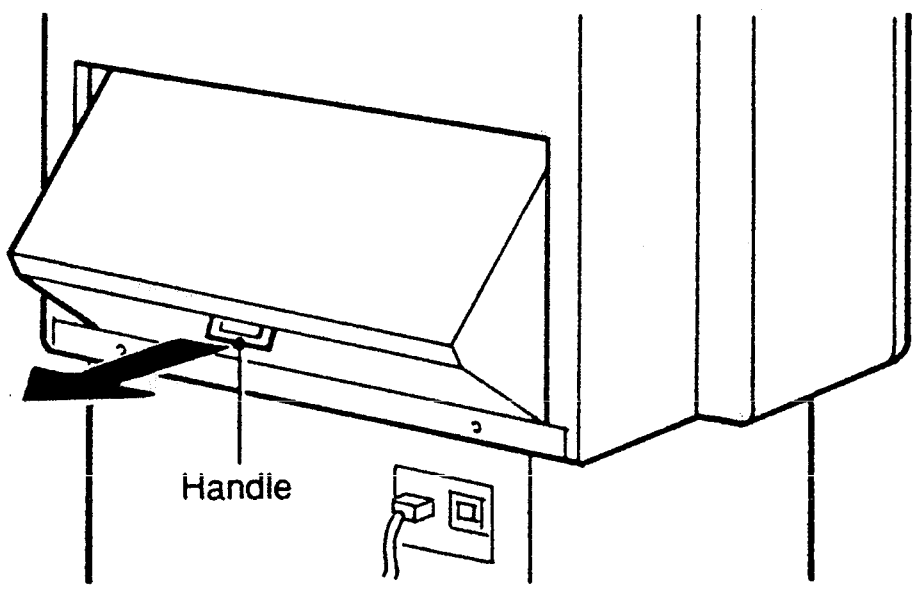

3 Secure the mirror cover.

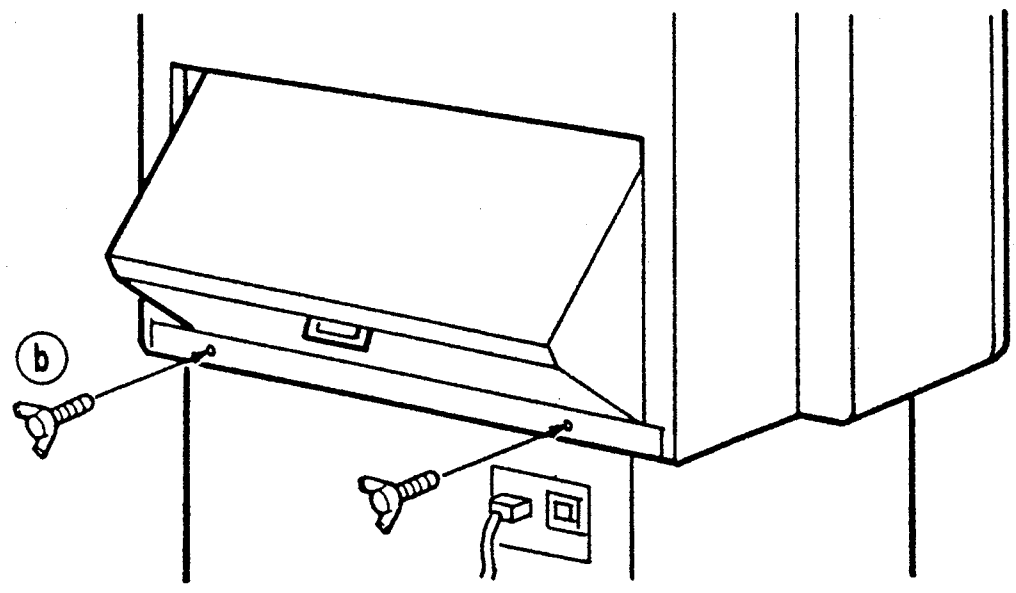

3 Mount the screen.

The mark indicates the top side of the screen.

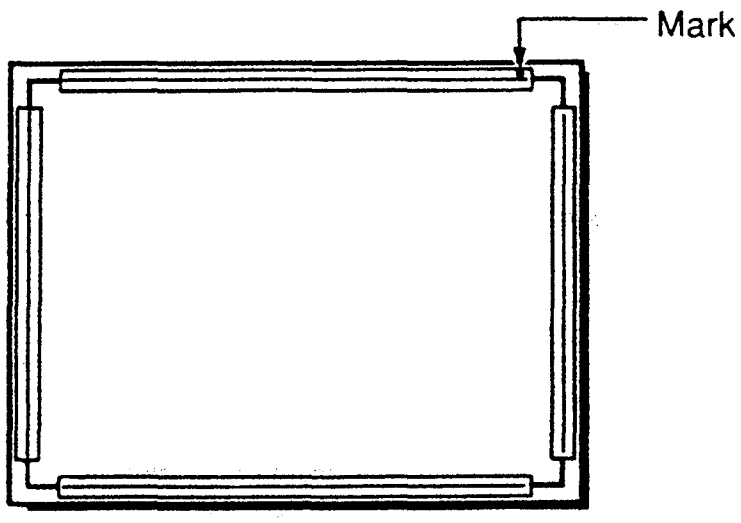

1 Insert the bottom of the screen in the groove, and then depress the screen in the upper cabinet.

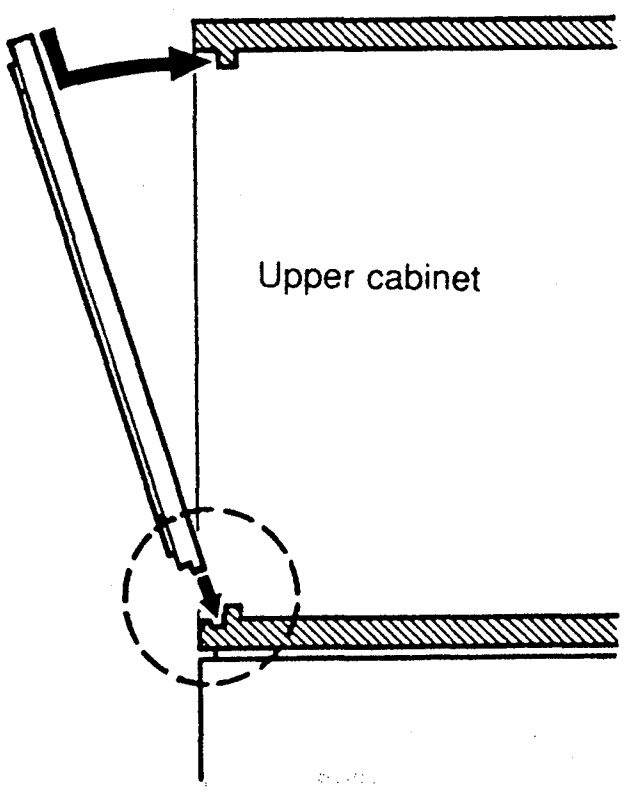

Notes

- Hold the screen by the edges.
- Do not touch the screen.

2 Secure with the screws.

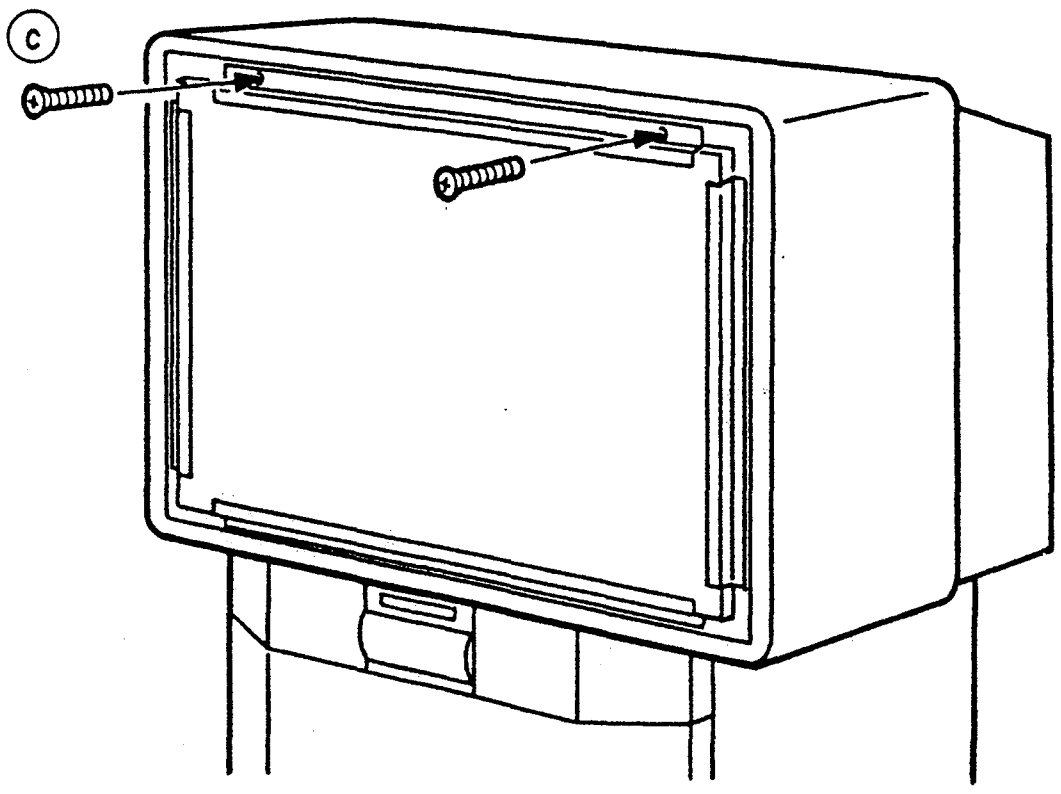

4 Mount the screen frame.

1 Insert the projections of the screen frame into the holes of the upper cabinet.
First, start with the center-top.

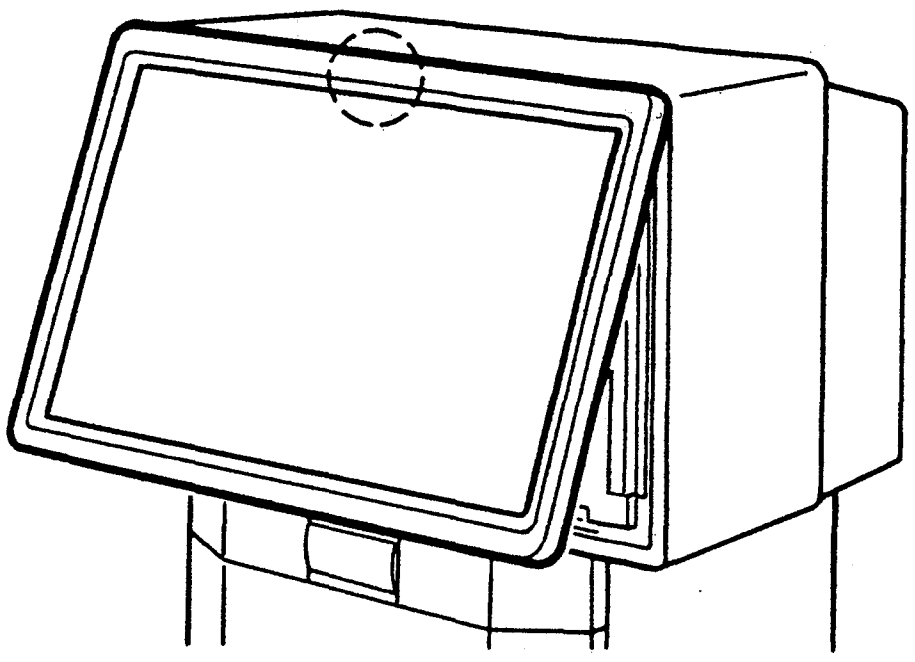

2 Insert the other seven projections.

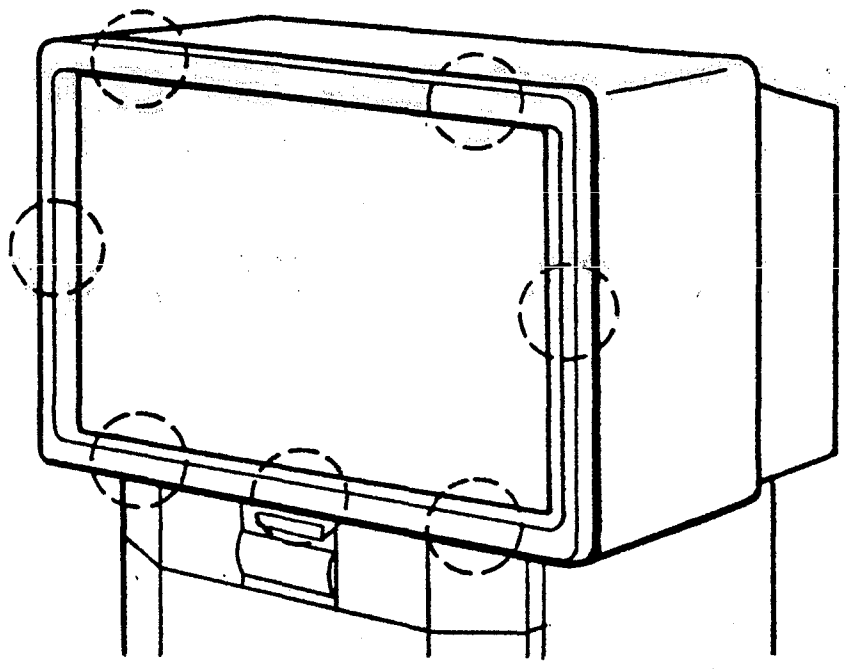

5 Secure with the two stoppers.

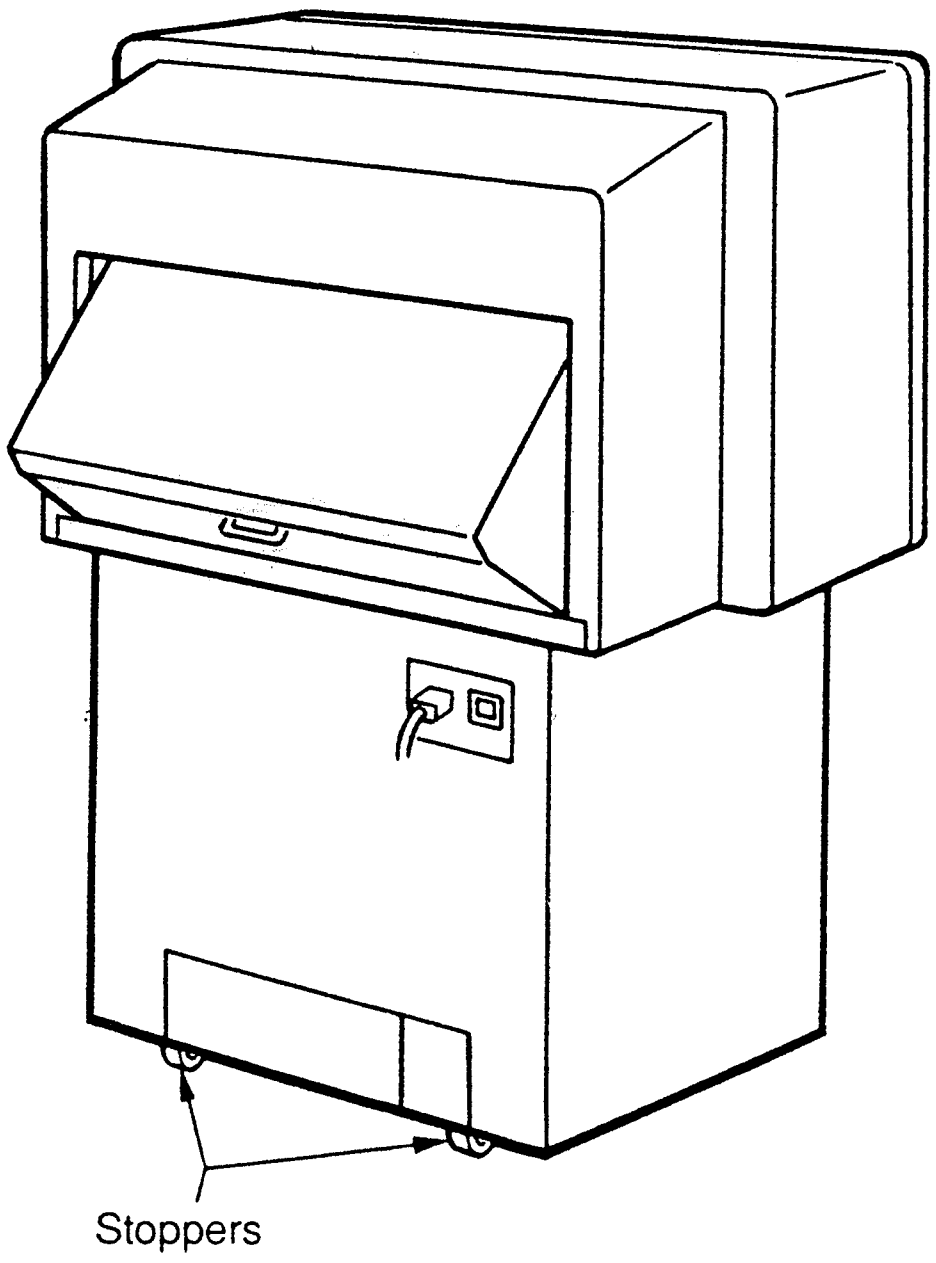

1 Move the cabinet so that the stoppers come to the rear.

2 Lower the stoppers.

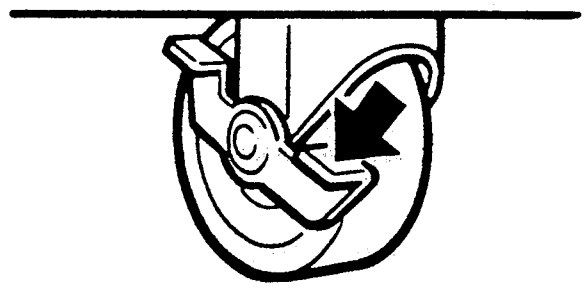

Viewing Area

Vertical viewing area

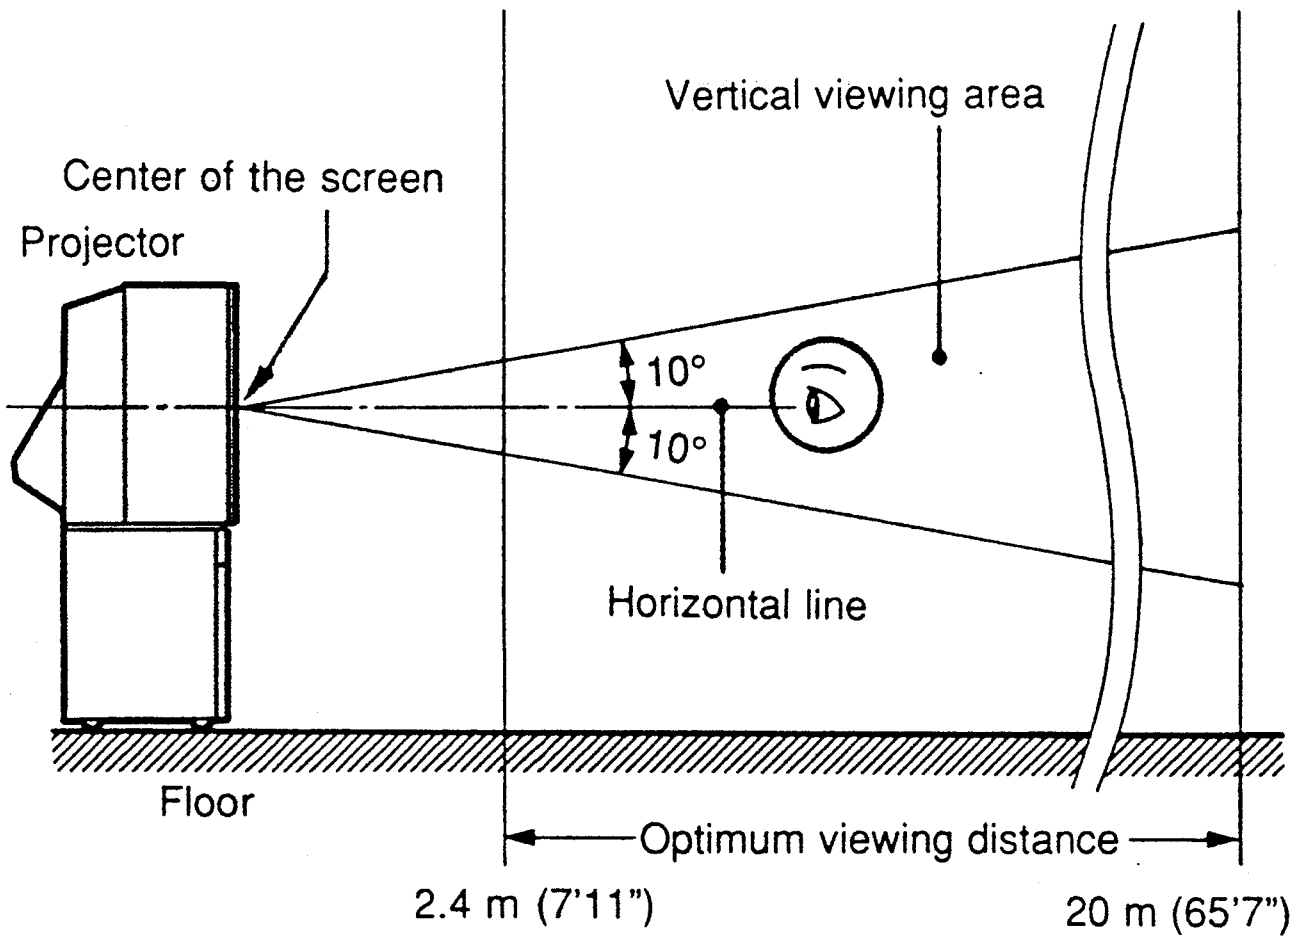
Vertical viewing area
Center of the screen
Projector
10°
10°
Horizontal line
Floor
Optimum viewing distance
2.4 m (7'11")
20 m (65'7")

Margin of error ±1%

Horizontal viewing area

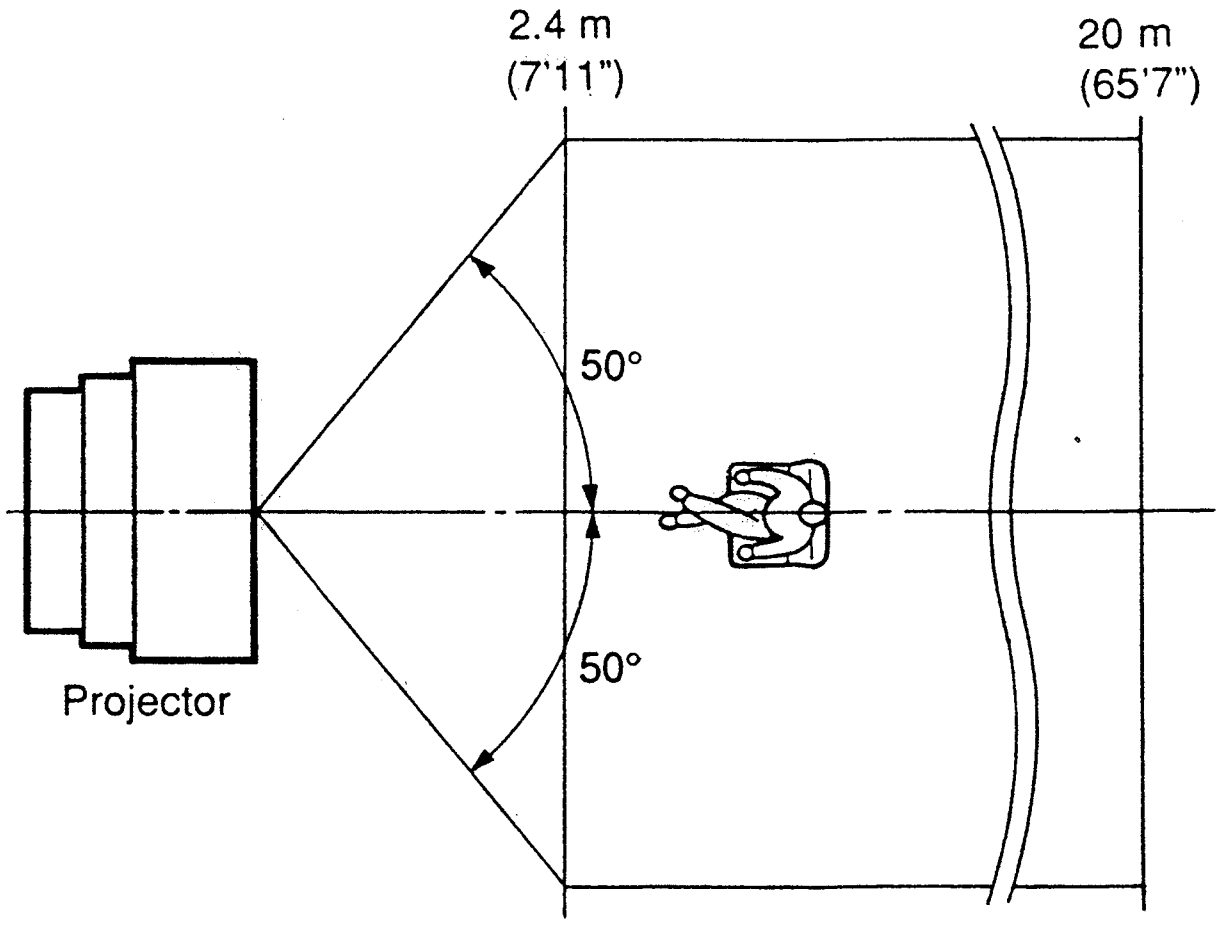
2.4 m
(7'11")
20 m
(65'7")
50°
50°
Projector

1-7. FOR SYSTEM-UP

An optional interface board can be inserted in INPUT B or the input unit of INPUT A can be shifted to INPUT B if desired.

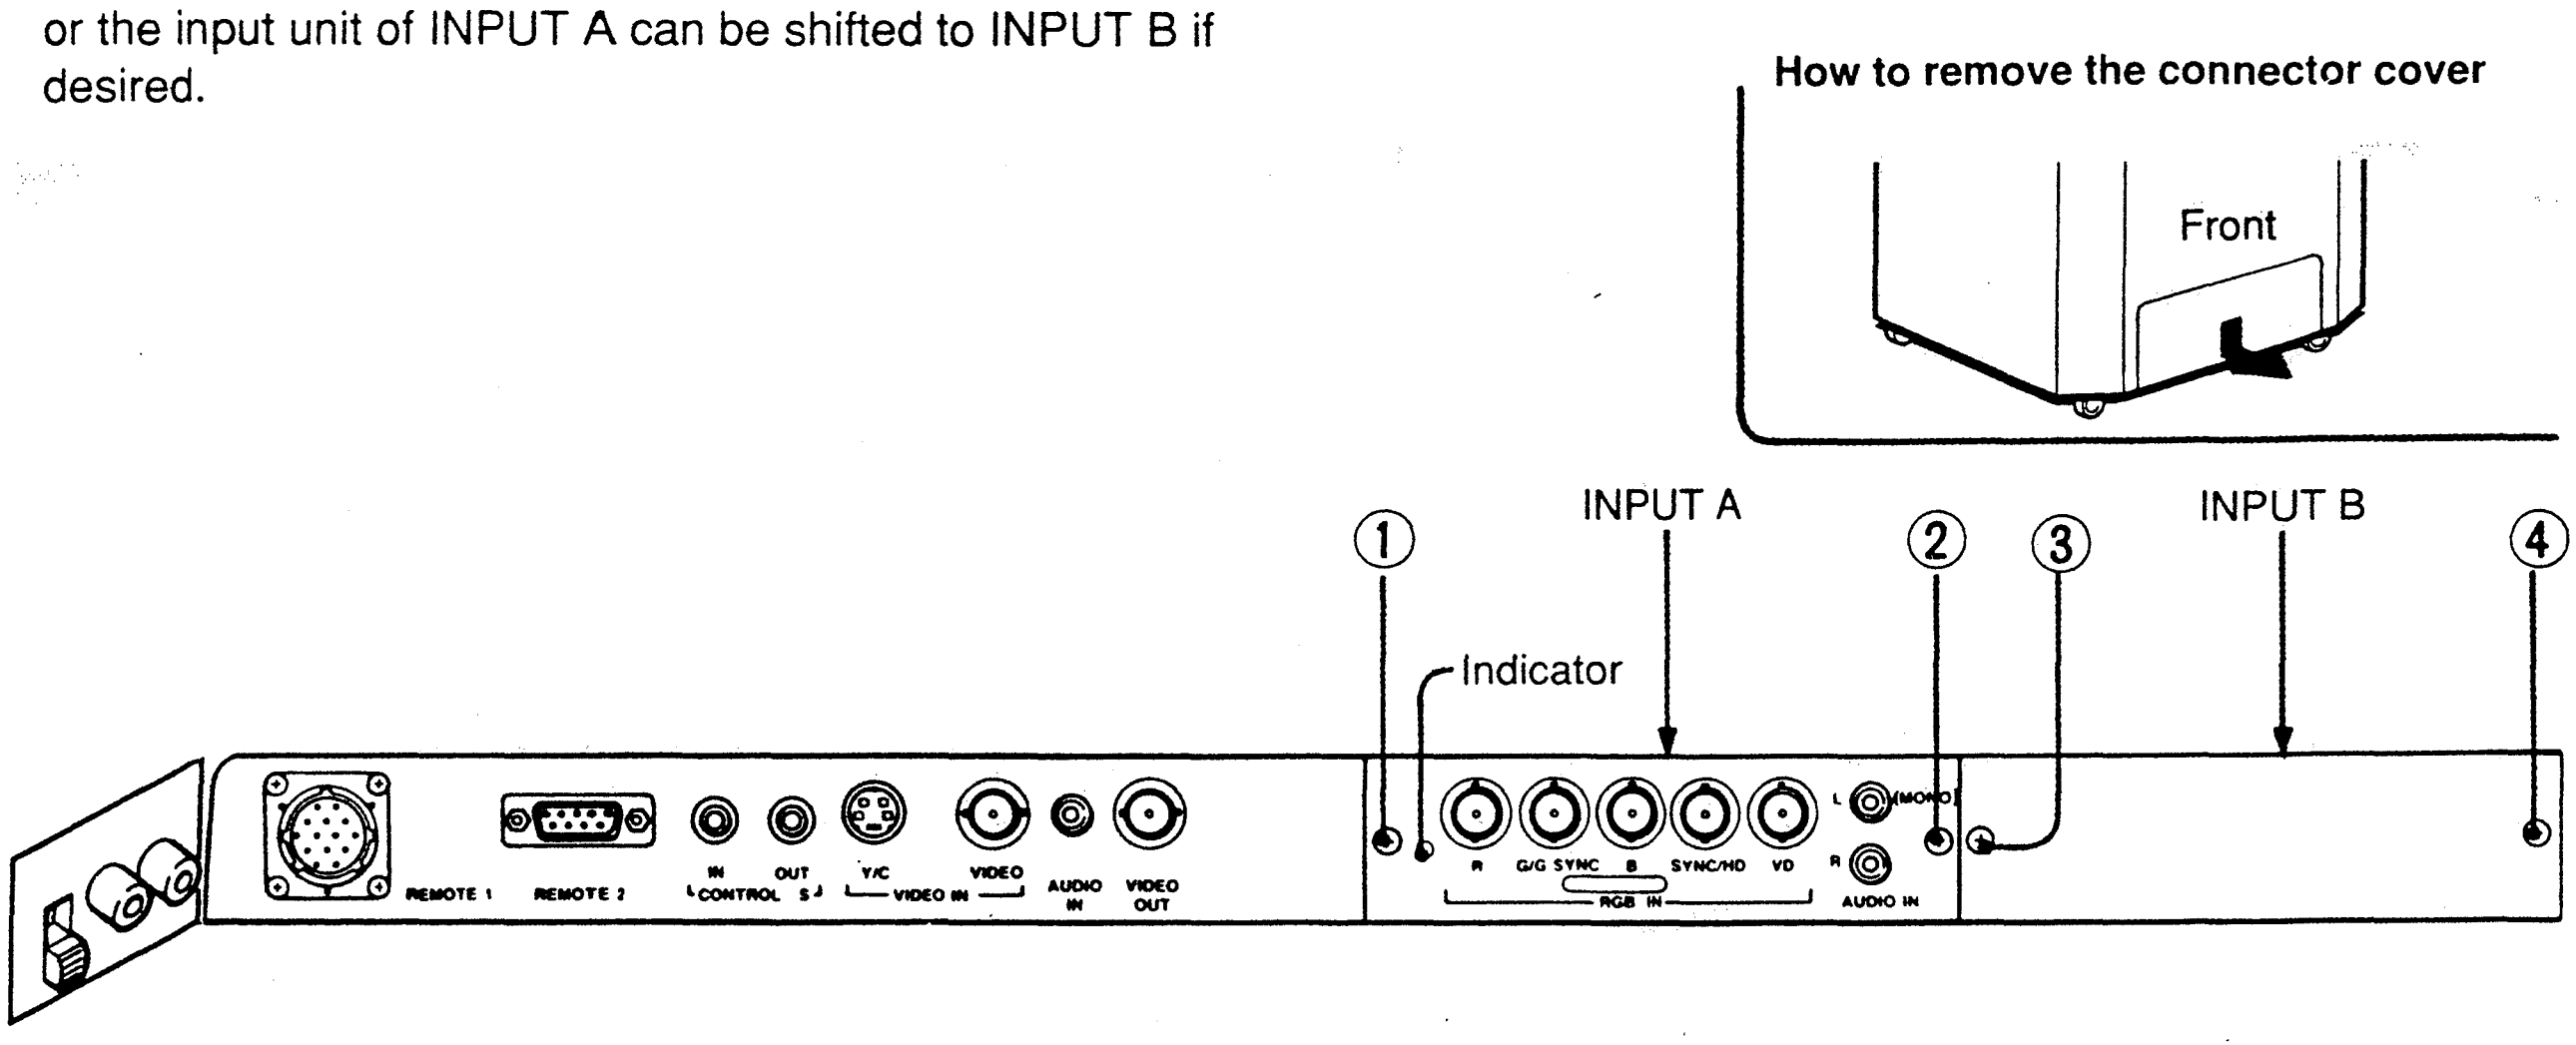
How to remove the connector cover
Front
INPUT A
INPUT B
①
②
③
④
Indicator
REMOTE 1
REMOTE 2
IN
OUT
CONTROL S
Y/C
VIDEO
VIDEO IN
AUDIO IN
VIDEO OUT
R
G/G SYNC
B
SYNC/HD
VD
RGB IN
L (MONO)
R
AUDIO IN

How to remove the interface board of INPUT A

Loosen screws ① and ② and pull out the interface board. Screws ① and ② cannot be removed from the board completely.

How to remove the cover of INPUT B

Remove screws ③ and ④ and pull out the cover.

Optional interface board

- IFB-10
- IFB-20
- IFB-30
- IFB-1000

How to select the input signal

To select the signal connected to INPUT A:
Press SELECT A key on the Commander.

To select the signal connected to INPUT B:
Press SELECT B key on the Commander.

The indicator of the selected connectors panel lights up.

Using the PC-1270/1270M switcher for connecting RGB input signal

When using the PC-1270/1270M switcher at a distance between 25 m and 50 m from the projector for connecting RGB input signal, the picture may be distorted.

In this case, **first turn the MAIN POWER off** and then perform the following:

Setting the internal switch

1 **Remove the speaker cover, then loosen the two screws of the front cover and remove it.**

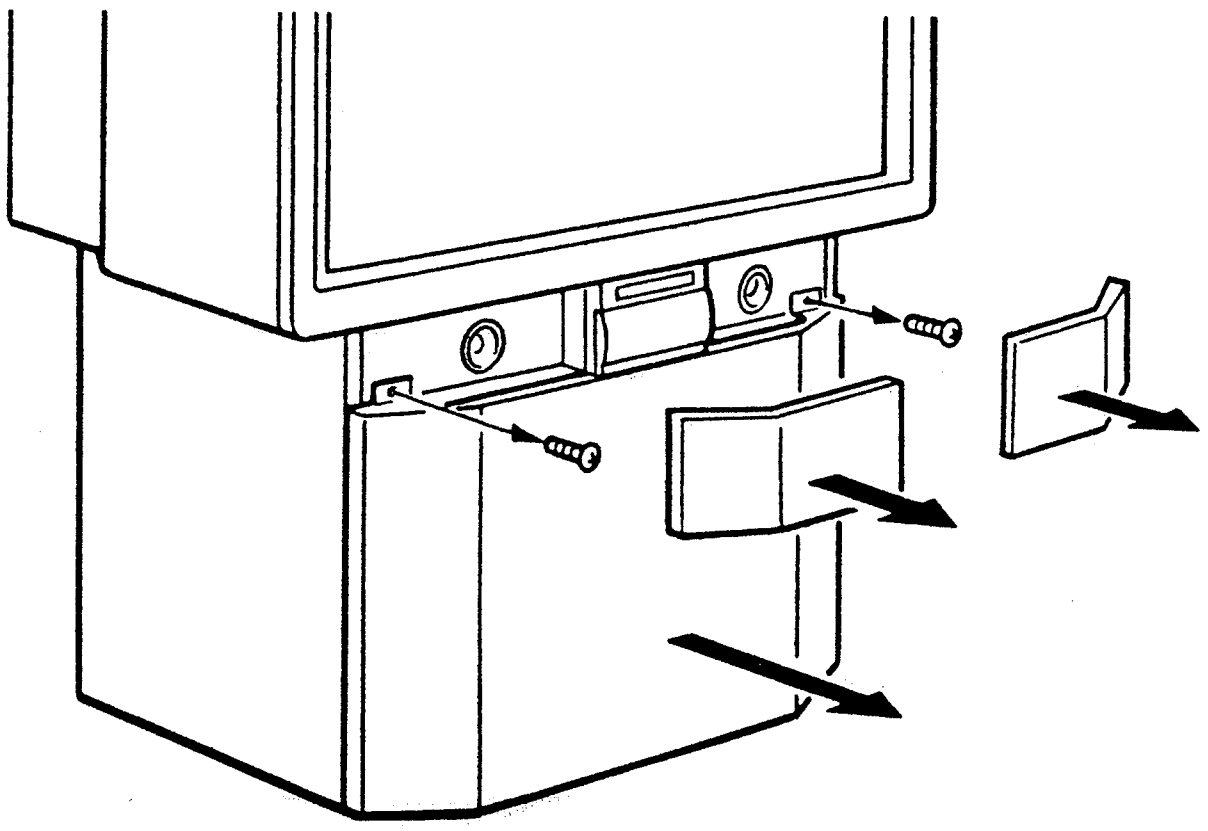

2 **Loosen the two screws of the connector panel frame and remove it.**

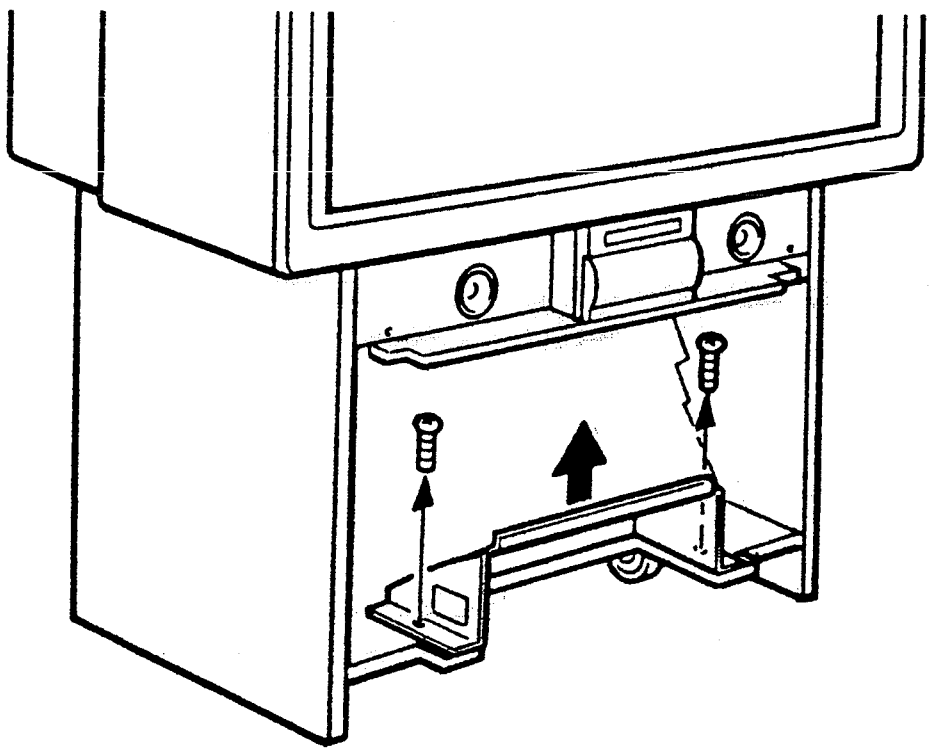

3 **Loosen the three screws on the upper part of the VIDEO connector panel and remove the cover.**

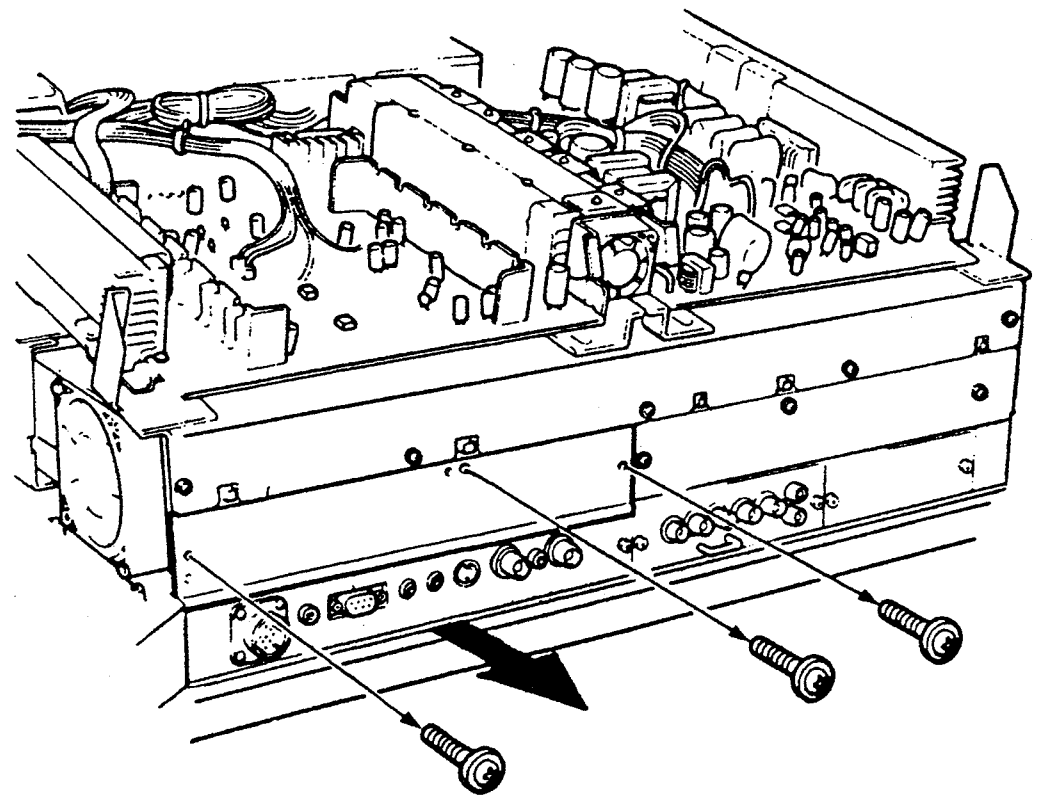

4 **Loosen the two screws on the left and right side of the VIDEO connector panel and pull the panel out.**

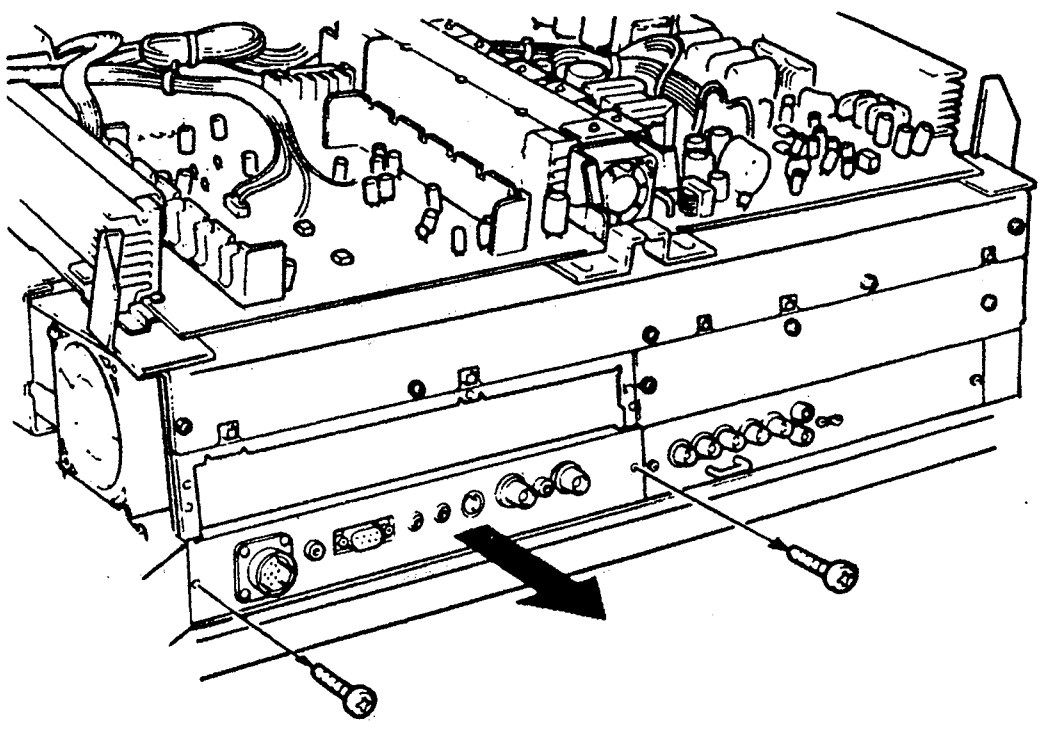

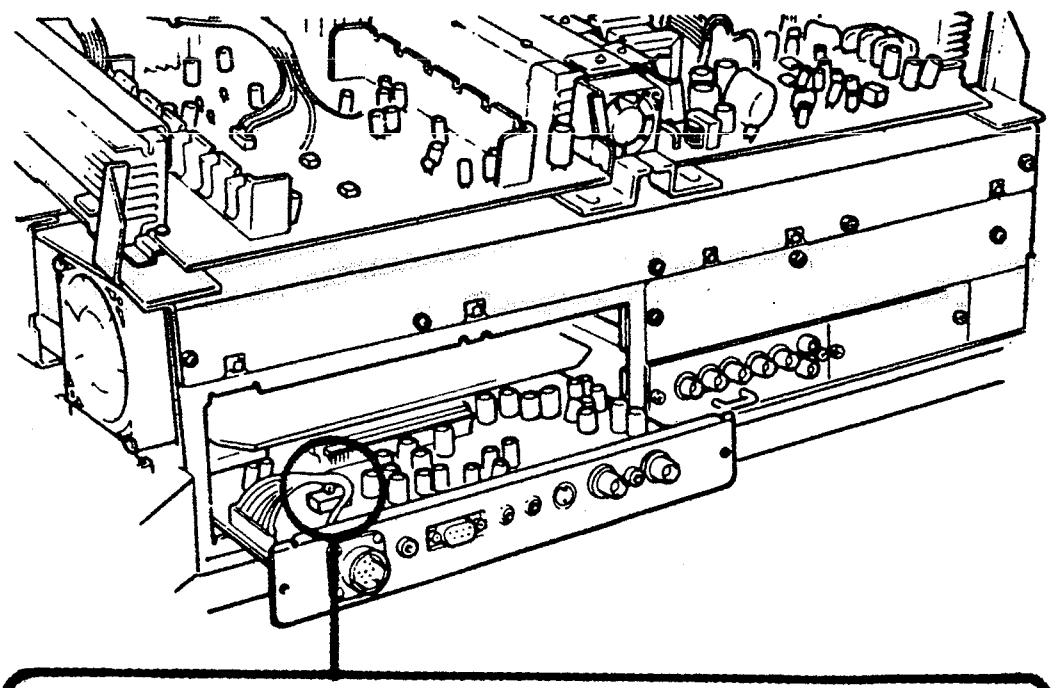

5 **Set the SW1 on the 5BNCSW to ON.**
The switch is on the BB board of the connector panel.

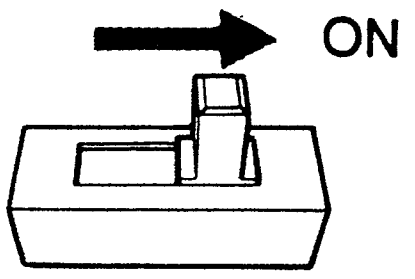

6 **Follow the steps in reverse order (4 to 1) to replace the parts.**

1-8. REMOTE CONTROL OPERATION

You can perform all the adjustments with the supplied Remote Commander RM-1270.
RM-1270 can be used both as a wireless Commander and as a wired Commander.

(RM-1270, packed separately)

When adjusting we recommend you to use it as a wired Commander so you can concentrate on the screen.

Preparation

1 **Insert three size R6 (AA) batteries with the polarity lined up correctly.**

2 **Connect the Commander with the set.**

3 **Press MAIN POWER switch at the rear and press POWER ON key on the Commander.**

4 **Remove the panel cover of the service engineer controls.**

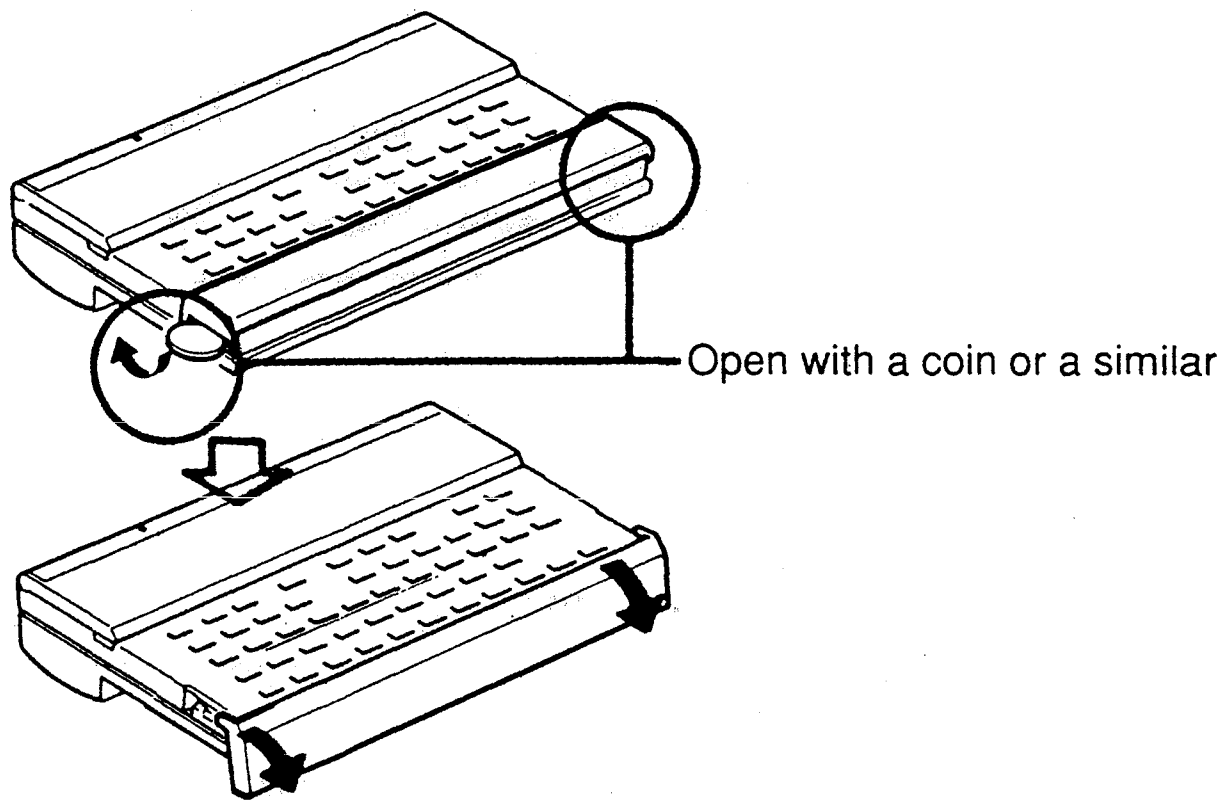

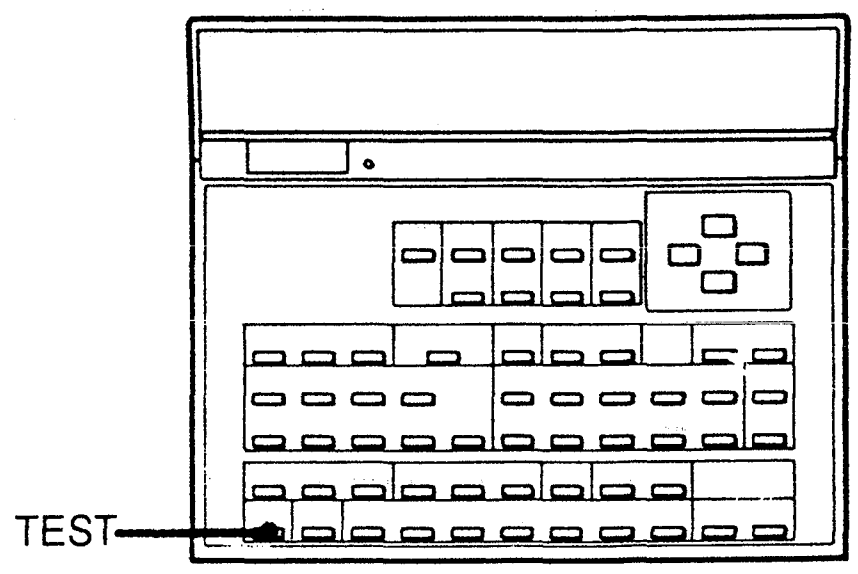

5 **Keep pressing TEST key for 5 seconds.**
The display will appear.

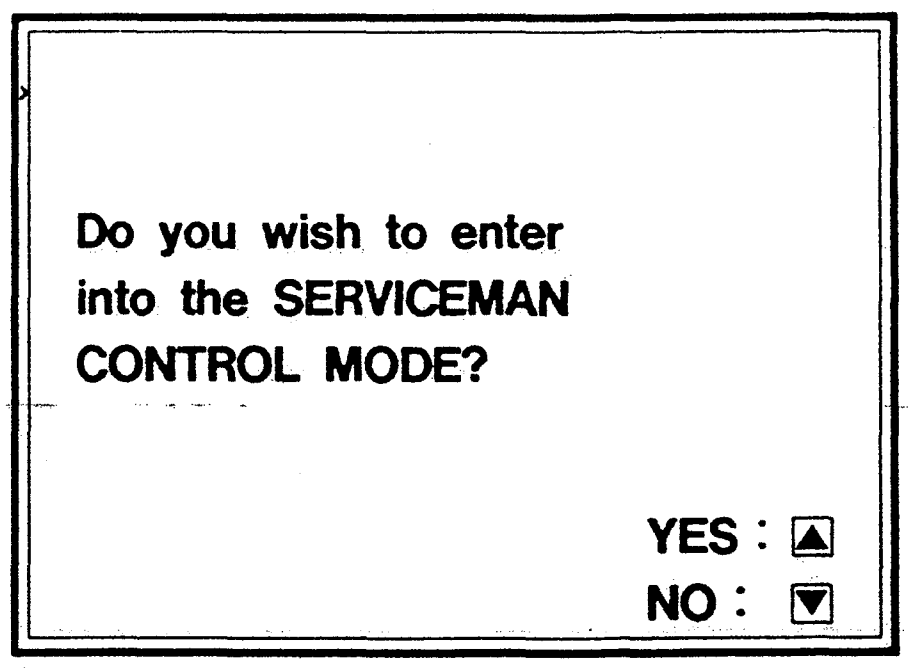

Do you wish to enter into the SERVICEMAN CONTROL MODE?

YES : ▲
NO : ▼

6 **Press ▲ key.**
The keys of the service engineer controls will function.

Keys on the Commander

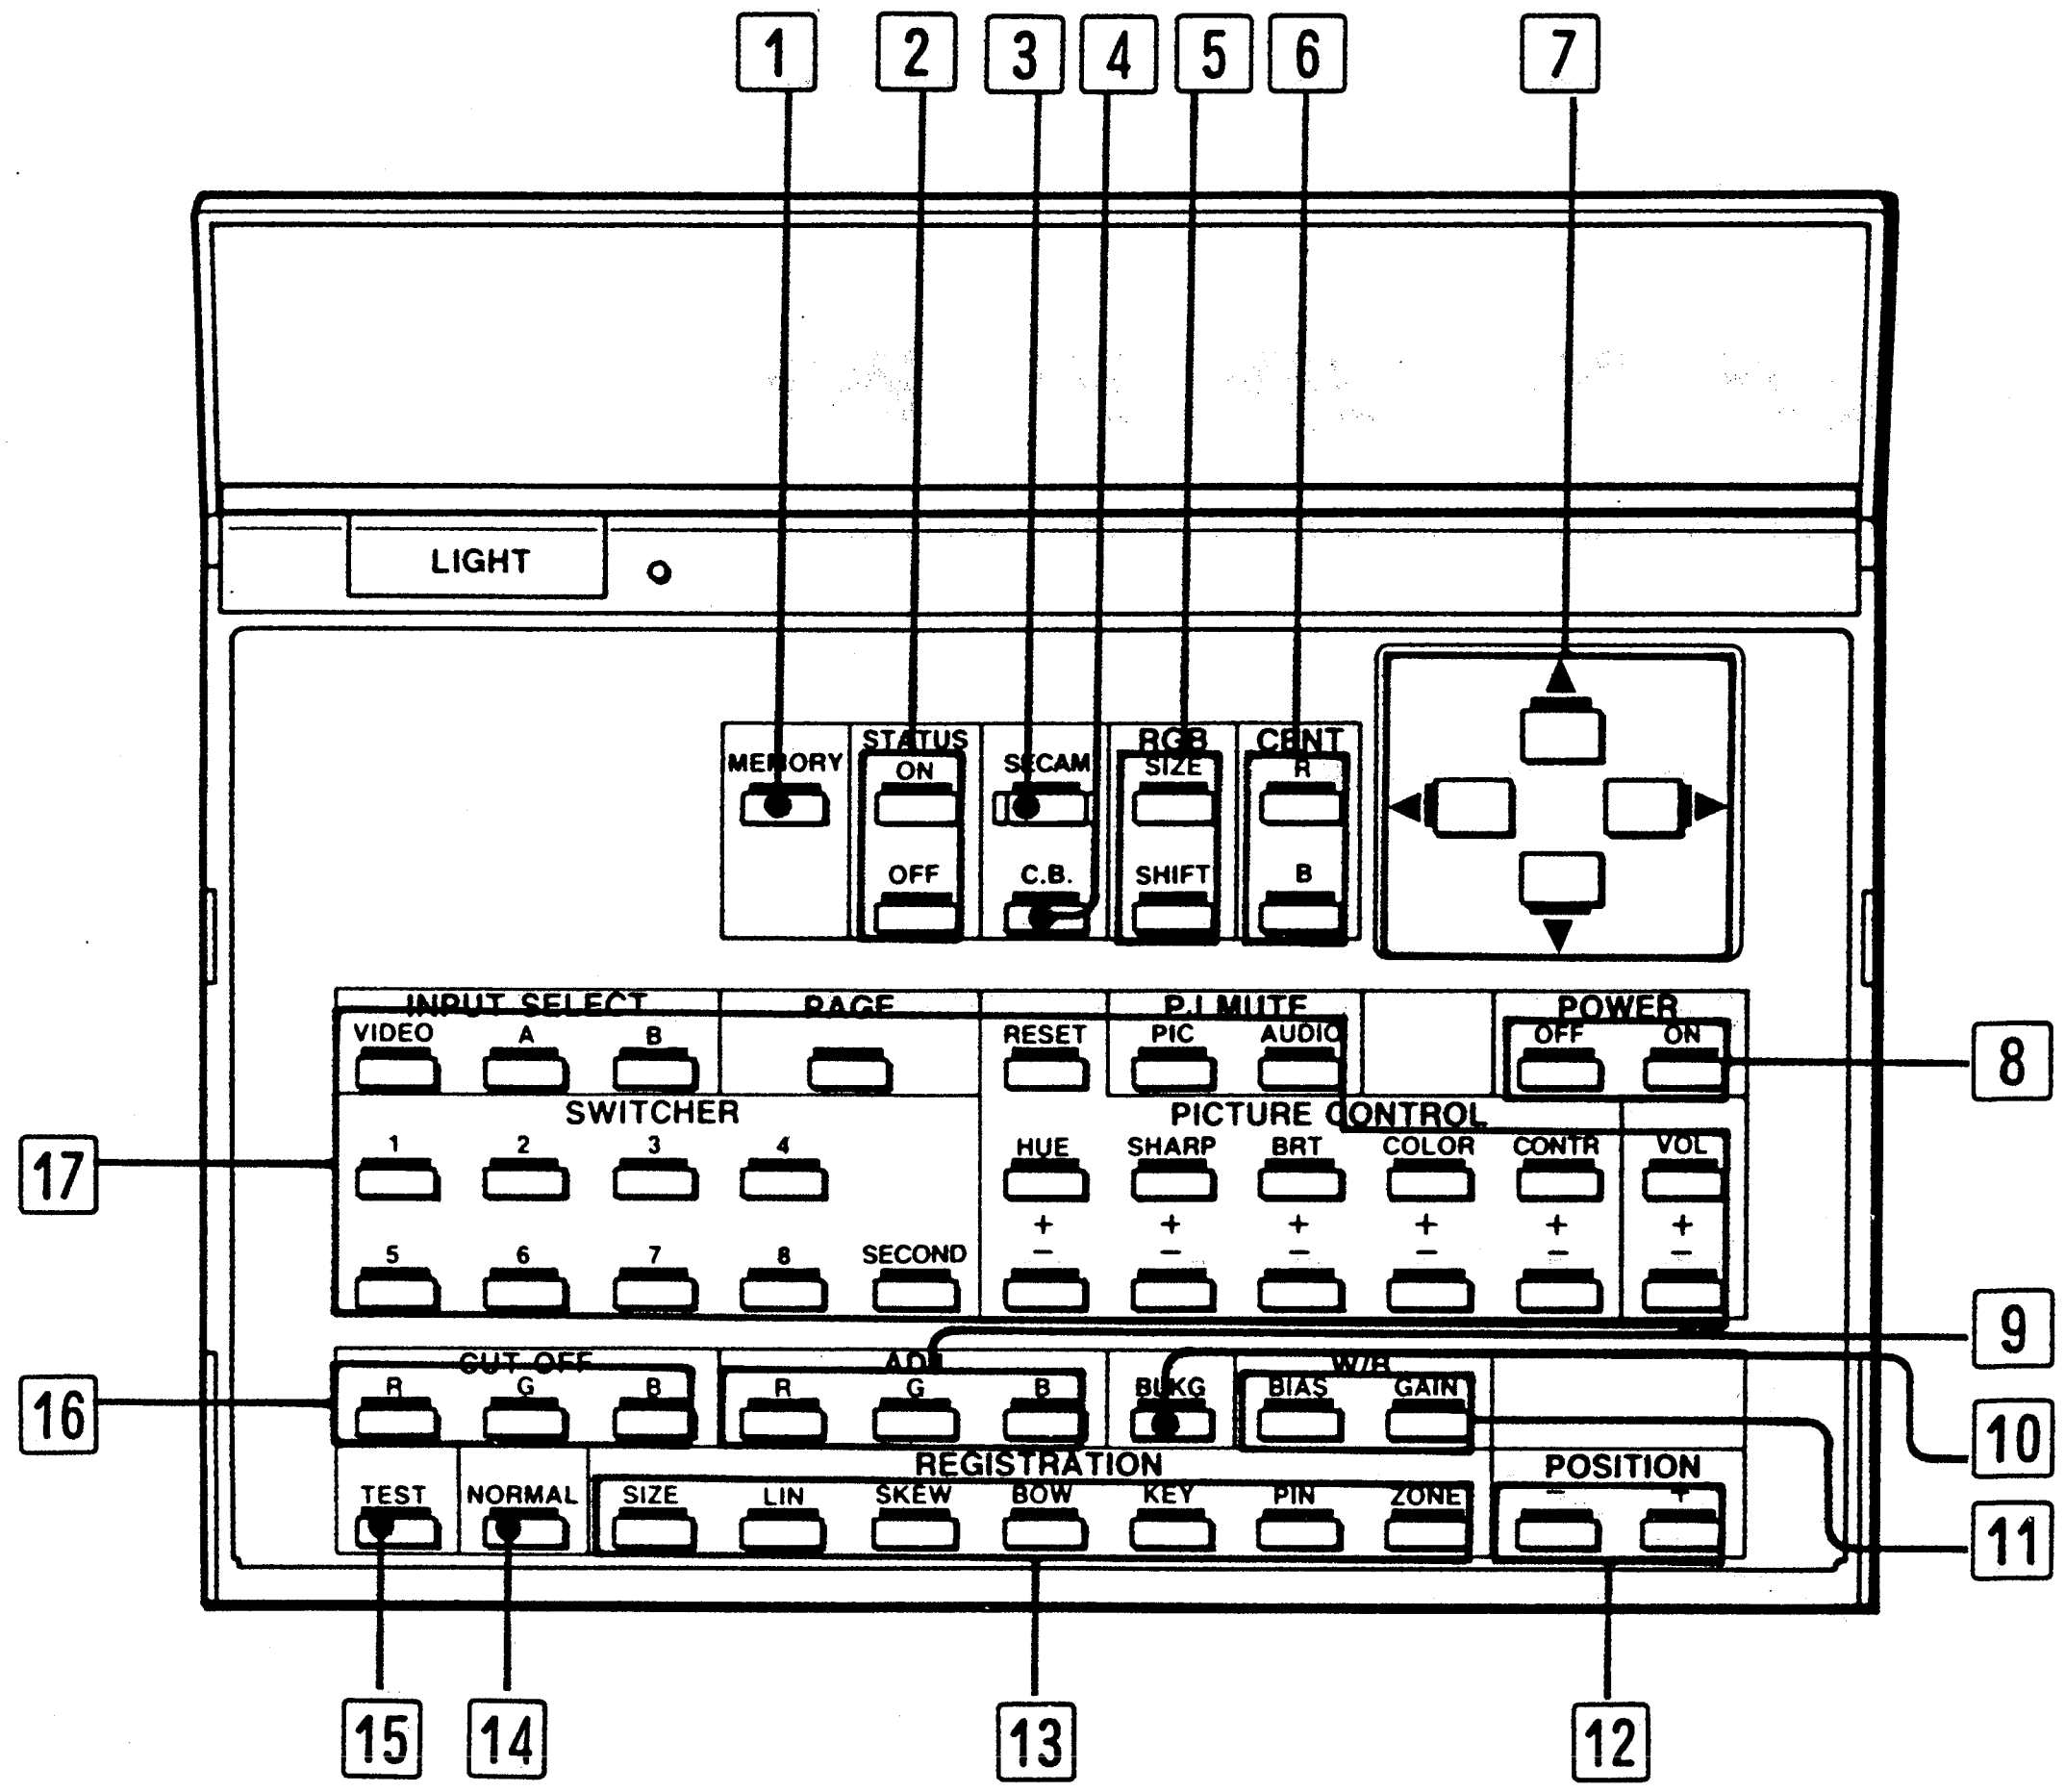
1
2
3
4
5
6
7
LIGHT
MEMORY
STATUS
ON
OFF
SECAM
C.B.
RGB
SIZE
SHIFT
CENT
R
B
INPUT SELECT
VIDEO
A
B
PAGE
RESET
P.I MUTE
PIC
AUDIO
POWER
OFF
ON
8
17
SWITCHER
1
2
3
4
5
6
7
8
SECOND
PICTURE CONTROL
HUE
SHARP
BRT
COLOR
CONTR
VOL
+
–
9
16
CUT OFF
R
G
B
ADJ
R
G
B
BLKG
W/B
BIAS
GAIN
10
REGISTRATION
POSITION
TEST
NORMAL
SIZE
LIN
SKEW
BOW
KEY
PIN
ZONE
–
+
11
15
14
13
12

1 MEMORY key
Press to lock various adjustment data into memory.

2 STATUS ON/OFF key
Press **OFF** to eliminate the "On-Screen display".
Note: The PAGE display appears even when the **OFF** is pressed.

3 SECAM key
When SECAM signal is input to the projector directly or through the switcher box and you cannot get normal color, press this key. Press again to switch over to the other standard system sources, NTSC or PAL.

4 C.B. (Clear blue) key
Press to make the blue color clear in RGB mode. Press again to restore the normal condition.

5 RGB SIZE/SHIFT key
Press to adjust the size and shift of the picture for the RGB signal.

SIZE: Press to enter the size adjustment mode. The size adjustment of the picture is performed using the four arrow keys.

▲ ....The key to expand the vertical size
▼ ....The key to reduce the vertical size
▶ ....The key to expand the horizontal size
◀ ....The key to reduce the horizontal size

SHIFT: Press to enter the shift adjustment mode. The shift adjustment of the picture is performed using the four arrow keys.
The picture shifts according to the direction of the arrow.

6 CENT R/B keys
Press to enter the centering adjustment mode of the red and blue.

CENT R: Press to enter the red centering adjustment mode.

CENT B: Press to enter the blue centering adjustment mode.

Centering adjustments are performed using the four arrow keys.

7 **Arrow keys**
The keys are used for various adjustment functions.

8 **POWER ON/OFF switch**
Press to turn on and off the projector.

9 **ADJ R/G/B (Adjust red/green/blue) keys**
Press to select color to be adjusted when adjusting the registration.
R .... Red signal
G .... Green signal (Servicing only. If you change the green signal setting, perform the "factory reset" on page 50.)
B .... Blue signal

10 **BLKG (blanking) key**
Press to enter the blanking adjustment mode. The blanking period can be adjusted using the four arrow keys.
For details, see "Other Adjustment".

11 **W/B (white balance) key**
Press to enter the white balance adjustment mode.
BIAS – For cut off adjustment
GAIN – For drive adjustment

12 **POSITION +/– keys**
Used for zone adjustment and the blanking adjustment.

13 **Registration keys**
SIZE/LIN/SKEW/BOW/KEY/PIN/ZONE
Press to select the desired item for registration adjustment. The registration adjustment is performed using the four arrow keys, ADJ keys and POSITION +/– keys. For details, see "Registration Adjustment."

14 **NORMAL key**
Press to cancel the test patterns or serviceman control mode.

15 **TEST key**
Press to display the internal test patterns.
Each press of this button displays 8 patterns sequentially. In registration and white balance adjustment mode, appropriate patterns will be displayed for each adjustment.

16 **CUT OFF keys**
Press to select the color to be turned off when adjusting the registration. Press again to turn on the color.
R .... Red signal
G .... Green signal
B .... Blue signal

17 **Keys for user control**

VOL +/– keys
Press to adjust volume.
+: to increase volume
–: to decrease volume

PICTURE CONTROL keys
Press to adjust picture condition: hue, sharpness, brightness, color, and contrast. Press RESET key to restore the standard levels.

SWITCH keys
When the PC-1270/1270M switcher is connected to the projector, press the number key to select the input from the switcher. SECOND key is used when there are two switchers. To control the second switcher (SINGLE/REMOTE 2/SECOND switch is set to SECOND), first press SECOND key and then the number key.

INPUT SELECT keys
Press to select the input signal.
VIDEO: to select the signal input from VIDEO IN (Y/C or VIDEO) connectors
A: to select the signal input from RGB IN connectors
B: to select the signal input from the connectors of "B" section (optional interface board)

Note
For the location of "A" and "B", see page 29.

PAGE key
Press to display and switch the following four on-screen displays. (On PAGE 1, 2, and 3, adjustment can also be done).
PAGE 1: Displays STATUS ON/OFF, PIC MUTE ON/OFF, AUDIO MUTE ON/OFF, CLEAR BLUE ON/OFF, and SECAM ON/OFF.
PAGE 2: Displays the picture conditions; contrast, color, brightness, sharpness, hue, and volume levels.
PAGE 3: Displays the color temperature level and clamp setting.
PAGE 4: Displays the input signal conditions; fH, fV, H/C-sync, V-sync, Sync on Green, and input signal.

PJ MUTE keys
PIC: Press to cut off the picture. To restore the picture, press PIC again or CONTR +.
AUDIO: Press to cut off the sound. To restore the previous sound level, press AUDIO again or VOL +.

FOCUS MG/LENS keys are not operable with this set.

1-9. ADJUSTMENT PROCEDURE

Perform each adjustment for each input signal with the Remote Commander.
Follow the steps.

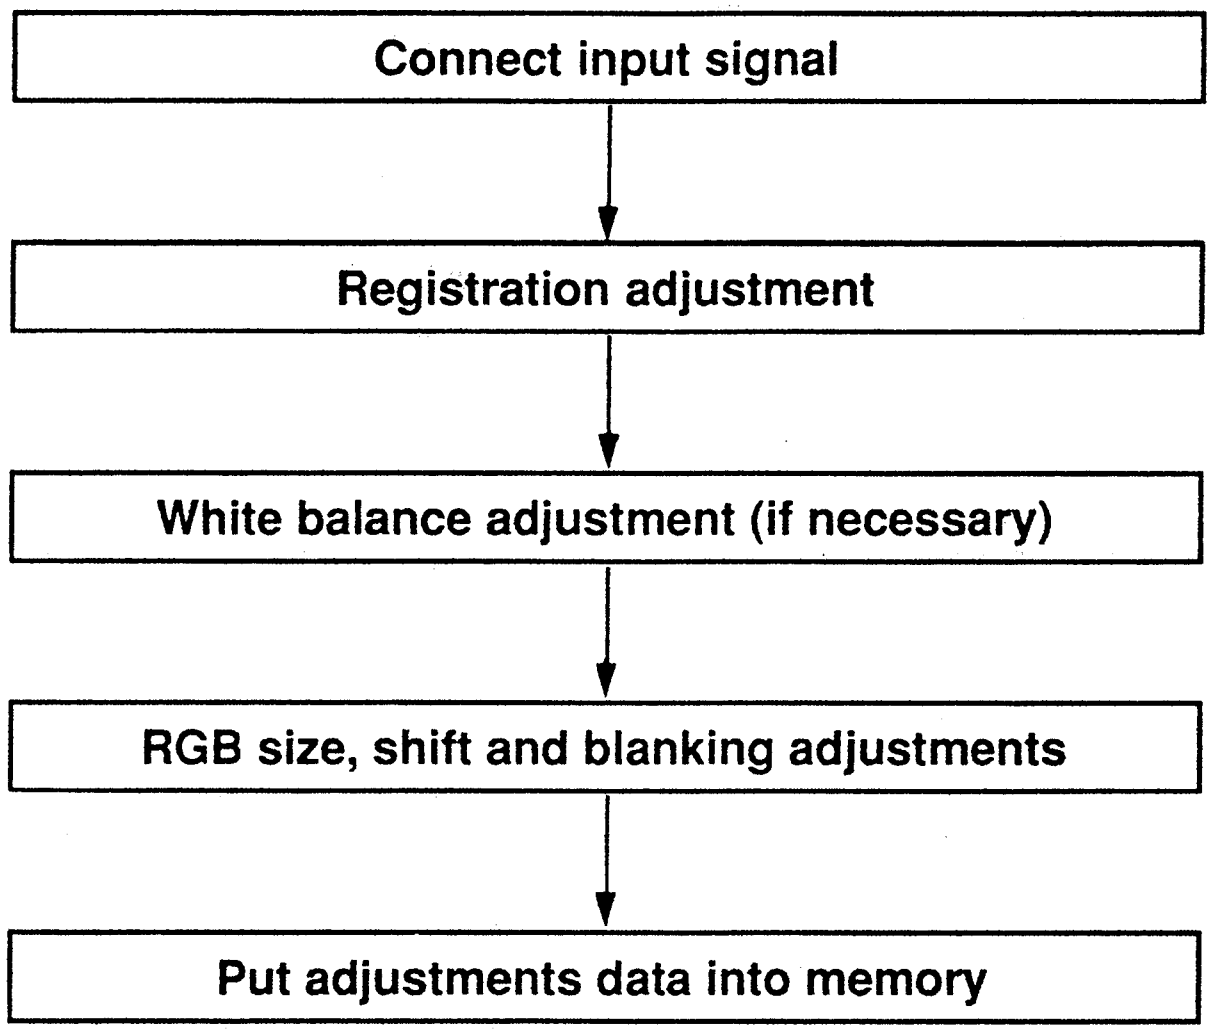

Connect input signal

Registration adjustment

White balance adjustment (if necessary)

RGB size, shift and blanking adjustments

Put adjustments data into memory

Messages on the Screen

Color of message

Four colors are used in the screen display.

Color	Meaning
Green	Function and condition
Cyan	Operation guide and messages
Yellow	Caution and error messages
White	Item being adjusted

Error message

When an error occurs, the following messages will be displayed.

Message	Meaning
Not applicable!	The control does not function with the current input.
PIC MUTE	PIC MUTE is set to ON. If you want to adjust the picture controls, press PJ MUTE key to cancel the PIC MUTE mode.
Overflow!	Adjustable range had reached its limit.
OFF	STATUS is set to OFF to clear the on-screen display.

1-10. TEST PATTERNS

In each adjustment mode, an appropriate test pattern will be displayed. In addition, other test patterns can be displayed by pressing TEST key.

All the Test Patterns

Cross hair

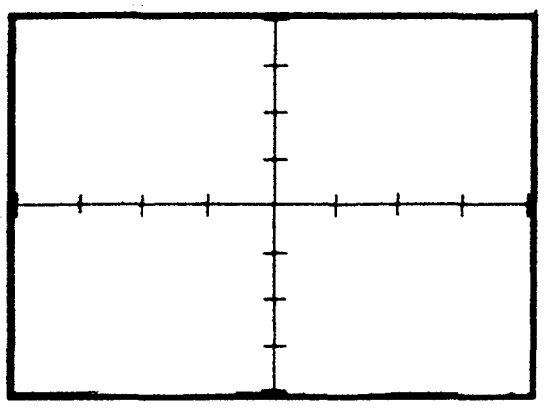

H

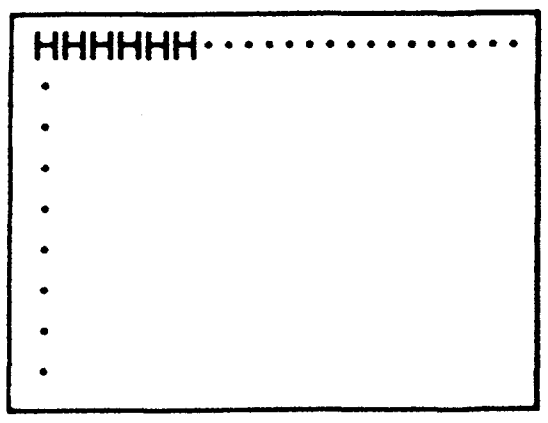

Hatch (9 × 9)

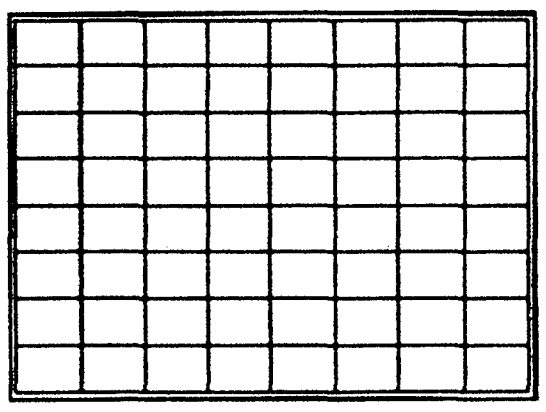

White

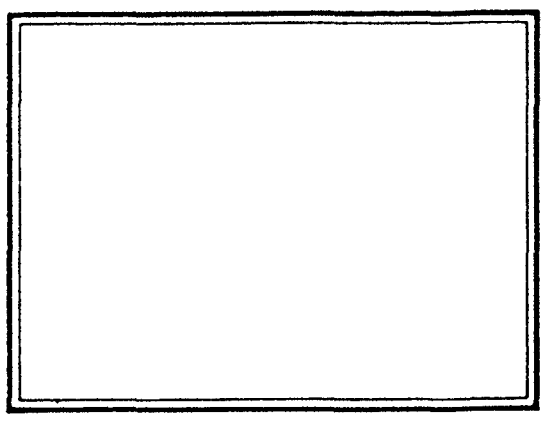

Hatch (reverse)

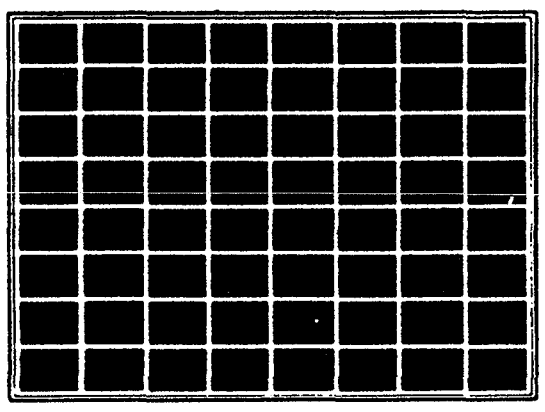

Window

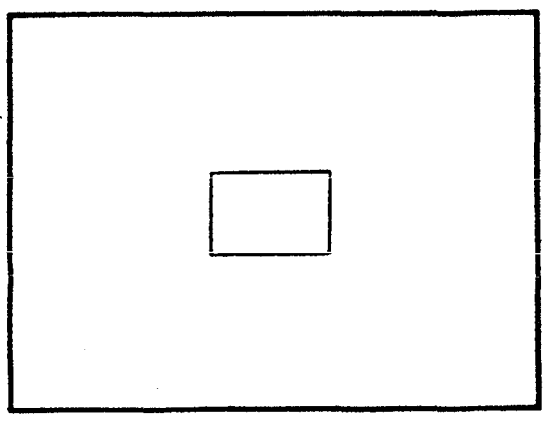

Dot

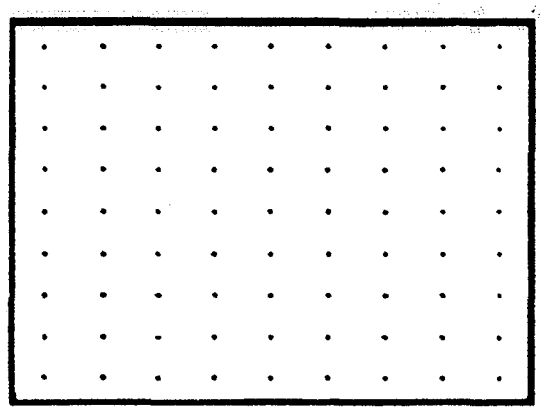

Pluge

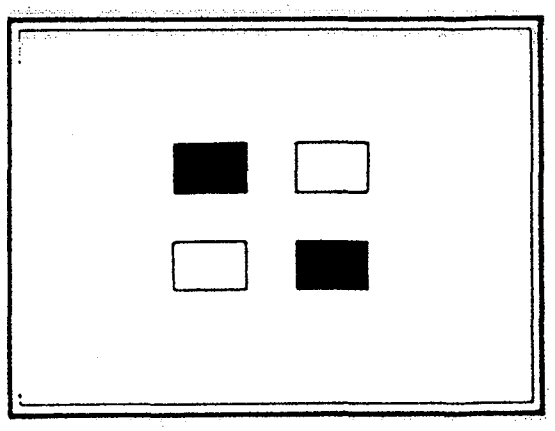

Illustrations of the screen

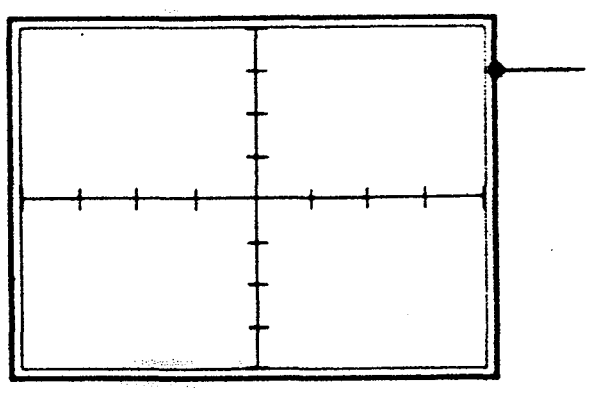

The outside bold line stands for the edge of the screen.

Test Patterns in Each Mode

Mode	With one press of TEST key, the test patterns change as follows.
Normal	Cross hair → Hatch (9 × 9) → Hatch reverse → Dot → H → White → Window → Pluge → Cross hair
Registration	
SIZE LIN SKEW BOW	Cross hair ◄─► Hatch (9 × 9) Select the desired one.
KEY PIN	Hatch (5 × 5) ◄─► Hatch (9 × 9) Select the desired one.
ZONE	Hatch (9 × 9) + Cursor
White balance	
BIAS	Pluge
GAIN	Window ◄─► White
BLKG	Hatch (9 × 9)
CENT RGB	Cross hair

1-11. REGISTRATION ADJUSTMENT

Display the test pattern on the screen and adjust the registration.
First perform red adjustment and then blue adjustment.

Procedure

Connect the Remote Commander to the set and turn the power on.

Disconnect any external signal, and display the cross hair pattern.

When the center of green signal is far from the screen center, align only the center of green signal to the screen center using ZONE key.

Red

Press ADJ R key to select red,
Press CUT OFF B key to cut off blue signal, and converge the red line to the green line.

CENT → SIZE ↔ LIN → SKEW ↔ BOW → KEY ↔ PIN → ZONE

↔: Go back and forth between two keys.

⬇

Blue

Press ADJ B key to select blue.
Press CUT OFF G (or R) key to cut off green (or red) signal, and converge the blue line to the red (or green) line.

CENT → SIZE ↔ LIN → SKEW ↔ BOW → KEY ↔ PIN → ZONE

↔: Go back and forth between two keys.

⬇

Save this data as the standard data.

⬇

Connect the external signal to be converged and select it on the Commander.

⬇

Red

Press ADJ R key to select red.
Press CUT OFF B key to cut off blue signal, and converge the red line to the green line.

CENT → SIZE ↔ LIN → SKEW ↔ BOW → KEY ↔ PIN → ZONE

↔: Go back and forth between two keys

⬇

Blue

Press ADJ B key to select blue.
Press CUT OFF G (or R) key to cut off green (or red) signal, and converge the blue line to the red (or green) line.

CENT → SIZE ↔ LIN → SKEW ↔ BOW → KEY ↔ PIN → ZONE

↔: Go back and forth between two keys.

⬇

Complete

Indications on the Commander	Adjustment items
CENT	centering
SIZE	size
LIN	linearity
SKEW	skew
BOW	bow
KEY	keystone
PIN	pincushion
ZONE	zone

Keys for Registration Adjustment

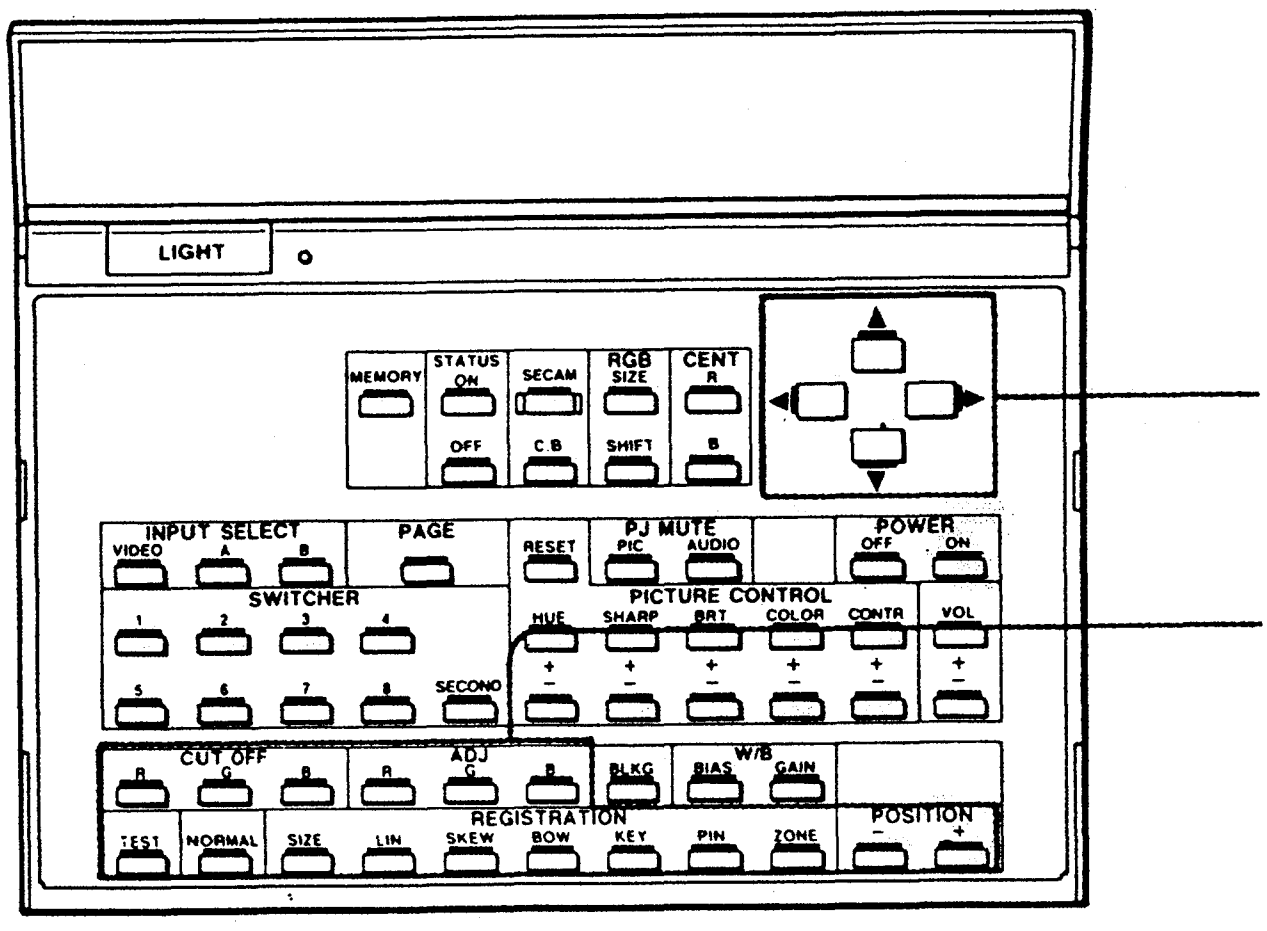
LIGHT
MEMORY
STATUS ON
OFF
SECAM
C B
RGB SIZE
SHIFT
CENT R
B
INPUT SELECT
VIDEO
A
B
PAGE
RESET
PJ MUTE
PIC
AUDIO
POWER
OFF
ON
SWITCHER
1
2
3
4
5
6
7
8
SECOND
PICTURE CONTROL
HUE
SHARP
BRT
COLOR
CONTR
VOL
CUT OFF
R
G
B
ADJ
R
G
B
BLKG
W/B
BIAS
GAIN
REGISTRATION
TEST
NORMAL
SIZE
LIN
SKEW
BOW
KEY
PIN
ZONE
POSITION
-
+

Arrow keys

CUT OFF R/G/B keys

ADJ R/G/B (Adjust red/green/blue) keys

TEST key

NORMAL key

REGISTRATION keys
(SIZE/LIN/SKEW/BOW/KEY/PIN/ZONE)

Centering Adjustment

Adjust so that the cross hair comes to the center of the screen.

Operation

1 **Press ZONE key, then ADJ R key to enter the red centering mode. To the enter blue centering mode, press ADJ B key.**

2 **Press CUT OFF B key to cut off blue signal.**
In the blue centering mode, press CENT G key to cut off green signal.

3 **Adjust red by moving the red lines with ◀, ▶, ▲ and ▼ keys until they converge with the green lines. To adjust blue, move blue lines until they converge with the red lines.**

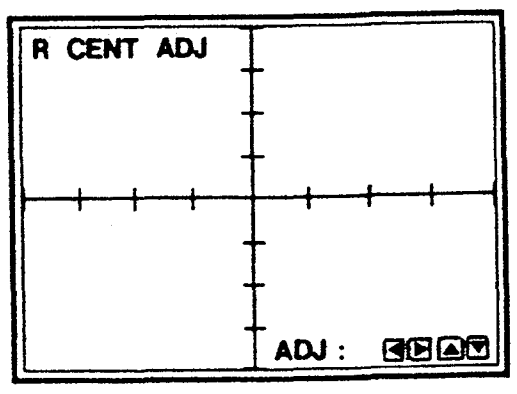
R CENT ADJ
ADJ : ◀▶▲▼

SIZE Adjustment

Adjust the size of the displayed picture with respect to the screen.

Pay attention to the upper, low, right and left sides of the screen.

1 **Press SIZE key to enter the size adjustment mode.**
If TEST key is pressed, the screen display will become 9 x 9 hatch pattern.

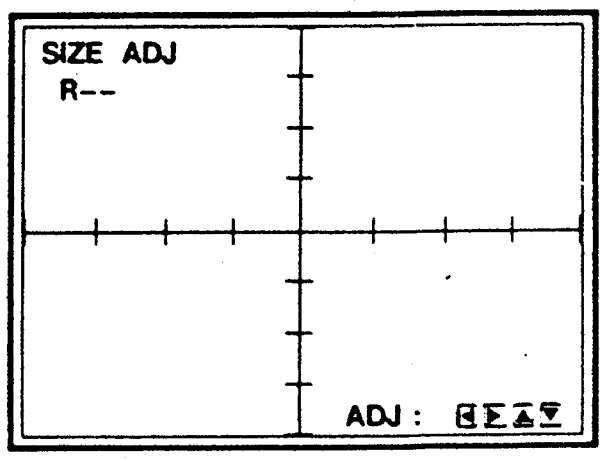

2 **Adjust with ◀, ▶, ▲ and ▼ keys.**

◀	**To reduce horizontal size**	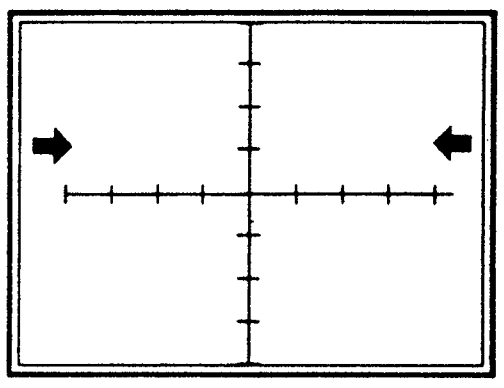
▶	**To expand horizontal size**	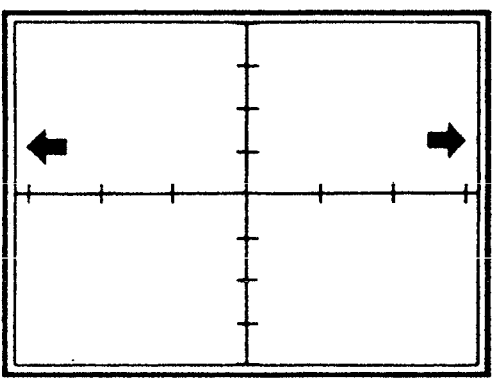
▲	**To expand vertical size**	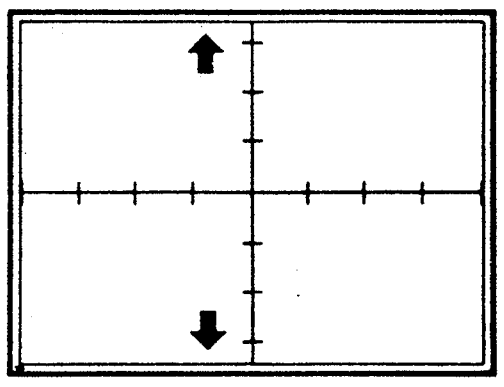
▼	**To reduce vertical size**	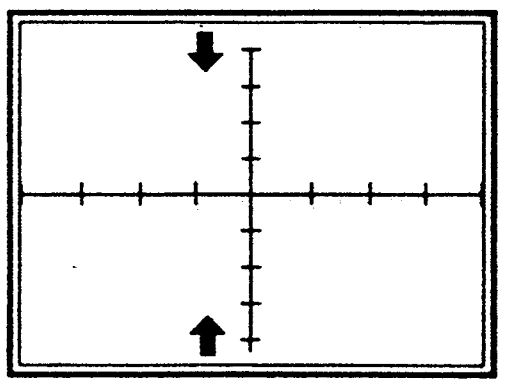

LIN (linearity) Adjustment

After preliminary vertical and horizontal size adjustment is completed, adjust the unbalanced size with this linearity adjustment. You may need to go back to the size adjustment again.

1 **Press LIN key to enter the linearity adjustment mode.**
If TEST key is pressed, the screen display will become 9 × 9 hatch pattern.

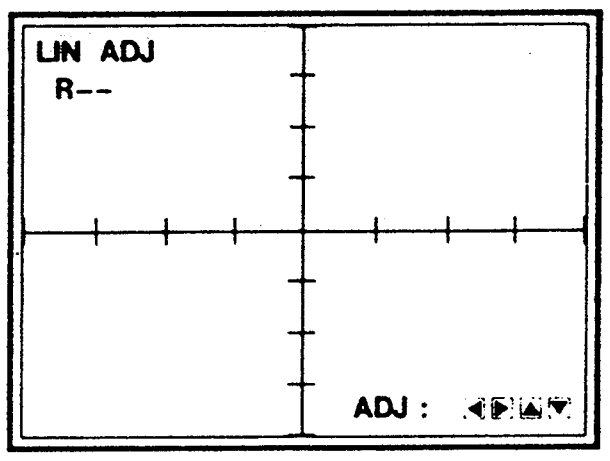

2 **Adjust with ◀, ▶, ▲ and ▼ keys.**

◀	The right and left vertical lines are shifted to the left while the vertical center line of the displayed picture remains unchanged.	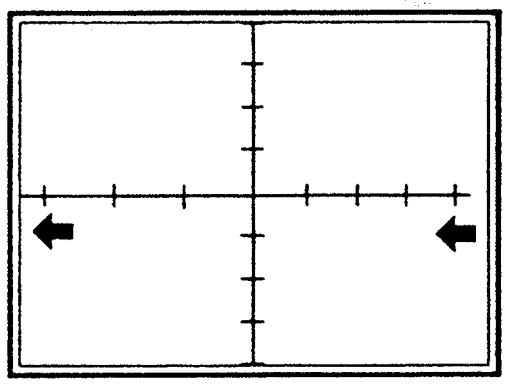
▶	The right and left vertical lines are shifted to the right while the vertical center line of the displayed picture remains unchanged.	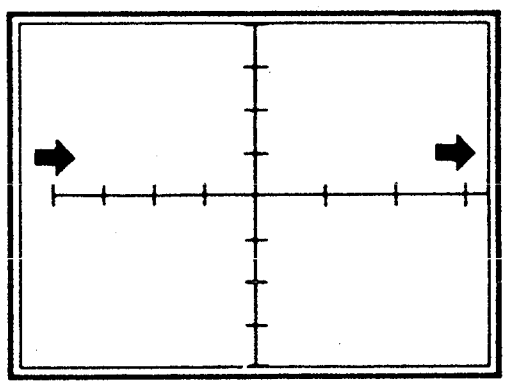
▲	The top and bottom horizontal lines are shifted upward while the horizontal center line of the displayed picture remains unchanged.	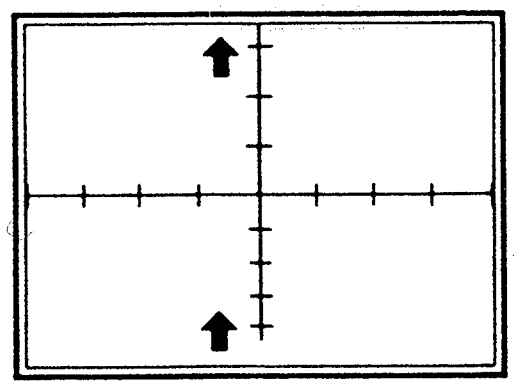
▼	The top and bottom horizontal lines are shifted downward while the horizontal center line of the displayed picture remains unchanged.	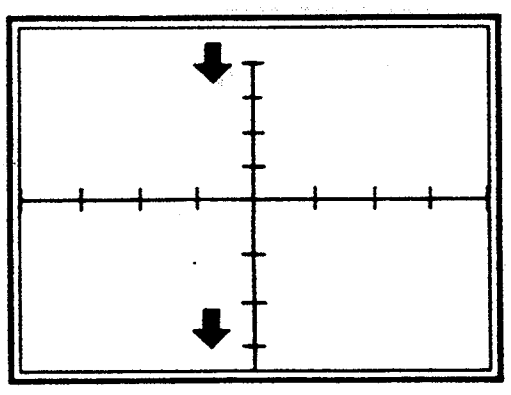

SKEW Adjustment

Adjust the horizontal and vertical center lines.

1 **Press SKEW key to enter the skew adjustment mode.**
If TEST key is pressed, the screen display will become 9 x 9 hatch pattern.

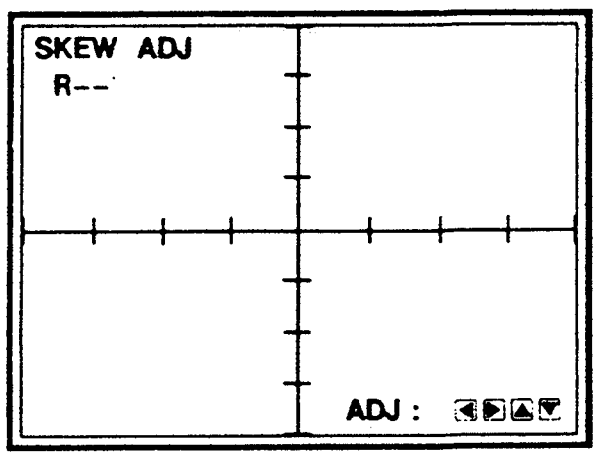

2 **Adjust with ◀, ▶, ▲ and ▼ keys.**

◀	The cross center vertical line leans leftward. 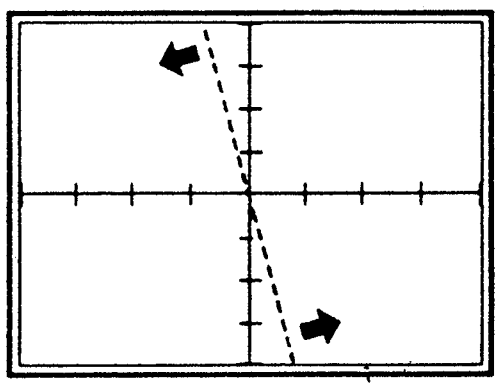
▶	The cross center vertical line leans rightward. 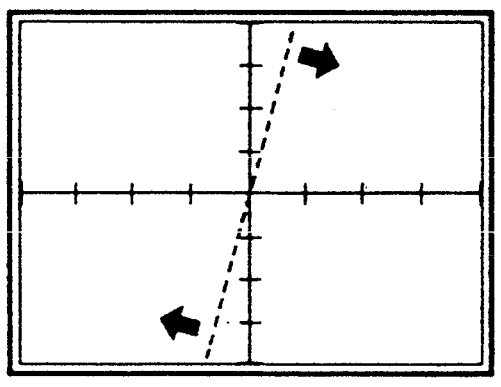
▲	The cross center horizontal line leans toward upper right. 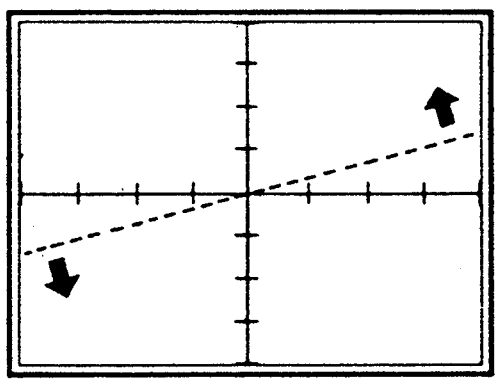
▼	The cross center horizontal line leans toward lower right. 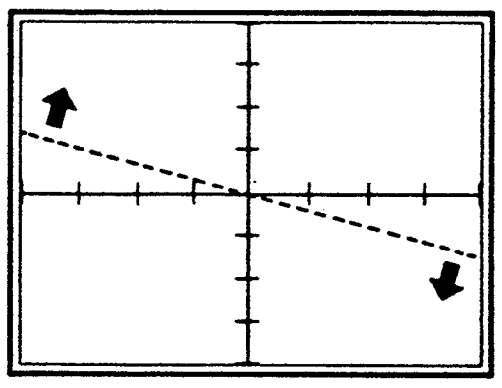

BOW Adjustment

Adjust the bow-like distortion of the center cross.

1 **Press BOW key to enter the bow adjustment mode.**
If TEST key is pressed, the screen display will become 9 × 9 hatch pattern.

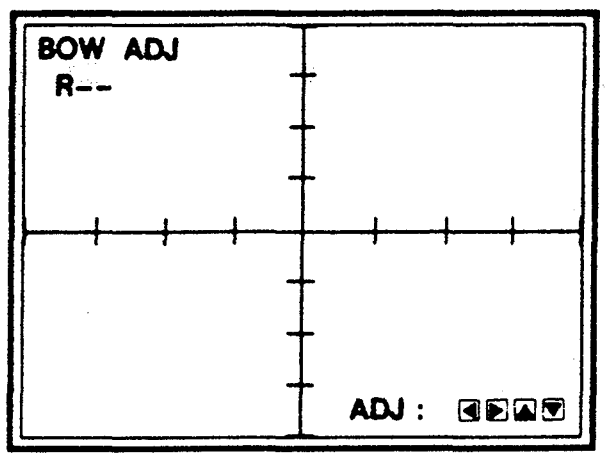

2 **Adjust with ◀, ▶, ▲ and ▼ keys.**

◀	The vertical lines are curved leftward. 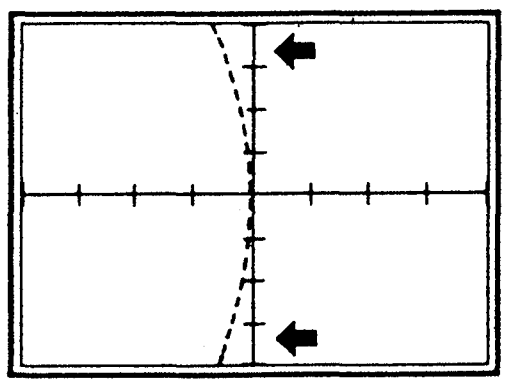
▶	The vertical lines are curved rightward. 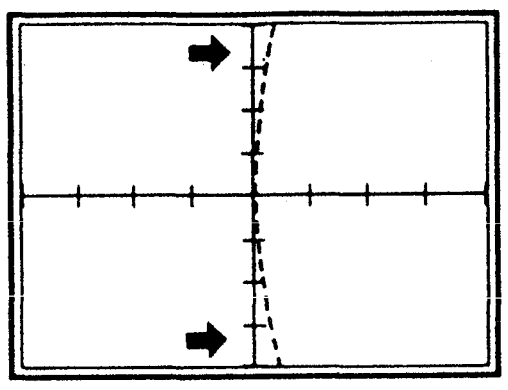
▲	The horizontal lines are curved upward. 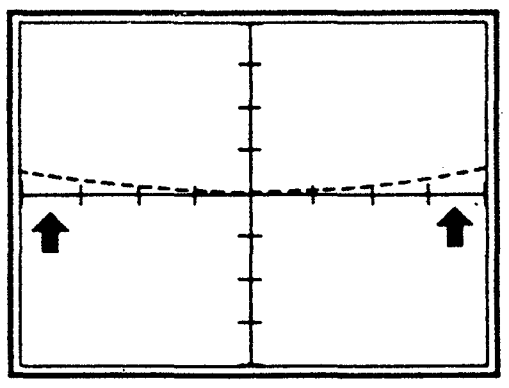
▼	The horizontal lines are curved downward. 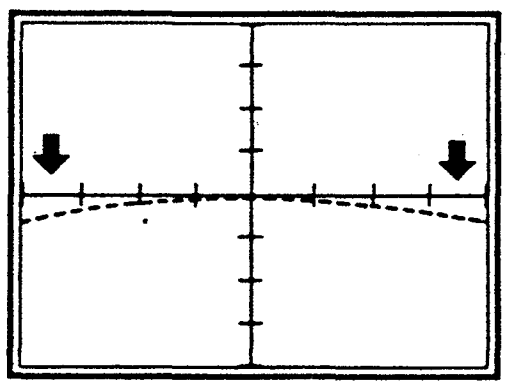

KEY (KEYSTONE) Adjustment

Adjust the trapezoidal distortion in the vertical and horizontal directions.

1 **Press KEY key to enter the keystone adjustment mode.**
If TEST key is pressed, the screen display will become 9 × 9 hatch pattern.

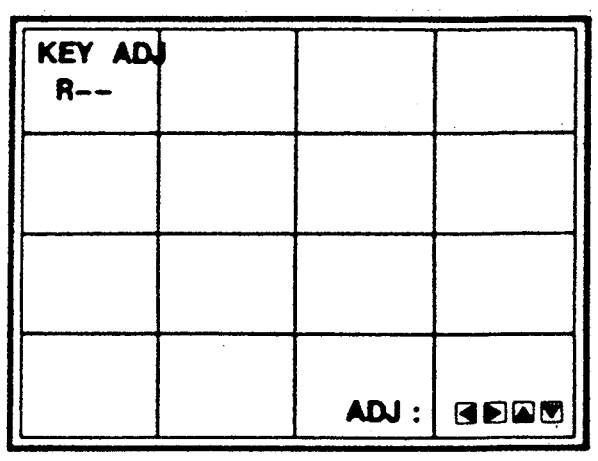

2 **Adjust with ◀, ▶, ▲ and ▼ keys.**

◀	The vertical lines of bottom side expand. 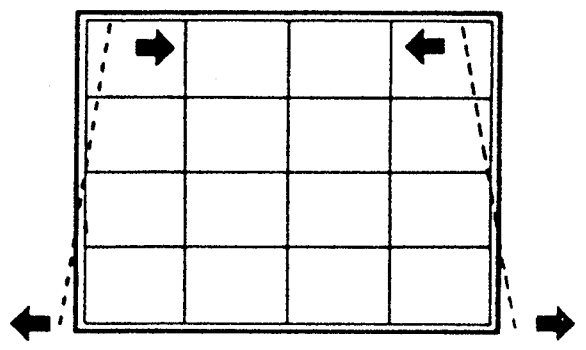
▶	The vertical lines of top side expand. 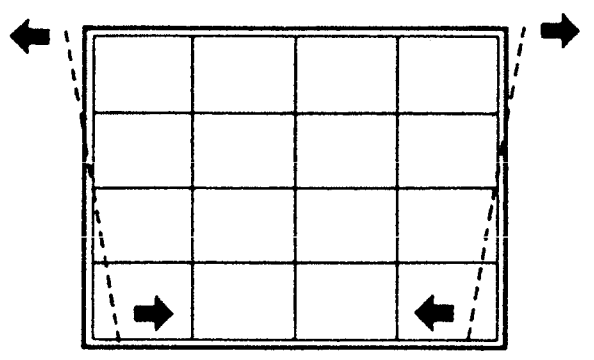
▲	The horizontal lines of right side expand. 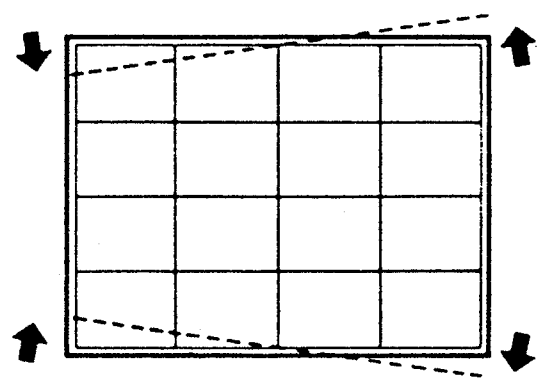
▼	The horizontal lines of left side expand. 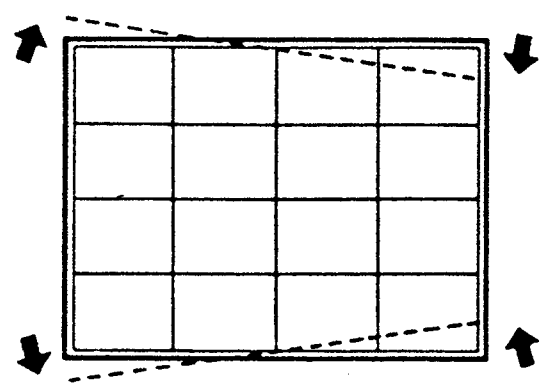

1-12. WHITE BALANCE ADJUSTMENT

The color temperature is factory preset at 9300K, 6500K, and 3200K, and will be selected automatically according to the input signal.

Normally, adjusting the white balance is unnecessary. However, if you wish to set the color temperature at your own level, you need to adjust the white balance. To perform the white balance adjustment, first, display PAGE 3 by pressing the PAGE key, and select "PRESET" by pressing the arrow keys.

Then follow the steps to perform the adjustment. After the adjustment is done, store the data. The color temperature you have adjusted (PRESET level on PAGE 3) is restored only on the signal it was adjusted.

To adjust white balance, both BIAS adjustment and GAIN adjustment must be performed repeatedly.

Normally adjustment is performed with the test patterns displayed, but if desired, you can show an input signal display by pressing TEST key for about 5 seconds.

1 BIAS Adjustment

1 **Press W/B BIAS key to enter the BIAS adjustment mode.**
The pluge pattern will appear.

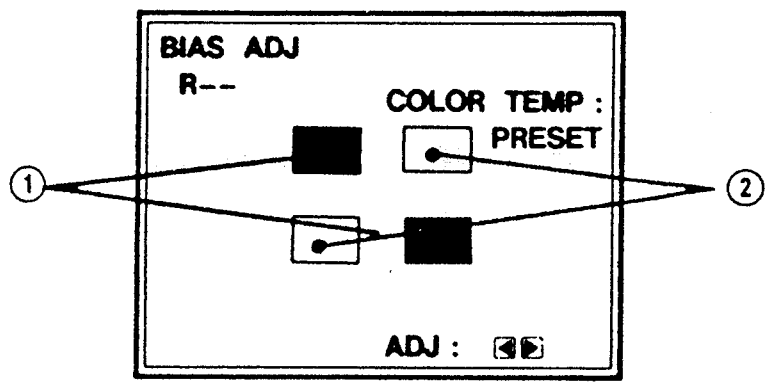

2 **Press ADJ R , G and B key to select the color to be adjusted.**

3 **Adjust with ◀ and ▶ keys.**

▶ ...... More brightness
◀ ...... Less brightness

Make part ① as dark as possible, so that finally the black of the background and part ① look the same. The part ② should be slightly lighter than background.

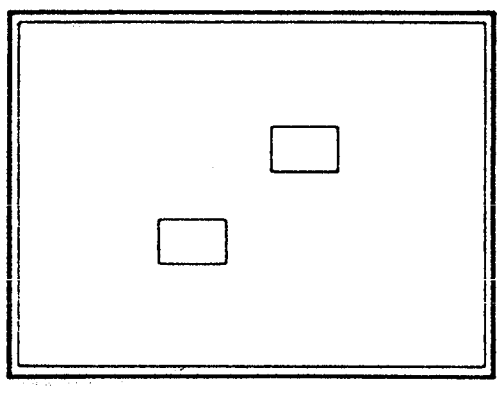

2 GAIN Adjustment

1 **Press W/B GAIN key to enter the GAIN adjustment mode.**
The window pattern will appear.

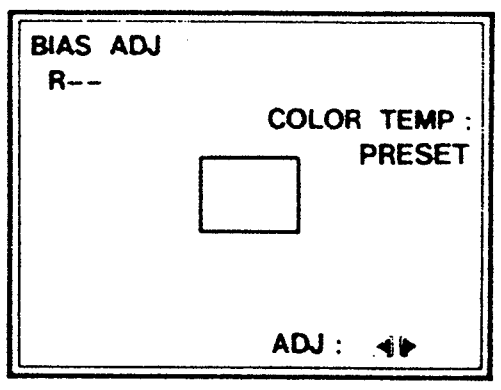

2 **Press ADJ R or B key to select the color to be adjusted.**
There is no need to adjust the green signal.

3 **Adjust with ◀ and ▶ keys so that the screen is 100% white.**
▶ ...... More brightness
◀ ...... Less brightness

4 **Press MEMORY key.**
The adjustment data will be saved.

RVP-6000QMB/QMT

RM-1270

4169

SONY

SERVICE MANUAL

AEP Model

Chassis No. SCC-D82B-A

SUPPLEMENT-1

INTRODUCTION

• BA board	:The VT board (pulse generator circuit) was deleted. The VT circuit (IC1,2) is now located in BA board. The peripheral circuit is also added at the same time.
• BB board	:The MT board (pulse generator circuit) was deleted. The R. G. B AMP circuit (IC415,416,417) is changed (from transistor circuit to IC circuit).
• Y board	:PLL circuit (IC20,21) and peripheral circuit of IC12 and IC13 are also changed.

Note)

Before using the circuit board, confirm that the parts number shown below and the parts number of the circuit board which is being used in your set are the same.

Board (Complete No.)	Board Part. No.
BA (A-1135-585-A)	1-629-822-14
BB (A-1135-647-A)	1-629-823-14
Y (A-1394-213-A)	1-629-824-15

MICROFILM

TABLE OF CONTENTS

Section *Title* *Page*

7. DIAGRAMS

7-5. Schematic Diagrams and Printed Wiring Boards 3
BA Board 4
BB Board 14
Y Board 24

9. ELECTRICAL PARTS LIST 33

WARNING!!

NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

SECTION 7
DIAGRAMS

7-5. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in μF unless otherwise noted. pF : μμF 50WV or less are not indicated except for electrolytics.
- All electrolytics are in 50V unless otherwise specified.
- All resistors are in ohms, 1/4W in resistance; 1/10W in chip resistance.
  kΩ =1000 Ω , MΩ =1000k Ω
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- ▭ : panel designation and adjustment for repair.
- All variable and adjustable resistors have charactristic curve B, unless otherwise noted.

- Voltage value is the reference value between it & the earth, when NTSC 3.58 color bar signal is received from color bar generator (digital multi- meter used : 10M ohms/V DC).
- ☆ : Displays a list of BB, BA board modes.
  (PAL, SECAM, NTSC 3.58, NTSC 4.43)
  Displays a list of existing voltages, when board E has issued a white pattern of internal signals.
- Unit of voltage values is V (volt).
- For other modes, see the respective circuit diagrams.
- ✕ : Measurement disabled
- : B+ line
- : B− line
  (Actual measured value may be different).
- Round numerals indicate Waveform Table No.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Reference information

RESISTOR	:	RN	METAL FILM
	:	RC	SOLID
	:	FPRD	NONFLAMMABLE CARBON
	:	FUSE	NONFLAMMABLE FUSIBLE
	:	RS	NONFLAMMABLE METAL OXIDE
	:	RB	NONFLAMMABLE CEMENT
	:	RW	NONFLAMMABLE WIREWOUND
	:	※	ADJUSTMENT RESISTOR
COIL	:	LF-8L	MICRO INDUCTOR
CAPACITOR	:	TA	TANTALUM
	:	PS	STYROL
	:	PP	POLYPROPYLENE
	:	PT	MYLAR
	:	MPS	METALIZED POLYESTER
	:	MPP	METALIZED POLYPROPYLENE
	:	ALB	BIPOLAR
	:	ALT	HIGH TEMPERATURE
	:	ALR	HIGH RIPPLE

BA BOARD WAVEFORMS

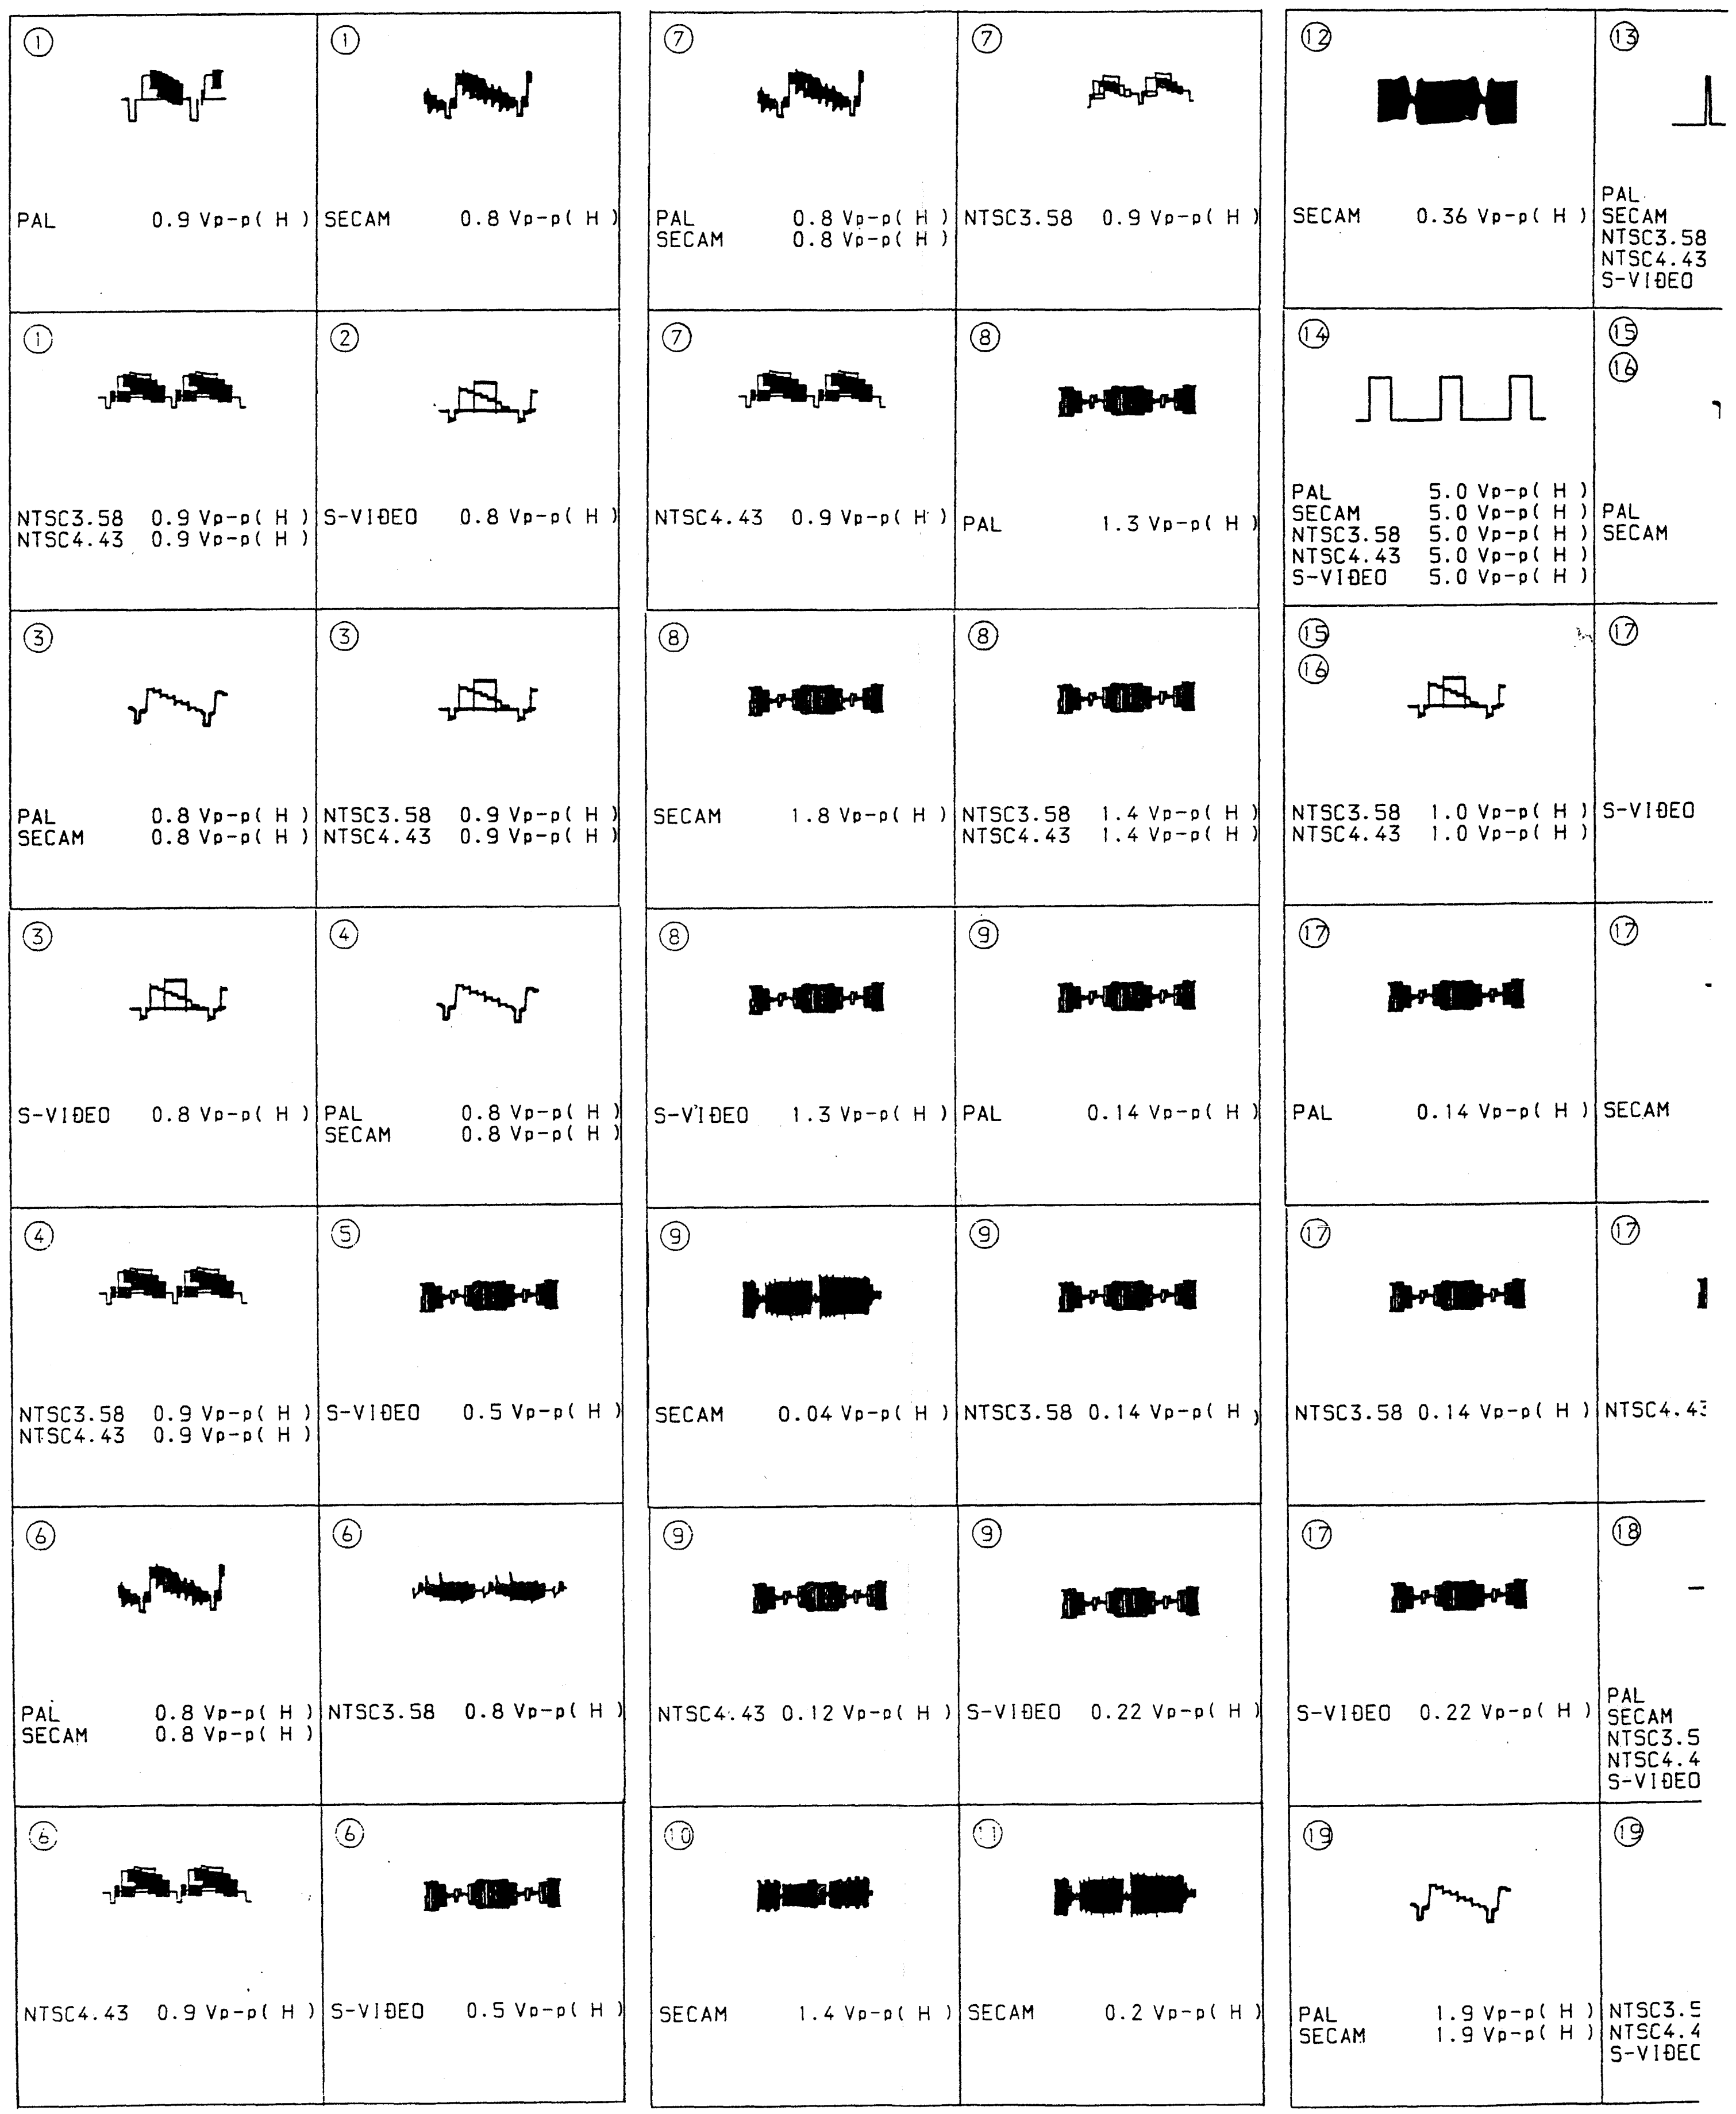

BA BOARD WAVEFORMS

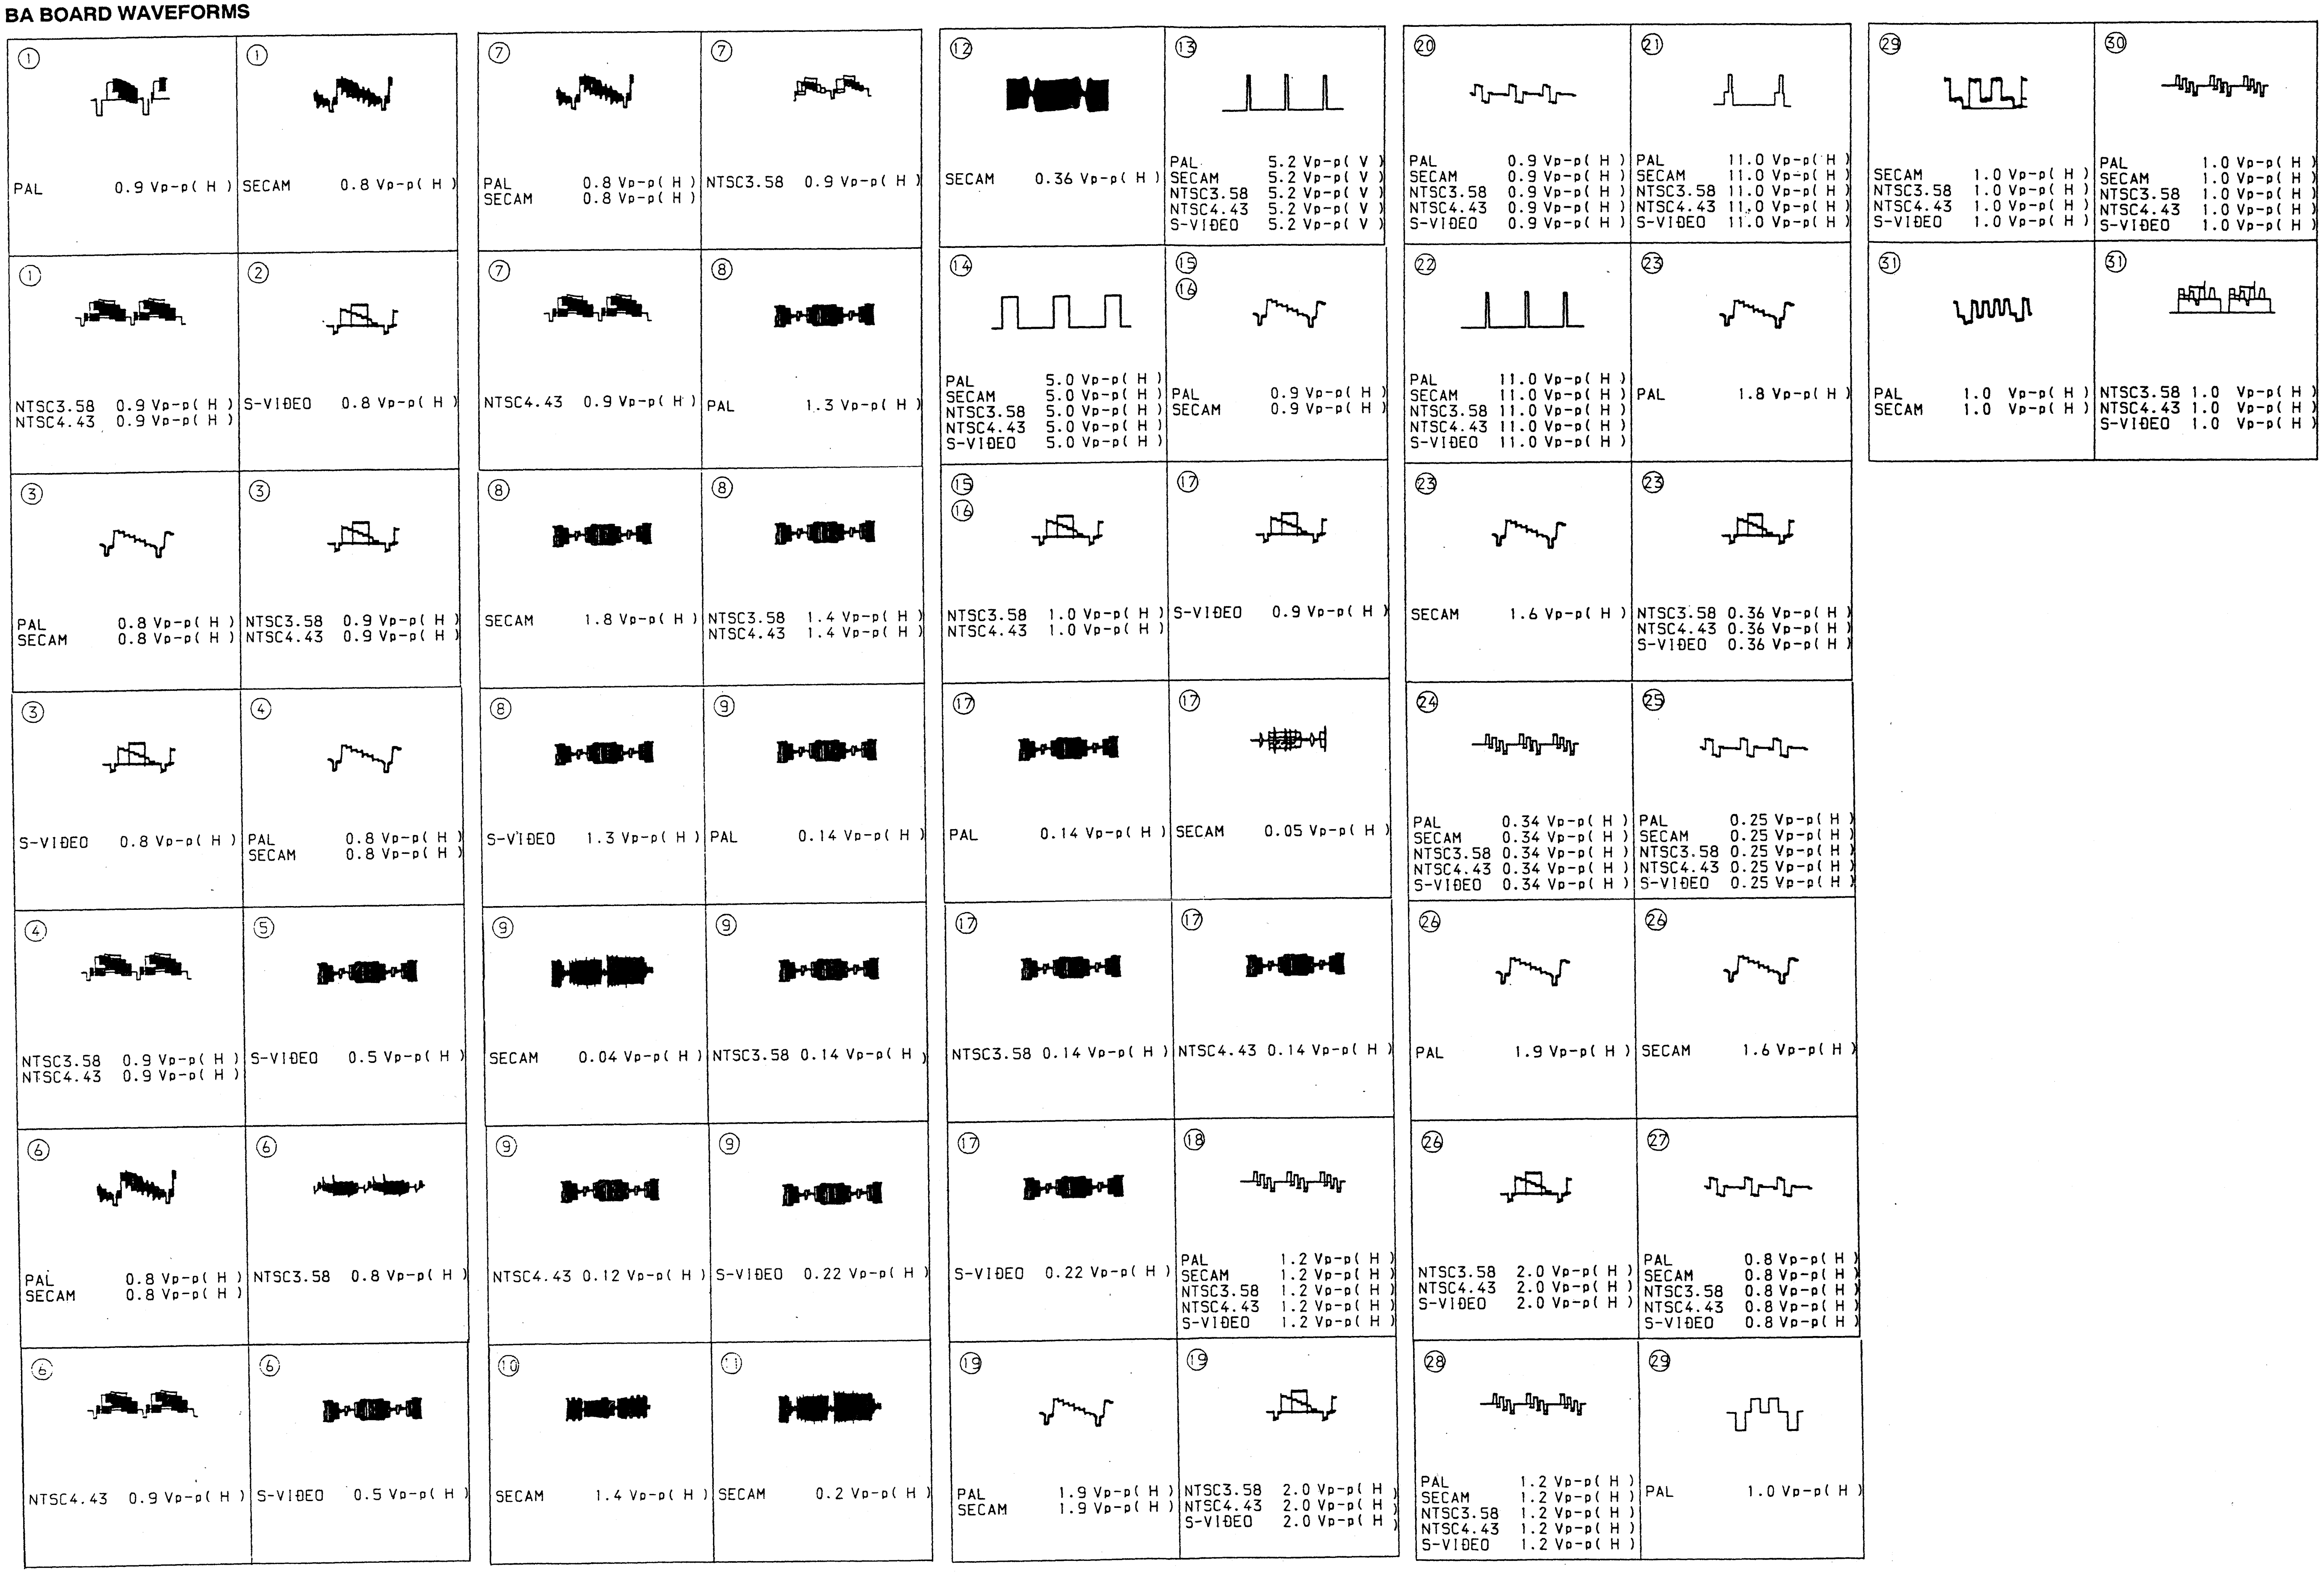

①
PAL 0.9 Vp-p(H)

①
SECAM 0.8 Vp-p(H)

①
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)

②
S-VIDEO 0.8 Vp-p(H)

③
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)

③
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)

③
S-VIDEO 0.8 Vp-p(H)

④
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)

④
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)

⑤
S-VIDEO 0.5 Vp-p(H)

⑥
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)

⑥
NTSC3.58 0.8 Vp-p(H)

⑥
NTSC4.43 0.9 Vp-p(H)

⑥
S-VIDEO 0.5 Vp-p(H)

⑦
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)

⑦
NTSC3.58 0.9 Vp-p(H)

⑦
NTSC4.43 0.9 Vp-p(H)

⑧
PAL 1.3 Vp-p(H)

⑧
SECAM 1.8 Vp-p(H)

⑧
NTSC3.58 1.4 Vp-p(H)
NTSC4.43 1.4 Vp-p(H)

⑧
S-VIDEO 1.3 Vp-p(H)

⑨
PAL 0.14 Vp-p(H)

⑨
SECAM 0.04 Vp-p(H)

⑨
NTSC3.58 0.14 Vp-p(H)

⑨
NTSC4.43 0.12 Vp-p(H)

⑨
S-VIDEO 0.22 Vp-p(H)

⑩
SECAM 1.4 Vp-p(H)

⑪
SECAM 0.2 Vp-p(H)

⑫
SECAM 0.36 Vp-p(H)

⑬
PAL 5.2 Vp-p(V)
SECAM 5.2 Vp-p(V)
NTSC3.58 5.2 Vp-p(V)
NTSC4.43 5.2 Vp-p(V)
S-VIDEO 5.2 Vp-p(V)

⑭
PAL 5.0 Vp-p(H)
SECAM 5.0 Vp-p(H)
NTSC3.58 5.0 Vp-p(H)
NTSC4.43 5.0 Vp-p(H)
S-VIDEO 5.0 Vp-p(H)

⑮ ⑯
PAL 0.9 Vp-p(H)
SECAM 0.9 Vp-p(H)

⑮ ⑯
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)

⑰
S-VIDEO 0.9 Vp-p(H)

⑰
PAL 0.14 Vp-p(H)

⑰
SECAM 0.05 Vp-p(H)

⑰
NTSC3.58 0.14 Vp-p(H)

⑰
NTSC4.43 0.14 Vp-p(H)

⑰
S-VIDEO 0.22 Vp-p(H)

⑱
PAL 1.2 Vp-p(H)
SECAM 1.2 Vp-p(H)
NTSC3.58 1.2 Vp-p(H)
NTSC4.43 1.2 Vp-p(H)
S-VIDEO 1.2 Vp-p(H)

⑲
PAL 1.9 Vp-p(H)
SECAM 1.9 Vp-p(H)

⑲
NTSC3.58 2.0 Vp-p(H)
NTSC4.43 2.0 Vp-p(H)
S-VIDEO 2.0 Vp-p(H)

⑳
PAL 0.9 Vp-p(H)
SECAM 0.9 Vp-p(H)
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)
S-VIDEO 0.9 Vp-p(H)

㉑
PAL 11.0 Vp-p(H)
SECAM 11.0 Vp-p(H)
NTSC3.58 11.0 Vp-p(H)
NTSC4.43 11.0 Vp-p(H)
S-VIDEO 11.0 Vp-p(H)

㉒
PAL 11.0 Vp-p(H)
SECAM 11.0 Vp-p(H)
NTSC3.58 11.0 Vp-p(H)
NTSC4.43 11.0 Vp-p(H)
S-VIDEO 11.0 Vp-p(H)

㉓
PAL 1.8 Vp-p(H)

㉓
SECAM 1.6 Vp-p(H)

㉓
NTSC3.58 0.36 Vp-p(H)
NTSC4.43 0.36 Vp-p(H)
S-VIDEO 0.36 Vp-p(H)

㉔
PAL 0.34 Vp-p(H)
SECAM 0.34 Vp-p(H)
NTSC3.58 0.34 Vp-p(H)
NTSC4.43 0.34 Vp-p(H)
S-VIDEO 0.34 Vp-p(H)

㉕
PAL 0.25 Vp-p(H)
SECAM 0.25 Vp-p(H)
NTSC3.58 0.25 Vp-p(H)
NTSC4.43 0.25 Vp-p(H)
S-VIDEO 0.25 Vp-p(H)

㉖
PAL 1.9 Vp-p(H)

㉖
SECAM 1.6 Vp-p(H)

㉖
NTSC3.58 2.0 Vp-p(H)
NTSC4.43 2.0 Vp-p(H)
S-VIDEO 2.0 Vp-p(H)

㉗
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
NTSC3.58 0.8 Vp-p(H)
NTSC4.43 0.8 Vp-p(H)
S-VIDEO 0.8 Vp-p(H)

㉘
PAL 1.2 Vp-p(H)
SECAM 1.2 Vp-p(H)
NTSC3.58 1.2 Vp-p(H)
NTSC4.43 1.2 Vp-p(H)
S-VIDEO 1.2 Vp-p(H)

㉙
PAL 1.0 Vp-p(H)

㉙
SECAM 1.0 Vp-p(H)
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)

㉚
PAL 1.0 Vp-p(H)
SECAM 1.0 Vp-p(H)
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)

㉛
PAL 1.0 Vp-p(H)
SECAM 1.0 Vp-p(H)

㉛
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)

BA BOARD (Page 125 – 127)

BA

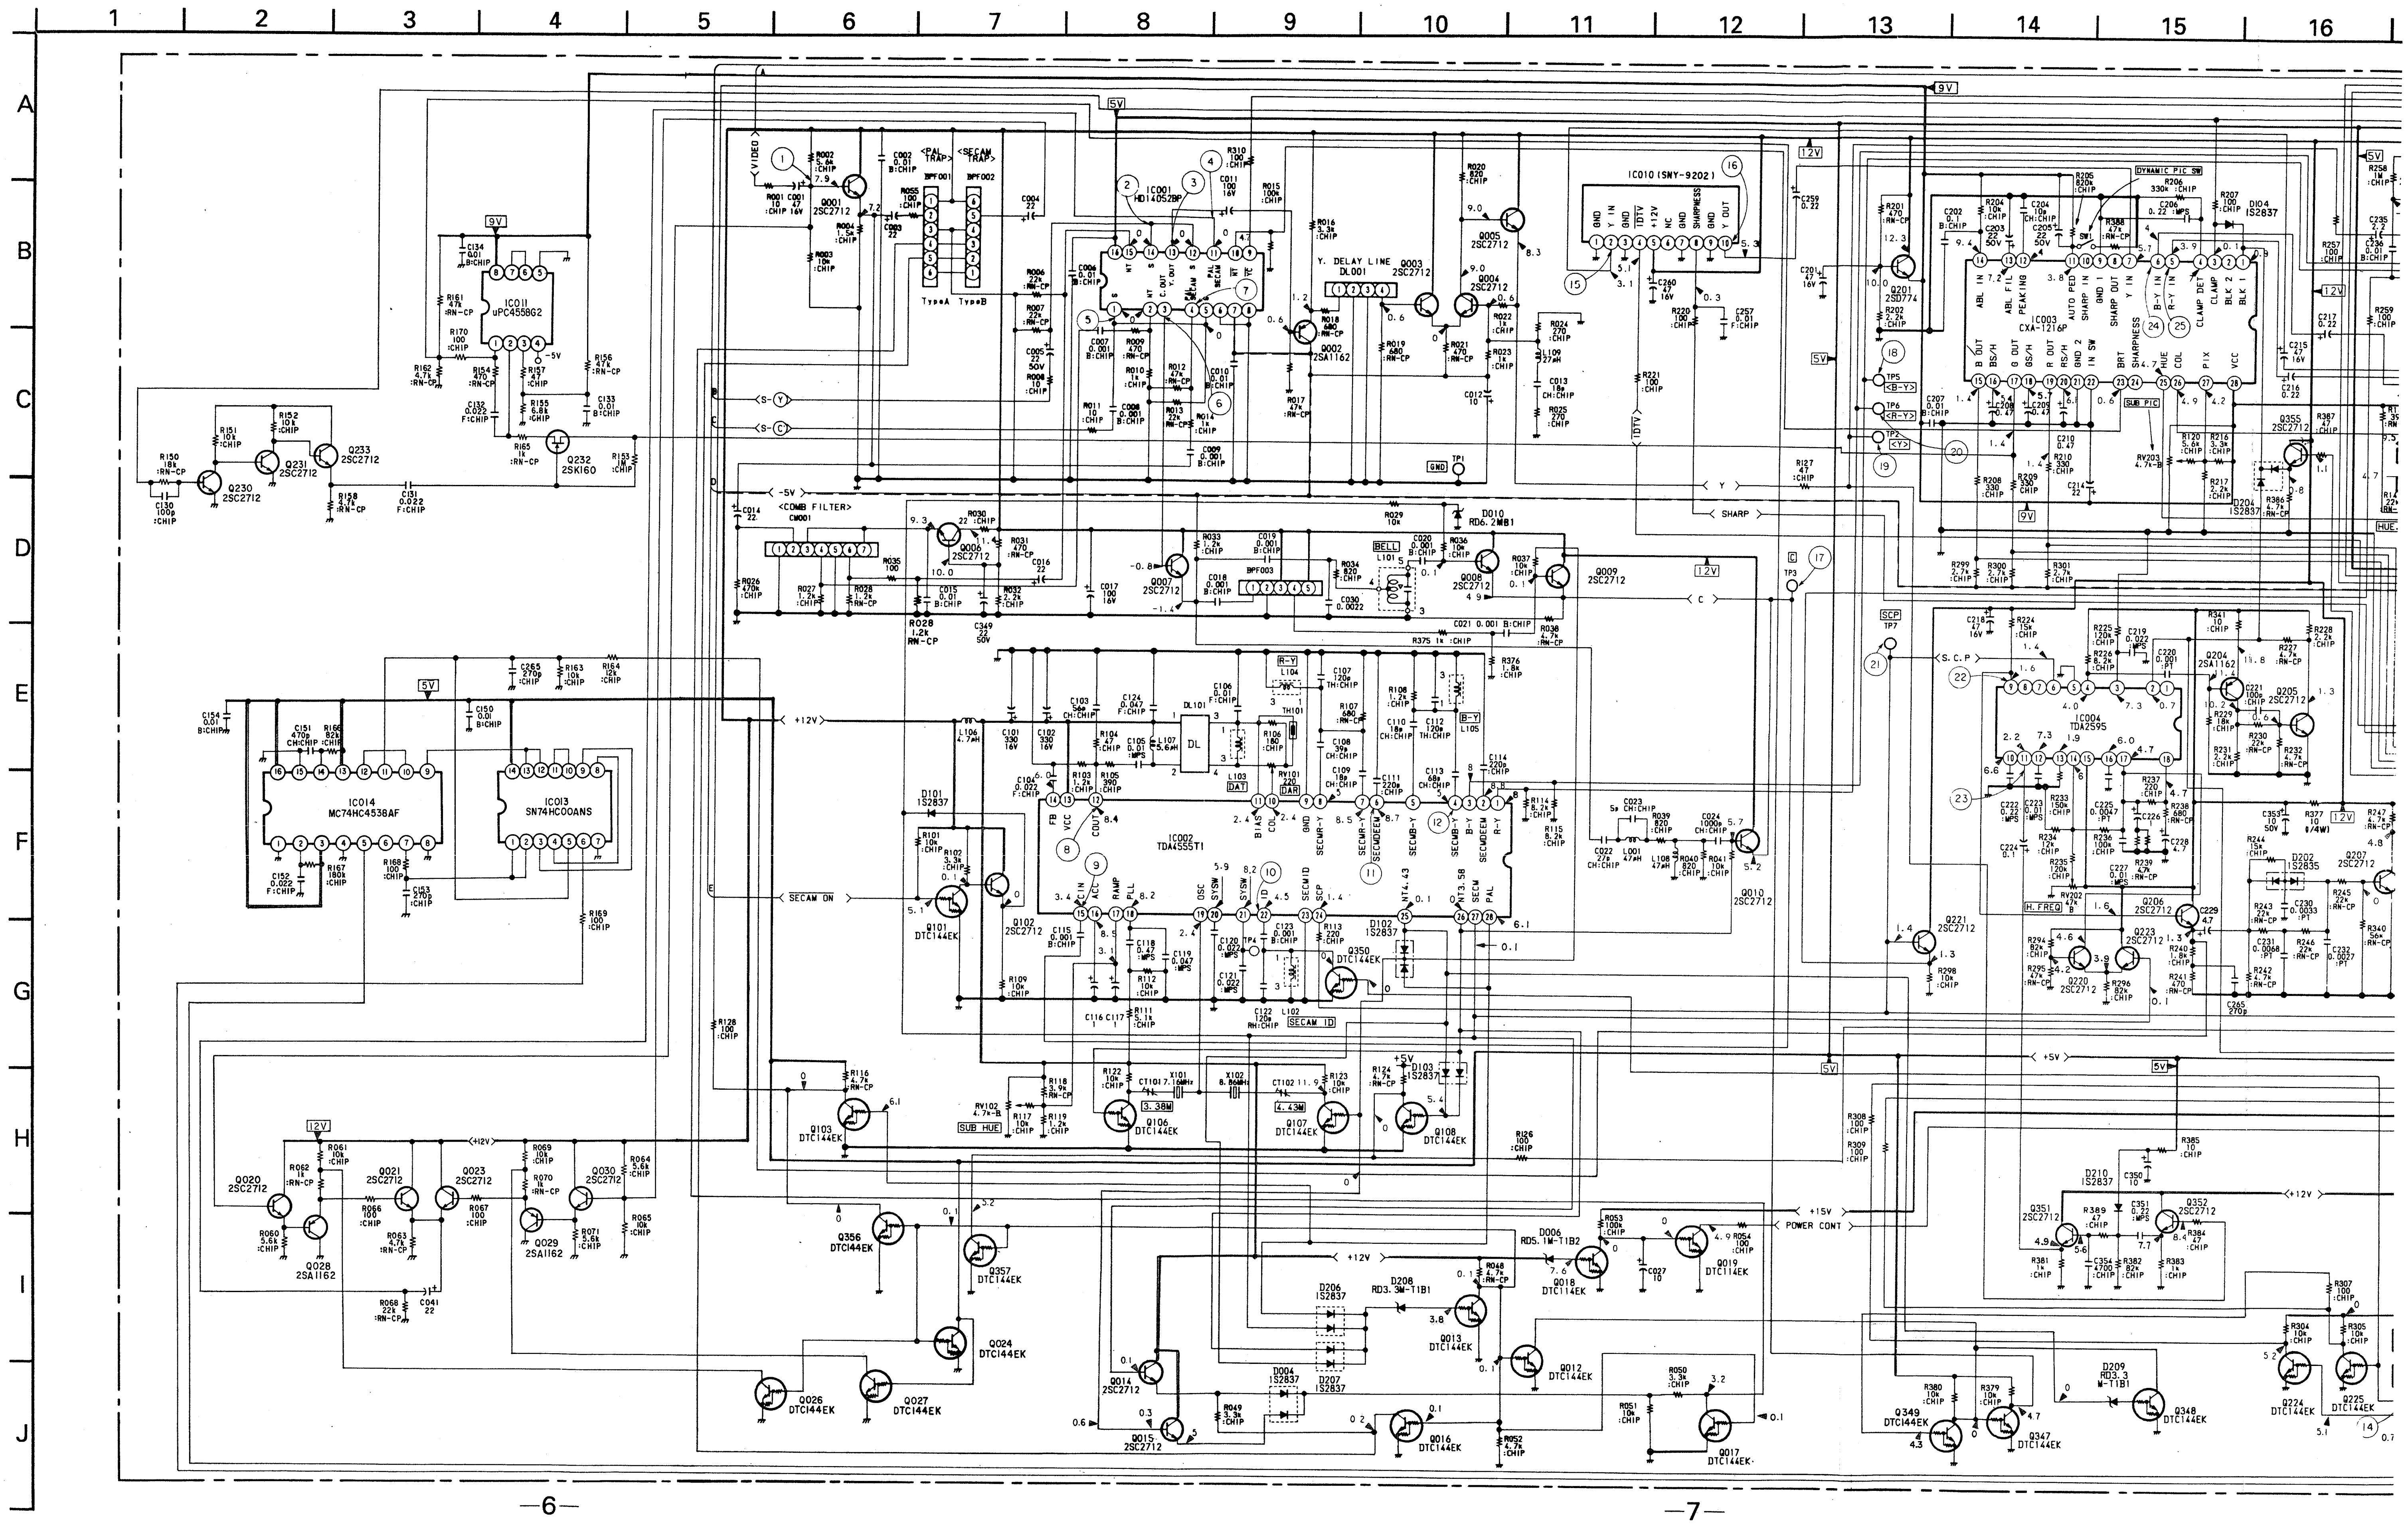
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
IC011 uPC4558G2
IC014 MC74HC4538AF
IC013 SN74HC00ANS
IC001 HD14052BP
IC002 TDA4555T1
IC010 (SNY-9202)
IC003 CXA-1216P
IC004 TDA2595
Y. DELAY LINE DL001
<COMB FILTER> CM001
<PAL TRAP> BPF001
<SECAM TRAP> BPF002
BPF003
DL101
9V
5V
12V
-5V
+12V
+5V
+15V
<VIDEO>
S-Y
S-C
Y
C
SHARP
IDTV
SECAM ON
SUB HUE
SUB PIC
H. FREQ
DYNAMIC PIC SW
BELL
R-Y
B-Y
DAT
DAR
SECAM ID
3.38M
4.43M
GND
TP1
TP2 <Y>
TP3
TP5 <B-Y>
TP6 <R-Y>
TP7
SCP
S.C.P
POWER CONT
HUE
Q001 2SC2712
Q002 2SA1162
Q003 2SC2712
Q004 2SC2712
Q005 2SC2712
Q006 2SC2712
Q007 2SC2712
Q008 2SC2712
Q009 2SC2712
Q010 2SC2712
Q012 DTC144EK
Q013 DTC144EK
Q014 2SC2712
Q015 2SC2712
Q016 DTC144EK
Q017 DTC144EK
Q018 DTC114EK
Q019 DTC144EK
Q020 2SC2712
Q021 2SC2712
Q023 2SC2712
Q024 DTC144EK
Q026 DTC144EK
Q027 DTC144EK
Q028 2SA1162
Q029 2SA1162
Q030 2SC2712
Q101 DTC144EK
Q102 2SC2712
Q103 DTC144EK
Q106 DTC144EK
Q107 DTC144EK
Q108 DTC144EK
Q201 2SD774
Q204 2SA1162
Q205 2SC2712
Q206 2SC2712
Q207 2SC2712
Q220 2SC2712
Q221 2SC2712
Q223 2SC2712
Q224 DTC144EK
Q225 DTC144EK
Q230 2SC2712
Q231 2SC2712
Q232 2SK160
Q233 2SC2712
Q347 DTC144EK
Q348 DTC144EK
Q349 DTC144EK
Q350 DTC144EK
Q351 2SC2712
Q352 2SC2712
Q355
Q356 DTC144EK
Q357 DTC144EK
D004 1S2837
D006 RD5.1M-T1B2
D010 RD6.2MB1
D101 1S2837
D102 1S2837
D103 1S2837
D104 1S2837
D202 1S2835
D204 1S2837
D206 1S2837
D207 1S2837
D208 RD3.3M-T1B1
D209 RD3.3M-T1B1
D210 1S2837
X101 7.16MHz
X102 8.86MHz
TypeA TypeB

IC1	HD14052BP	SYSTEM SW
IC2	TDA4558T1	DECORDER
IC3	CXA1216P	MATRIX
IC4	TDA2595	JUNGLE
IC5	MC14053BF	IDTV SW-1
IC6	TC74HC157AP	IDTV SW-2
IC7	SN74HC27ANS	IDTV SW-3
IC8	NJM78M12A	12V REG
IC9	CX-7916	50/60 DET
IC10	SNY-9202	SHARPNESS
IC11	μ PC4558G2	BRT CONT
IC12	μ PC4558C	LEVEL SHIFT
IC13	SN74HC00ANS	GATE
IC14	MC74HC4538AF	PULSE GENERATOR
Q1	2SC2712	VIDEO BUFF
Q2	2SA1162	Y BUFF-1
Q3	2SA2712	Y AMP-1
Q4	2SA2712	Y AMP-2
Q5	2SA2712	Y AMP-3
Q6	2SC2712	9V REG-1
Q7	2SC2712	C BUFF
Q8	2SC2712	SECAM C BUFF
Q9	2SC2712	PAL C BUFF
Q10	2SC2712	NTSC C BUFF
Q12	DTC144EK	W/B SW-1
Q13	DTC144EK	W/B SW-2
Q14	2SC2712	NT3.58 SW
Q15	2SC2712	NT4.43 SW
Q16	DTC144EK	TRAP SW-1
Q17	DTC144EK	TRAP SW-2
Q18	DTC114EK	POW CONT-1
Q19	DTC114EK	POW CONT-2
Q20	2SC2712	VIDEO BUFF
Q21	2SC2712	Y SW
Q23	2SC2712	Y SW
Q29	2SA1162	VIDEO BUFF
Q30	2SC2712	VIDEO BUFF
Q101	DTC144EK	SECAM SW-1
Q102	2SC2712	SECAM SW-2
Q103	DTC144EK	MODE SW-1
Q104	DTC144EK	MODE SW-2
Q106	DTC144EK	NT OSC SW
Q107	DTC144EK	PAL OSC SW
Q108	DTC144EK	MODE SW-3
Q109	DTC144EK	MODE SW-4
Q201	2SD774	9V REG-2
Q202	2SA1162	B-Y BUFF-1
Q203	2SA1162	R-Y BUFF-1
Q204	2SA1162	AFC-1
Q205	2SC2712	AFC-2
Q206	2SC2712	SYNC BUFF
Q207	2SC2712	V. SYNC SW-1
Q208	2SC2712	V. SYNC SW-2
Q209	2SC2712	V. SYNC SW-3
Q210	2SA1162	V. SYNC SW-4
Q211	2SC2712	H. SYNC SW
Q212	2SK160	Y. CLAMP-1
Q213	2SC2712	Y. BUFF-2
Q214	2SK160	B-Y CLAMP
Q215	2SC2712	R-Y BUFF-2
Q216	2SK160	B-Y CLAMP
Q217	2SC2712	B-Y BUFF-2
Q218	2SA1162	CLAMP
Q219	2SA1162	REF DC BUFF-1
Q220	2SC2712	REF DC BUFF-2
Q221	2SC2712	SCP BUFF
Q222	2SD774	+ 5V REG
Q223	2SC2712	BGP SHIFT
Q224	DTC144EK	50/60 SW-1
Q225	DTC144EK	50/60 SW-2
Q226	DTC144EK	V. SYNC SW-5
Q230	2SC2712	CLAMP BUFF
Q231	2SC2712	CLAMP BUFF
Q232	2SK160	BRT CONT
Q233	2SC2712	CLAMP BUFF
Q347	DTC144EK	SYSTEM SW-1
Q348	DTC144EK	NT4.43 SW
Q349	DTC144EK	SYSTEM SW-2
Q350	DTC144EK	ID
Q351	2SC2712	Y BUFF-3
Q352	2SC2712	Y CLAMP-2
Q355	2SC2712	BLK BUFF
Q356	DTC144EK	MODE SW-5
Q357	DTC144EK	MODE SW-6
D4	1S2837	NT3.58 DET
D6	RD5.1MB2	POW CONT
D101	1S2837	SECAM SW
D102	1S2837	MODE SW-1
D103	1S2837	MODE SW-2
D201	V06C	+ 12V PROT
D202	1S2835	SYNC SEP
D203	1S2835	H. SYNC SW
D204	1S2837	BLK ADD
D206	1S2837	W/B SW-2
D207	1S2837	W/B SW-3
D208	RD3.3MB1	W/B SW-1
D209	RD3.3MB1	NT4.43 SW
D210	1S2837	Y. CLAMP

BA BOARD

IC-No.	PIN-No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
001	①	0	0	0	0	− 0.3
	③	− 0.7	− 0.7	0	− 0.7	− 0.3
	④	− 0.7	− 0.7	0	− 0.7	0
	⑨	5.1	5.1	5.1	5.1	0
	⑩	4.7	4.7	0	4.7	0
002	⑤	8.6	4.3	7.2	8.1	8.2
	⑦	8.5	4.4	7	7.9	5.9
	⑳	5.9	5.9	7.7	7.7	7.7
	㉑	8.2	7.5	5.9	5.9	5.9
	㉕	0.1	0.1	0	8.1	0
	㉖	0	0	8.1	0	8.1
	㉗	0.1	8.1	0	0	0
	㉘	8.1	0.1	0	0	0
004	⑩	8.6	6.3	6.5	6.6	6.6
	⑬	1.9	2	1.8	2.2	1.8
006	⑪	1.4	0.3	0.9	0.9	0.7
	⑭	1.3	0.2	0.9	0.9	0.8
007	①	0.3	2.9	0.3	0.3	0.3
	③	0	0	5.1	5.2	5.2
	⑪	0	4.3	0	0	0
009	②	5.1	0	5.1	5.1	5.1
	③	0	5.2	0	0	0
010	⑧	0.3	0.3	0.3	0.3	3.4

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
007	B	− 0.7	− 0.7	0	− 0.7	− 0.3
	C	−	−	−	−	−
	E	− 0.7	− 1.3	− 0.7	− 1.3	− 1
008	B	0	*	0	0	0
	C	−	−	−	−	−
	E	5	5	5.4	5	5.4
009	B	*	0	0	*	0
	C	−	−	−	−	−
	E	5	5	5.4	5	5.4
010	B	0	0	*	0	8
	C	−	−	−	−	−
	E	4.9	5	5.4	4.9	5.4
012	B	−	−	−	−	−
	C	0	0	4.3	0	4.3
	E	−	−	−	−	−
014	B	0.1	8.1	0.2	0.3	0
	C	−	−	−	−	−
	E	0.3	5.5	0	0.4	0
015	B	0.8	0.1	0.2	5.8	0
	C	−	−	−	−	−
	E	5	1.9	0	5	0
016	B	−	−	−	−	−
	C	0.2	4.1	0.1	0.3	0
	E	−	−	−	−	−
017	B	−	−	−	−	−
	C	3.2	3.8	0	3.2	0
	E	−	−	−	−	−
103	B	8.1	0	0.3	0.2	0
	C	−	−	−	−	−
	E	−	−	−	−	−
104	B	0	0	8.1	0.1	8.1
	C	5.2	5.2	0	5.2	0
	E	−	−	−	−	−
106	B	0	0	8.1	0.1	8.1
	C	12.4	12.4	0	12.4	0
	E	−	−	−	−	−
107	B	5.8	0.1	0.2	5.8	0
	C	0	12.4	12.4	0	12.4
	E	−	−	−	−	−
108	B	0.7	0.5	5.8	5.8	5.8
	C	5.2	5.2	0	0	0
	E	−	−	−	−	−
207	B	− 0.1	0	− 0.2	0	0
	C	−	−	−	−	−
	E	−	−	−	−	−
220	B	4.3	4.3	4.1	4.3	4.4
	C	4.6	4.7	4.4	4.4	4.4
	E	3.9	5.8	4.2	3.8	3.8
223	B	0	8.1	0.2	0	0
	C	−	−	−	−	−
	E	3.9	5.8	4.2	3.8	3.8
224	B	5.1	5.2	0	0	0
	C	5.2	0	5.1	5.2	5.2
	E	−	−	−	−	−
225	B	0	0	5.1	5.1	5.1
	C	0	4.3	0	0	0
	E	−	−	−	−	−
347	B	0	0	4.3	0	0
	C	4.7	4.7	0	4.7	0
	E	−	−	−	−	−
348	B	0	0	0	4.2	0
	C	0	0	4.3	0	0
	E	−	−	−	−	−
349	B	4.3	4.3	0	0	0
	C	0	0	4.3	0	0
	E	−	−	−	−	−
350	B	0	0	5.1	5.1	5.1
	C	−	−	−	−	−
	E	−	−	−	−	−
355	B	1.1	1.2	1	1.2	1.2
	C	−	−	−	−	−
	E	−	−	−	−	−
357	B	−	−	−	−	−
	C	5.2	5.2	0	0	0
	E	−	−	−	−	−

BA [4•STD DECODER]

BA BOARD (COMPONENT SIDE)

IC	
IC001	E − 10
IC002	B − 10
IC003	C − 4
IC004	B − 7
IC005	C − 1
IC006	B − 1
IC007	A − 1
IC008	D − 7
IC009	B − 3
IC010	C − 6
IC011	C − 5
IC012	E − 3
IC013	B − 2
IC014	C − 2
TRANSISTOR	
Q201	B − 5
Q202	B − 3
Q222	B − 6
DIODE	
D010	D − 8
D201	D − 7
VARIABLE RESISTOR	
RV101	C − 10
RV102	A − 12
RV202	A − 7
RV203	A − 5
RV204	E − 3
RV205	E − 3
TP	
TP1	A − 10
TP2	A − 8
TP3	A − 9
TP4	A − 10
TP5	A − 9
TP6	A − 9
TP7	A − 8
TP8	C − 4
TP9	D − 4
TP10	D − 4

– BA BOARD – (COMPONENT SIDE) (Page 121 − 123)

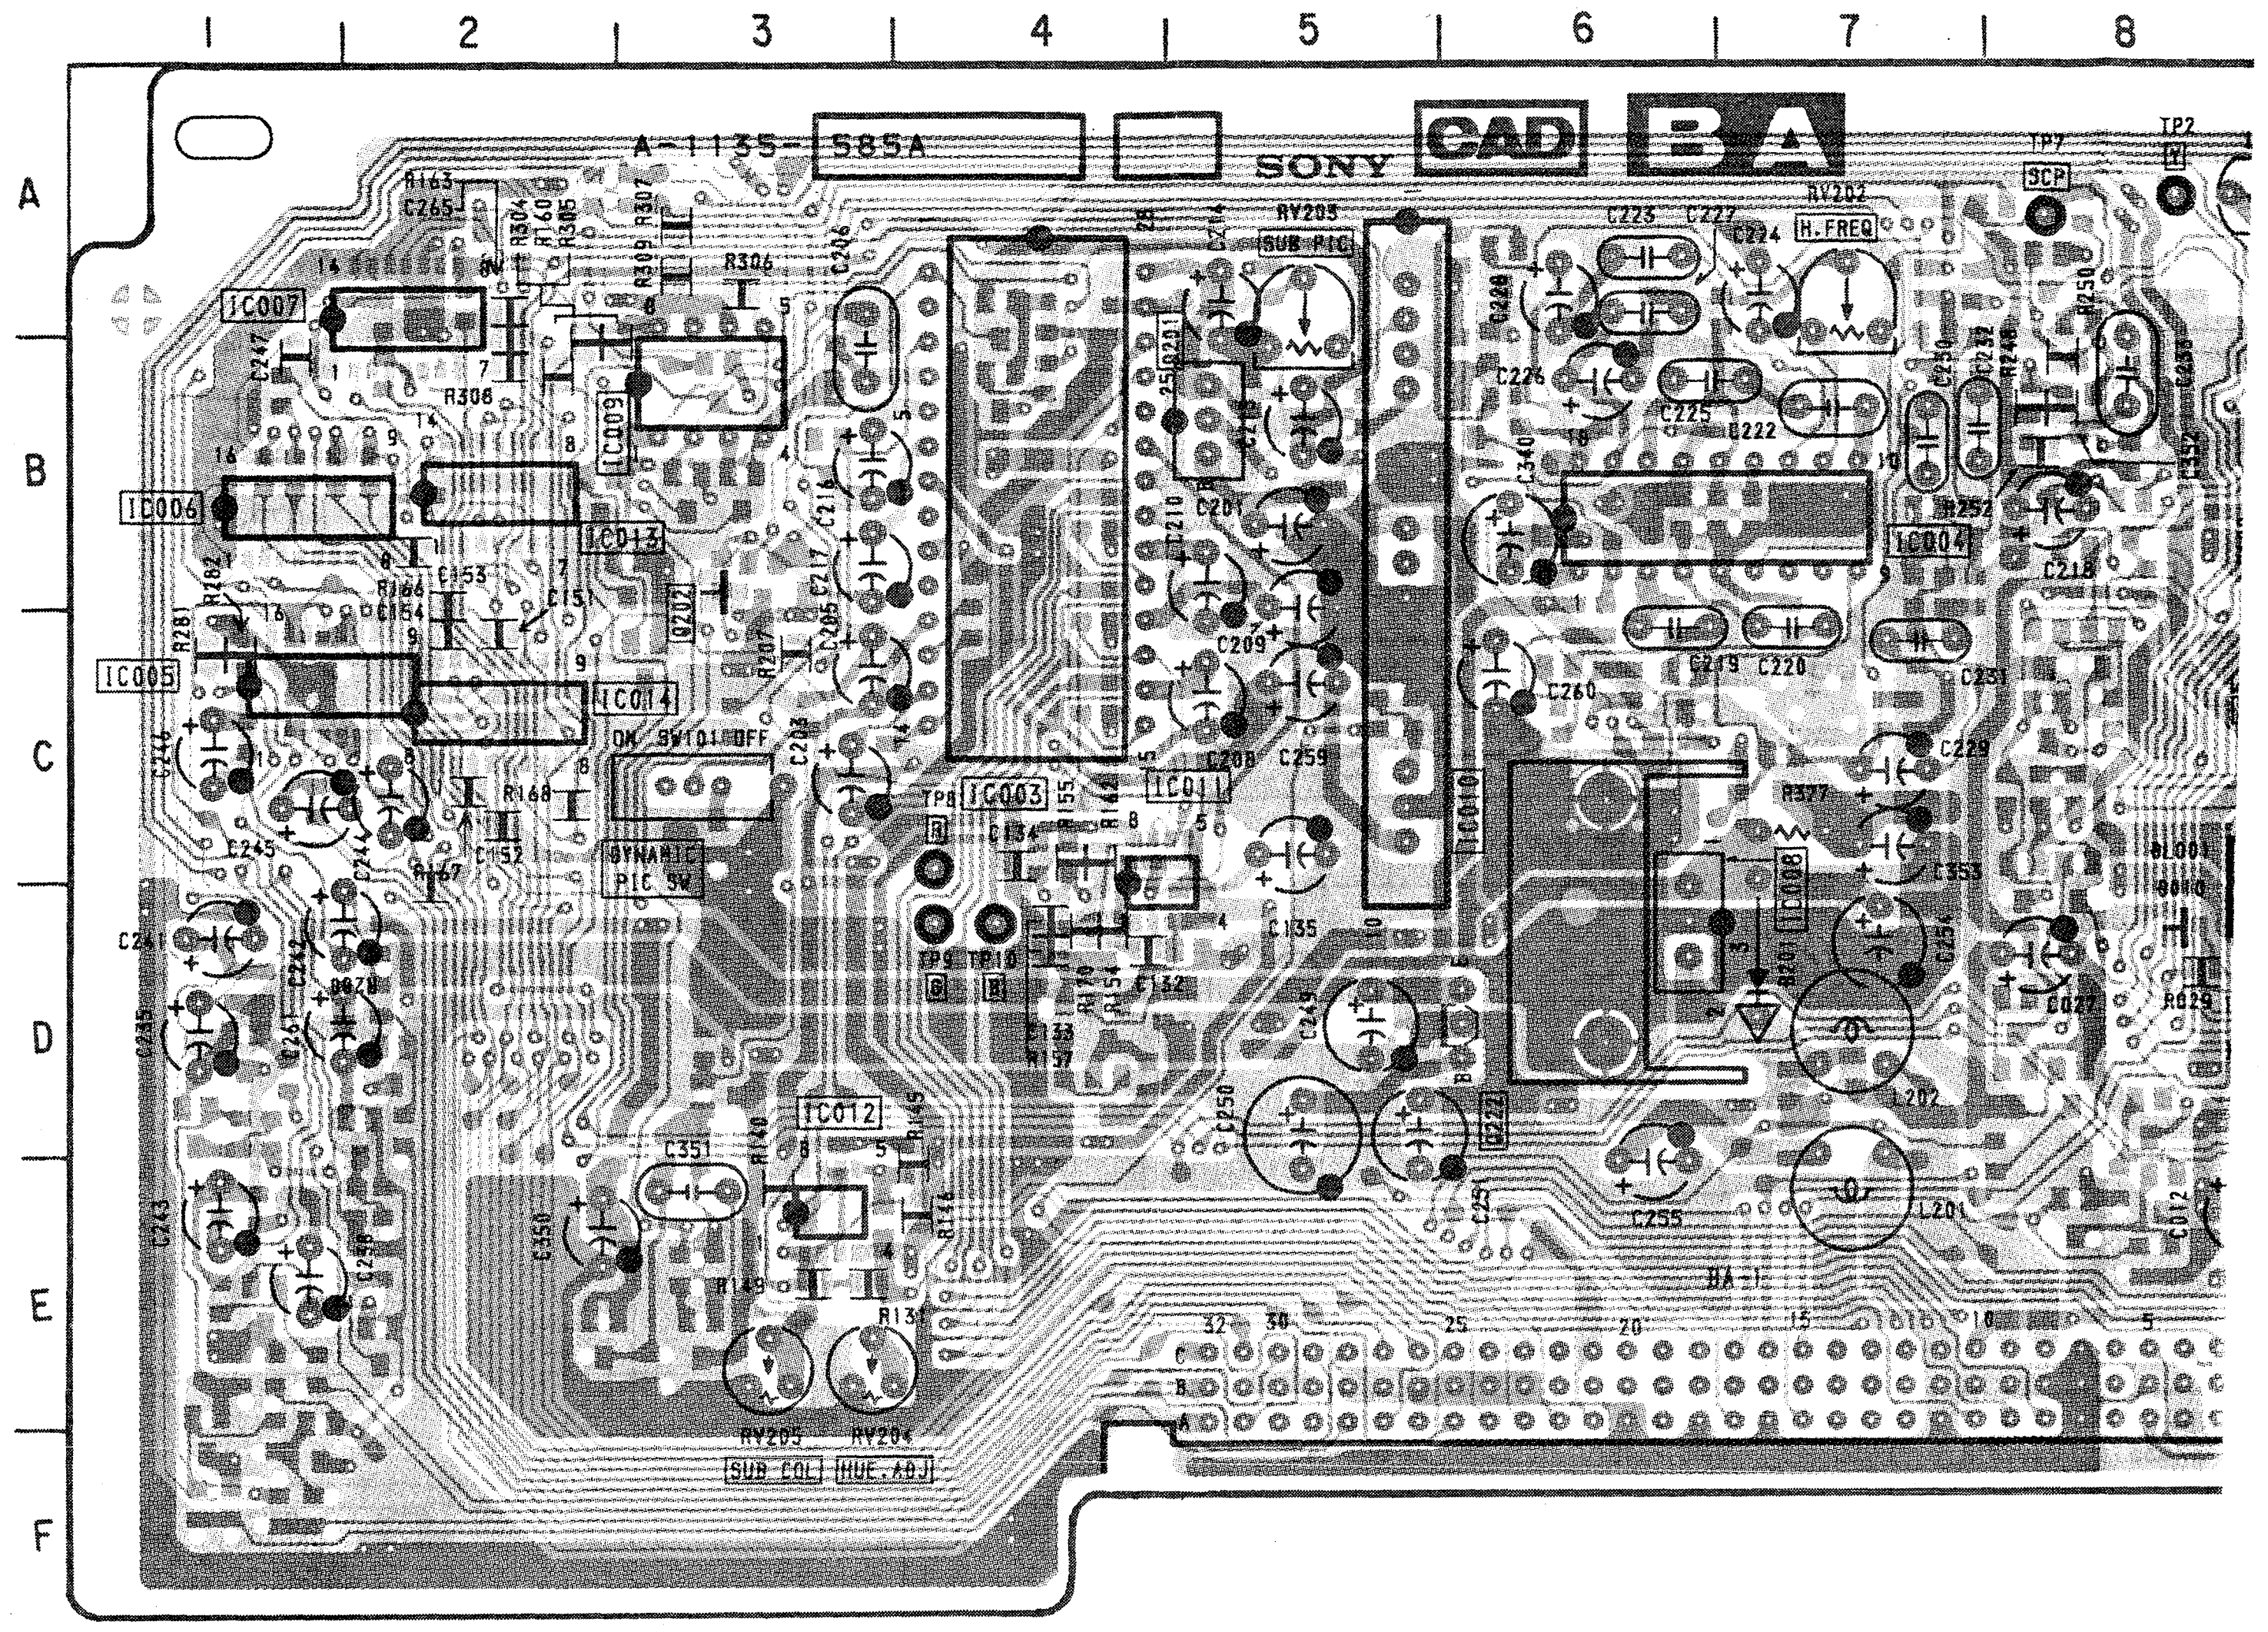

(CONDUCTOR SIDE)

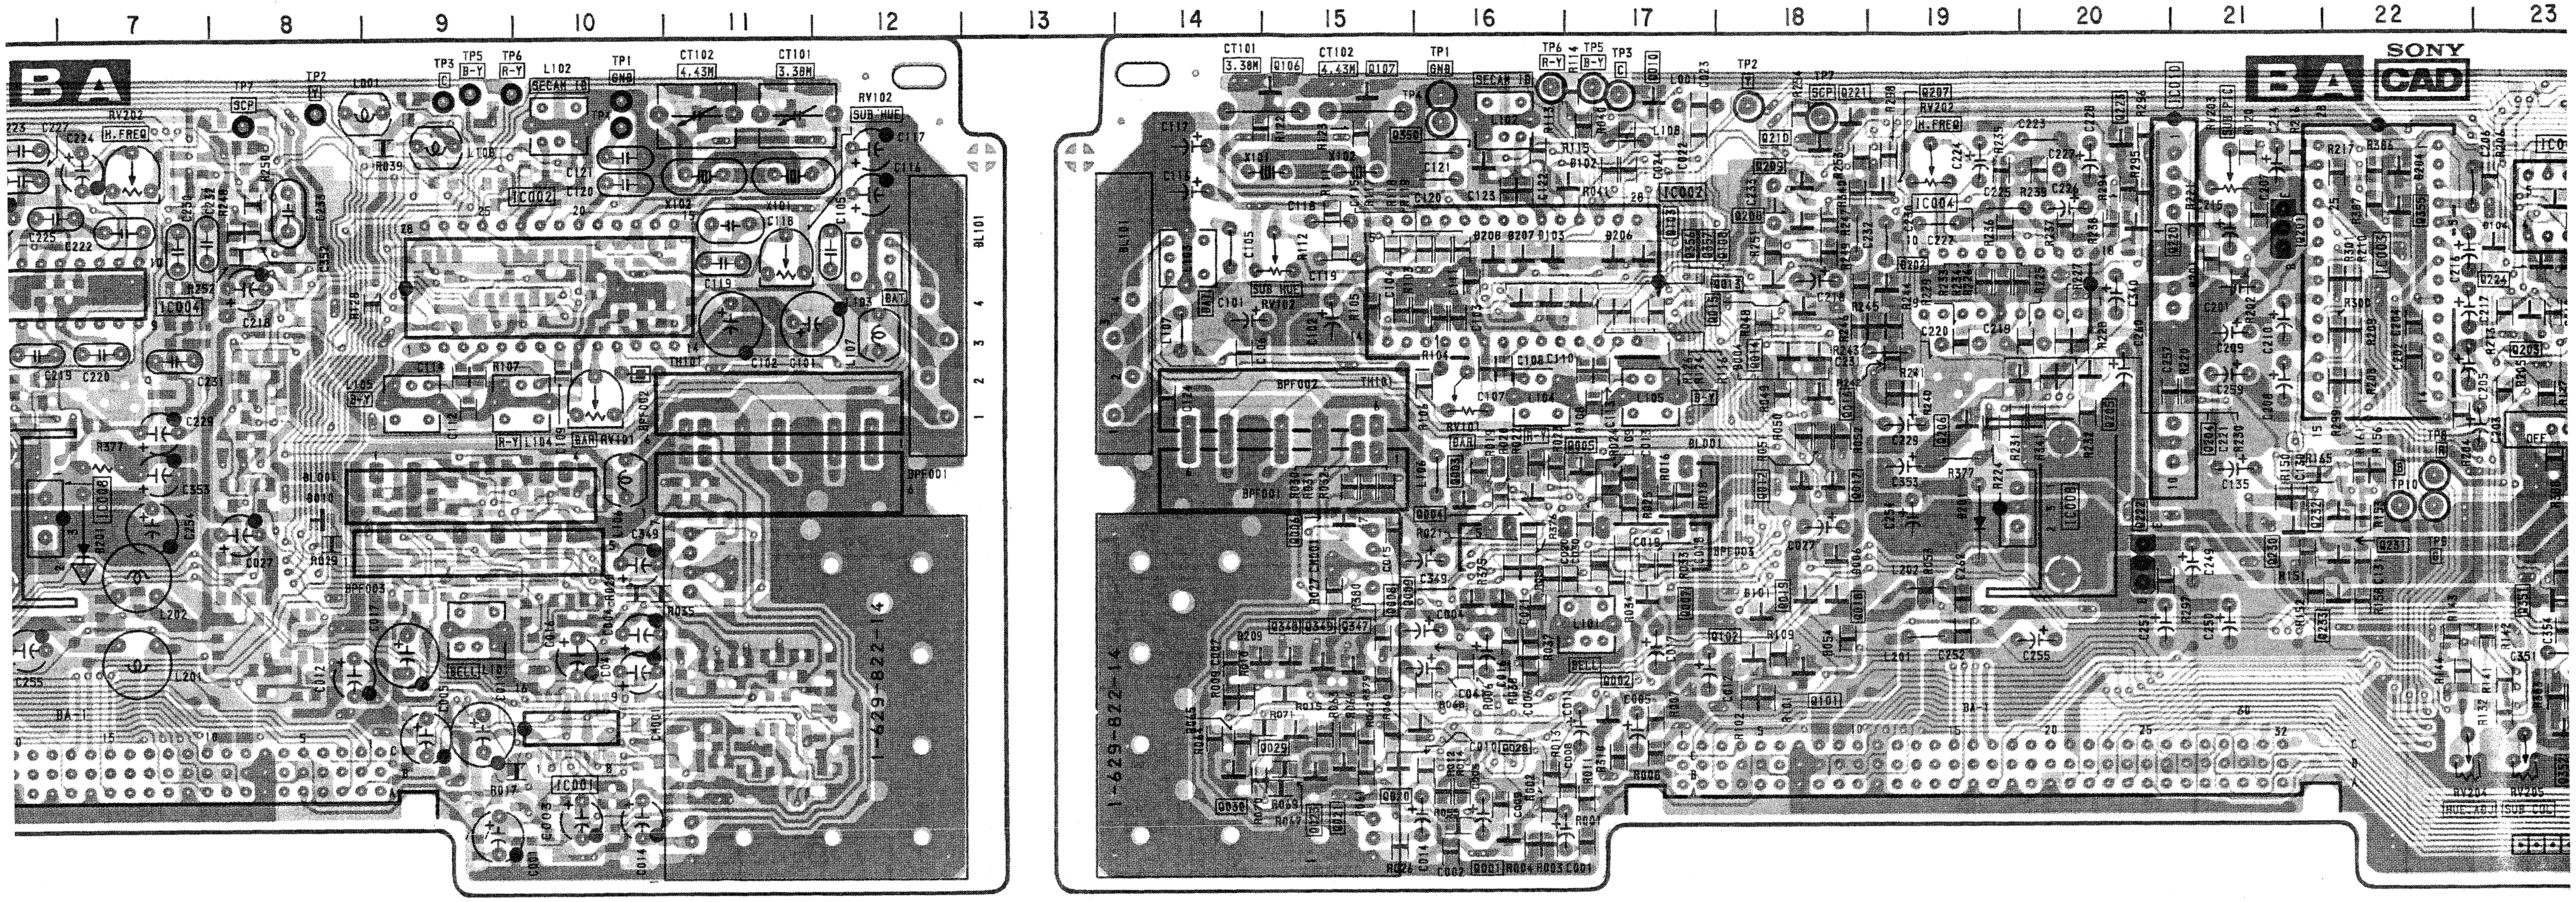
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
B A
SONY
CAD
1-629-822-14
BL101
BPF001
BPF002
BPF003
IC001
IC002
IC004
IC008
IC010
CT101 3.38M
CT102 4.43M
TP1 GND
TP2
TP3 C
TP5 B-Y
TP6 R-Y
TP7 SCP
RV101 BAR
RV102 SUB HUE
RV202 H.FREQ
RV203 SUB PIC
RV204 HUE ADJ
RV205 SUB COL
L102 SECAM IB
X101
X102
TH101
BA-1

• ▨ :
• ▨ :

(CONDUCTOR SIDE)

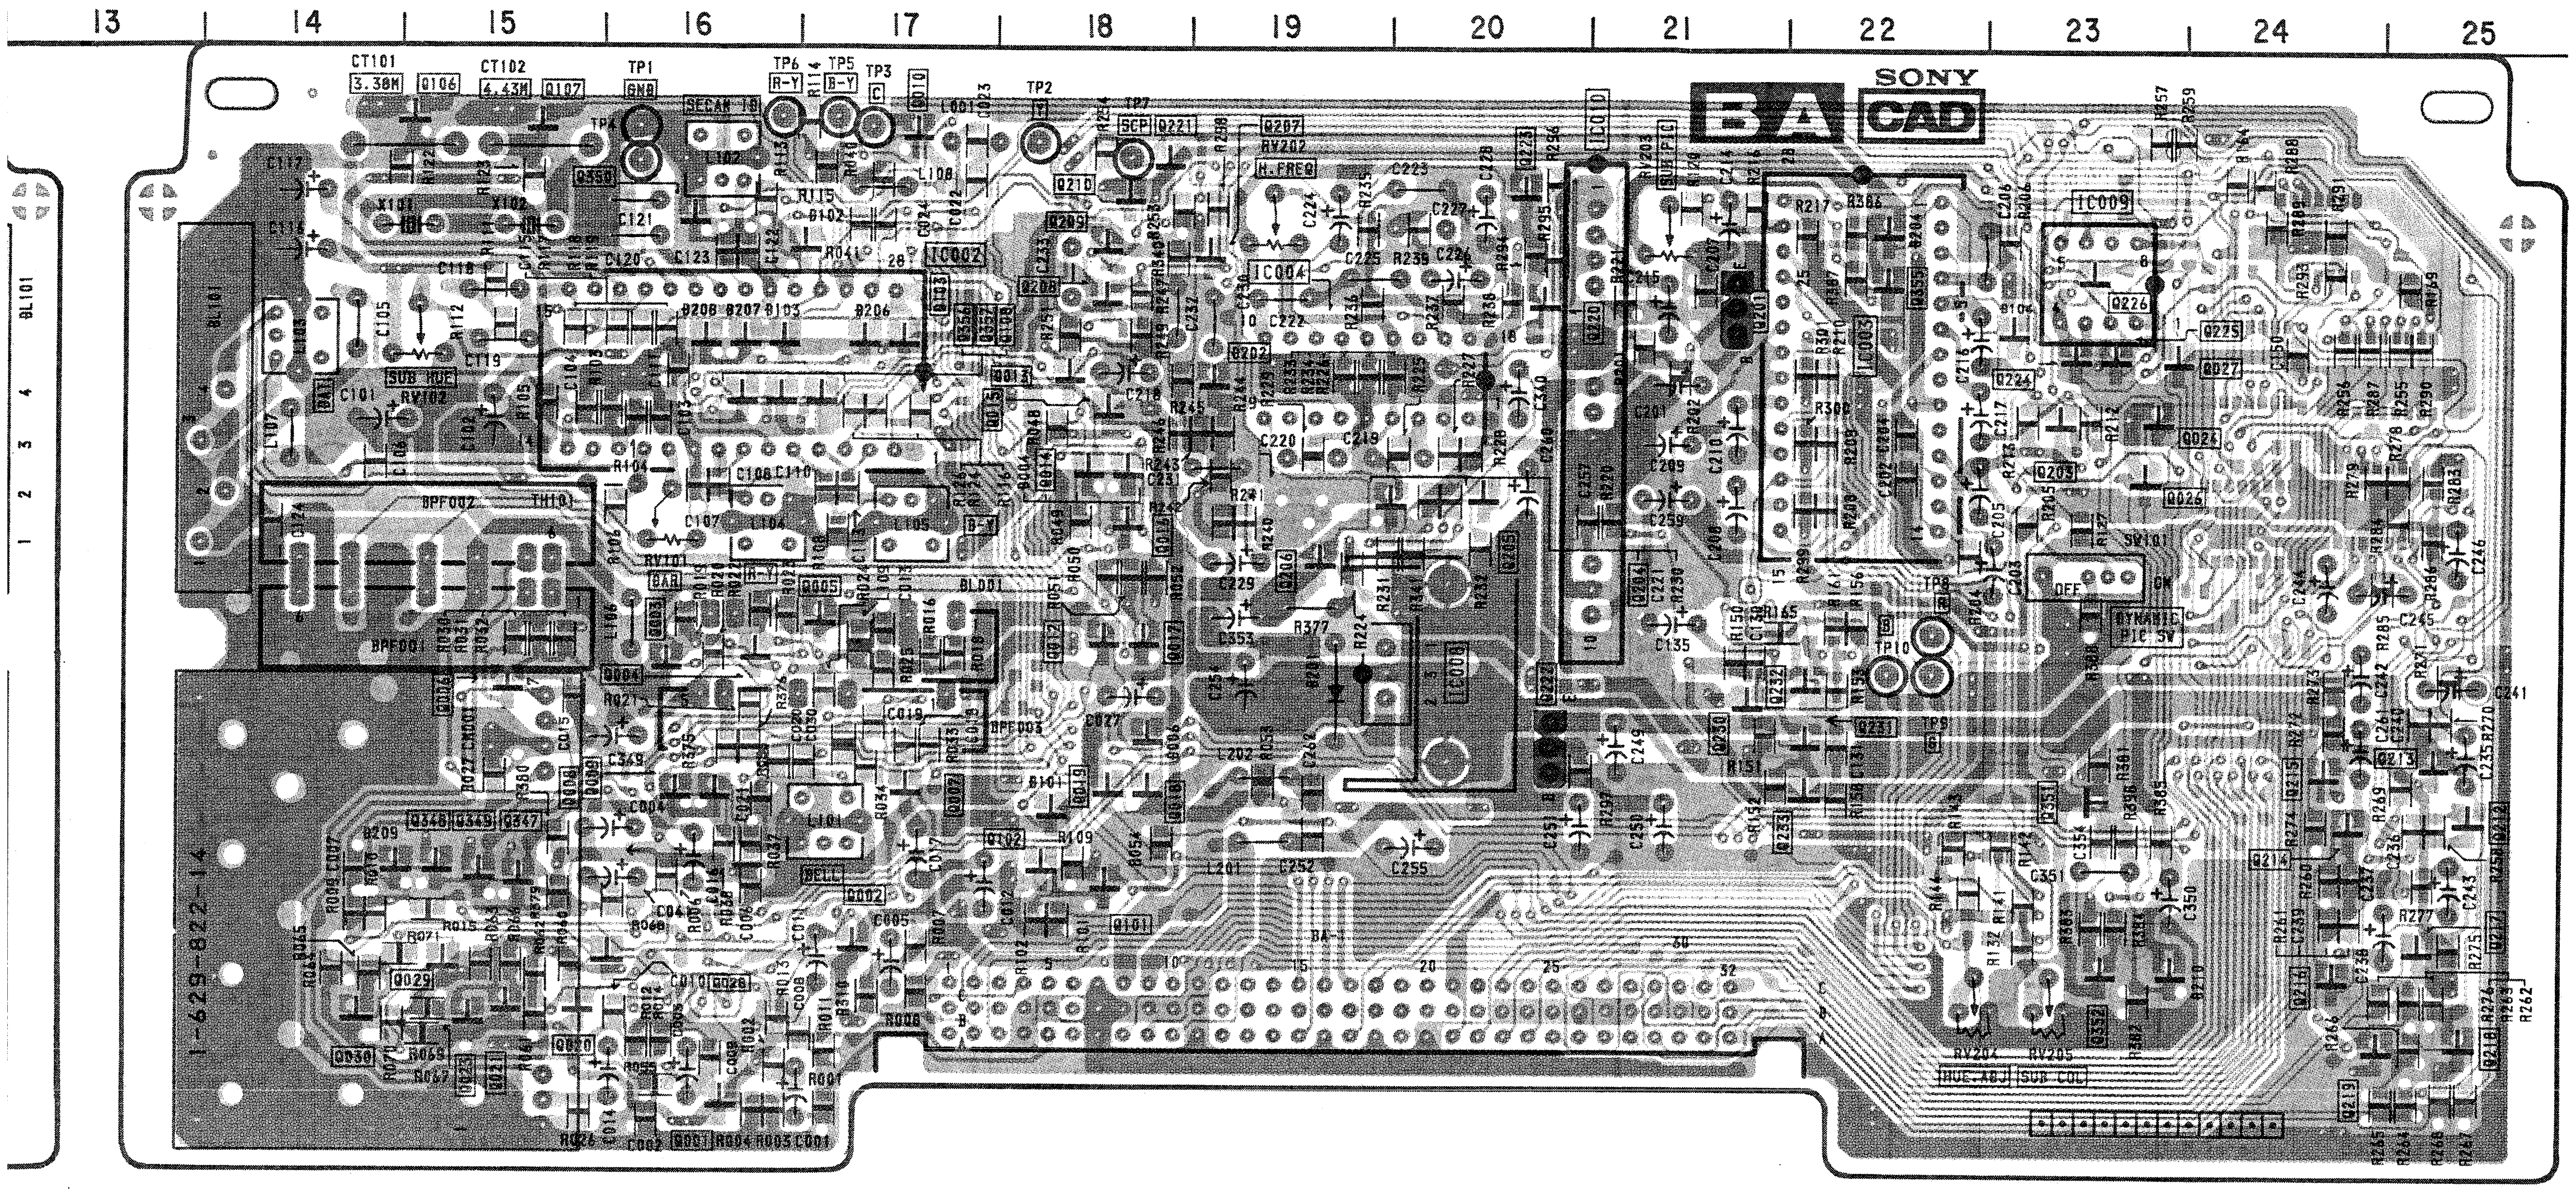

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

BA BOARD (CONDUCTOR SIDE)

IC	
IC002	B - 17
IC003	B - 22
IC008	D - 20
IC009	B - 23
IC010	A - 20

TRANSISTOR	
Q001	F - 16
Q002	E - 17
Q003	C - 16
Q004	D - 16
Q005	C - 17
Q006	D - 15
Q007	D - 17
Q008	D - 16
Q009	D - 16
Q010	A - 17
Q012	C - 18
Q013	B - 18
Q014	C - 18
Q015	B - 18
Q016	C - 18
Q017	C - 18
Q018	D - 18
Q019	D - 18
Q020	E - 15
Q021	F - 15
Q023	F - 15
Q024	D - 24
Q026	C - 23
Q027	B - 24
Q028	E - 16
Q029	E - 15
Q030	F - 14
Q101	E - 18
Q102	D - 17
Q103	B - 17
Q106	A - 15
Q107	A - 15
Q108	B - 18
Q201	B - 21
Q203	C - 23
Q204	C - 21
Q205	C - 20
Q206	C - 19
Q207	A - 19
Q208	B - 18
Q209	A - 18
Q210	A - 18
Q212	D - 25
Q213	D - 25
Q214	D - 24
Q215	D - 24
Q216	E - 24
Q217	E - 25
Q218	E - 25
Q219	F - 24
Q220	B - 20
Q221	A - 18
Q222	D - 20
Q223	A - 20
Q224	B - 23
Q225	B - 24
Q226	B - 23
Q230	D - 21
Q231	D - 22
Q232	D - 21
Q233	D - 22
Q347	E - 15
Q348	E - 15
Q349	E - 15
Q350	A - 16
Q351	D - 23
Q352	E - 23
Q355	B - 22
Q356	B - 17
Q357	B - 17

DIODE	
D004	C - 18
D006	D - 18
D101	D - 18
D102	A - 17
D103	B - 16
D104	B - 23
D201	D - 19
D202	B - 19
D204	A - 22
D206	B - 17
D207	B - 16
D208	B - 16
D209	D - 14
D210	E - 24

VARIABLE RESISTOR	
RV101	C - 16
RV102	B - 15
RV202	A - 19
RV203	A - 21
RV204	E - 22
RV205	E - 23

TP	
TP1	A - 16
TP2	A - 18
TP3	A - 17
TP4	A - 16
TP5	A - 17
TP6	A - 16
TP7	A - 18
TP8	C - 22
TP9	D - 22
TP10	D - 22

BB BOARD WAVEFORMS

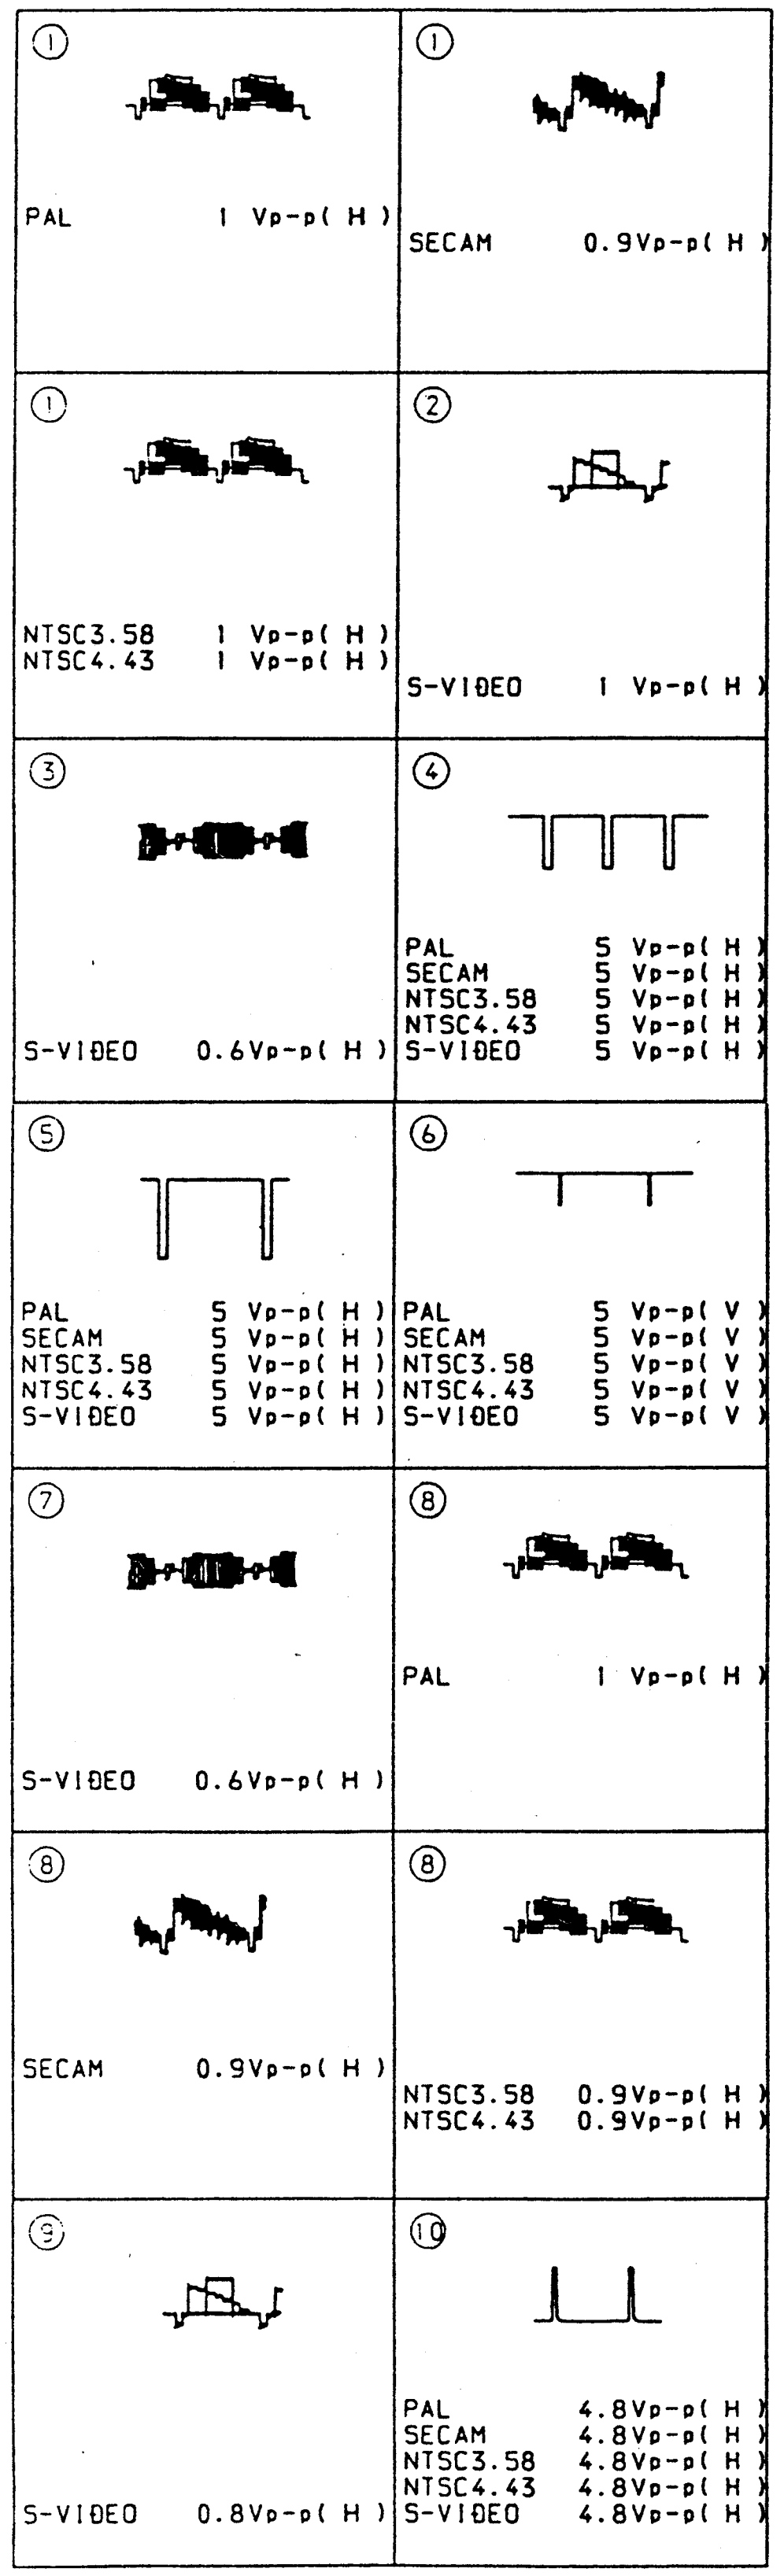
①
PAL 1 Vp-p(H)
①
SECAM 0.9Vp-p(H)
①
NTSC3.58 1 Vp-p(H)
NTSC4.43 1 Vp-p(H)
②
S-VIDEO 1 Vp-p(H)
③
S-VIDEO 0.6Vp-p(H)
④
PAL 5 Vp-p(H)
SECAM 5 Vp-p(H)
NTSC3.58 5 Vp-p(H)
NTSC4.43 5 Vp-p(H)
S-VIDEO 5 Vp-p(H)
⑤
PAL 5 Vp-p(H)
SECAM 5 Vp-p(H)
NTSC3.58 5 Vp-p(H)
NTSC4.43 5 Vp-p(H)
S-VIDEO 5 Vp-p(H)
⑥
PAL 5 Vp-p(V)
SECAM 5 Vp-p(V)
NTSC3.58 5 Vp-p(V)
NTSC4.43 5 Vp-p(V)
S-VIDEO 5 Vp-p(V)
⑦
S-VIDEO 0.6Vp-p(H)
⑧
PAL 1 Vp-p(H)
⑧
SECAM 0.9Vp-p(H)
⑧
NTSC3.58 0.9Vp-p(H)
NTSC4.43 0.9Vp-p(H)
⑨
S-VIDEO 0.8Vp-p(H)
⑩
PAL 4.8Vp-p(H)
SECAM 4.8Vp-p(H)
NTSC3.58 4.8Vp-p(H)
NTSC4.43 4.8Vp-p(H)
S-VIDEO 4.8Vp-p(H)

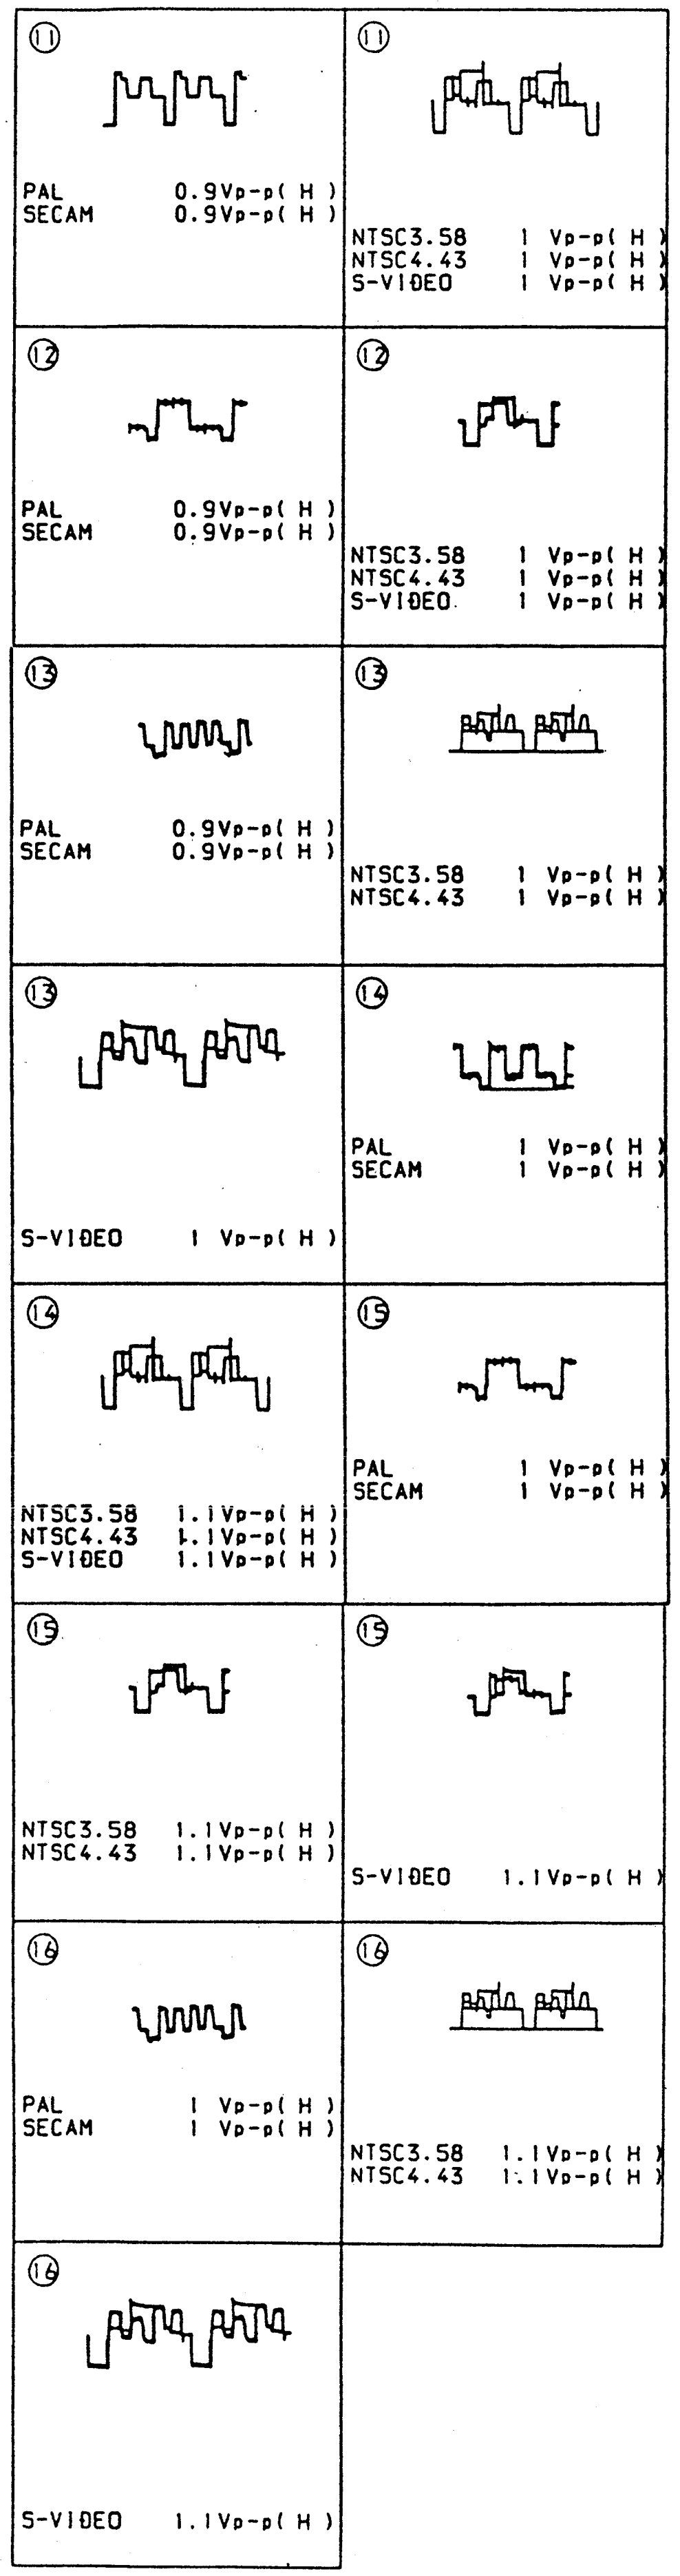
⑪
PAL 0.9Vp-p(H)
SECAM 0.9Vp-p(H)
⑪
NTSC3.58 1 Vp-p(H)
NTSC4.43 1 Vp-p(H)
S-VIDEO 1 Vp-p(H)
⑫
PAL 0.9Vp-p(H)
SECAM 0.9Vp-p(H)
⑫
NTSC3.58 1 Vp-p(H)
NTSC4.43 1 Vp-p(H)
S-VIDEO 1 Vp-p(H)
⑬
PAL 0.9Vp-p(H)
SECAM 0.9Vp-p(H)
⑬
NTSC3.58 1 Vp-p(H)
NTSC4.43 1 Vp-p(H)
⑬
S-VIDEO 1 Vp-p(H)
⑭
PAL 1 Vp-p(H)
SECAM 1 Vp-p(H)
⑭
NTSC3.58 1.1Vp-p(H)
NTSC4.43 1.1Vp-p(H)
S-VIDEO 1.1Vp-p(H)
⑮
PAL 1 Vp-p(H)
SECAM 1 Vp-p(H)
⑮
NTSC3.58 1.1Vp-p(H)
NTSC4.43 1.1Vp-p(H)
⑮
S-VIDEO 1.1Vp-p(H)
⑯
PAL 1 Vp-p(H)
SECAM 1 Vp-p(H)
⑯
NTSC3.58 1.1Vp-p(H)
NTSC4.43 1.1Vp-p(H)
⑯
S-VIDEO 1.1Vp-p(H)

BB BB BOARD (Page 131 – 134)

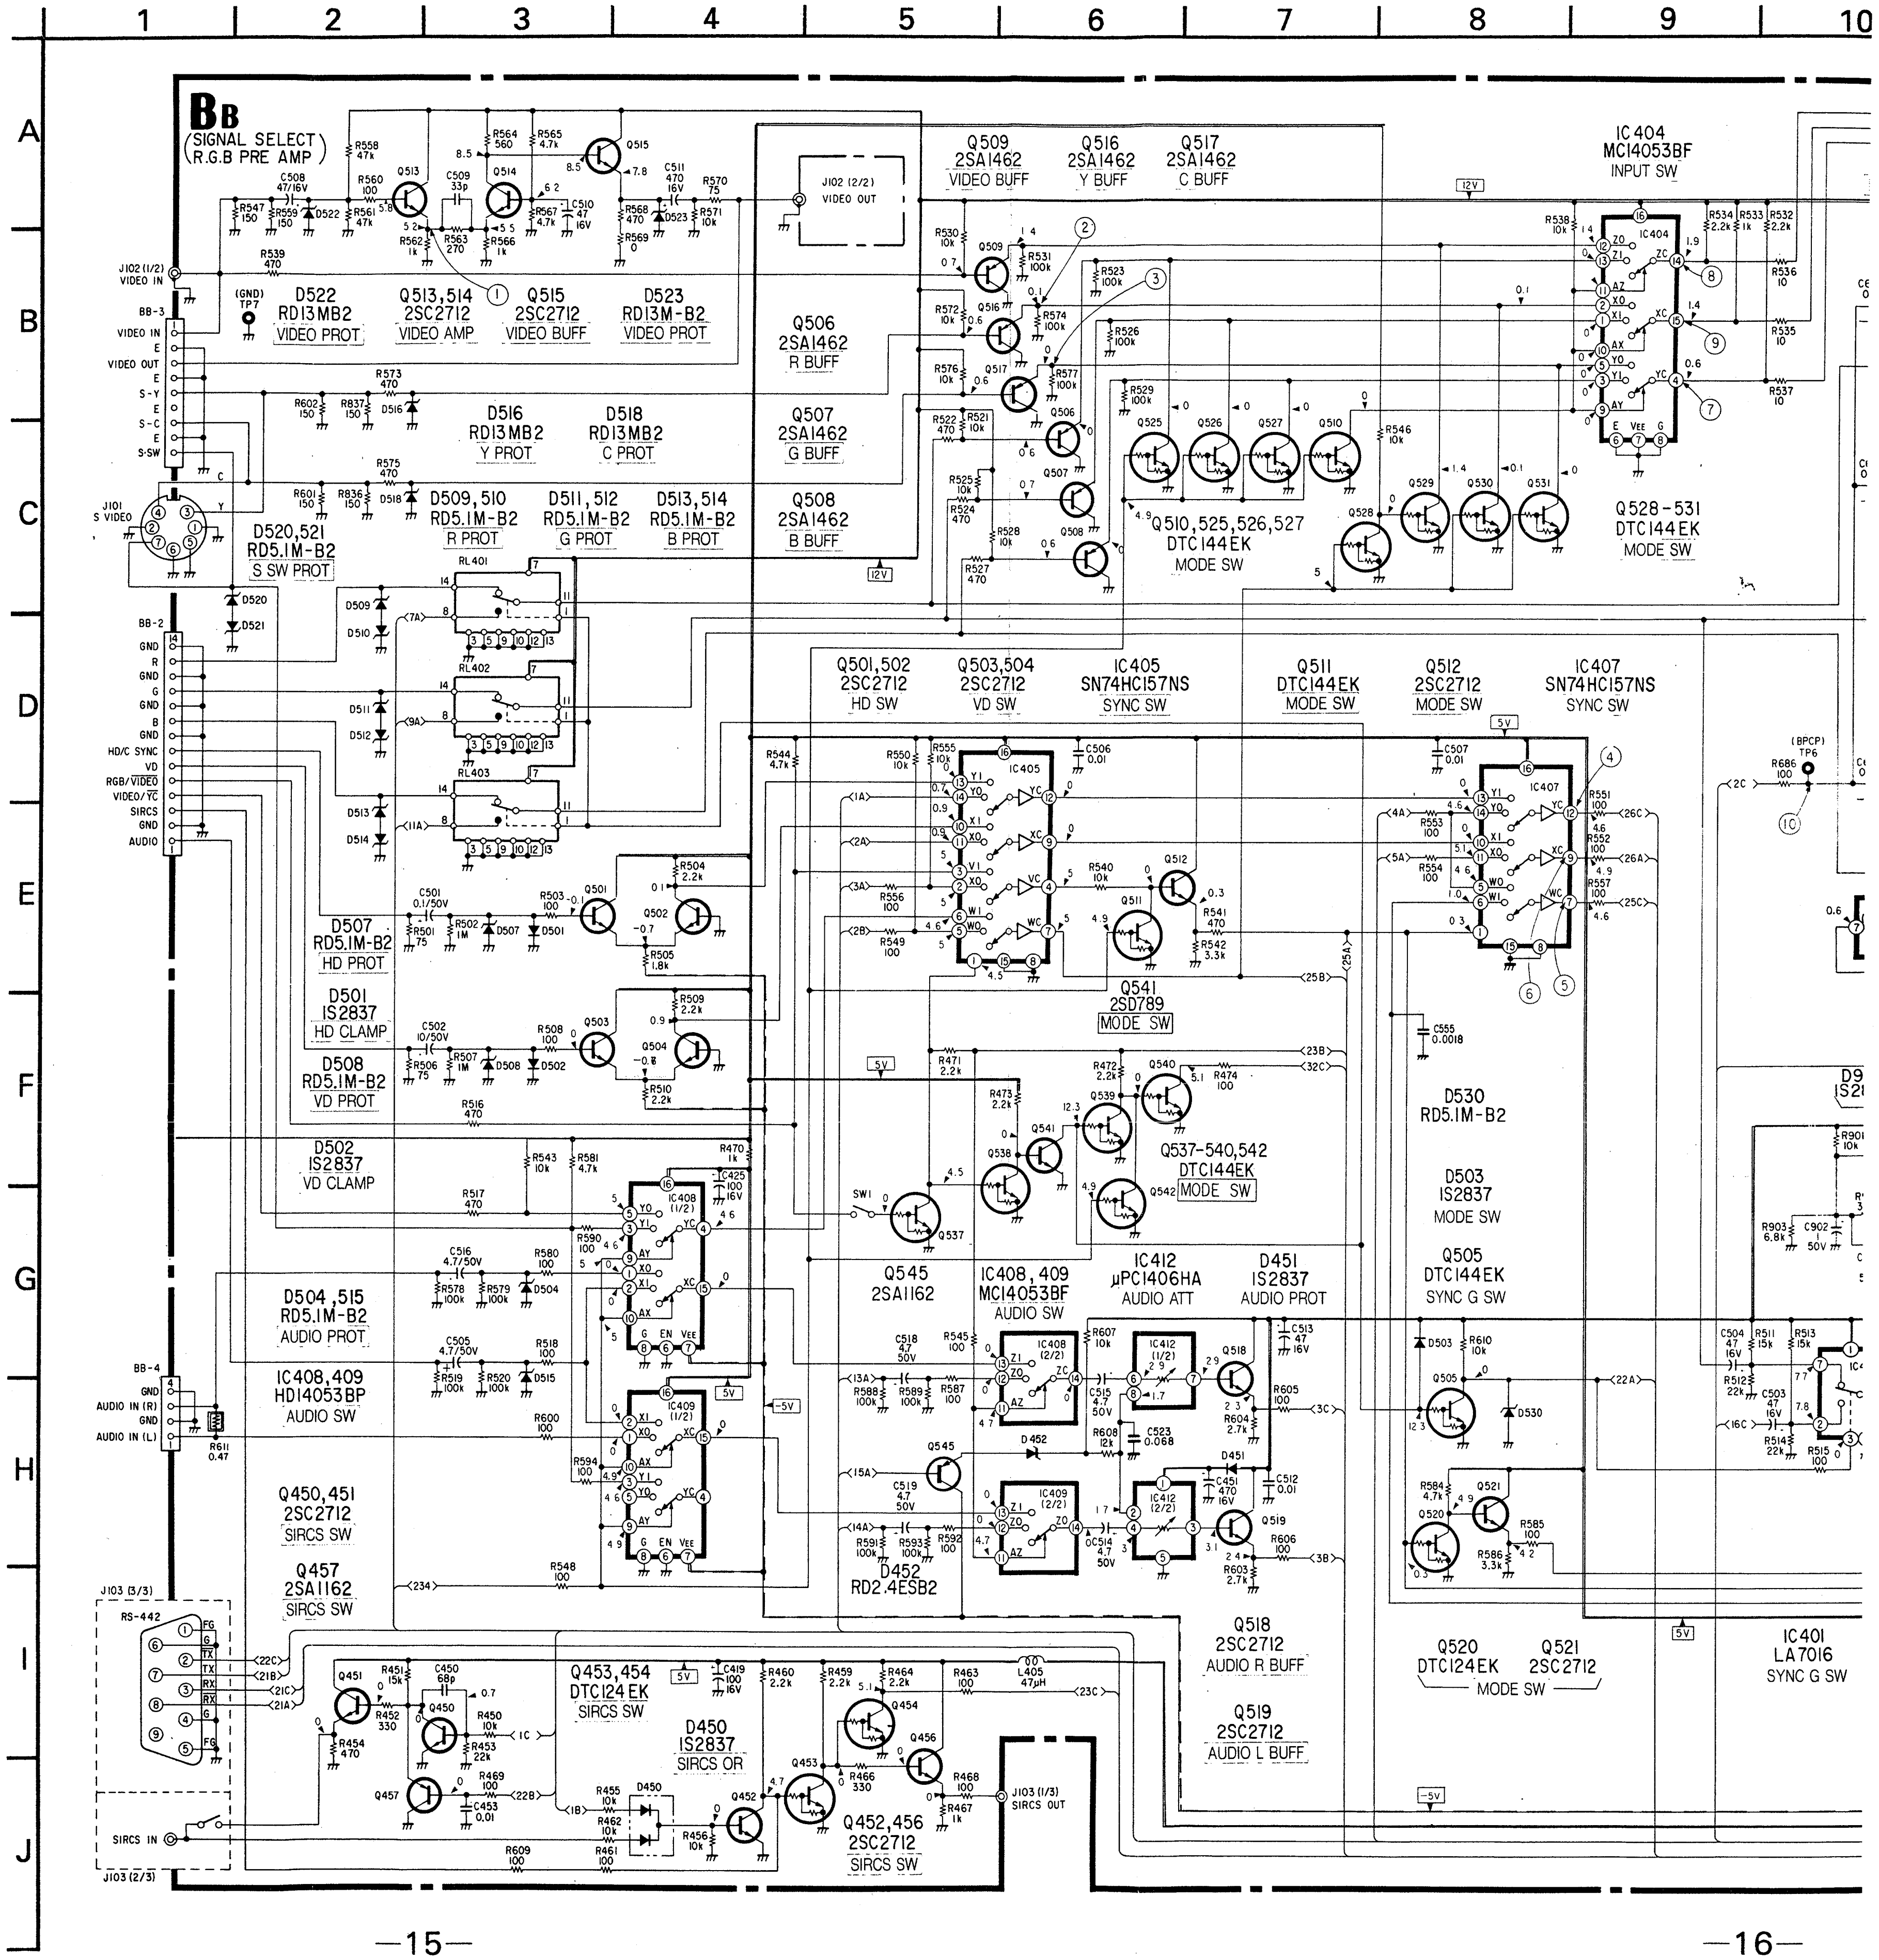
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G
H
I
J
BB
(SIGNAL SELECT)
(R.G.B PRE AMP)
J102 (1/2) VIDEO IN
BB-3
VIDEO IN
VIDEO OUT
S-Y
S-C
S-SW
J101 S VIDEO
BB-2
GND
R
G
B
HD/C SYNC
VD
RGB/VIDEO
VIDEO/YC
SIRCS
AUDIO
BB-4
AUDIO IN (R)
AUDIO IN (L)
J102 (2/2) VIDEO OUT
(GND) TP7
D522 RD13MB2 VIDEO PROT
Q513,514 2SC2712 VIDEO AMP
Q515 2SC2712 VIDEO BUFF
D523 RD13M-B2 VIDEO PROT
D516 RD13MB2 Y PROT
D518 RD13MB2 C PROT
D520,521 RD5.1M-B2 S SW PROT
D509,510 RD5.1M-B2 R PROT
D511,512 RD5.1M-B2 G PROT
D513,514 RD5.1M-B2 B PROT
RL401
RL402
RL403
Q506 2SA1462 R BUFF
Q507 2SA1462 G BUFF
Q508 2SA1462 B BUFF
Q509 2SA1462 VIDEO BUFF
Q516 2SA1462 Y BUFF
Q517 2SA1462 C BUFF
Q510,525,526,527 DTC144EK MODE SW
Q528-531 DTC144EK MODE SW
IC404 MC14053BF INPUT SW
Q501,502 2SC2712 HD SW
Q503,504 2SC2712 VD SW
IC405 SN74HC157NS SYNC SW
Q511 DTC144EK MODE SW
Q512 2SC2712 MODE SW
IC407 SN74HC157NS SYNC SW
D507 RD5.1M-B2 HD PROT
D501 1S2837 HD CLAMP
D508 RD5.1M-B2 VD PROT
D502 1S2837 VD CLAMP
Q541 2SD789 MODE SW
Q537-540,542 DTC144EK MODE SW
D530 RD5.1M-B2
D503 1S2837 MODE SW
Q505 DTC144EK SYNC G SW
D504,515 RD5.1M-B2 AUDIO PROT
IC408,409 HD14053BP AUDIO SW
Q545 2SA1162
IC408,409 MC14053BF AUDIO SW
IC412 μPC1406HA AUDIO ATT
D451 1S2837 AUDIO PROT
D452 RD2.4ESB2
Q518 2SC2712 AUDIO R BUFF
Q519 2SC2712 AUDIO L BUFF
Q520 DTC124EK
Q521 2SC2712
MODE SW
IC401 LA7016 SYNC G SW
Q450,451 2SC2712 SIRCS SW
Q457 2SA1162 SIRCS SW
Q453,454 DTC124EK SIRCS SW
D450 1S2837 SIRCS OR
Q452,456 2SC2712 SIRCS SW
J103 (3/3) RS-442
J103 (2/3) SIRCS IN
J103 (1/3) SIRCS OUT
(BPCP) TP6
12V
5V
-5V

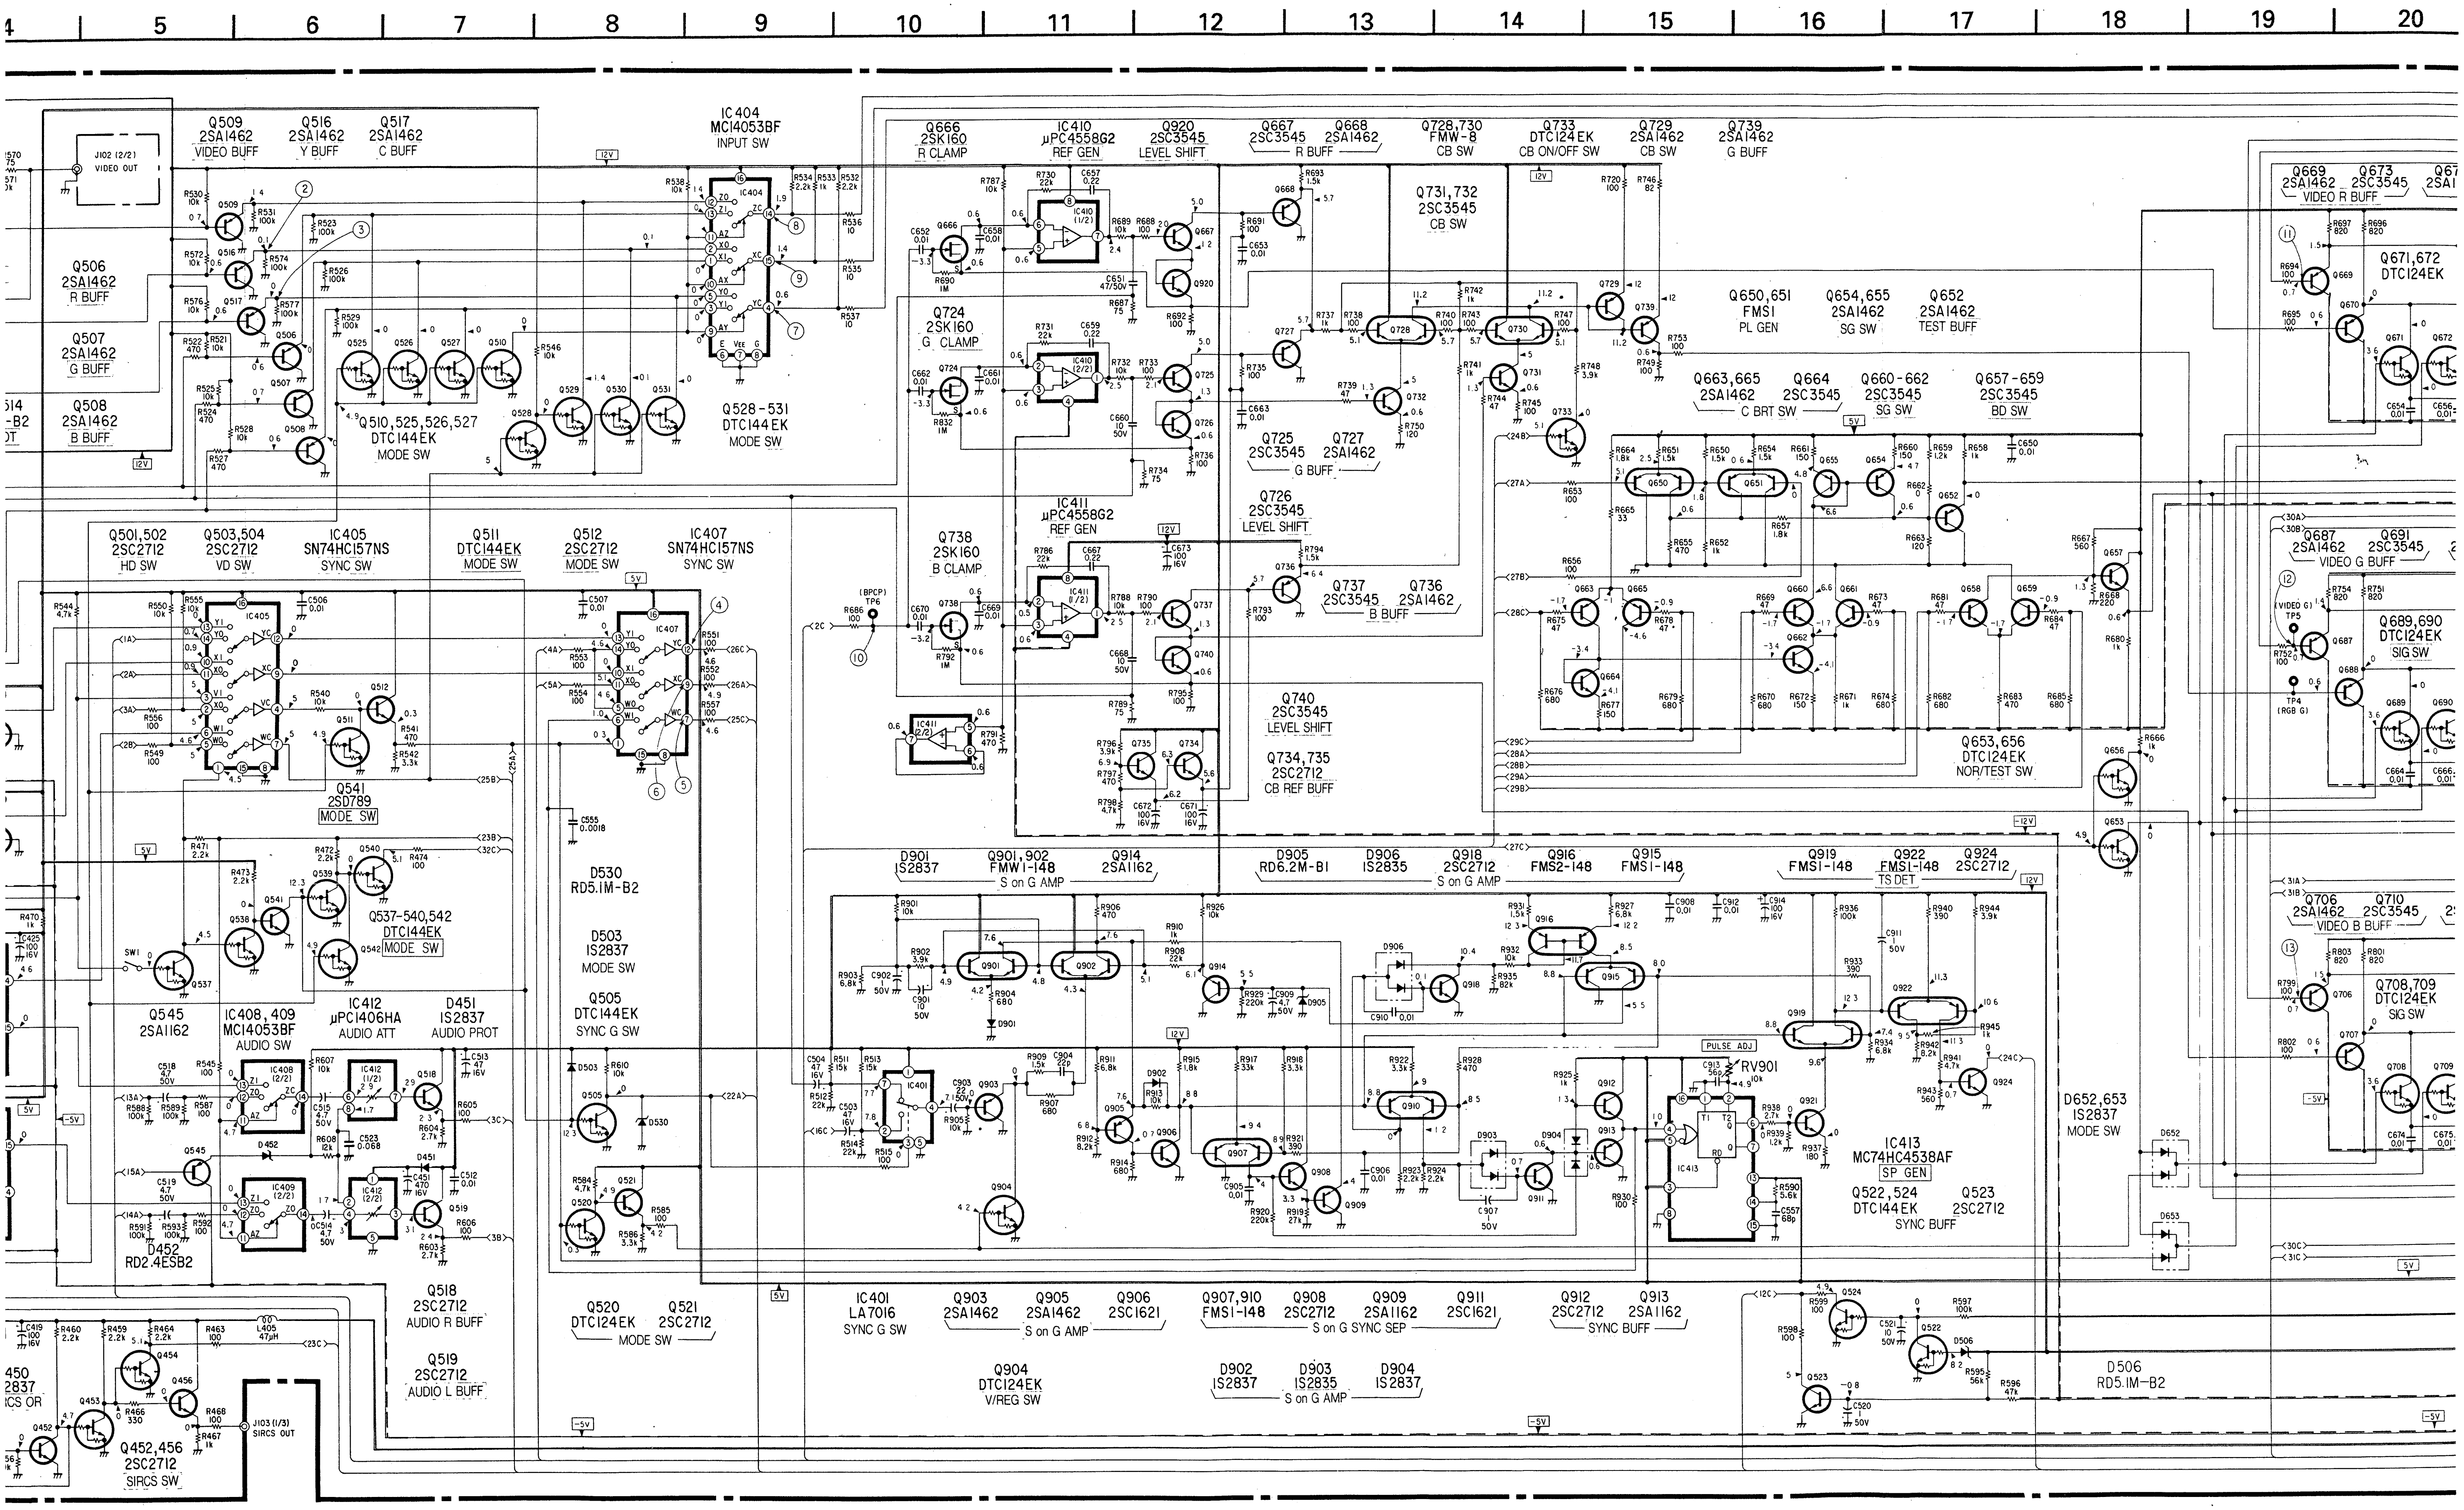
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
J102 (2/2) VIDEO OUT
Q509 2SA1462 VIDEO BUFF
Q516 2SA1462 Y BUFF
Q517 2SA1462 C BUFF
Q506 2SA1462 R BUFF
Q507 2SA1462 G BUFF
Q508 2SA1462 B BUFF
Q510,525,526,527 DTC144EK MODE SW
IC404 MC14053BF INPUT SW
Q528-531 DTC144EK MODE SW
Q666 2SK160 R CLAMP
IC410 µPC4558G2 REF GEN
Q920 2SC3545 LEVEL SHIFT
Q667 2SC3545 R BUFF
Q668 2SA1462
Q728,730 FMW-8 CB SW
Q733 DTC124EK CB ON/OFF SW
Q729 2SA1462 CB SW
Q739 2SA1462 G BUFF
Q731,732 2SC3545 CB SW
Q724 2SK160 G CLAMP
Q725 2SC3545
Q727 2SA1462
G BUFF
Q726 2SC3545 LEVEL SHIFT
IC411 µPC4558G2 REF GEN
Q738 2SK160 B CLAMP
Q737 2SC3545
Q736 2SA1462
B BUFF
Q740 2SC3545 LEVEL SHIFT
Q734,735 2SC2712 CB REF BUFF
Q650,651 FMS1 PL GEN
Q654,655 2SA1462 SG SW
Q652 2SA1462 TEST BUFF
Q663,665 2SA1462
Q664 2SC3545
C BRT SW
Q660-662 2SC3545 SG SW
Q657-659 2SC3545 BD SW
Q653,656 DTC124EK NOR/TEST SW
Q669 2SA1462
Q673 2SC3545
VIDEO R BUFF
Q671,672 DTC124EK
Q687 2SA1462
Q691 2SC3545
VIDEO G BUFF
Q689,690 DTC124EK SIG SW
Q706 2SA1462
Q710 2SC3545
VIDEO B BUFF
Q708,709 DTC124EK SIG SW
(VIDEO G) TP5
TP4 (RGB G)
(BPCP) TP6
Q501,502 2SC2712 HD SW
Q503,504 2SC2712 VD SW
IC405 SN74HC157NS SYNC SW
Q511 DTC144EK MODE SW
Q512 2SC2712 MODE SW
IC407 SN74HC157NS SYNC SW
Q541 2SD789 MODE SW
D530 RD5.1M-B2
D503 1S2837 MODE SW
Q505 DTC144EK SYNC G SW
Q537-540,542 DTC144EK
MODE SW
SW1
Q545 2SA1162
IC408,409 MC14053BF AUDIO SW
IC412 µPC1406HA AUDIO ATT
D451 1S2837 AUDIO PROT
D452 RD2.4ESB2
Q518 2SC2712 AUDIO R BUFF
Q519 2SC2712 AUDIO L BUFF
Q520 DTC124EK
Q521 2SC2712
MODE SW
Q452,456 2SC2712 SIRCS SW
J103 (1/3) SIRCS OUT
D901 1S2837
Q901,902 FMW1-148
S on G AMP
Q914 2SA1162
D905 RD6.2M-B1
D906 1S2835
Q918 2SC2712
S on G AMP
Q916 FMS2-148
Q915 FMS1-148
Q919 FMS1-148
Q922 FMS1-148
TS DET
Q924 2SC2712
PULSE ADJ
RV901
IC413 MC74HC4538AF SP GEN
Q522,524 DTC144EK
Q523 2SC2712
SYNC BUFF
D652,653 1S2837 MODE SW
IC401 LA7016 SYNC G SW
Q903 2SA1462
Q905 2SA1462
Q906 2SC1621
S on G AMP
Q907,910 FMS1-148
Q908 2SC2712
Q909 2SA1162
Q911 2SC1621
S on G SYNC SEP
Q912 2SC2712
Q913 2SA1162
SYNC BUFF
Q904 DTC124EK V/REG SW
D902 1S2837
D903 1S2835
D904 1S2837
S on G AMP
D506 RD5.1M-B2
12V
5V
-5V
-12V

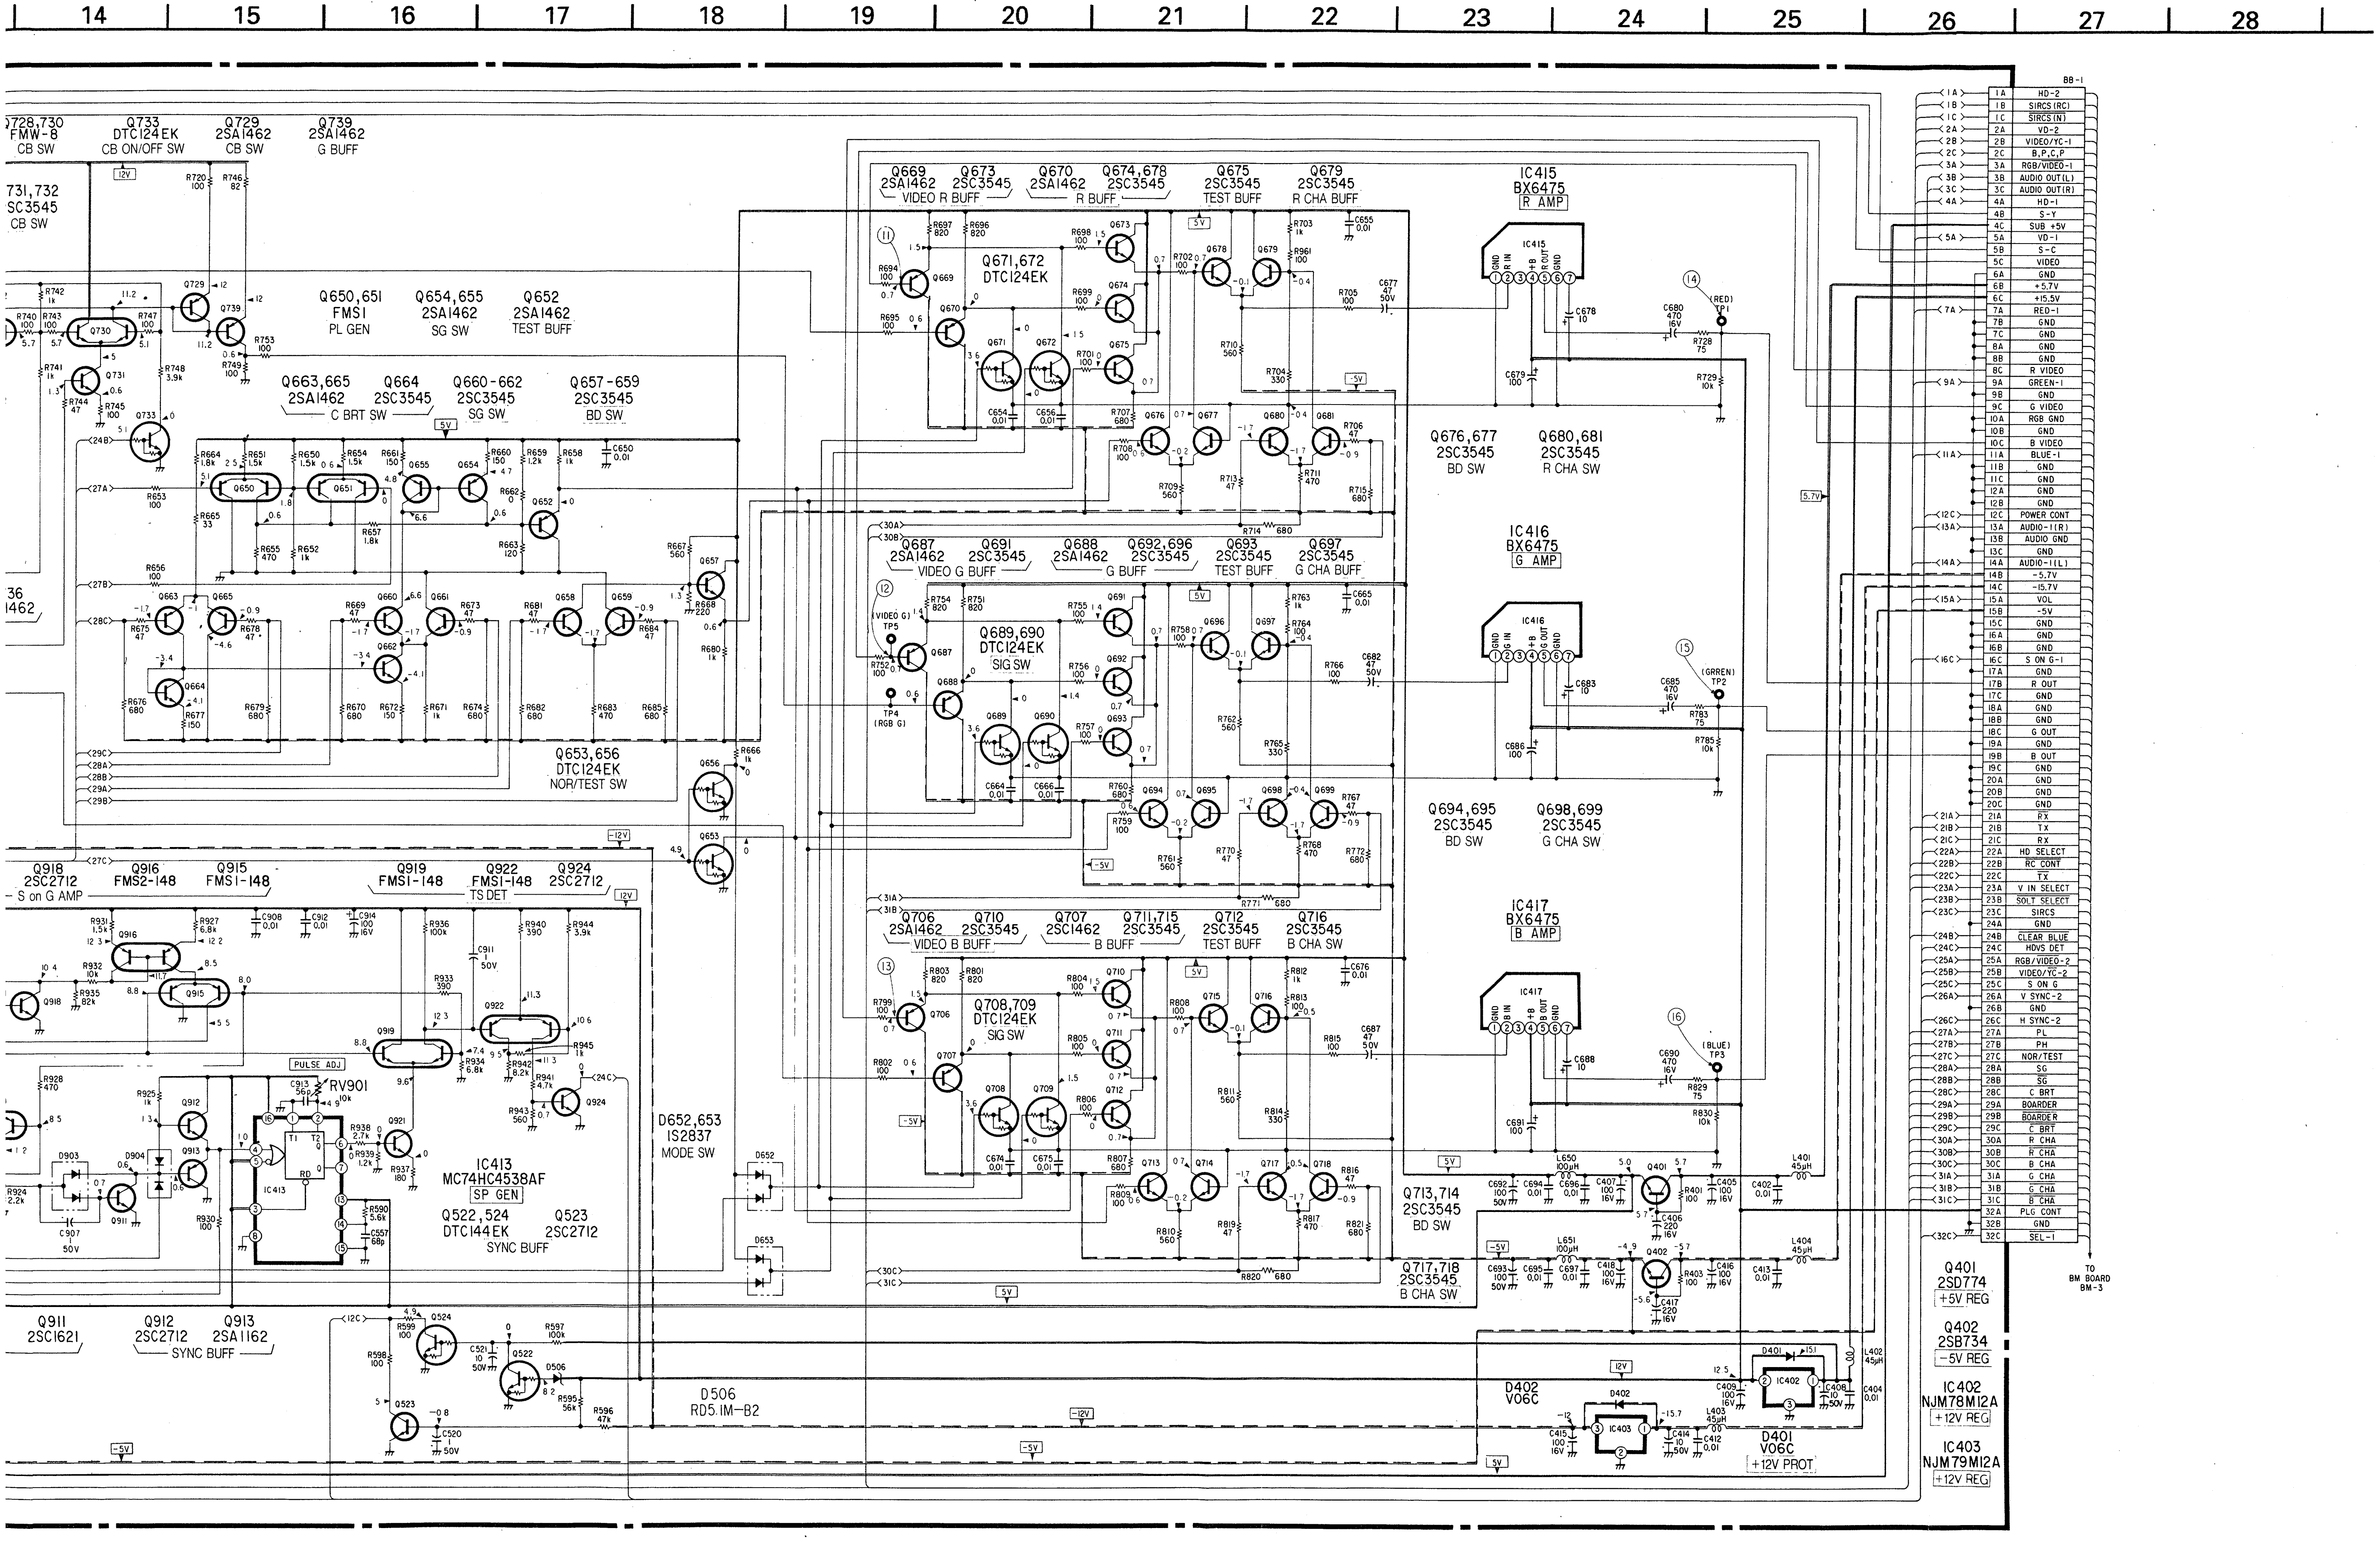
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
Q728,730 FMW-8 CB SW
Q733 DTC124EK CB ON/OFF SW
Q729 2SA1462 CB SW
Q739 2SA1462 G BUFF
Q731,732 2SC3545 CB SW
Q650,651 FMS1 PL GEN
Q654,655 2SA1462 SG SW
Q652 2SA1462 TEST BUFF
Q663,665 2SA1462 C BRT SW
Q664 2SC3545
Q660-662 2SC3545 SG SW
Q657-659 2SC3545 BD SW
Q653,656 DTC124EK NOR/TEST SW
Q669 2SA1462 VIDEO R BUFF
Q673 2SC3545
Q670 2SA1462
Q674,678 2SC3545 R BUFF
Q675 2SC3545 TEST BUFF
Q679 2SC3545 R CHA BUFF
Q671,672 DTC124EK
IC415 BX6475 R AMP
Q676,677 2SC3545 BD SW
Q680,681 2SC3545 R CHA SW
Q687 2SA1462 VIDEO G BUFF
Q691 2SC3545
Q688 2SA1462
Q692,696 2SC3545 G BUFF
Q693 2SC3545 TEST BUFF
Q697 2SC3545 G CHA BUFF
Q689,690 DTC124EK SIG SW
IC416 BX6475 G AMP
Q694,695 2SC3545 BD SW
Q698,699 2SC3545 G CHA SW
Q706 2SA1462 VIDEO B BUFF
Q710 2SC3545
Q707 2SC1462
Q711,715 2SC3545 B BUFF
Q712 2SC3545 TEST BUFF
Q716 2SC3545 B CHA SW
Q708,709 DTC124EK SIG SW
IC417 BX6475 B AMP
Q713,714 2SC3545 BD SW
Q717,718 2SC3545 B CHA SW
(RED) TP1
(GREEN) TP2
(BLUE) TP3
(VIDEO G) TP5
TP4 (RGB G)
Q918 2SC2712 S on G AMP
Q916 FMS2-148
Q915 FMS1-148
Q919 FMS1-148
Q922 FMS1-148 TS DET
Q924 2SC2712
PULSE ADJ
RV901 10k
IC413 MC74HC4538AF SP GEN
Q522,524 DTC144EK SYNC BUFF
Q523 2SC2712
D652,653 IS2837 MODE SW
D506 RD5.1M-B2
Q911 2SC1621
Q912 2SC2712
Q913 2SA1162
SYNC BUFF
Q401 2SD774 +5V REG
Q402 2SB734 -5V REG
IC402 NJM78M12A +12V REG
IC403 NJM79M12A +12V REG
D402 V06C
D401 V06C +12V PROT
TO BM BOARD BM-3
BB-1
1A HD-2
1B SIRCS(RC)
1C SIRCS(N)
2A VD-2
2B VIDEO/YC-1
2C B.P.C.P
3A RGB/VIDEO-1
3B AUDIO OUT(L)
3C AUDIO OUT(R)
4A HD-1
4B S-Y
4C SUB +5V
5A VD-1
5B S-C
5C VIDEO
6A GND
6B +5.7V
6C +15.5V
7A RED-1
7B GND
7C GND
8A GND
8B GND
8C R VIDEO
9A GREEN-1
9B GND
9C G VIDEO
10A RGB GND
10B GND
10C B VIDEO
11A BLUE-1
11B GND
11C GND
12A GND
12B GND
12C POWER CONT
13A AUDIO-1(R)
13B AUDIO GND
13C GND
14A AUDIO-1(L)
14B -5.7V
14C -15.7V
15A VOL
15B -5V
15C GND
16A GND
16B GND
16C S ON G-1
17A GND
17B R OUT
17C GND
18A GND
18B GND
18C G OUT
19A GND
19B B OUT
19C GND
20A GND
20B GND
20C GND
21A RX
21B TX
21C Rx
22A HD SELECT
22B RC CONT
22C TX
23A V IN SELECT
23B SOLT SELECT
23C SIRCS
24A GND
24B CLEAR BLUE
24C HDVS DET
25A RGB/VIDEO-2
25B VIDEO/YC-2
25C S ON G
26A V SYNC-2
26B GND
26C H SYNC-2
27A PL
27B PH
27C NOR/TEST
28A SG
28B SG
28C C BRT
29A BOARDER
29B BOARDER
29C C BRT
30A R CHA
30B R CHA
30C B CHA
31A G CHA
31B G CHA
31C B CHA
32A PLG CONT
32B GND
32C SEL-1

BB SIGNAL SELECT R•G•B PRE AMP

BB BOARD (COMPONENT SIDE)

IC	
IC401	F – 11
IC403	D – 8
IC404	C – 11
IC405	C – 10
IC407	E – 10
IC408	B – 8
IC409	C – 6
IC410	D – 7
IC411	C – 6
IC412	B – 8
IC413	C – 2
IC414	C – 1

TRANSISTOR	
Q401	F – 3
Q402	C – 8
Q504	B – 11
Q513	B – 2
Q516	B – 7
Q517	B – 7
Q539	D – 10
Q540	D – 10
Q541	D – 10
Q542	D – 10
Q545	B – 7
Q650	D – 4
Q651	D – 4
Q671	D – 4
Q672	C – 4
Q673	C – 4
Q674	C – 4
Q689	C – 4
Q690	C – 4
Q691	B – 4
Q692	B – 4
Q708	B – 4
Q709	B – 4
Q710	B – 4
Q711	B – 4
Q725	C – 6
Q726	C – 6
Q727	C – 5
Q728	D – 5
Q730	D – 5
Q737	C – 6
Q901	A – 1
Q902	A – 2
Q905	B – 2
Q907	B – 2
Q910	B – 2
Q912	C – 2
Q914	B – 1
Q915	B – 2
Q916	B – 2
Q919	C – 2
Q922	B – 1

DIODE	
D401	F – 1
D402	D – 8
D652	A – 4
D653	A – 4
D902	B – 2
D904	C – 2

VARIABLE RESISTOR	
RV901	C – 2

– BB BOARD – (COMPONENT SIDE) (Page 135 – 139)

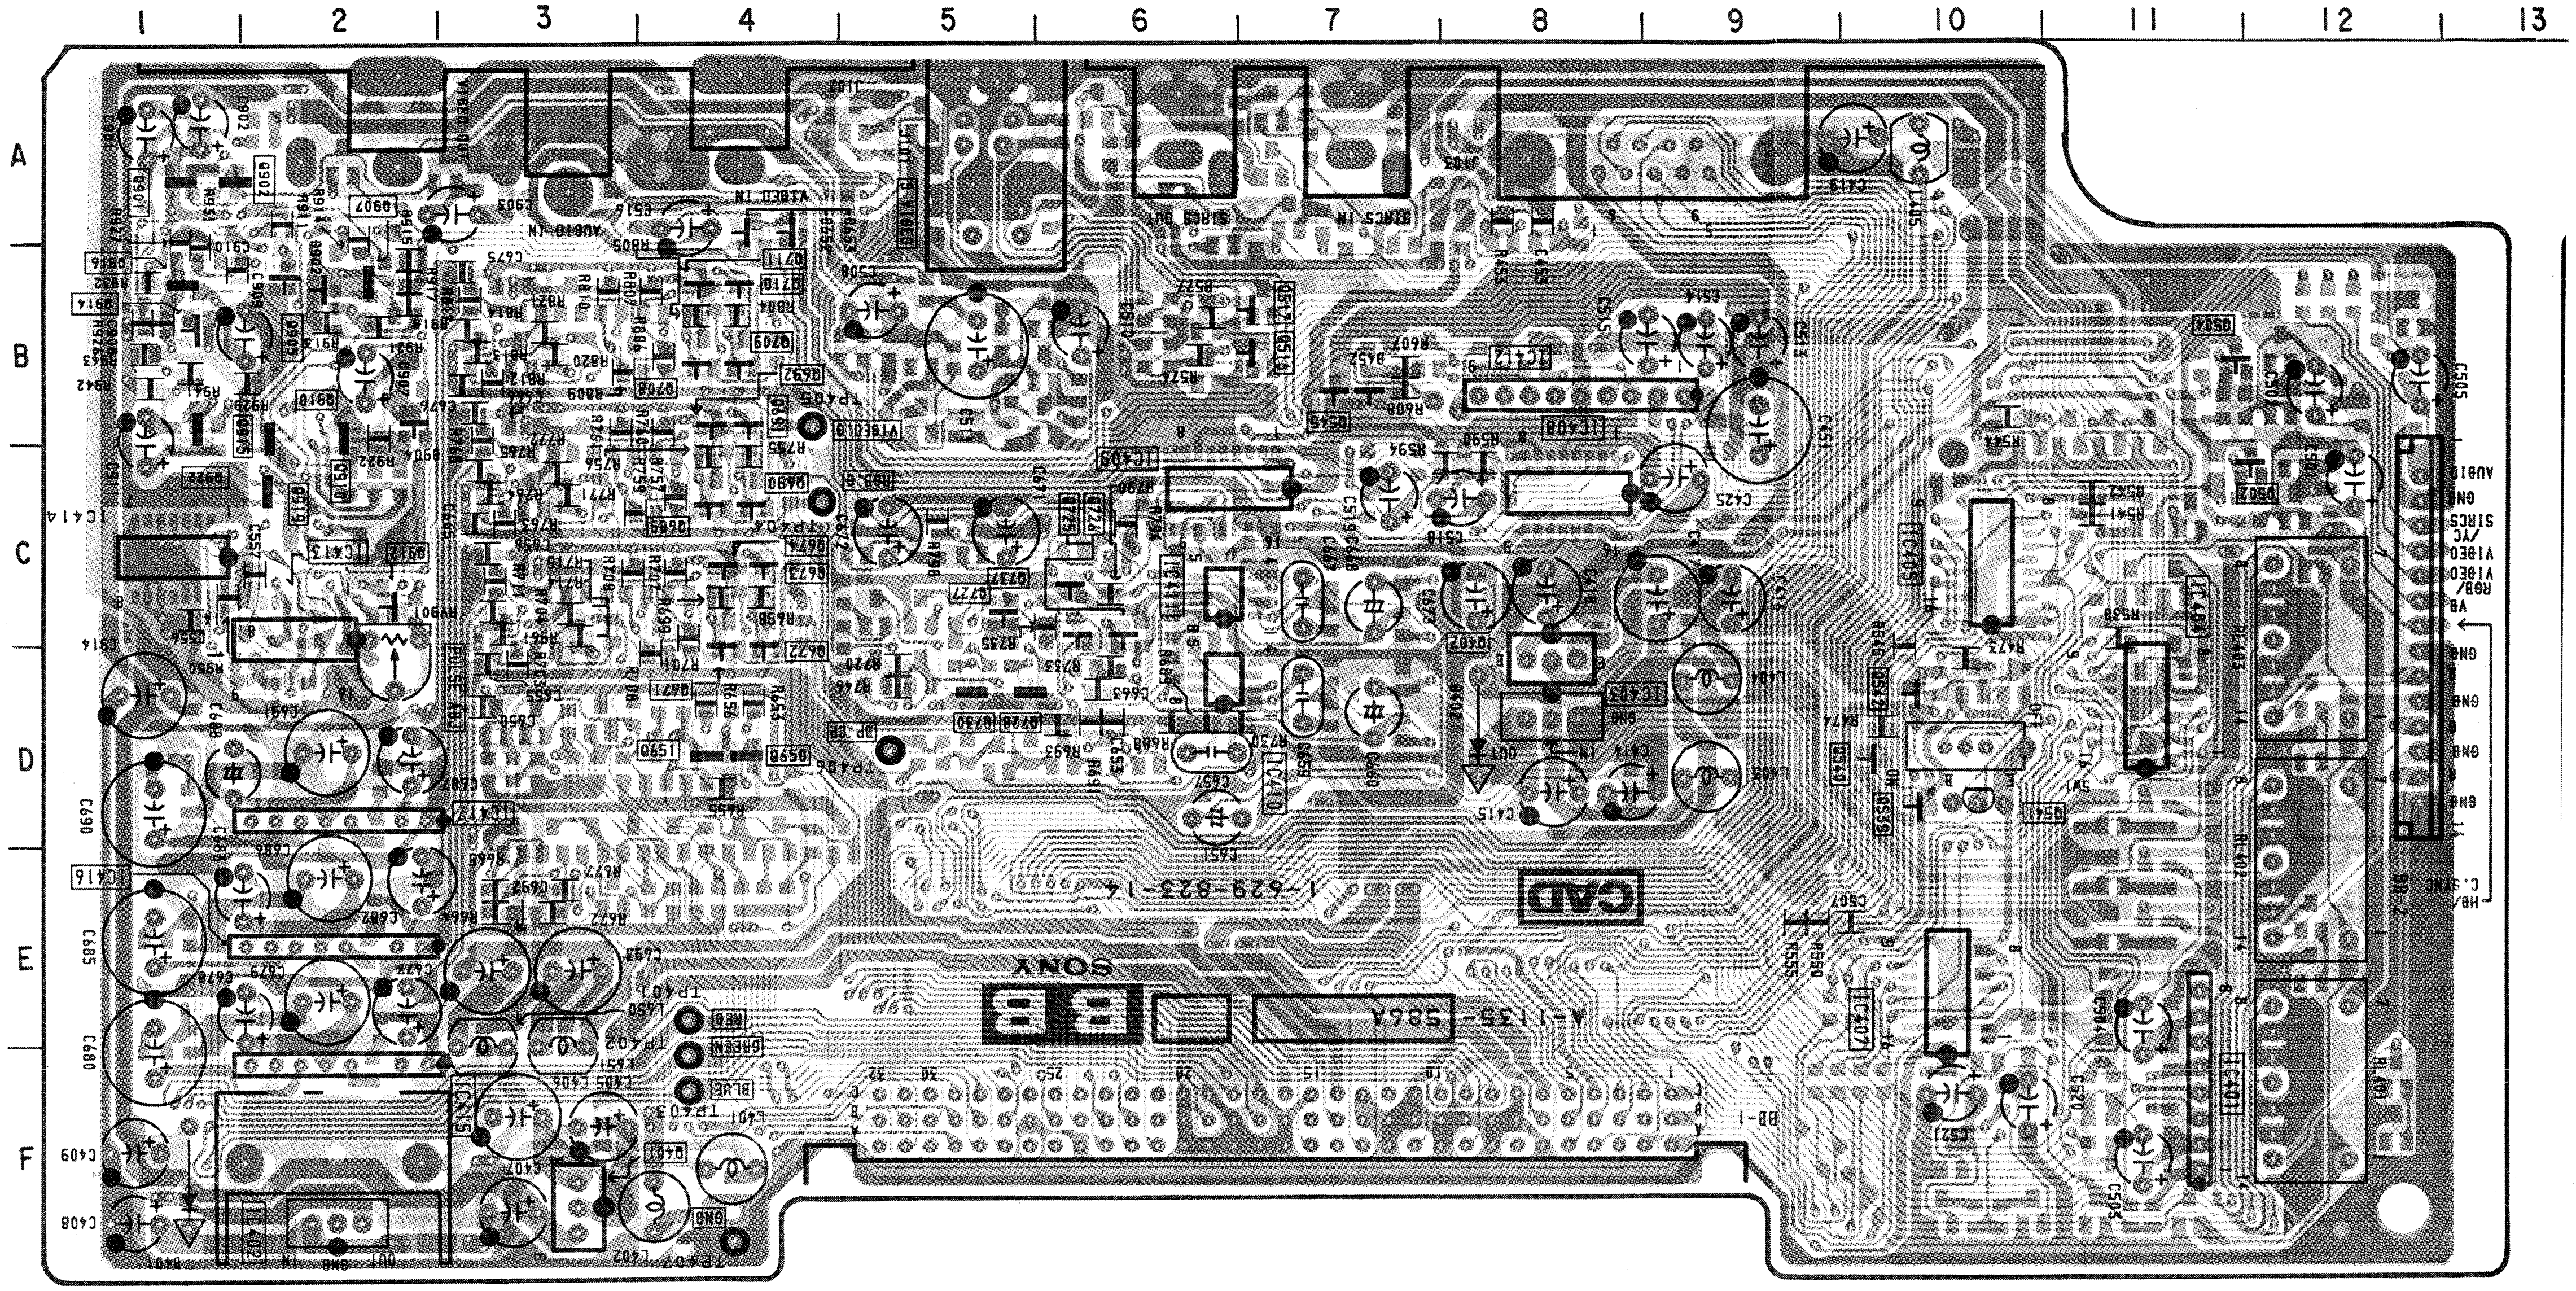

BB BOARD

IC-No.	PIN-No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
404	②	0.1	0.1	0.1	0.1	1.7
	④	0.1	0.8	0.8	0.8	2.8
	⑤	0	0	0	0	1.4
	⑫	1.4	1.6	1.4	1.4	0
	⑭	2.2	2.2	2.2	2.2	0.8
	⑯	1.6	1.6	1.6	1.6	3
405	⑥	4.6	4.6	4.6	4.6	0
	⑦	5	5	5	5	0
	⑬	0.1	0.1	0.1	0.1	0.8
407	⑤	4.8	4.9	4.8	4.8	4.8
408	⑬	4.6	4.6	4.6	4.6	0
	④	4.6	4.6	4.6	4.6	0
409	③	4.6	4.6	4.6	4.6	0

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
509	B	–	–	–	–	–
	C	–	–	–	–	–
	E	1.4	1.6	1.4	1.4	0
516	B	–	–	–	–	–
	C	–	–	–	–	–
	E	0.1	0.1	0.1	0.1	1.7
517	B	–	–	–	–	–
	C	–	–	–	–	–
	E	0	0	0	0	1.4
528	B	5	5	5	5	0
	C	0	0	0	0	4.1
	E	–	–	–	–	–
529	B	–	–	–	–	–
	C	1.4	1.6	1.4	1.4	0
	E	–	–	–	–	–

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
530	B	–	–	–	–	–
	C	0.1	0.1	0.1	0.1	1.7
	E	–	–	–	–	–
531	B	–	–	–	–	–
	C	0	0	0	0	1.4
	E	–	–	–	–	–
650	1	–	–	–	–	–
	2	–	–	–	–	–
	3	5.1	5.1	5.1	5.1	1.8
	4	–	–	–	–	–
	5	1.8	1.8	1.8	1.8	5.1
		–	–	–	–	–
651	1	–	–	–	–	–
	2	–	–	–	–	–
	3	0.8	1.8	1.8	1.8	0
	4	–	–	–	–	–
	5	0	0	0	0	1.8
		–	–	–	–	–

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
654	B	4.4	6.3	6.2	4.3	4.9
	C	–	–	–	–	–
	E	–	–	–	–	–
655	B	4.4	6.3	6.2	4.3	4.9
	C	4.4	6.3	6.2	4.3	4.9
	E	–	–	–	–	–
660	B	–	–	–	–	–
	C	4.5	6.3	6.2	4.3	5.9
	E	–	–	–	–	–
739	B	–	–	–	–	–
	C	0.6	0.6	0.6	0.6	12
	E	12	12	12	12	0.6
740	B	–	–	–	–	–
	C	–	–	–	–	–
	E	6.4	0.6	6.4	0.6	0.6

(CONDUCTOR SIDE)

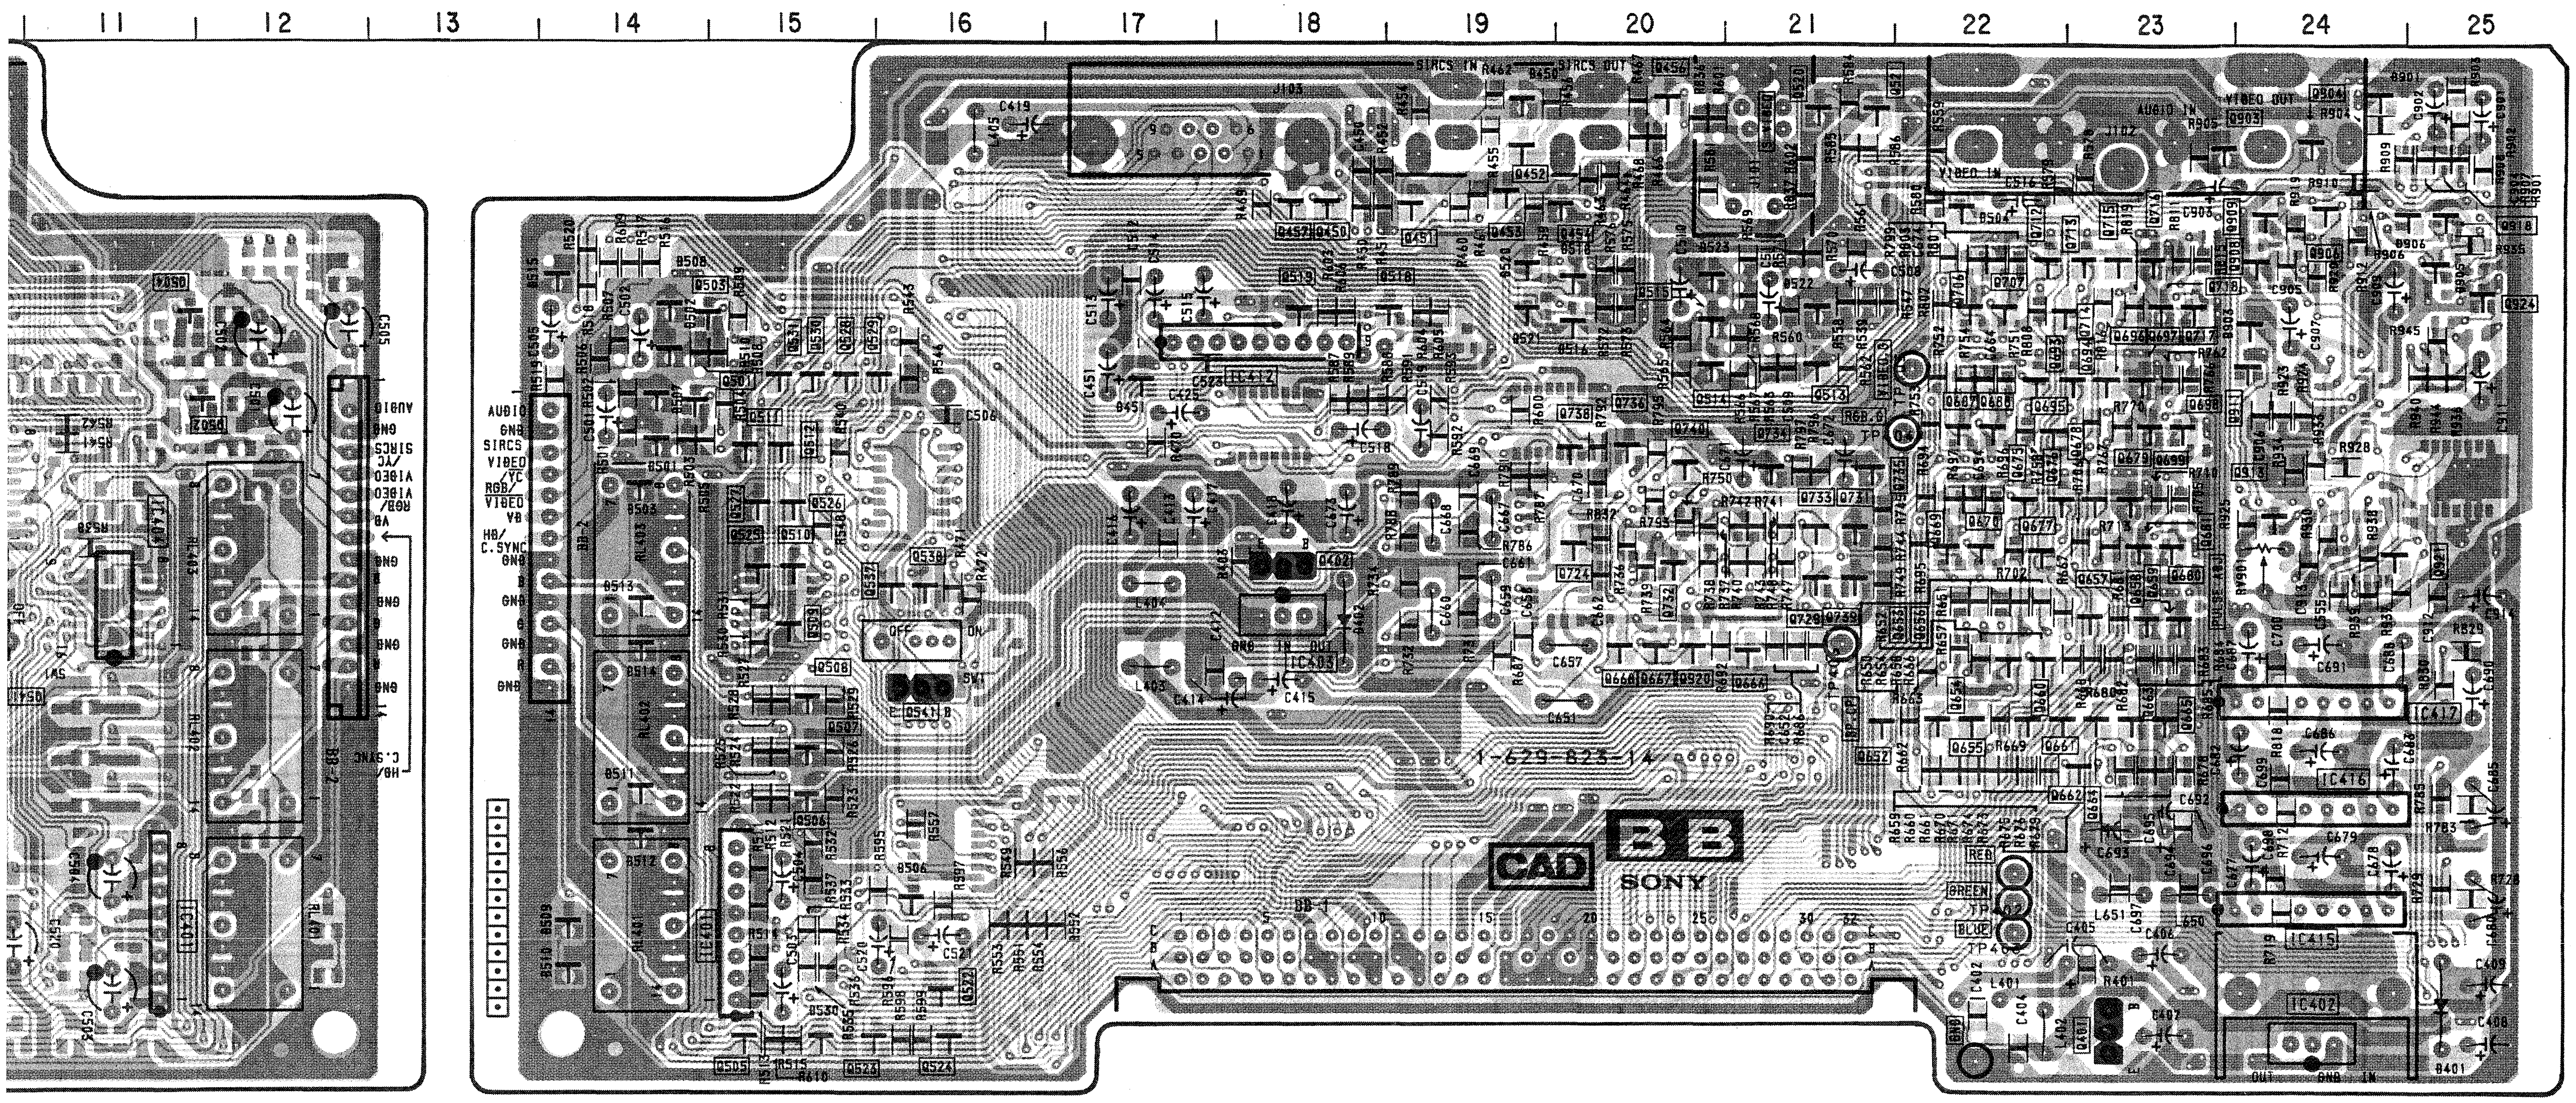
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
AUDIO
GND
SIRCS
VIDEO
/YC
RGB/
VIDEO
VB
HB/
C.SYNC
GND
BB-2
J103
SIRCS IN
SIRCS OUT
VIDEO IN
AUDIO IN
VIDEO OUT
J101
J102
IC401
IC402
IC403
IC412
IC415
IC416
IC417
RL401
RL402
RL403
OFF
ON
S541
IN
OUT
GND
RGB
TP451
RED
GREEN
BLUE
1-629-823-14
CAD
BB
SONY
BB-1
1
5
10
15
20
25
30
32

NTSC 4.43	S-VIDEO
4.3	4.9
–	–
–	–
4.3	4.9
4.3	4.9
–	–
–	–
4.3	5.9
–	–
–	–
0.6	12
12	0.6
–	–
–	–
0.6	0.6

- ▨ : Pattern from the side which enables seeing.
- ▩ : Pattern of the rear side.

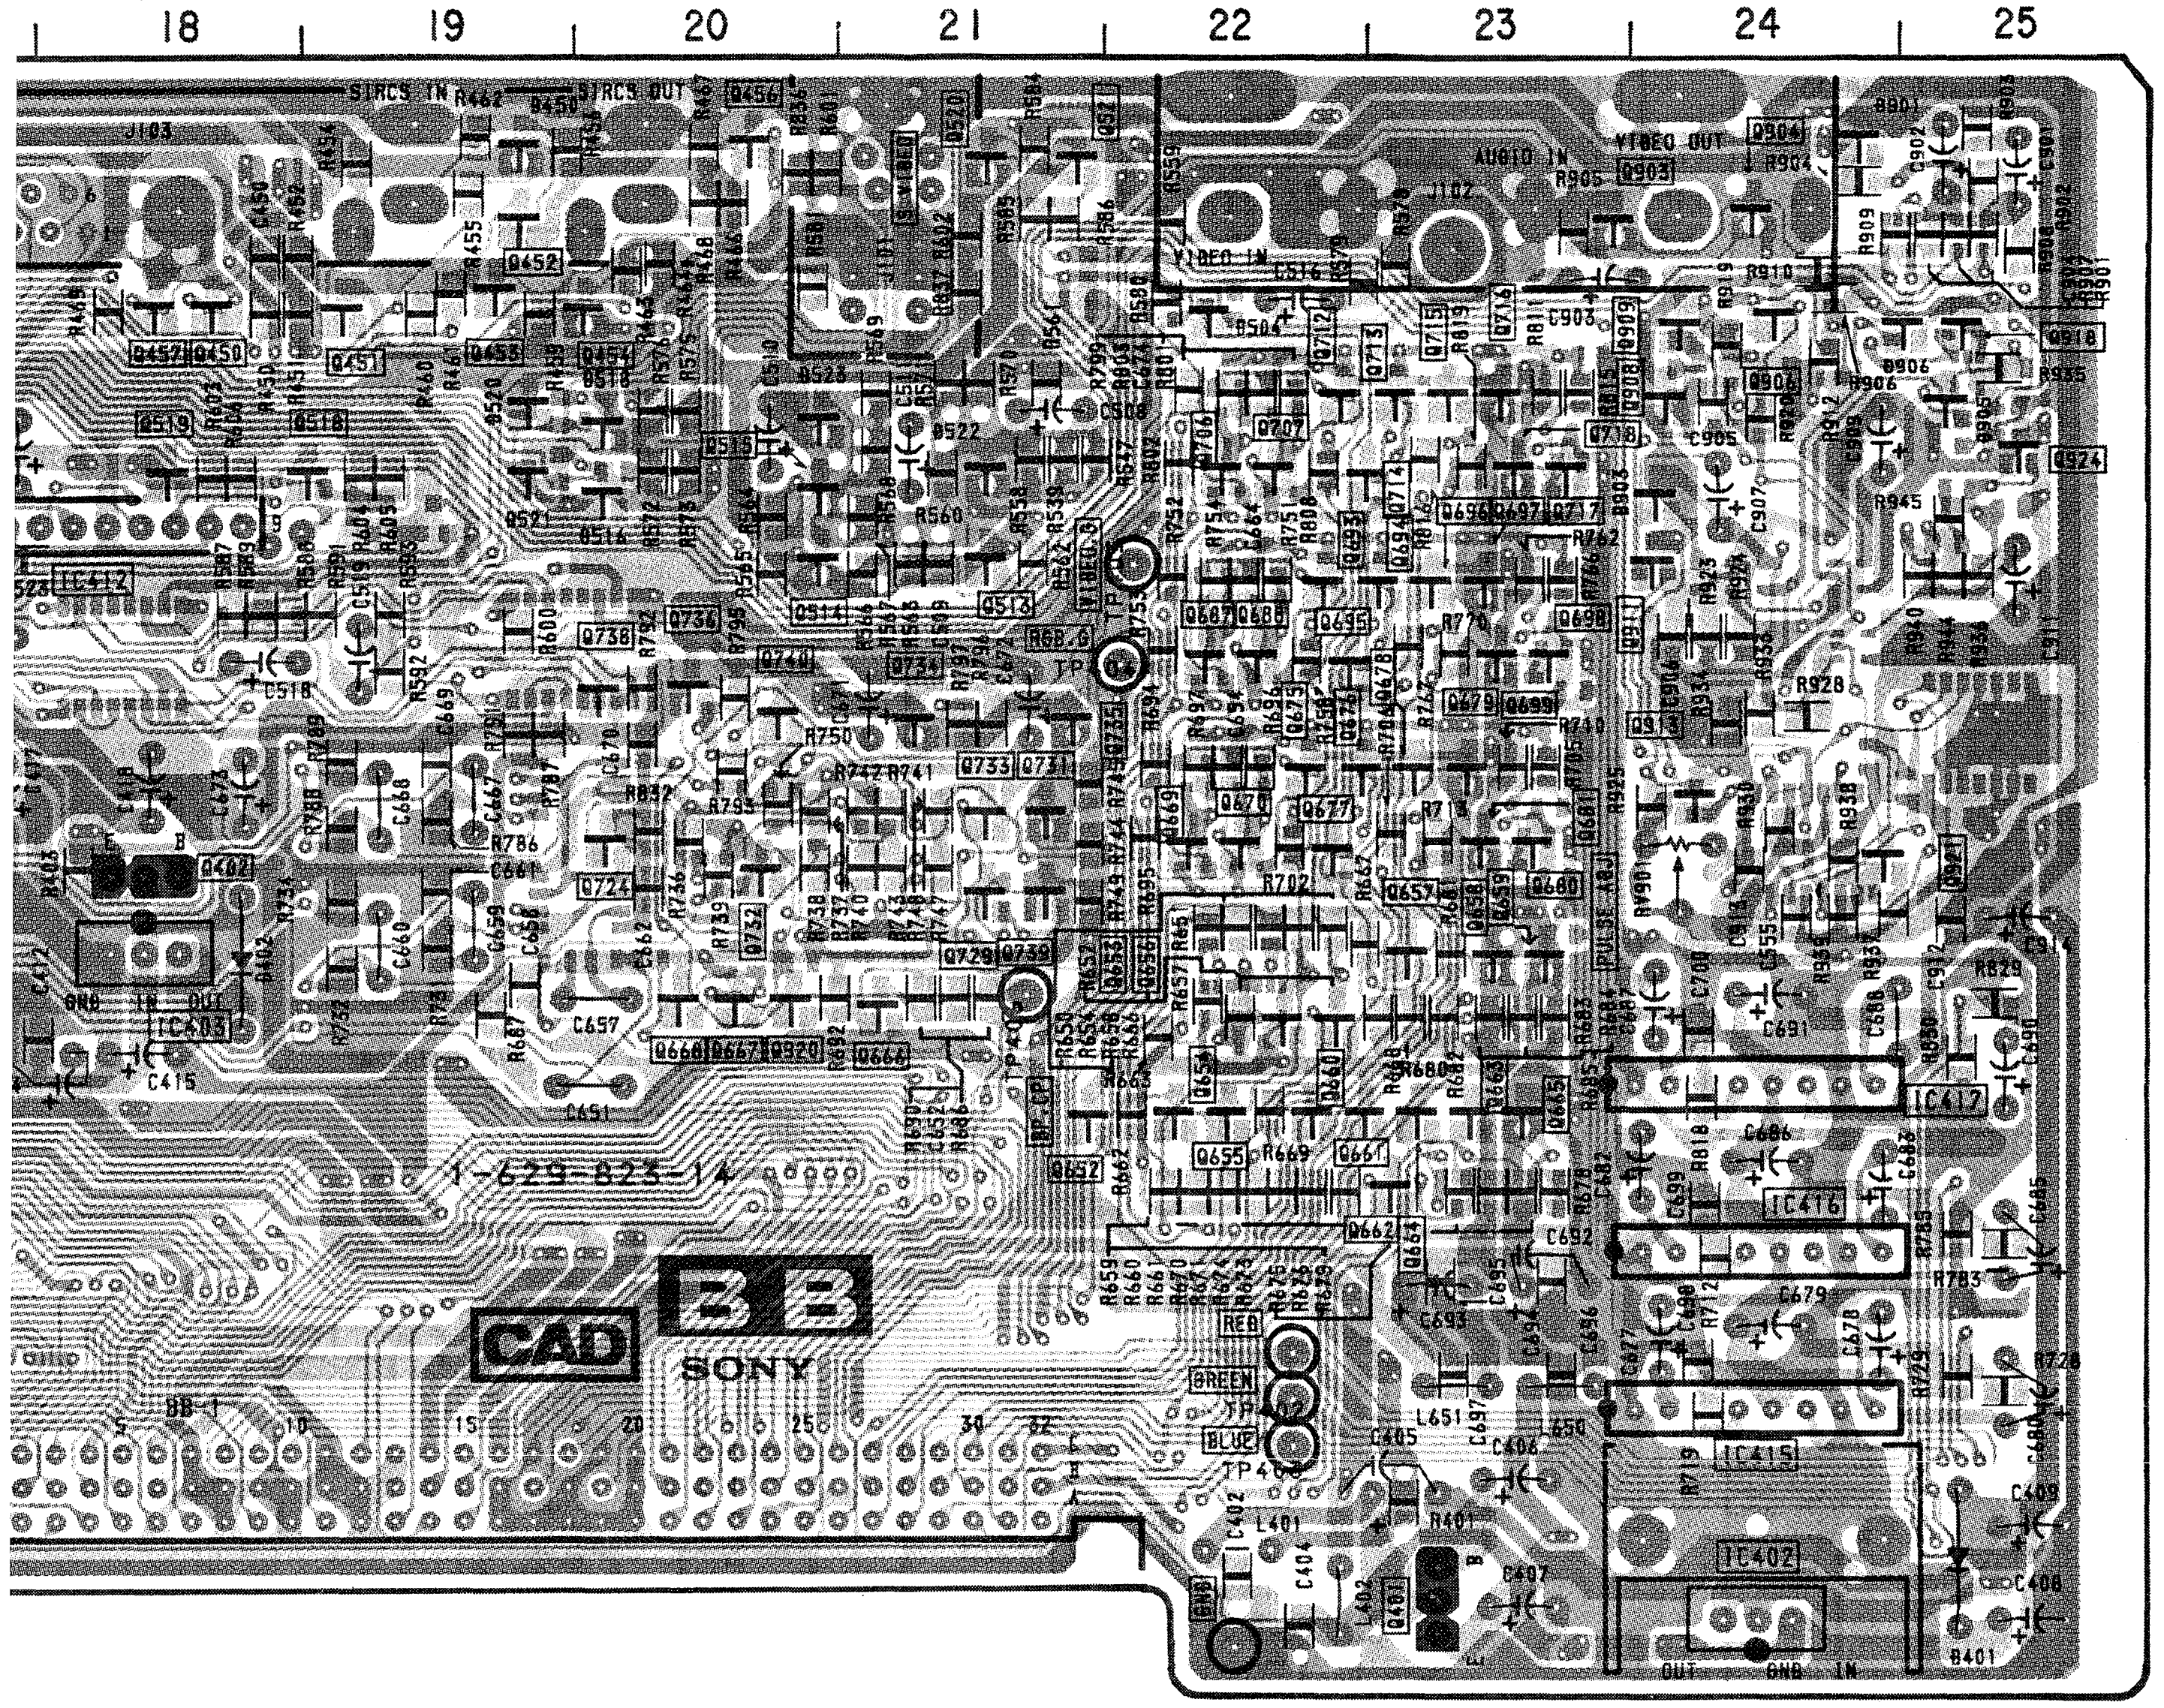
18
19
20
21
22
23
24
25
S1RCS IN
S1RCS OUT
J103
VIDEO IN
AUDIO IN
VIDEO OUT
J102
IC412
IC403
IC417
IC416
IC415
IC402
1-629-823-14
CAD
BB
SONY
RED
GREEN
BLUE
TP401
OUT
GND
IN
PULSE ADJ

- ░ : Pattern from the side which enables seeing.
- ▒ : Pattern of the rear side.

BB BOARD (CONDUCTOR SIDE)

IC	
IC402	F - 24
IC403	D - 18
IC412	B - 18
IC415	F - 24
IC416	E - 24
IC417	D - 25

TRANSISTOR	
Q401	F - 23
Q402	D - 18
Q450	B - 18
Q451	B - 19
Q452	A - 19
Q453	B - 19
Q454	B - 20
Q456	A - 20
Q457	B - 18
Q501	B - 15
Q502	C - 11
Q503	B - 14
Q505	F - 15
Q506	E - 15
Q507	E - 15
Q508	D - 15
Q509	D - 15
Q510	C - 15
Q511	C - 15
Q512	C - 15
Q514	C - 20
Q515	B - 20
Q518	B - 19
Q519	B - 18
Q520	A - 21
Q521	A - 21
Q522	F - 16
Q523	F - 15
Q524	F - 16
Q525	C - 15
Q526	C - 15
Q527	C - 15
Q528	B - 15
Q529	B - 15
Q530	B - 15
Q531	B - 15
Q537	D - 15
Q538	D - 16
Q541	D - 16
Q652	E - 21
Q653	D - 21
Q654	D - 22
Q655	E - 22
Q656	D - 22
Q657	D - 23
Q658	D - 23
Q659	D - 23
Q660	D - 22
Q661	E - 22
Q662	E - 22
Q663	D - 23
Q664	E - 23
Q665	D - 23
Q666	D - 21
Q667	D - 20
Q668	D - 20
Q669	C - 22
Q670	C - 22
Q675	C - 22
Q676	C - 22
Q677	C - 22
Q678	C - 23
Q679	C - 23
Q680	D - 23
Q681	C - 23
Q687	C - 22
Q688	C - 22
Q693	B - 22
Q694	B - 23
Q695	C - 22
Q696	B - 23
Q697	B - 23
Q698	C - 23
Q699	C - 23
Q706	B - 22
Q707	B - 22
Q712	B - 22
Q713	B - 23
Q714	B - 23
Q715	B - 23
Q716	A - 23
Q717	B - 23
Q718	B - 23
Q724	D - 20
Q729	D - 21
Q731	C - 21
Q732	D - 20
Q733	C - 21
Q734	C - 21
Q735	C - 21
Q736	C - 20
Q738	C - 20
Q739	D - 21
Q740	C - 20
Q903	A - 24
Q904	A - 24
Q906	B - 24
Q908	B - 24
Q909	B - 24
Q911	C - 23
Q913	C - 24
Q918	B - 25
Q920	D - 20
Q921	D - 25
Q924	B - 25

DIODE	
D401	F - 25
D402	D - 18
D450	A - 19
D451	C - 17
D452	B - 19
D501	C - 14
D502	B - 14
D503	C - 14
D504	B - 22
D506	E - 16
D507	C - 14
D508	B - 14
D509	F - 14
D510	F - 14
D511	E - 14
D512	E - 14
D513	D - 14
D514	D - 14
D515	B - 14
D516	B - 20
D518	B - 20
D520	B - 19
D521	B - 19
D522	B - 21
D523	B - 20
D530	F - 15
D901	A - 24
D903	B - 24
D905	B - 25
D906	B - 25

TP	
TP401	E - 22
TP402	F - 22
TP403	F - 22
TP404	C - 22
TP405	B - 22
TP406	D - 21
TP407	F - 22

Y BOARD (Page 219 – 222)

Y

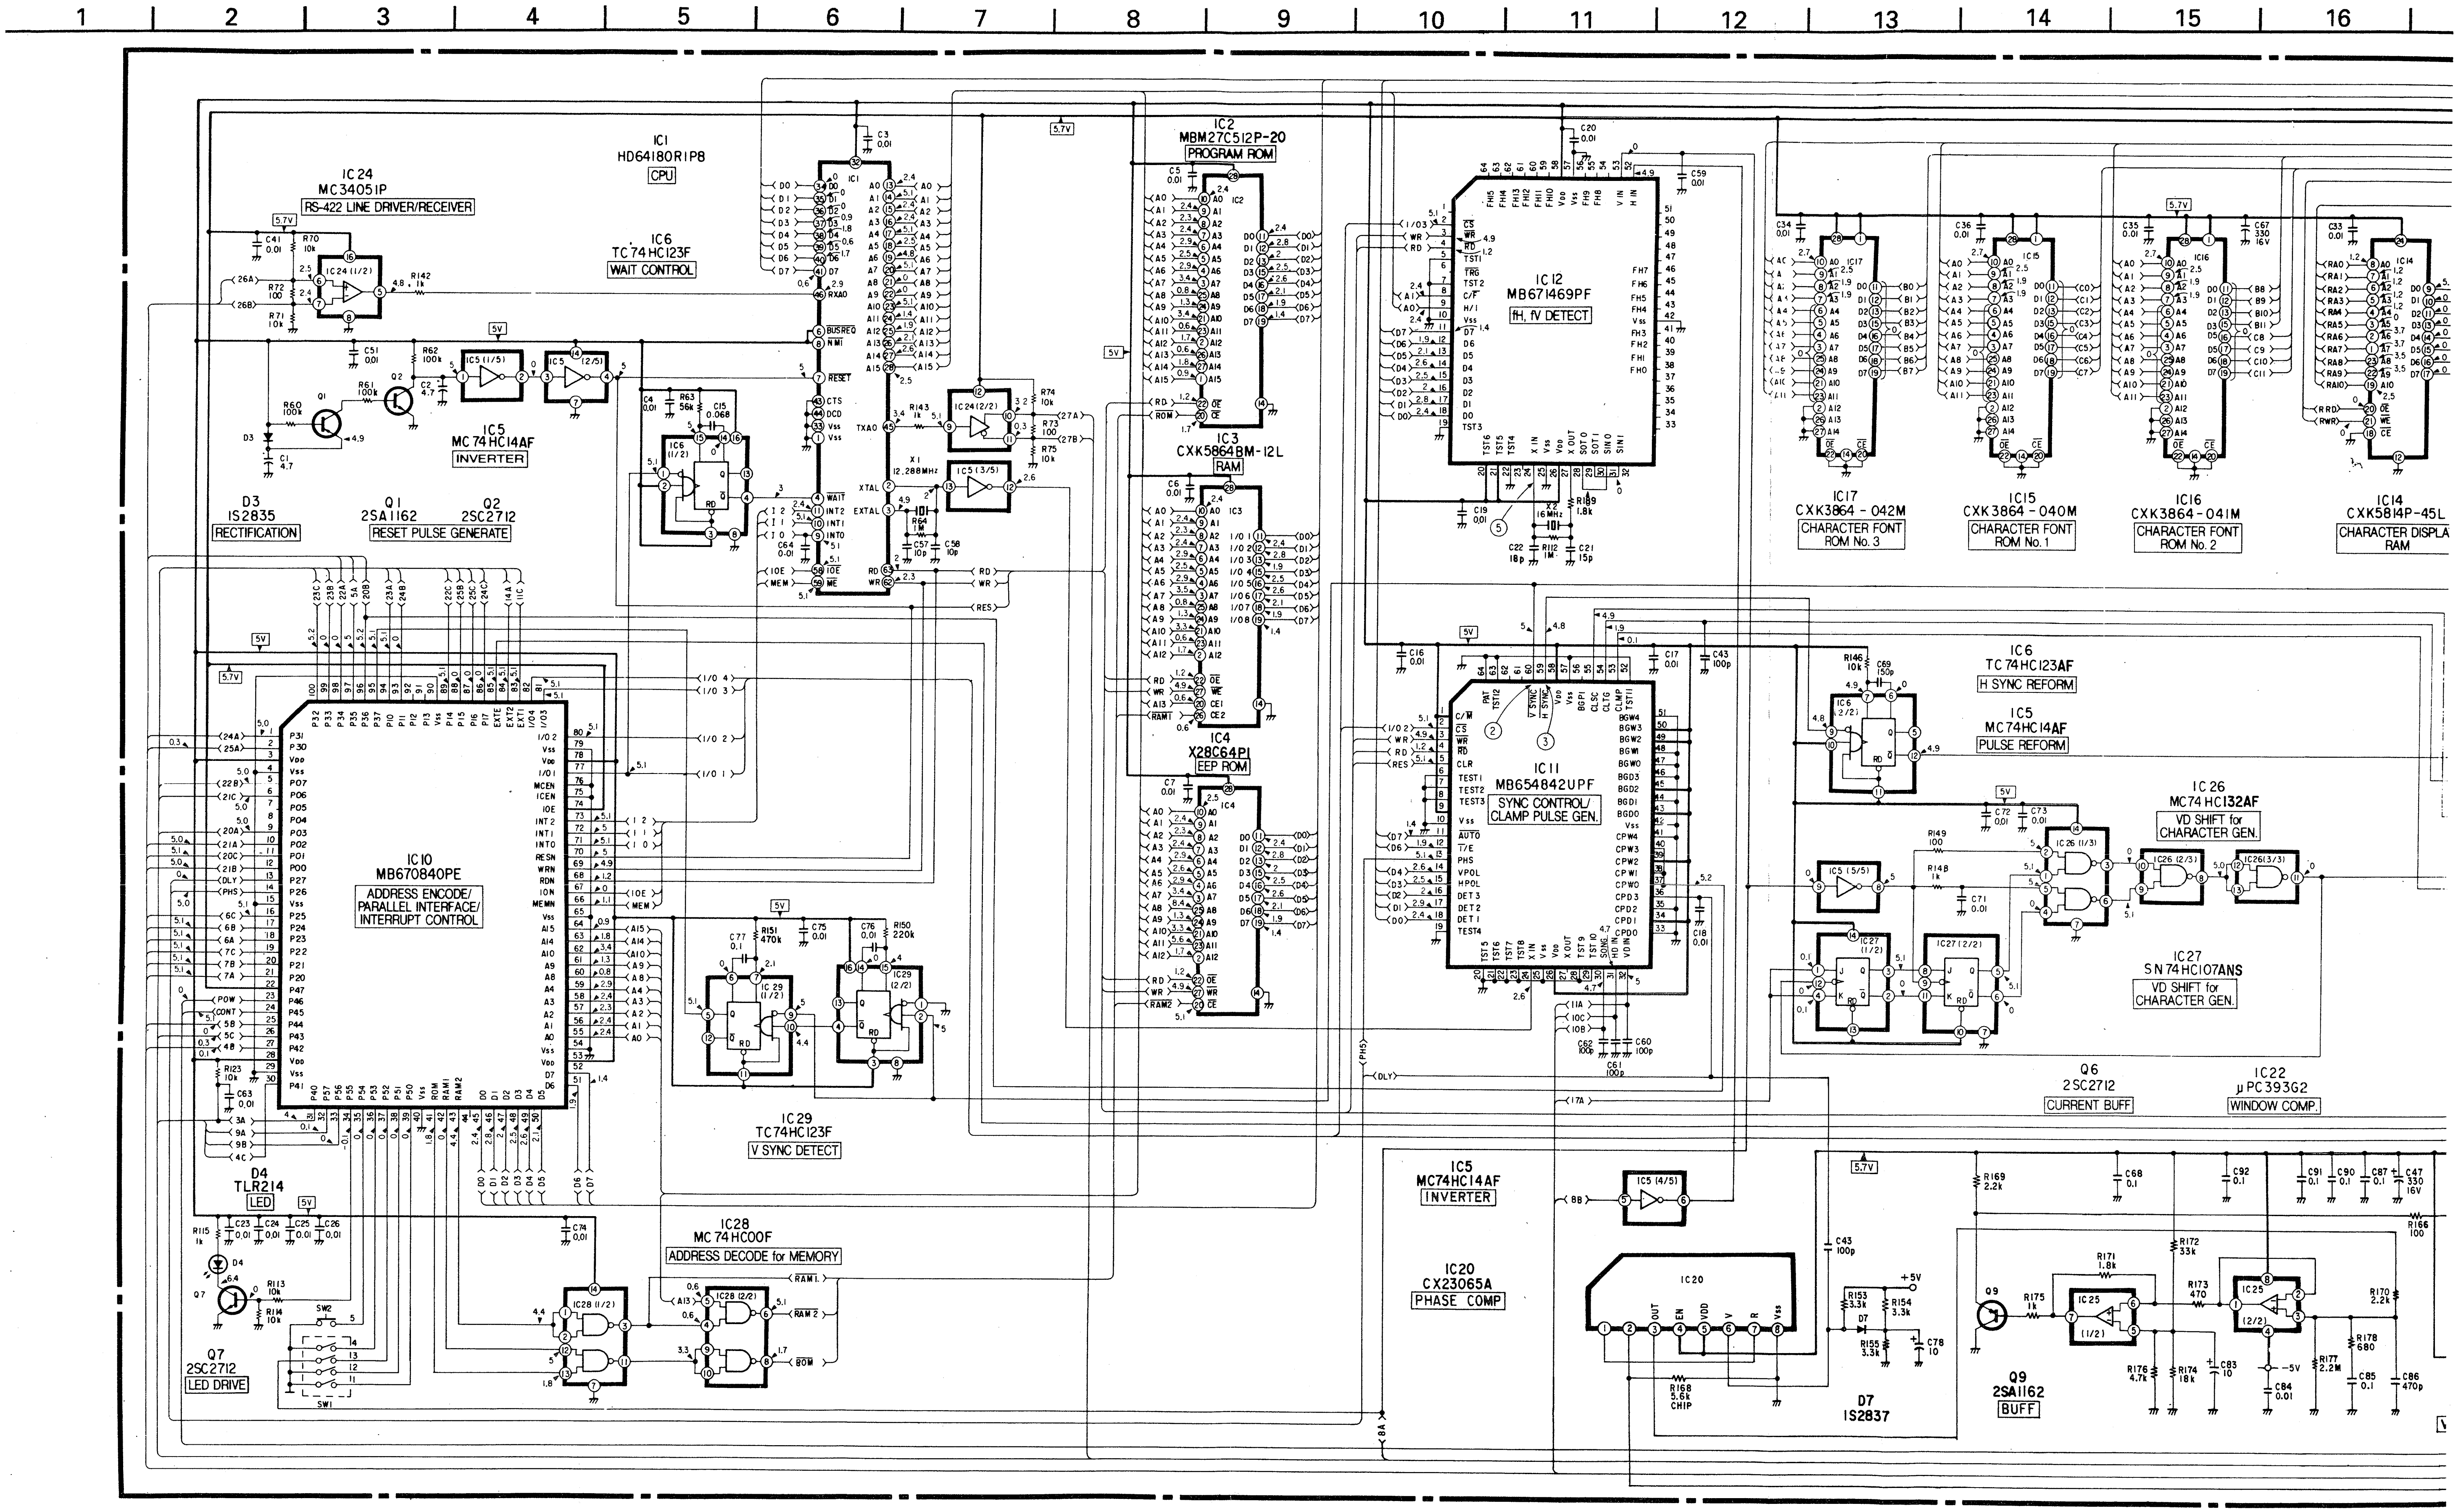
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
IC24
MC3405IP
RS-422 LINE DRIVER/RECEIVER
IC1
HD64180RIP8
CPU
IC6
TC74HC123F
WAIT CONTROL
IC5
MC74HC14AF
INVERTER
D3
1S2835
RECTIFICATION
Q1
2SA1162
Q2
2SC2712
RESET PULSE GENERATE
IC2
MBM27C512P-20
PROGRAM ROM
IC3
CXK5864BM-12L
RAM
IC4
X28C64P1
EEP ROM
IC12
MB671469PF
fH, fV DETECT
IC11
MB654842UPF
SYNC CONTROL/
CLAMP PULSE GEN.
IC17
CXK3864-042M
CHARACTER FONT
ROM No. 3
IC15
CXK3864-040M
CHARACTER FONT
ROM No. 1
IC16
CXK3864-041M
CHARACTER FONT
ROM No. 2
IC14
CXK5814P-45L
CHARACTER DISPLA
RAM
IC6
TC74HC123AF
H SYNC REFORM
IC5
MC74HC14AF
PULSE REFORM
IC26
MC74HC132AF
VD SHIFT for
CHARACTER GEN.
IC27
SN74HC107ANS
VD SHIFT for
CHARACTER GEN.
IC10
MB670840PE
ADDRESS ENCODE/
PARALLEL INTERFACE/
INTERRUPT CONTROL
IC29
TC74HC123F
V SYNC DETECT
IC28
MC74HC00F
ADDRESS DECODE for MEMORY
D4
TLR214
LED
Q7
2SC2712
LED DRIVE
SW1
SW2
IC5
MC74HC14AF
INVERTER
IC20
CX23065A
PHASE COMP
D7
1S2837
Q6
2SC2712
CURRENT BUFF
IC22
μPC393G2
WINDOW COMP.
Q9
2SA1162
BUFF
IC25
X1
12.288MHz
X2
16MHz
5V
5.7V
+5V
-5V

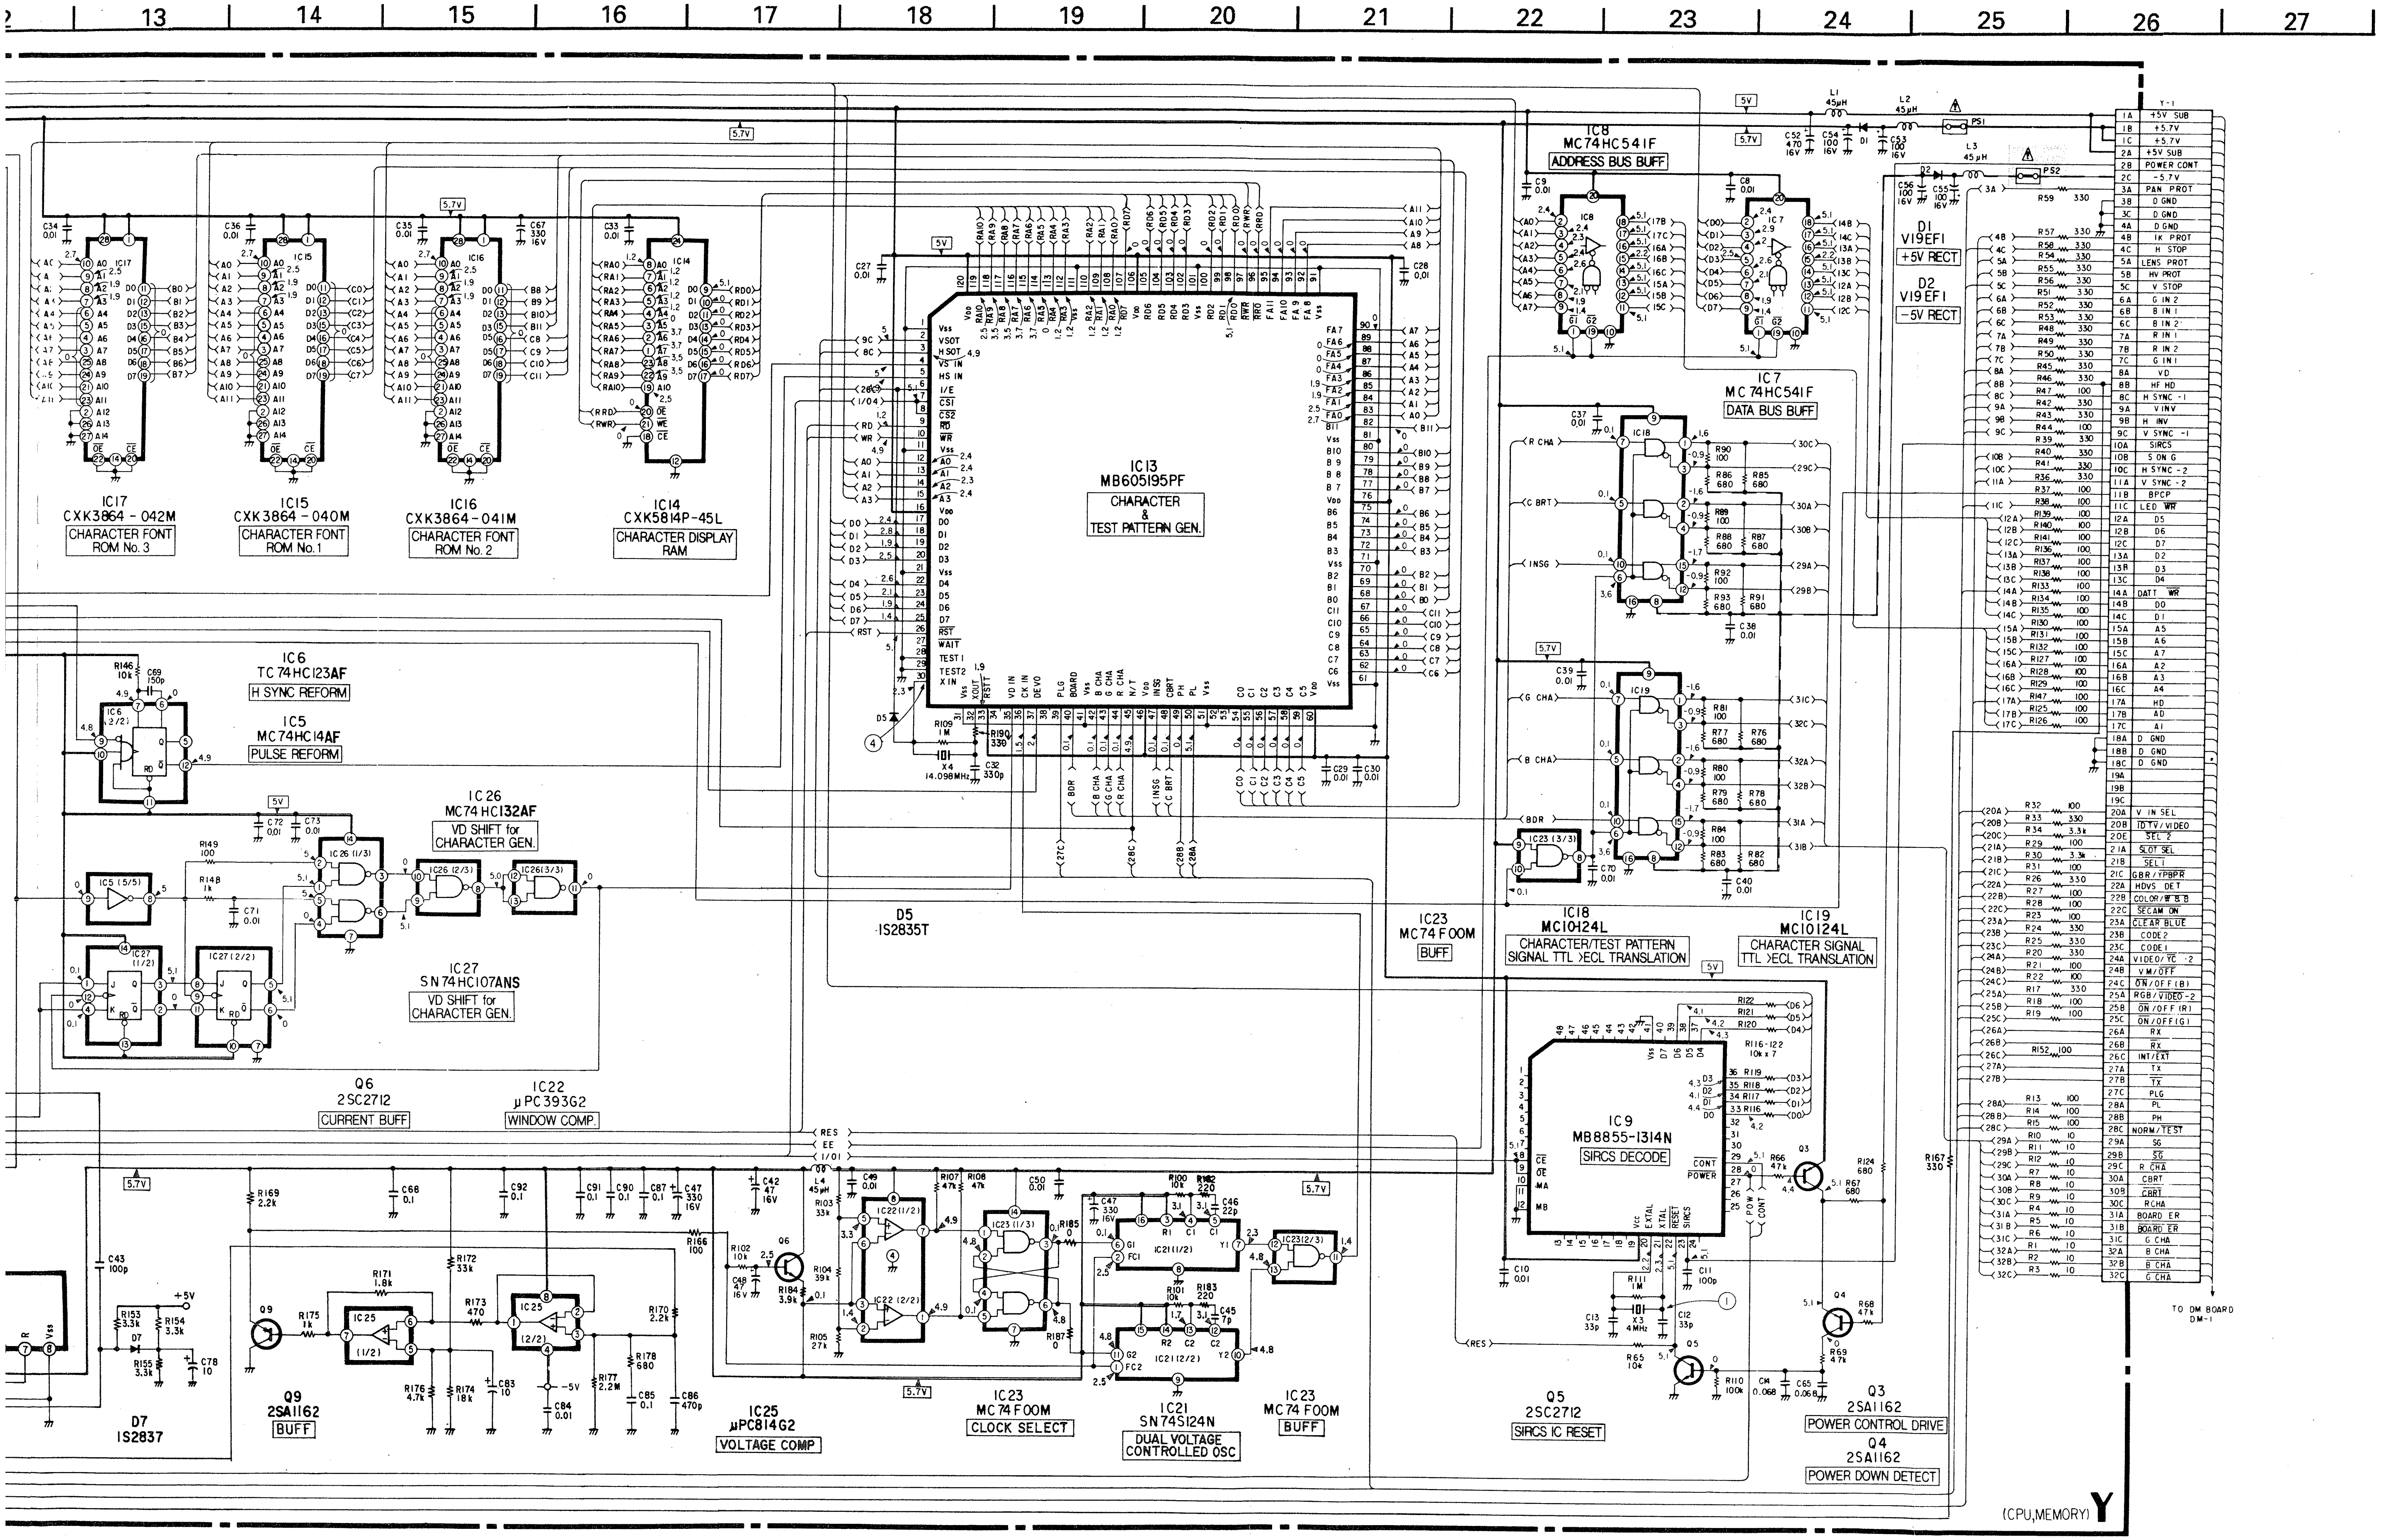
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
IC17
CXK3864-042M
CHARACTER FONT ROM No. 3
IC15
CXK3864-040M
CHARACTER FONT ROM No. 1
IC16
CXK3864-041M
CHARACTER FONT ROM No. 2
IC14
CXK5814P-45L
CHARACTER DISPLAY RAM
IC13
MB605195PF
CHARACTER & TEST PATTERN GEN.
IC8
MC74HC541F
ADDRESS BUS BUFF
IC7
MC74HC541F
DATA BUS BUFF
D1
V19EF1
+5V RECT
D2
V19EF1
-5V RECT
PS1
PS2
X4
14.098MHz
D5
1S2835T
IC6
TC74HC123AF
H SYNC REFORM
IC5
MC74HC14AF
PULSE REFORM
IC26
MC74HC132AF
VD SHIFT for CHARACTER GEN.
IC27
SN74HC107ANS
VD SHIFT for CHARACTER GEN.
IC18
MC10124L
CHARACTER/TEST PATTERN SIGNAL TTL >ECL TRANSLATION
IC19
MC10124L
CHARACTER SIGNAL TTL >ECL TRANSLATION
IC23
MC74F00M
BUFF
IC9
MB8855-1314N
SIRCS DECODE
X3
4MHz
Q6
2SC2712
CURRENT BUFF
IC22
μPC393G2
WINDOW COMP.
Q9
2SA1162
BUFF
D7
1S2837
IC25
μPC814G2
VOLTAGE COMP
IC23
MC74F00M
CLOCK SELECT
IC21
SN74S124N
DUAL VOLTAGE CONTROLLED OSC
IC23
MC74F00M
BUFF
Q5
2SC2712
SIRCS IC RESET
Q3
2SA1162
POWER CONTROL DRIVE
Q4
2SA1162
POWER DOWN DETECT
Y-1
TO DM BOARD DM-1
(CPU,MEMORY) Y

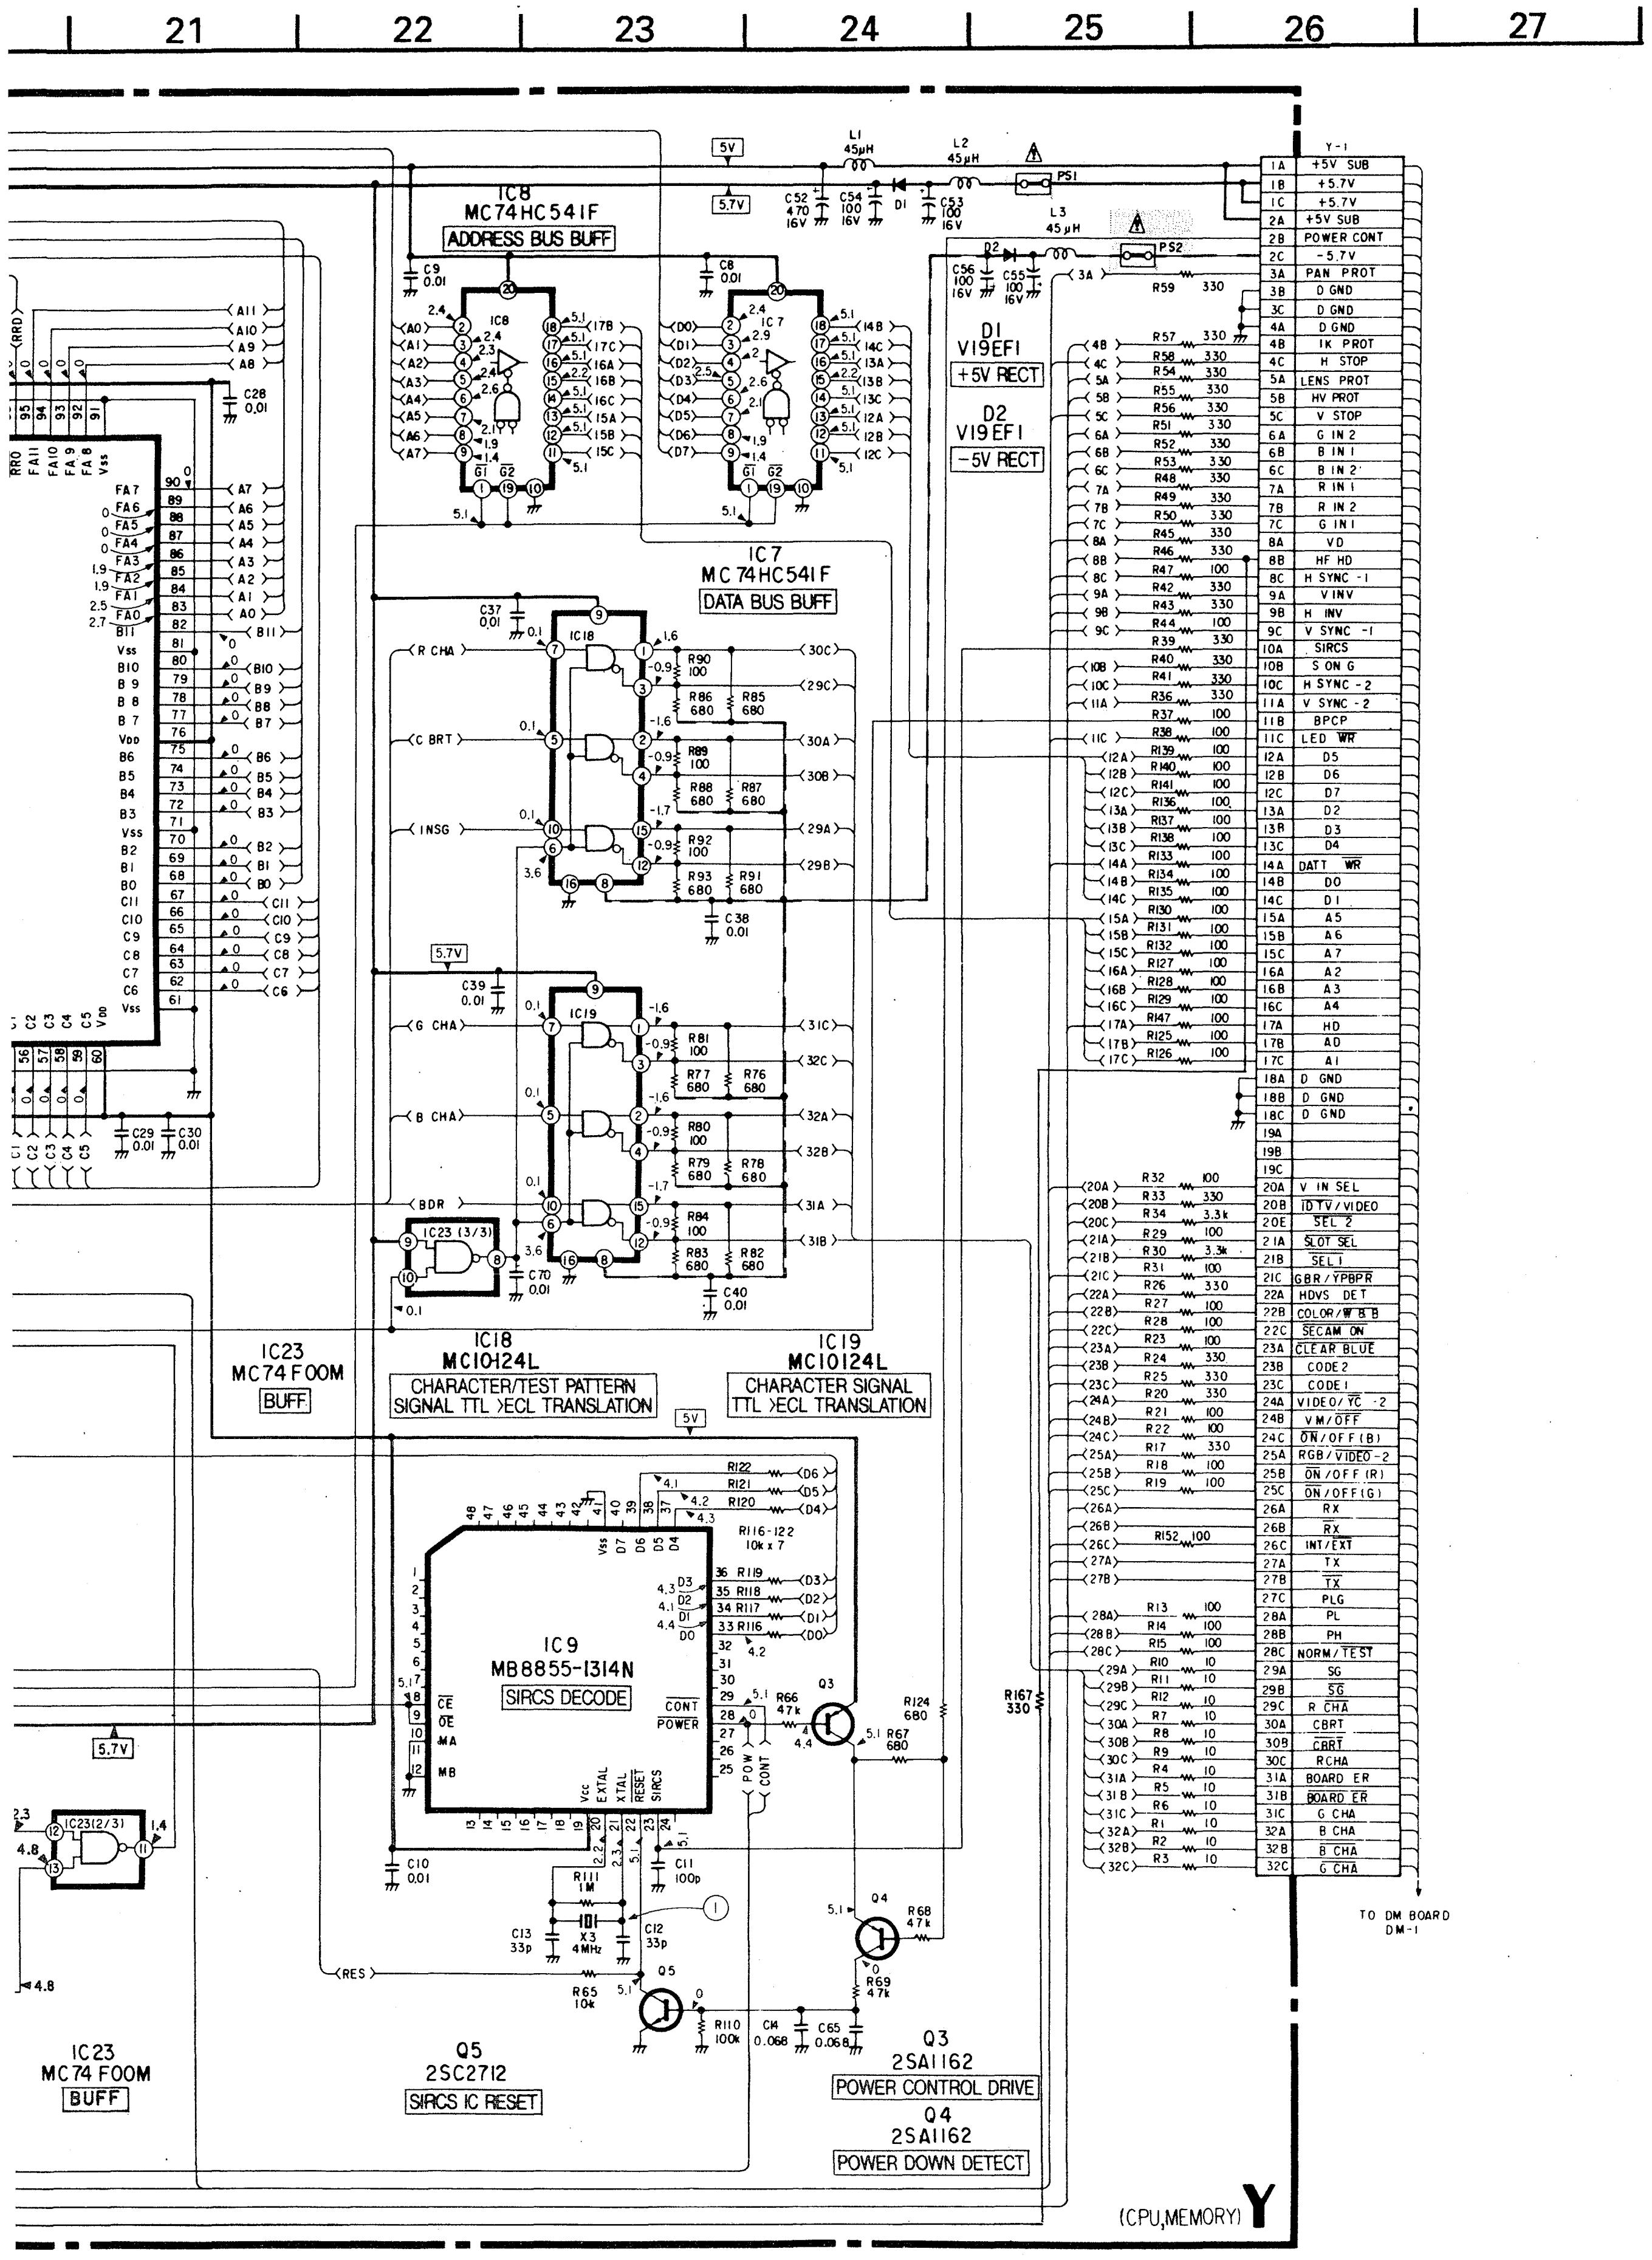
21
22
23
24
25
26
27
IC8
MC74HC541F
ADDRESS BUS BUFF
IC7
MC74HC541F
DATA BUS BUFF
D1
V19EF1
+5V RECT
D2
V19EF1
-5V RECT
L1 45μH
L2 45μH
L3 45μH
PS1
PS2
5V
5.7V
IC18
MC10124L
CHARACTER/TEST PATTERN SIGNAL TTL ›ECL TRANSLATION
IC19
MC10124L
CHARACTER SIGNAL TTL ›ECL TRANSLATION
IC23
MC74F00M
BUFF
IC9
MB8855-1314N
SIRCS DECODE
Q5
2SC2712
SIRCS IC RESET
Q3
2SA1162
POWER CONTROL DRIVE
Q4
2SA1162
POWER DOWN DETECT
X3 4MHz
Y-1
TO DM BOARD DM-1
(CPU,MEMORY)
Y

Y BOARD WAVEFORMS

①



PAL	5.5Vp-p(4MHZ)
SECAM	5.5Vp-p(4MHZ)
NTSC3.58	5.5Vp-p(4MHZ)
NTSC4.43	5.5Vp-p(4MHZ)
S-VIDEO	5.5Vp-p(4MHZ)
HDTV	5.5Vp-p(4MHZ)

②



PAL	5 Vp-p(V)
SECAM	5 Vp-p(V)
NTSC3.58	5 Vp-p(V)
NTSC4.43	5 Vp-p(V)
S-VIDEO	5 Vp-p(V)
HDTV	5 Vp-p(V)

③



PAL	5 Vp-p(H)
SECAM	5 Vp-p(H)
NTSC3.58	5 Vp-p(H)
NTSC4.43	5 Vp-p(H)
S-VIDEO	5 Vp-p(H)
HDTV	5 Vp-p(H)

④



PAL	4.8Vp-p(4.098MHZ)
SECAM	4.8Vp-p(4.098MHZ)
NTSC3.58	4.8Vp-p(4.098MHZ)
NTSC4.43	4.8Vp-p(4.098MHZ)
S-VIDEO	4.8Vp-p(4.098MHZ)
HDTV	4.8Vp-p(4.098MHZ)

⑤



PAL	68 Vp-p(16MHZ)
SECAM	68 Vp-p(16MHZ)
NTSC3.58	68 Vp-p(16MHZ)
NTSC4.43	68 Vp-p(16MHZ)
S-VIDEO	68 Vp-p(16MHZ)
HDTV	68 Vp-p(16MHZ)

Y [CPU MEMORY]

Y BOARD
(COMPONENT SIDE)

IC	
IC1	A - 8
IC2	C - 9
IC3	E - 9
IC4	D - 9
IC9	E - 7
IC10	D - 5
IC11	C - 7
IC12	C - 5
IC13	C - 2
IC14	C - 1
IC15	A - 4
IC16	A - 3
IC17	A - 2
IC18	E - 3
IC19	E - 3
IC20	E - 1
IC21	E - 1
IC24	F - 2

DIODE	
D1	F - 10
D2	E - 10
D4	A - 6
D7	F - 1

– Y BOARD – (COMPONENT SIDE) (Page 223 – 226)

(CONDUCTOR SIDE)

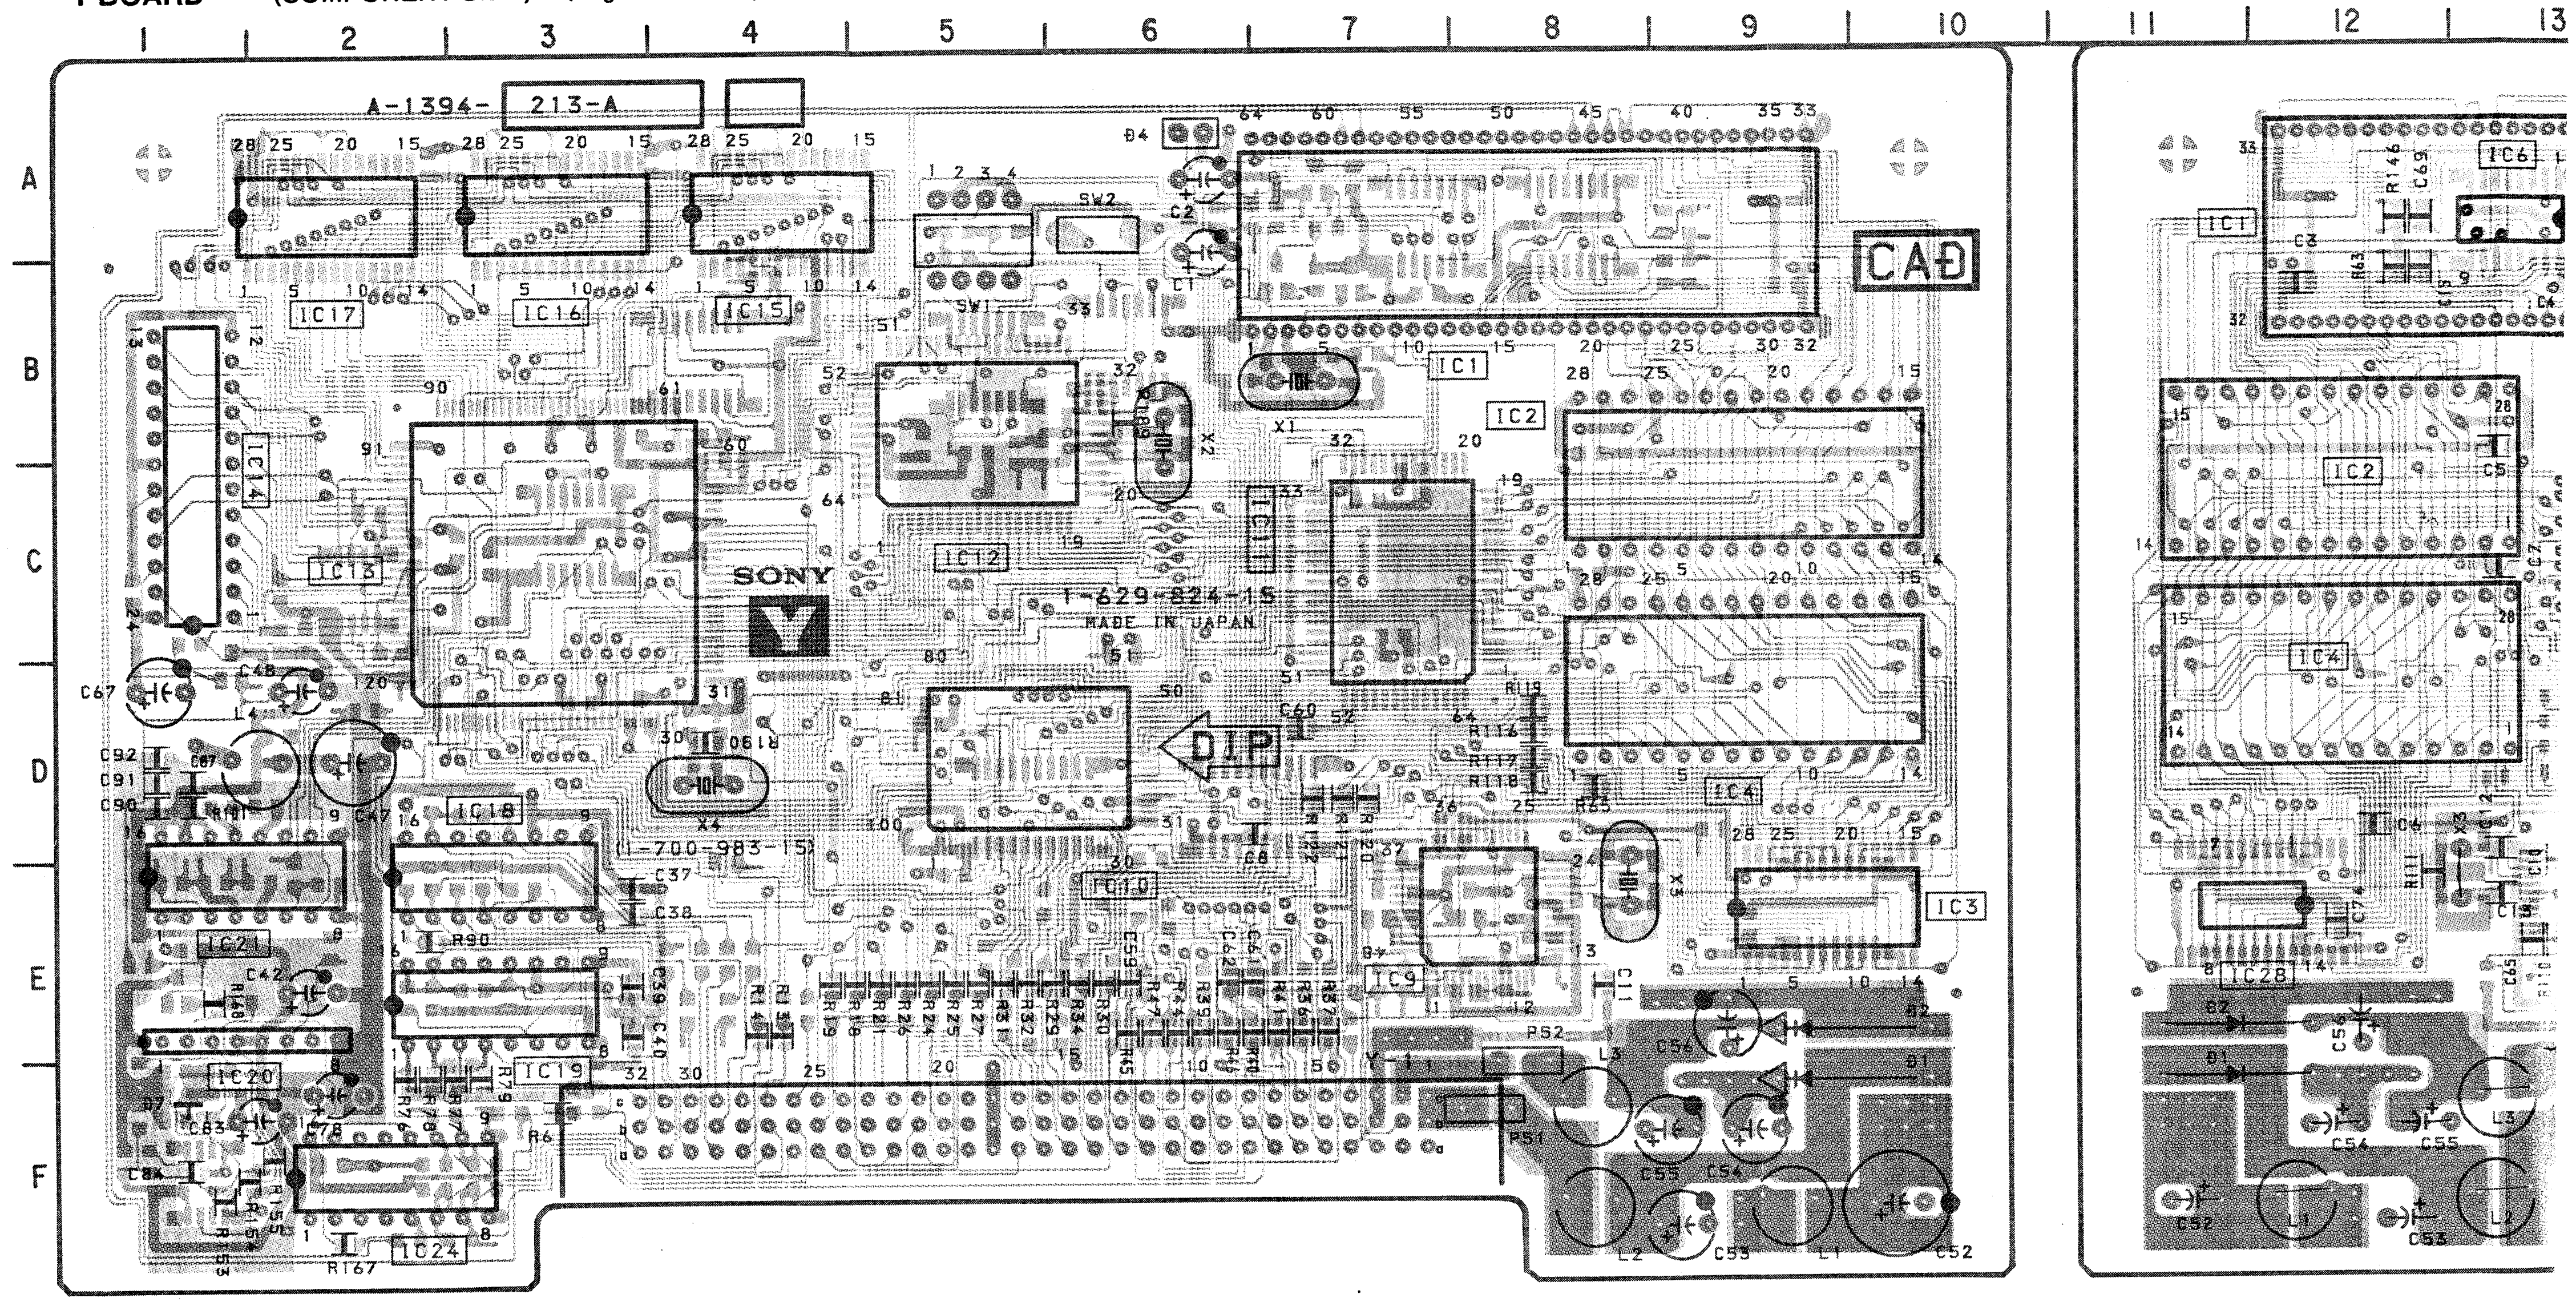
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
A-1394-213-A
SONY
Y
CAD
DIP
1-629-824-15
MADE IN JAPAN
1-700-983-15
IC1
IC2
IC3
IC4
IC9
IC10
IC11
IC12
IC13
IC14
IC15
IC16
IC17
IC18
IC19
IC20
IC21
IC24
IC6
IC28
SW1
SW2
X1
X2
X3
X4
D1
D2
D4
D7
L1
L2
L3
PS1
PS2
C52
C53
C54
C55
C56

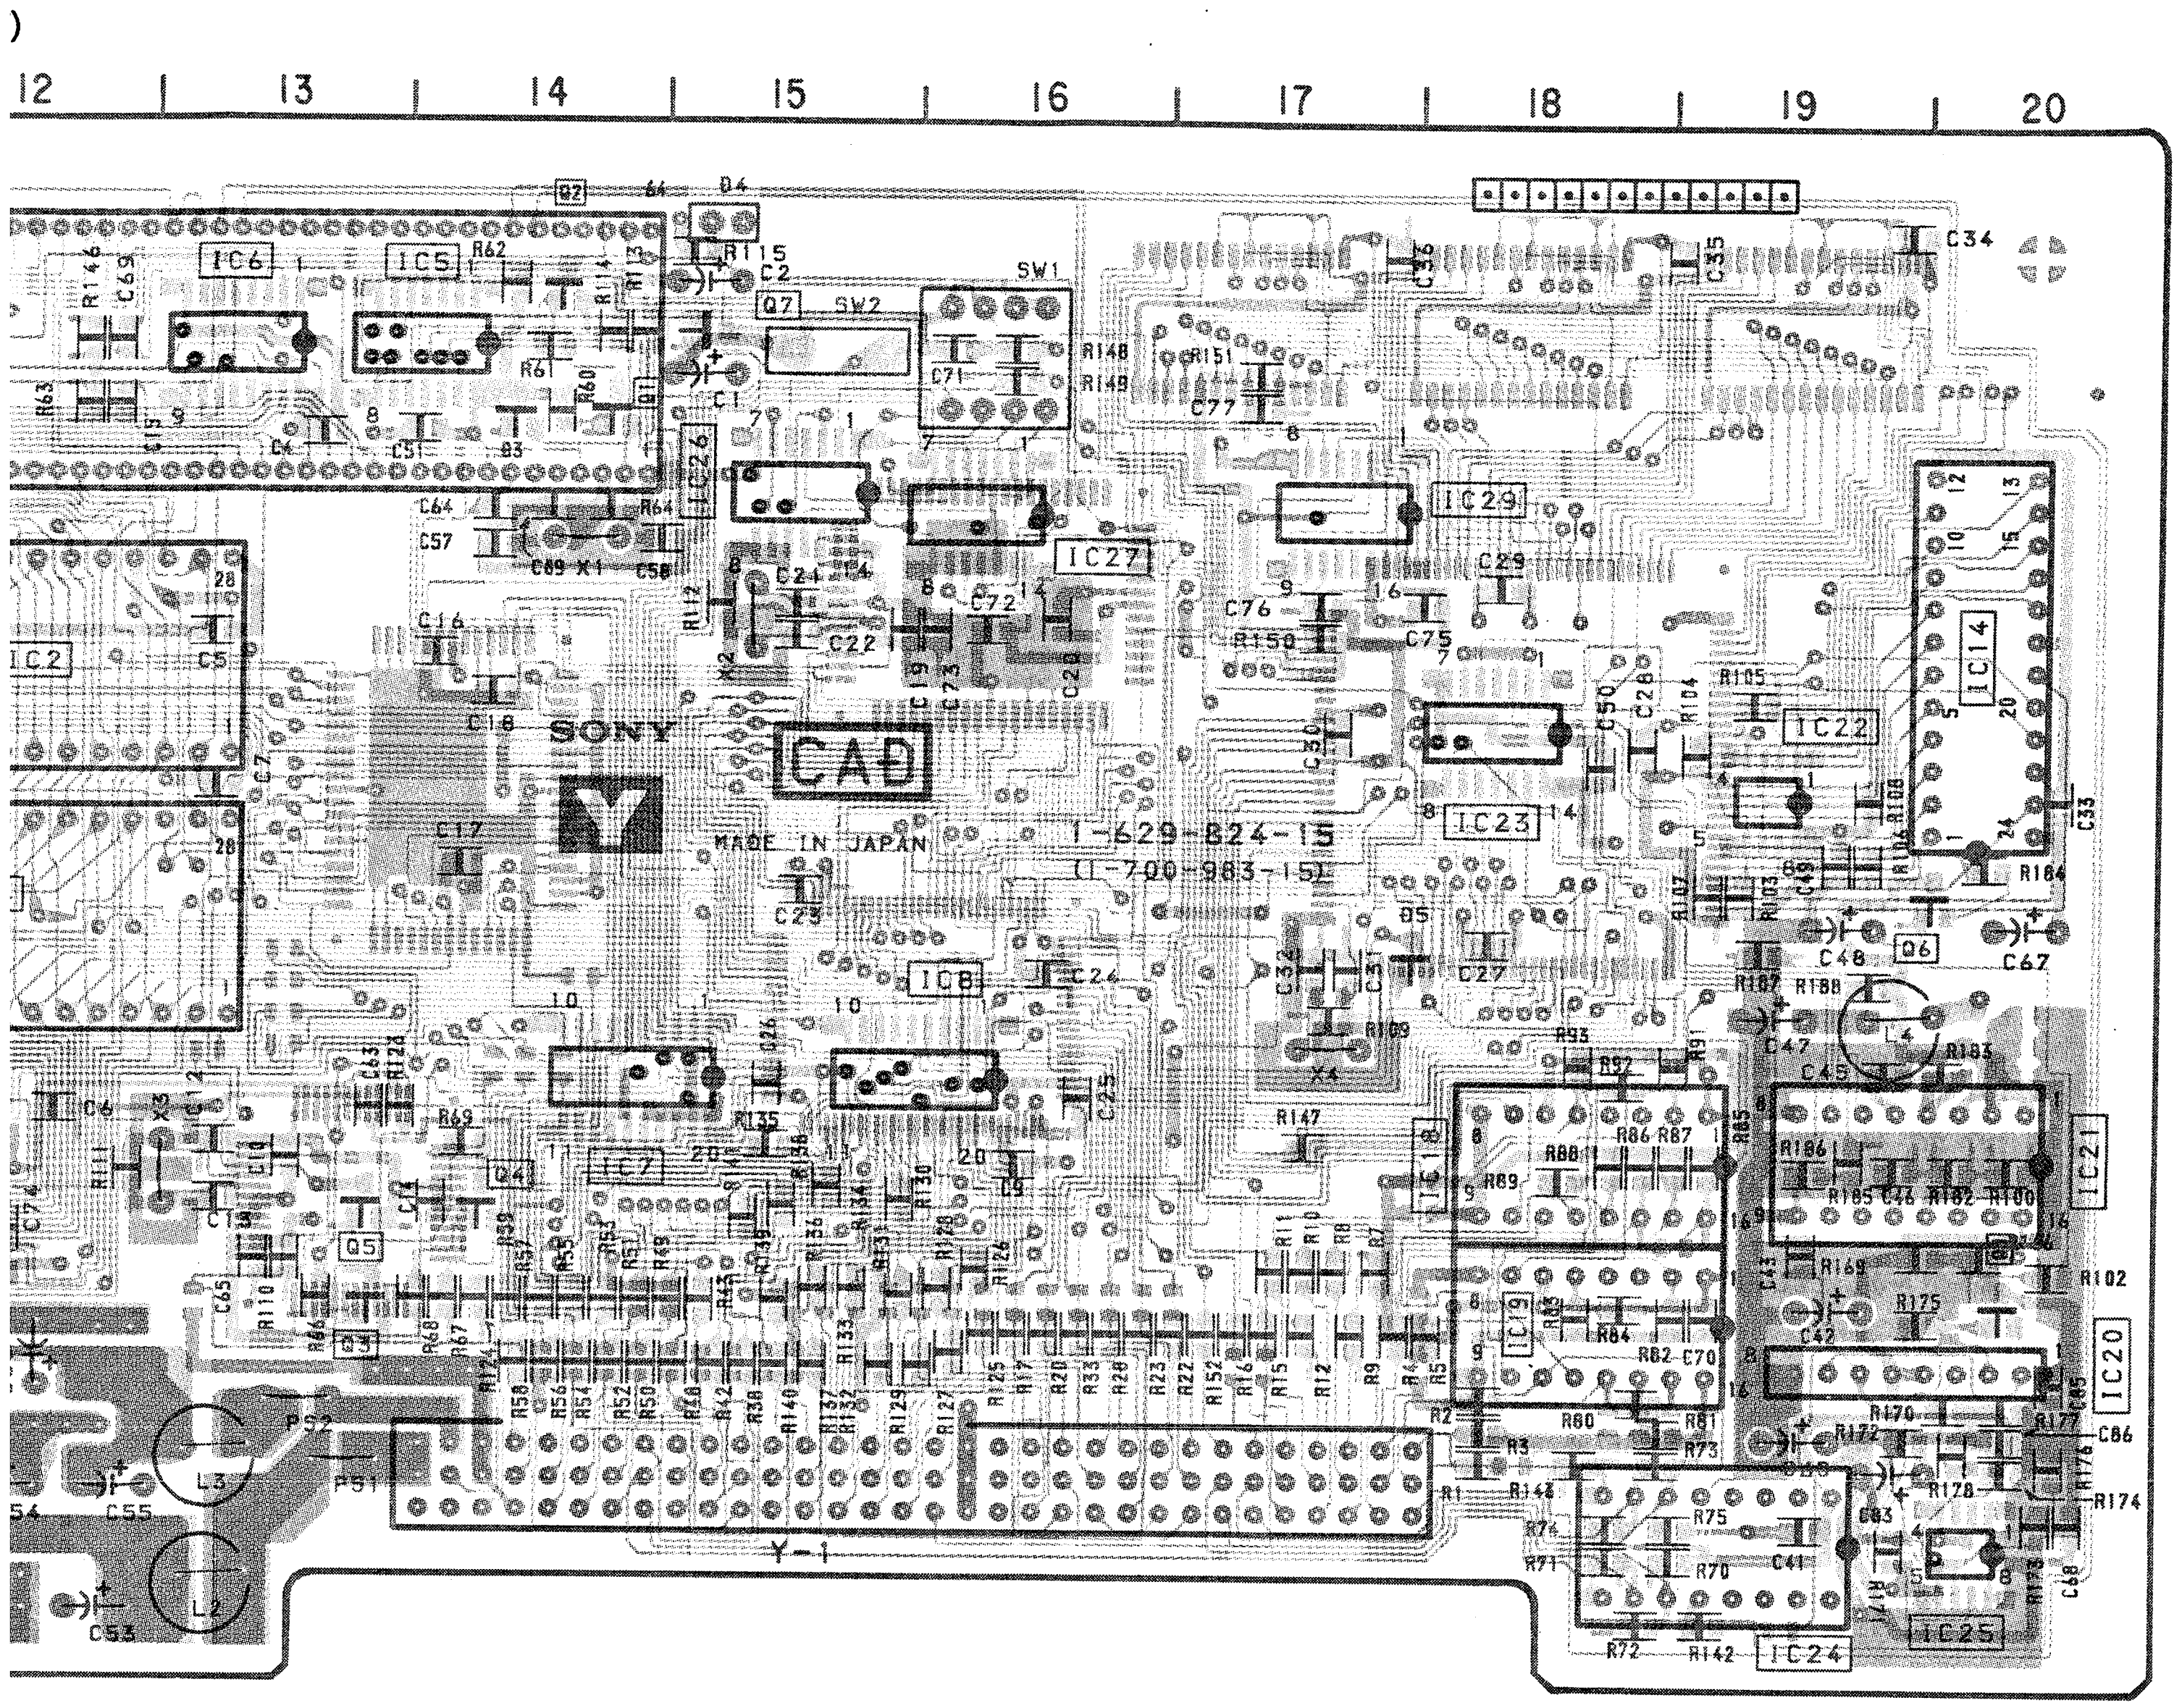
12
13
14
15
16
17
18
19
20
IC2
IC5
IC6
IC7
IC8
IC14
IC18
IC19
IC20
IC21
IC22
IC23
IC24
IC25
IC26
IC27
IC29
SW1
SW2
SONY
CAD
MADE IN JAPAN
1-629-824-15
(1-700-983-15)
X1
X3
X4
L2
L3
PS1
PS2
Y-1

Y BOARD (CONDUCTOR SIDE)

IC	
IC2	C - 12
IC4	D - 12
IC5	A - 13
IC6	A - 13
IC7	D - 14
IC8	D - 16
IC14	C - 20
IC18	E - 18
IC19	E - 18
IC20	E - 20
IC21	E - 20
IC22	C - 19
IC23	C - 18
IC24	F - 19
IC25	F - 20
IC26	B - 15
IC27	B - 16
IC28	E - 12
IC29	B - 17

TRANSISTOR	
Q1	B - 14
Q2	A - 14
Q3	E - 13
Q4	E - 14
Q5	E - 13
Q6	D - 19
Q7	A - 15
Q9	E - 20

DIODE	
D1	F - 11
D2	E - 11
D3	B - 14
D4	A - 15
D5	D - 17

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

SECTION 9
ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : mH, UH : μH

- The components identified by ⊠ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- ⋇ : Selected to yield optimum performance.
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF.NO.	PART NO.	DESCRIPTION			REMARK
	*A-1135-585-A	BA BOARD, COMPLETE ******************			
	*1-568-984-11	CONNECTOR, MALE 96P			

<FILTER>

REF.NO.	PART NO.	DESCRIPTION			REMARK
BPF001	1-236-366-11	MODULE, TRAP			
BPF002	1-236-365-11	MODULE, TRAP			
BPF003	1-236-063-11	MODULE, B.P.F			

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C001	1-124-477-11	ELECT	47MF	20%	16V
C002	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C003	1-124-916-11	ELECT	22MF	20%	50V
C004	1-124-916-11	ELECT	22MF	20%	50V
C005	1-124-916-11	ELECT	22MF	20%	50V
C006	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C007	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C008	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C009	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C010	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C011	1-126-101-11	ELECT	100MF	20%	16V
C012	1-124-907-11	ELECT	10MF	20%	50V
C013	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C014	1-124-916-11	ELECT	22MF	20%	50V
C015	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C016	1-124-916-11	ELECT	22MF	20%	50V
C017	1-126-101-11	ELECT	100MF	20%	16V
C018	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C019	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C020	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C021	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C022	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C023	1-163-222-11	CERAMIC CHIP	5PF	0.25PF	50V
C024	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C027	1-124-907-11	ELECT	10MF	20%	50V
C030	1-163-213-00	CERAMIC CHIP	0.0022MF	10%	50V
C041	1-124-916-11	ELECT	22MF	20%	50V
C101	1-124-119-00	ELECT	330MF	20%	16V
C102	1-124-119-00	ELECT	330MF	20%	16V
C103	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C104	1-163-033-00	CERAMIC CHIP	0.022MF		50V
C105	1-136-153-00	FILM	0.01MF	5%	50V
C106	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C107	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C108	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C109	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C110	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C111	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C112	1-163-119-00	CERAMIC CHIP	120PF	5%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C113	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C114	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C115	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C116	1-124-903-11	ELECT	1MF	20%	50V
C117	1-124-903-11	ELECT	1MF	20%	50V
C118	1-136-173-00	FILM	0.47MF	5%	50V
C119	1-136-161-00	FILM	0.047MF	5%	50V
C120	1-136-157-00	FILM	0.022MF	5%	50V
C121	1-136-157-00	FILM	0.022MF	5%	50V
C122	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C123	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C124	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C130	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C131	1-163-033-00	CERAMIC CHIP	0.022MF		50V
C132	1-163-033-00	CERAMIC CHIP	0.022MF		50V
C133	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C134	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C150	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C151	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C152	1-163-033-00	CERAMIC CHIP	0.022MF		50V
C153	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C154	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C201	1-124-477-11	ELECT	47MF	20%	16V
C202	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C203	1-124-916-11	ELECT	22MF	20%	50V
C204	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C205	1-124-916-11	ELECT	22MF	20%	50V
C206	1-136-169-00	FILM	0.22MF	5%	50V
C207	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C208	1-124-902-00	ELECT	0.47MF	20%	50V
C209	1-124-902-00	ELECT	0.47MF	20%	50V
C210	1-124-902-00	ELECT	0.47MF	20%	50V
C214	1-124-916-11	ELECT	22MF	20%	50V
C215	1-124-477-11	ELECT	47MF	20%	16V
C216	1-124-464-11	ELECT	0.22MF	20%	50V
C217	1-124-464-11	ELECT	0.22MF	20%	50V
C218	1-124-477-11	ELECT	47MF	20%	16V
C219	1-136-157-00	FILM	0.022MF	5%	50V
C220	1-130-471-00	MYLAR	0.001MF	5%	50V
C221	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C222	1-136-169-00	FILM	0.22MF	5%	50V
C223	1-136-153-00	FILM	0.01MF	5%	50V
C224	1-124-463-00	ELECT	0.1MF	20%	50V
C225	1-130-479-00	MYLAR	0.0047MF	5%	50V
C226	1-124-903-11	ELECT	1MF	20%	50V
C227	1-136-153-00	FILM	0.01MF	5%	50V
C228	1-124-927-11	ELECT	4.7MF	20%	50V
C229	1-124-927-11	ELECT	4.7MF	20%	50V
C230	1-130-477-00	MYLAR	0.0033MF	5%	50V
C231	1-130-481-00	MYLAR	0.0068MF	5%	50V
C232	1-130-476-00	MYLAR	0.0027MF	5%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C233	1-136-161-00	FILM	0.047MF	5%	50V
C235	1-124-925-11	ELECT	2.2MF	20%	50V
C236	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C237	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C238	1-124-925-11	ELECT	2.2MF	20%	50V
C239	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C240	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C241	1-124-925-11	ELECT	2.2MF	20%	50V
C242	1-124-925-11	ELECT	2.2MF	20%	50V
C243	1-124-925-11	ELECT	2.2MF	20%	50V
C244	1-124-907-11	ELECT	10MF	20%	50V
C245	1-124-907-11	ELECT	10MF	20%	50V
C246	1-124-907-11	ELECT	10MF	20%	50V
C247	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C249	1-126-101-11	ELECT	100MF	20%	16V
C250	1-124-120-11	ELECT	220MF	20%	16V
C251	1-126-101-11	ELECT	100MF	20%	16V
C252	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C254	1-126-101-11	ELECT	100MF	20%	16V
C255	1-124-907-11	ELECT	10MF	20%	50V
C257	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C259	1-124-464-11	ELECT	0.22MF	20%	50V
C260	1-124-477-11	ELECT	47MF	20%	16V
C261	1-124-925-11	ELECT	2.2MF	20%	50V
C262	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C265	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C349	1-124-916-11	ELECT	22MF	20%	50V
C350	1-124-907-11	ELECT	10MF	20%	50V
C351	1-136-169-00	FILM	0.22MF	5%	50V
C352	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C353	1-124-907-11	ELECT	10MF	20%	50V
C354	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V

<FILTER BLOCK>

REF.NO.	PART NO.	DESCRIPTION	REMARK
CM001	1-466-162-22	BLOCK, COM FILTER (CFB-4)	

<TRIMMER>

REF.NO.	PART NO.	DESCRIPTION	REMARK
CT101	1-141-181-11	CAP,TRIMMER	
CT102	1-141-181-11	CAP,TRIMMER	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D004	8-719-400-18	DIODE MA152WK	
D006	8-719-105-82	DIODE RD5.1M-B2	
D010	8-719-105-XX	DIODE RD6.2M-B1	
D101	8-719-400-18	DIODE MA152WK	
D102	8-719-400-18	DIODE MA152WK	
D103	8-719-400-18	DIODE MA152WK	
D104	8-719-400-18	DIODE MA152WK	
D201	8-719-900-95	DIODE V09G	
D202	8-719-104-34	DIODE 1S2836	
D204	8-719-400-18	DIODE MA152WK	
D206	8-719-400-18	DIODE MA152WK	
D207	8-719-400-18	DIODE MA152WK	
D208	8-719-105-45	DIODE RD3.3M-B1	
D209	8-719-105-45	DIODE RD3.3M-B1	
D210	8-719-400-18	DIODE MA152WK	

<DELAY LINE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
DL001	1-415-632-11	DELAY LINE, Y	
DL101	1-415-122-31	DELAY LINE, 1H (PAL)	

<IC>

REF.NO.	PART NO.	DESCRIPTION		REMARK
IC001	8-759-009-06	IC MC14052BF		
IC002	8-759-513-47	IC TDA4555/V1		
IC003	8-752-034-85	IC CXA1216P		
IC004	8-759-513-48	IC TDA2595/V9		
IC005	8-759-300-71	IC HD14053BFP		
IC006	8-759-926-18	IC SN74HC157ANS		
IC007	8-759-925-83	IC SN74HC27ANS		
IC008	8-759-604-39	IC M5F78M12L		
IC009	8-759-979-16	IC CX-7916		
IC010	1-808-891-11	MODULE SNY-9202		
IC011	8-759-100-96	IC UPC4558G2		
IC012	8-759-100-96	IC UPC4558G2		
IC013	8-759-927-46	IC SN74HC00ANS		
IC014	8-759-008-45	IC MC74HC4538F		

<COIL>

REF.NO.	PART NO.	DESCRIPTION		REMARK
L001	1-410-478-11	INDUCTOR	47UH	
L101	1-404-584-11	COIL		
L102	1-404-554-11	COIL		
L103	1-404-539-11	COIL		
L104	1-404-554-11	COIL		
L105	1-404-554-11	COIL		
L106	1-410-466-41	INDUCTOR	4.7UH	
L107	1-408-406-00	INDUCTOR	5.6UH	
L108	1-410-478-11	INDUCTOR	47UH	
L109	1-410-209-51	INDUCTOR CHIP	27UH	
L201	1-459-155-00	COIL (WITH CORE)	45UH	
L202	1-459-155-00	COIL (WITH CORE)	45UH	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION		REMARK
Q001	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q002	8-729-230-46	TRANSISTOR 2SA1162-YG		
Q003	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q004	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q005	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q006	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q007	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q008	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q009	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q010	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q012	8-729-901-01	TRANSISTOR DTC144EK		
Q013	8-729-901-01	TRANSISTOR DTC144EK		
Q014	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q015	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q016	8-729-901-01	TRANSISTOR DTC144EK		
Q017	8-729-901-01	TRANSISTOR DTC144EK		
Q018	8-729-900-53	TRANSISTOR DTC114EK		
Q019	8-729-900-53	TRANSISTOR DTC114EK		
Q020	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q021	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q023	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q024	8-729-901-01	TRANSISTOR DTC144EK		
Q026	8-729-901-01	TRANSISTOR DTC144EK		
Q027	8-729-901-01	TRANSISTOR DTC144EK		
Q028	8-729-230-46	TRANSISTOR 2SA1162-YG		
Q029	8-729-230-46	TRANSISTOR 2SA1162-YG		
Q030	8-729-230-49	TRANSISTOR 2SC2712-YG		
Q101	8-729-901-01	TRANSISTOR DTC144EK		
Q102	8-729-230-49	TRANSISTOR 2SC2712-YG		

REF.NO.	PART
Q103	8-72
Q106	8-72
Q107	8-72
Q108	8-72
Q201	8-72
Q202	8-72
Q203	8-72
Q204	8-72
Q205	8-72
Q206	8-72
Q207	8-72
Q208	8-72
Q209	8-72
Q210	8-72
Q212	8-72
Q213	8-72
Q214	8-72
Q215	8-72
Q216	8-72
Q217	8-72
Q218	8-72
Q219	8-72
Q220	8-72
Q221	8-72
Q222	8-72
Q223	8-72
Q224	8-72
Q225	8-72
Q226	8-72
Q230	8-72
Q231	8-72
Q232	8-72
Q233	8-72
Q347	8-72
Q348	8-72
Q349	8-72
Q350	8-72
Q351	8-72
Q352	8-72
Q355	8-72
Q356	8-72
Q357	8-72
R1	1-21
R8	1-21
R11	1-21
R002	1-21
R003	1-21
R004	1-21
R006	1-21
R007	1-21
R009	1-21
R010	1-21
R012	1-21
R013	1-21
R014	1-21
R015	1-21
R016	1-21
R017	1-21
R018	1-21
R019	1-21
R020	1-21

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q103	8-729-901-01	TRANSISTOR DTC144EK	
Q106	8-729-901-01	TRANSISTOR DTC144EK	
Q107	8-729-901-01	TRANSISTOR DTC144EK	
Q108	8-729-901-01	TRANSISTOR DTC144EK	
Q201	8-729-140-96	TRANSISTOR 2SD774-34	
Q202	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q203	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q204	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q205	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q206	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q207	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q208	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q209	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q210	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q212	8-729-116-06	TRANSISTOR 2SK160-K6	
Q213	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q214	8-729-116-06	TRANSISTOR 2SK160-K6	
Q215	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q216	8-729-116-06	TRANSISTOR 2SK160-K6	
Q217	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q218	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q219	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q220	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q221	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q222	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q223	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q224	8-729-901-01	TRANSISTOR DTC144EK	
Q225	8-729-901-01	TRANSISTOR DTC144EK	
Q226	8-729-901-01	TRANSISTOR DTC144EK	
Q230	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q231	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q232	8-729-116-06	TRANSISTOR 2SK160-K6	
Q233	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q347	8-729-901-01	TRANSISTOR DTC144EK	
Q348	8-729-901-01	TRANSISTOR DTC144EK	
Q349	8-729-901-01	TRANSISTOR DTC144EK	
Q350	8-729-901-01	TRANSISTOR DTC144EK	
Q351	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q352	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q355	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q356	8-729-901-01	TRANSISTOR DTC144EK	
Q357	8-729-901-01	TRANSISTOR DTC144EK	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R8	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R11	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R002	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R003	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R004	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R006	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R007	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R009	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R010	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R012	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R013	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R014	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R015	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R016	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R017	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R018	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R019	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R020	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R021	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R022	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R023	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R024	1-216-637-11	METAL CHIP	270	0.50%	1/10W	
R025	1-216-637-11	METAL CHIP	270	0.50%	1/10W	
R026	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R027	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R028	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R029	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R030	1-216-009-00	METAL GLAZE	22	5%	1/10W	
R031	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R032	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R033	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R034	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R035	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R036	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R037	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R038	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R039	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R040	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R041	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R048	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R049	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R050	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R051	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R052	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R053	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R054	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R055	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R060	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R061	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R062	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R063	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R064	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R065	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R066	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R067	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R068	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R069	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R070	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R071	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R101	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R102	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R103	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R104	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R105	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R106	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R107	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R108	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R109	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R111	1-216-066-00	METAL GLAZE	5.1K	5%	1/10W	
R112	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R113	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R114	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R115	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R116	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R117	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R118	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R119	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R120	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R122	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R123	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R124	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R126	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R127	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R128	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R131	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R132	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R140	1-216-689-11	METAL CHIP	39K	0.50%	1/10W	
R141	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R142	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R143	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R144	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R145	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R146	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R149	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R150	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R151	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R152	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R153	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R154	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R155	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R156	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R157	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R158	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R160	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R161	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R162	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R163	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R164	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R165	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R166	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R167	1-216-103-00	METAL GLAZE	180K	5%	1/10W	
R168	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R169	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R170	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R201	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R202	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R204	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R205	1-216-119-00	METAL GLAZE	820K	5%	1/10W	
R206	1-216-109-00	METAL GLAZE	330K	5%	1/10W	
R207	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R208	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R209	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R210	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R212	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R213	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R216	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R217	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R220	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R221	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R224	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R225	1-216-099-00	METAL GLAZE	120K	5%	1/10W	
R226	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R227	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R228	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R229	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R230	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R231	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R232	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R233	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R234	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R235	1-216-099-00	METAL GLAZE	120K	5%	1/10W	
R236	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R237	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R238	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R239	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R240	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R241	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R242	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R243	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R244	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R245	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R246	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R247	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R248	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R249	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R250	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R251	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R252	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R253	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R254	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R255	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R256	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R257	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R258	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R259	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R260	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R261	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R262	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R263	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R264	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R265	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R266	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R267	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R268	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R269	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R270	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R271	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R272	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R273	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R274	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R275	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R276	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R277	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R278	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R279	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R280	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R281	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R282	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R283	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R284	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R285	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R286	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R287	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R288	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R289	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R290	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R291	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R293	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R294	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R295	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R296	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R297	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R298	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R299	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R300	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R301	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R304	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R305	1-216-073-00	METAL GLAZE	10K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R306	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R307	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R308	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R309	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R310	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R340	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R341	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R375	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R376	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R377	1-249-393-11	CARBON	10	5%	1/4W	
R379	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R380	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R381	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R382	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R383	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R384	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R385	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R386	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R387	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R388	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R398	1-216-017-00	METAL GLAZE	47	5%	1/10W	

<VARIABLE RESISTOR>

REF.NO.	PART NO.	DESCRIPTION
RV101	1-230-504-11	RES, ADJ, CARBON 220
RV102	1-228-993-00	RES, ADJ, CARBON 4.7K
RV202	1-228-996-00	RES, ADJ, CARBON 47K
RV203	1-228-993-00	RES, ADJ, CARBON 4.7K
RV204	1-226-775-11	RES, ADJ, METAL GLAZE 100K
RV205	1-226-775-11	RES, ADJ, METAL GLAZE 100K

<SWITCH>

REF.NO.	PART NO.	DESCRIPTION
SW101	1-570-859-11	SWITCH, SLIDE

<THERMISTER>

REF.NO.	PART NO.	DESCRIPTION
TH101	1-800-071-XX	THERMISTER

<CRYSTAL>

REF.NO.	PART NO.	DESCRIPTION
X101	1-567-413-11	VIBRATOR, CRYSTAL
X102	1-527-789-00	VINRATOR, CRYSTAL

****

*A-1135-647-A BB BOARD, COMPLETE
****

*1-564-595-11 PLUG, CONNECTOR 14P
*1-568-984-11 CONNECTOR, MALE 96P

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C402	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C404	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C405	1-126-101-11	ELECT	100MF	20%	16V
C406	1-124-120-11	ELECT	220MF	20%	16V
C407	1-126-101-11	ELECT	100MF	20%	16V
C408	1-124-907-11	ELECT	10MF	20%	50V
C409	1-126-101-11	ELECT	100MF	20%	16V
C412	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C413	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C414	1-124-907-11	ELECT	10MF	20%	50V
C415	1-126-101-11	ELECT	100MF	20%	16V
C416	1-126-101-11	ELECT	100MF	20%	16V
C417	1-124-120-11	ELECT	220MF	20%	16V
C418	1-126-101-11	ELECT	100MF	20%	16V
C419	1-126-101-11	ELECT	100MF	20%	16V
C425	1-126-101-11	ELECT	100MF	20%	16V
C450	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C451	1-126-103-11	ELECT	470MF	20%	16V
C453	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C501	1-124-463-00	ELECT	0.1MF	20%	50V
C502	1-124-907-11	ELECT	10MF	20%	50V
C503	1-124-477-11	ELECT	47MF	20%	16V
C504	1-124-477-11	ELECT	47MF	20%	16V
C505	1-124-927-11	ELECT	4.7MF	20%	50V
C506	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C507	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C508	1-124-477-11	ELECT	47MF	20%	16V
C509	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C510	1-124-477-11	ELECT	47MF	20%	16V
C511	1-126-103-11	ELECT	470MF	20%	16V
C512	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C513	1-124-477-11	ELECT	47MF	20%	16V
C514	1-124-927-11	ELECT	4.7MF	20%	50V
C515	1-124-927-11	ELECT	4.7MF	20%	50V
C516	1-124-927-11	ELECT	4.7MF	20%	50V
C518	1-124-927-11	ELECT	4.7MF	20%	50V
C519	1-124-927-11	ELECT	4.7MF	20%	50V
C520	1-124-903-11	ELECT	1MF	20%	50V
C521	1-124-907-11	ELECT	10MF	20%	50V
C523	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C524	1-124-477-11	ELECT	47MF	20%	16V
C555	1-163-012-00	CERAMIC CHIP	0.0018MF	10%	50V
C556	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C557	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C650	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C651	1-124-657-00	ELECT	10MF	20%	50V
C652	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C653	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C654	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C655	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C656	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C657	1-136-169-00	FILM	0.22MF	5%	50V
C658	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C659	1-136-169-00	FILM	0.22MF	5%	50V
C660	1-124-657-00	ELECT	10MF	20%	50V
C661	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C662	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C663	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C664	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C665	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C666	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C667	1-136-169-00	FILM	0.22MF	5%	50V
C668	1-124-657-00	ELECT	10MF	20%	50V
C669	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C670	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C671	1-126-101-11	ELECT	100MF	20%	16V
C672	1-126-101-11	ELECT	100MF	20%	16V
C673	1-126-101-11	ELECT	100MF	20%	16V
C674	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C675	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C676	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C677	1-124-910-11	ELECT	47MF	20%	50V
C678	1-124-907-11	ELECT	10MF	20%	50V
C679	1-124-122-11	ELECT	100MF	20%	50V

BB

REF.NO.	PART NO.	DESCRIPTION			REMARK
C680	1-126-103-11	ELECT	470MF	20%	16V
C682	1-124-910-11	ELECT	47MF	20%	50V
C683	1-124-907-11	ELECT	10MF	20%	50V
C685	1-126-103-11	ELECT	470MF	20%	16V
C686	1-124-122-11	ELECT	100MF	20%	50V
C687	1-124-910-11	ELECT	47MF	20%	50V
C688	1-124-907-11	ELECT	10MF	20%	50V
C690	1-126-103-11	ELECT	470MF	20%	16V
C691	1-124-122-11	ELECT	100MF	20%	50V
C692	1-124-122-11	ELECT	100MF	20%	50V
C693	1-124-122-11	ELECT	100MF	20%	50V
C694	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C695	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C696	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C697	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C901	1-124-907-11	ELECT	10MF	20%	50V
C902	1-124-903-11	ELECT	1MF	20%	50V
C903	1-124-916-11	ELECT	22MF	20%	50V
C904	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C905	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C906	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C907	1-124-903-11	ELECT	1MF	20%	50V
C908	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C909	1-124-927-11	ELECT	4.7MF	20%	50V
C910	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C911	1-124-903-11	ELECT	1MF	20%	50V
C912	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C913	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C914	1-126-101-11	ELECT	100MF	20%	16V

<DIODE>

D401	8-719-900-95	DIODE V09G
D402	8-719-900-95	DIODE V09G
D450	8-719-400-18	DIODE MA152WK
D451	8-719-400-18	DIODE MA152WK
D452	8-719-105-28	DIODE RD2.4M-B
D501	8-719-400-18	DIODE MA152WK
D502	8-719-400-18	DIODE MA152WK
D503	8-719-400-18	DIODE MA152WK
D504	8-719-105-82	DIODE RD5.1M-B2
D506	8-719-105-82	DIODE RD5.1M-B2
D507	8-719-105-82	DIODE RD5.1M-B2
D508	8-719-105-82	DIODE RD5.1M-B2
D509	8-719-105-82	DIODE RD5.1M-B2
D510	8-719-105-82	DIODE RD5.1M-B2
D511	8-719-105-82	DIODE RD5.1M-B2
D512	8-719-105-82	DIODE RD5.1M-B2
D513	8-719-105-82	DIODE RD5.1M-B2
D514	8-719-105-82	DIODE RD5.1M-B2
D515	8-719-105-82	DIODE RD5.1M-B2
D516	8-719-106-80	DIODE RD13M-B2
D518	8-719-106-80	DIODE RD13M-B2
D520	8-719-105-82	DIODE RD5.1M-B2
D521	8-719-105-82	DIODE RD5.1M-B2
D522	8-719-106-80	DIODE RD13M-B2
D523	8-719-106-80	DIODE RD13M-B2
D530	8-719-105-82	DIODE RD5.1M-B2
D652	8-719-400-18	DIODE MA152WK
D653	8-719-400-18	DIODE MA152WK
D901	8-719-400-18	DIODE MA152WK
D902	8-719-400-18	DIODE MA152WK
D903	8-719-104-34	DIODE 1S2836
D904	8-719-400-18	DIODE MA152WK

REF.NO.	PART NO.	DESCRIPTION	REMARK
D905	8-719-105-XX	DIODE RD6.2M-B1	
D906	8-719-104-34	DIODE 1S2836	

<IC>

IC401	8-759-800-81	IC LA7016
IC402	8-759-604-39	IC M5F78M12L
IC403	8-759-929-65	IC LM7912CT
IC404	8-759-300-71	IC HD14053BFP
IC405	8-759-926-18	IC SN74HC157ANS
IC407	8-759-926-18	IC SN74HC157ANS
IC408	8-759-300-71	IC HD14053BFP
IC409	8-759-300-71	IC HD14053BFP
IC410	8-759-100-96	IC UPC4558G2
IC411	8-759-100-96	IC UPC4558G2
IC412	8-759-145-27	IC UPC1406HA
IC413	8-759-008-45	IC MC74HC4538F
IC414	8-759-925-85	IC SN74HC32ANS
IC415	8-749-922-85	IC BX-6475
IC416	8-749-922-85	IC BX-6475
IC417	8-749-922-85	IC BX-6475

<JACK>

J101	1-566-980-21	CONNECTOR, ROUND TYPE 4P
J102	1-537-257-11	TERMINAL BOARD, INPUT/OUTPUT
J103	1-537-255-11	TERMINAL BOARD, INPUT/OUTPUT

<COIL>

L401	1-459-155-00	COIL (WITH CORE)	45UH
L402	1-459-155-00	COIL (WITH CORE)	45UH
L403	1-459-155-00	COIL (WITH CORE)	45UH
L404	1-459-155-00	COIL (WITH CORE)	45UH
L405	1-410-671-31	INDUCTOR	47UH
L650	1-410-482-31	INDUCTOR	100UH
L651	1-410-482-31	INDUCTOR	100UH

<TRANSISTOR>

Q401	8-729-140-96	TRANSISTOR 2SD774-34
Q402	8-729-140-97	TRANSISTOR 2SB734-34
Q450	8-729-230-49	TRANSISTOR 2SC2712-YG
Q451	8-729-230-49	TRANSISTOR 2SC2712-YG
Q452	8-729-230-49	TRANSISTOR 2SC2712-YG
Q453	8-729-901-00	TRANSISTOR DTC124EK
Q454	8-729-901-00	TRANSISTOR DTC124EK
Q456	8-729-230-49	TRANSISTOR 2SC2712-YG
Q457	8-729-230-46	TRANSISTOR 2SA1162-YG
Q501	8-729-230-49	TRANSISTOR 2SC2712-YG
Q502	8-729-230-49	TRANSISTOR 2SC2712-YG
Q503	8-729-230-49	TRANSISTOR 2SC2712-YG
Q504	8-729-230-49	TRANSISTOR 2SC2712-YG
Q505	8-729-901-01	TRANSISTOR DTC144EK
Q506	8-729-112-65	TRANSISTOR 2SA1462-Y33
Q507	8-729-112-65	TRANSISTOR 2SA1462-Y33
Q508	8-729-112-65	TRANSISTOR 2SA1462-Y33
Q509	8-729-112-65	TRANSISTOR 2SA1462-Y33
Q510	8-729-901-01	TRANSISTOR DTC144EK
Q511	8-729-901-01	TRANSISTOR DTC144EK
Q512	8-729-230-49	TRANSISTOR 2SC2712-YG
Q513	8-729-230-49	TRANSISTOR 2SC2712-YG
Q514	8-729-230-49	TRANSISTOR 2SC2712-YG
Q515	8-729-230-49	TRANSISTOR 2SC2712-YG

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q516	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q517	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q518	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q519	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q520	8-729-901-00	TRANSISTOR DTC124EK	
Q521	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q522	8-729-901-01	TRANSISTOR DTC144EK	
Q523	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q524	8-729-901-01	TRANSISTOR DTC144EK	
Q525	8-729-901-01	TRANSISTOR DTC144EK	
Q526	8-729-901-01	TRANSISTOR DTC144EK	
Q527	8-729-901-01	TRANSISTOR DTC144EK	
Q528	8-729-901-01	TRANSISTOR DTC144EK	
Q529	8-729-901-01	TRANSISTOR DTC144EK	
Q530	8-729-901-01	TRANSISTOR DTC144EK	
Q531	8-729-901-01	TRANSISTOR DTC144EK	
Q537	8-729-901-01	TRANSISTOR DTC144EK	
Q538	8-729-901-01	TRANSISTOR DTC144EK	
Q539	8-729-901-01	TRANSISTOR DTC144EK	
Q540	8-729-901-01	TRANSISTOR DTC144EK	
Q541	8-729-320-62	TRANSISTOR 2SD789-34	
Q542	8-729-901-01	TRANSISTOR DTC144EK	
Q545	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q650	8-729-902-96	TRANSISTOR FMS1	
Q651	8-729-902-96	TRANSISTOR FMS1	
Q652	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q653	8-729-901-00	TRANSISTOR DTC124EK	
Q654	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q655	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q656	8-729-901-00	TRANSISTOR DTC124EK	
Q657	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q658	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q659	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q660	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q661	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q662	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q663	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q664	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q665	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q666	8-729-116-06	TRANSISTOR 2SK160-K6	
Q667	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q668	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q669	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q670	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q671	8-729-901-00	TRANSISTOR DTC124EK	
Q672	8-729-901-00	TRANSISTOR DTC124EK	
Q673	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q674	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q675	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q676	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q677	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q678	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q679	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q680	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q681	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q687	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q688	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q689	8-729-901-00	TRANSISTOR DTC124EK	
Q690	8-729-901-00	TRANSISTOR DTC124EK	
Q691	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q692	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q693	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q694	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q695	8-729-107-31	TRANSISTOR 2SC3545-T43	

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q696	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q697	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q698	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q699	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q706	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q707	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q708	8-729-901-00	TRANSISTOR DTC124EK	
Q709	8-729-901-00	TRANSISTOR DTC124EK	
Q710	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q711	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q712	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q713	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q714	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q715	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q716	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q717	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q718	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q724	8-729-116-06	TRANSISTOR 2SK160-K6	
Q725	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q726	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q727	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q728	8-729-923-06	TRANSISTOR FMW-8	
Q729	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q730	8-729-923-06	TRANSISTOR FMW-8	
Q731	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q732	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q733	8-729-901-00	TRANSISTOR DTC124EK	
Q734	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q735	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q736	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q737	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q738	8-729-116-06	TRANSISTOR 2SK160-K6	
Q739	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q740	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q901	8-729-903-10	TRANSISTOR FMW1	
Q902	8-729-903-10	TRANSISTOR FMW1	
Q903	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q904	8-729-901-00	TRANSISTOR DTC124EK	
Q905	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q906	8-729-162-13	TRANSISTOR 2SC1621-B2	
Q907	8-729-902-96	TRANSISTOR FMS1	
Q908	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q909	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q910	8-729-902-96	TRANSISTOR FMS1	
Q911	8-729-162-13	TRANSISTOR 2SC1621-B2	
Q912	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q913	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q914	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q915	8-729-902-96	TRANSISTOR FMS1	
Q916	8-729-904-04	TRANSISTOR FMS2	
Q918	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q919	8-729-903-10	TRANSISTOR FMW1	
Q920	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q921	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q922	8-729-902-96	TRANSISTOR FMS1	
Q924	8-729-230-49	TRANSISTOR 2SC2712-YG	
		<RESISTOR>	
R401	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R403	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R450	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R451	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
R452	1-216-037-00	METAL GLAZE 330 5% 1/10W	

BB

REF.NO.	PART NO.	DESCRIPTION				REMARK
R453	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R454	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R455	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R456	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R459	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R460	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R461	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R462	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R463	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R464	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R466	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R467	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R468	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R469	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R470	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R471	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R472	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R473	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R474	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R501	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R502	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R503	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R504	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R505	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R506	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R507	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R508	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R509	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R510	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R511	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R512	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R513	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R514	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R515	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R516	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R517	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R518	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R519	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R520	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R521	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R522	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R523	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R524	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R525	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R526	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R527	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R528	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R529	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R530	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R531	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R532	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R533	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R534	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R535	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R536	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R537	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R538	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R539	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R540	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R541	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R542	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R543	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R544	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R545	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R546	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R547	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R548	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R549	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R550	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R551	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R552	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R553	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R554	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R555	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R556	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R557	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R558	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R559	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R560	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R561	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R562	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R563	1-216-637-11	METAL CHIP	270	0.50%	1/10W	
R564	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R565	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R566	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R567	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R568	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R569	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R570	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R571	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R572	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R573	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R574	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R575	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R576	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R577	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R578	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R579	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R580	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R581	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R584	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R585	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R586	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R587	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R588	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R589	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R590	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R591	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R592	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R593	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R594	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R595	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R596	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R597	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R598	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R599	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R600	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R601	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R602	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R603	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R604	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R605	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R606	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R607	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R608	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R609	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R610	1-216-073-00	METAL GLAZE	10K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R611	1-249-377-11	CARBON	0.47	5%	1/4W	F
R650	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R651	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R652	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R653	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R654	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R655	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R656	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R657	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R658	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R659	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R660	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R661	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R662	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R663	1-216-629-11	METAL CHIP	120	0.50%	1/10W	
R664	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R665	1-216-013-00	METAL GLAZE	33	5%	1/10W	
R666	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R667	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R668	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R669	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R670	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R671	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R672	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R673	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R674	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R675	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R676	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R677	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R678	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R679	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R680	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R681	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R682	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R683	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R684	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R685	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R686	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R687	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R688	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R689	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R690	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R691	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R692	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R693	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R694	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R695	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R696	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R697	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R698	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R699	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R701	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R702	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R703	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R704	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R705	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R706	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R707	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R708	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R709	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R710	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R711	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R713	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R714	1-216-647-11	METAL CHIP	680	0.50%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R715	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R720	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R728	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R729	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R730	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R731	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R732	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R733	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R734	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R735	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R736	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R737	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R738	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R739	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R740	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R741	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R742	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R743	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R744	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R745	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R746	1-216-625-11	METAL CHIP	82	0.50%	1/10W	
R747	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R748	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R749	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R750	1-216-629-11	METAL CHIP	120	0.50%	1/10W	
R751	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R752	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R753	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R754	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R755	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R756	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R757	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R758	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R759	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R760	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R761	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R762	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R763	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R764	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R765	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R766	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R767	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R768	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R770	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R771	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R772	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R783	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R785	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R786	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R787	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R788	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R789	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R790	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R791	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R792	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R793	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R794	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R795	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R796	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R797	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R798	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R799	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R801	1-216-047-00	METAL GLAZE	820	5%	1/10W	

BB **Y**

REF.NO.	PART NO.	DESCRIPTION				REMARK
R802	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R803	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R804	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R805	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R806	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R807	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R808	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R809	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R810	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R811	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R812	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R813	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R814	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R815	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R816	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R817	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R819	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R820	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R821	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R829	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R830	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R832	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R836	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R837	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R901	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R902	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R903	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R904	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R905	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R906	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R907	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R908	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R909	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R910	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R911	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R912	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R913	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R914	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R915	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R917	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R918	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R919	1-216-685-11	METAL CHIP	27K	0.50%	1/10W	
R920	1-216-105-00	METAL GLAZE	220K	5%	1/10W	
R921	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R922	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R923	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R924	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R925	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R926	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R927	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R928	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R929	1-216-105-00	METAL GLAZE	220K	5%	1/10W	
R930	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R931	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R932	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R933	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R934	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R935	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R936	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R937	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R938	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R939	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R940	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R941	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R942	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R943	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R944	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R945	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R950	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R961	1-216-025-00	METAL GLAZE	100	5%	1/10W	

<RELAY>

RL401	1-515-757-11	RELAY
RL402	1-515-757-11	RELAY
RL403	1-515-757-11	RELAY

<VARIABLE RESISTOR>

RV901	1-228-994-00	RES, ADJ, CARBON 10K

<SWITCH>

SW1	1-570-859-11	SWITCH, SLIDE

****

*A-1394-213-A Y BOARD, COMPLETE
****

*1-526-659-00	SOCKET, IC (DP) 28P
*1-526-950-11	SOCKET, IC 64P
*1-568-984-11	CONNECTOR, MALE 96P
1-570-204-21	SWITCH, KEY BOARD
1-570-598-11	SWITCH, DIP

<CAPACITOR>

C1	1-124-927-11	ELECT	4.7MF	20%	50V
C2	1-124-927-11	ELECT	4.7MF	20%	50V
C3	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C4	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C5	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C7	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C8	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C9	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C10	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C11	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C12	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C13	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C14	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C15	1-164-344-11	CERAMIC CHIP	0.068MF	10%	25V
C16	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C17	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C18	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C19	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C20	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C21	1-163-097-00	CERAMIC CHIP	15PF	5%	50V
C22	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C23	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C24	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C25	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C26	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C27	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C28	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C29	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C30	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C32	1-163-263-11	CERAMIC CHIP	330PF	5%	50V

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
C33	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C34	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C35	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C36	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C37	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C38	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C39	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C40	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C41	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C42	1-124-477-11	ELECT	47MF	20%	16V	
C43	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C45	1-163-089-00	CERAMIC CHIP	6PF	0.5PF	50V	
C46	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C47	1-124-119-00	ELECT	330MF	20%	16V	
C48	1-124-477-11	ELECT	47MF	20%	16V	
C49	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C50	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C51	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C52	1-126-103-11	ELECT	470MF	20%	16V	
C53	1-126-101-11	ELECT	100MF	20%	16V	
C54	1-126-101-11	ELECT	100MF	20%	16V	
C55	1-126-101-11	ELECT	100MF	20%	16V	
C56	1-126-101-11	ELECT	100MF	20%	16V	
C57	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	
C58	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	
C59	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C60	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C61	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C62	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C63	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C64	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C65	1-163-036-00	CERAMIC CHIP	0.068MF		50V	
C67	1-124-119-00	ELECT	330MF	20%	16V	
C68	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C69	1-163-121-00	CERAMIC CHIP	150PF	5%	50V	
C70	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C71	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C72	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C73	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C74	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C75	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C76	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C77	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	
C78	1-124-907-11	ELECT	10MF	20%	50V	
C83	1-124-907-11	ELECT	10MF	20%	50V	
C84	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C85	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	
C86	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	
C87	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	
C90	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	
C91	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	
C92	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1	8-719-971-20	DIODE ERC38-06	
D2	8-719-971-20	DIODE ERC38-06	
D3	8-719-104-34	DIODE 1S2836	
D4	8-719-800-60	DIODE TLR214	
D5	8-719-104-34	DIODE 1S2836	
D7	8-719-400-18	DIODE MA152WK	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC1	8-759-320-49	IC HD64180R1P8	
IC2	8-759-748-29	IC MBM27C512-20	
IC3	8-752-332-28	IC CXK5864BM-12L-T6	
IC4	8-759-720-67	IC X28C64PI	
IC5	8-759-925-80	IC SN74HC14ANS	
IC6	8-759-239-55	IC TC74HC123AF	
IC7	8-759-008-21	IC MC74HC541F	
IC8	8-759-008-21	IC MC74HC541F	
IC9	8-759-995-97	IC MB8855-1314N	
IC10	8-759-984-56	IC MB670840PF	
IC11	8-759-984-59	IC MB654842UPF	
IC12	8-759-984-58	IC MB671469PF	
IC13	8-759-984-57	IC MB605195	
IC14	8-752-322-10	IC CXK5814P-45L	
IC15	8-752-333-84	IC CXK3864-040M	
IC16	8-752-333-85	IC CXK3864-041M	
IC17	8-752-333-86	IC CXK3864-042M	
IC18	8-759-301-24	IC HD10124	
IC19	8-759-301-24	IC HD10124	
IC20	8-752-306-51	IC CX23065A	
	*1-563-949-11	SOCKET, SIL 8P; IC20	
IC21	8-759-911-24	IC SN74S124N	
IC22	8-759-100-93	IC UPC393G2	
IC23	8-759-031-50	IC MC74F00M	
IC24	8-759-008-57	IC MC34051P	
IC25	8-759-114-06	IC UPC814G2-1	
IC26	8-759-032-32	IC MC74HC132AF	
IC27	8-759-925-98	IC SN74HC107ANS	
IC28	8-759-032-01	IC MC74HC00AF	
IC29	8-759-239-55	IC TC74HC123AF	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L1	1-459-155-00	COIL (WITH CORE) 45UH	
L2	1-459-155-00	COIL (WITH CORE) 45UH	
L3	1-459-155-00	COIL (WITH CORE) 45UH	
L4	1-459-155-00	COIL (WITH CORE) 45UH	

<IC LINK>

REF.NO.	PART NO.	DESCRIPTION	REMARK
PS1	⚠1-532-679-91	LINK, IC	
PS2	⚠1-532-679-91	LINK, IC	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q2	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q3	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q4	8-729-230-46	TRANSISTOR 2SA1162-YG	
Q5	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q6	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q7	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q9	8-729-230-46	TRANSISTOR 2SA1162-YG	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R2	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R3	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R4	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R5	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R6	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R7	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R8	1-216-001-00	METAL GLAZE	10	5%	1/10W	

Y

REF.NO.	PART NO.	DESCRIPTION				REMARK
R9	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R10	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R11	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R12	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R13	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R14	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R15	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R17	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R18	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R19	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R20	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R21	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R22	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R23	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R24	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R25	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R26	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R27	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R28	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R29	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R30	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R31	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R32	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R33	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R34	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R36	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R37	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R38	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R39	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R40	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R41	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R42	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R43	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R44	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R45	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R46	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R47	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R48	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R49	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R50	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R51	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R52	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R53	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R54	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R55	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R56	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R57	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R58	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R59	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R60	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R61	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R62	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R63	1-216-091-00	METAL GLAZE	56K	5%	1/10W	
R64	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R65	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R66	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R67	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R68	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R69	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R70	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R71	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R72	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R73	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R74	1-216-073-00	METAL GLAZE	10K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R75	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R76	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R77	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R78	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R79	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R80	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R81	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R82	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R83	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R84	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R85	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R86	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R87	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R88	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R89	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R90	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R91	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R92	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R93	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R100	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R101	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R102	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R103	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R104	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R105	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R106	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R107	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R108	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R109	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R110	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R111	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R112	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R113	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R114	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R115	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R116	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R117	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R118	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R119	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R120	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R121	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R122	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R123	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R124	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R125	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R126	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R127	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R128	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R128	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R129	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R130	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R131	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R132	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R133	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R134	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R135	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R136	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R137	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R138	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R139	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R140	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R141	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R142	1-216-049-00	METAL GLAZE	1K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION	REMARK
R143	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R146	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R147	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R148	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R149	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R150	1-216-105-00	METAL GLAZE 220K 5% 1/10W	
R151	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R152	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R153	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R154	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R155	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R166	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R167	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R168	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
R169	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R170	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R171	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R172	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R173	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R174	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
R175	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R176	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R177	1-216-129-00	METAL GLAZE 2.2M 5% 1/10W	
R178	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R182	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R183	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R184	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W	
R185	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R187	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R189	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R190	1-216-037-00	METAL GLAZE 330 5% 1/10W	
		<CRYSTAL>	
X1	1-578-687-11	VIBRATOR, CRYSTAL	
X2	1-577-116-21	VIBRATOR, CRYSTAL	
X3	1-567-192-11	OSCILLATOR, CERAMIC	
X4	1-577-353-11	VIBRATOR, CERAMIC	

English
92LL1514-1
Printed in Japan
© 1992. 12

Sony Corporation
Display Products Group

9-978-173-81

RVP-6000QMB/QMT
RM-1270

4/16

SONY®
SERVICE MANUAL

AEP Model
Chassis No. SCC-D82B-A

CORRECTION-1

File this correction with the service manual.

INTRODUCTION

Part No. of the program ROM (IC2) on the Y board was incorrect.
Please use the correct Part No. as below.

☛ : Indicated corrected portion

Page 293 : **SECTION 9 ELECTRICAL PARTS LIST**

Incorrect				Correct			
REF.NO.	PART NO.	DISCRIPTION	REMARK	REF.NO.	PART NO.	DISCRIPTION	REMARK
IC2	8-759-510-91	IC MBM27C512P-25-PJY013		IC2	☛ 8-759-163-64	IC MBM27C512-20-PJY016	

SUPPLEMENT-1

Page 43 : **SECTION 9 ELECTRICAL PARTS LIST**

Incorrect				Correct			
REF.NO.	PART NO.	DISCRIPTION	REMARK	REF.NO.	PART NO.	DISCRIPTION	REMARK
IC2	8-759-748-29	IC MBM27C512-20		IC2	☛ 8-759-163-64	IC MBM27C512-20-PJY016	

MICROFILM

9-978-173-91

Sony Corporation
Display Products Group

Englis
93EL1510-
Printed in Japa
©1993.

1-13. OTHER ADJUSTMENTS

RGB SIZE and SHIFT Adjustments

Display the input signal on the screen and adjust.
For details, see page 16.

Blanking Adjustment

When the picture is bigger or smaller than the screen, perform this adjustment.

Keys for blanking adjustment

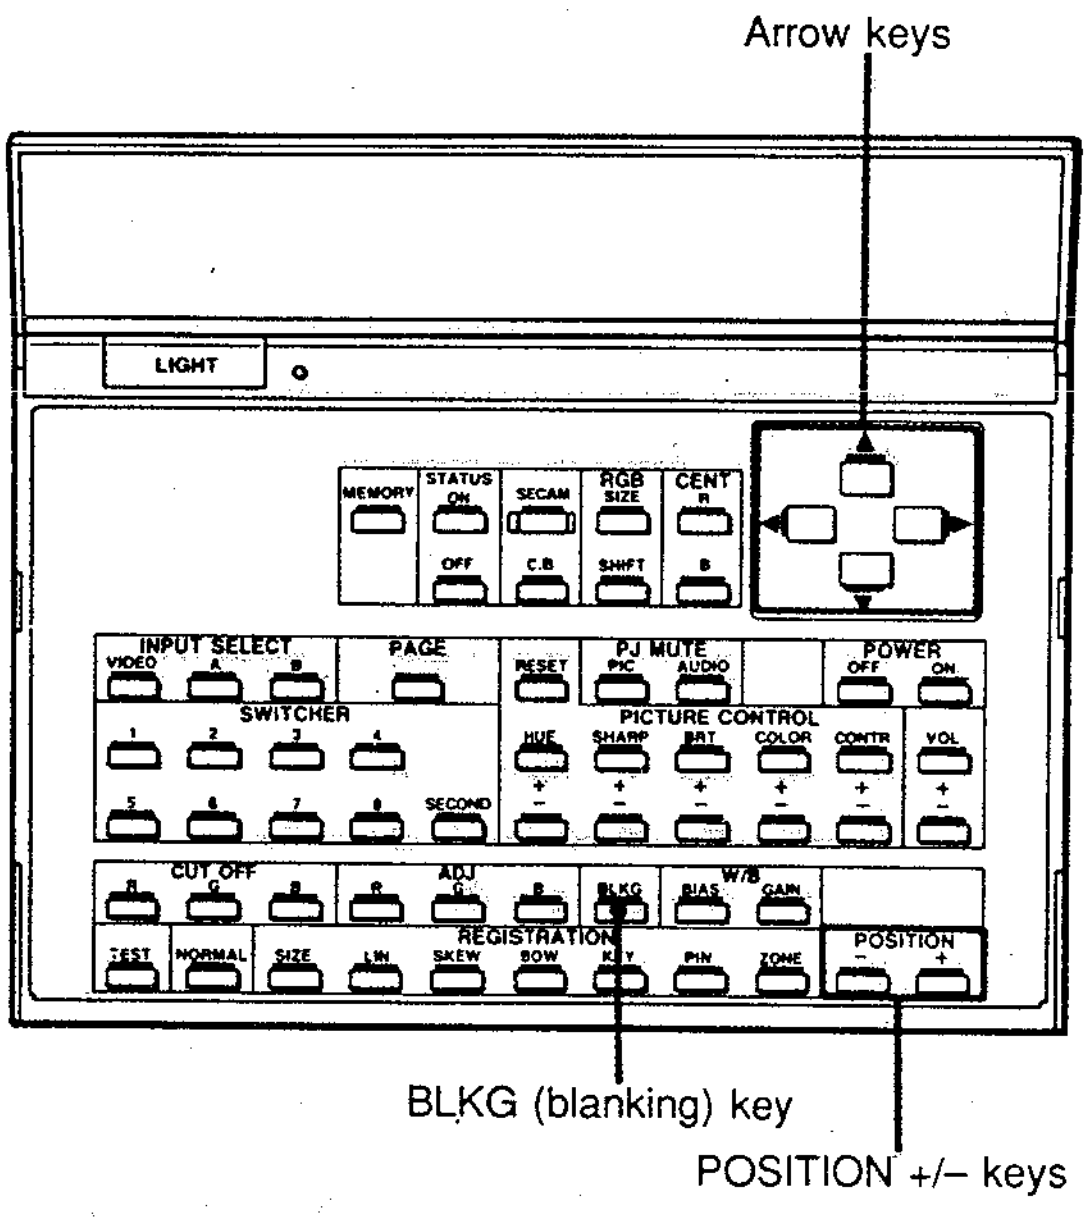
Arrow keys
LIGHT
MEMORY
STATUS
ON
OFF
SECAM
C.B
RGB
SIZE
SHIFT
CENT
R
B
INPUT SELECT
VIDEO
A
B
PAGE
RESET
PJ MUTE
PIC
AUDIO
POWER
OFF
ON
SWITCHER
1
2
3
4
5
6
7
8
SECOND
PICTURE CONTROL
HUE
SHARP
BRT
COLOR
CONTR
VOL
CUT OFF
R
G
B
ADJ
R
G
B
BLKG
W/B
BIAS
GAIN
REGISTRATION
TEST
NORMAL
SIZE
LIN
SKEW
BOW
KEY
PIN
ZONE
POSITION
BLKG (blanking) key
POSITION +/– keys

1 **Press BLKG key to enter the blanking adjustment mode.**

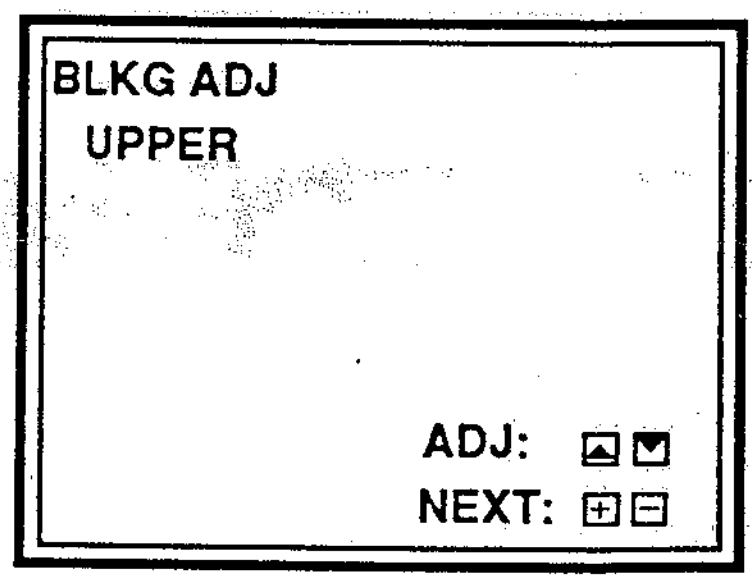

BLKG ADJ
UPPER

ADJ: ▲▼
NEXT: ⊞⊟

2 **Press POSITION +/– key to select the position to be cut off.**
The position to be cut off will change as follows.

+ : UPPER → LOWER → LEFT → RIGHT
– : In reverse order

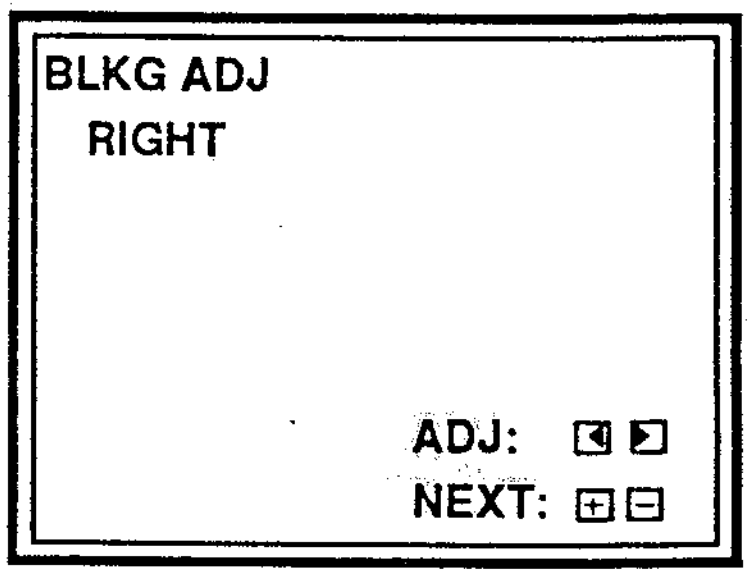

BLKG ADJ
RIGHT

ADJ: ◀▶
NEXT: ⊞⊟

3 To adjust UPPER and LOWER:
Adjust with ▲ or ▼ key.
To adjust LEFT and RIGHT:
Adjust with ◀ or ▶ key.

4 **Press MEMORY key after the adjustment.**

Proceed to "Memory of Adjustment Data".

1-14. MEMORY OF ADJUSTMENT DATA

After adjustment, you need to save the adjustment data.
After the initial adjustment, you must perform two steps to save the data.

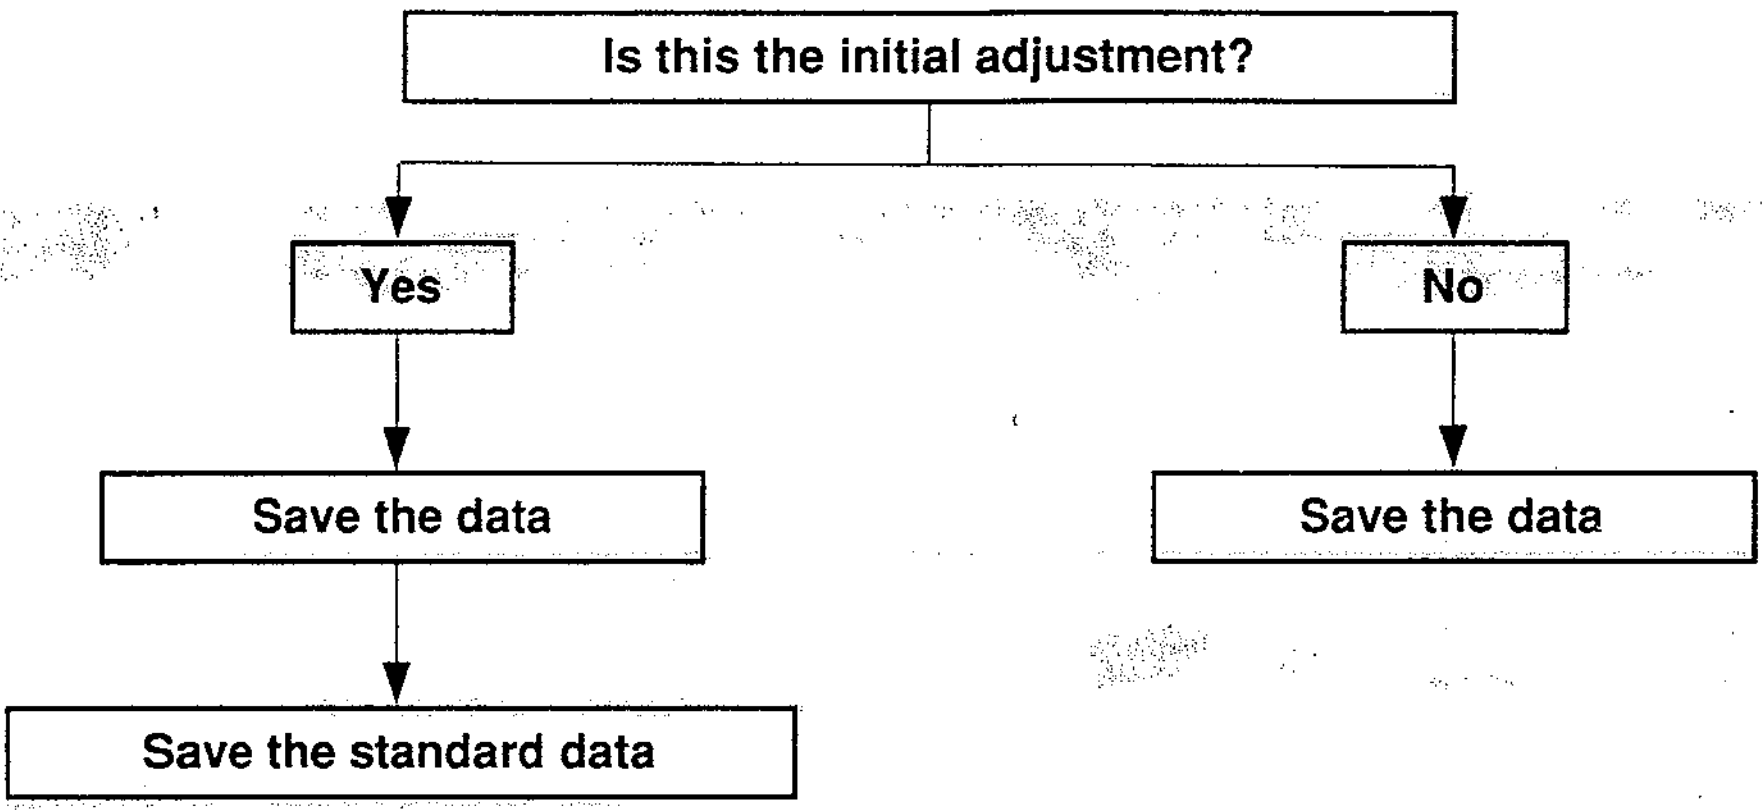

How to Save the Data

After adjustment, press MEMORY key.
(Please do not keep pressing.)
The adjustment data of the input signal will be saved.
During saving other keys cannot be operated.

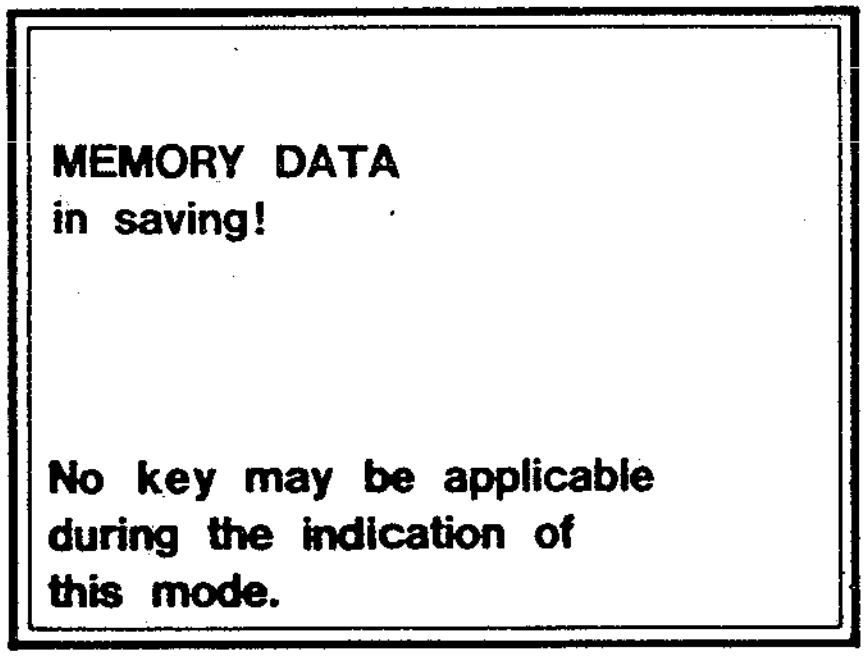
MEMORY DATA
in saving!

No key may be applicable
during the indication of
this mode.

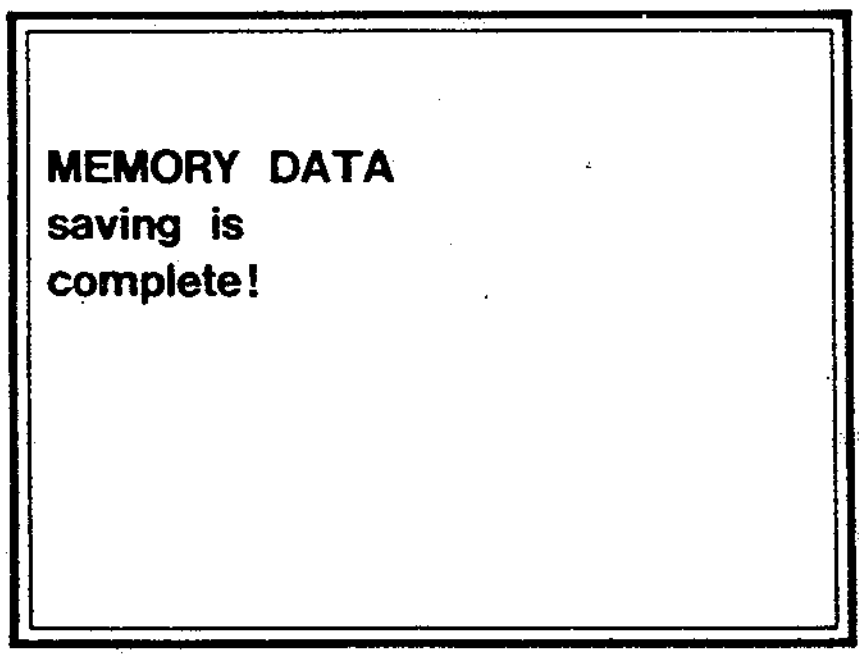
MEMORY DATA
saving is
complete!

Saving the data is completed.

How to Save as the Standard Data

If the registration data is saved according to the horizontal frequency of the specific input signal and then saved as Standard Data, the registration data will be calculated for other horizontal frequencies and is applied when another input signals of different frequency are connected.

1 **After saving the data, keep pressing MEMORY key for more than 3 seconds to enter the standard data saving mode.**

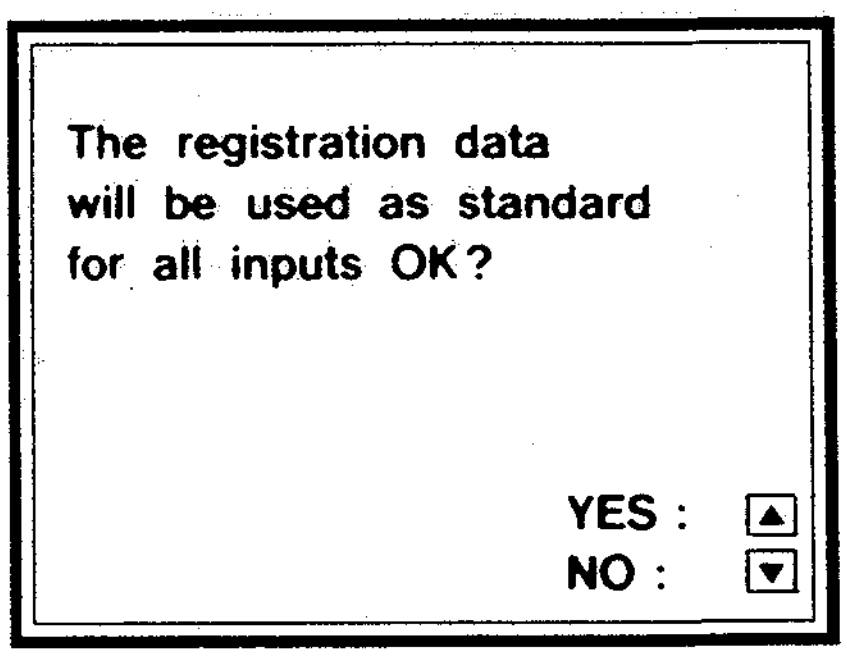
The registration data
will be used as standard
for all inputs OK?

YES : ▲
NO : ▼

2 **Press ▲ key.**
All the registration data will be saved as the Standard Data, clearing all registration data which had been saved previously.

For reference — The memory architecture

Memory Name	Memory Data	How the projector recognizes data	When data is memorized
Channel Memory	Picture control data Volume data	Input connector	When the input connector is switched. When the power is turned off.
Status Memory	RGB SIZE, SHIFT data Blanking data SECAM ON/OFF CLEAR BLUE ON/OFF Color temperature (9300/6500/3200/Preset) Clamp pulse position	Horizontal and vertical frequency Condition of sync signal Input connector	When MEMORY key is pressed. When the power is turned off.
Registration Memory	Registration data	Horizontal frequency of input signal	When MEMORY key is pressed. When the input connector is switched. When the horizontal frequency is changed. When the power is turned off.
Color Temperature Memory	RGB Bias and Gain	Status memory	When MEMORY key is pressed. When the input connector is switched. When the color temperature is changed. When the power is turned off.

Notes

- When the power is turned off on the Commander, all the data is saved and when the power is turned on again, the data will be recovered.
- Turn off the main power on the set after turning off the power on the Commander, otherwise the data will not be saved.

1-15. DATA RESET

- This set has two possibilities for data reset.

Previous Data Reset

The data will be reset to the previously saved data (The data before the adjustment).

1 **Enter the mode to be reset.**

2 **Press ◀ and ▶ keys simultaneously.**
(The illustration shows the red size adjustment case).

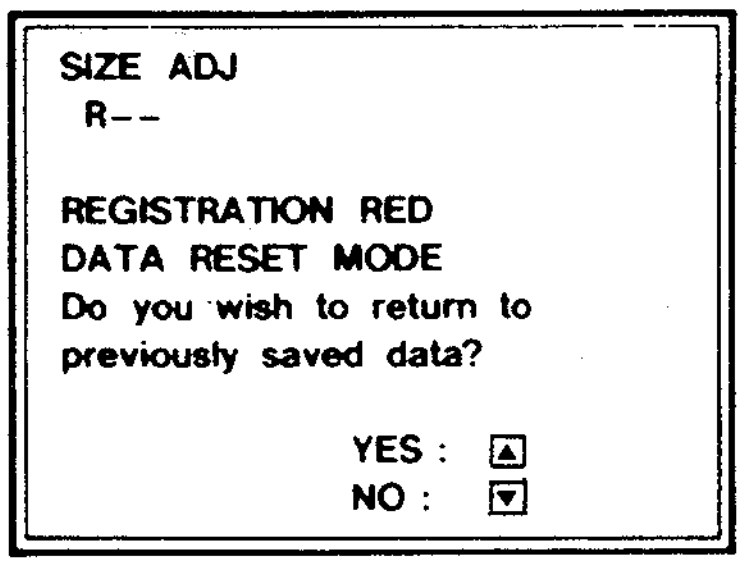

SIZE ADJ
R--

REGISTRATION RED
DATA RESET MODE
Do you wish to return to previously saved data?

YES : ▲
NO : ▼

3 **Press ▲ key.**

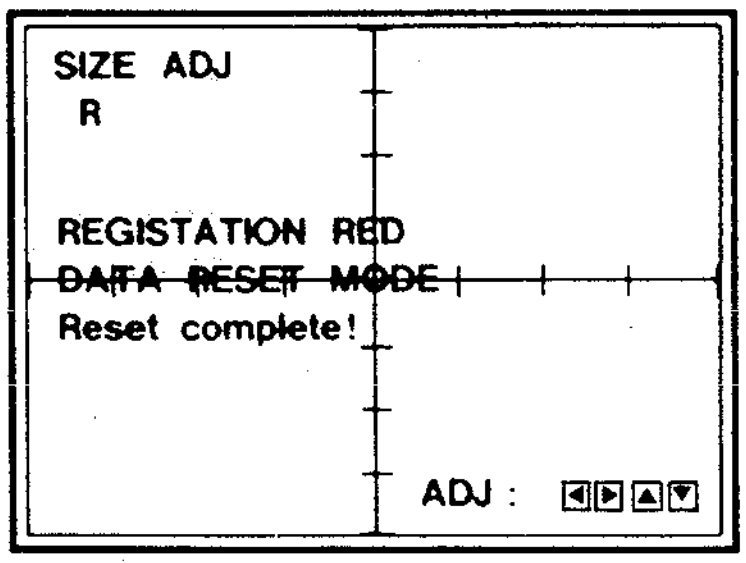

SIZE ADJ
R

REGISTRATION RED
DATA RESET MODE
Reset complete!

ADJ : ◀▶▲▼

Factory Reset

Perform after “previous data reset”.
The data will be reset to the factory set level.

1 **After “previous data reset”, enter the mode to be reset.**

2 **Press ◀ and ▶ keys simultaneously.**
(The illustration shows the red zone adjustment case.)

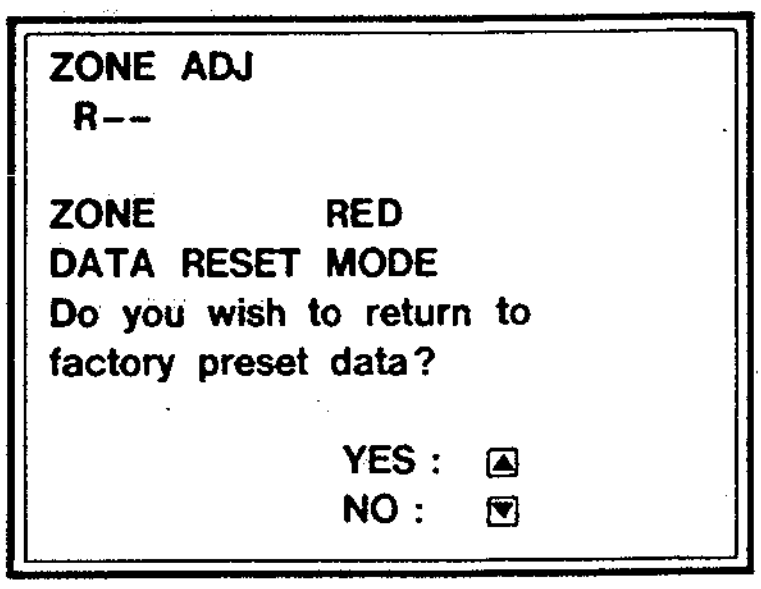

ZONE ADJ
R--

ZONE RED
DATA RESET MODE
Do you wish to return to factory preset data?

YES : ▲
NO : ▼

3 **Press ▲ key.**

For reference — Mode and data reset correspondence

Mode	Data to be reset
RGB size	H-size and V-size
Shift	H-shift and V-shift
R-centering	Not applicable
B-centering	Not applicable
Size, Linearity, Skew, Bow, Keystone, Pincushion	All the registration data for the selected color (including the Zone data)
Zone	Zone data for the selected color
Blanking	UPPER/LOWER/LEFT/RIGHT side blanking data
Gain	All the Bias, Gain data for all colors of the current color temperature
Bias	All the Bias, Gain data for all colors of the current color temperature

1-16. TO MAKE THE SERVICING KEYS INOPERABLE

When you turn off the set, the servicing keys become inoperable in order to prevent the users from changing the registration adjustments.

It is also possible to make the keys inoperable while the power is on in the following way.

1 **Keep pressing NORMAL key for at least 3 seconds.**

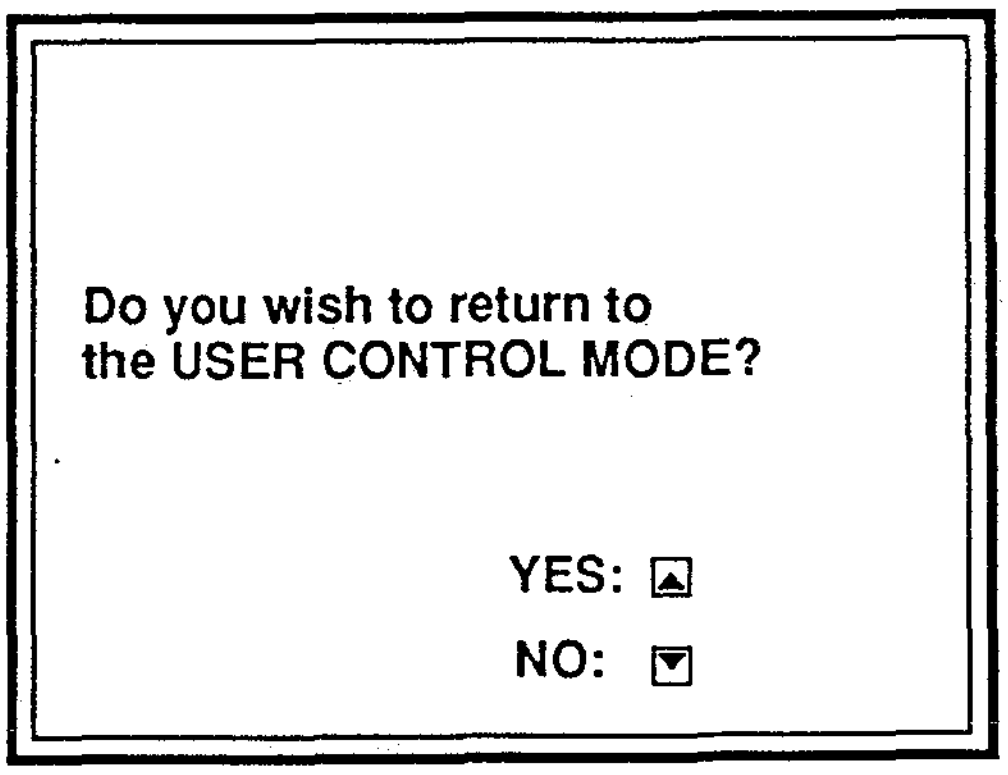

Do you wish to return to the USER CONTROL MODE?

YES: ▲

NO: ▼

2 **Press ▲ key.**
The servicing keys are now inoperable.

1-17. LIST OF THE MESSAGES

Use the list below to check the meaning of the messages displayed on the screen.
The list is divided into sections depending on the location which the message appears. Check the location first, then refer to the alphabet for the section to find the message.

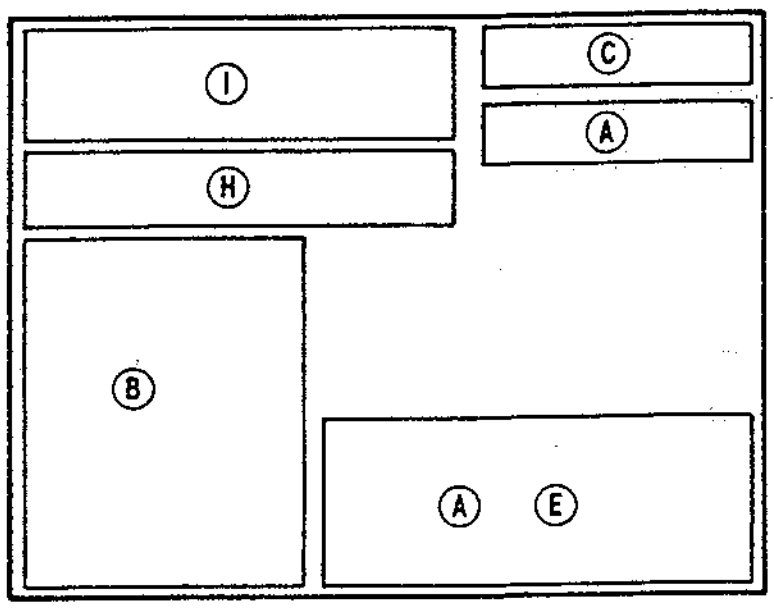

Ⓓ, Ⓕ, Ⓖ and a part of Ⓘ will appear all over the screen.

A Caution, message	
• Not applicable!	• The key is not applicable in the current mode.
• Overflow!	• The adjustment data has passed the adjustable range limit, and does not change any more.
• PIC MUTE	• Picture mute mode is on.
• Input is not VIDEO.	• The input signal is not VIDEO.
• Input is not NTSC.	• The input signal is not NTSC.
• Input is not RGB.	• The input signal is not RGB.
• Input is B & W.	• The input signal is black and white.
• NO INPUT	• No signal is input.

B PIC CONTROL data	
• CONTR (CONTRAST)	• Contrast
• COLOR	• Color
• BRT (BRIGHTNESS)	• Brightness
• SHARP (SHARPNESS)	• Sharpness
• HUE	• Hue
• PIC CONTROL data reset	• Resets the PIC CONTROL data.

C Input channel	
• VIDEO	• Input from VIDEO IN.
• INPUT-A	• Input from RGB IN.
• INPUT-B	• Input from optional interface board.
• SW'ER x-y (switcher x = 1-2, y = 1-8)	• Input from optional switcher.

D PAGE	
Subtitle	
• USER PRESET	• User preset
• USER CONTROL	• User control
• SYSTEM PRESET	• System preset
• INPUT INFO (INPUT INFORMATION)	• Input information

PAGE 1	
• STATUS ON/OFF	• On-screen display on/off
• PIC MUTE ON/OFF	• Picture mute mode on/off
• AUDIO MUTE ON/OFF	• Audio mute mode on/off
• CLEAR BLUE ON/OFF/---	• Clear blue mode on/off/ does not function.
• SECAM ON/OFF/---	• Compulsive SECAM mode on/off/does not function.
PAGE 2	
• CONTR (CONTRAST)	• Contrast
• COLOR	• Color
• BRT (BRIGHTNESS)	• Brightness
• SHARP (SHARPNESS)	• Sharpness
• HUE	• Hue
• VOL	• Volume
• PIC CONTROL data reset	• Resets the PIC CONTROL data.
PAGE 3	
• COLOR TEMPEPATURE: 9300/6500/3200/ RESET	• Color temperature is set to 9300/6500/3200/the data adjustable by the service personnel.
• CLAMP: AUTO/S on G/H/C	• Clamp position is set to automatic internal/ external sync signal position.
PAGE 4	
• INPUT SIGNAL	• Input signal
• Y/C	• S video input signal from VIDEO IN
• RGB	• RGB input signal
• NTSC	• NTSC input signal from VIDEO IN
• PAL	• PAL input signal from VIDEO IN
• SECAM	• SECAM input signal from VIDEO IN
• B & W	• Black and white input signal from VIDEO IN
• fH	• Horizontal frequency
• fV	• Vertical frequency
• Internal oscillation	• Internal oscillation mode (No signal is input.)
• H/C-SYNC	• Horizontal sync signal or composite sync signal
• V-SYNC	• Vertical sync signal
• SYNC ON G	• Composite video signal

• H/C-SYNC: POS/NEG/---	• The polarity of the H/C-SYNC is positive/ negative/not input.
• V-SYNC: POS/NEG/---	• The polarity of the V-SYNC is positive/ negative/not input.
• SYNC ON G: NEG/---	• The polarity of the SYNC ON G is negative/not input.

E Operation

• YES: ▲	• Press ▲ for "Yes".
• NO: ▼	• Press ▼ for "No".
• SELECT: ◀ ▶	• Press ◀ or ▶ to select.
• SELECT: ◀ ▶ ▲ ▼	• Press ◀, ▶, ▲, or ▼ to select.
• ADJ: ◀ ▶ ▲ ▼	• Press ◀, ▶, ▲, or ▼ to adjust.
• ADJ: ◀ ▶	• Press ◀ or ▶ to adjust.
• ADJ: ▲ ▼	• Press ▲ or ▼ to adjust.
• NEXT: ⊞ ⊟	• Press ⊞ to move the cursor to the next position. Press ⊟ to move the cursor to the previous position.
• NEXT: [PAGE]	• Press PAGE to go to the next page.
• EXIT: [PAGE]	• Press PAGE to exit the PAGE mode.
• EXIT: [NORMAL]	• Press NORMAL to exit the TEST mode.

F Memory data

• MEMORY DATA in saving.	• Saving the memory data now.
• MEMORY DATA saving is complete!	• Saving the memory data is completed.
• No key may be applicable during the indication of this mode.	• When in this mode (MEMORY DATA saving), no key functions.
• The registration data will be used as standard for all inputs OK?	• Is it all right that this registration data will be used as standard for all inputs?

G Data reset

• Do you wish to return to factory preset data?	• Do you wish to reset the data to the factory preset data?
• Do you wish to return to previously saved data?	• Do you wish to reset the data to the previously saved data?
• Reset complete!	• Resetting is completed.
• RGB SIZE DATA RESET MODE.	• RGB input size data resetting mode
• RGB SHIFT DATA RESET MODE.	• RGB input shift data resetting mode
• BLANKING DATA RESET MODE.	• Blanking data resetting mode
• CENTERING ALL COLOR DATA RESET MODE.	• Centering data (all color) resetting mode
• W/B GAIN & BIAS ALL COLOR DATA RESET MODE.	• Gain, bias (all color) data resetting mode
• REGISTRATION (RED/ GREEN/BLUE) DATA RESET MODE	• Registration (red, green or blue) data resetting mode

H Raster

• RASTER R G B	• Red, green and blue are projected.
• RASTER R - -	• Only red is projected.
• RASTER - G -	• Only green is projected.
• RASTER - - B	• Only blue is projected.
• RASTER R G -	• Red and green are projected.
• RASTER R - B	• Red and blue are projected.
• RASTER - G B	• Green and blue are projected.

I Adjustment

• RGB SIZE ADJ	• RGB input size adjustment mode
• RGB SHIFT ADJ	• RGB input shift adjustment mode
• R CENT ADJ	• Red centering adjustment mode
• G CENT ADJ	• Green centering adjustment mode
• B CENT ADJ	• Blue centering adjustment mode
• SIZE ADJ	• Size adjustment mode
• LIN (LINEARITY) ADJ	• Linearity adjustment mode
• SKEW ADJ	• Skew adjustment mode
• BOW ADJ	• Bow adjustment mode
• KEY (KEYSTONE) ADJ	• Keystone adjustment mode
• PIN (PINCUSHION) ADJ	• Pincushion adjustment mode
• ZONE ADJ	• Zone adjustment mode
• BLKG ADJ UPPER/ LOWER/LEFT/RIGHT	• Blanking adjustment (upper, lower, left, or right) mode
• BIAS ADJ	• White balance bias adjustment mode
• GAIN ADJ	• White balance gain adjustment mode
• Do you wish to enter the SERVICEMAN CONTROL MODE?	• Do you wish to enter the service personnel control mode?
• Do you wish to return to the USER CONTROL MODE?	• Do you wish to return to the user control mode?

2-2. REMOVE THE CHASSIS ASSEMBLY

Note: Check the focus and the registration after mounting the chassis.
Adjust the focus by the lens focus.

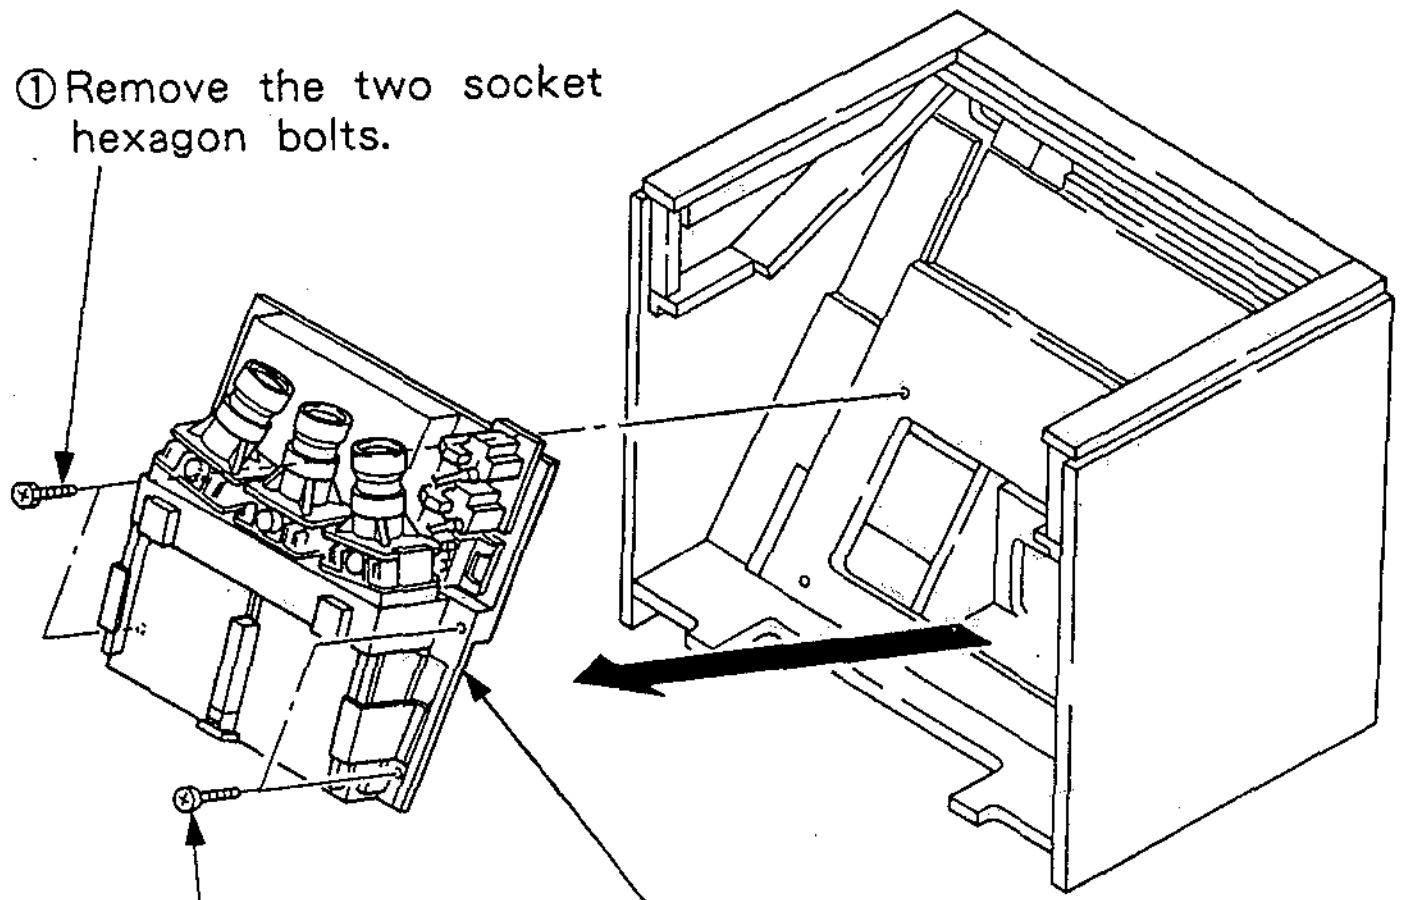

① Remove the two socket hexagon bolts.

② Remove the two socket hexagon bolts.

③ Remove the chassis assembly.

2-3. REMOVE THE LENS

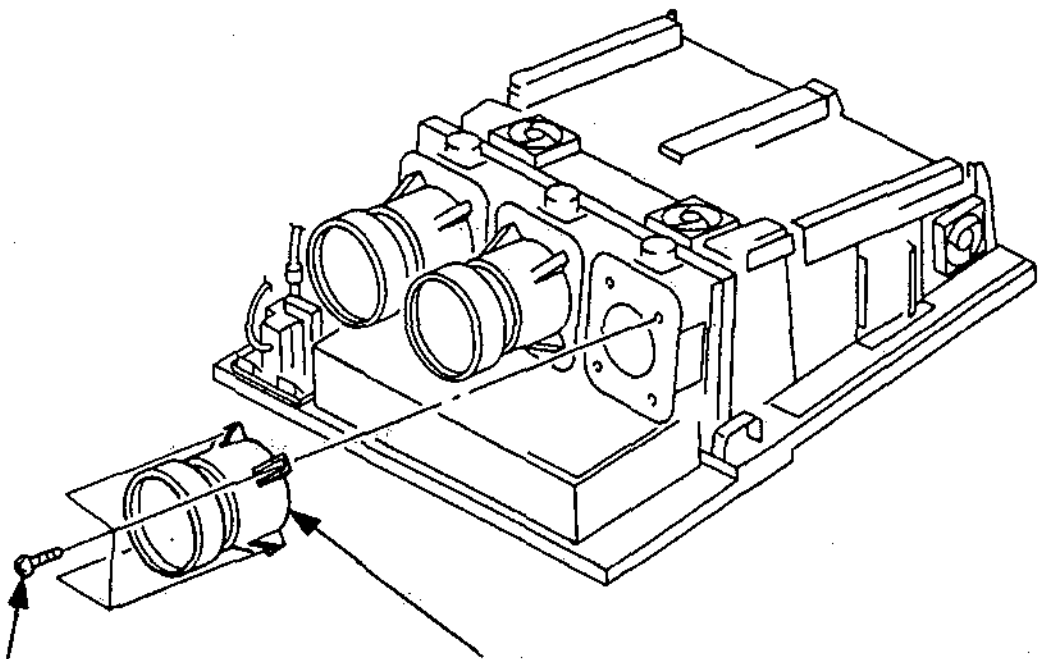

① Remove the four screws (B5 × 14).

② Remove the lens.

2-4. REMOVE THE PICTURE TUBE

HIGH VOLTAGE CABLE REMOVAL

① Pressing cable, turn 90°
② Pull out a high-tension lead wire connected to HV BLOCK.

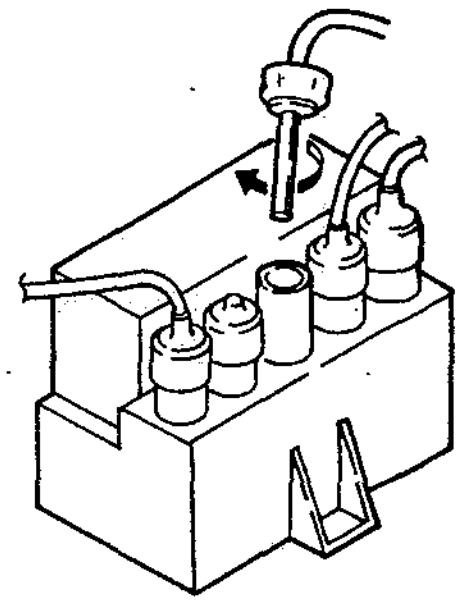

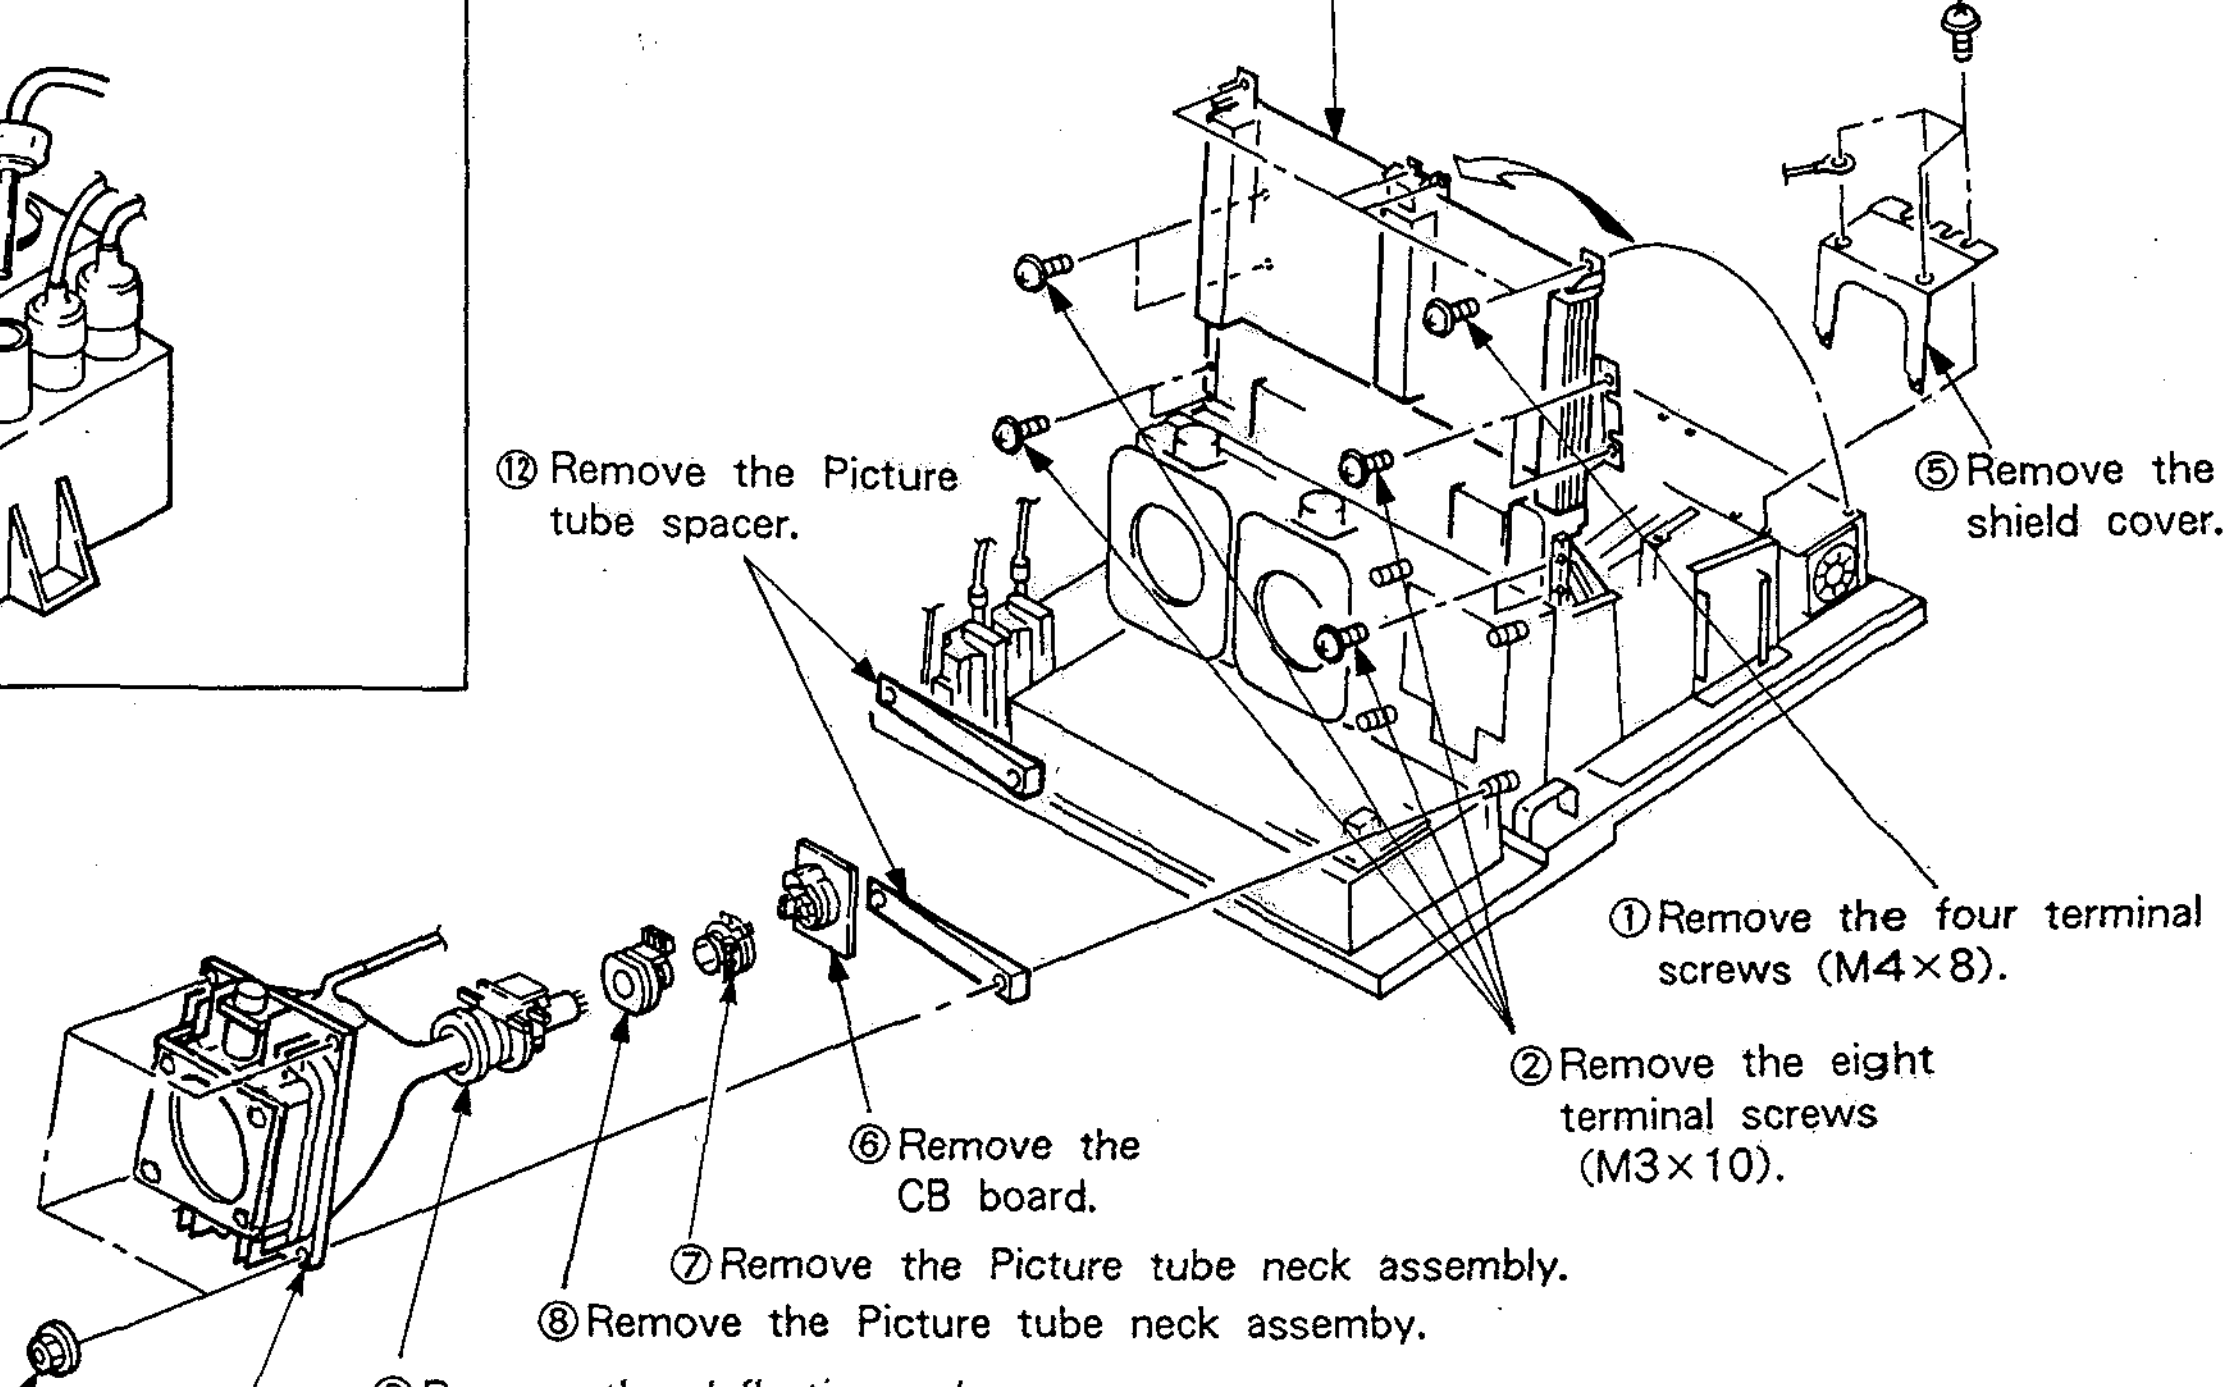

① Remove the four terminal screws (M4×8).

② Remove the eight terminal screws (M3×10).

③ Open the ED block assembly.

④ Remove the four terminal screws (M3×10).

⑤ Remove the shield cover.

⑥ Remove the CB board.

⑦ Remove the Picture tube neck assembly.

⑧ Remove the Picture tube neck assemby.

⑨ Remove the deflecting yoke.

⑩ Remove the four flange nuts (M5).

⑪ Remove the Picture tube.

⑫ Remove the Picture tube spacer.

2-5. REMOVE THE POWER SOURCE BLOCK ASSEMBLY

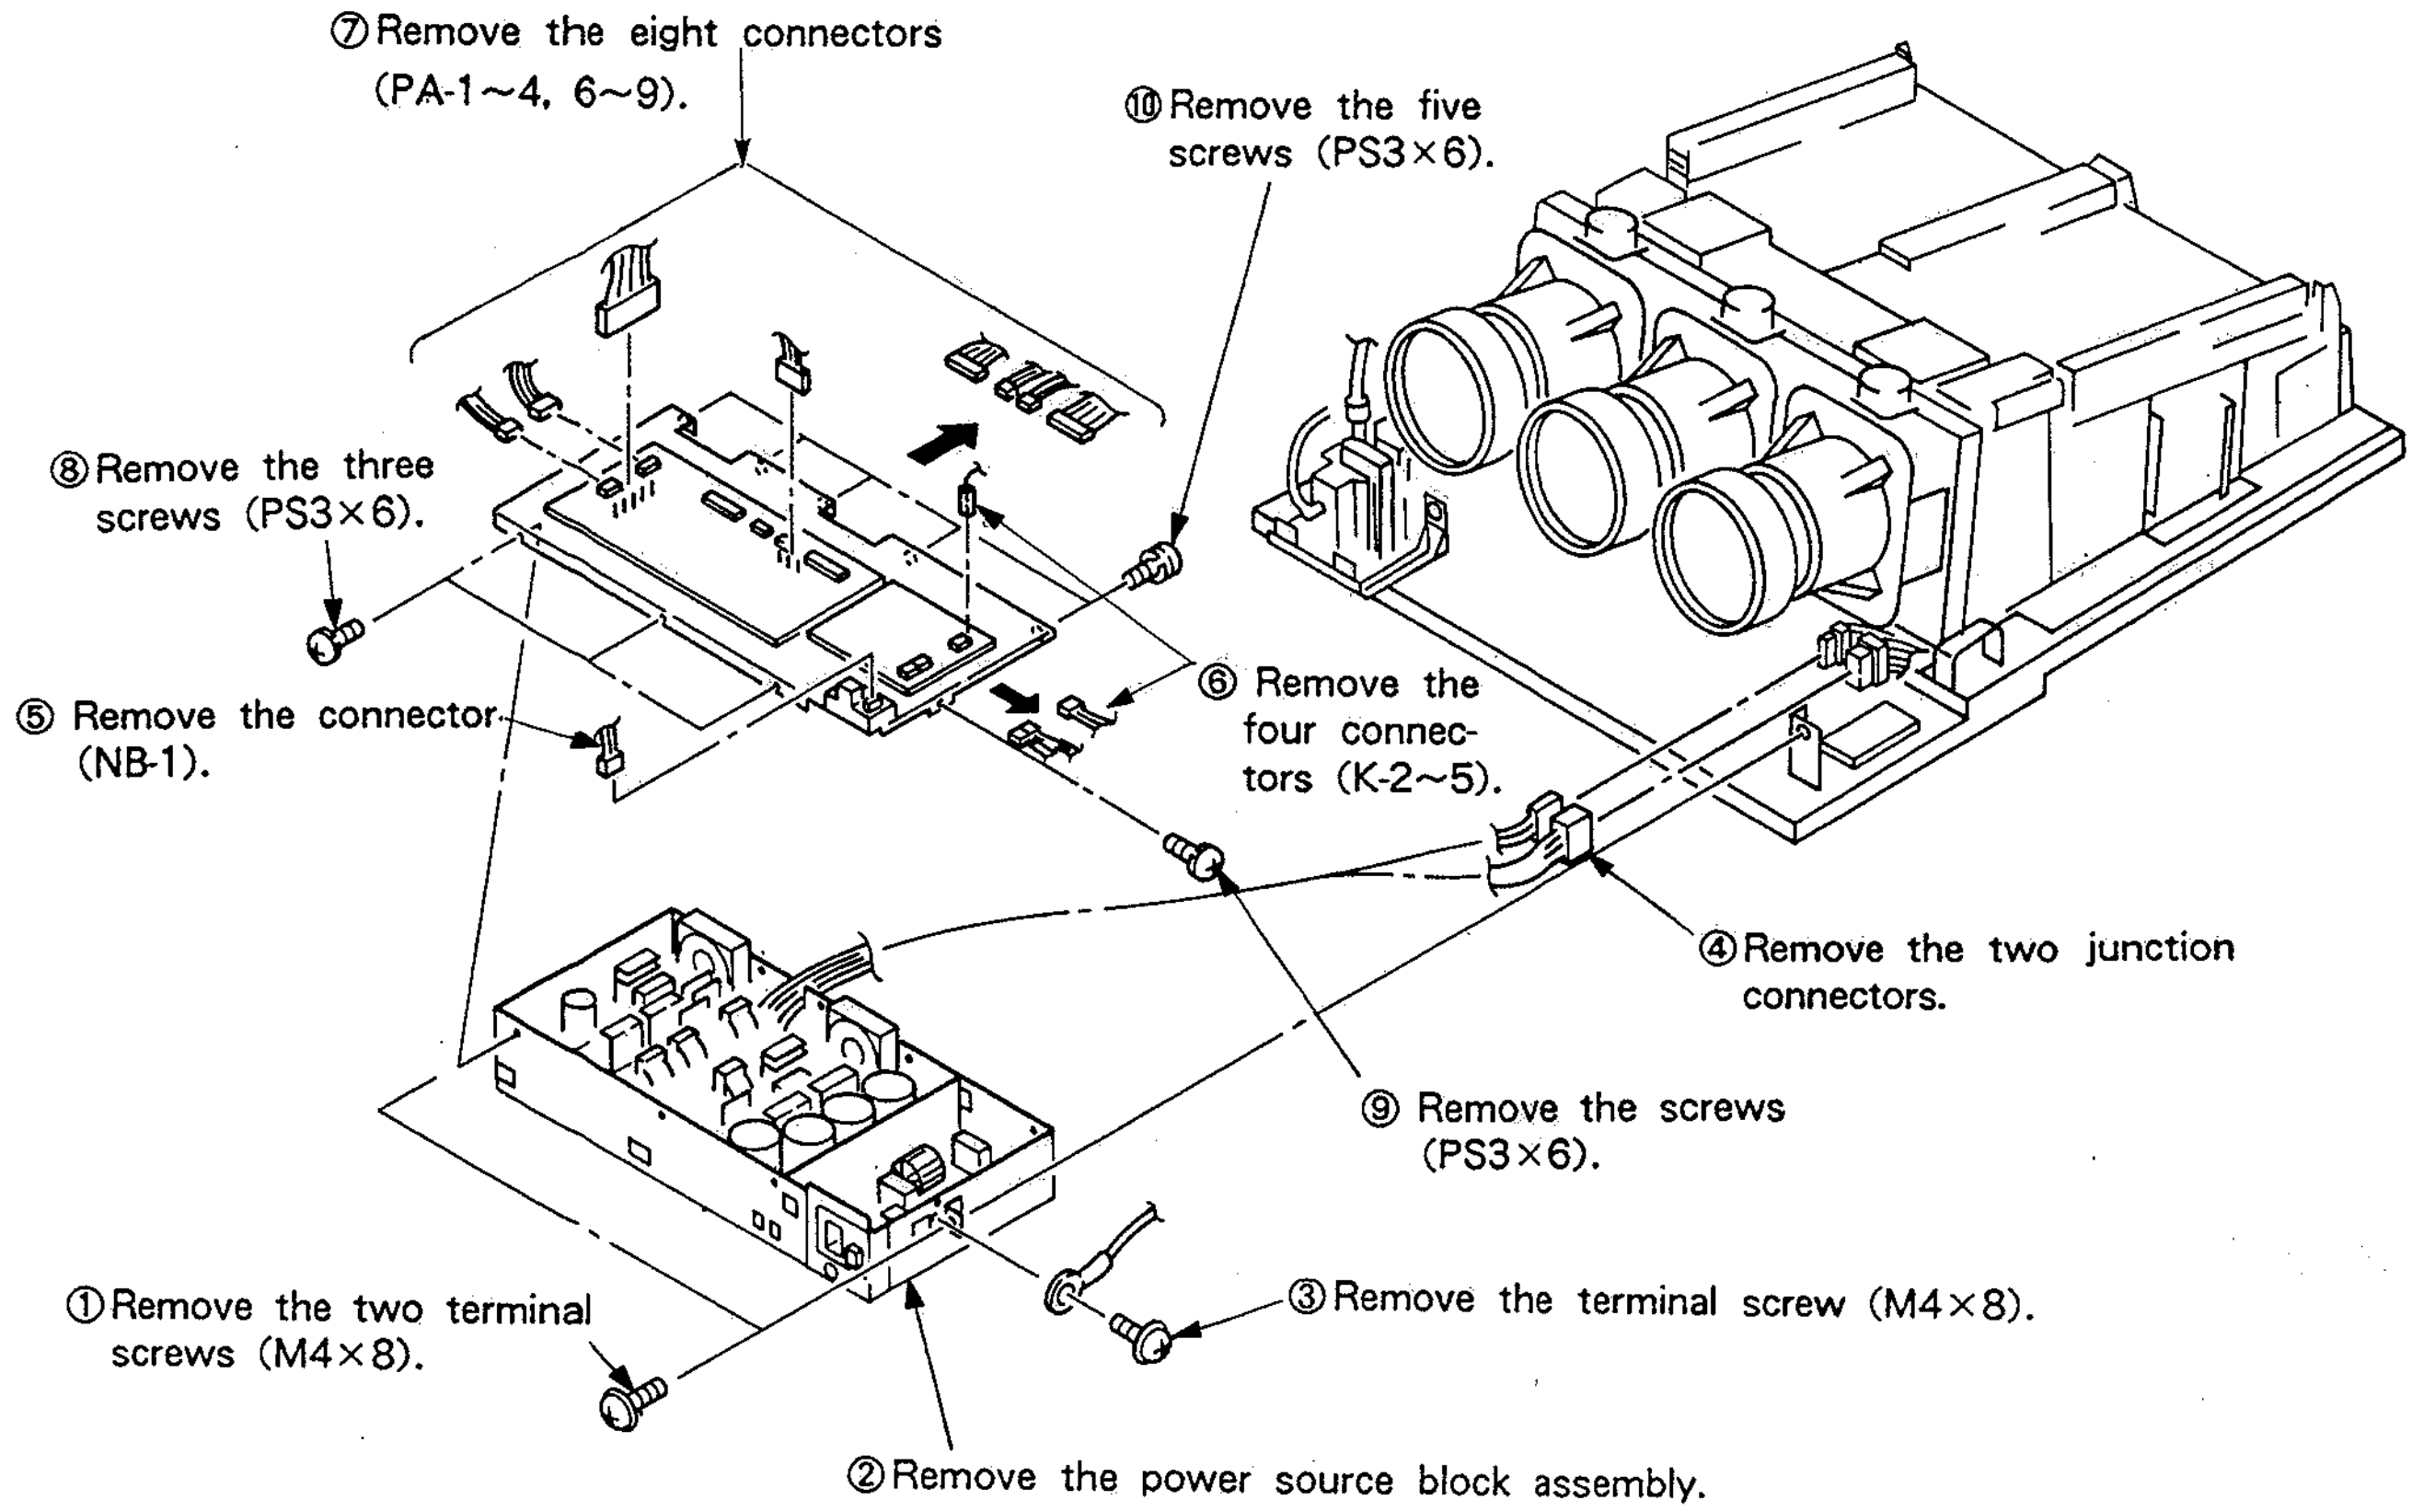
⑦Remove the eight connectors (PA-1~4, 6~9).
⑩Remove the five screws (PS3×6).
⑧Remove the three screws (PS3×6).
⑥ Remove the four connectors (K-2~5).
⑤ Remove the connector (NB-1).
④Remove the two junction connectors.
⑨ Remove the screws (PS3×6).
①Remove the two terminal screws (M4×8).
③Remove the terminal screw (M4×8).
②Remove the power source block assembly.

2-6. REMOVE THE HIGH-VOLTAGE CURRENT BLOCK ASSEMBLY

Note : Be sure to remove the lens (B) and to open the ED block assembly.
(refer to 2-1 and 2).

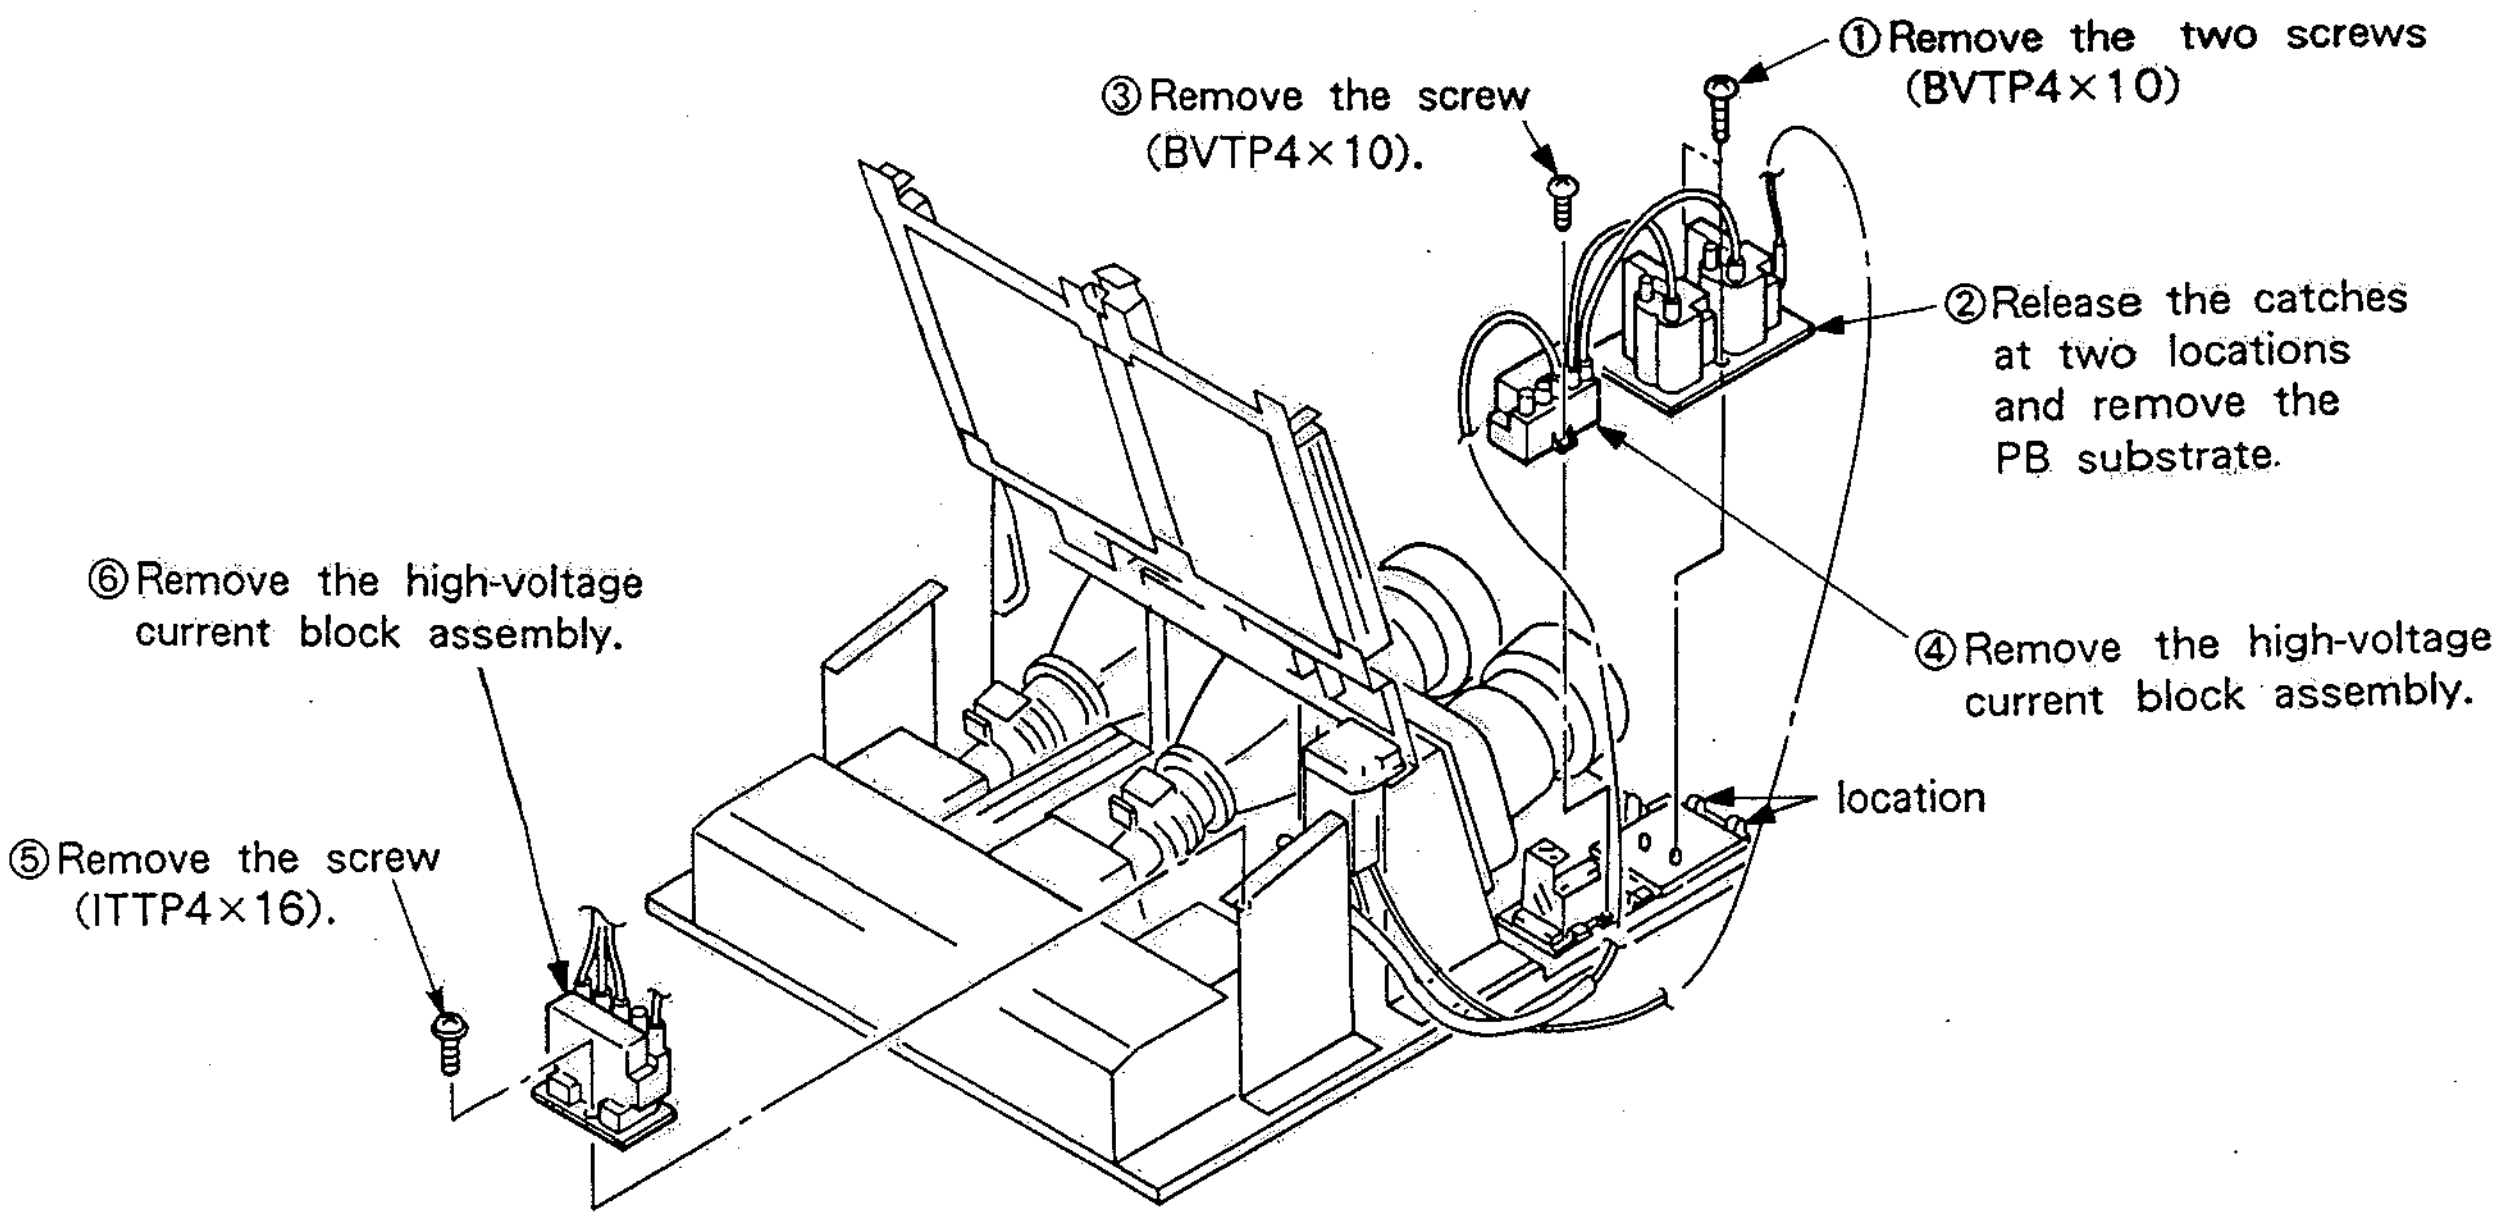
①Remove the two screws (BVTP4×10)
③Remove the screw (BVTP4×10).
②Release the catches at two locations and remove the PB substrate.
⑥Remove the high-voltage current block assembly.
④Remove the high-voltage current block assembly.
location
⑤Remove the screw (ITTP4×16).

2-7. REMOVE THE R.G.B. UNIT, BA BOARD, AND BB BLOCK ASSEMBLY

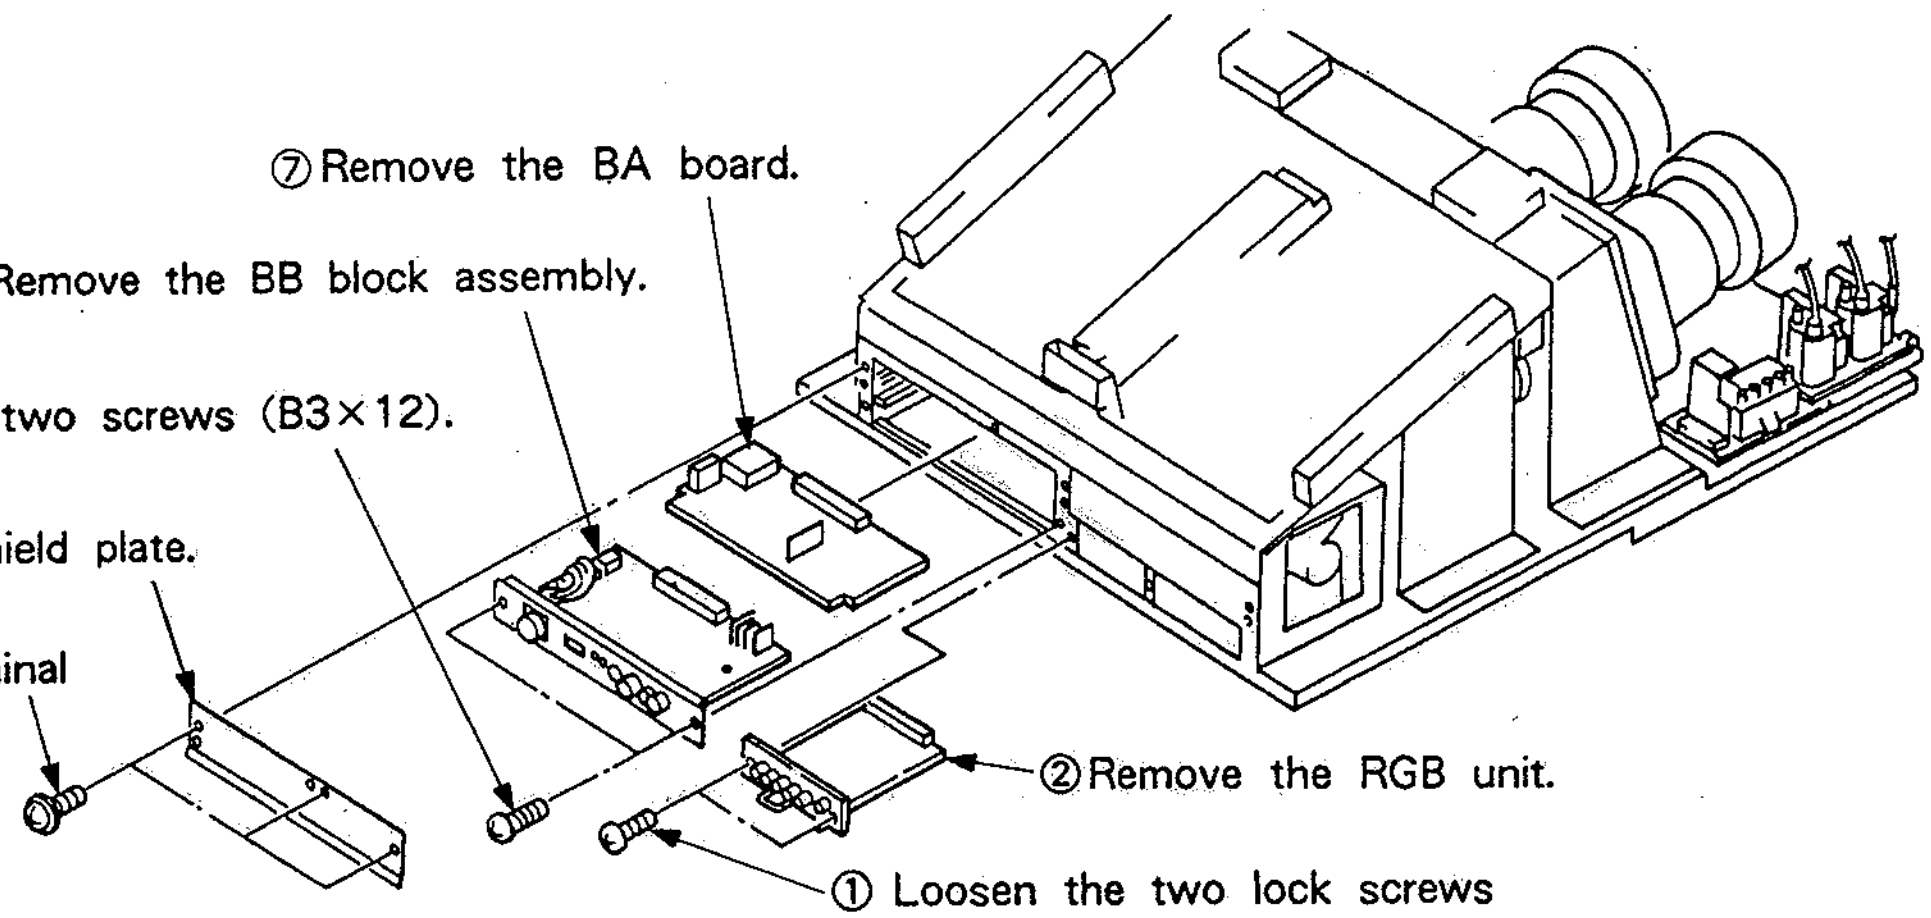

① Loosen the two lock screws (the lock screws cannot be removed).

② Remove the RGB unit.

③ Remove the three terminal screws (M3×10).

④ Remove the shield plate.

⑤ Remove the two screws (B3×12).

⑥ Remove the BB block assembly.

⑦ Remove the BA board.

2-8. REMOVE THE CF-1, CF-2, CA (RG) AND CA (B) BOARDS

Note : The ED block assembly should be opened and the BA board and BB clock assembly should be removed beforehand. (see 2-4, 2-7).

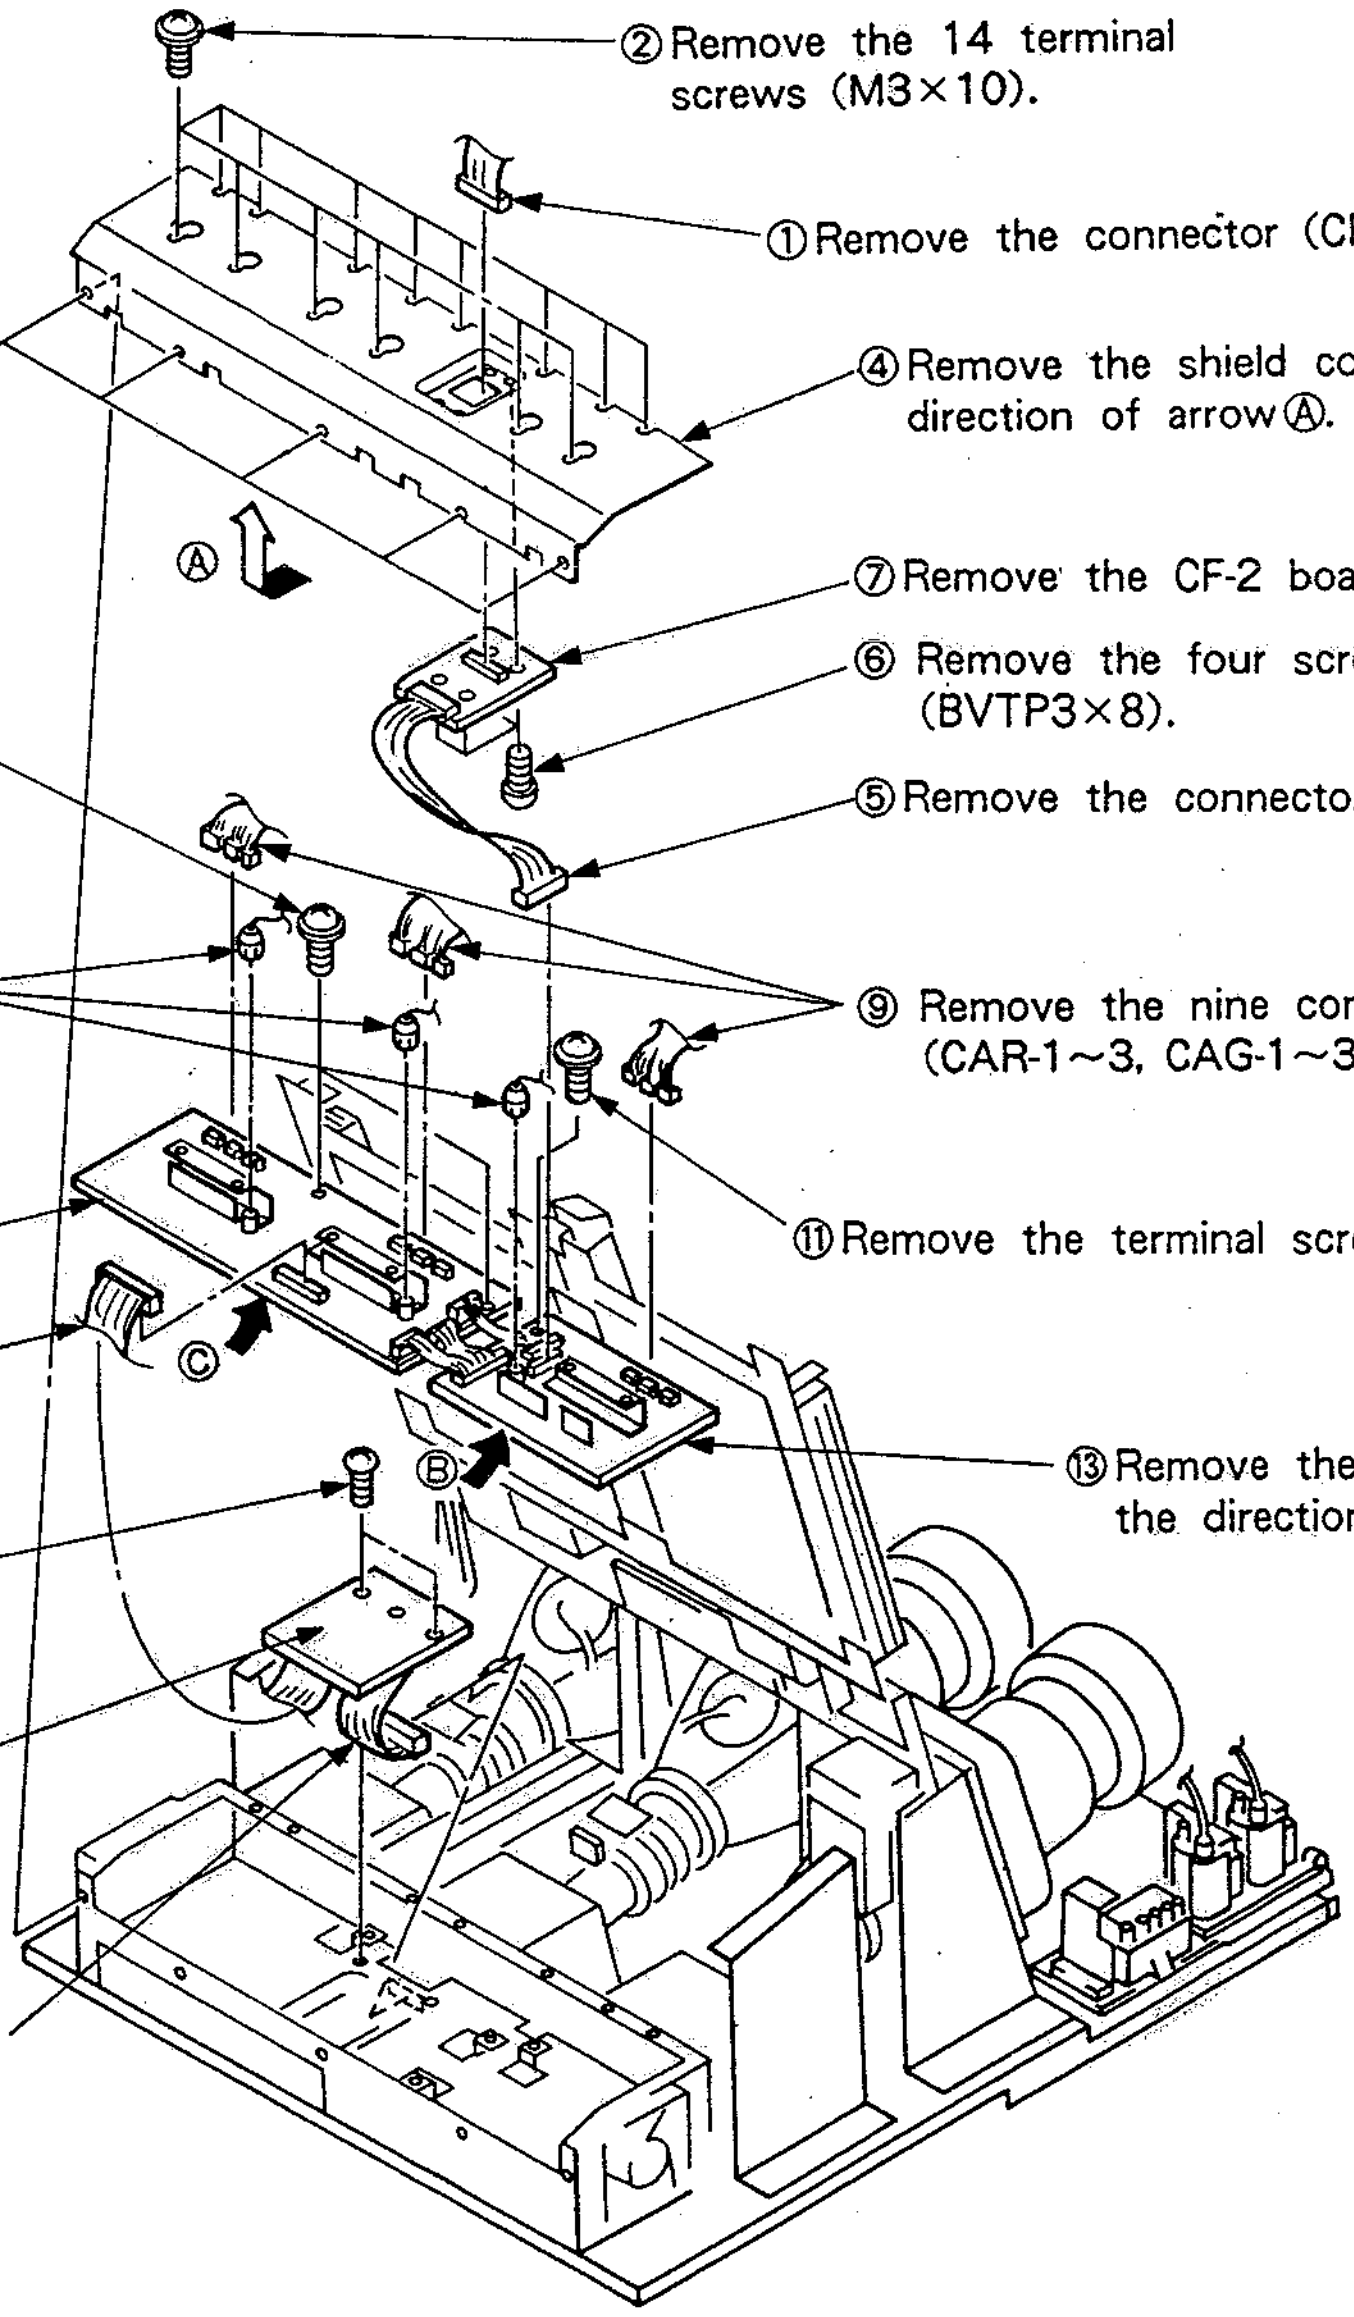

① Remove the connector (CF2-2).

② Remove the 14 terminal screws (M3×10).

③ Remove the five terminal screws (M3×10).

④ Remove the shield cover in the direction of arrow Ⓐ.

⑤ Remove the connector (CAB-7).

⑥ Remove the four screws (BVTP3×8).

⑦ Remove the CF-2 board.

⑧ Remove the three pin cables (CAG-J1, CAR-J1, CAB-J1).

⑨ Remove the nine connectors (CAR-1~3, CAG-1~3, CAB-1~3).

⑩ Remove the connector (CAR-4).

⑪ Remove the terminal screw (M3×10).

⑫ Remove the three terminal screws (M3×10).

⑬ Remove the CA (B) board in the direction of arrow Ⓑ.

⑭ Remove the CA (RG) board in the direction of the arrow Ⓒ.

⑮ Remove the connector (BM-8).

⑯ Remove the two screws (BVTP3×8).

⑰ Remove the CF-1 board.

2-9. REMOVE THE Y, DA, DB AND DM BOARDS

Note :
- Be sure to first open the ED block assembly, and remove the CB board (see 2-4).
- Remove the high-voltage current block (see 2-6).
- Remove the RGB unit, BA board and BB block assembly (see 2-7).
- Remove the CF-1, CF-2, CA (RG) and CA (B) assemblies (see 2-8).

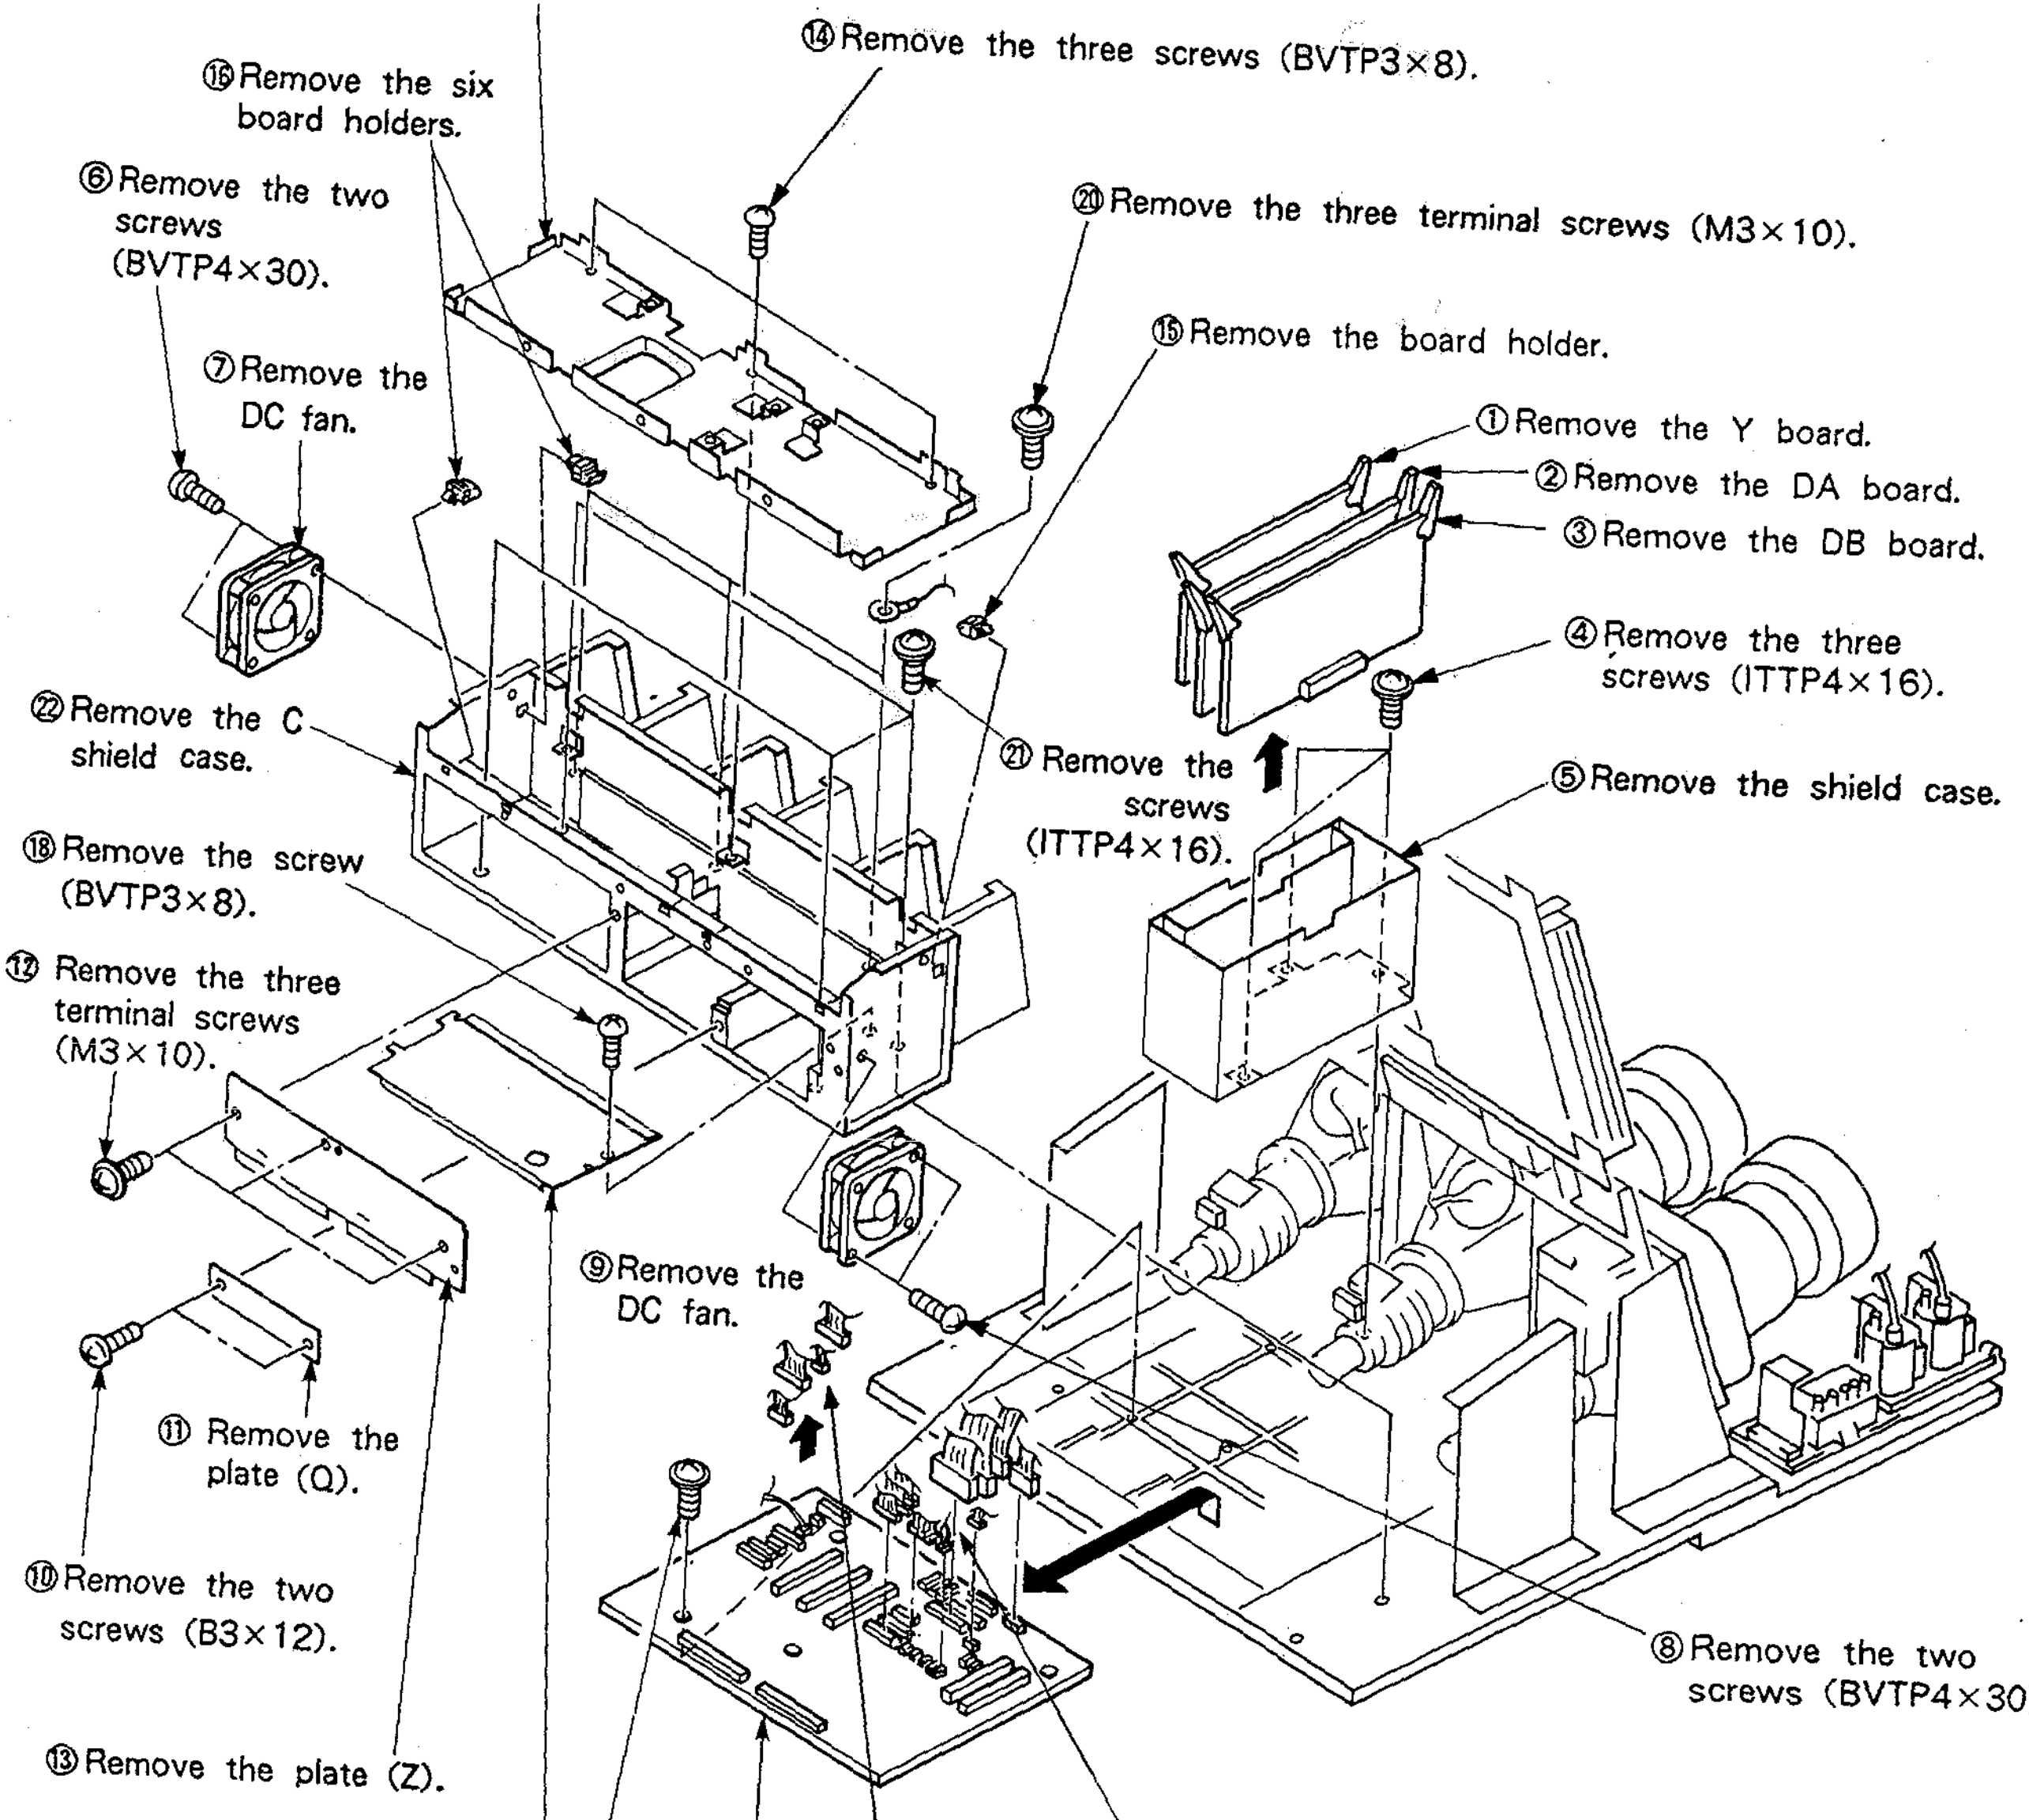

①Remove the Y board.
②Remove the DA board.
③Remove the DB board.
④Remove the three screws (ITTP4×16).
⑤Remove the shield case.
⑥Remove the two screws (BVTP4×30).
⑦Remove the DC fan.
⑧Remove the two screws (BVTP4×30).
⑨Remove the DC fan.
⑩Remove the two screws (B3×12).
⑪ Remove the plate (Q).
⑫ Remove the three terminal screws (M3×10).
⑬Remove the plate (Z).
⑭Remove the three screws (BVTP3×8).
⑮Remove the board holder.
⑯Remove the six board holders.
⑰Remove the shield plate.
⑱Remove the screw (BVTP3×8).
⑲Remove the shield plate.
⑳Remove the three terminal screws (M3×10).
㉑ Remove the screws (ITTP4×16).
㉒Remove the C shield case.
㉓ Remove the four connectors (DM8, 9, 23, 29).
㉔ Remove the twelve connectors (DM6, 7, 10, 11, 18~22, 27, 28, 35).
㉕Remove the screw (ITTP4×16).
㉖Remove the DM board in the direction of arrowⒶ.

2-10. ATTACHMENT DIRECTION FOR THE DC FAN

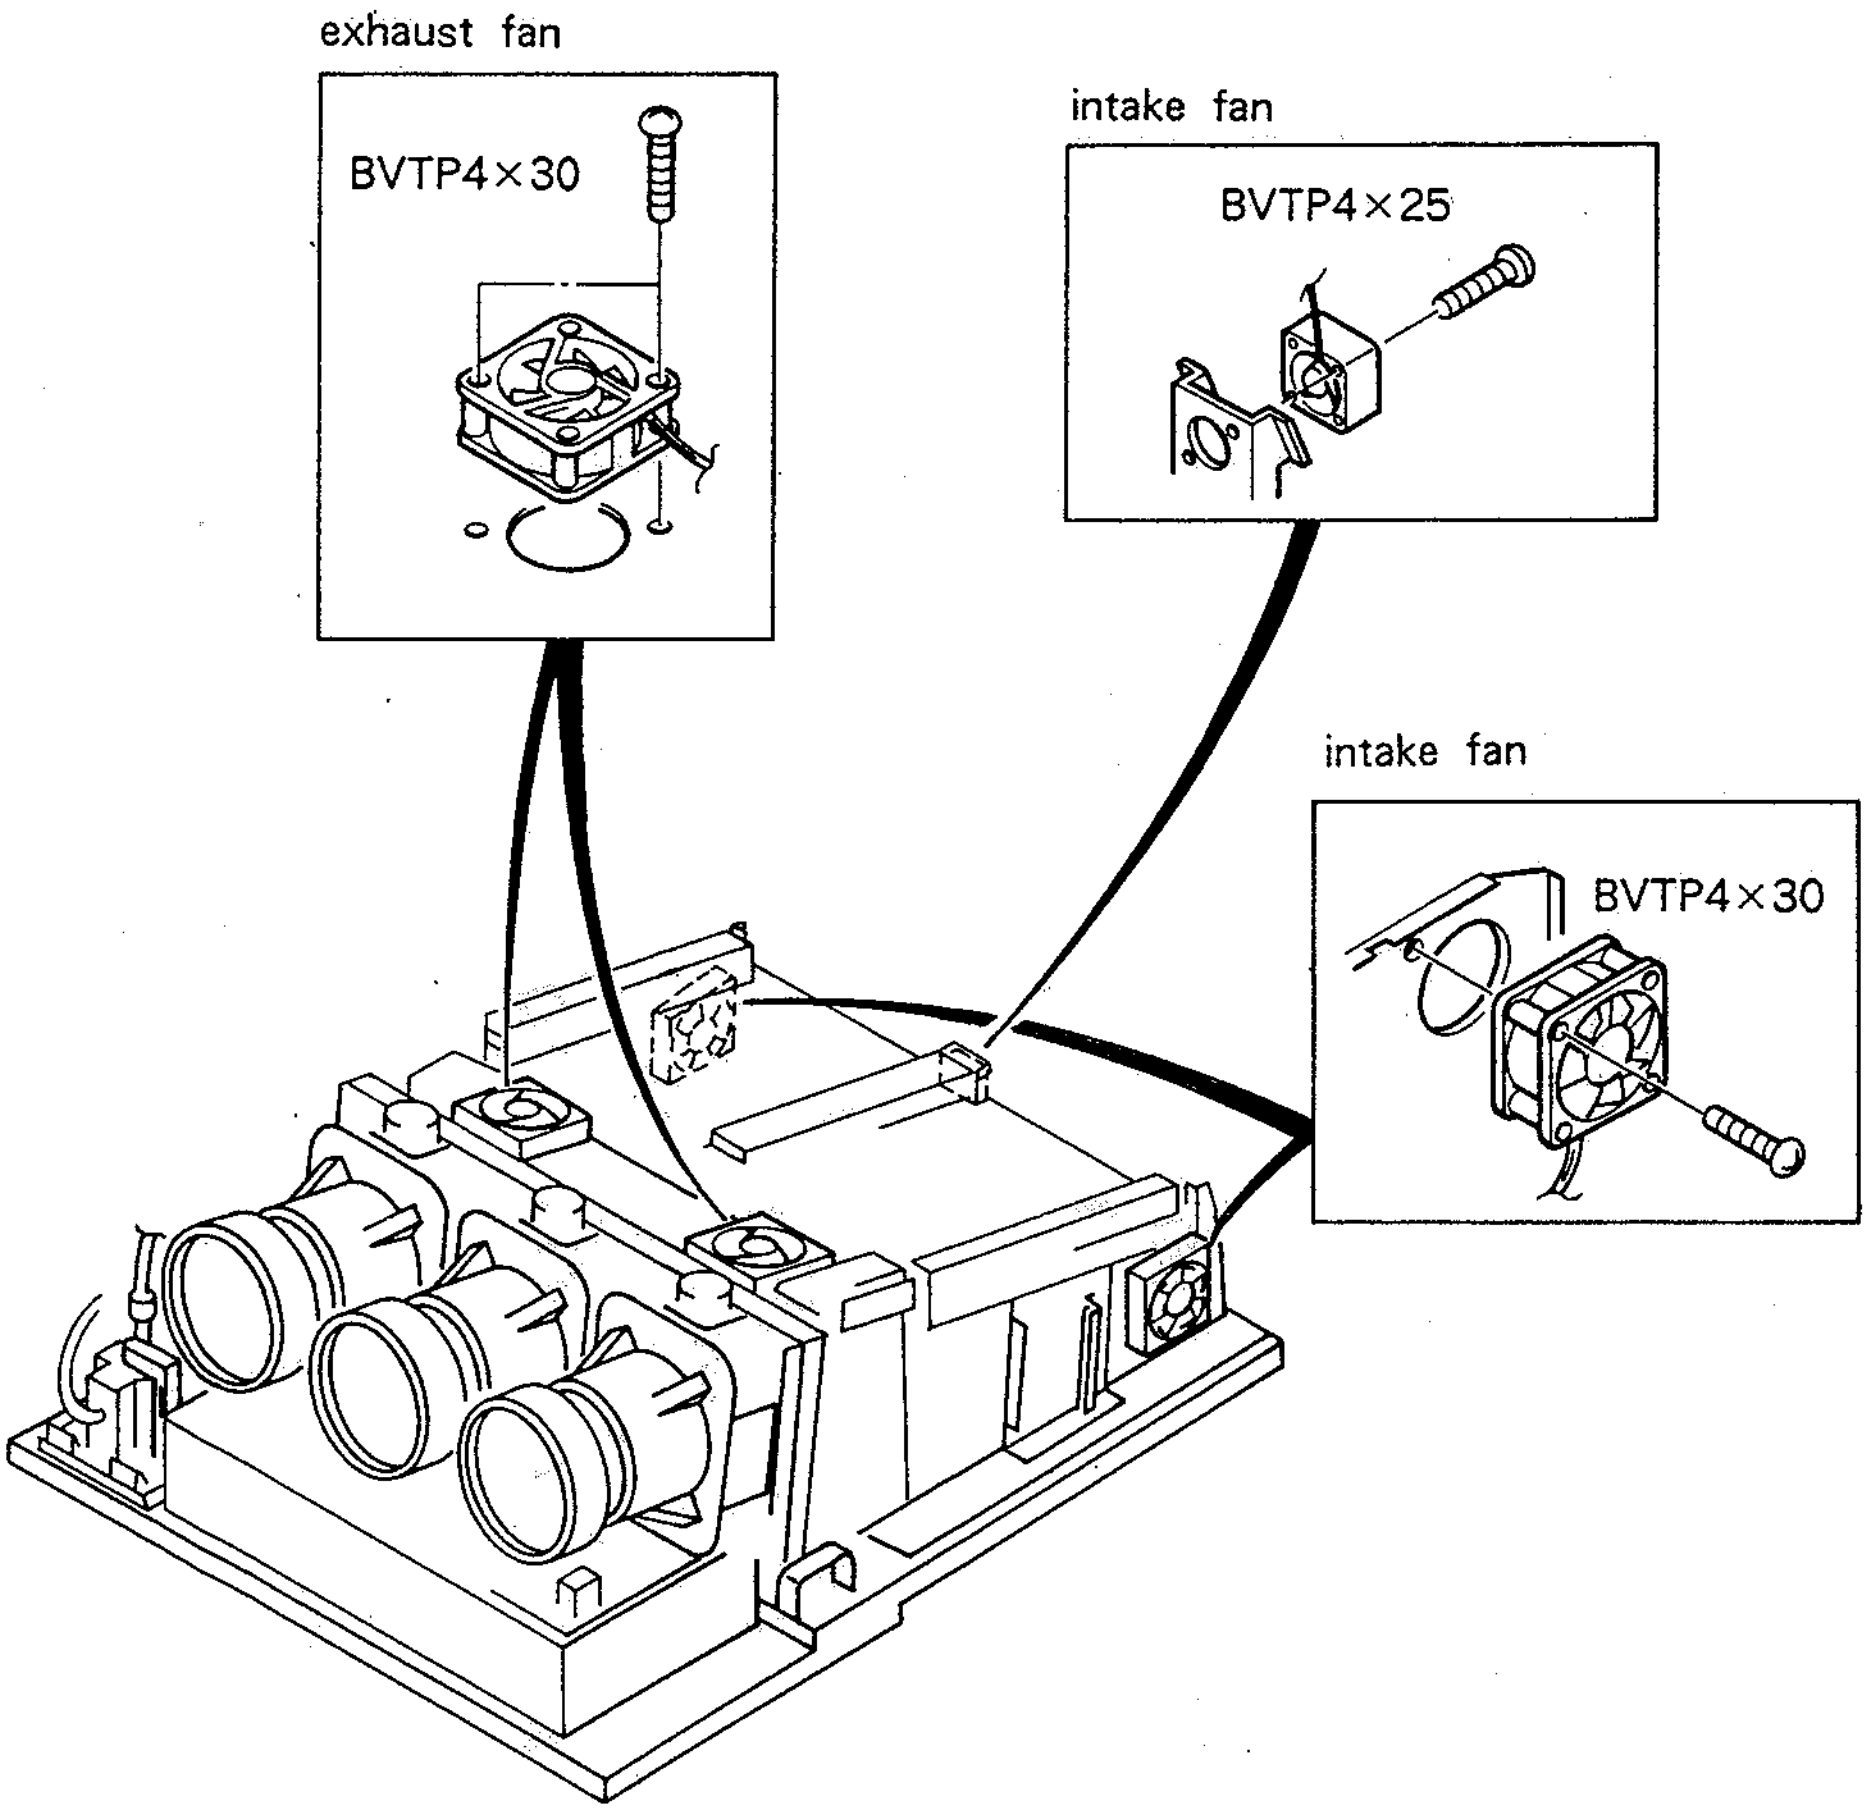
exhaust fan
BVTP4×30
intake fan
BVTP4×25
intake fan
BVTP4×30

SECTION 3
CIRCUIT DESCRIPTIONS

3-1. Circuit Board BA

Y SIGNALS

1. The TRAP Circuit

   The TRAP circuit receives video signals after the signals are fed through Q001. The TRAP circuit is used to extract the chrominance portion of the video signal. However, since this device is equipped to receive 3 types of chrominance frequencies (SUB CARRIERS), namely PAL, SECAM, NTSC 3.58 and NTSC 4.43, it is necessary to switch the TRAP circuit for each type of signal (except for PAL and NTSC 4.43 whose SUB CARRIERS are identical).

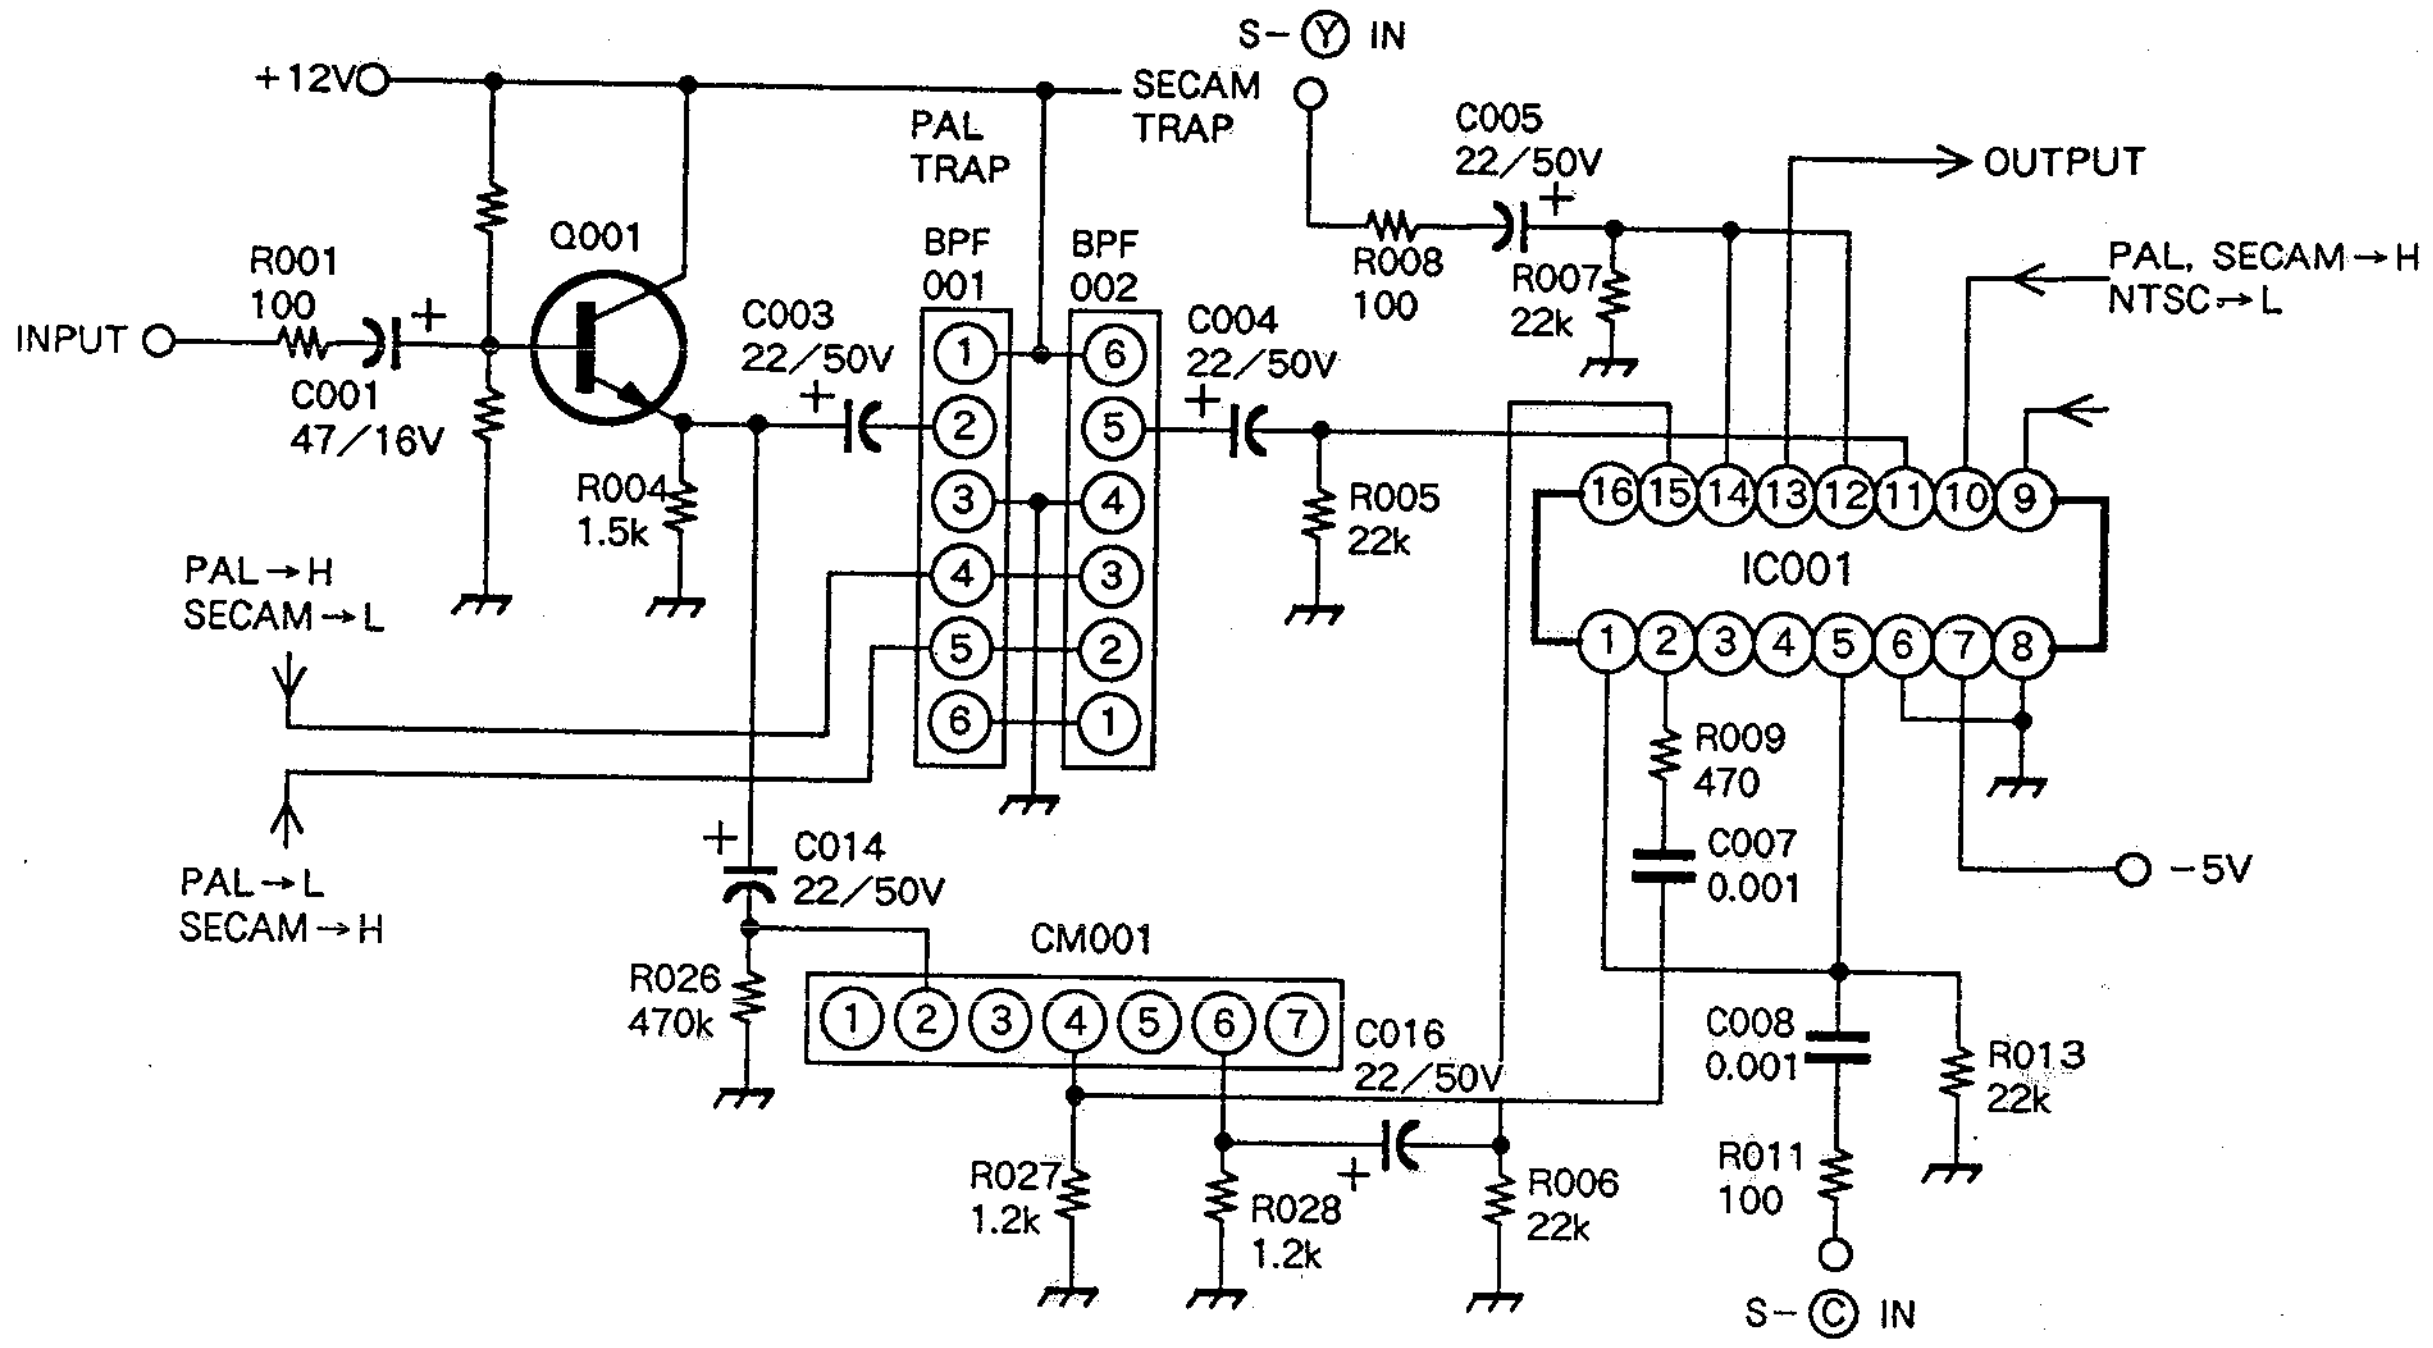

S-Ⓨ IN
+12V
SECAM TRAP
PAL TRAP
C005 22/50V
OUTPUT
Q001
BPF 001
BPF 002
R008 100
R007 22k
PAL, SECAM→H
NTSC→L
R001 100
INPUT
C001 47/16V
C003 22/50V
C004 22/50V
R004 1.5k
R005 22k
IC001
PAL→H
SECAM→L
R009 470
C007 0.001
-5V
PAL→L
SECAM→H
C014 22/50V
CM001
R026 470k
C016 22/50V
C008 0.001
R013 22k
R011 100
R027 1.2k
R028 1.2k
R006 22k
S-Ⓒ IN

<PAL Mode>

Video signals are first input into pin ② of BPF001 wheresignals in the vicinity of 4.43MHz are extracted. The signals are then sent out through pin ⑥ and are input into pin ① of BPF002. BPF0011 and BPF002 are respectively a PAL TRAP and a SECAM TRAP, while pin ④ of BPF001 provides PAL CONT and pin ⑤, SECAM CONT. In all cases, the TRAP is activated when the respective pin signals are High. When operating under the PAL mode, pin ④ will become High and pin ⑤ Low ; the signals pass through BPF002 and appear on pin ⑤ after which they are input into pin ⑪ of IC001. This chip is a switching IC used to switch between PAL, NT 4.43, NT 3.58 and YC signals. Recall that NTSC 4.43 and PAL employ the same method.

<SECAM Mode>

The steps followed are identical to PAL up to the point where the signals are input into pin ① of BPF002. With the SECAM mode, however, pins ④ and ⑤ of BPF001 will both turn High. After signals in the vicinity of 4.43MHz and 4.25 MHz are extracted, the signals are then output from pin ⑤ of BPF002 and input into pin ⑪ of IC001.

<NTSC 3.58 Mode>

Y signals are input into pin ② of CM001 (Comb Filter) while pin ⑥ and pin ④ output Y signals and chrominance signals respectively. Y signals are input into pin ⑮ of IC001 and chrominance signals into pin ② of this IC.

<B/W Signals>

B/W signals are input into pin ③ of BPF001, and are output from pin ⑤ of BPF002. This is a thru output obtained when the control terminals of BPF001 (pins ④ and ⑤) are Low and both traps are disabled. Subsequently, it is input into pin ⑪ of IC001.

2. YC Signals

YC signals are fed to board BB in the form of S-VIDEO -input. Y signals are input into pins ⑫ and ⑭ of IC001 while C signals are input into pins ① and ⑤.

3. IC001 (HD24052BP)

This IC switches between PAL, SECAM, and, NTSC 4. 43/NTSC 3.58/YC modes. Outputs appears on pin ⑬ for Y signals and pin ③ for chrominance signals. The signal status of the controller terminals, pins ⑨ and ⑩, are shown in the following diagram. {diagram}

	⑨	⑩
PAL • SECAM • NT4.43 • B/W	H	H
NT3.58	H	L
YC	L	-

4. SHARPNESS IC

Y signals output from pin ⑬ of C001 pass through the Delay Line ; AMP Q003, Q004, and Q005 ; and finally the CLAMP circuit (Q212, 213). The signals are then input into pin ⑬ of IC005. The signals also serve as input signals for board BC (IDTV board) ; these are output from BA-1 31a.

The 2Y signals received from the BC board are switched by IC005 and output from pin ⑭. They are then input into pin ② of IC010 (SHARPNESS IC). The control terminals pins ⑨, ⑩ and ⑪ are High for VIDEO mode and Low for IDTV mode. For IC010, signals was peaked at about 3.6MHz for VIDEO mode and at approximately 6.6MHz for IDTV modes and are output from pin ⑩. Pin ⑧ is the sharpness control terminal ; control voltage is -2.5V to 2.5V. Signals output from pin ⑩ are input into pin ⑦ of R. G .B . MATRIX IC003 (CXA-1216P).

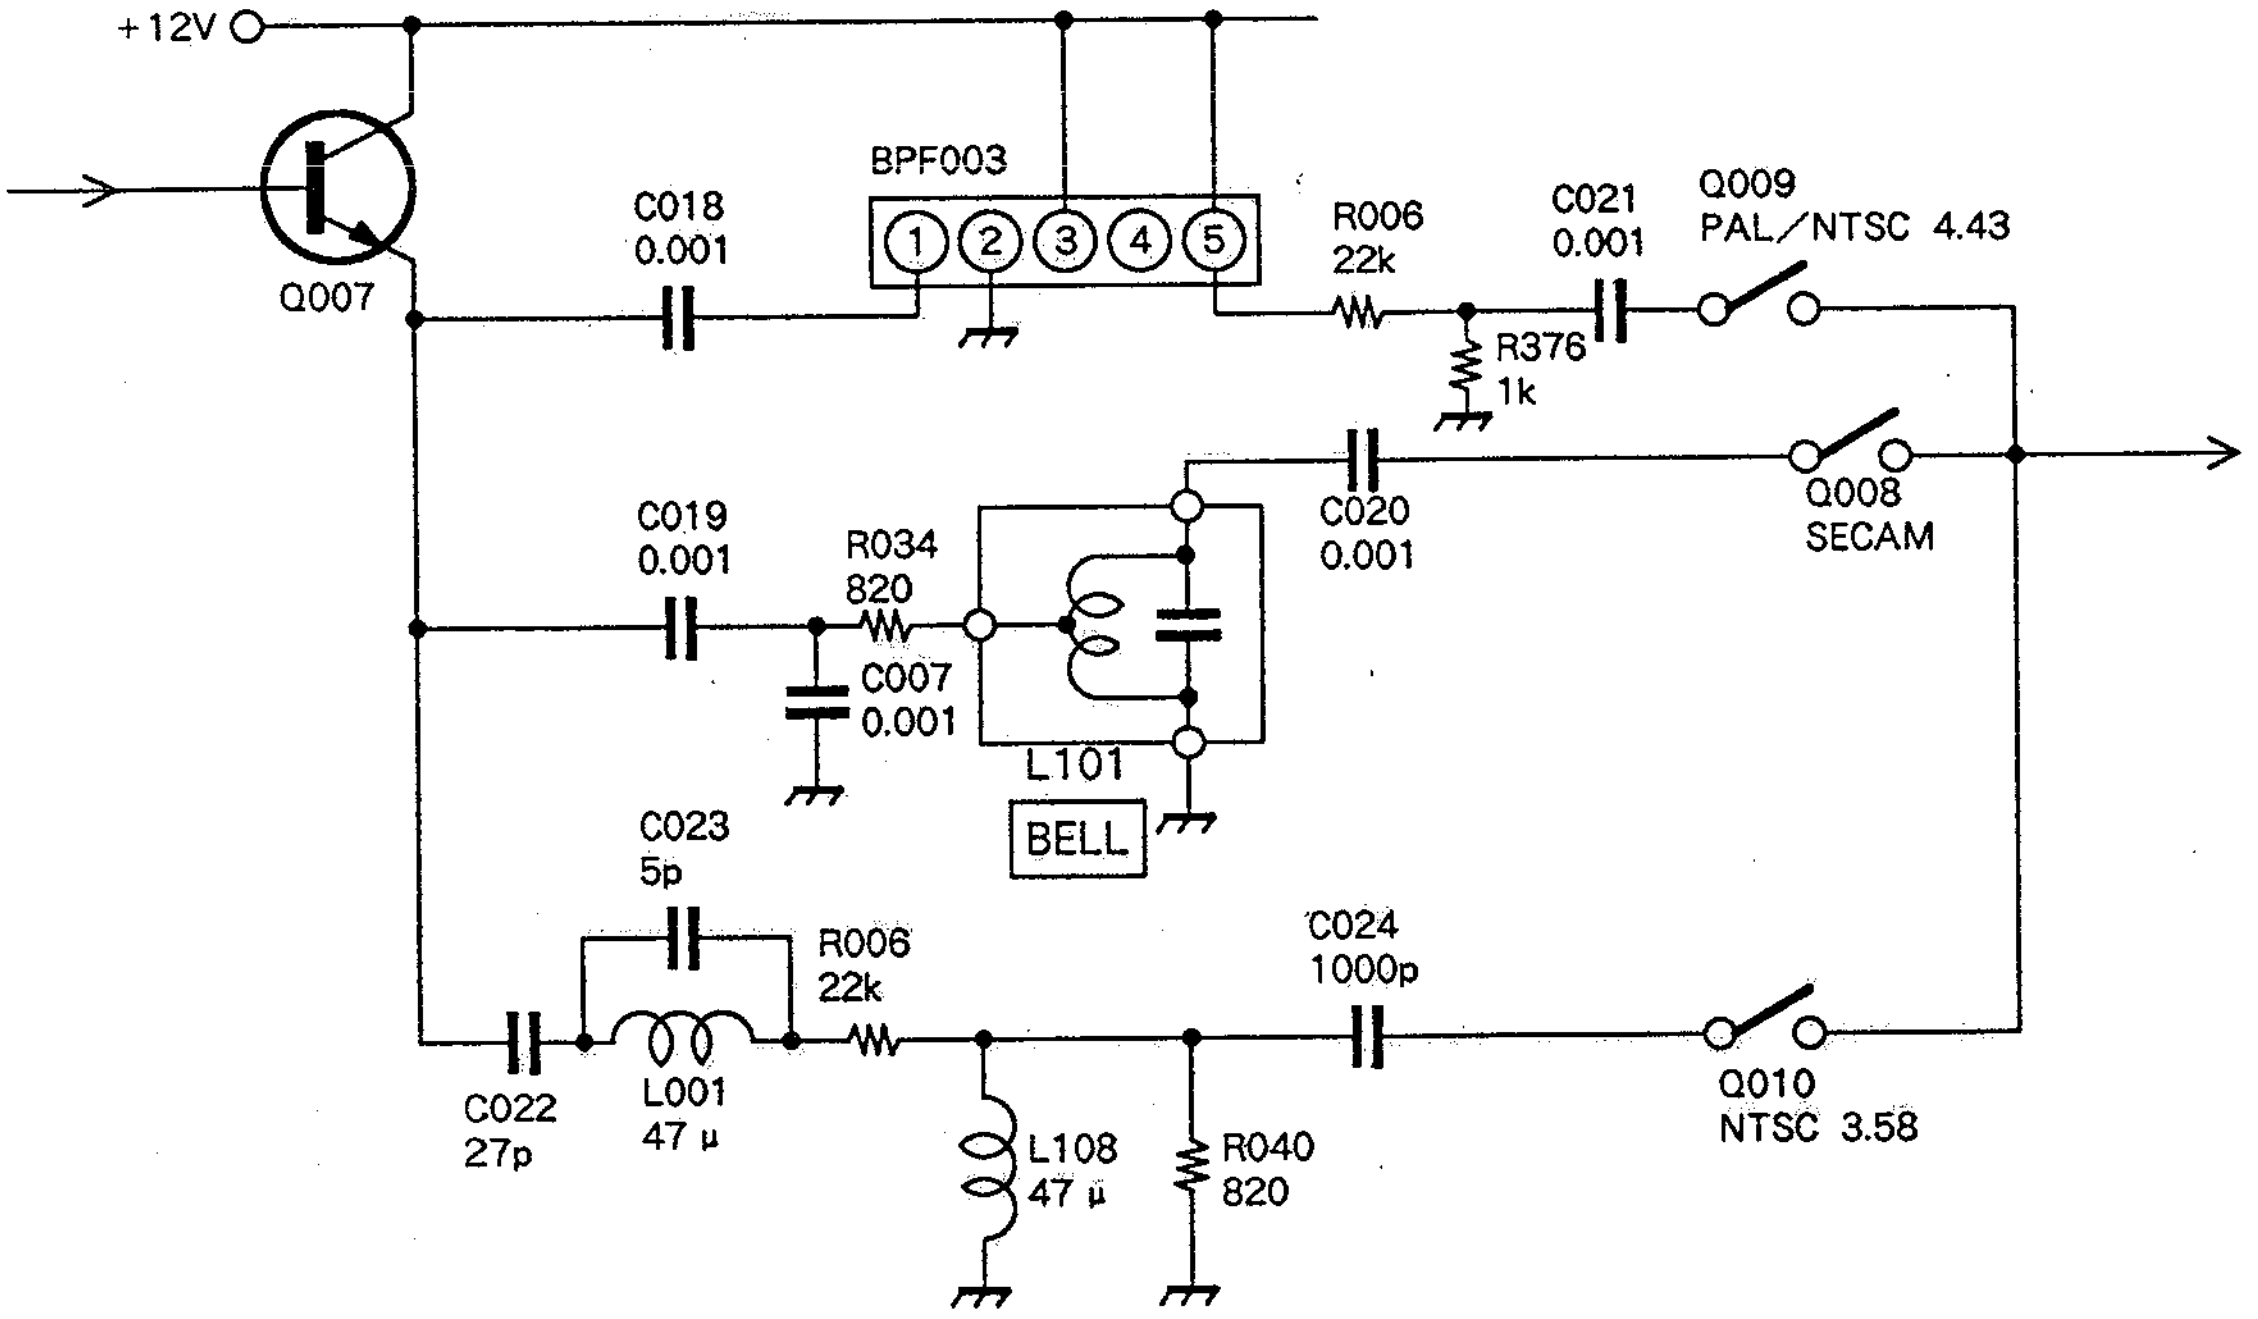
+12V
Q007
C018
0.001
BPF003
① ② ③ ④ ⑤
R006
22k
R376
1k
C021
0.001
Q009
PAL/NTSC 4.43
C020
0.001
Q008
SECAM
C019
0.001
R034
820
C007
0.001
L101
BELL
C023
5p
R006
22k
C022
27p
L001
47 µ
L108
47 µ
R040
820
C024
1000p
Q010
NTSC 3.58

CHROMINANCE SIGNALS

PAL, SECAM, and NTSC 4.43 signals pass through Q001 and after DC cut at C009, are input into pin ④ of IC001. NTSC 3.58 signals go through COMB FILTER CM001 while Chrominance signals are input into pin ② of IC001. After being output from pin ③ of IC001, each signal is passed through a band−pass filter. This circuit is shown below. (circuit diagram)

1. IC002 (TDA4555V8)

   Chrominance signals are input into pin ⑮ of the decoder IC002 (TDA4555V8) after they are passed through the respective BPF. PAL and SECAM signals are output from pin ⑫ and fed through the DELAY LINE. The signals are then 1H delayed and input into pin ⑩. After the phase and level are adjusted by L103 and RV101, decoding takes place by adding the signals input from pin ⑮. Subsequently, the R−Y signals are output from pin ①, and the B−Y signals from pin ③. In the case of NTSC signals, the signals are decoded with out passing through the DELAY LINE ; the R−Y signals are output from pin ① while the B−Y signals are output from pin ③.

The ID circuit is comprised of the following 3 of circuits.

a) A phase discriminator. This circuit compares the burst signals for PAL and NTSC modes against its internal reference signals.
b) Frequency discriminating circuit which is used to derive the H/2 signal in SECAM transmissions. It consists of an internal frequency discriminator and an external phase shift detector circuit, connected to pin ㉒ (SECAM ID reference circuit).
c) A logic circuit that provides H/2 signal detection for PAL and SECAM modes, in addition to its original ID function.

2. CLAMP CIRCUIT

   The color−difference signal output from IC002 goes through the CLAMP circuit and enters IC005, an IC used for switching between IDTV. The operation of IC005 is identical to that of the Y signal. Output signals from IC005 are input into an R. G. B. MATRIX IC003 (CXA−1216P).

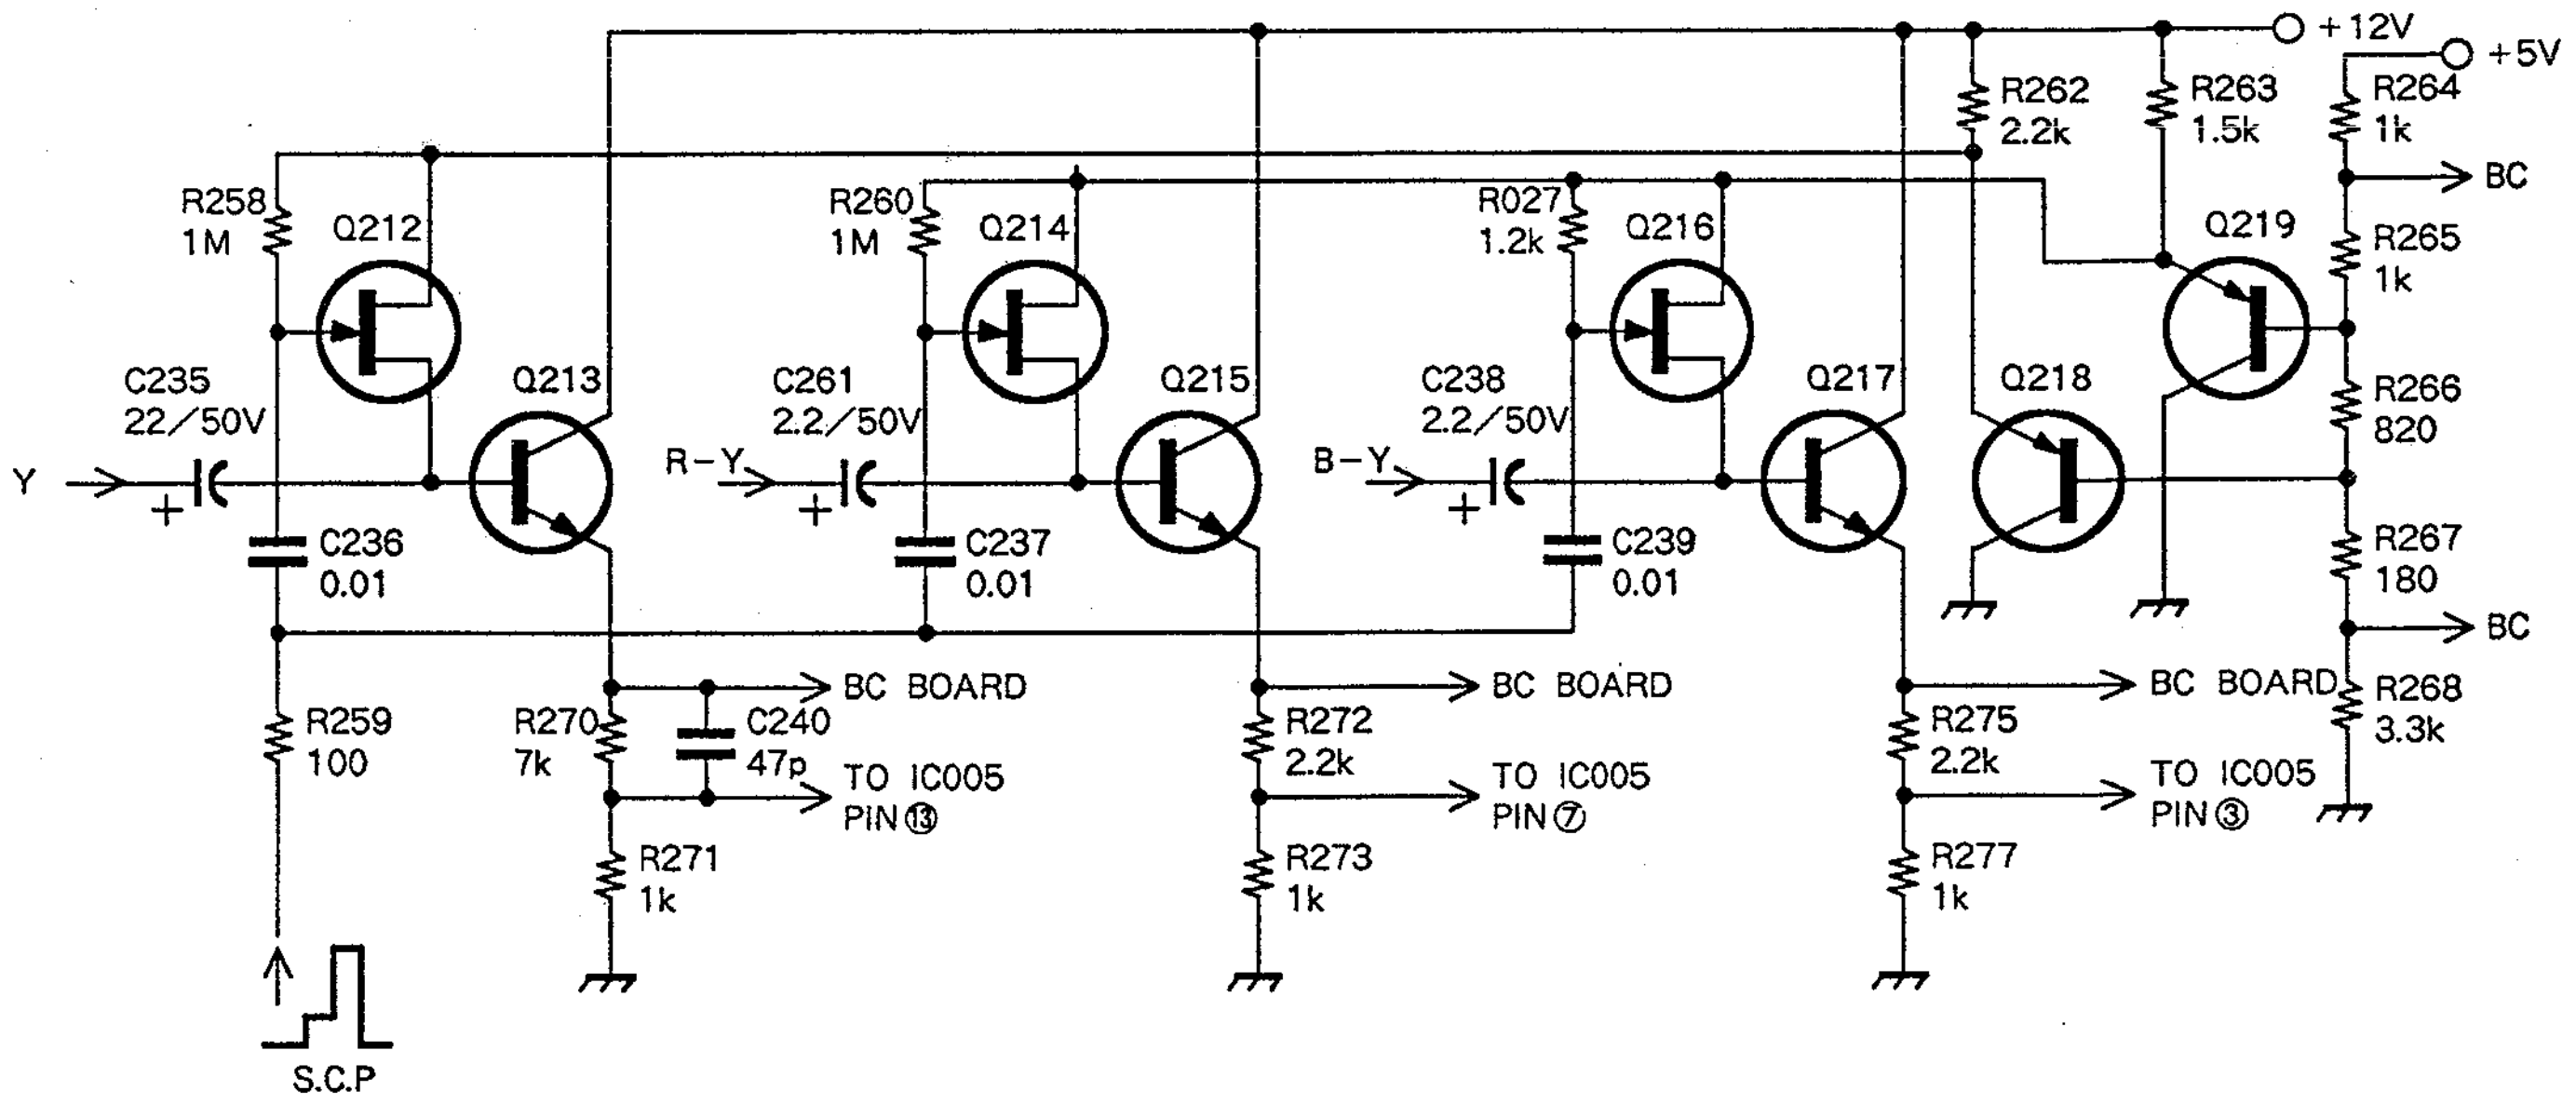
+12V
+5V
R258 1M
Q212
C235 22/50V
Y
C236 0.01
Q213
R259 100
S.C.P
R270 7k
C240 47p
R271 1k
BC BOARD
TO IC005 PIN⑬
R260 1M
Q214
C261 2.2/50V
R−Y
C237 0.01
Q215
R272 2.2k
R273 1k
BC BOARD
TO IC005 PIN⑦
R027 1.2k
Q216
C238 2.2/50V
B−Y
C239 0.01
Q217
R275 2.2k
R277 1k
BC BOARD
TO IC005 PIN③
Q218
R262 2.2k
R263 1.5k
Q219
R264 1k
BC
R265 1k
R266 820
R267 180
BC
R268 3.3k

3. HUE/COLOR CONTROL

A HUE/COLOR CONTROL voltage ranging from −2.5V to 2.5V is sent to operational amplifire IC012 where the control voltage of CXA1216P is converted to between 2V and 7V.

Because of inconsistencies in IC and resistors, adjustments are made using 3 volumes controls, namely SUB HUE (RV102/VOL for NTSC), HUE ADJ (RV204) and SUB COL (RV205).

4. SUB BRIGHT/SUB PICTURE

Pin ㉗ of IC003 (CXA−1216P) is the CONTROL terminal for PICTURE while pin ㉓ is for BRIGHTNESS. The PICTURE level output is changed by rotating RV203 (SUB PIC) ; turning RV201 (SUB BRT) changes the blackness level.

IC004 (TDA2595)

Y signals are first passed through the DELAY LINE and then to AMP Q003/004/005 after which they are fed through the SYNC CHIP CLAMP circuit, comprised of Q352/351. Finally, the signal is input into pin ⑪ of IC004 (TDA2595). IC004 outputs the sandcastle pulse to pin ⑥ and C. Sync pulse to pin ⑨. The sandcastle pulse is input into pin ㉔ of IC002 (TDA4555−V8) while it also goes into the CLAMP circuit. C. Sync goes into the sync sep circuit, resulting in the output of H. SYNC and V. SYNC pulses. H. SYNC is sent to pin ⑬ of IC006 (TC74HC157AP) via R240 while it is also input into the BC board where it becomes 2H. SYNC and input into pin ⑭ of IC006.

V. SYNC is input into pin ⑩ of IC006 via collector Q207 as well as into the BC board where it is converted to 2V. SYNC. The latter signal is input into pin ⑪ of IC006.

Signals converted by IC006 are output as follows : H. SYNC from pin ⑫, V.SYNC from pin ⑨ and connector BA−1 a−3 HD (1) C−3 VD (1). The C. BLK signals from pin ② of IC004 are merged with the C.BLK signals (BA−1 C−23) input from the DA board and fed into pin ① of IC003

The diagram to the right indicate the phase relationship of pin ⑮ of IC002, the chrominance signal and S. C. P of pin ㉔.

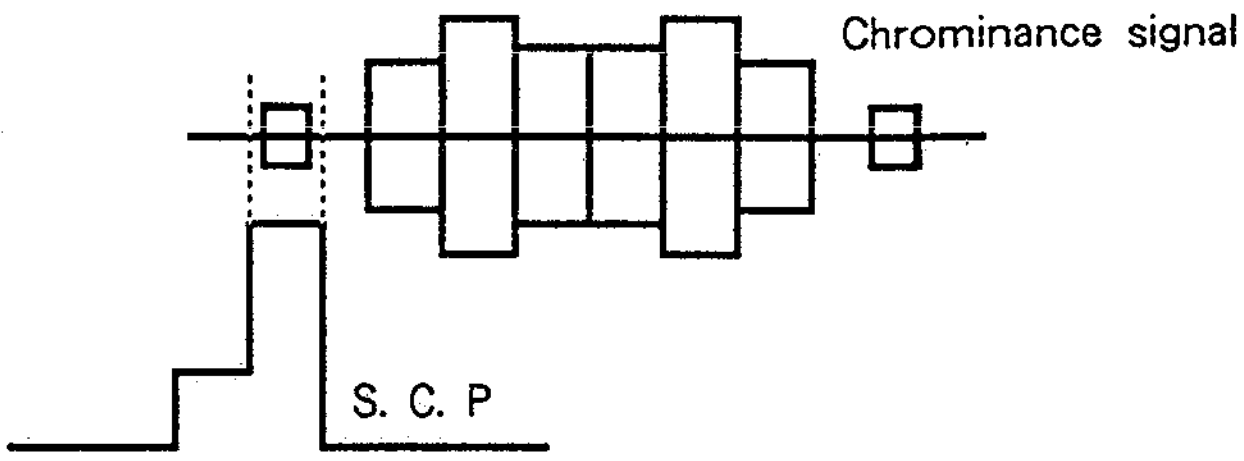

IC009 (CX-7916)

CX-7916 detects between 50Hz and 60Hz by receiving H. SYNC on pin ① and V. SYNC on .⑤.

INPUT	②	③
50Hz (PAL、SECAM)	L	H
60Hz (NTSC 3.58 4.43)	H	L

The operation of the peripheral circuitry of IC009 are as follows :

1. NTSC 3.58
   Pin ② of IC009 becomes High and Q225 turns ON, making collector Q225 Low while Q349 is turned OFF and the collector becomes High. Further, Q347 becomes ON and the collector Low, causing pin ⑩ of IC001 to become Low.

3. NTSC 4.43
   Pin ② of IC009 turns High, providing the same operation asNTSC 3.58. However, since Q348 becomes ON and the collector Low while pin ㉕ of IC002 is High, pin ⑩ of IC001 becomes High.

4. B/W
   When color signals are being received, pin ㉕, ㉖, ㉗, or ㉘ of IC002 will be High. In addition, Q013 is turned ON causing the collector to be Low while Q012 is turned OFF causing the collector to be High. These results in the previously described operation. For B/W signals, however, Q013 does not turn ON, and the collector will be High and Q012 turned ON, causing the collector to drop to Low. As-a result, Q347 will be OFF and pin ⑩ of IC001 will be High.

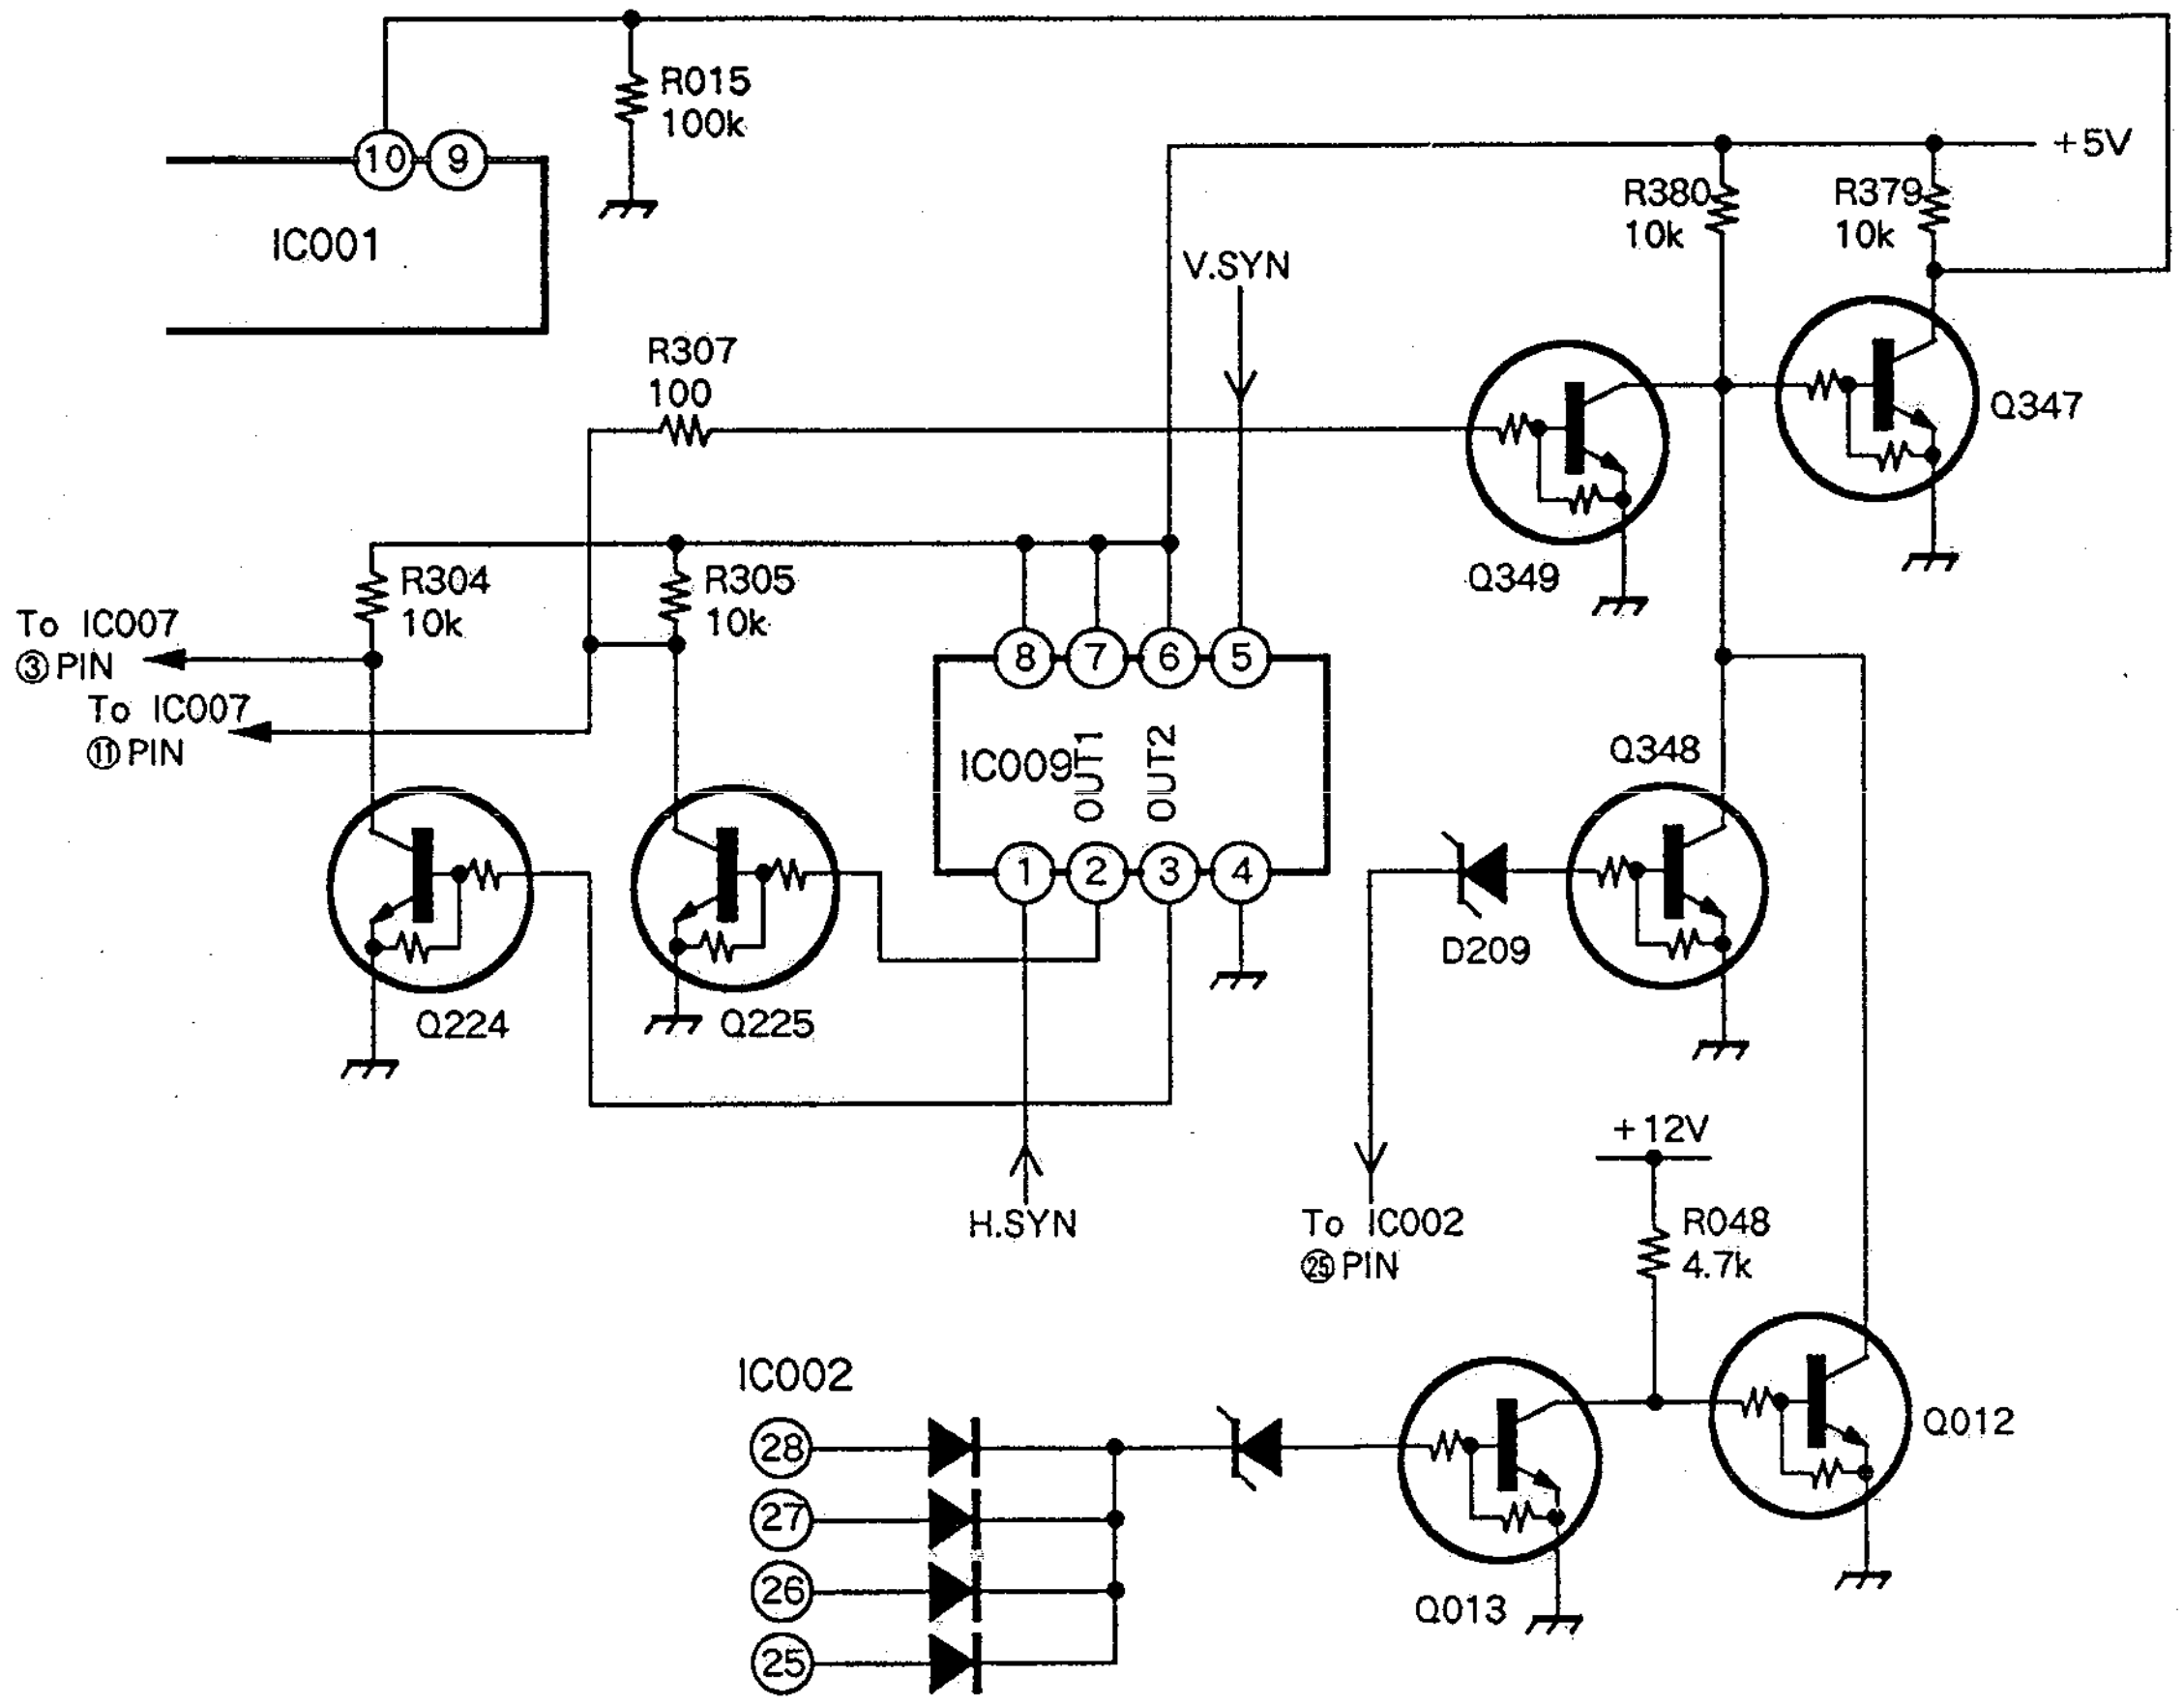

R015
100k
⑩
⑨
IC001
R307
100
V.SYN
+5V
R380
10k
R379
10k
Q347
Q349
R304
10k
R305
10k
To IC007
③PIN
To IC007
⑪PIN
8
7
6
5
IC009
OUT1
OUT2
1
2
3
4
Q348
D209
Q224
Q225
H.SYN
To IC002
㉕PIN
+12V
R048
4.7k
IC002
㉘
㉗
㉖
㉕
Q013
Q012

2. PAL/SECAM
   Pin ② of IC009 becomes Low while Q225 is turned off and the collector becomes High. Q349 turns ON and the collector becomes Low, causing pin ⑩ of IC001 to turn High when collector Q347 becomes High.

5. IC003 (CXA-1216P)
   IC003 (CXA-1216P) is an R. G. B. MATRIX IC. Pin ⑦ inputs Y signals, pin ⑥ inputs B-Y signals and pin ⑤ R-Y inputs while pin ① receives the BLK pulse (refer to section on IC004) and pin ③ receives the B. P. CLAMP pulse. Pins ⑮, ⑰, and ⑲ outputs B, G and R signals respectively.

6. a) DYNAMIC PICTURE SW.

   Pin ⑪ of this IC003 is an auto-pedestal which activates the dynamic picture when SW1 is in the open position.

   b) IC007 (TC74HC27AP)

   This IC is an IDTV (BC board) SW whose pin ⑫ becomes Low in IDTV MODE, High in VIDEO MODE and Low in RGB MODE.

   This line controls pins ⑨, ⑩ and ⑪ on IC007 (control terminal for switching signals Y, R−Y, B−Y for VIDEO and 2Y, 2 (R−Y), 2 (B−Y) on the BC board); pin ① of IC006 (control terminal for H. SYNC signal for VIDEO and 2H, 2V. SYNC signals on the BC board); and finally, pin ④ of IC010 (control terminal for sharpness control).

IC007 (TC74HC27AP)

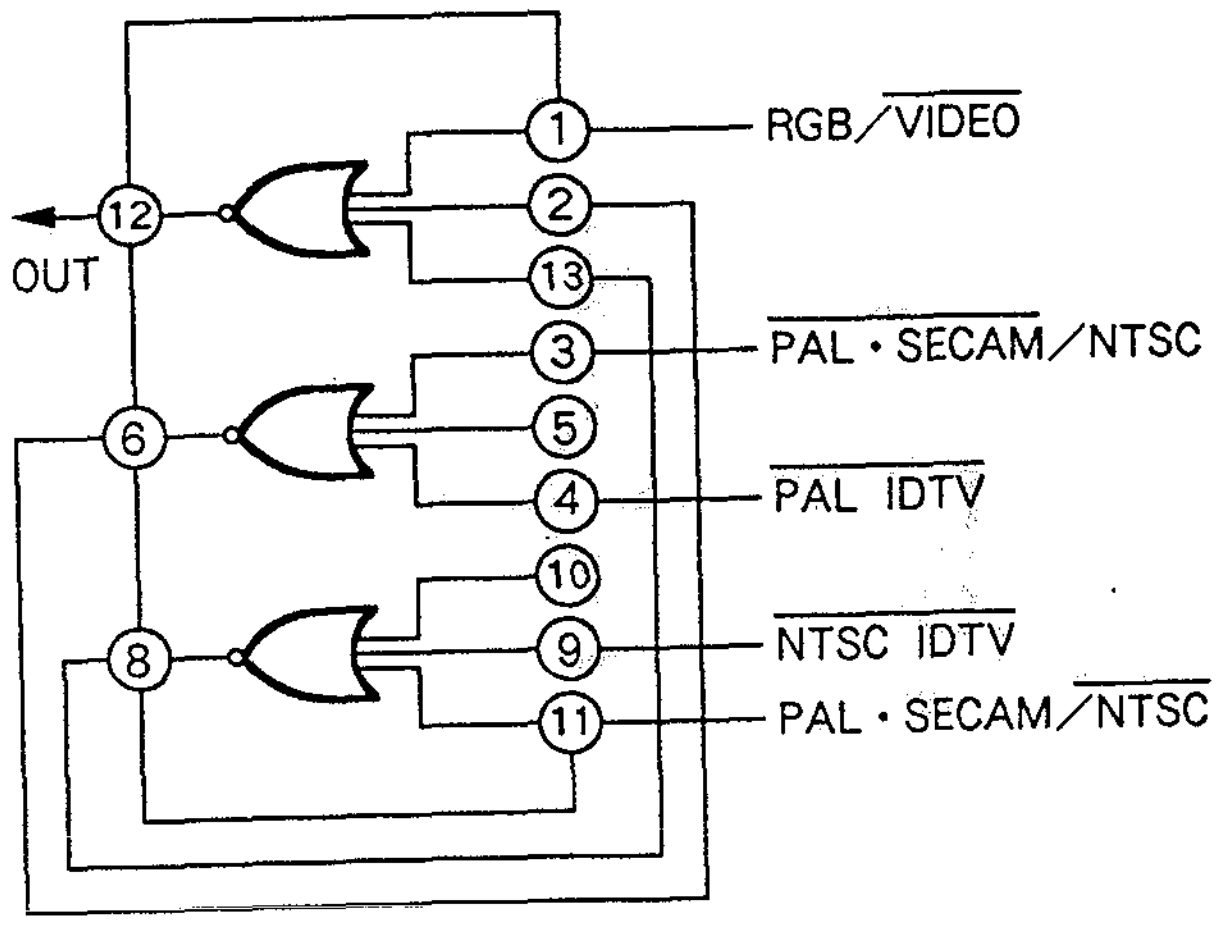

1
RGB/$\overline{\text{VIDEO}}$
2
12
OUT
13
3
$\overline{\text{PAL·SECAM}}$/NTSC
6
5
4
$\overline{\text{PAL IDTV}}$
10
8
9
$\overline{\text{NTSC IDTV}}$
11
PAL·SECAM/$\overline{\text{NTSC}}$

3-2. Circuit Board BB

RGB INPUT (VIDEO SECTION)

The RGB signals received through Input A or B are each input into pin ⑧ of RL401, 402, 403, after passing through 7A, 9A, 11A of connector BB−1. On the other hand, the RGB signals received through the switcher and CCQ are input into pins ⑬, ⑪, ⑨ of connector BB−2. These signals are then input into pin ⑭ of RL401, 402, 403. Pin ① of RL is controlled according to the mode shown in chart 1 and either of the signals output from pin ⑪ goes into C651, C660, C668.

Chart 1

SLOT SEL (BB-1 23B)	RL401, 402, 403 Pin ①	RL Output Pin ⑦
H	H (CCQ)	Pin ⑭
L	L (INPUT A, B)	Pin ⑧

The red signal is clamped by a clamp circuit comprised of Q666, IC410 so that the pedestal level of the signal fed through Q667, 650 is identical to pin ⑤ of IC410. After clamping, the signal passes through Q670, 674, 678; an AMP section comprised by Q682, 683, 684, 685, 686 and is output from 17B of connector BB−1. The circuit of the blue signal is similar and the signal is output from 19B of connector BB−1. As far as the green signal is concerned, the signal passes through a clear blue circuit (refer to page P−14) after which it follows a similar path and is output from 18C.

VIDEO INPUT (VIDEO SECTION)

Signals from this device'S VIDEO IN terminal passes through R539 and the buffer of Q509 and are input into pin ⑫ of IC404. Moreover, as far as the signals received through the S−terminal IN terminal is concerned, Y−signals are input into pin ② of IC404 after passing through Q516, while the C−signals are inputs into pin ⑤ after passing through Q517. On the other hand, the VIDEO, Y/C signals entered through INPUT A, B, each goes through the RGB signal line and inputs into pin ⑧ of RL401, 402, 403. VIDEO, Y/C signals received by the switcher are similarly input into pin ⑭ of RL401, 402, 403. As previously mentioned for RGB input the switch of RL, each output goes into ⑬, ①, ③ of IC404 after passing through Q506, Q507, Q508. At this point, pins ⑨, ⑩, and ⑪ of IC404 is under the mode control shown in chart 2. VIDEO signal, Y−signal, C−signal are output from pins ⑭, ⑮, and ④ after which they are sent out through connector 5C−4B, 5B to the BA board. The RGB signals decoded by the BA board are input to connectors 8C, 9C, 10C on the BB board side where they are respectively fed through Q669, 687, 706 as well as the VIDEO/RGB SW. They are then passed through the emitter follower on Q674, 692, 711 and are output from BB−1 connector 17B, 18C, 19B, following a similar path as that for RGB inputs.

Chart 2

V. IN SEL (BB-1, 23A)	IC404 ⑨, ⑩, ⑪	IC404 Output ⑭, ⑮
H	L (VIDEO IN)	⑫, ②, ⑤
L	H (Others)	⑬, ①, ③

SYNC SECTION

External SYNC

HD, BD received by INPUT A, B are fed into connector 1A, 2A of BB−1 and are input into pins ⑭ and ⑪ of IC405. On the other hand, signals received by the switcher are input into pins ⑦ and ⑥ of BB−2. For this input and in the case of HD, the peak signal is clamped at 0.7V by D501 after being terminated by R501. After this operation, Q501 and Q502 does the switching and a 5Vp−p pulse is output from the collector of Q502. The pulse is then input into pin ⑬ of IC405. VD also goes through a similar circuit, with the pulse being output from the collector of Q504 and input into pin ⑩. The operation of IC405 is controlled according to the modes shown on chart 3; the pulse is output from pins ⑫ and ⑨ and are input into pins ⑬ and ⑩ of IC407.

Chart 3

SLOT SEL (BB-1、23B)	IC405 Pin ①	IC405 Output Pin ⑫, ⑨
H	H	⑬, ⑩
L	L	⑭, ⑪

On the other hand, in the case of VIDEO inputs, sync sep is handled by board BA. Subsequent to this operation the signals go to connector 4A and 5A of BB−1 and are input into pins ⑭ and ⑪ of IC407. IC407 is controlled according to the modes indicated on chart 4 whereby the outputs go from pins ⑫ and ⑨ and connector 26C and 26A of BB−1.

Chart 4

V. IN SEL (BB-1, 23A)	IC407 Pin ①	IC407 Pin ⑫, ⑨, ⑦
H	L	⑭, ⑪, ⑤
L	H	⑬, ⑩, ⑥

Sync on Green

Green signals from the switcher and from INPUT A and B are, as mentioned earlier, switched by RL402 and input into pin ⑦ of IC401. When the HDVS board is used instead of INPUT A and B, ternary sync pulse is received from connector 16C of BB−1. IC401 is controlled on the basis of the modes shown on Chart 5 and the output comes from pin ④. These output signals pass through C903 and are then sliced by sending them through the AGC circuit, finally sync sep OUT is output from the buffers of Q912 and Q913.

Chart 5

HD SELECT BB-122A	SLOT SELECT	IC401 Pin ④
L	–	Pin ⑦
Open	H	Pin ⑦
Open	L	Pin ②

Sync on Green Sync Sep Block Diagram

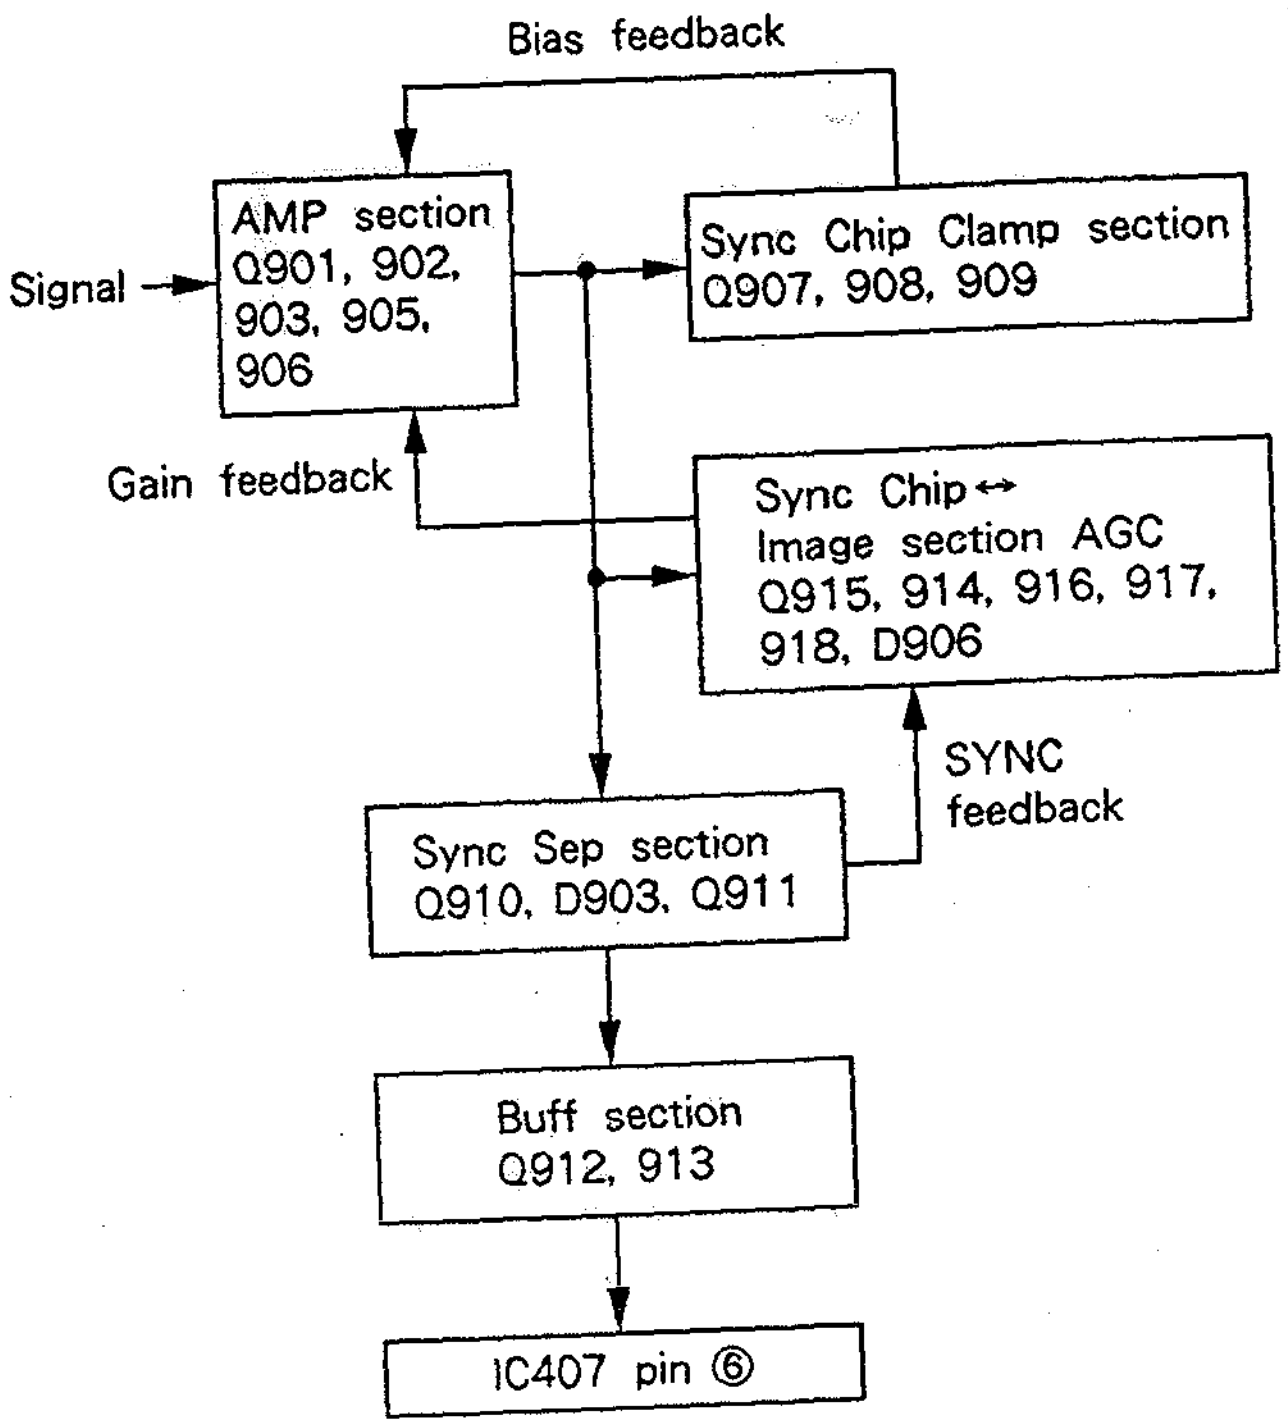
Bias feedback
Signal
AMP section Q901, 902, 903, 905, 906
Sync Chip Clamp section Q907, 908, 909
Gain feedback
Sync Chip↔ Image section AGC Q915, 914, 916, 917, 918, D906
SYNC feedback
Sync Sep section Q910, D903, Q911
Buff section Q912, 913
IC407 pin ⑥

The sync sep output is input into pin ⑥ of IC407. On the other hand, during VIDEO input, H sync is input into pin ⑤ while pin ⑦ outputs the signals converted by the mode indicated on Chart 4. The converted signals are then input into connector 25C of BB−1.

The operation of each section of the sync sep circuit is shown below.

AMP SECTION

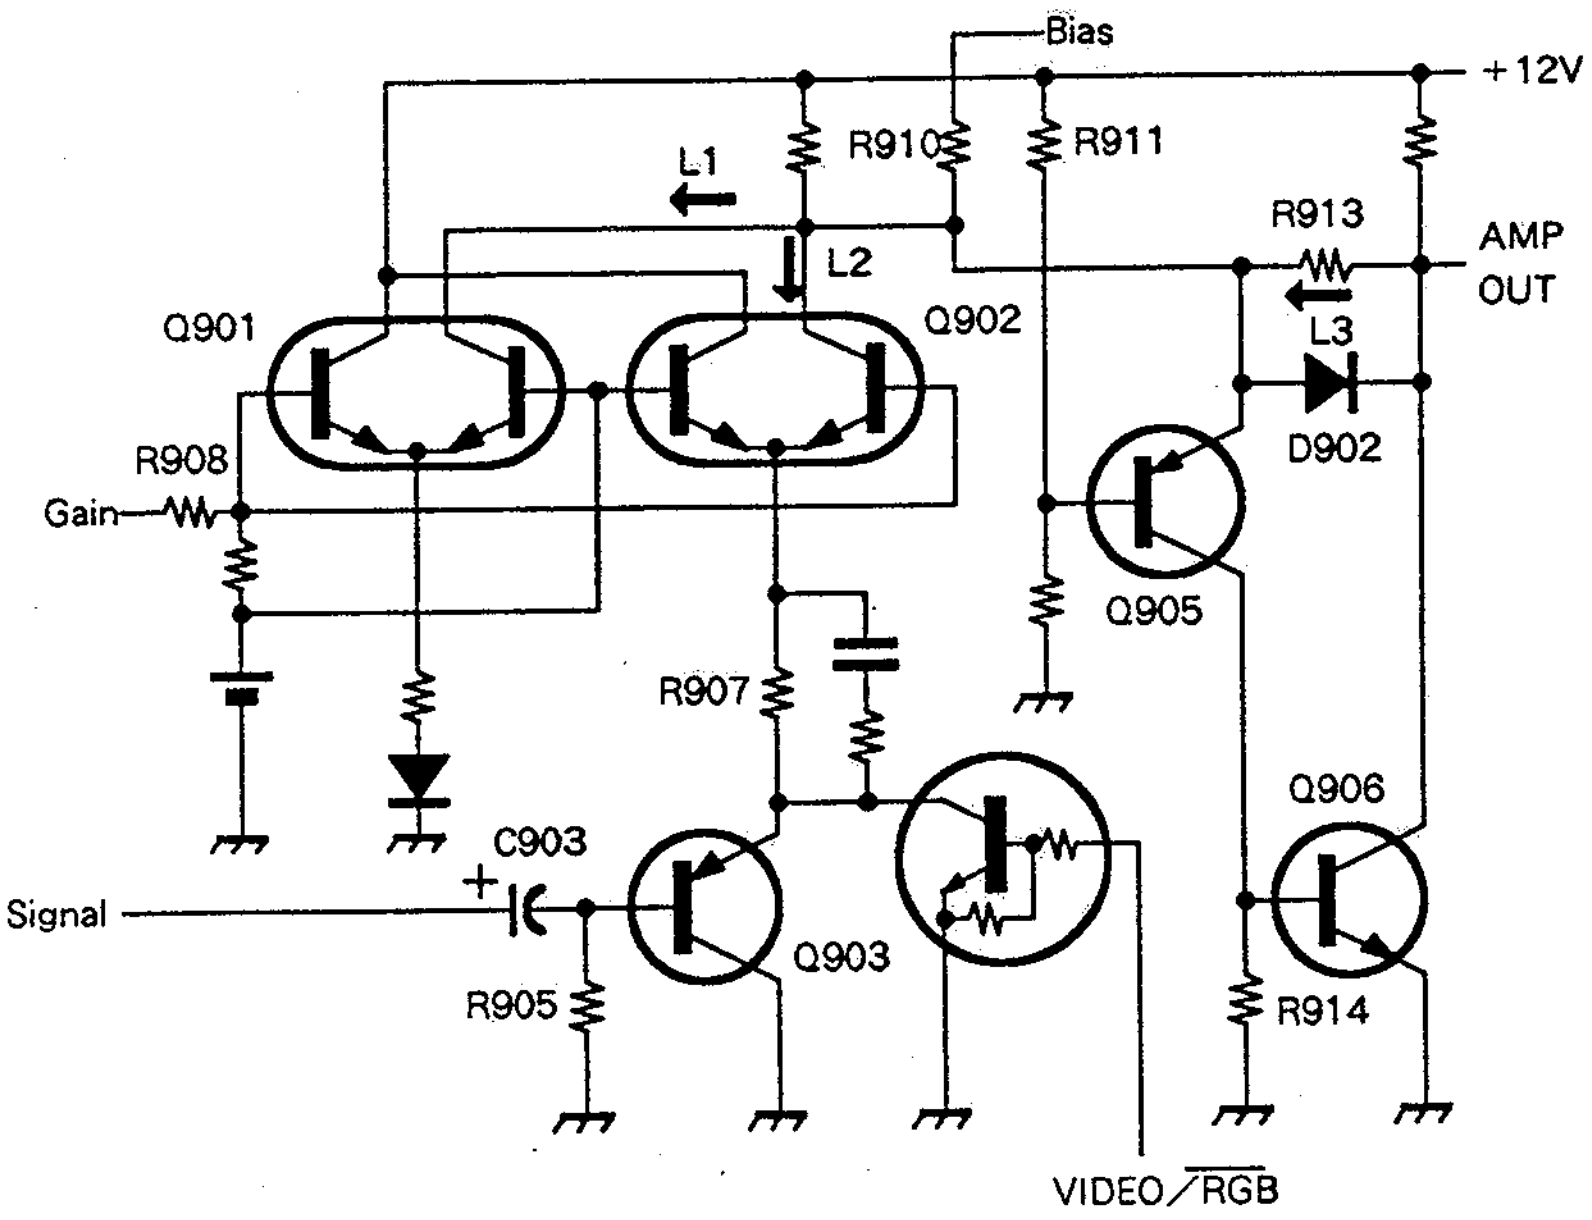
Bias
+12V
L1
R910
R911
L2
R913
AMP
OUT
L3
Q901
Q902
D902
R908
Gain
Q905
R907
Q906
C903
+
Signal
Q903
R905
R914
VIDEO/RGB

Signals are passed through C903 and the signals biased by R905 are converted to an electric current by Q903. This current goes from R907 and flows to emitter Q902. At this point, the signal current, adjusted by the gain control voltage while passing through R908, flows into the collector of Q902. Meanwhile, since the voltage of collector Q902 is fixed at the base electric potential of Q905 $+V_{BE}$, return voltage flows from R913 so that this electric potential remains unchanged. A reverse waveform appears on collector Q906. Therefore, the maximum gain can be expressed as (R913) /R907. Also note that D902 is a limiter for instances when the electric potential of collector Q906 becomes lower than the base electric potential of Q905.

BIAS SECTION

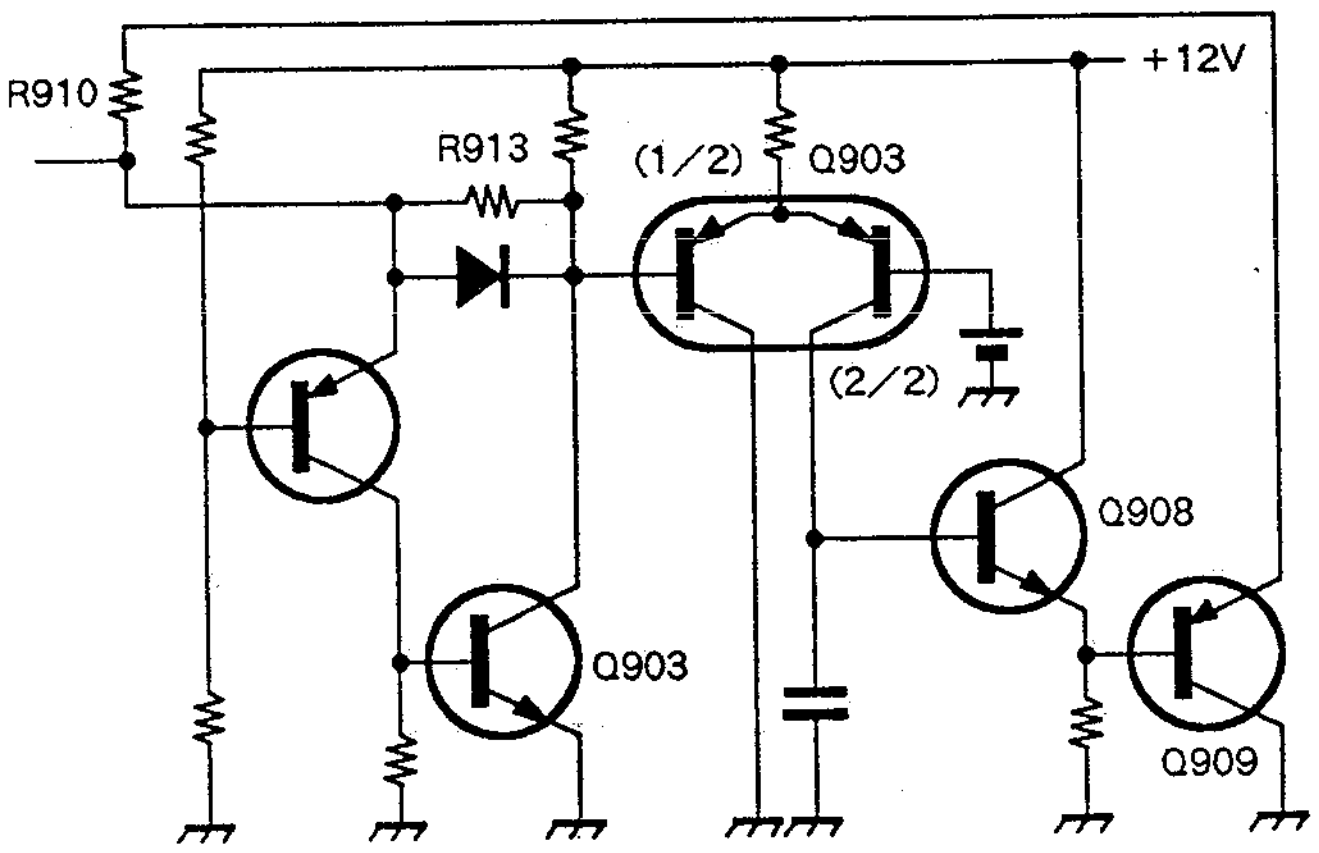
R910
+12V
R913
(1/2)
Q903
(2/2)
Q908
Q903
Q909

Signal appearing on collector Q903 goes into the base of Q907 (1/2) and is compared against the base voltage of Q907 (2/2) (the voltage determined by R918, 921, 928, 933 and 934). As shown in Fig. 1, for example, if the base electric potential of Q907 (2/2) existed on the waveform's sync section electric potential, Q907 (2/2) of only the sync section is turned ON and the Q908 base electric potential increases, resulting in an increase of the base of Q909. As a result, the DC current that flows from R910 to Q909 decreases and the electric potential of collector Q903 decreases as well. Finally, R910 releases electric current so that the highest point of the base electric potential of Q907 (1/2) and the base electric potential of Q907 (2/2) are the same.

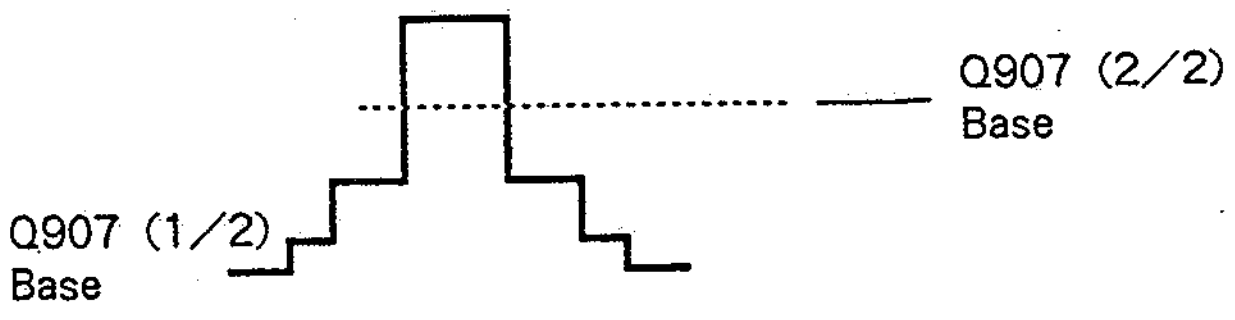
Q907 (2/2)
Base
Q907 (1/2)
Base

Fig. 1

SYNC SEP SECTION

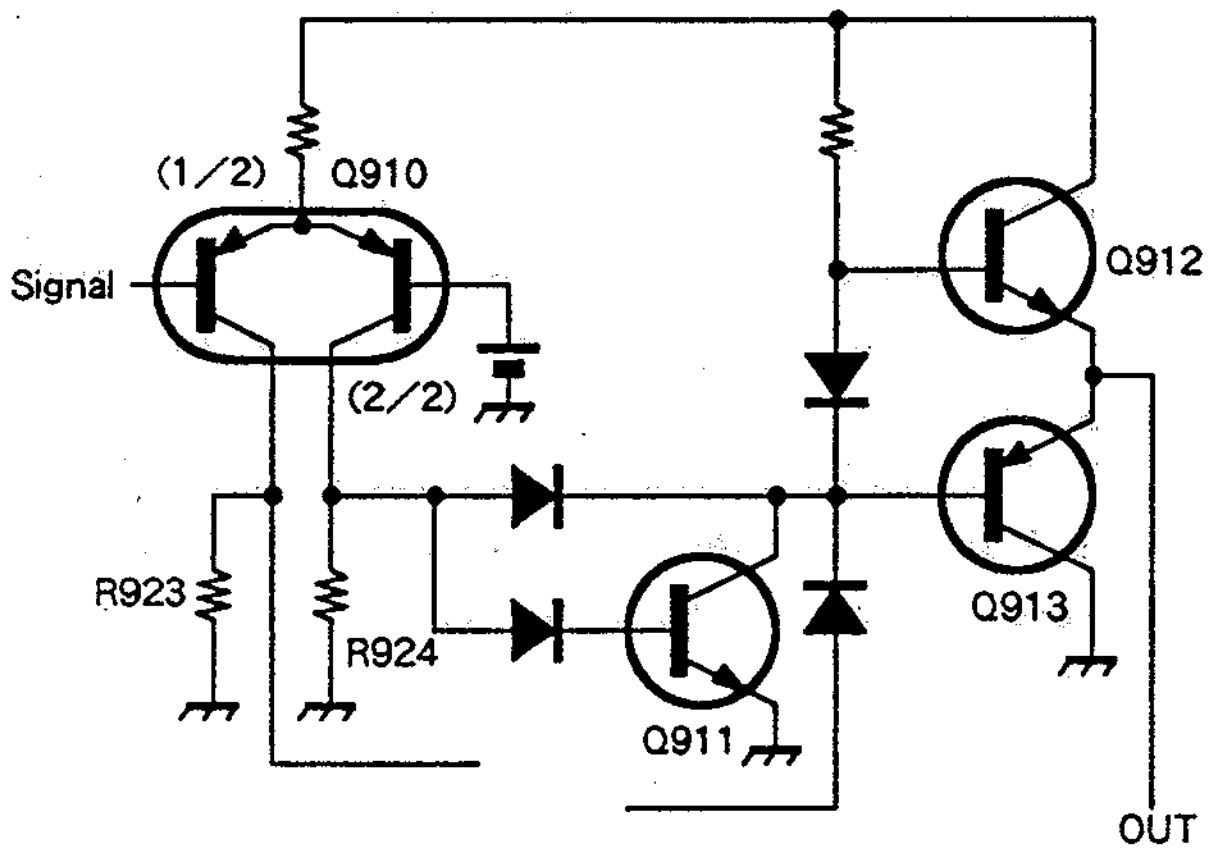
(1/2)
Q910
Signal
(2/2)
Q912
R923
R924
Q913
Q911
OUT

The signal generated by the AMP section (described earlier) is input into Q910 (1/2) and the DC voltage as determined by R918, 921, 928, 933 and 934 is input into Q910 (2/2). The relationship in voltage between the two is demonstrated in Fig. 2 where it can be seen that Q910 (2/2) is turned ON only starting from the Sync section. Other sections become Low. This pulse is switched by Q911 and is extracted as 5V negative composite sync.

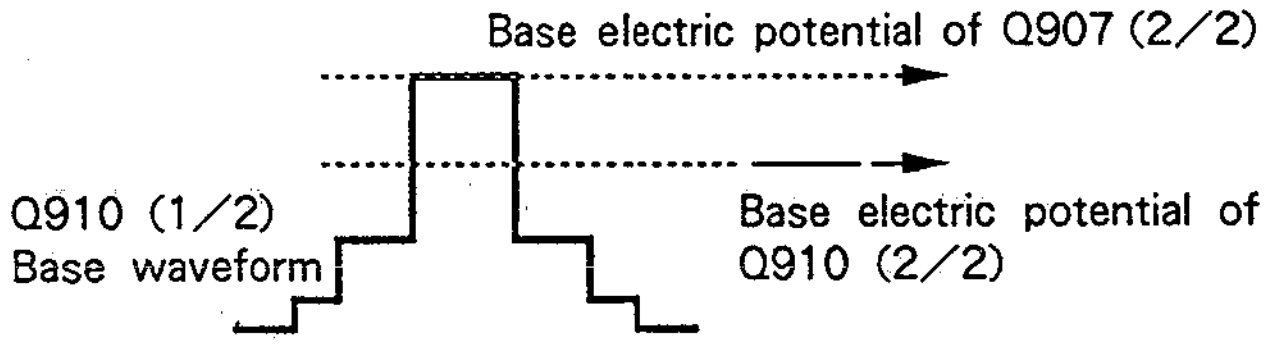
Base electric potential of Q907 (2/2)
Q910 (1/2)
Base waveform
Base electric potential of
Q910 (2/2)

Fig. 2

GAIN CONTROL SECTION

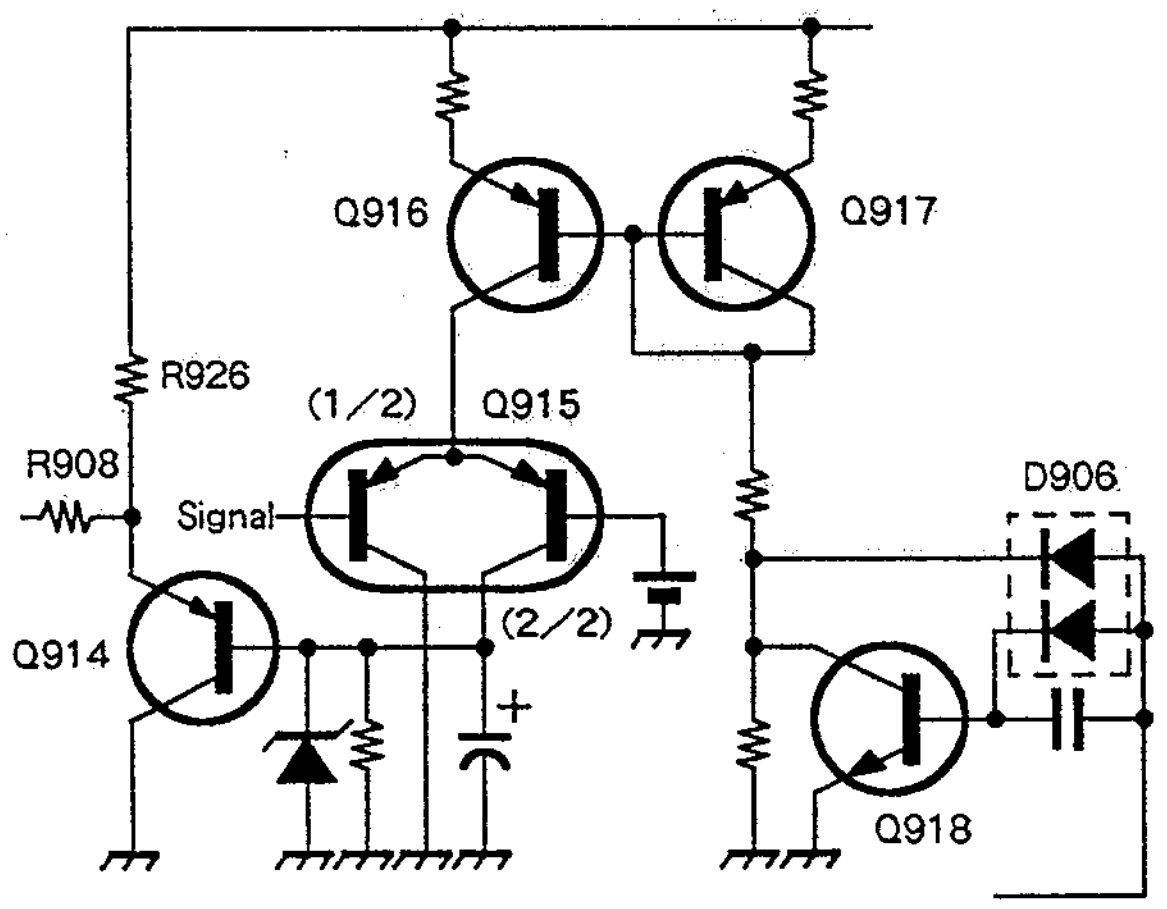
Q916
Q917
R926
(1/2)
Q915
R908
Signal
D906
Q914
(2/2)
+
Q918

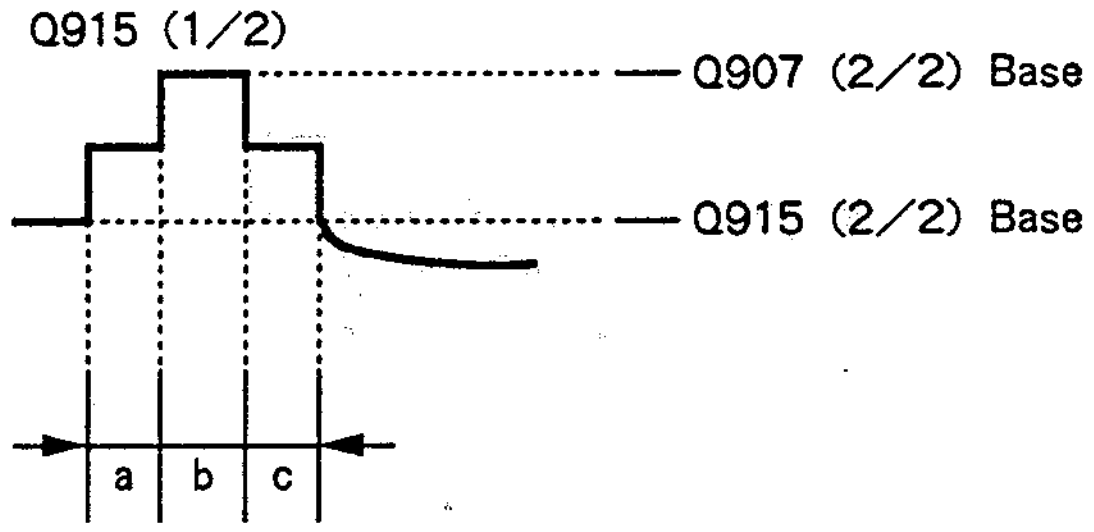
Q915 (1/2)
Q907 (2/2) Base
Q915 (2/2) Base
a
b
c

Fig. 3

The output from AMP is input into the base of Q915 (1/2) while the electric potential as determined by R918, R921, 929, 933 and 933 is fed into R915 (2/2). This means that the one with the lower base voltage is turned ON. On the other hand, sync sep out (negative polarity) that appears on collector terminal Q910 (1/2) is input into Q918. This is turned ON only during the time the sync section is operating. Subsequently, current flows into Q917, and the same current flows into Q916. As a result, supposing that a waveform similar to that shown in Fig. 3 is input, Q915 (2/2) is turned ON during a and c, the electric potential of collector Q915 (2/2) as well as that if emitter Q914 increases. When this occurs, as described earlier in the AMP section, the electric potential of the gain control terminal increases, making the AMP's gain increase. It is through this type of operation that the difference in electric potential between the pedestal section and the sync CHIP section becomes the base electric potential variance between Q907 (2/2) and Q915 (2/2).

Ternary Sync Discriminating Circuit

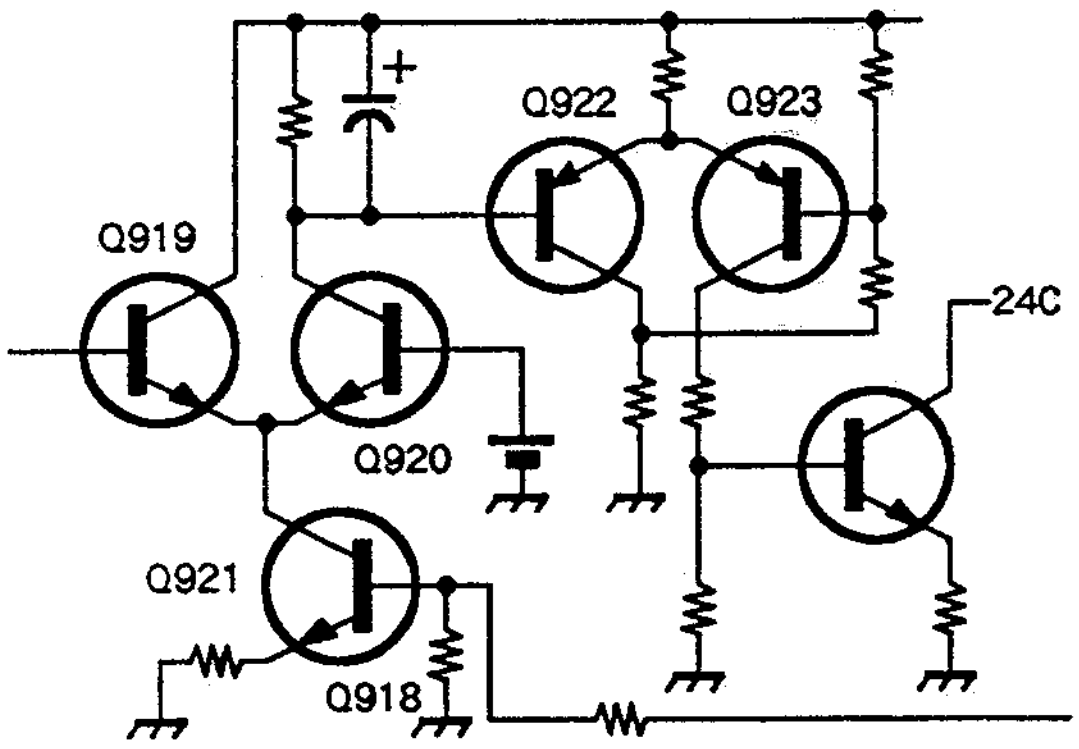

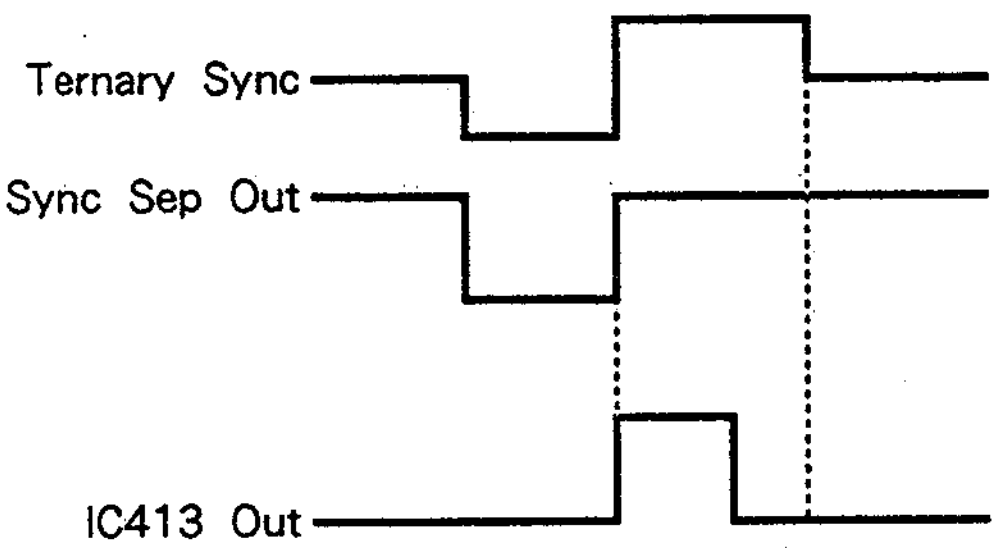

Fig. 4

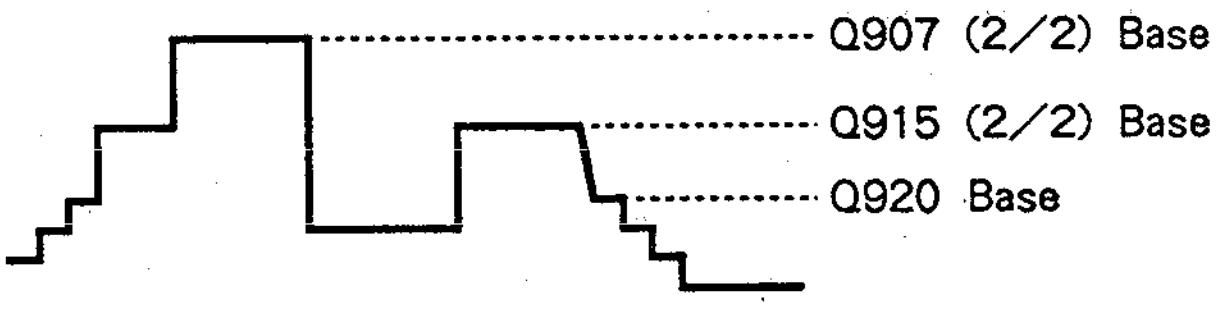

Fig. 5

AGC and clamped signals produced by the previously mentioned sync sep circuit are input into the base of Q910 while the DC voltage shown in Fig. 5 is added to Q920. Furthermore, Q921 is connected to the emitters of Q919, and Q920, and the pulse shown in Fig. 4 is entered into their bases, making the system ON only when the voltage is higher than the pedestal's ternary sync voltage. As a result, whenever ternary sync is input, Q920 turns ON only when the voltage is higher than the pedestal's and the electric potential of collector Q920 falls. This is recharged by C911 and transmitted to the base of Q922. Q922 and Q923 are schmitt trigger circuits whereby when the base electric potential of Q922 falls, Q923 becomes OFF, lowering the collector electric potential and turning Q924 OFF.

AUDIO SECTION

The signals connected to the switcher (R, L, MIX) are input into pin ② of IC408, 409 via pin ① of connector BB−2. In addition, the R and L signals input into INPUT A and B are fed into 13A and 14A of connector BB−1 and enters pin ⑫ of IC408. IC408 and 409 are controlled by the mode shown in diagram 6 and output through pin ⑭. The R, L signal is then input into pins ⑥, ④ of IC412, increased or reduced according to the changes in the VOL control terminal voltage of pins ② and ⑧, and output from pins ⑦, ③ as well as from 3C, 3B of connector BB−1.

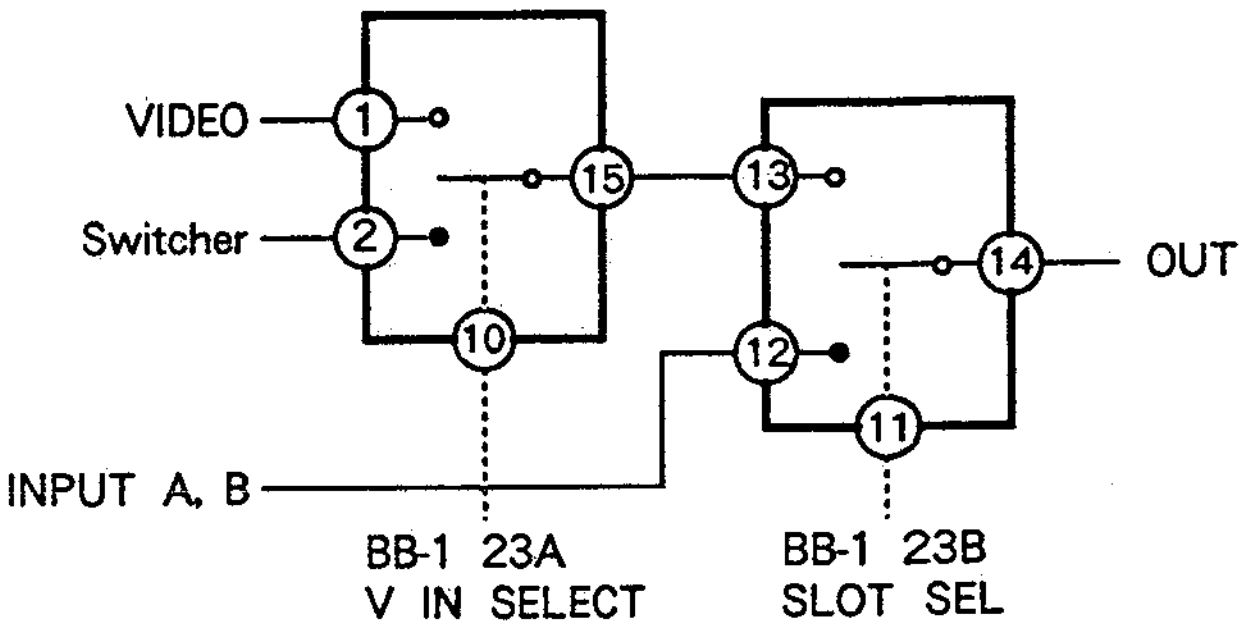

Fig. 6

SIRCS SIGNAL

Signal received by the optical receptor of this unit goes into 1C of connector BB−1, the signal from the attached remote control unit to 1B of connector BB−1, and the signal from the switcher are input into pin ② of BB−2 respectively. Signal received at the optical receptor unit takes the following pass : Q450, 451 to SW included in the SIRCS IN terminal, to D450, to Q454 and finally to 23C of connector BB−1. In addition, it is also sent to SIRCS OUT via Q456. At this point, the included SW turns OFF when a terminal is inserted into SIRCS IN, and ON when removed. Therefore, when the terminal is plug the WIRELESS input on the main unit is disabled. Instead, the plug WIRED input signal is sent to D450. On the other hand, the signal from the main unit's remote controller goes into D450 after which it follows the same path. Furthermore, signal from switcher is sent to Q453 and after that is the same.

CLEAR BLUE CIRCUIT

The clamped R (red) signal appears in reverse waveform at collector Q667. This is sent to Q668 and the G (green) signal is similarly sent to Q727. As result, the signal that appears on emitter Q668 and 727 is a signal with low base electric potential (signal with a higher image level).

This is sent to the base of Q728 (1/2) and 730 (2/2) via Q728. On the other hand, B (blue) signal appears in reverse waveform on collector Q737 and is sent to Q736 after which it is sent to the bases of Q728 (2/2) and 730 (1/2) via R740 and 743. At this point, for R and G signals the DC level is determined by the power supply from Q734 when it is reversed. While the DC level for B signal is determined by the power supply from Q735. Furthermore, the emitter of Q728 is connected to collector Q732 and the G signal current flows as result of the G signal input into the base. Likewise, the emitter of Q730 is connected to the collector of Q731 and the B signal current flows as result of the B signal input into the base. First of all, when the C. B SW is in the OFF position Q733 turns ON and the base electric potential of Q728 (1/2) and 730 (2/2) becomes low. ↗ As result, Q728 (1/2) and Q730 (2/2) turns OFF ; Q728 (2/2) and Q730 (1/2) turn ON ; a reverse waveform of G signal appears on collector Q729 after which it is reversed by Q739 and input into Q688. When C.B SW is ON, the base electric potential of Q728 (1/2) and Q730 (2/2) are compared against the base electric potential of Q728 (2/2) and Q730 (1/2). The transistor with higher base electric potential is turned ON. As result, if the signal level of B signal and R, G signal is compared and if the B signal level is higher Q730 (2/2) and Q728 (1/2) are turned ON and a MIX signal of B signal and G signal is output to collector Q729. In case, the B signal level is lower than the signal level of R,G, Q730 (1/2) and Q728 (2/2) turn ON and only the G signal is output to collector Q729. As shown above, CB operation produces G signal to B signal and turns blue to cyan.

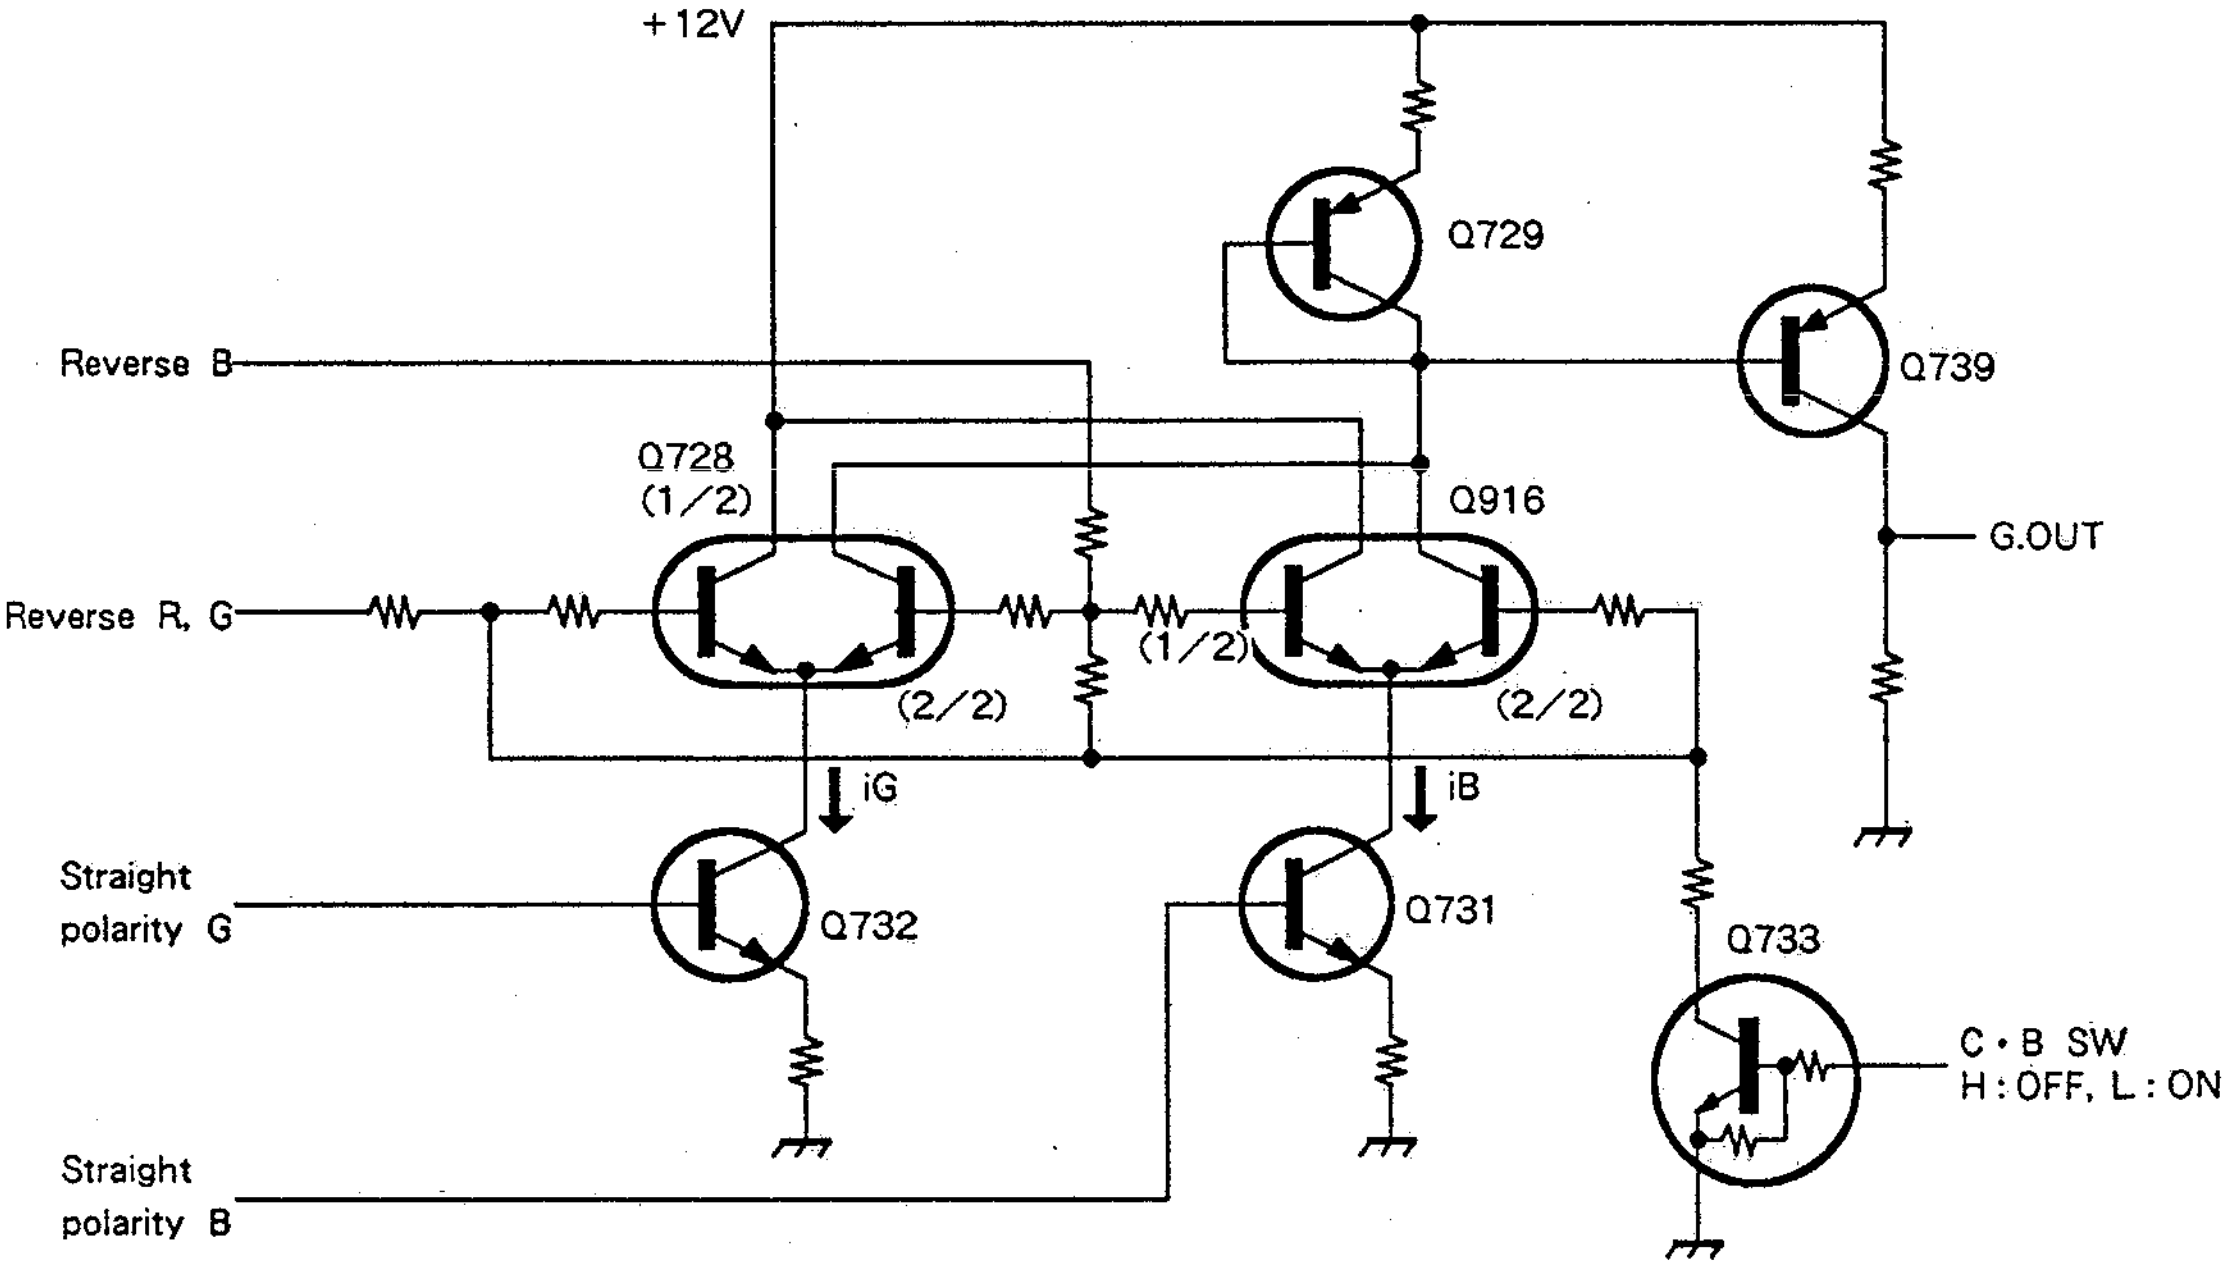

TEST SIGNAL GENERATOR

When the test signal mode is selected, 27C of connector BB−1 becomes low and collector Q656 becomes high. It then passes through D652, 653 and turns Q671, 672 ON when R, Q689, 690 when G and Q708, 709 when B and turns OFF the RGB and VIDEO signals. On the other hand, test signal are input into each RGB signal via Q675, Q693 and Q712.

Signal (hatched, dotted, and other test signal) Generator Section.

ECL signals are input into 28A, 28B of connector BB−1 and the respective signals are input into Q660, 661. The lighting portion of the test signal turns the Q660 side High and Q661 Low. As result, Q660 and Q665 becomes ON and electric current flows into collector Q654 through a current mirror circuit. Then a voltage is generated by R659, R663, and R655 (described later) and is input into Q652. This signal is added to each of the RGB circuits.

3. OTHERS

(1) AD. HD···Registration correction is affected by eddycurrent. To rectify this problem regeneration waveforms are created by advancing the waveform by 1 to 2 μs. The horizontal deflection of HD is input into pin ④ of IC3. A constant that will become approximately 3 to 4 μs will be used and integrated (IC3 ⑥). Next the horizontal deflection of HD is input into pin ⑪ of IC3 and a pulse created using the leading edge as trigger. This Q output will be integrated and the result of previous integration will be compared against IC4. Since a feedback is applied, the pulse width of pin ⑥ and ⑨ of IC3 will be the same. As a result, the pulse width of pin ⑨ of IC3 will become 3 to 4 μs. Because the original HD (pin ⑪ of IC3) is about 2 μs, the net effect on the pulse of pin ⑨ of IC3 will be an advancement of 1 to 2 μs. This will be input into IC201 to create a horizontal regeneration correction waveform.

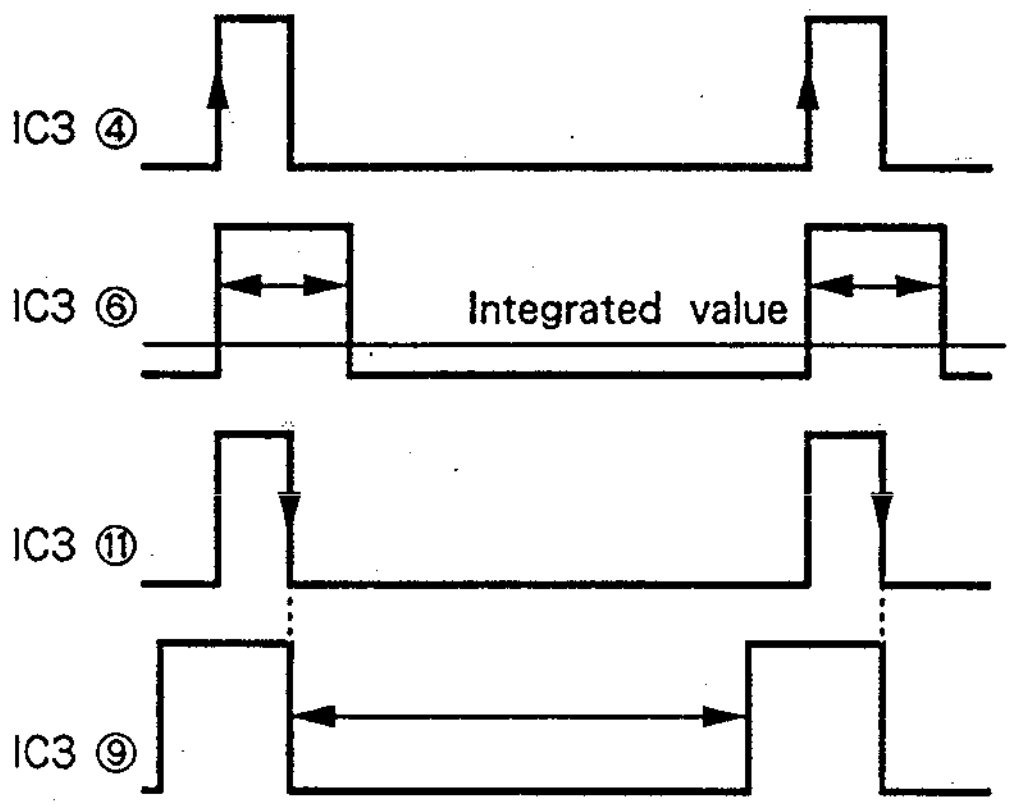

Fig. 4

(2) BLK PULSE

1) V. BLK···The position of BLK has been fixed so that even if the size is altered, the on-screen position of BLK will not change. By performing slice and comparing operations on a certain level of V. SAW, a pulse such as BLK 1 that is shown in Fig. 5 is created (IC220). If the bias of BLK (T) in Fig. 5 is changed, the width of BLK 1 alters. V. BLK is structured by adding a retrace line, as well as VD and V. Pulse so that BLK is effected during a H. STOP.

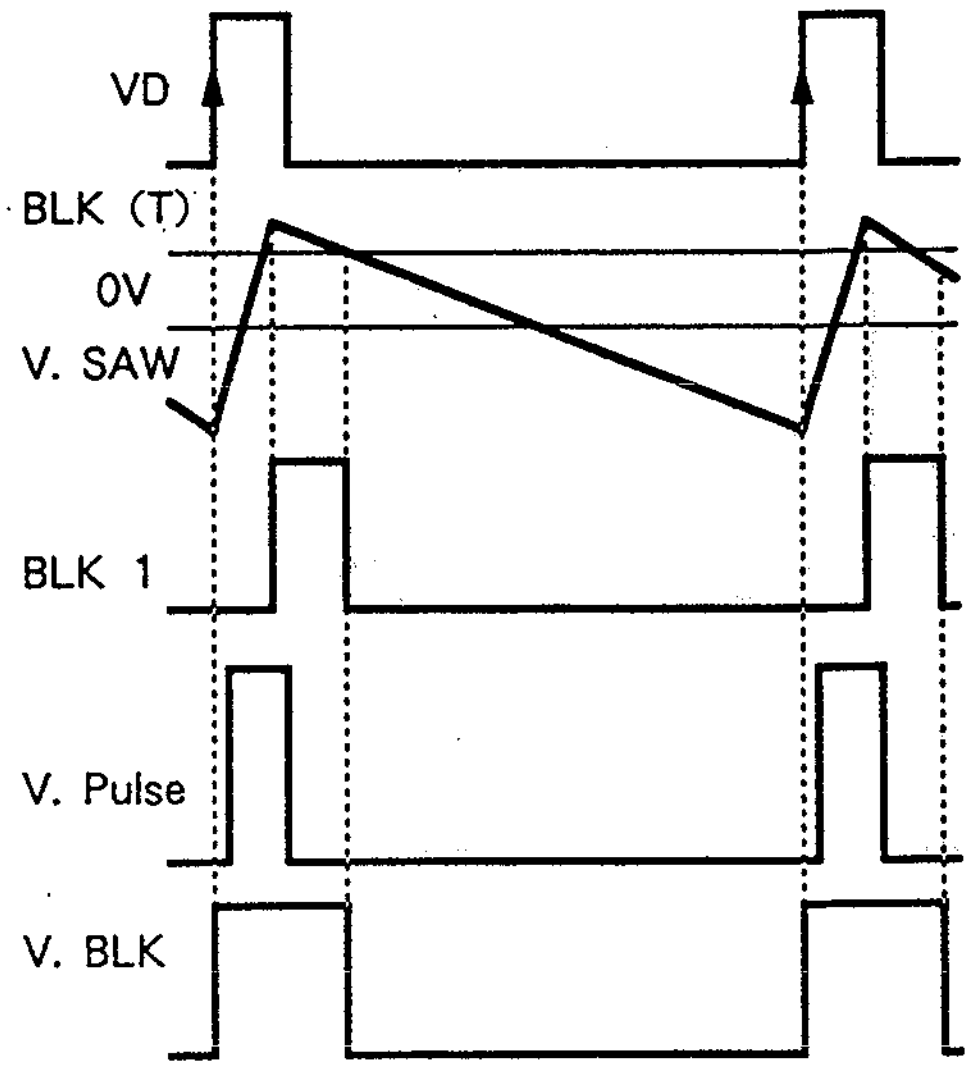

Fig. 5

2) H. BLK···Although similar to V. BLK in principle, since H. SAW is created with AD. HD, if the pulse created by slicing H. SAW with H. BLK (R) and if HD is added to create H. BLK, the phase of the two BLK pulses will not align as shown in Fig. 6, H. BLK 1. For this reason, H. BLK will be created by padding HD.
A pulse is created by shifting the voltage level of connector 25−c and shifting H. SAW (Fig. 7 H. BLK 2). Voltage a will be defined to be the voltage resulting from integration. BLK (R) is created as follows. First add HD to pin ⑪ of IC5 and create a pulse using the leading edge as a trigger. Then take the integrated value of output $\overline{Q}$ (pin ⑨ of IC5), compare it against a in the foregoing, and apply a feedback until the same integration value is obtain. BLK (L) is created in the same manner.

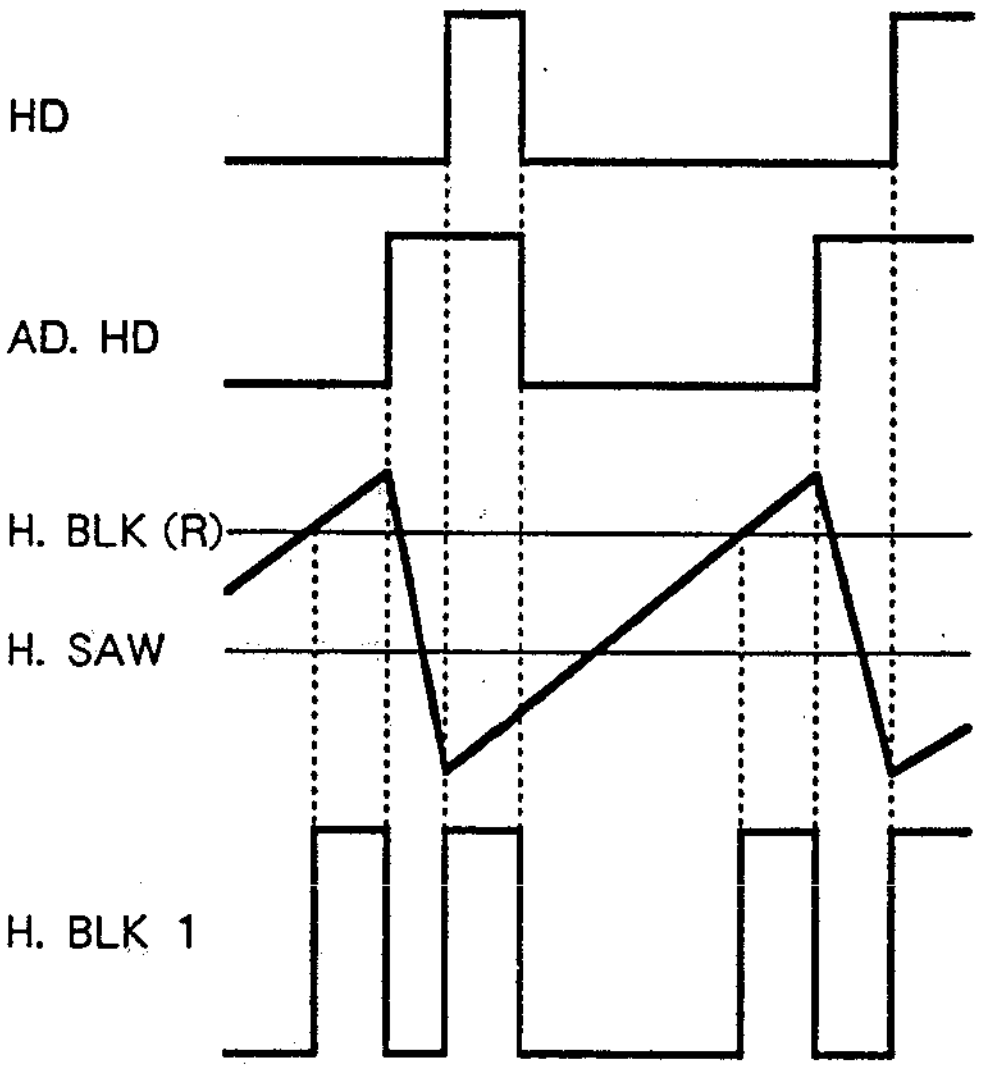

Fig. 6

3) C. BLK···Feed BLK pulses V. BLK (1) and H. BLK (2) through the decoder circuit. C. BLK will be output from pin ⑮ (OUT). Pin ⑮ is an OR output which becomes Low only when pins ①, ②, ③, and ⑥ are also Low.

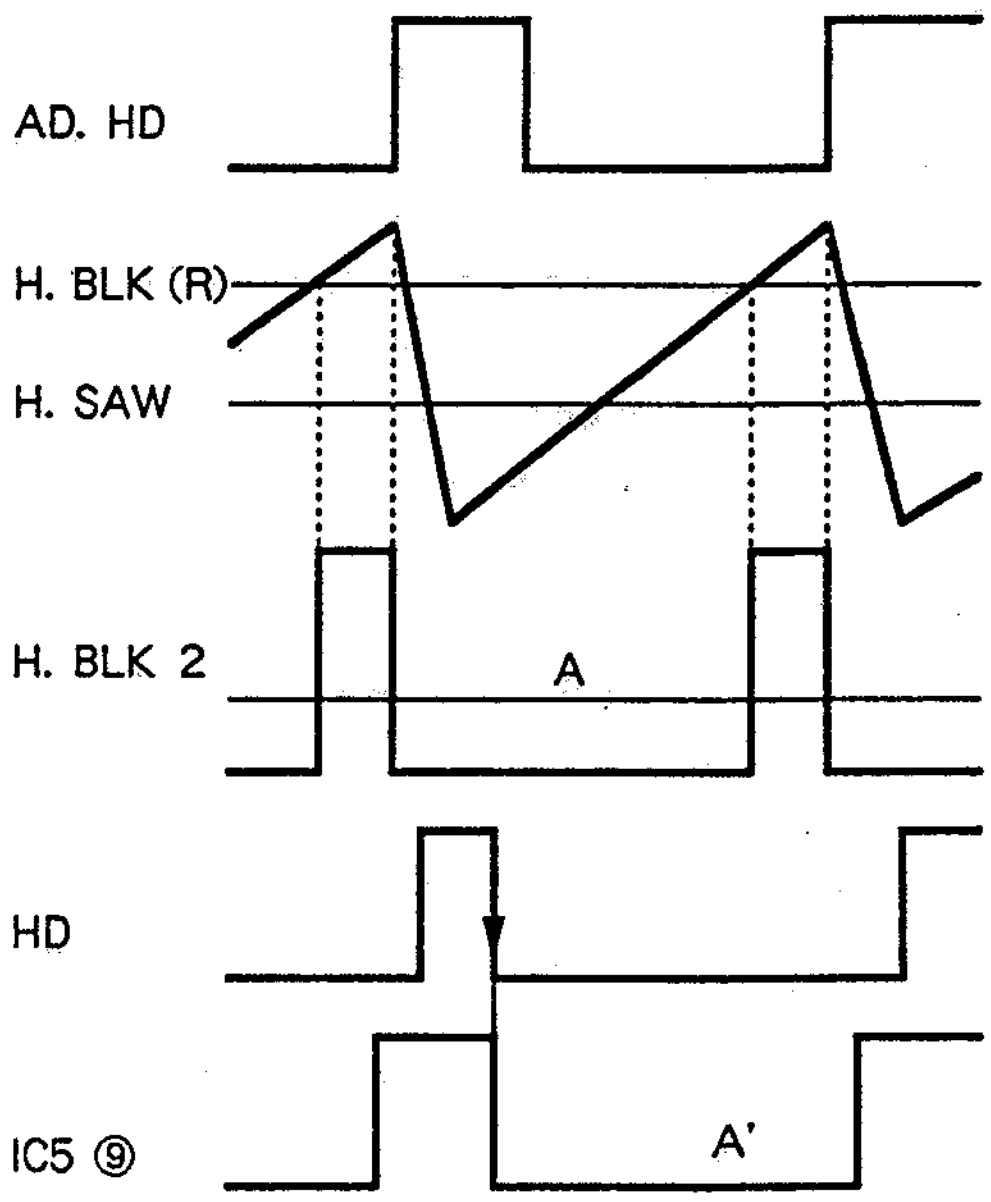

Fig. 7

(3) SIZE ABL CIRCUIT···Since ABL circuit is a total high −voltage limiter, when its size is halved, the current density per unit area is doubled. This can become the cause for partial burning of the tube surface and cracking of the CRT due to heat concentration. This set has a particularly wide size range, the current density can become several times larger. For this reason, a SIZE ABL circuit, which keeps the current density per unit area fixed, was added. Control voltage H. SIZE and V. SIZE are multiplied and the result added to the ABL detection point, as shown in Fig. 8. As a result, the detecting voltage is changed. The ABL is therefore being changed through the use of SIZE.

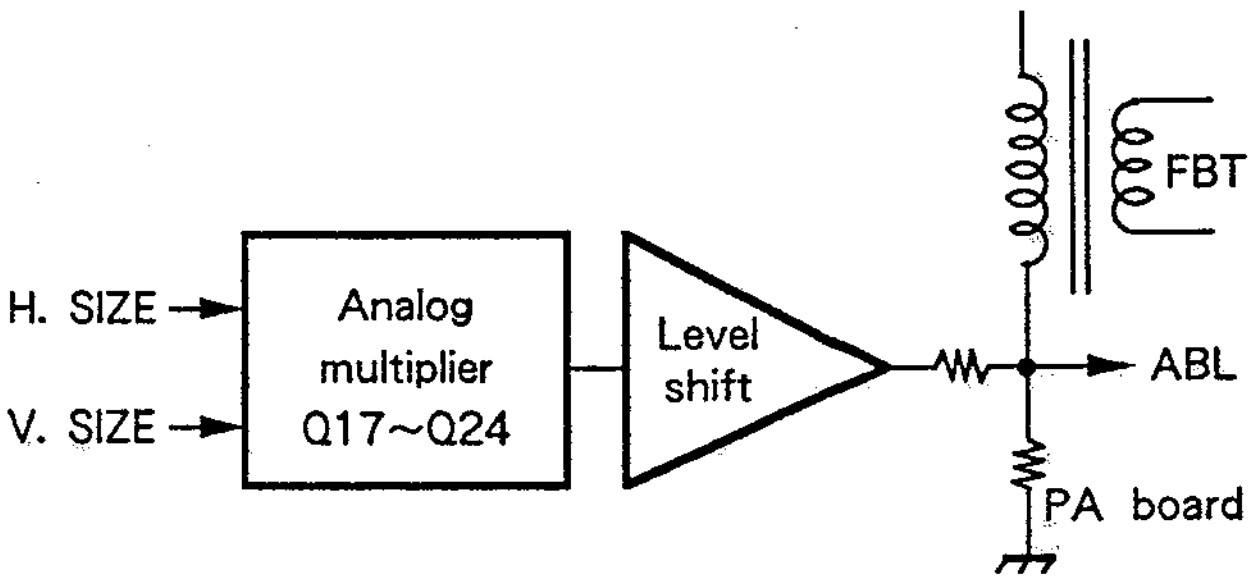

Fig. 8

3-5. Circuit Board DC

The Dc board consists of : (1) V. OUT circuitry, and (2) SUB. OUT circuitry. Both circuits are common for R, G, and B.

1. V. OUT CIRCUITRY

1) V. OUT···consists of uPC4558 and uPC1498. As it is common to all 3 channels, here the G−ch will be explained. V. OUT waveform is input into pin ③ of connector DC−2 from the DB board.(Fig. 1 A). Although this is input into pin ③ of IC5, since pin ② of IC5 is a GND, a waveform similar to the one shown in Fig. 1 B is feed back and pin ③ of IC5 becomes a GND. Any voltage error that exists between pins ② and ③ of IC5 will be output from pin ① of IC5 (Fig. 1 C) and is received by pin ④ of IC6. The output is through pin ② and a electric current like the one shown in Fig. 2 B flows. As a result a voltage waveform similar to Fig. 1 D is generated. Fig. 1 E is the pulse power supply, and is created by uPC1498 which detects the erroneous portion of the pulse of the input waveform (C) and by accumulating D5 and C10.

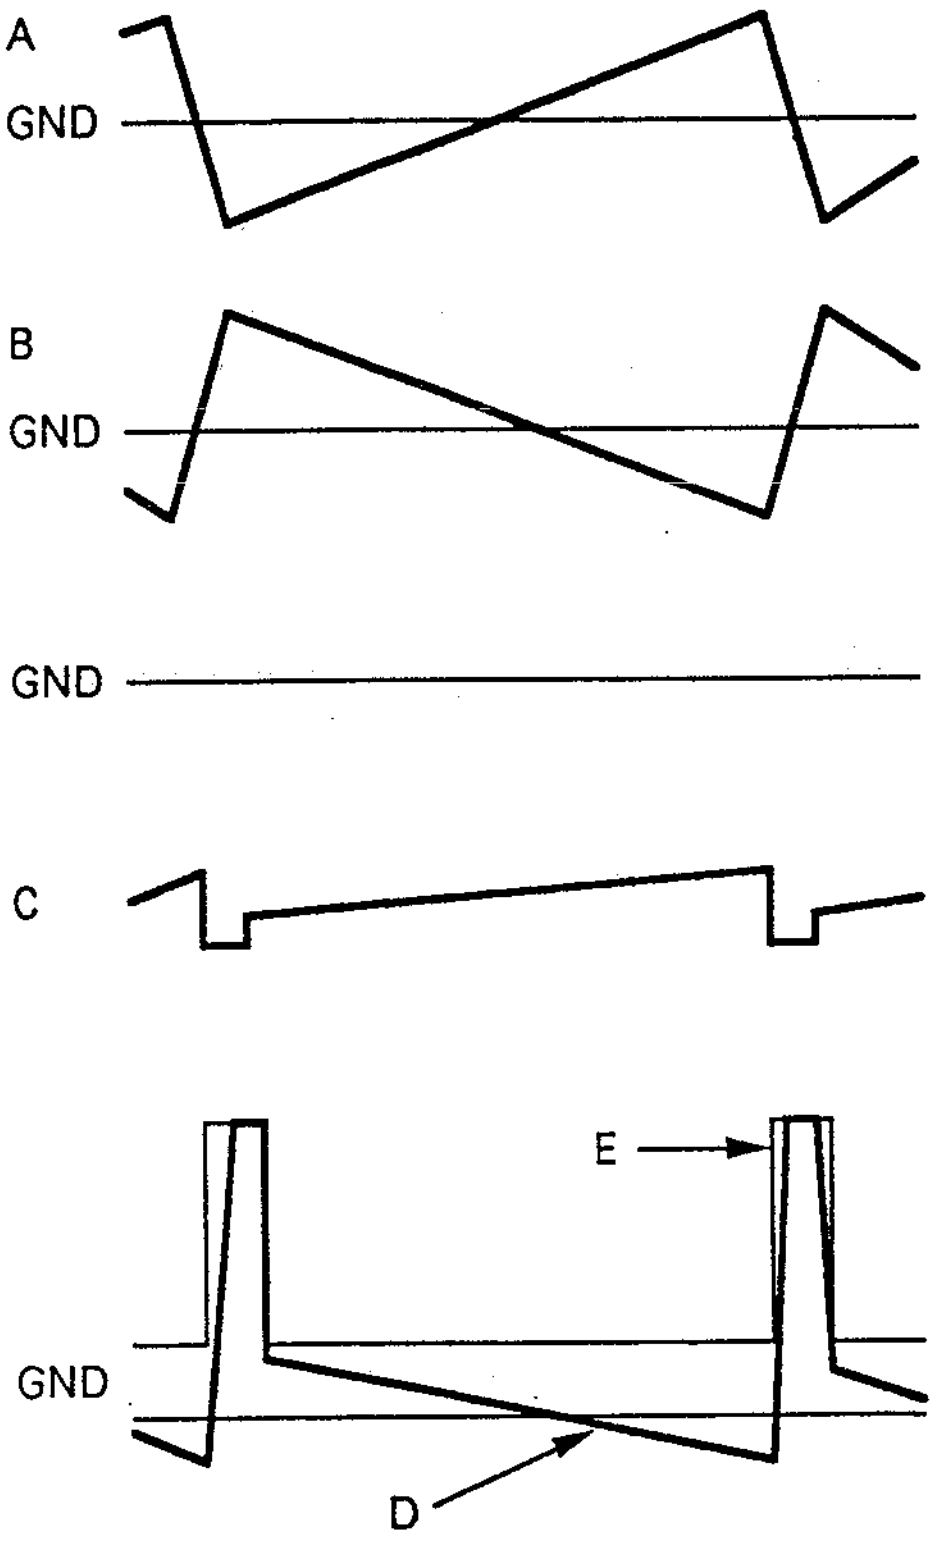

Fig. 1

2) V. STOP PROT.···Slice the pulse at the output (pin ② of IC6) V. OUT. If C14 does not exist, the waveform of collector Q2 will be a pulse waveform such as in Fig. 2 A, practically−speaking, it will be integrated by C14 and become a saw wave like the one in Fig. 2 B. If an abnormality is encountered in V. deflection, as shown in Fig. 1 D, the pulse voltage will disappear and the Q2 collector will attach to +B. When this happens, C14 gradually gets charged as shown by the dotted points in Fig. 2 B and exceeds the pin ⑥ IC5 which is the comparing voltage, causing pin ⑦ of IC5 to become High, Q4 to turn ON, and Q5 to turn OFF. This is the V. STOP mode.

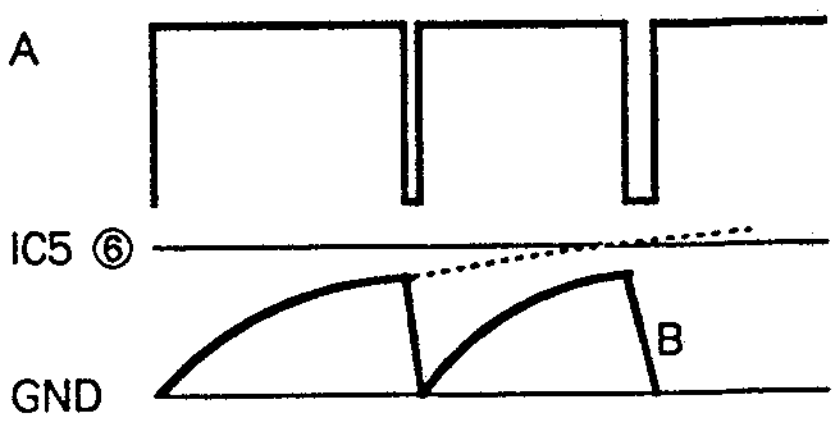

Fig. 2

3) V. PULSE···To output V. PULSE for V. BLK use, slice the V. OUT pulse with IC9 and feed it through D10 and Q6. Note that V. STOP signal is added at D9 so that a BLK is applied during V. STOP.

2. SUB OUT CIRCUITRY

1) SUB OUT···Since all of the 6 channels (R, G, B, H.SUB, V, SUB) uses the same circuit, we will explain about H. SUB (R) in this section. The waveform input int pin ① of connector DC−3 will be amplitude−adjusted by IC101. C301 is a reverse adjustment circuit provided as protection against current overloads. Pin ② of IC301 is the input while pin ③ is the return. Pin ⑥ is the out for the voltage error between input and output. As frequency performance is important, the gain for operational amplifire will be kept low and a discrete AMP used. For the discrete AMP section also, we have used an active load rather than a negative load. This constant−current circuit is comprised of D302, Q301, and R318, and has a current flow of 18mA.

2) PULSE POWER SOURCE···The current required to produce a correcting waveform with a retrace of 2 μs and H. SAW waveform with 1.5Ap−p will be −30V, as the following shows :

$$V=-L\frac{di}{dt}=-40\ (\mu\ H)\frac{1.5\ (A)}{2\ (\mu\ S)}=-30V$$

For this reason, PULSE power supply is used only for return lines.
AD. HD is added to pin ① of connector DC−13, and the + side PULSE created at Q105 and the − side PULSE at Q108. The PULSE power supply is produced by adding ±15V to each of these PULSES.

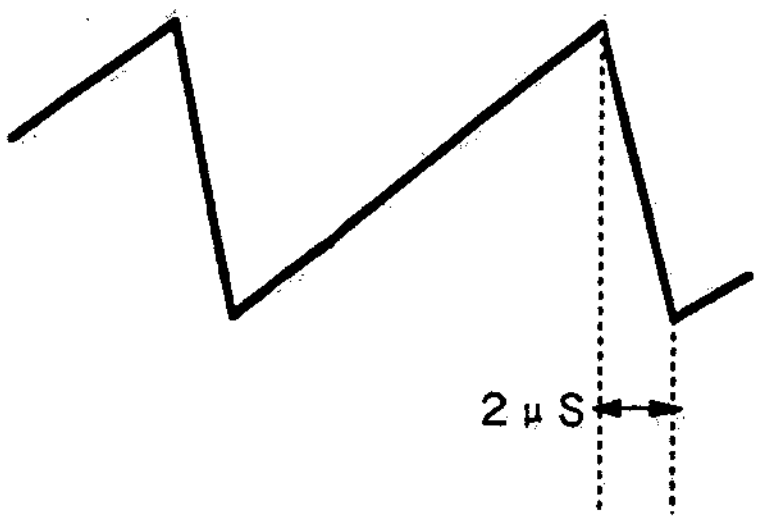

3) CURRENT LIMITER···This is a limiter circuit for negative overloads on ±15V lines. The +15V side is made up of Q9, R64, and 76. When current flows through the base−emitter resistance and exceeds the transistor's V_{BE}, Q9 is turned ON and is added to V. STOP PROT. The limiter current is approximately 4A.
Same for the −15V side.

3-6. Circuit Board K

1. DYNAMIC FOCUS CIRCUIT

1) H Dynamic Focus
H parabola waveform input into Pin ⑦ of Connector K−1 is phased−reversed at 1/2 of IC201 (uPC184C) and further amplified by a non−reversible AMP consisting of drivers Q201 and Q202. This is then input into a DFT (Dynamic Focus Transformer). DFT is also capable of providing an amplitude of 300Vp−p at the DFT OUT when the phase is shifted and amplified and when the input is 3Vp−p.

2) V Dynamic Focus
The dynamic focus waveform is added within the focus pack to the focus voltage through condenser integration. Due to pressure and size considerations, a large size condenser could not be selected and the one that was used at this time has a very small capacity of 100PF. Unlike the H waveform, the V waveform has a very low frequency which makes it difficult for the waveform to path, causing a reduction in amplitude and shifting of the phase. In view of this, a circuit like the one shown below was used, enabling us to realize the transmission of the dynamic focus waveform. By placing a time constant that is the same as the time constant in the focus pack within the negative feedback system, it will be possible to send the desired waveform as output.

〈Equivalent circuit〉

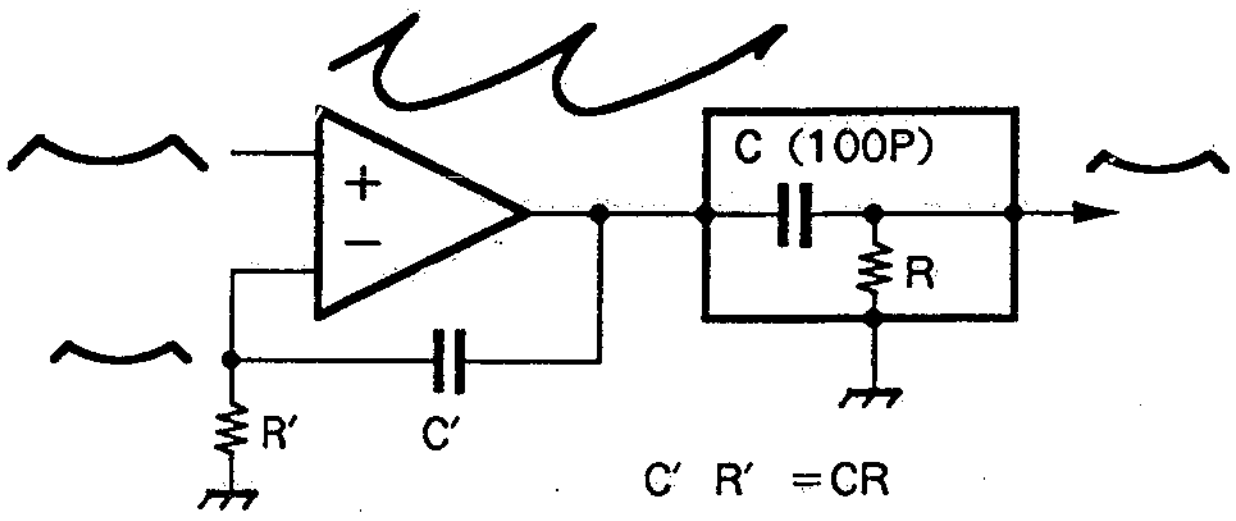

2/2 of IC201 (uPC814C) is the operational amplifire of the negative feedback system, Q203 the reversing amplifire and Q204 the output buffer. The time constant of C210 (0.1MF) and R212 (10K) is aligned with the time constant within the focus pack. In practice, since this C, R (C210, R212) is a differentiator, it is not possible to apply the negative feedback system to the direct current portion. For this reason, the direct current portion is first integrated by R214 and C209, and then feed back to R213. The V content requires an amplitude of about 100Vp−p within the focus pack. The output of Q204 has an amplitude ranging from 150V to 400Vp−p and its magnitude is determined by the frequency of vertical. By entering the vertical content, output from Q204 to the secondary side of DFT, the horizontal content is modulated and the total output is input into the focus pack.

2. AUDIO AMPLIFIER

The audio signal input from pin ① of connector K−3 goes through buffer Q205 and is received by IC203 (uPC1241H) which is the amplifire IC. Speakers are driven directly by this IC. Q206 is a series regulator transistor and is used to suppress the power supply's ripples from appearing in the sound.

3-7. Circuit Board Y

1. Power Supply Block (PS1, PS2, D1, D2)

PS1 and PS2 serve as a power cutting fuse when a voltage overload occurs within board Y. In addition, D1 and D2 convert the voltage from +5.7V (−5.7V) to +5.0V (−5.0V). When pressing the main power switch of the set, SUB +5V is supplied, and when pressing the power switch of the commander, ±5.7V is supplied.

2. CPU Block

2−1. CPU (IC1)

A Z80 series 8−bit CPU with SIO, TIMER and other supporting ICs integrated into a single chip is used.

2−2. MEMORY (IC2, 3, 4)

This is made up of programmable ROM (IC2), a general purpose S−RAM (IC3) for flag and data READ/WRITEs, and a non−volatile ROM (IC4) used to record adjustment data, etc.

2−3. BUS BUFFER (IC7, 8)

A hysterisis−type current buffer is used for data transfers to systems external to the Y board (DB and L boards).

2−4. RS422 (IC24)

An RS422 transmitter/receiver for communications with external computers, automatic adjustment devices, etc.

2−5. RESET CIRCUIT (IC5, Q1, 2)

A power−on reset circuit for the CPU and SIRCS DECODE IC. Q1 and Q2 operate so that a normal reset occurs during instantaneous drop in power voltage caused by sudden black out, etc.

3. SIRCS Block

3−1. SIRCS DECODER (IC9), WAIT CONTROL (IC6)

This IC decodes SIRCS signals to enable the codes to be read by the CPU. The following processes take place from the time the SIRCS signals are received until the codes are read by the CPU :

- ∗ The "CONT" terminal is set to Low when a valid SIRCS code is received.
- ∗ A CPU interrupt occurs and the CPU turns the "CE/OE" signal of IC9 to Low.
- ∗ IC6 (mono−multi) puts the CPU in WAIT state for a few msec.
- ∗ Finally, the data are read into the CPU.

3−2. POWER CONTROL (Q3, 4, 5)

When IC9 decodes a POWER ON (OFF) code, it unconditionally turns Q3 ON (OFF) and sends (cuts) the current supplied to the "power cont" line, thereby enabling control of the power supply. When the protector is activated, the power supply is cut by externally dropping the "power cont" line to GND. However, it should be noted that in such cases the operation of the protector is detected by Q4 and IC9 is reset by Q5.

4. I/O Port Block

4−1. ADDRESS DECODER, PARALLEL I/O PORT, INTERRUPT CONTROL (IC10, 28)

IC10 is a dedicated gate array with the above functions and is a PORT that is used to READ ch−select and other control/input signal information. Additionally, it receives the control line for each protector and is also equipped with such functions as generating a CPU interrupt while it is in operation.

4−2. DIP SW (SW1, 2)

SW1 is a special switch used for mode adjustments at the factory ; normally all bits (SW1−1 to 4) must be set to ON.

When SW2 is pressed, all adjustment data defaults to the factory setting.

5. fH/fV DETECT Block (IC12)

The present deflection frequency is detected from the VD/HFHD signals supplied by the deflection system and the information is sent to the CPU.

6. SYNC Block

6−1. SYNC CONTROL & CLAMP PULSE GENERATOR (IC11)

This is a gate array that generates SYNC pulses for the deflection system and clamp pulses for the signal system. It uses SYNC signals received from the signal board (H/C−sync, V−sync, Sync on Green) for its input. Itfeatures : ∗ Detection of input SYNC signals (existence or non−existence of each SYNC and its polarity)

- ∗ Selection of SYNC source (H/V−sync, Sync on Green or Composite−sync)
- ∗ Alignment of SYNC polarity (Reversed when H/V−sync has a positive polarity)
- ∗ H/V separation for Composite−sync and Sync on Green
- ∗ Phase control of clamp pulses
- ∗ Width control of clamp pulses
- ∗ Transmission of various function control signals and information through the CPU BUS

6−2. H−SYNC REFORM (IC6)

Maintains the width of H−sync sent to the deflection system for approximately 2 μsec.

6−3. V−SYNC DETECT (IC26)

Detects whether V−sync out pulse of IC11 exists or not and sends this information to the CPU. For example, this is done to determine if the signal connected to H／C−SYNC input terminal is composite or not.

7. CHARACTER GENERATOR／INTERNAL SIGNAL GENERATOR Block

7−1. CHARACTER GEN. INT−SG (IC13, 14, 15, 16, 17)

Whenever an input exists, a clock synchronized to "HFHD" and "VD" are used to generate each test pattern and character. When input does not exist, the H and V−sync pulses, test patterns, and characters are created by a crystal−oscillated clock. (IC13)

IC14 is a high−speed S−RAM to record the position and color of the screen characters, while IC15 to 17 are mask ROMs to record character font data.

7−2. TTL to ECL CONVERTER (IC18, 19)

Because INT SG, character R／G／B, and BOARDER (shadow of characters) signals contain high−frequency contents, they are converted to ECL before being sent to the signal system board.

7−3. PLL (IC20, 21, 22, 23, 25, Q6)

Characters and internal signals are generated by synchronizing them with the incoming signals (HFHD and VD to be precise) with the use of a PLL circuit. The output from the phase comparator system (IC20) passes through an active filter composed of C44, R94, 95, and IC20 are then fed into a VCO (IC21). The output from VCO first goes into IC13 "CKIN" and then passes through a 1／417 pre−scaler equipped within IC13. Finally, the output is returned to the phase comparator.

Since a single VCO imposes a limit on the frequency range that can be locked, 2 VCO units (IC21 is actually composed of 2 VCO units) are used : one for high−band use and the other for low−band use. The VCOs are switched by IC22's voltage converter and the flip−flop of IC23.

Furthermore, to improve the stability during locked conditions, Q6 and IC25 are used to control the polarity of the correcting waveform of IC20 pin ③.

7−4. VD SYNCHRONIZE (IC26, 27)

When VD and HFHD are in a certain phase relation, IC13's internal counter deviates by 1 count and may cause V−jitter of the characters. For this reason, the phase of VD is shifted to a stable position.

3-8. Circuit Boards PA and PB

1. HIGH−VOLTAGE GENERATOR

As this is a wide−range multiscan compatible unit, it is difficult to construct a high−voltage circuit by synchronizing with fH as in previous circuits. Therefore, an asynchronous type high−voltage generator having its own oscillator was devised.

The oscillating element X1 is the oscillator's basic clock and oscillates at approximately 500KHz. This clock is divided by IC7 and IC8, generating a 15.625KHz pulse as its internal oscillator (INT OSC). This pulse is output from pin ⑤ of IC8 and this INT OSC is used as a switching pulse between two circuits, one of which is sent through buffer Q3 and used in the high−voltage generator circuit. The other passes through buffer Q4 and connector PA−3 and becomes the switching pulse for the negative power supply for board E. The pulse passes through buffer Q3 and connector PA−7 and added to Q6, the transistor used to drive transformer Q6. The output of this drive transformer (T2) drives FBT's converter Tr (Q10). Q19 is the power current source for controlling the drive condition of converter Tr (Q10). By fixing its base and by adding the same voltage as +B of FBT to the emitter resister (R112), it modifies the energy of the primary side of the drive transformer in accordance with the HV load, enabling converter Tr (Q10) to be driven most efficiently. The basic section of the high−voltage circuit is the same as with previous circuits in which Q10 is the converter Tr ; D20 and D21, the damper diode ; C51, the common condenser ; L3 and L4, the dummy L ; and C54, an S−shaped condenser. To realize high output to FBTs are connected in parallel. From one of them (FBT 1) the MV for use as the focus voltage is extracted.

As this particular system uses an asynchronous high−voltage method, the high voltage's ripple content can easily affect the screen. For this reason, the high voltage generated by FBT is once passed through a filter (HVF) and then is added to HVB which distributes and detects high voltage. This is then supplied to each CRT.

2. HV REGULATOR

In a high−voltage regulation method, +B of FBT is controlled (FB pulse level controller) to maintain a constant high−voltage level. The +B that is being controlled is made by stepping up a +100V by a switching regulator circuit. The degree of step up is determined by the duration of switching ON and OFF. When the ON duration is long, the degree of step up is greater and vice versa. The high voltage is reduced by a factor of approximately 4125 by HVB and the output passes through connector PA−7 and goes into buffer IC1 (uPC4082, 1/2). This buffer output is further divided by high−voltage adjustment resistors △R41 and △R42 and is input into the plus side (pin ①) of operational amplifire switching regulator IC6 (uPC1394). The minus side (pin ⑭) is supplied with the voltage (approximately 3.0V) of IC9, the standard voltage source. It is through this difference in voltage that the ON−OFF Duty of switching pulse (pin ⑦ output) is modified. The output of pin ⑦ passes through buffer Q20 and into the drive converter circuit Q5 and T1. There, the polarity of the pulses are reversed and the switching transistor Q11 driven. Q11 steps up the +100V voltage by switching L2 and regulating with D23 and C53. If the high voltage rises and exceeds the voltage (pin ① of IC6) of the detector side, the ON interval of Q11 shortens and +B is lowered, causing the high voltage to fall. In case the high voltage level falls, a completely opposite operation takes place. As this goes to show, a negative feedback is applied so that the high−voltage detector voltage is always equal to the standard voltage (approx 3.0V).

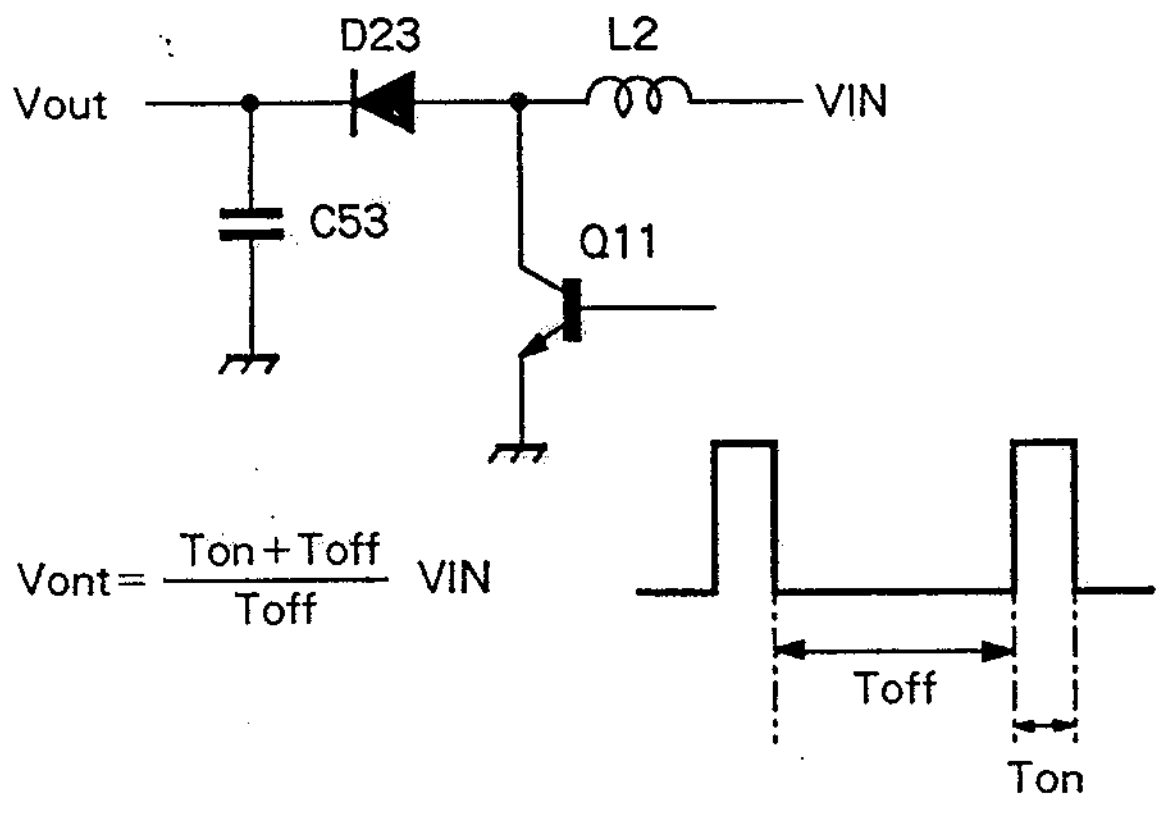

$$Vont=\frac{Ton+Toff}{Toff}\ VIN$$

3. HIGH VOLTAGE PROTECTOR

1) HV Protector

This is a protector to suppress any abnormal rise in HV due to some accident. The HV voltage is divided by the high voltage block (HVB) and by △R33, △R34 and is input into the plus side of 1/2 of IC2 (uPC393C). A comparator voltage (approximately 4.8V) generated by zener (RD5.1ESB2) should be input into the minus side. The protector is activated when HV rises and the voltage on the plus side exceeds that of the minus side. It operates by first turning the 1/2 side of IC2 (uPC393C) ON and the 2/2 side OFF. The oscillation of the HV Regulator is stopped by D8 (ISS119) and Q7 is then turned ON. This causes the oscillation of the converter to be stopped. After dropping HV, D28, Q16 and Q15 are turned ON and the power turned OFF.

2) ΣIK Protector

This protector suppresses any abnormal beam to flow through the CRT. The current of FBT's secondary side is changed to a voltage by R44 to R47, R119, R120 and the protector is activated when this voltage exceeds a certain level. This detecting voltage is divided by R121 and R1 and is input into the base of Q1, which is usually set to the ON position. As the beam current gets larger, the detecting voltage lowers rapidly to the minus side until it reaches a point where Q1 is turned OFF and the protector is activated. The method of operation is the same as (1) HV Protector. The oscillation of the regulator is first stopped, the HV dropped, and finally the unit's power turned off. The unit consists of 2 channels of identical ΣIK protectors.

3) Low B Protector

This protector is activated when IC5 (uPC78M12H), an IC that generates Low B (+12V) inside board PA, is destroyed and as a result Low B (+12V) increases. A voltage generated by resistance dividing Low B (+12V) is input into the plus side of IC1 (uPC4082C) 1/2 while a comparator voltage generated by zener (RD5.1ESB2) should be input into the minus side. The protector is activated when Low B rises and the voltage on the plus side increases.

4) Regulator Protector

This protector protects the element by turning off theoscillation of the regulator when the regulator's voltage becomes abnormally high such as when a high voltage load has been opened. The voltage at the regulator out is divided by R48 to R50, R14, R15 and is input into the plus side of IC3 (uPC393C) 1/2. A comparator voltage should be input into the minus side. When the voltage at regulator out rises, this operational amplifire is enabled and the protector activated.

4. **INTERNAL PROTECTOR**

The circuit is designed so that when certain abnormal modes (for example, when deflection is disabled) are encountered the power is immediately cut off to avoid secondary disasters within the unit. Among the devices, H STOP (horizontal deflection disabled), V STOP (vertical deflection disabled), and FAN PROT (fan protector) all have their power-cut unit centralized on board PA. H STOP and V STOP send their output to the respective open collector and an OR operation is performed with B24 and D25. During abnormal conditions, Q16, Q15 turn ON and brings the "POWER CONT" line to low, thereby cutting off the power. Since the polarity of the "FAN PROT" signal is the opposite of H STOP and V STOP with normal ON generating output, the signal is reversed by Q17 and input into Q15.

3-9. Series E Board Circuit Operation

1. F-V Conversion

H-KEY, H-PIN and H-SIZE are input throught E-1 connector and added at IC106 (1/2). This output,

(a) passes R131 and is input to IC105.

(b) is input to IC106 (2/2) and compared with H-SIZE detection output. The error difference is input to IC103 (2/2) and fully integrated and amplified, which then passes R186 and is input to IC105.

It is again fully integrated at IC105 (1/2). This DC passes R103 and switched by Q101. IC101 (1/2) generates pulse which is synchronous to 5 μs width fH and inputs it to Q101 gate.

Here, voltage proportional to H-SIZE voltage and fH, is generated. This output passes IC102 buff, is integrated at R111, C105, R109 and C104, and output at IC104 (1/2) to complete F-V conversion.

2. Negative Power Section

F-V conversion output and negative power is compared at IC104 (2/2) and added to IC111 pin ①.

IC105 (2/2) generates bias and adds it to IC104 (2/2). IC111 is a switching regulator. IC, and outputs pulse which complies to pin ⑭ and pin ① voltage, to pin ⑦. This pulse is switched at Q109 and drives Q107, 108, and the output drives Q110 through T105.

Pulse output to Q110 source is rectifide at D112, C124 to generate negative power. R208 is for current detection and IC111 pin ⑤ is connected at top end to protect against over current.

3. PIN MOD Section

H-KEY, H-PIN correction wave is input through E-1 connector, added at IC106 (1/2) and output from pin ⑦. This output passes IC110 and is input to IC107 pin ④. On the other hand, PIN MOD OUT voltage divided by R150, R285 and R149 is input to IC107 pin ⑨. With these two inputs, PIN MOD correction voltage which corresponds to fH H-SIZE is output to IC107 pin ⑭. This output is amplified at IC108, passes Q103 and Q104 buff, and is input to IC112. When this occurs, PIN MOD correction wave is clamped to negative power by IC109. IC112 operates around negative power electric potential. Q111, 112 are driven by voltage output from IC112 pin ①and PIN MOD OUT voltage is output to Q111, 112 source.

4. H-DRIVE Section

H. OSC is input from E-1 connector pin ⑤, passes R233 and input to Q130, 131 base. The signal is divided into two by Q130, 131 emitter.

One signal passes C161 and input to Q145 gate. Q145, 146, 147 are transistor for per-drive. These transistor switch Q7 (H.OUT) through T103, 104 (HDT). The other signal passes R234 and is input to IC113 (1/2). IC113 output pulse becomes saw-tooth wave at R238, C150. Q132 is a constant current source. Pulse is compared at Q133 and 134 to control Q132 constant current source and keep saw-tooth wave amplitude constant.

This saw-tooth wave and IB2 constant circuit output voltage, which will be explained later, are compared at IC113 (2/2) and the pulse difference is output to IC113 pin ⑦. This pulse passes Q135, 136 buff and input to Q142 gate. Q142, D118 and C159 construct a STEP UP regulator. Normally, 100V is supplied to Q143 and Q144 collector, but when Q142 switch, the additional voltage is supplied to Q143 and Q144 collector, Q144 emitter is connected to Q146, 147 collector. Normally, 100V power is supplied through Q143, 144 series regulator, but when more drive is needed, Q142 operates to supply power over 100V.

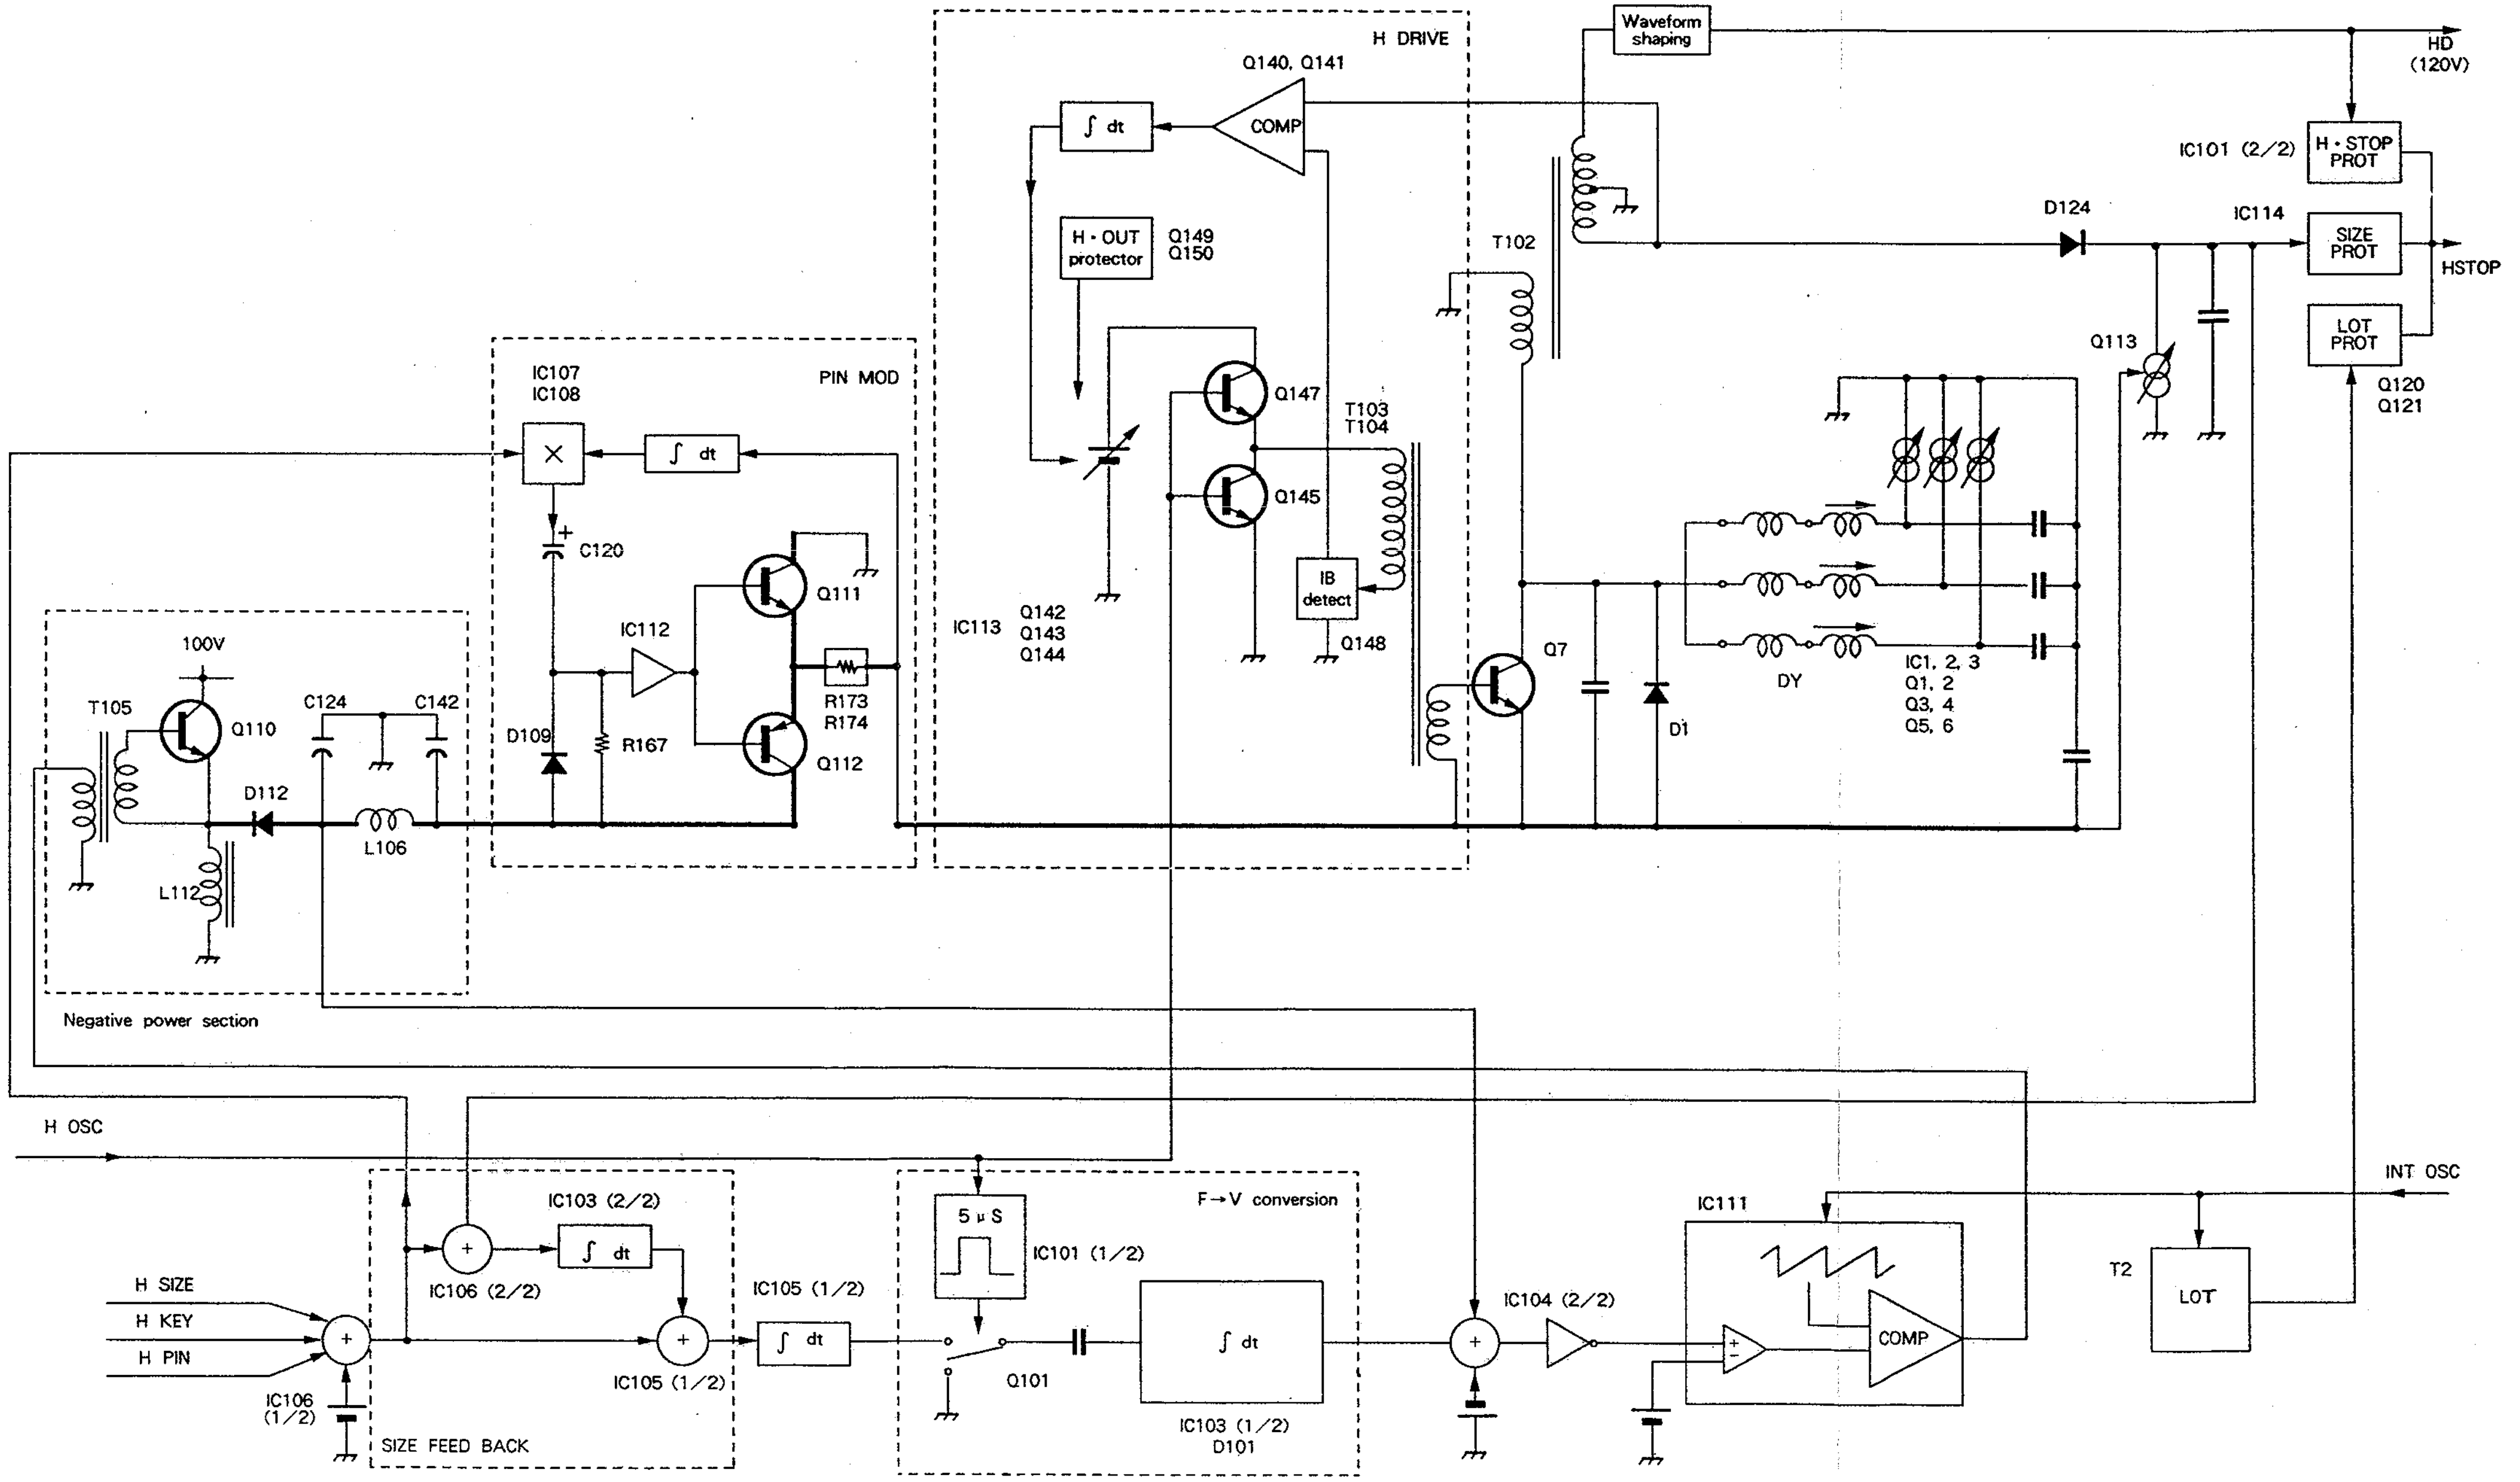
H DRIVE
Q140, Q141
∫ dt
COMP
H・OUT protector
Q149
Q150
Q147
Q145
T103
T104
IB detect
Q148
IC113
Q142
Q143
Q144
Q118
Waveform shaping
HD (120V)
T102
IC101 (2/2)
H・STOP PROT
SIZE PROT
LOT PROT
HSTOP
D124
IC114
Q113
Q120
Q121
Q7
D1
DY
IC1, 2, 3
Q1, 2
Q3, 4
Q5, 6
IC107
IC108
PIN MOD
∫ dt
C120
IC112
Q111
Q112
R173
R174
D109
R167
100V
T105
Q110
C124
C142
D112
L106
L112
Negative power section
H OSC
IC103 (2/2)
IC106 (2/2)
∫ dt
IC105 (1/2)
IC105 (1/2)
∫ dt
H SIZE
H KEY
H PIN
IC106 (1/2)
SIZE FEED BACK
5 μS
IC101 (1/2)
F→V conversion
∫ dt
Q101
IC103 (1/2)
D101
IC104 (2/2)
IC111
COMP
INT OSC
T2
LOT

(IB2 Constant Circuit)

Current (IB) which flows on the primary side of T103, 104 (H. D. T) is detected at R267, 268 and generated as voltage at Q148 collector. This voltage passes R225 and input to Q140 base. In the meantime, H. O. T. secondary side H. Pulse divided by R259, 260 and R259 is input to Q141 base. By comparing the peak voltage of the two, IB2 is always remaind constant.

H. Pulse > At IB2 peak (under−drive)

Q140 cut off→Q139 base potential rise→Q139 collector potential lowers→Q137 base potential lowers→Q137 collector potential rises→Q144 emitter potential rises→ to over−drive.

H. Pulse < At IB2 peak (over−drive)

Q141 cut off→Q139 base potential lowers→Q139 collector potential rises→Q137 base potential rises→137 collector potential lowers→Q144 emitter potential lowers→to under−drive.

Feed Back is conducted as above.

5. H−SIZE Feed Back Section

H. O. T. secondary side H. Pulse is peak rectified at D124 to convert it to H. SIZE detection output.

Q113 is a variable current source, and works to get the same detection out puteven when fH is different at the same pulse height. This output is returned to IC106 (2/2), compared with input and the error difference is controlled.

6. HD Output Section and H. STOP Protector Section

AFC HD clamps H. O. T. secondary side H. Pulse at C144, D113, re−shapes the wave at Q118, passes pulse through Q116, 117 and outputs from E−1 connector pin ⑨.

HD output from Q116, 117 emitter is input to IC101 pin ⑪. As long as HD is input to IC101 pin ⑪, pin ⑩ is High. Therefore, Q115 is ON and H. STOP line is normally Low. If HD is not input, IC101 pin ⑩ becomes Low and Q115 turns OFF and as a result, H. STOP line becomes High and set power turns OFF.

Other protectors are H−SIZE MAX/MIN protector and 100V line LOT circuit over current protector.

IC114 detects H−SIZE MAX/MIN.

When H−SIZE becomes too large, IC114 pin ① becomes Low.

When H−SIZE becomes too small, IC114 pin ⑦ becomes Low.

This output passes D139 and connects to IC101 pin ⑬. When pin ⑬ becomes Low, IC101 pin ⑩ becomes Low and protector actuates.

LOT circuit over current protector detects current at R221. When there is over−current, first Q120 turns ON and then, Q121.

Q121 collector is connected to IC114 pins ①, ⑦ line, and protector actuates as above.

3-10. Circuit Board KA

1. Self − Diagnosis Function

This unit is equipped with a self−diagnosis function which is activated in case of a major malfunction.

The system operates by transmitting an ON/OFF signal from individual parts to the protector circuit and CPU in parallel. The protector circuit swichers off the unit, and the CPU transmits the error data to the 8−bit data bus. The input for the 8−bit data bus is the KA−9 connector. IC1004 is a buffer and IC005 and IC006 are driver circuits for indicator IC007. In this way, an error mode is indicated in IC7. The table on the under shows each mode.

Contents

FAN stop ······	One of the 8 fans inside the unit is malfunctioning
100V down ····	When the power is turned on 100V is not supplied. Normally H. OUT and CONV malfunction.
IK over ········	When the beam rolls too much.
V. stop ········	DC board malfunction. 15V line is overloaded or the V deflection stops.
H. V. over ····	High−voltage protector mode.
Power down ··	CPU malfuction.

The following table shows the codes displayed on the 7−segment, two−digit LED display om the KA board. When one of the codes on the right is displayed, the corresponding LED on the Y board also illuminates.

Failure Display

When the protectors are activated, codes are displayed as shown below and the unit turns off automatically.

- When one of the codes shown above is displayed, the last adjustment data will be lost.
- Code indication will be erased when main power is turned off or the unit is reset normally by power on with the commander.

code	FAN stop	100V down	I K over	V. stop	H. V. over	power down
01....	*	–	–	–	–	–
02....	–	*	–	–	–	–
03....	*	*	–	–	–	–
04....	–	–	*	–	–	–
05....	*	–	*	–	–	–
06....	–	*	*	–	–	–
07....	*	*	*	–	–	–
08....	–	–	–	*	–	–
09....	*	–	–	*	–	–
0A....	–	*	–	*	–	–
0b....	*	*	–	*	–	–
0C....	–	–	*	*	–	–
0d....	*	–	*	*	–	–
0E....	–	*	*	*	–	–
0_....	*	*	*	*	–	–
10....	–	–	–	–	*	–
11....	*	–	–	–	*	–
12....	–	*	–	–	*	–
13....	*	*	–	–	*	–
14....	–	–	*	–	*	–
15....	*	–	*	–	*	–
16....	–	*	*	–	*	–
17....	*	*	*	–	*	–
18....	–	–	–	*	*	–
19....	*	–	–	*	*	–
1A....	–	*	–	*	*	–
1b....	*	*	–	*	*	–
1C....	–	–	*	*	*	–
1d....	*	–	*	*	*	–
1E....	–	*	*	*	*	–
1_....	*	*	*	*	*	–
20....	–	–	–	–	–	*

- When one of the codes shown above is displayed, the last adjustment data will be lost.
- Code indication will be erased when main power is turned off or the unit is reset normally by power on with the commander.

2. Audio Circuit

The KA−3 connector is used for the audio input . R−channel input is fed to audio input pin 1 of IC003 through the buffer of Q004, and L−channel input is fed to audio input pin 18 of IC003 through the buffer of Q008. Feedback system ; Pin10 ⇨ R064 ⇨ R048 ⇨ Pin 2. Voltage gain is determined at R048 and RV001,R047. The voltage gain for the L−channel is determined at R056 and RV002, R058. Low range cut−off frequency is determined at C025 and C030.

$$f_L = \frac{1}{2\pi \cdot C025 \cdot (RV001 + R047)} \times 5.6\ \text{Hz}$$

Q007 and Q011 are audio input R/L through−out buffers. Q005 and Q009 comprise the power on mute circuit. When the power is turned on, C052 is charged, Q005 and Q009 turn on, Q004 and Q008 turn off, and the input to IC003 is cut.

Q012 is the power off mute circuit.

When the power is turued off, Q012 is turned on by the difference in the capacity between C023 and C024, pin 6 of IC003 is pulled to −12V and muting is applied.

3-11. Circuit Board KB

The KB board is the protector circuit. Normally, pin ① to pin ③ of the KB－1 connector is connected to ground. In this condition, Q020 to Q022 are all off, thus pin ② of KB－2 is -12V.

If there is an error mode and one of pins ① to ③ of KB－1 becomes open, pull－down is performed inside each board. So the transistor is turned on and the electric potential of pin ② on KB－2 becomes GND. (This is the protector mode.)

3-12. SOPS-1008

This power source is composed of 2 half bridge converters and 1 self-excited flyback converter (auxiliary power source.) When the main switch is turned ON, at first the auxiliary power source operates, voltage is supplied to boards C1, C2 of the board M1, and their respective control IC (IC51) operate. At this point, the power source doesn't operate, but instead, ON signal (about 5V) is input from outside, and the power source of board M2 starts operating.

As the power source of board M2 operates, outputting a voltage, a part it is supplied to pin ③ of board C1. This becomes the ON signal, causing the power source of M1 to start operating.

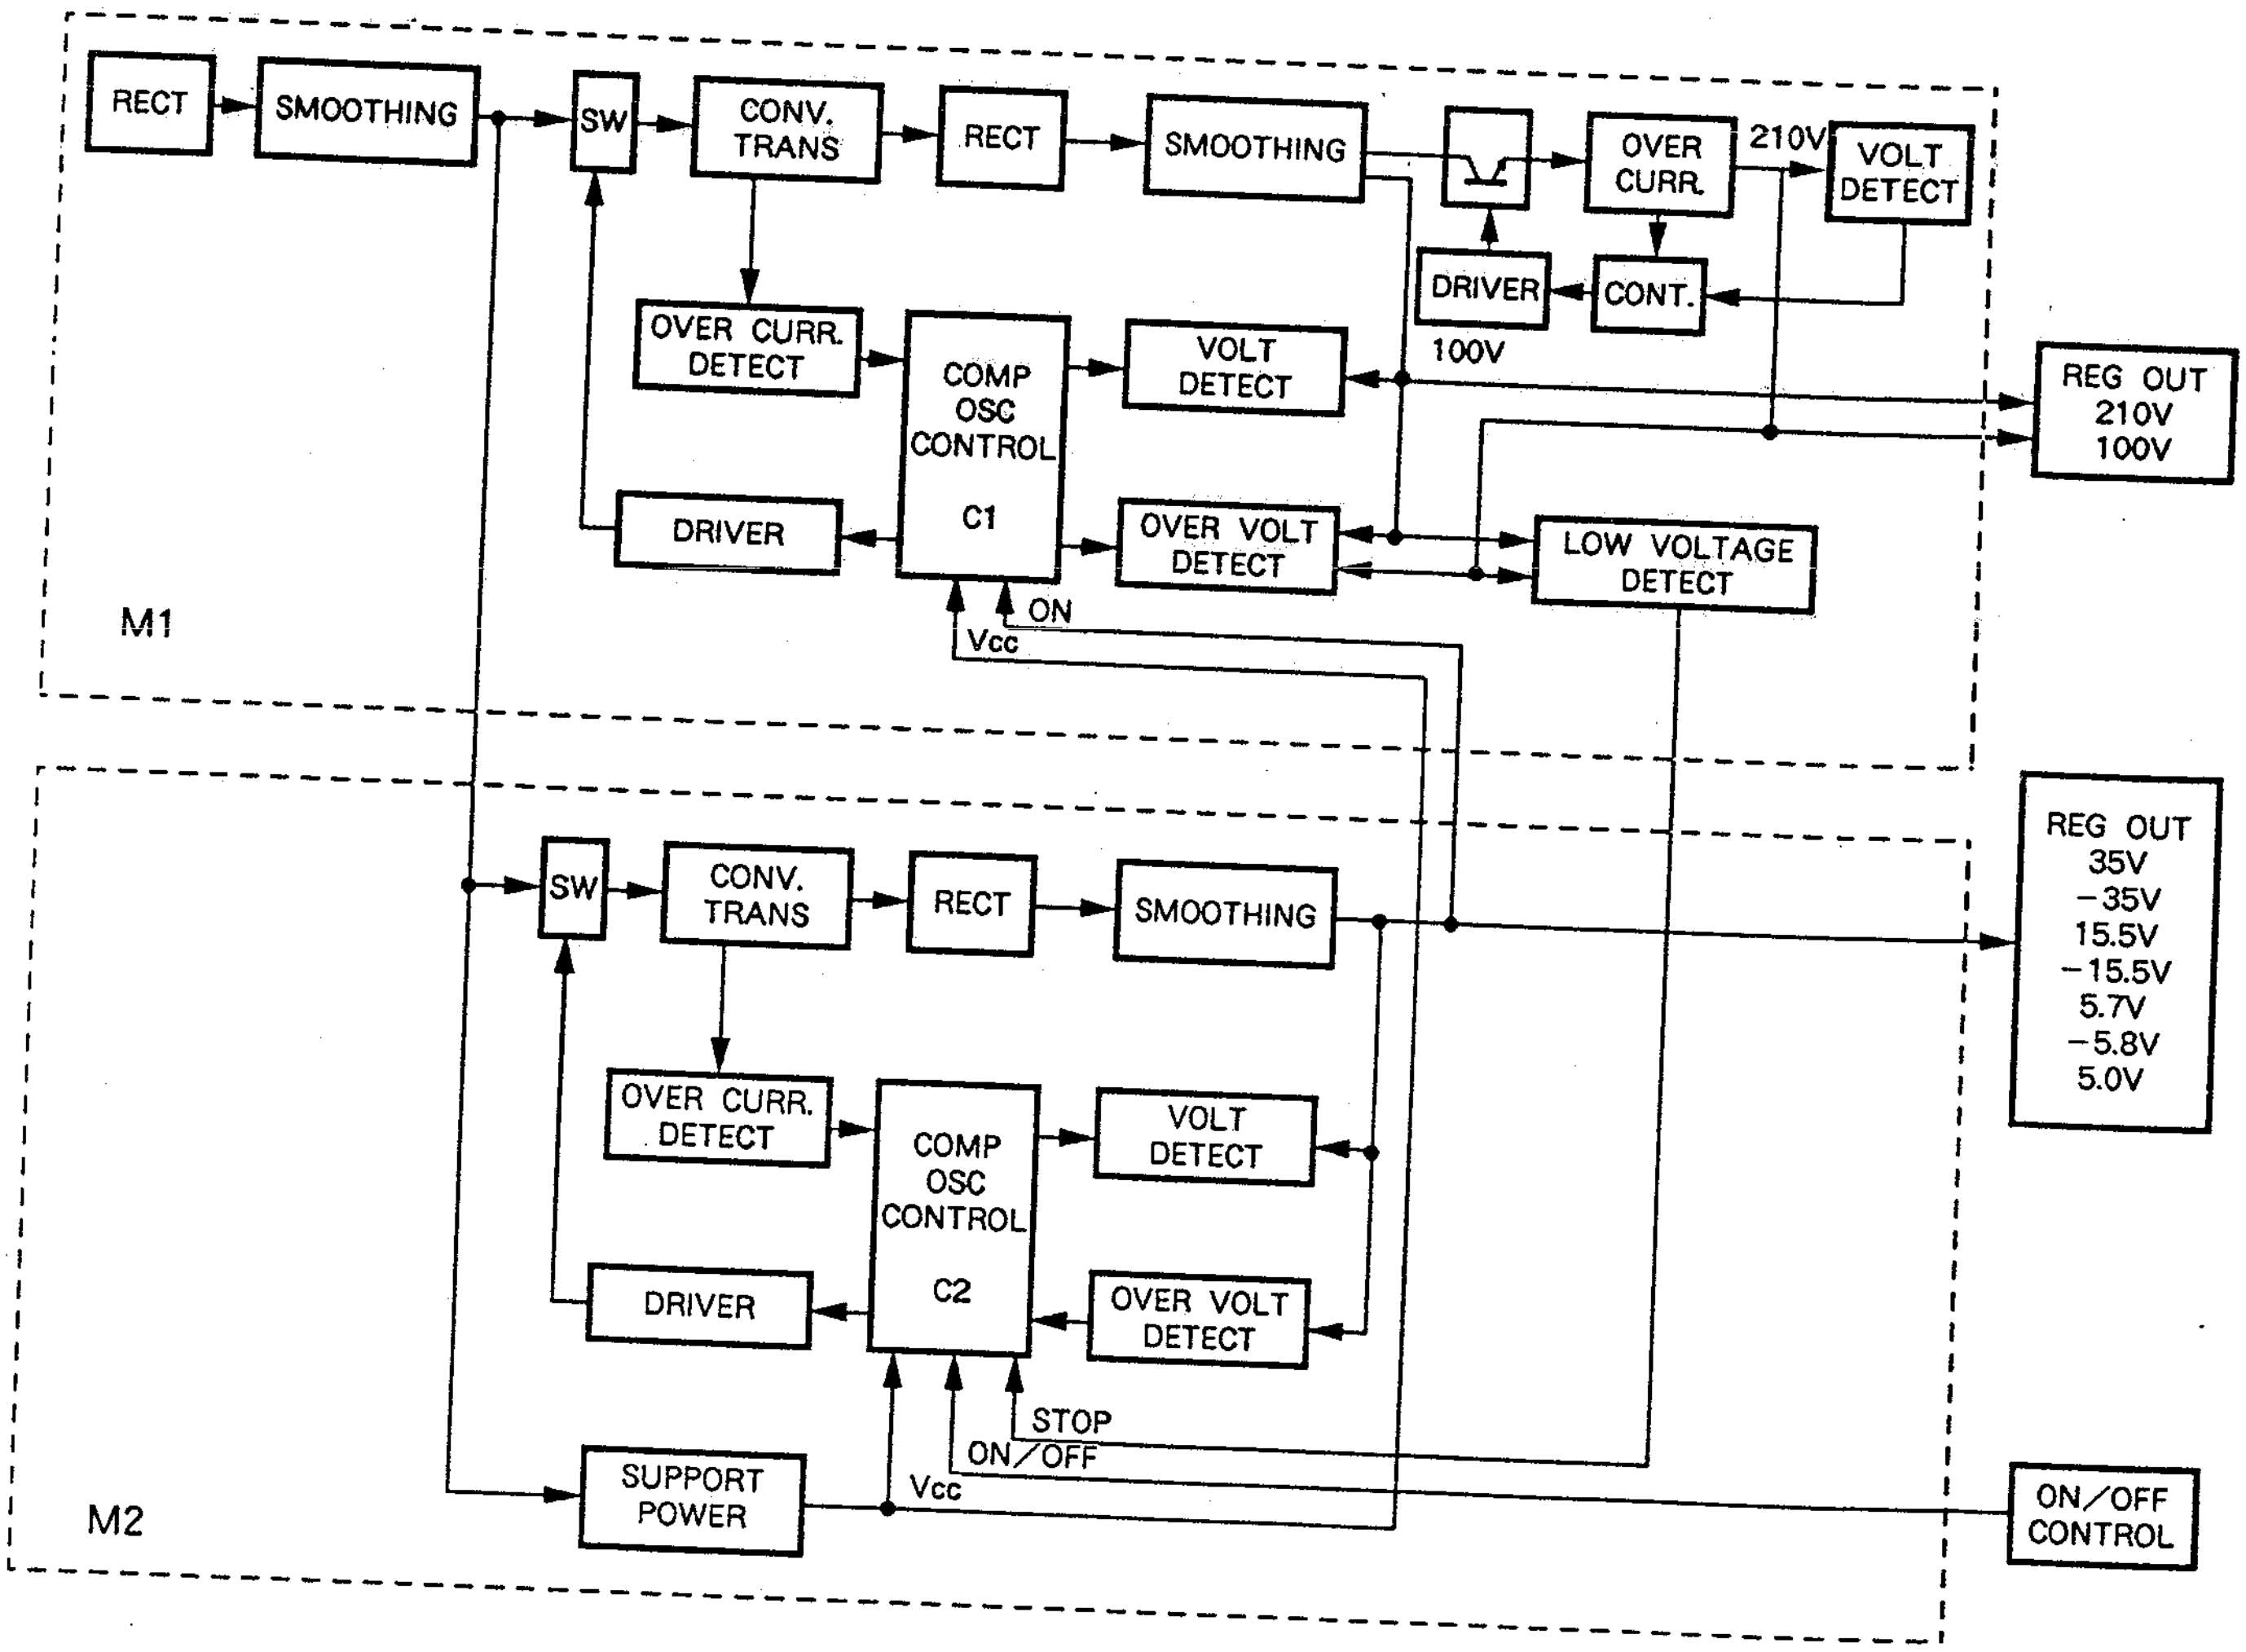
RECT
SMOOTHING
SW
CONV. TRANS
RECT
SMOOTHING
OVER CURR.
210V
VOLT DETECT
DRIVER
CONT.
100V
OVER CURR. DETECT
COMP OSC CONTROL C1
VOLT DETECT
REG OUT 210V 100V
DRIVER
OVER VOLT DETECT
LOW VOLTAGE DETECT
ON
Vcc
M1
SW
CONV. TRANS
RECT
SMOOTHING
REG OUT 35V −35V 15.5V −15.5V 5.7V −5.8V 5.0V
OVER CURR. DETECT
COMP OSC CONTROL C2
VOLT DETECT
DRIVER
OVER VOLT DETECT
STOP
ON/OFF
SUPPORT POWER
Vcc
ON/OFF CONTROL
M2

3-12-1. C2 Board (Control Board)

Pins ①, ② of IC51 constitute the error amplifier for controlling the output voltage. The output of 5.7V is divided by R71.270, RV2551 and input to pin ①. As reference voltage, the voltage (+5V) that is supplied from pin ⑭ is divided by R62, R63, and is input to pin ②. Pin ④ is for dead time control, and while it is "High", on duty becomes "0".

Since pin ④ remains "High" while ON signal is "Low" (ON signal is input via Q251, 258), power source doesn't operate. Oscillation frequency is determined by pins ⑤, ⑥. Pins ⑧, ⑨, ⑩, ⑪ make the output transistor terminal of IC51, and main transistor is driven via T153, T154. Pin ⑭ is the reference voltage (5V) output, and pins ⑮, ⑯ make the error amplifier for overcurrent protection. The voltage detected by T152 is smoothened out with rectifier L1, C53, by D61, 62, 63 ; and is then input to pin ⑯.

3-12-2. M2 Board

C152, 153, 166, 167, Q151, 152, T151 constitute the half bridge converter. The AC voltage that is output from T151 is rectified by D251, 252, 253, 254, 255, 256, and then smoothened by L251, 252, 253, C265, 266, 267, 268, 270. D276, 277, 278, 279, R265, 266, 261, 263, IC252 constitute the overcurrent protection circuit. If any of their respective output voltages exceed the reference voltage, pin ① of IC252 turns "High", pin ⑨ (IC2) is input into, D58 turns ON, Q53 turns ON, pin ④ (IC5) turns "High", and the operation halts.

3-12-3. C1 Board (Control Board)

Operation of this board is identical to that of board C2.

3-12-4. M1 Board

C109, 110, 111, 112, Q101, 102, 103, T1013 constitute the half bridge converter. The AC voltage that is output from T101 is rectified by D201, 202, 203, 204, 205, 206, and then smoothened by C201, 202, 213, C214, 215, 216.

Q204, 205, R232, 233, Q206, 207, R234, 235, 236 constitute the overcurrent protection circuit.

In case of 10V output, if the voltage that is divided by R232, 233 exceeds +5V, Q204 turns ON, "High" signal is input to pin ⑨ (IC1), D58 turns ON, Q53 turns ON, pin ④ (IC51) turns "High", and the operation halts.

IC203, R247, 248, 249, 250, 251 constitute the low voltage protection circuit.

In case of 100V output, the voltage that is divided by R247, 248 is input to pin ⑧ (IC203), making it the reference pin ⑤. When the voltage of pin ⑥ becomes lesser than that of pin ⑤, "High" is output through pin ⑦, which is then input to pin ③, time is delayed by C227, R241, "High" signal is output through pin ①, which is then conveyed to pin ⑨ of board C2 of the board M2, and the operation halts.

R201, IC201, R217, 218, RV202 constitute the series regulator. And, R208, 209, 210, 212, 213, 214, 215, 254, RV201 constitute the overcurrent protection circuit.

SECTION 4
SET-UP ADJUSTMENT

Note 1:

- When exchanging CRT, fit tightly DY to CRT, set neck assembly position and adjust.
- Service mode is released when the power is turned OFF.

Note 2: Lens focus adjustment

- Monitor the hatch pattern of the internal signal, and minimize the contrast, and then observe the focus for each color.
- If the focus is deviated, perform the lens focus adjustment by opening the front panel. Perform the adjustment so that it is just focused while observing the center portion of the screen.

Note 3: Failsafe XRays
Protection against X-rays

Circuit diagrams with X-radiation related parts (there is danger of radiation from CRT R, G, B) are preceded by a NOTE which must be observed.
The mechanical parts for protection against X-rays are shown below.
When voltage is to be supplied to the CRT, make sure that there parts are attached.

1. CRT assembly (R, B side board)
2. Lenses (R, G, B)

Failsafe Protection

When the lens has not been attached.
There is one ground lead wire for each lens (R, G, B). As long as the lead wires are connected to ground by the lens fixing screws, the power is turned on. However, if one of the wires is not connected to ground, the power cannot be turned on.

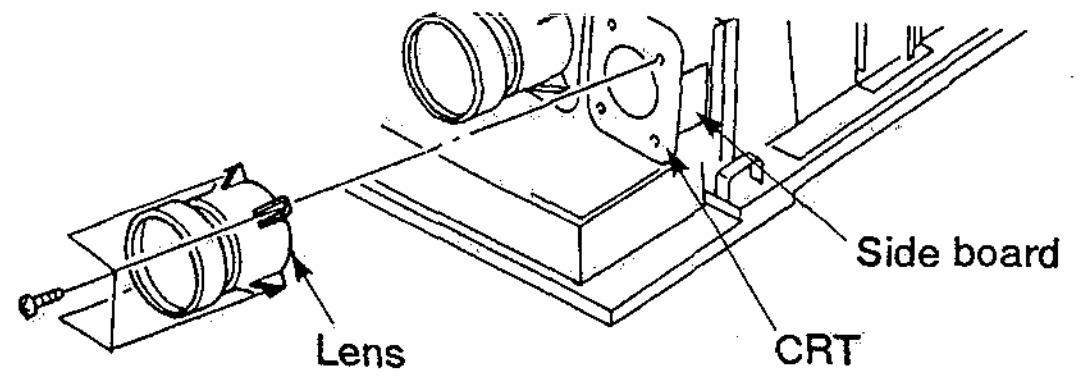

4-1. Neck assembly installation

1. Fit DY tightly to CRT funnel first and then tightly fit Sub DY.
2. Temporary install 2-pole and 4-pole magnet assembly 5-6mm away from left DY.
3. Installing CB board.

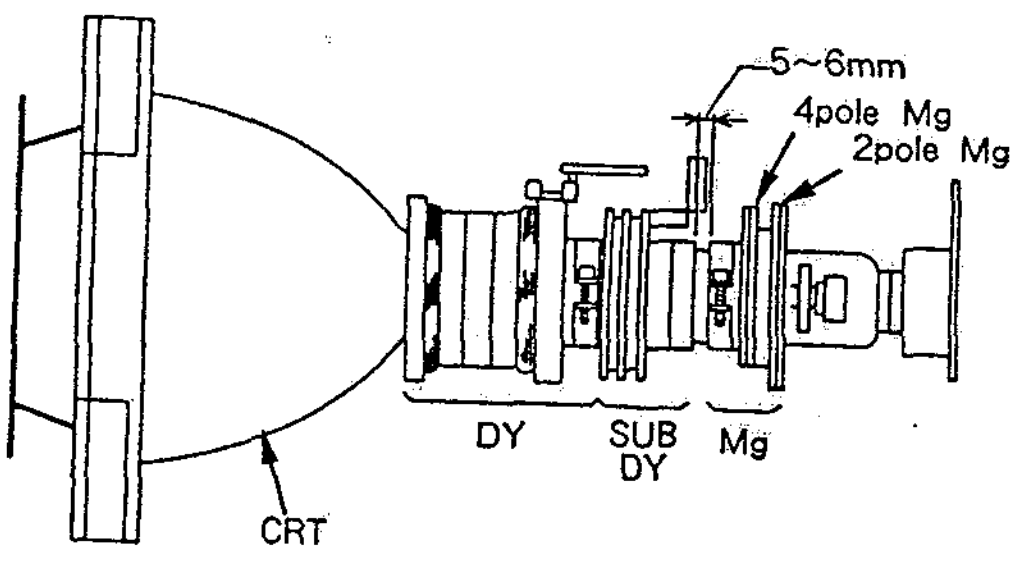

4-2. Adjusting screen inclination by main DY

1. Turn off the switch (SW1 – 1) on the Y board.
2. Turn set power ON and remote commander power key ON.
3. Press TEST key for 5sec and then arrow ▲ key to set at service man-mode.
4. Press TEST key to display cross-hairs.
5. Turn main DY and adjust screen inclination.
   - When red CRT is exchanged, display green and red cross hair pattern, and match horizontal cross- hair to adjusted green CRT.
   - When green, blue CRT is exchanged, display cross hairs of the exchanged CRT color and the adjusted CRT color, and match horizontal cross-hair to the adjusted CRT.
6. Fix main DY after adjustment.
7. After all adjustments are completed, turn off the power switch on the remote commander and switch off the main power. Confirm that the STAND – BY LED is off and turn on the switch (SW1 – 1) on the Y board.

4-3. Sub-DY Adjustment

1. Fit to main DY and set at the mechanical center.

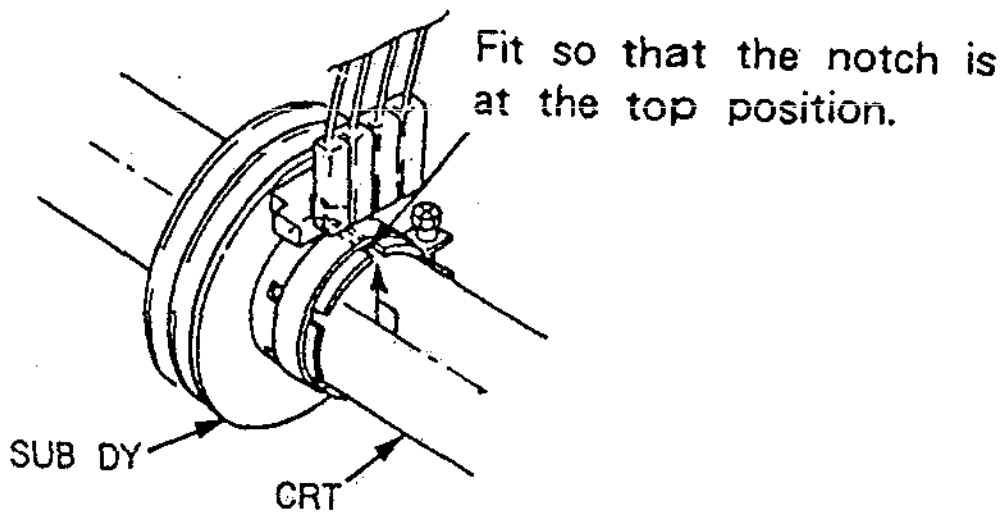

4-4. GREEN Focus Adjustment

1. Input monoscope signal.
2. Press commander CUT-OFF R, B key and cut-off R, B.
3. Turn main green lens and obtain best display on screen.

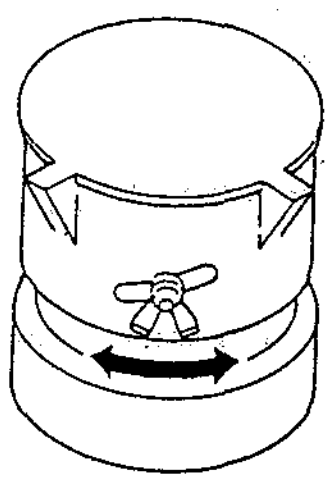

4. Turn focus pack GREEN FOCUS VR and set at best focus point.

5. Turn main green lens and focus screen center and temporary fix lens screw.

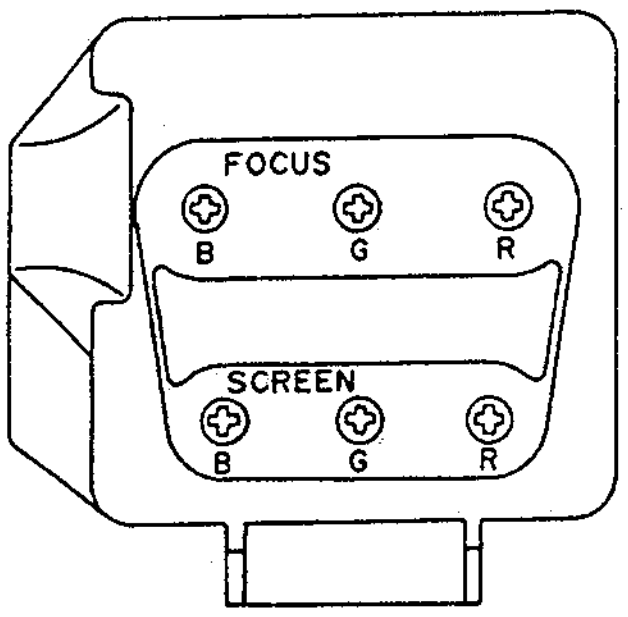

6. Loosen screw temporarily fixing main green lens. Make fine adjustments and fix lens with fixing screw.
7. Input DOT signals.
8. Turn focus pack GREEN FOCUS VR a little to the left from the just focus point until halation surrounds DOT.
9. Use a 2-pole magnet to bring the DOT core to the center of halation. (Fig. 1)

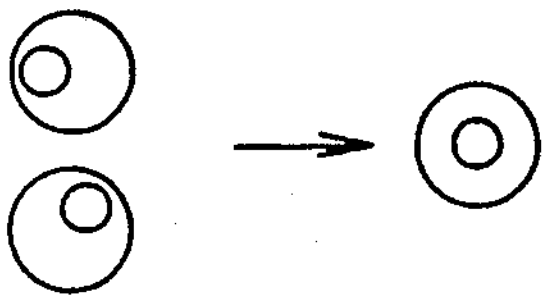
(Fig. 1)

(2-pole magnet adjustment)

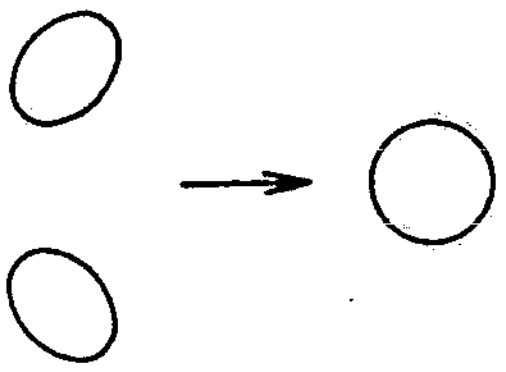
(Fig. 2)

(4-pole magnet adjustment)

10. Turn focus pack GREEN FOCUS VR a little to the right from the just focus point to slightly change DOT shape.
11. Use a 4-pole magnet to make DOT shape circular. (Fig.2)
12. Repeat 9 through 12 for tracking.
13. Turn focus VR and adjust for the best focus.

4-5. RED Focus Adjustment

1. Press Commander CUT-OFF G, B keys and cut-off green and blue.
2. Adjust following green focus adjustment instructions no. 8 to 13.

4-6. BLUE Focus Adjustment

1. Press Commander CUT-OFF G, B and cut-off green and red.
2. Follow green focus adjustment instructions nos. 8-13.
3. Press Commander INPUT SELECT A and input fH=64KHz R, G, B signals.
4. Press PAGE and set color temperature at 6,500° K.
5. Press GAIN and confirm blue gain data is "204".
6. Press BIAS and confirm blue bias data is '128.'
7. Press RESET.
8. Press TEST to display H pattern.
9. Press CUT-OFF G, B and cut-off green and red.
10. Adjust focus pack blue focus VR to just focus poin.

4-7. Registration Adjustment

Centering Adjustment

1. Press ZONE to display cross-hairs.
2. Press ADJ R when the red CRT is replaced.
3. Use the arrow keys ◀ ▶ ▲ ▼ and align the red center line with the green center line.

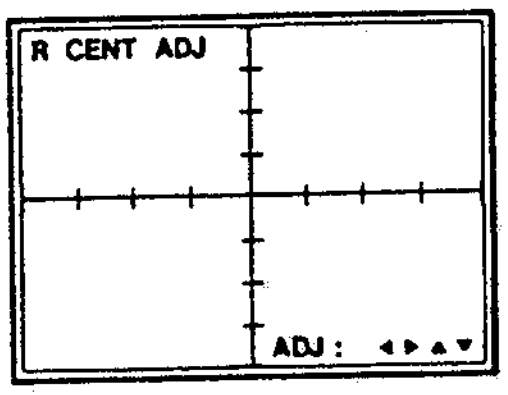

Note 1) Zone control mode ① adjust centering.
CENT R and B provide small variation width for users.
CENT R and B become the G centering adjust mode when pressed simultaneously. The variation width is also small.

Note 2) When the computer display is shifted, press RGB SHIFT and adjust with arrow keys ◀ ▶ ▲ ▼. Then, press MEMORY. The test signal position dose not shift after pressing TEST.

Note 3) Follow the instructions below when the VIDEO display position is shifted :

① Press ZONE.
② Press ADJ G.
③ Press TEST for minimum 5 seconds to display VIDEO. Press CUT OFF R and B for G monocolor. Adjust with arrow keys ◀ ▶ ▲ ▼.
④ Press ZONE again.
Press ADJ R.
Match G and R.
⑤ Press ADJ B to match R and B.
⑥ Press NORMAL to macth R and B.
⑦ Press TEST.
Test signal position is shifted.

Size Adjustment

1. Press TEST to display the cross-hairs.
2. Press SIZE for size adjustment mode.
3. Adjust display size against the screen with arrow keys.
4. Match 4 display dimensions.

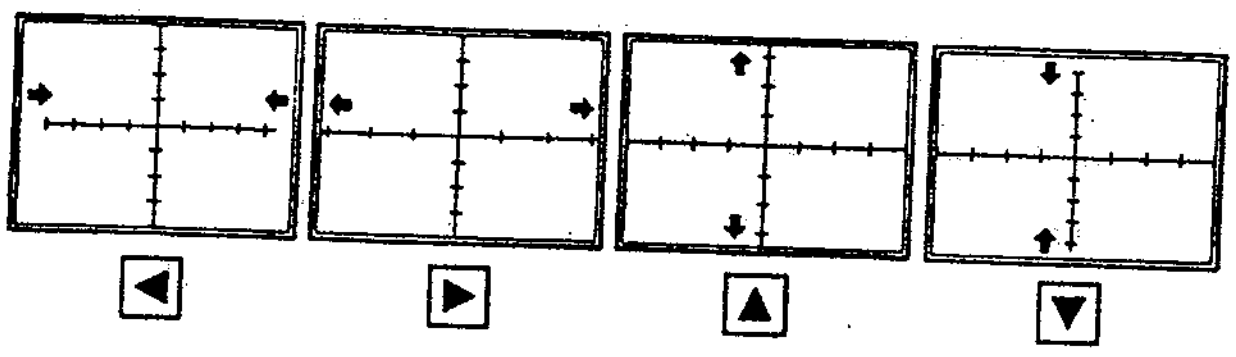

5. Follow the instructions below when the computer display size is too small or too large. Press RGB SIZE and adjust with arrow keys ◀ ▶ ▲ ▼.
   Press MEMORY.
   Test signal size is same when pressing TEST.
6. Follow the instructions below when the VIDEO display size is too small or too large.
   ① Press SIZE.
   ② Press ADJ G.
   ③ Press TEST for minimum 5 seconds to display VIDEO. Press CUT-OFF to turn off R and B, and make Green light.
   Adjust with arrow keys ◀ ▶ ▲ ▼.
   ④ Should blanking occur, press BLKG. Press POSITION + or − to select the adjusting position. Adjust with arrow keys ◀ ▶ ▲ ▼.
   ⑤ Press TEST. The test signal size is not changed.

Linearity Adjustment

1. Press LIN and set at linearity adjustment mode.
2. Use arrow keys to adjust vertical and horizontal balance.
3. Adjust in four directions.

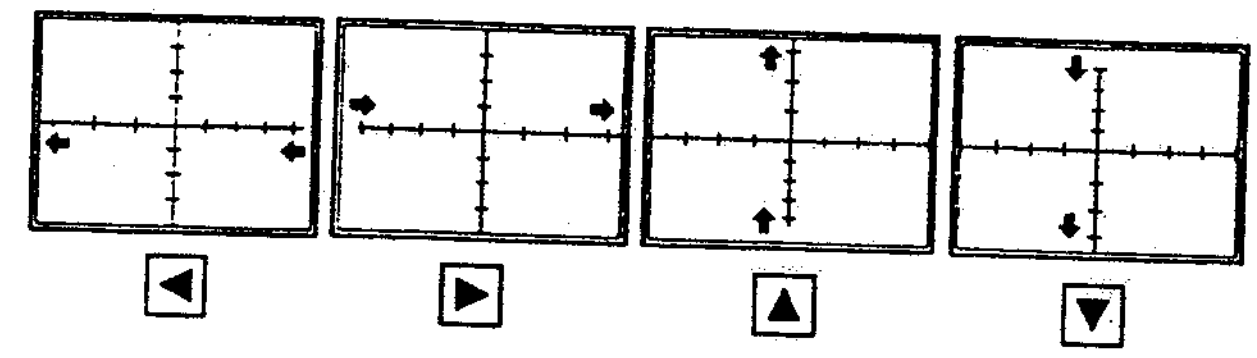

Skew Adjustment

1. Press SKEW and set at skew adjustment mode.
2. Use arrow keys to adjust each center line vertically and hirizontally.

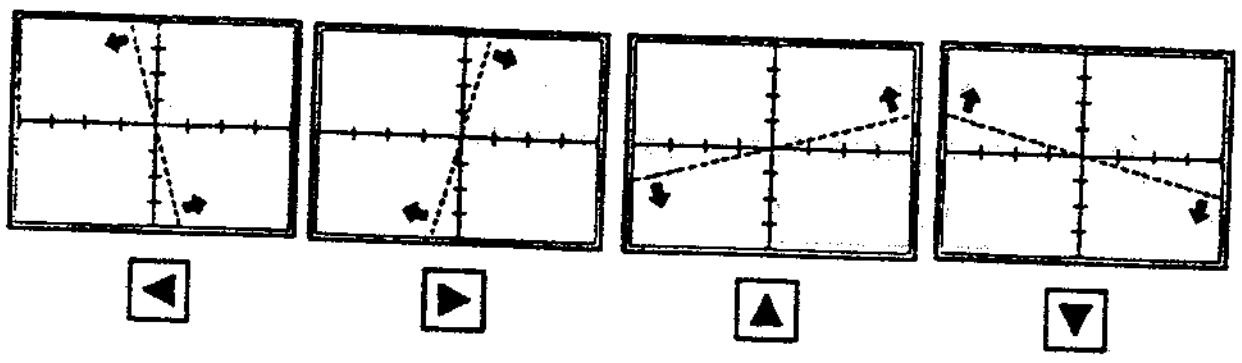

Bow Adjustment

1. Press BOW and set at bow adjustment mode.
2. Use arrow keys to straighten bowing line.

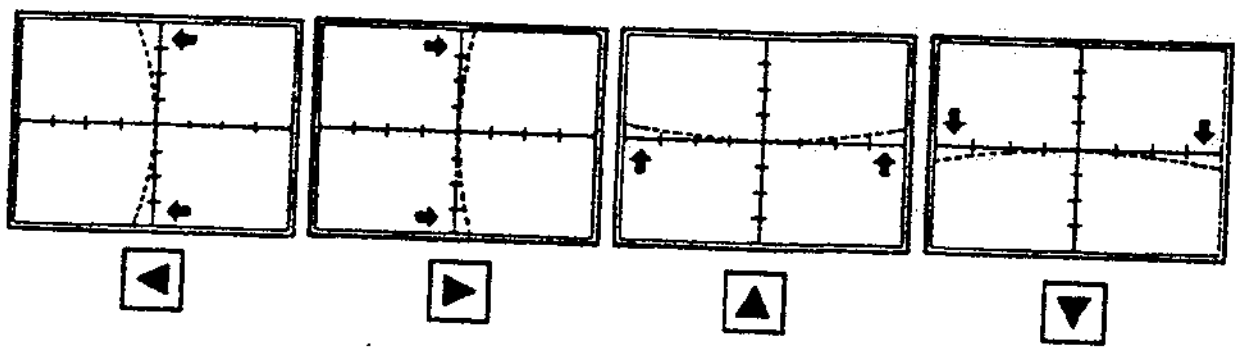

Keystone Adjustment

1. Press KEY and set at keystone adjustment mode.
2. Use arrow keys to adjust trapezoid shape distortions vertically and horizontally.

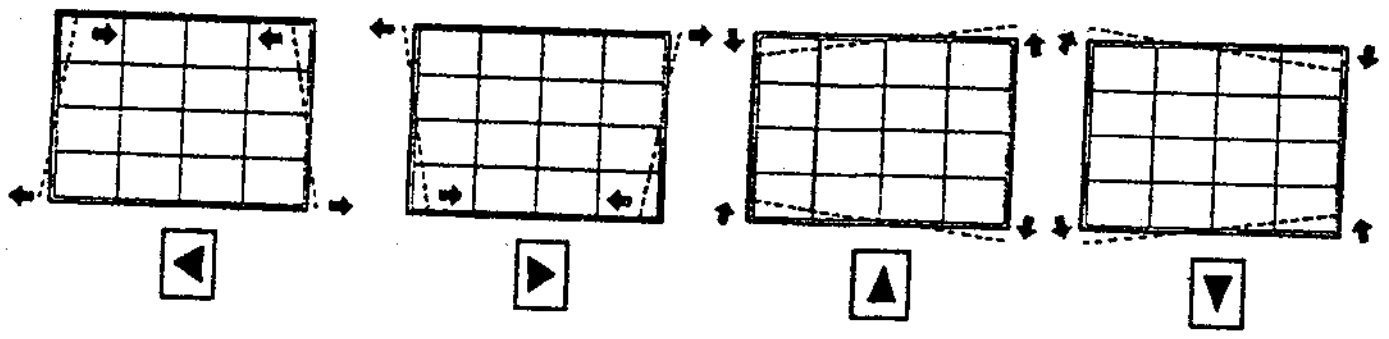

Pincushion Adjustment

1. Press PIN and set at pin adjustment mode.
2. Use arrow keys to adjust spool shape distortion vertically and horizontally.

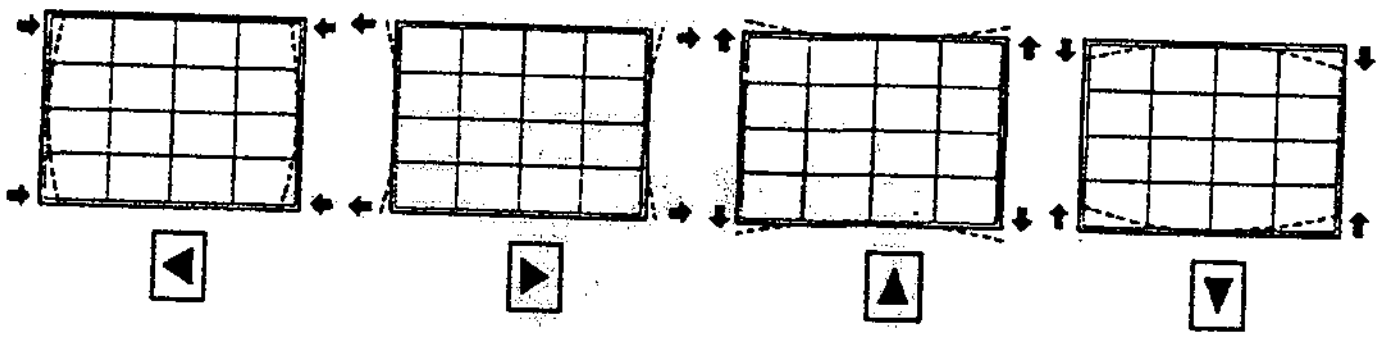

Zone Adjustment

1. Press ZONE and set at zone adjustment mode.
2. Press POSITION + and − keys to select part to be adjusted.
3. Use arrow keys ◀ ▶ ▲ ▼ to adjust line distortion near cursor.

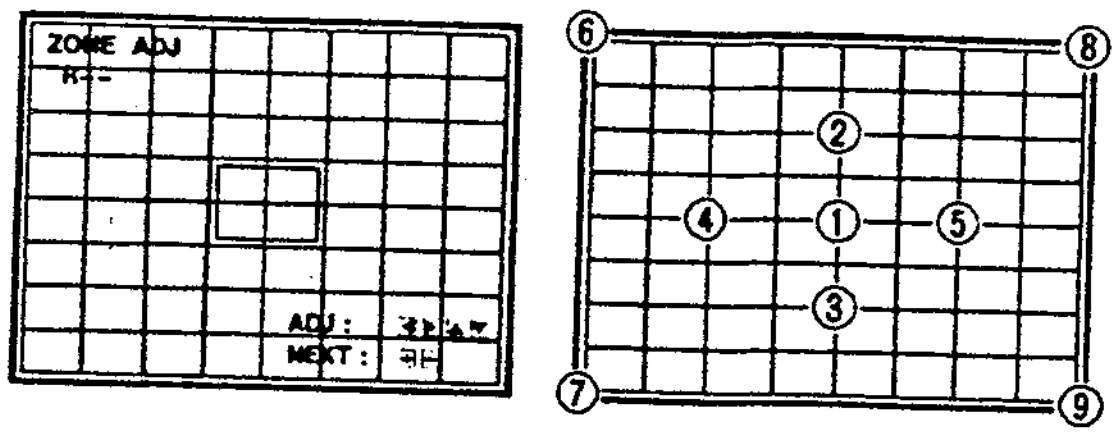

4-8. WHITE BALANCE Adjustment by Maintenance Man

<Preparations>

① Remove Commander cover.
② Press TEST for more than 5 sec.
③ Screen display will change to service man mode display.
④ Press arrow key ▲.

You are now in the service man mode.

1. G2VR Adjustment

① Input VIDEO signal.
② Set color temperature at 9300° K,
③ Press BIAS and set R, G, B, bias data at
R : "128"
G : "128"
B : "128"
④ Press GAIN and set R, G, B gain data at
R : " 30 "
G : "103"
B : "230"
⑤ Press RESET and set CONT 80% BRT 50%.
⑥ Press TEST and display pluge signal on screen.

⑥' Short-circuit CF2 board CF2-3 connector (2P) ① – ②.

⑦ Adjust R, G and B brightness by turning G2VR as follows.

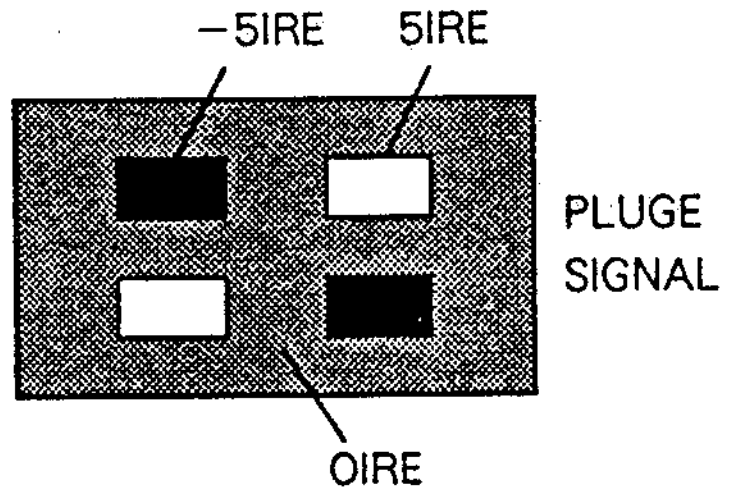

* Adjust until +5IRE is a little brighter than the background (OIRE), and the background is the same brightness as –5IRE.

⑧ End short-circuiting at ⑥'.

2. Blue G4 Adjustment

① Set at No-Signal state. (To set at fH=34KHz)
② Press PAGE and set color temperature at 6,500° K.
③ Press GAIN and set blue gain data at maximum.
④ Press BIAS and set blue bias data at "128".
⑤ Press RESET.(To set at CONT : 80, BRT : 50)
⑥ Press TEST and display "H" pattern.
⑦ Cut-off green and red.
⑧ Turn focus pack blue focus VR to the right from the just focus point, and set so that 'H' pattern can be distinguished.



3. 9,300° K Adjustment

① Input video signal.(100IRE white)
② Press PAGE and set color temperature at 9,300° K.
③ Press BIAS or GAIN and set at bias adjustment mode.
④ Press arrow keys ◀ and ▶ simultaneously, and confirm the following message is displayed.

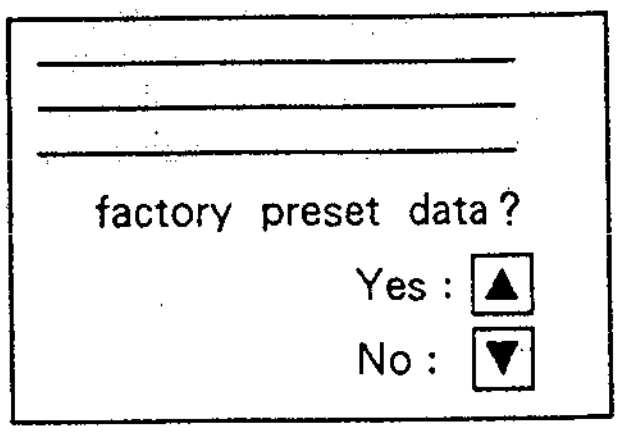

factory preset data ?
Yes : ▲
No : ▼

⑤ Press arrow key4 ▲. (This will input factory preset data in memory)
⑥ Press BIAS.
⑦ Press TEST until screen is white signal.
⑧ Set CONT : Minimum, BRT : Minimum.
⑨ Use color analyzer and adjust blue and red so that : x : 0.284±0.015
y : 0.297±0.025.
Do not adjust green bias.
⑩ Press MEMORY.
⑪ Press GAIN.
⑫ Press TEST until screen displays external signal.
⑬ Press RESET and set CONT : 80%, BRT : 50%.
⑭ Use color analyzer and set green and red so that : x : 0.284 ± 0.015
y : 0.297 ± 0.025
Do not adjust blue again (230).
⑮ Press MEMORY.

4. 6,500° K Adjustment

① Input video signal.
② Press PAGE and set color temperature at 6,500° K.
③ Press BIAS or GAIN and set at bias adjustment mode.
④ Press arrow keys ◀, ▶ simultaneously and confirm the following message is displayed.

factory preset data ?
Yes : ▲
No : ▼

⑤ Press arrow ▲ key.(This will input factory preset data in memory)
⑥ Press BIAS.
⑦ Press TEST until screen is blank.
⑧ Set CONT : Minimum, BRT : Minimum
⑨ Use color analyzer and adjust blue and red so that : x : 0.313±0.015
y : 0.329 ± 0.015
Do not adjust green bias.
⑩ Press MEMORY.
⑪ Press GAIN.
⑫ Press TEST until screen displays external signal.
⑬ Press RESET and set CONT : 80%, BRT : 50%.
⑭ Use color analyzer and adjust green and red so that : x : 0.313 ± 0.015
y : 0.329±0.015
Do not adjust blue again (230).
⑮ Press MEMORY.

5. 3,200° K Adjustment

① Input video signal.
② Press PAGE and set color temperature at 3,200° K.
③ Press BIAS or GAIN and set at bias adjustment mode.
④ Press arrow keys ◀, ▶ simultaneously and confirm the following messages are displayed.

factory preset data ?
Yes : ▲
No : ▼

⑤ Press arrow key ▲.(This will input factory preset data in memory)
⑥ Press BIAS.
⑦ Press TEST until screen is blank.
⑧ Set CONT : Minimum, BRT : Minimum.
⑨ Use color analyzer and adjust blue and red so that ; x : 0.423±0.015
y : 0.399 ± 0.015
Do not adjust green gain.
⑩ Press MEMORY.
⑪ Press GAIN.
⑫ Press TEST until screen displays external signal.
⑬ Push RESET and set CONT : 80, BRT : 50.
⑭ Use color analyzer and adjust red and blue so that ; x : 0.428 ± 0.015
y : 0.399±0.015
Do not adjust green again (140).
⑮ Press MEMORY.

6. Preset Adjustment

① Press PAGE and preset color degree.
② Press GAIN and set R, G, B gain data at 6,500° K data.
③ Press BIAS and set R, G, B bias data at 6,500° K data.
④ Press MEMORY.
⑤ Press PAGE and after setting color temperature at 6,500° K, press MEMORY .

SECTION 5
SAFETY RELATED ADJUSTMENT

When exchanging ◪ part check HV hold-down circuit, HV regulation circuit, LOW B protector circuit and beam current protector circuit.

⧓ R33, R34 [HV hold-down] PA board
◪ IC2, Q7, D9, D12, C13, R20, R21, R22, R23, R24, R32, R33, R34, R35, R36, R82, HV BLOCK, PA mount

⧓ R41, R42 [HV regulation] PA board
◪ IC1, IC6, IC7, IC8, IC9, D13, C16, R37, R38, R39, R40, R41, R42, R53, R55, R56, R58, R59, R129, X1, HV BLOCK, PA mount, PB mount

⧓ R29, R30 [LOW B protector] PA board
◪ IC1, IC3, IC5, Q8, D4, D5, D10, D11, R9, R10, R26, R28, R29, R30, R31, R88, R95, PA mount

⧓ R1, R4 [Beam current protector] PA board
◪ IC2, IC3, IC5, Q1, Q2, Q7, Q8, D4, D5, D9, R1, R2, R3, R4, R5, R6, R7, R8, R9, R10, R20, R21, R22, R23, R24, R43, R44, R45, R46, R47, R82, R88, R119, R120, R121, R122, R199 (DA board), PA mount, PB mount

⧓ R33, R34 : HV Hold-down

1. Confirm set power is turned OFF.
2. Connect high voltage meter ⊕ to HV filter vacant terminal and ⊖ to chassis earth.
3. Remove resistance mounted between PA board TP9 – TP11. Connect variable resistor and set at 47K Ω.
4. Remove resistance mounted between PA board TP12 – TP14. Connect variable resistor and set at 27K Ω.
5. Turn RV1 fully counter clockwise.
6. Turn set power ON.
7. Input monoscope signal, and set CONTR and BRT at maximum.
8. Turn variable resistor between TP12 – TP14 to change resistance value and adjust high voltage to around 34.0±0.3KV.
9. Turn variable resistor between TP9 – TP11 to change resistance value, adjust high voltage to around 34.0±0.3KV, and confirm hold-down circuit operates and raster disappears.
10. Turn set power OFF.
11. Remove variable resistor between TP9 – TP11. Measure the volume resistance value and solder on the same amount of resistance to R33, R34.
12. Next, slightly raise volume resistance value between TP12 – TP14.
13. Turn set power ON.
14. Turn variable resistor between TP12 – TP14 again and raise high voltage. Confirm hold-down circuit operates at 34.0±0.3KV and raster disappears.
15. Next, adjust HV regulation.

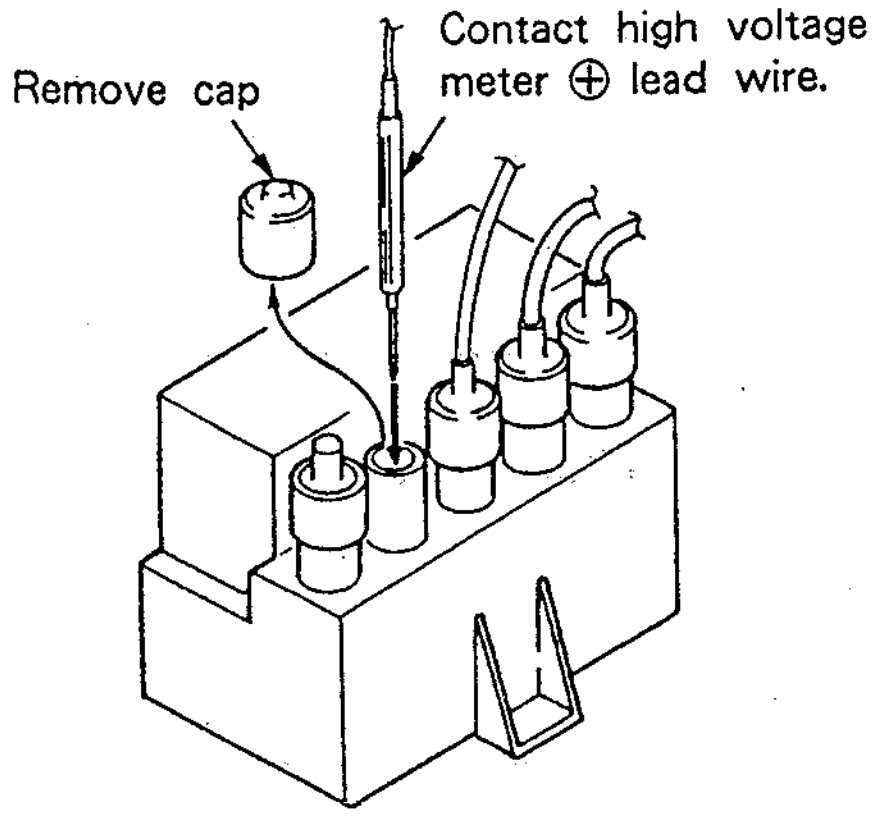

⧓ R41, R42 : HV regulation

1. Confirm set power is OFF.
2. Connect high voltage meter ⊕ to HV filter vacant terminal and ⊖ to chassis earth.
3. Set variable resistor between PA board TP12 – TP14 to 27K Ω.
4. Turn set power ON.
5. Press CUT – OFF key and cut – off R, G, B.
6. Turn variable resistor between TP12 – TP14 to change resistance value and adjust high voltage to around 33.0±0.3KV.
7. Turn set power OFF.
8. Remove variable resistor between TP12 – TP14. Measure the volume resistance value and solder on the same amount of resistance to R41, R42.
9. Turn set power OFF.
10. Confirm high voltage meter reads 33.0±0.3KV.
11. Turn set power OFF and remove high voltage meter.

PA BOARD

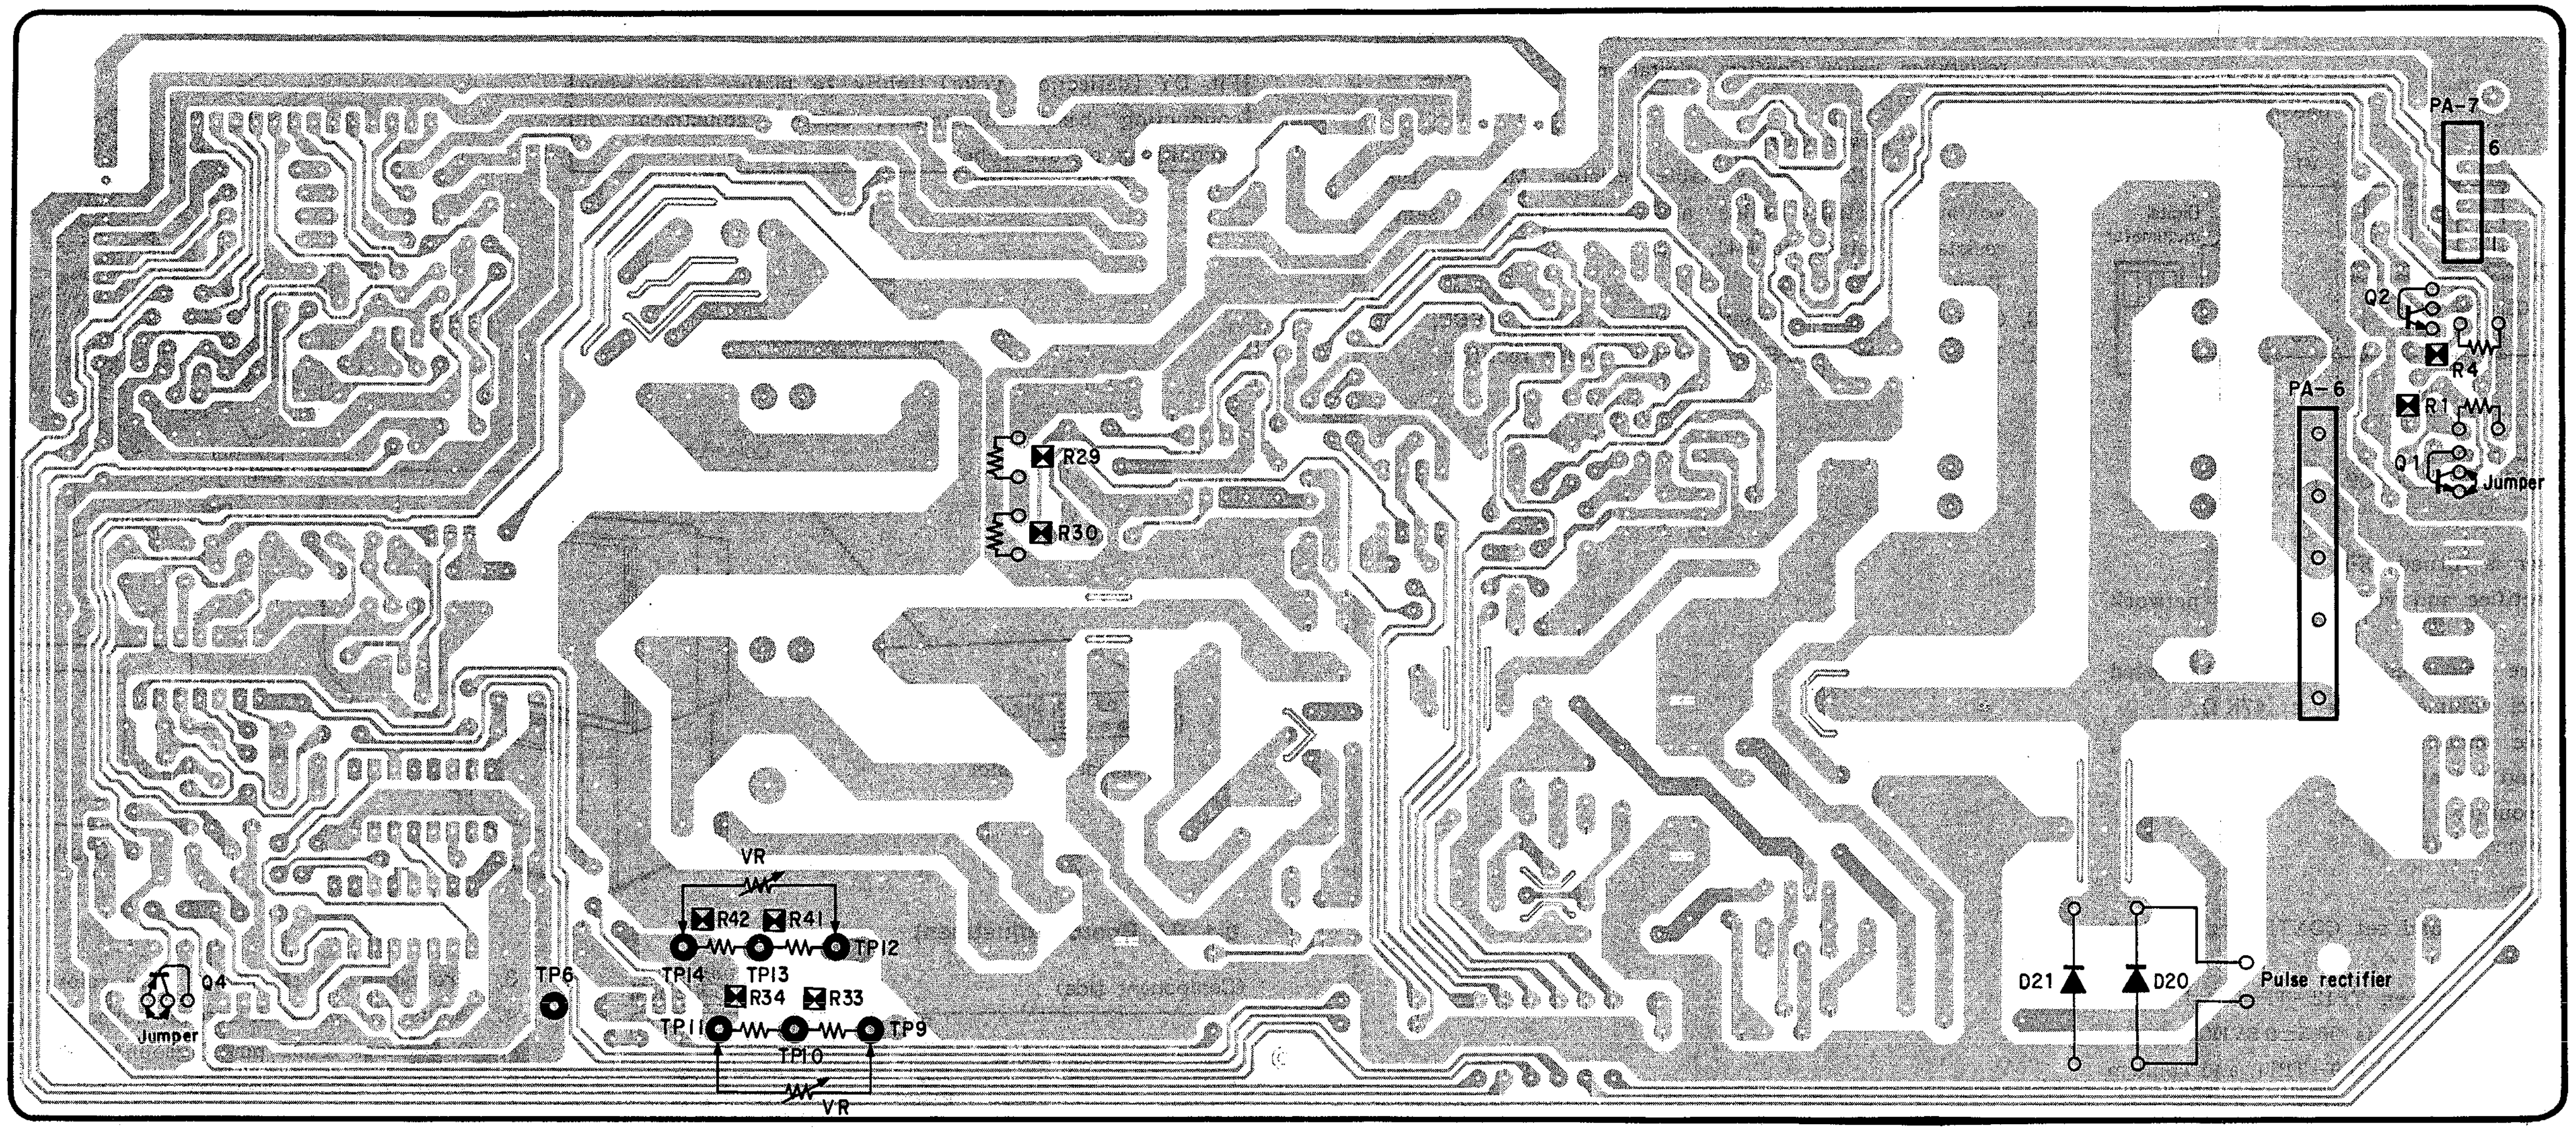
PA-7
6
Q2
R4
R1
Q1
Jumper
PA-6
R29
R30
VR
R42
R41
TP12
TP14
TP13
R34
R33
TP11
TP10
TP9
VR
TP6
Q4
Jumper
D21
D20
Pulse rectifier

⧓ R29, R30 : LOW B Protector

- Prepare jig circuit as shown in figure.
- Adjust until high voltage meter shows 13.9V.

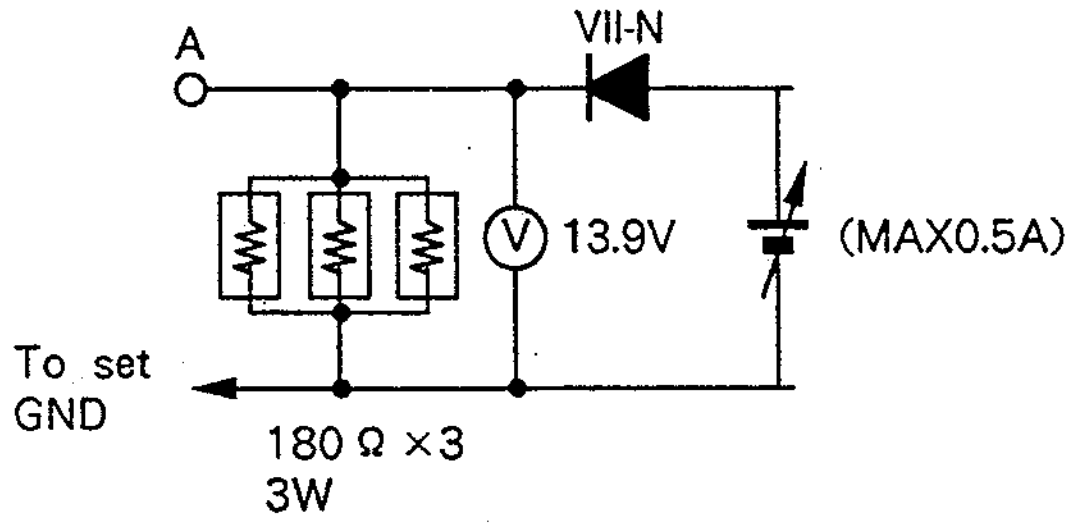
A
VII-N
13.9V
(MAX0.5A)
To set GND
180 Ω ×3
3W

1. Turn set power ON.
2. Contact jig circuit A point to PA board TP6 (12V line) for 0.5−1 sec, and remove immediately. Confirm power turns OFF when doing so.
3. If power does not turn OFF, adjust R29, R39.

⧓ R1, R4 : Beam Current Protector

1. Confirm set power is turned OFF.
2. Disconnect PA board connector PA−6 and connect jig shown in figure.
3. Short circuit PA board Q1 emitter and collector.
4. Turn set power ON.
5. Input monoscope signal, send beam current by CONTR, BRT and G2VR, and confirm protector circuit operates at under 4700 μ A and raster is erased.
6. If protector circuit does not operate, adjust R4.
7. Remove jig short−circuiting Q1 emitter and collector.
8. Next, short−circuit Q4 emitter and collector.
9. Turn set power ON.
10. Send beam current by CONTR, BRT and G2VR, and confirm protector operates at under 4700 μ A and raster is erased.
11. When protector does not operate, adjust R1.
12. Remove jig short−circuiting Q4 emitter and collector.

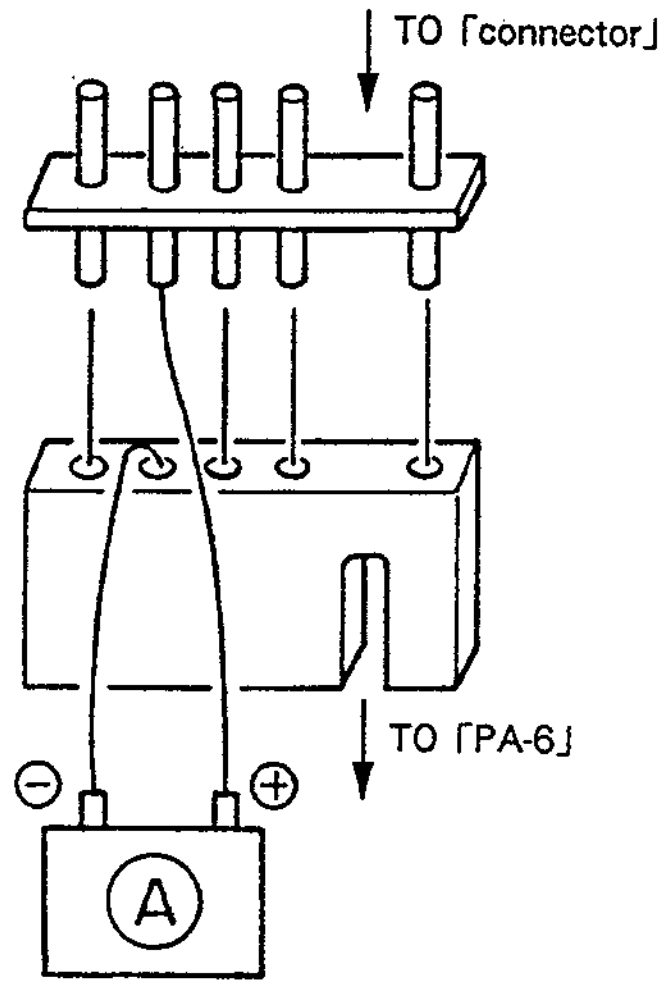
TO 「connector」
TO 「PA-6」
⊖
⊕
Ⓐ

To Check without Using High Voltage Meter

⧓ R33, R34 : HV Hold−down

1. Use voltage dividing network shown in figure to calibrate detection unit.

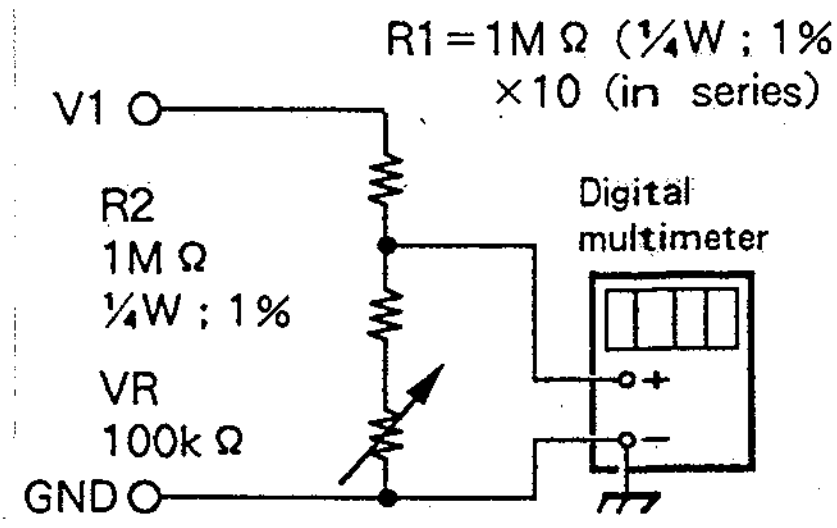
R1=1M Ω (¼W ; 1%) ×10 (in series)
V1
R2
1M Ω
¼W ; 1%
VR
100k Ω
GND
Digital multimeter
+
−

Fig. 1 : Voltage dividing network

2. Remove PA board connector (PA−7) to hold down high voltage. Connect V1 to 100V line of set and read V1 voltage with digital multimeter. Next, adjust volume (VR) so that digital multimeter value is 1/10 of V1.

3. Connect pulse rectifier between PA board D20 or D21 anode and cathode.

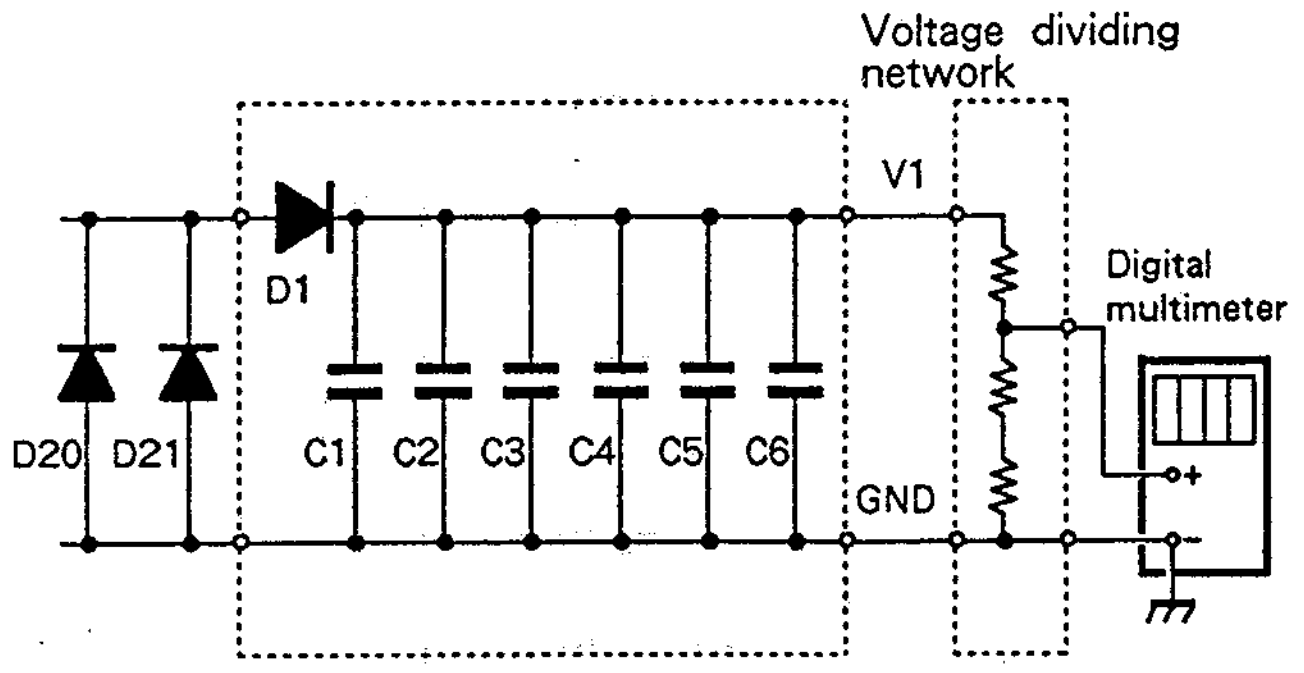
Voltage dividing network
V1
D1
Digital multimeter
D20
D21
C1
C2
C3
C4
C5
C6
GND
+
-

Pulse rectifier D1~VII-N
C1~C6~20000P／1.6KV

4. Confirm set power is turned OFF.
5. Confirm pulse rectifier and voltage dividing network are connected.
6. Remove resistance mounted between PA board TP9－TP11, connect volume and set at 47K Ω.
7. Remove resistance mounted between TP12－TP14, connect volume and set at 27K Ω.
8. Turn RV1 fully counter clockwise.
Connect PA board connector (PA-7).
9. Turn set power ON.
10. Input monoscope signal, and set CONTR and BRT at maximum.
11. Turn variable resistor between TP12－TP14 and adjust until digital multimeter value is 96.5±0.5VDC.
12. Turn variable resistor between TP9－TP11, and confirm hold－down circuit operates and luster is erased when digital multimeter is 96.5±0.5VDC.
13. Turn set power OFF.
14. Remove volume between TP9－TP11. Measure the volume resistance value and solder on the same resistance volume to R33, R34.
15. Slightly raise volume resistance between TP12－TP14.
16. Turn set power ON.
17. Turn volume between TP12－TP14 and confirm hold－down circuit operates and raster is erased when digital multimeter value is 96.5±0.5VDC.
18. Next, adjust HV regulation.

⧓ R41, R42 : HV Regulation

1. Confirm set power is OFF.
2. Set variable resistor between PA board TP12－TP14 at 27K Ω.
3. Turn set power ON.
4. Press CUT－OFF key to cut－off R, G, B.
5. Turn variable resistor between TP12－TP14 and change resistance value. Confirm digital multimeter value is 83.5±0.5VDC.
6. Turn set power OFF.
7. Remove TP12－TP14 variable resistor. Measure the volume resistance value and solder on the same resistance volume to R41, R42.
9. Turn set power ON.
10. Confirm digital multimeter value is 83.5±0.5VDC.
11. Turn set power OFF and remove pulse rectifier.

SECTION 6
CIRCUIT ADJUSTMENTS

Note :
Fit DY (deflection yoke) tightly to picture tube when conducting basic adjustment, electric adjustment or exchanging picture tube.

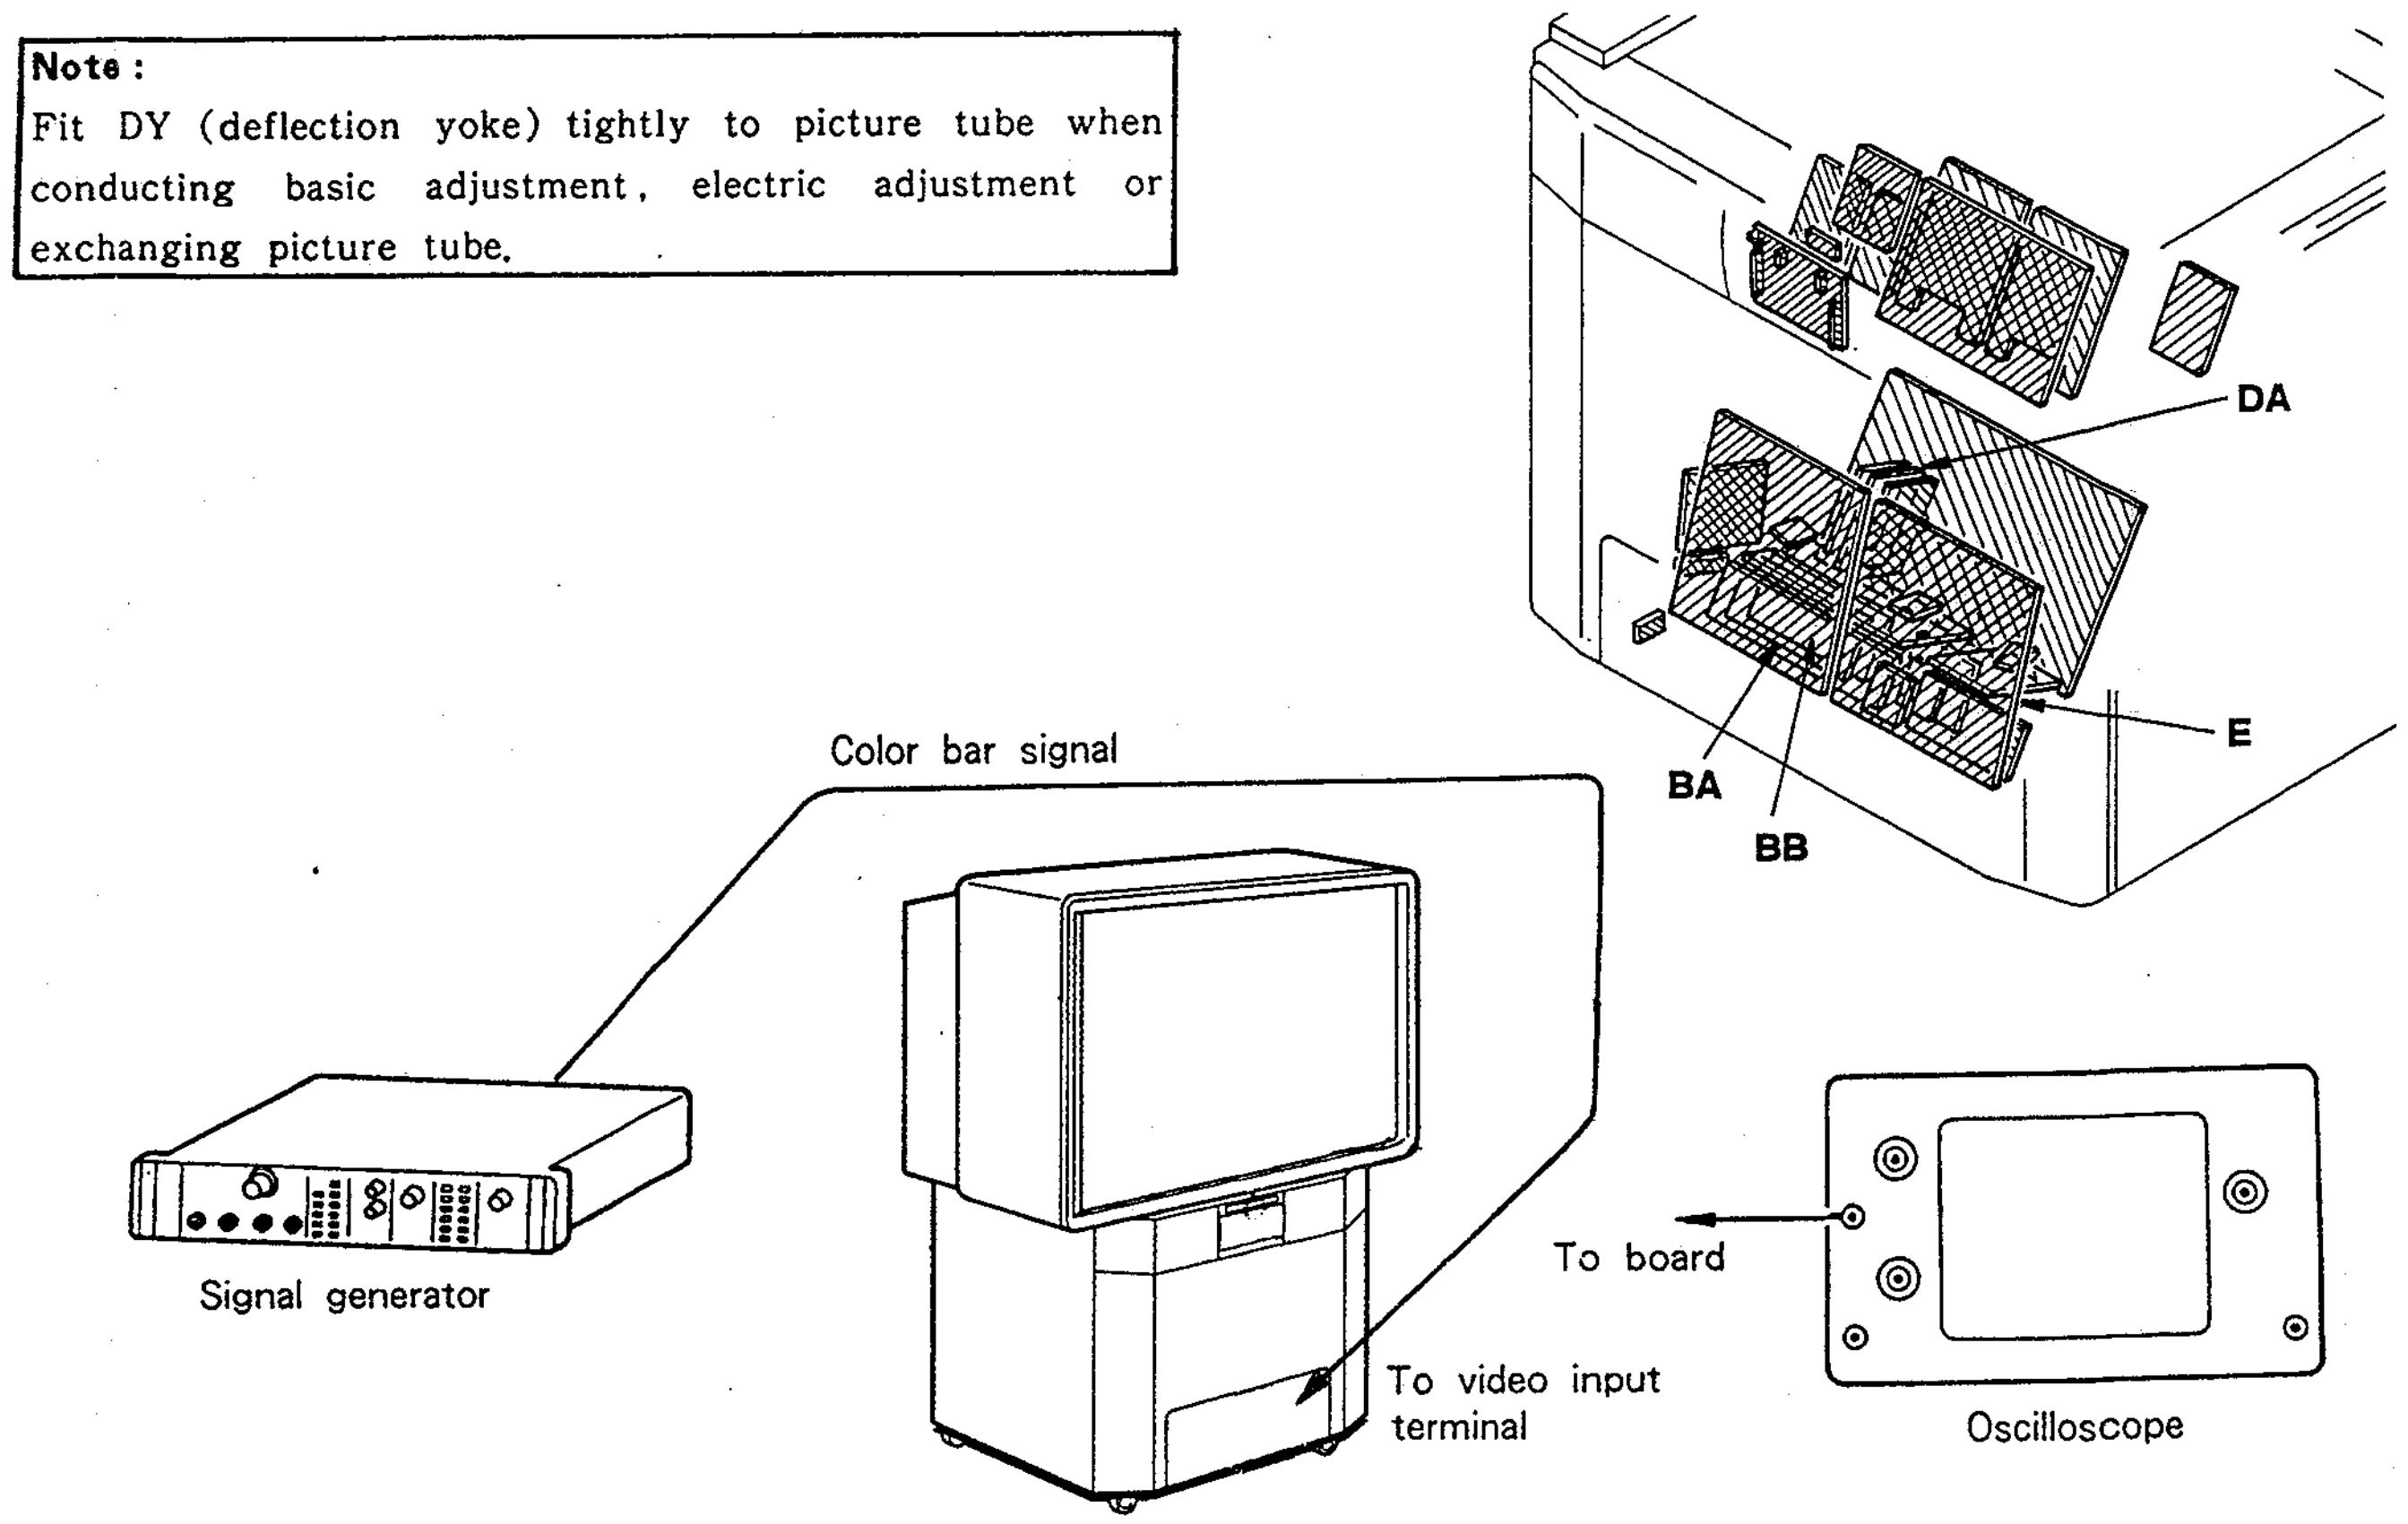
DA
E
BA
BB
Color bar signal
Signal generator
To board
To video input terminal
Oscilloscope

6-1. BA Board Adjustment

(Component side)

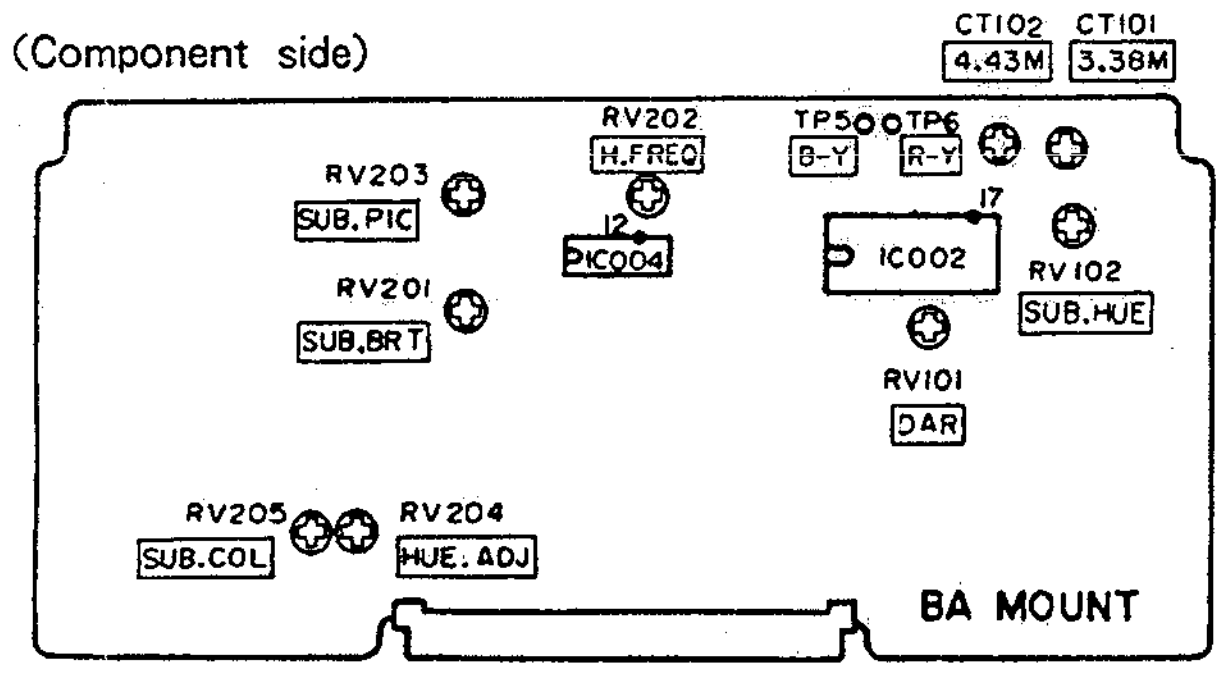
CT102
4.43M
CT101
3.38M
RV202
H.FREQ
TP5
TP6
B-Y
R-Y
RV203
SUB.PIC
12
IC004
17
IC002
RV102
SUB.HUE
RV201
SUB.BRT
RV101
DAR
RV205
SUB.COL
RV204
HUE.ADJ
BA MOUNT

H. FREQ Adjustment (RV202)

1. Ground IC004 pin ⑫.
2. Insert 10:1 probe in TP7 and connect frequency counter.
3. Adjust RV202 to 16400±50Hz.

REF. OSC Adjustment (CT101, CT102)

1. Input PAL color bar.
2. Connect 3.3K Ω to IC002 pin ㉘, apply 12VDC and set at PAL forced MODE.

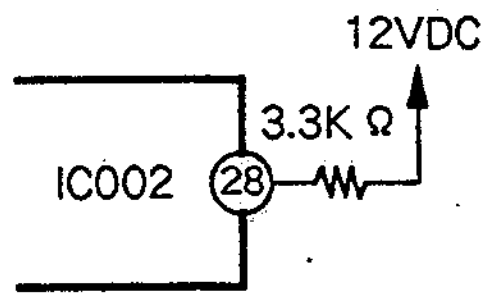
12VDC
3.3K Ω
IC002
28

3. Ground IC002 pin ⑰ and turn color－killer OFF.
4. Adjust CT102 until screen movement slows.
5. Disconnect IC002 pin ⑰ grounding.
6. Input NTSC3.58 color bar.
7. Connect 3.3K Ω to IC002 pin ㉘, apply 12VDC and set at NTSC3.58 forced MODE.

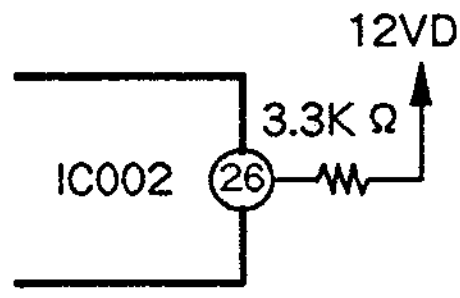
12VDC
3.3K Ω
IC002
26

8. Ground IC002 pin ⑰ and turn color－killer OFF.
9. Adjust CT101 until screen movement slows.
10. Disconnect 3.3K Ω connected to IC.

1H DELAY LINE Adjustment

1. Input PAL color bar.
2. Connect oscilloscope to TP－5 and view wave form in H block.

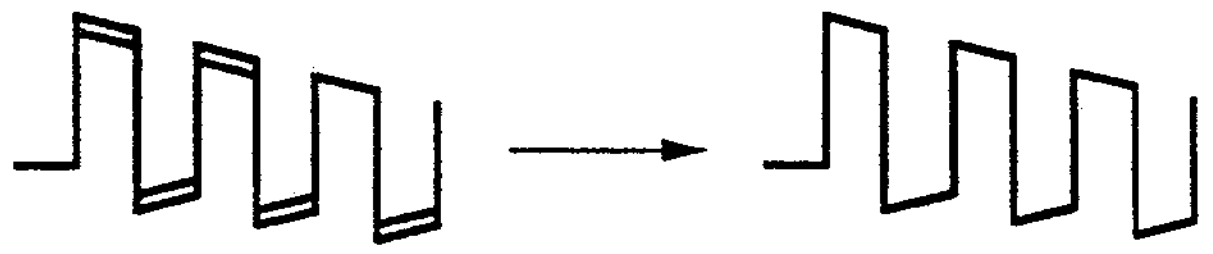
(Before adjustment)
(After adjustment)

3. Adjust L103 and minimize double line part of wave.
4. Input PAL special color bar.
5. Adjust RV101 until wave ANTIPAL part is at O-level.

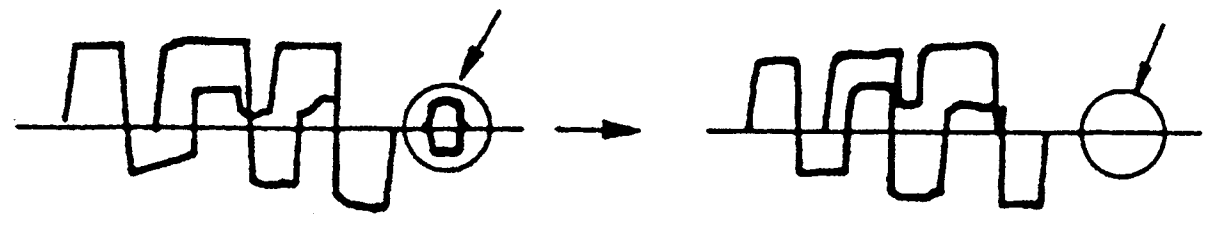
(Before adjustment) (After adjustment)

- RV101 and L103 influence each other. Repeat adjustment until both conditions are satisfied.

SECAM ID Adjustment (L102)

1. Input SECAM color bar.
2. Connect digital multimeter to TP4.(input impedance over 50M Ω)
3. Adjust L102 level to maximum.

BELL Filter Adjustment (L101)

1. Input SECAM color bar.
2. Connect oscilloscope to TP3 and view wave form of H block.
3. Adjust L101 until wave is flat.


(Before adjustment) (After adjustment)

※ Track L101 and L102.

SECAM DISCRI Adjustment (L104, L105)

1. Input SECAM color bar.
2. Connect oscilloscope to TP6 and view wave form of H block.

Fig. 1
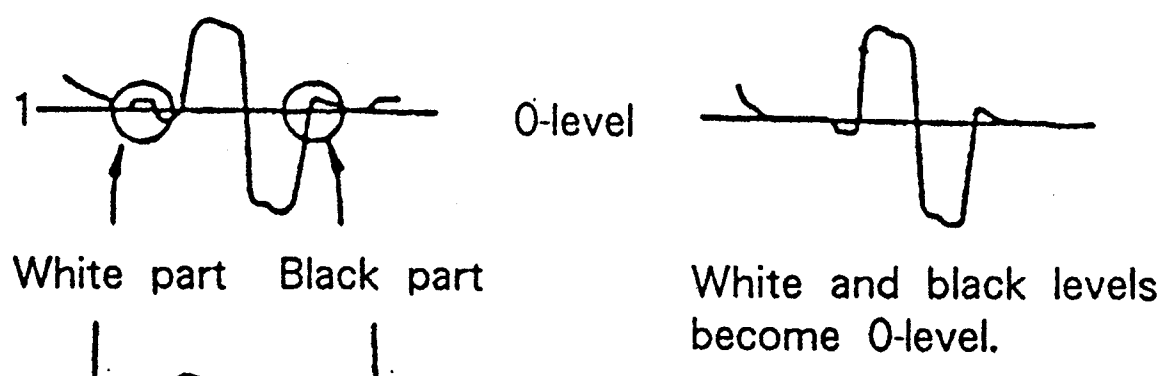

Fig. 2
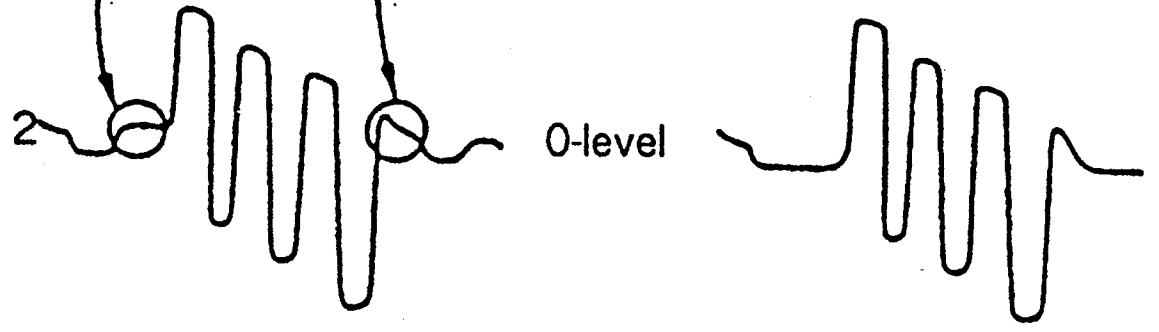

3. Adjust L104 until white and black part of TP6 wave become O-level.(Fig. 1)
4. Connect oscilloscope to TP5 and view wave form of H block.
5. Adjust L105 until white and black part of TP5 wave become O-level (Fig. 2).

SUB BRIGHT Adjustment (RV201)

1. Input blank signal (100IRE).
2. Connect oscilloscope to BB board TP5 and view wave form of H block.

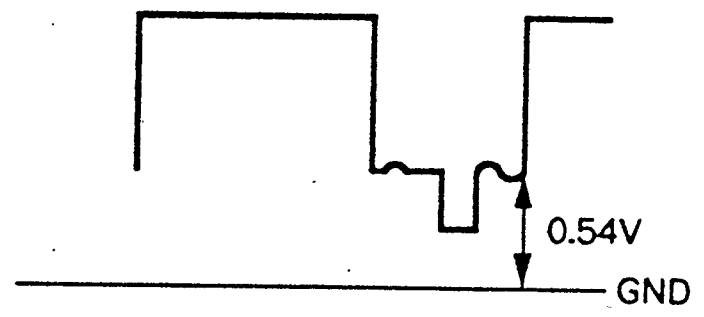

3. Adjust RV201 until pedestal level is 0.54V.

SUB PICTURE Adjustment (RV203)

1. Input blank signal (100IRE).
2. Connect oscilloscope to BB board TP5 and view wave form of H block.

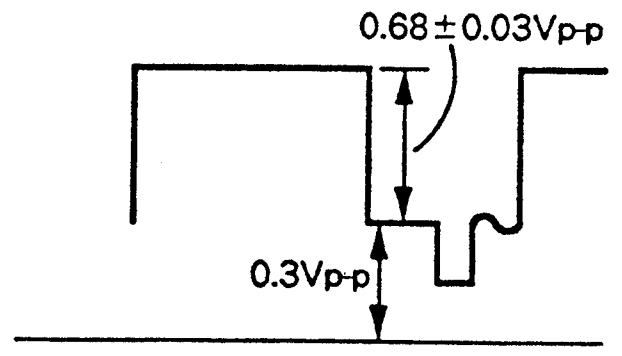

3. Adjust RV203 until pedestal to peak is 0.68±0.03Vp-p.

HUE, SUB COLOR, SUB HUE Adjustment (RV204, RV205, RV102)

1. Input PAL color bar signal.
2. Connect oscilloscope to TP10 and view wave form of H block.
3. Adjust RV204 (HUE) and RV205 (SUB COL) until wave is flat.

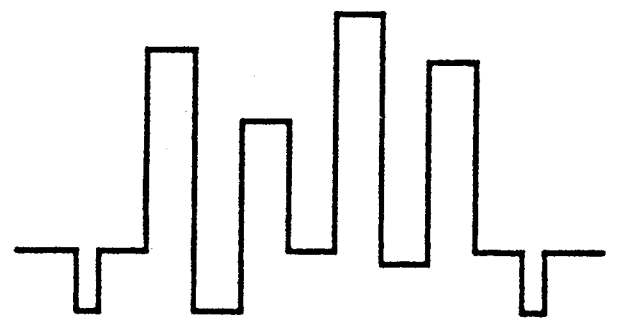
(Before adjustment)

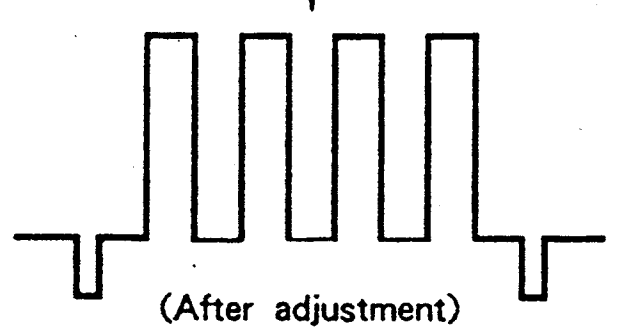
(After adjustment)

4. Input NTSC3.58 color bar.
5. Adjust RV102 (SUB HUE) until wave is flat.

6-2. BB Board Adjustment

(Component side)

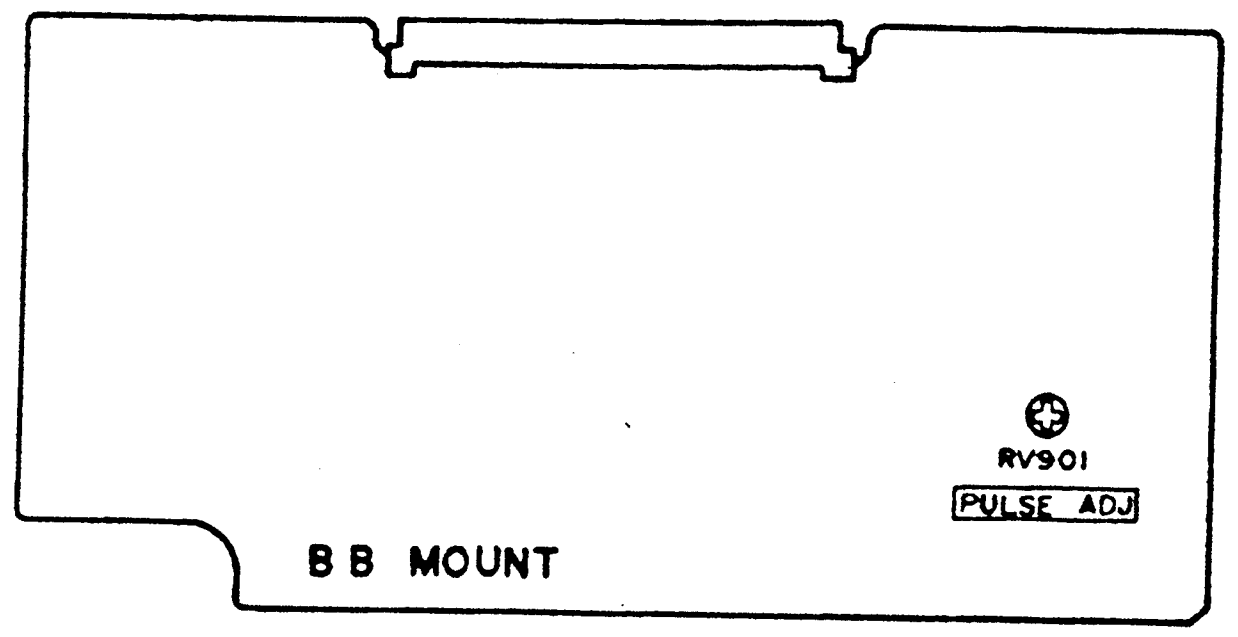

PULSE Adjustment (RV901)

1. Input monoscope signal to G of R, G, B input.
2. Connect oscilloscope to IC413 pin ⑥.
3. Adjust RV901 so that pulse width is 0.4±0.05 μ S.



6-3. E Board Adjustment

(Component side)

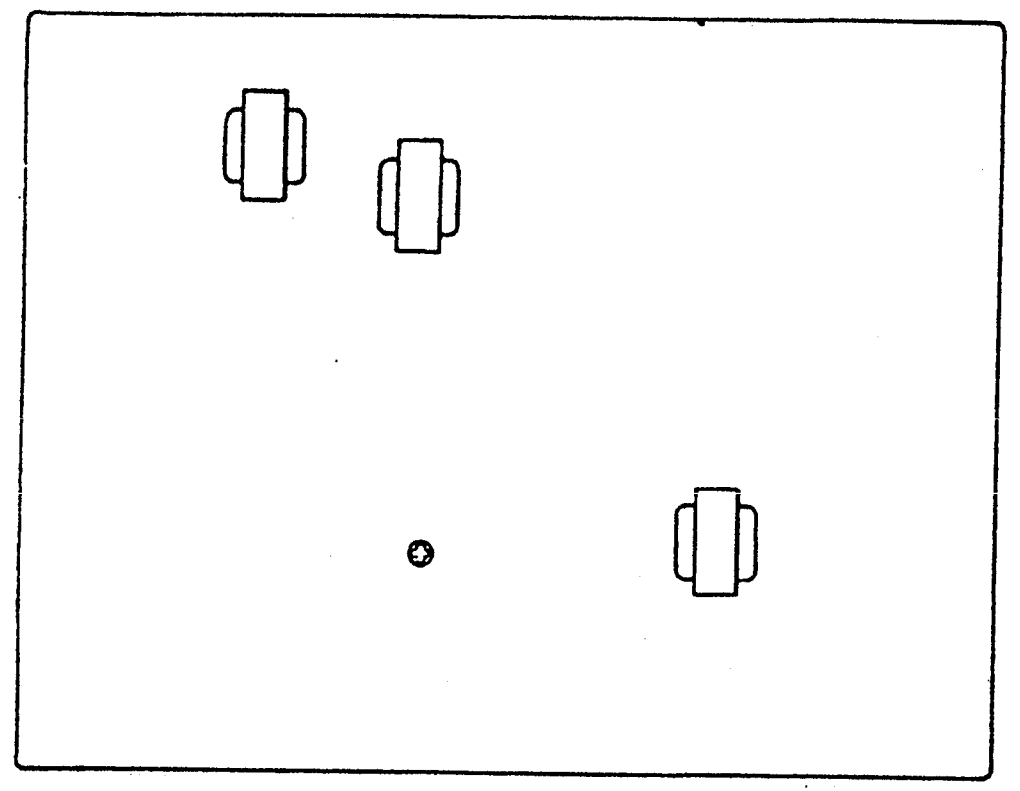

H.SIZE Adjustment (RV104)

1. Input monoscope signal.
2. Press remote commander [SIZE] key, and then arrow key ▶ to set H. SIZE at maximum.
3. Turn RV104 and adjust to frame 15.

6-4. DA Board Adjustment

(Component side)

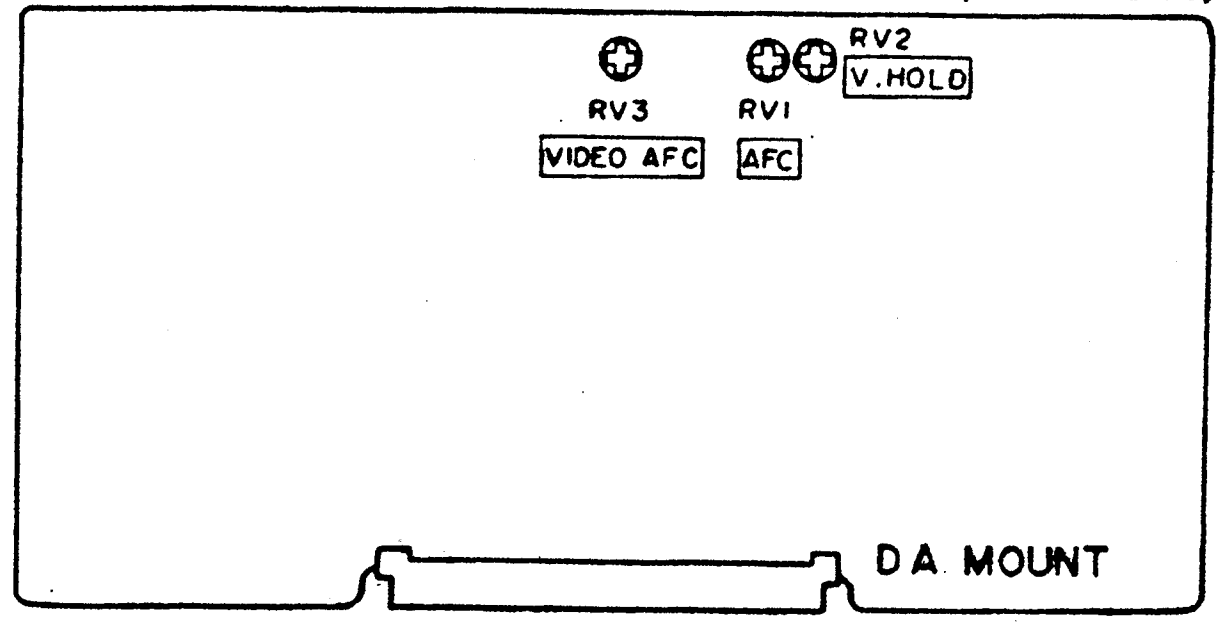

AFC Adjustment (RV1)

1. Input approximately 30KHz R, G, B signal.
2. Turn RV1 full clockwise.
3. Press S1 (HD OFF) switch and set at image free running state.
4. Turn RV1 counter clockwise a little at a time and stop image.
5. Connect TP2 to frequency counter.
6. Read frequency counter indicated value while pressing S1 switch.
   The value is f1.
7. Turn RV1 full counter clockwise.
8. Press S1 switch and set at image free running state.
9. Turn RV1 to clockwise a little at a time and stop image.
10. Read frequency counter indicated value while pressing S1 switch.
    The value is f2.
11. Adjust $\frac{f1+f2}{2}$ ±200Hz value with RV1.

Video AFC Adjustment (RV3)

1. Input video signal.(fH=15.75KHz, FV=60Hz)
2. Turn RV3 (video AFC) full clockwise.
3. Press S1 (HD OFF) switch and set at image free running state.
4. Turn RV3 to left a little at a time and stop image.
5. Connect frequency counter to TP2.
6. Read frequency counter indicated value while pressing S1 switch.
   The value is f1.
7. Turn RV3 full counter clockwise.
8. Press S1 and set at image free running state.
9. Turn RV3 right a little at a time and stop image.
10. Read frequency counter indicated value while pressing S1.
    The value is f12.
11. Adjust to $\frac{f1+f2}{2}$ ±200Hz with RV3.

V HOLD Adjustment (RV2)

1. Set at No-signal state.
2. Press remote commander PAGE key and display PAGE4.
3. Press S2 (V SYNC OFF).
4. Adjust until screen display fV is 28.0±0.1Hz with RV2 (V HOLD).

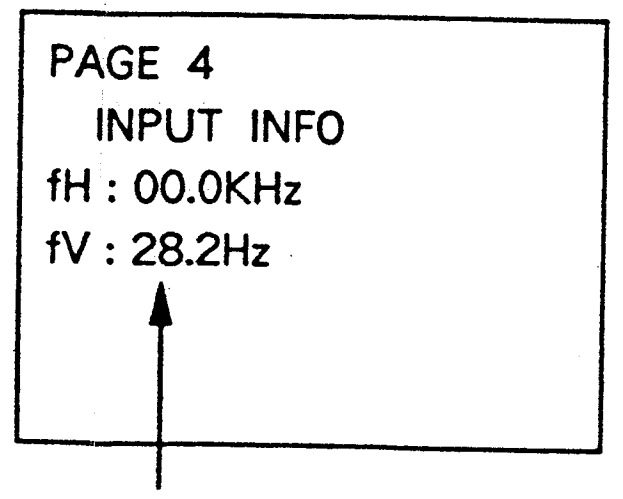
PAGE 4
INPUT INFO
fH : 00.0KHz
fV : 28.2Hz

Adjust to RV2 28.0±0.1Hz

SECTION 7
DIAGRAMS

7-1. CIRCUIT BOARD LOCATION

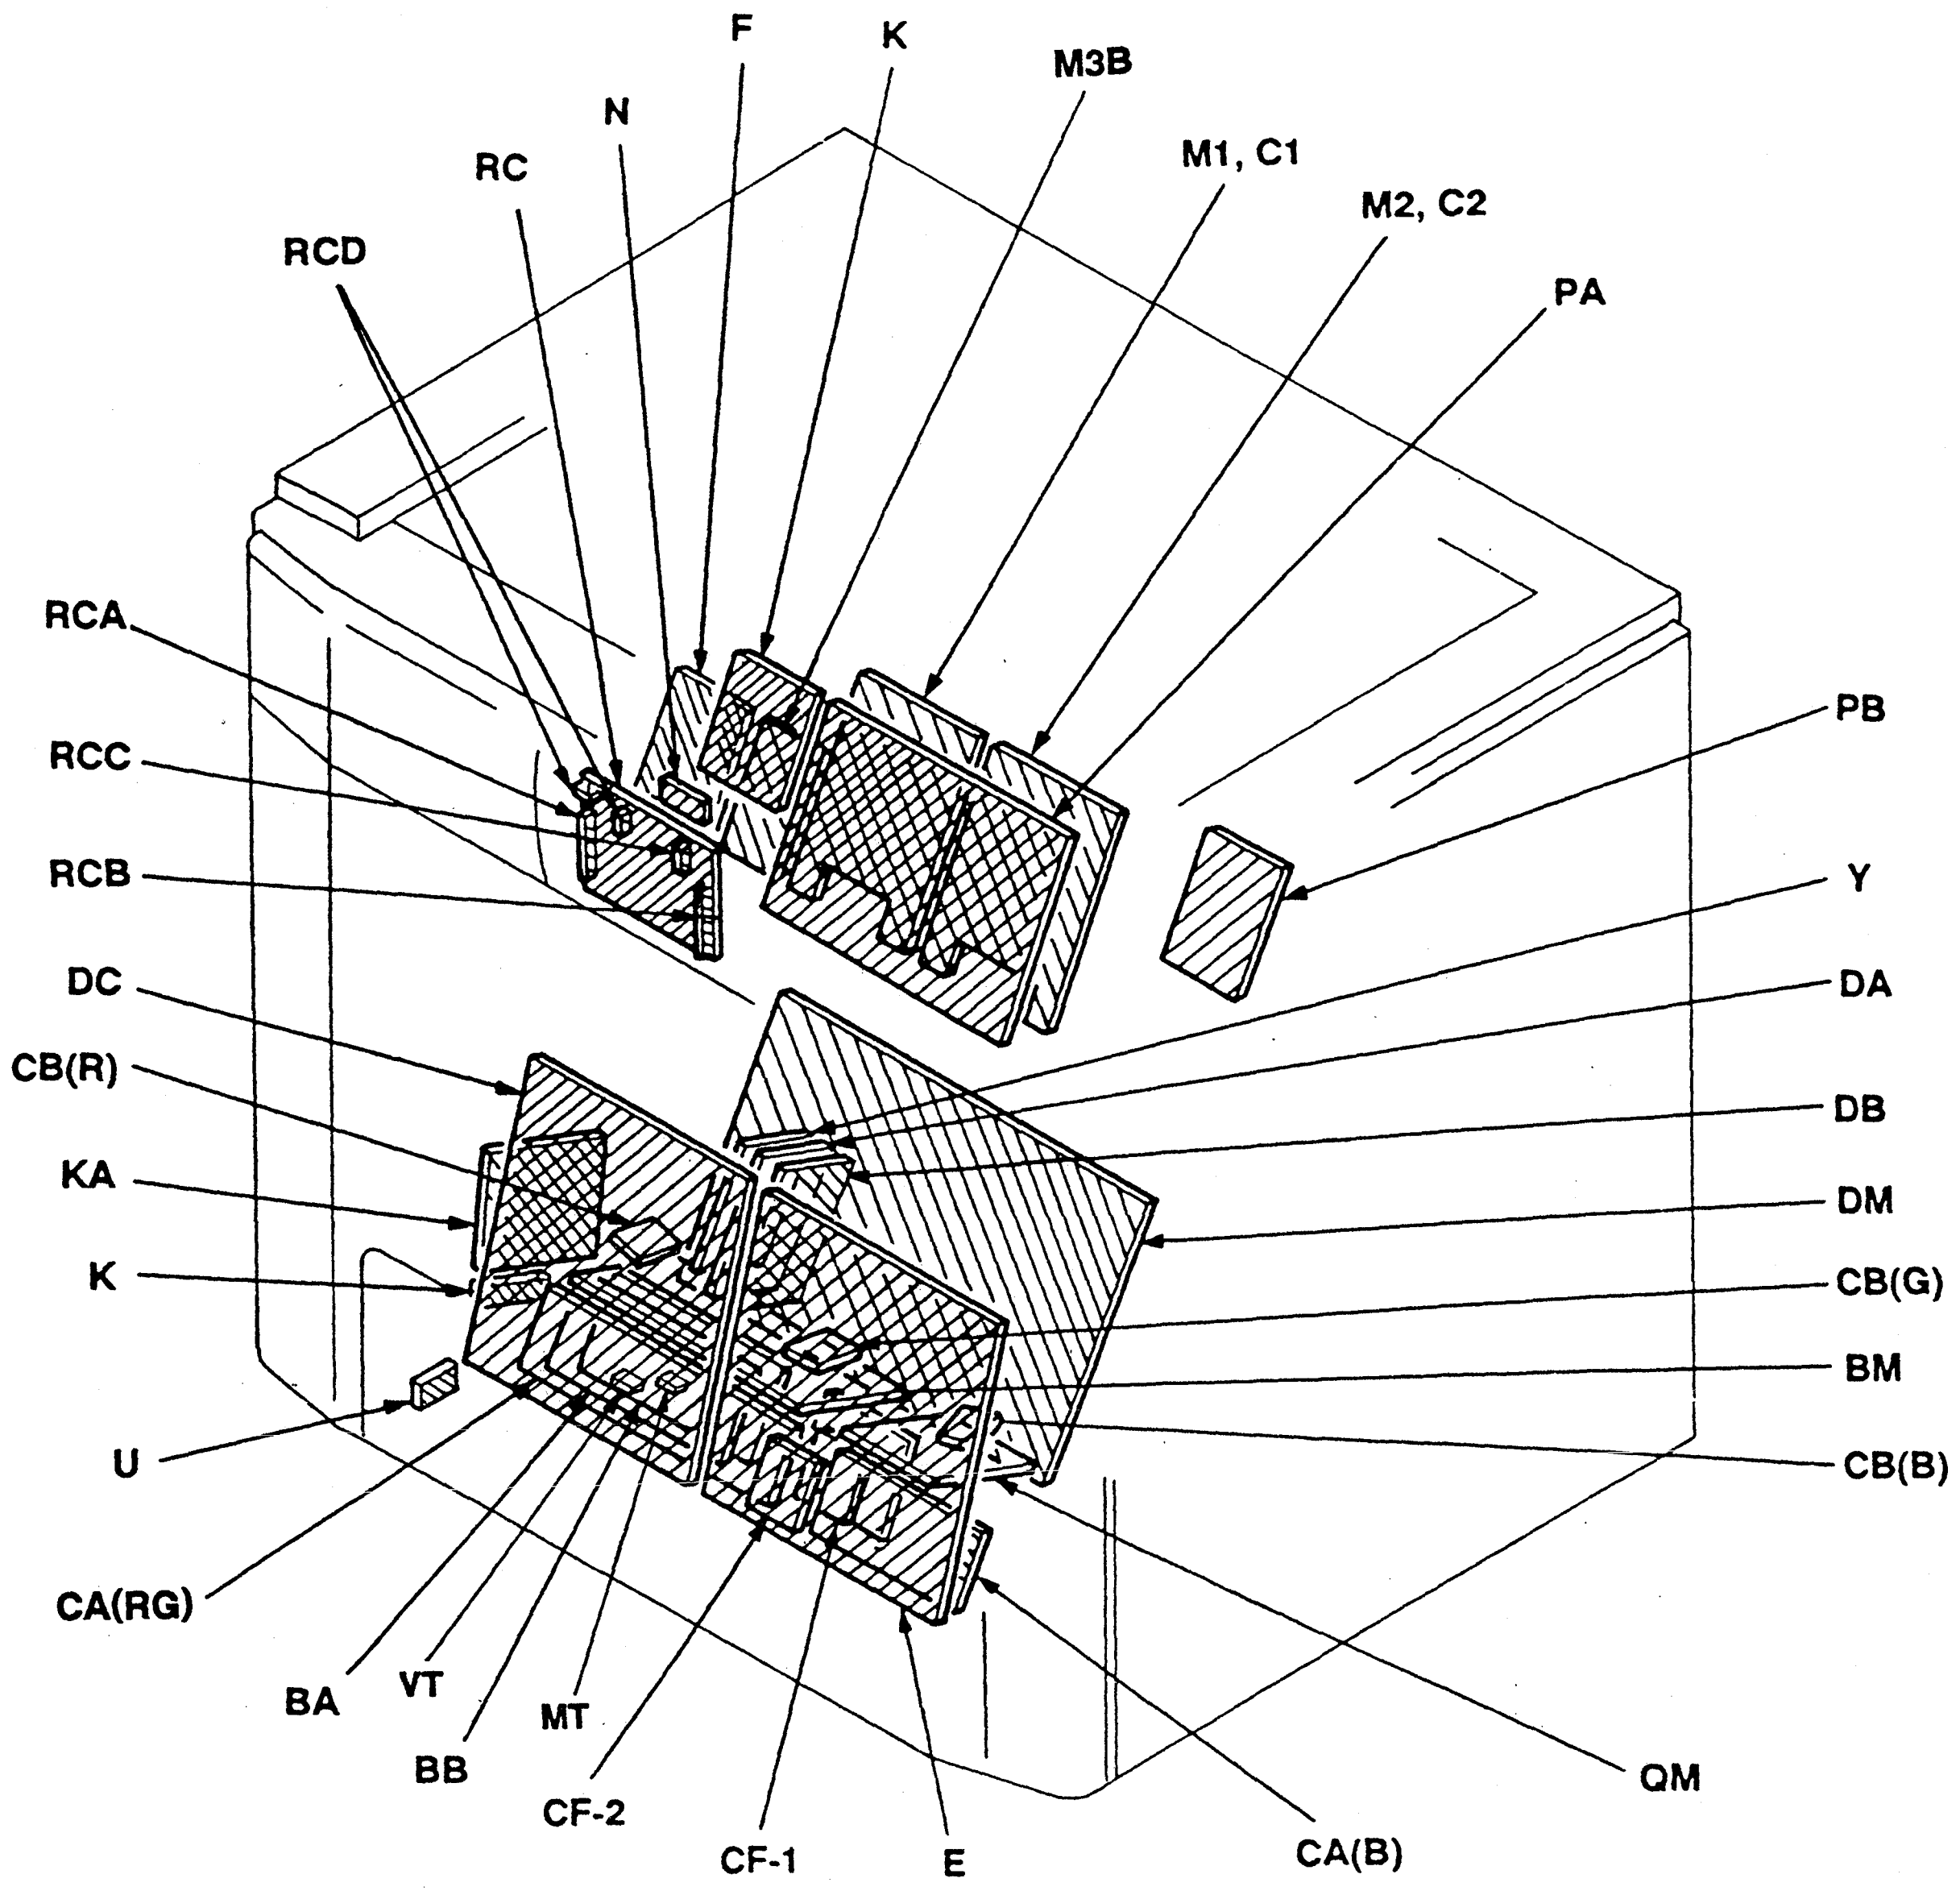

7-2. QUICK REFERENCE

BOARD ITEM	BA	BB	BM	QM	CA(B)	CA(RG)	CB(R)	CB(G)	CA(B)	CF-1
CIRCUIT BOARD GUIDE TO OPERATION	61	66	–	–	–	–	–	–	–	–
ADJUSTMENT	100	102	–	–	–	–	–	–	–	–
BLOCK DIAGRAM	107	106	105	106	116	115	116	116	116	115
PRINTED WIRING BOARD	121	135	189	189	193	199	203	203	204	206
SCHEMATIC DIAGRAM	125	131	186	188	191	196	202	202	203	205
ELECTRICAL PARTS LIST	253	257	253	266	271	268	267	268	268	267

BOARD ITEM	CF-2	DA	DB	DC	DM	E	F	KA	KB	N
CIRCUIT BOARD GUIDE TO OPERATION	–	74	78	80	–	85	–	87	89	–
ADJUSTMENT	–	102	–	–	–	102	–	–	–	–
BLOCK DIAGRAM	115	111	111	112	112	113	114	114	115	109
PRINTED WIRING BOARD	206	145	155	167	175	183	209	210	211	210
SCHEMATIC DIAGRAM	205	140	151	161	169	177	208	207	208	208
ELECTRICAL PARTS LIST	267	273	278	282	273	286	266	291	292	292

BOARD ITEM	U	K	PA	PB	RC	RCA	RCB	RCC	RCD	Y
CIRCUIT BOARD GUIDE TO OPERATION	–	81	83	83	–	–	–	–	–	82
ADJUSTMENT	–	–	–	–	–	–	–	–	–	–
BLOCK DIAGRAM	114	115	115	116	109	–	–	–	–	110
PRINTED WIRING BOARD	209	214	212	212	229	230	230	229	229	223
SCHEMATIC DIAGRAM	208	217	215	215	231	231	231	231	231	219
ELECTRICAL PARTS LIST	290	290	264	263	266	267	267	267	267	293

BOARD ITEM	C1	C2	M1	M2	M3B	MT	VT
CIRCUIT BOARD GUIDE TO OPERATION	89	89	89	89	–	–	–
ADJUSTMENT	–	–	–	–	–	–	–
BLOCK DIAGRAM	113	114	113	114	113	105	108
PRINTED WIRING BOARD	239	245	237	243	239	135	123
SCHEMATIC DIAGRAM235	235	241	234	240	234	131	127
ELECTRICAL PARTS LIST	297	299	295	298	–	300	300

7-3. BLOCK DIAGRAMS

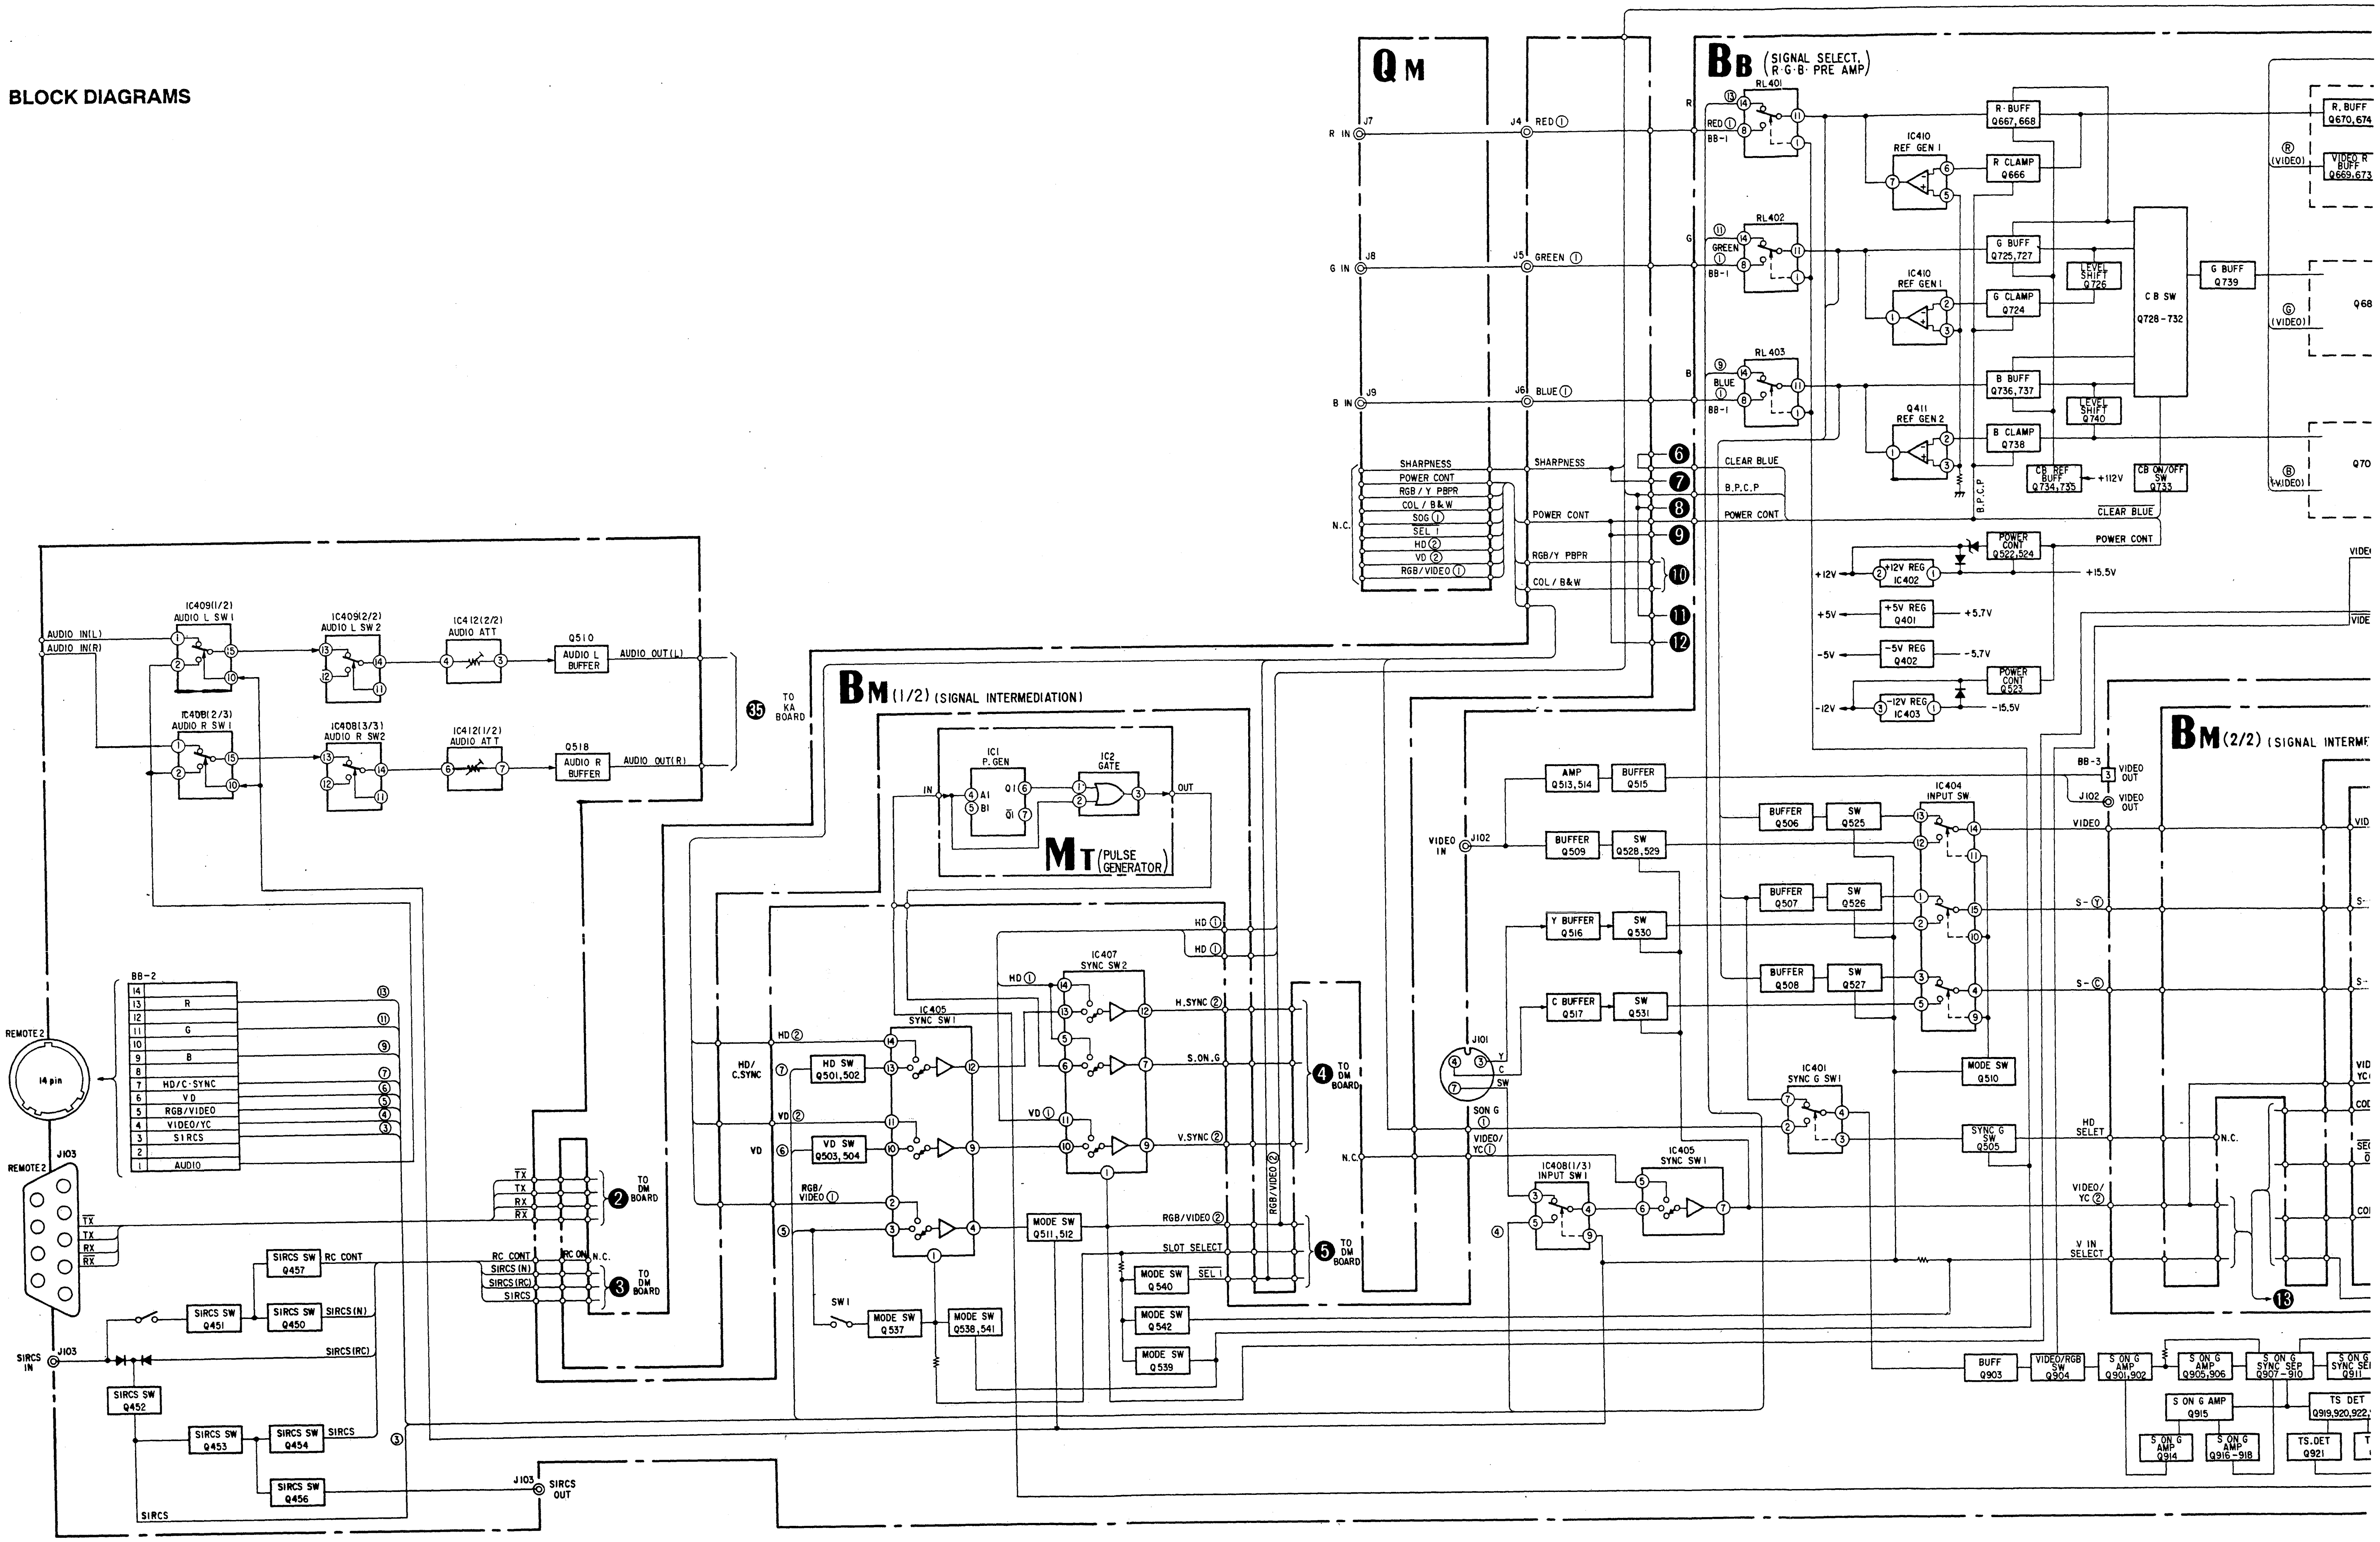
QM
BB (SIGNAL SELECT, R·G·B· PRE AMP)
BM (1/2) (SIGNAL INTERMEDIATION)
BM (2/2) (SIGNAL INTERMEDIATION)
MT (PULSE GENERATOR)
R IN
G IN
B IN
J7
J8
J9
J4 RED ①
J5 GREEN ①
J6 BLUE ①
RL401
RL402
RL403
IC410 REF GEN 1
Q411 REF GEN 2
R·BUFF Q667,668
R CLAMP Q666
G BUFF Q725,727
G CLAMP Q724
B BUFF Q736,737
B CLAMP Q738
LEVEL SHIFT Q726
LEVEL SHIFT Q740
C B SW Q728-732
G BUFF Q739
R. BUFF Q670,674
VIDEO R BUFF Q669,673
CB REF BUFF Q734,735
CB ON/OFF SW Q733
CLEAR BLUE
B.P.C.P
POWER CONT
POWER CONT Q522,524
POWER CONT Q523
+12V REG IC402
+5V REG Q401
-5V REG Q402
-12V REG IC403
+15.5V
+5.7V
-5.7V
-15.5V
SHARPNESS
RGB / Y PBPR
COL / B&W
SOG ①
SEL 1
HD ②
VD ②
RGB/VIDEO ①
N.C.
AUDIO IN(L)
AUDIO IN(R)
IC409(1/2) AUDIO L SW 1
IC409(2/2) AUDIO L SW 2
IC412(2/2) AUDIO ATT
Q510 AUDIO L BUFFER
AUDIO OUT(L)
IC408(2/3) AUDIO R SW 1
IC408(3/3) AUDIO R SW2
IC412(1/2) AUDIO ATT
Q518 AUDIO R BUFFER
AUDIO OUT(R)
TO KA BOARD
IC1 P. GEN
IC2 GATE
IC405 SYNC SW 1
IC407 SYNC SW 2
HD SW Q501,502
VD SW Q503,504
MODE SW Q511,512
MODE SW Q537
MODE SW Q538,541
MODE SW Q540
MODE SW Q542
MODE SW Q539
H.SYNC ②
S.ON.G
V.SYNC ②
RGB/VIDEO ②
SLOT SELECT
SEL 1
TO DM BOARD
REMOTE 2
14 pin
BB-2
HD/C-SYNC
VD
RGB/VIDEO
VIDEO/YC
SIRCS
AUDIO
J103
TX
RX
RC CONT
SIRCS SW Q457
SIRCS SW Q451
SIRCS SW Q450
SIRCS SW Q452
SIRCS SW Q453
SIRCS SW Q454
SIRCS SW Q456
SIRCS IN
SIRCS OUT
VIDEO IN
J102
AMP Q513,514
BUFFER Q515
BUFFER Q509
SW Q528,529
Y BUFFER Q516
SW Q530
C BUFFER Q517
SW Q531
J101
IC408(1/3) INPUT SW 1
IC405 SYNC SW 1
BUFFER Q506
SW Q525
BUFFER Q507
SW Q526
BUFFER Q508
SW Q527
IC404 INPUT SW
IC401 SYNC G SW 1
MODE SW Q510
SYNC G SW Q505
VIDEO OUT
HD SELECT
V IN SELECT
BUFF Q903
VIDEO/RGB SW Q904
S ON G AMP Q901,902
S ON G AMP Q905,906
S ON G SYNC SEP Q907-910
S ON G AMP Q915
S ON G AMP Q914
S ON G AMP Q916-918
TS DET Q919,920,922
TS.DET Q921

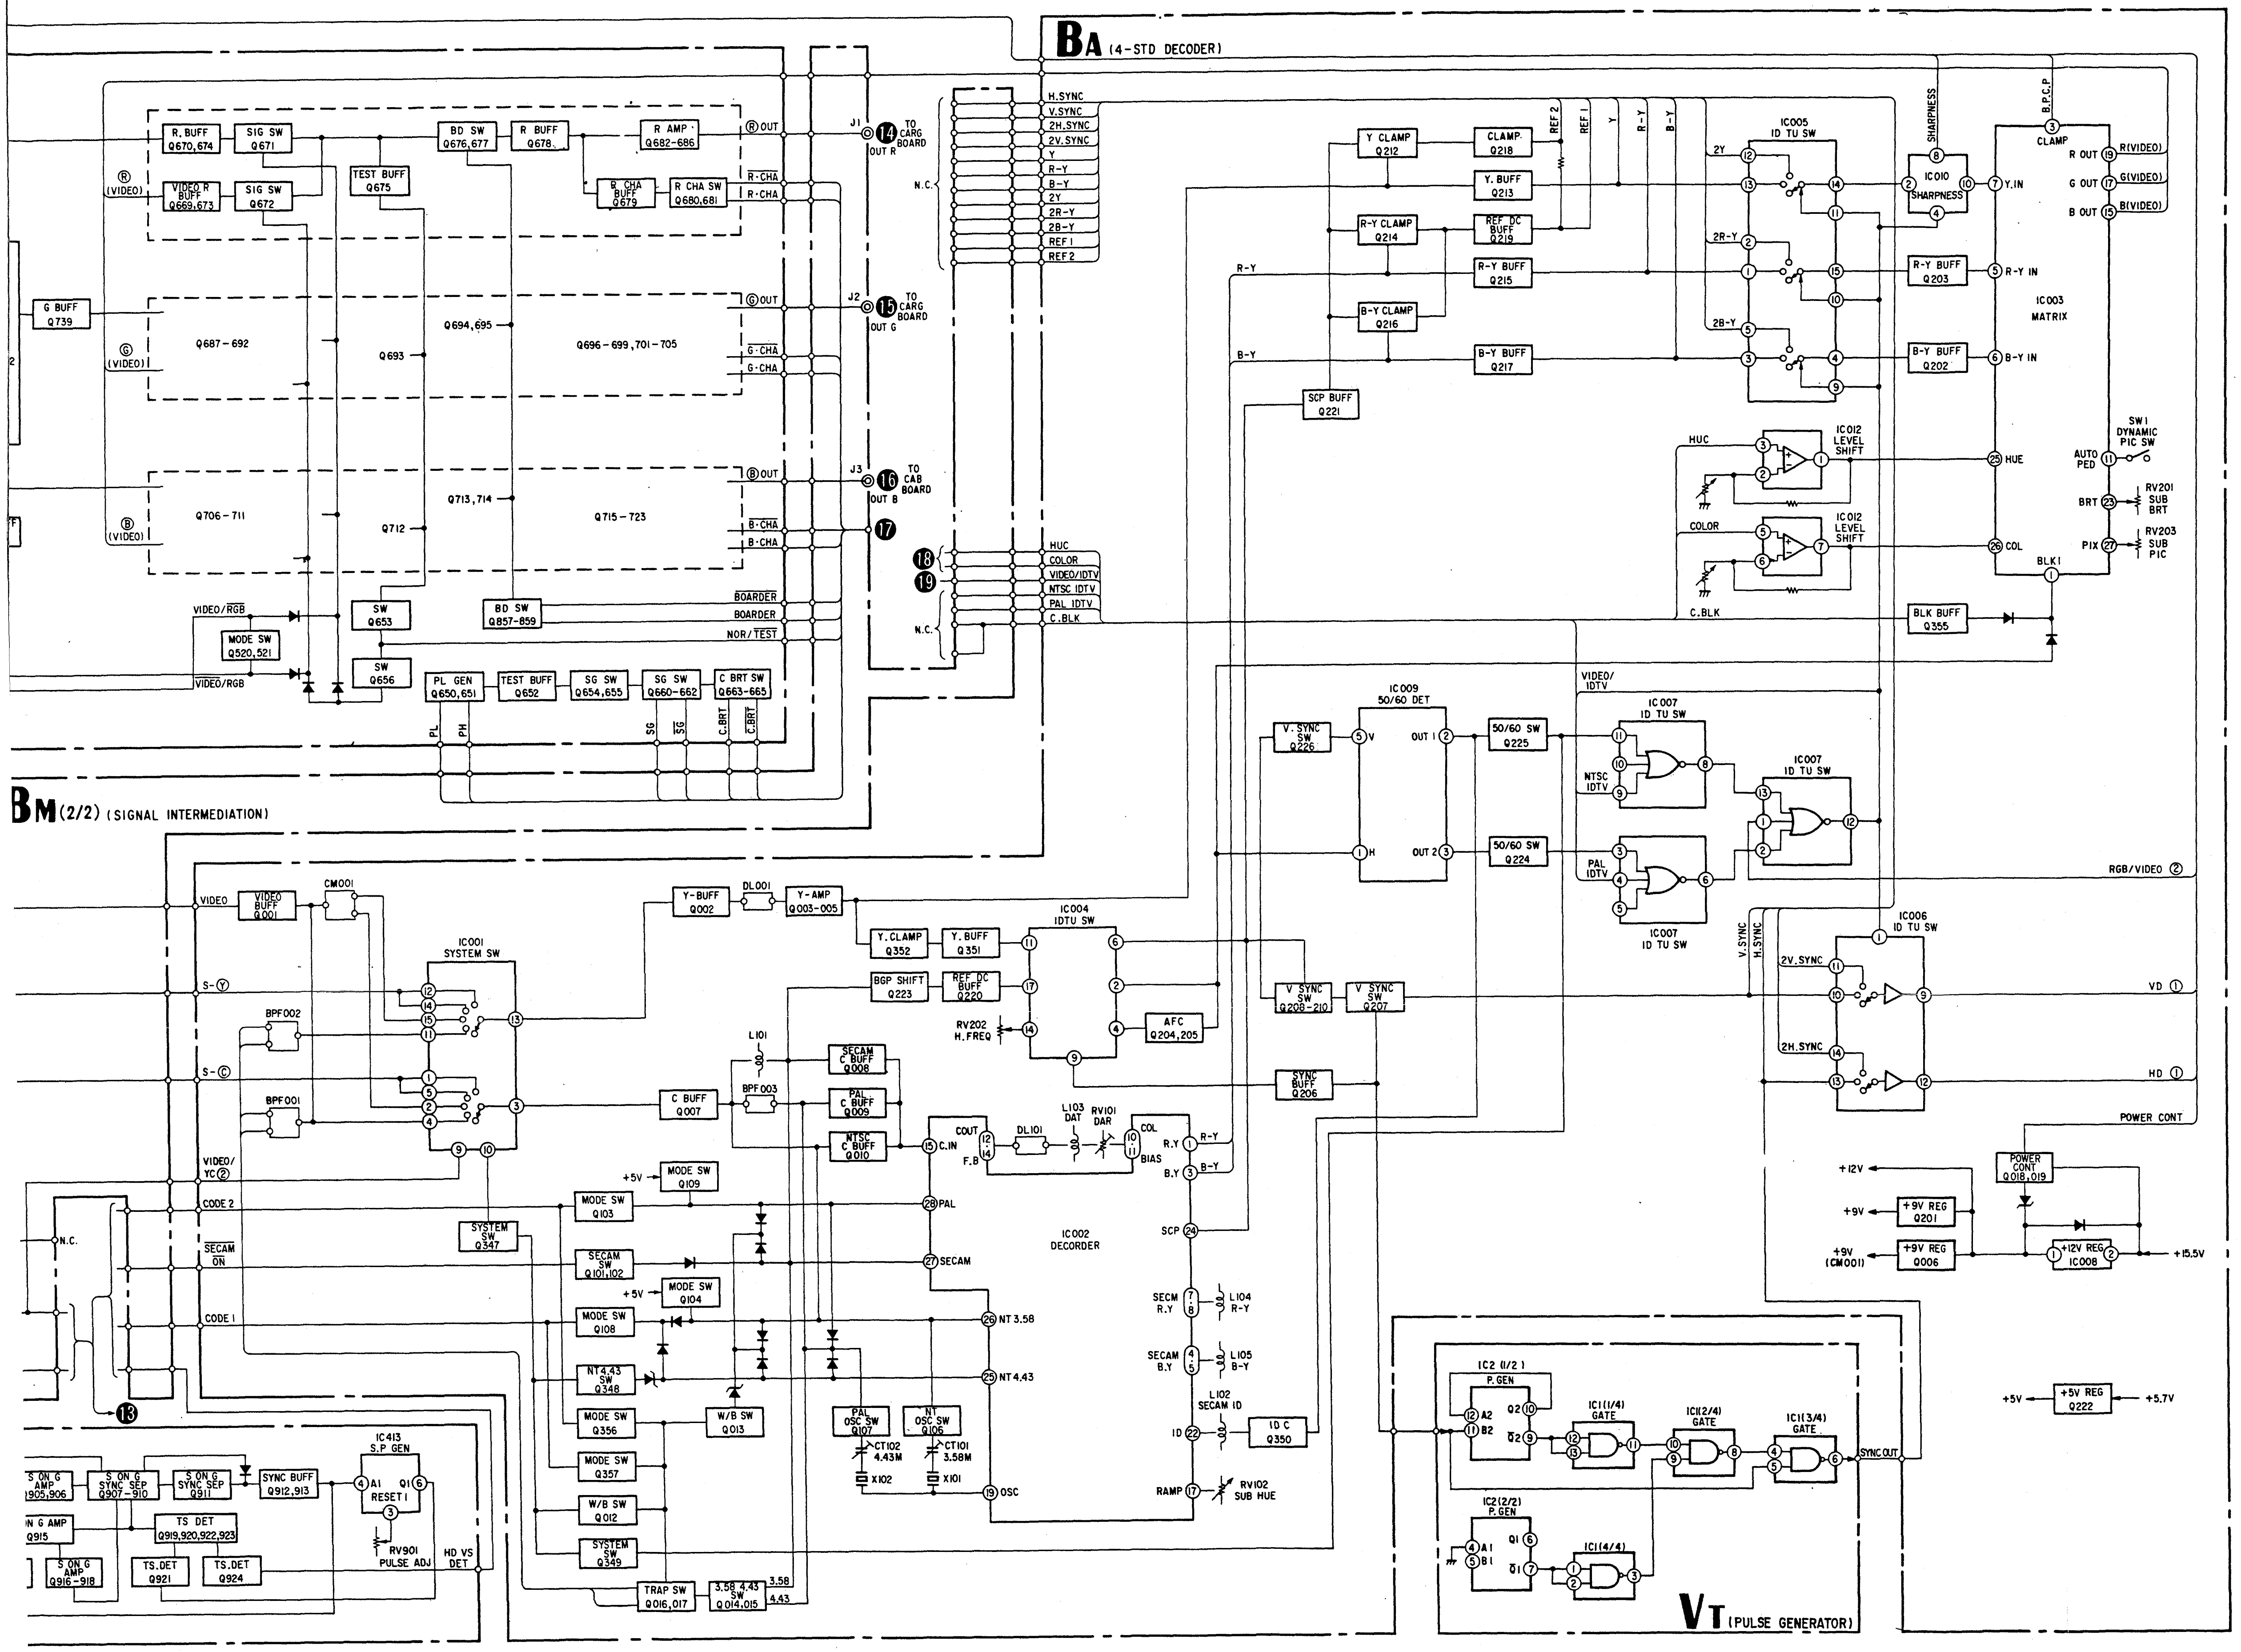
BA (4-STD DECODER)
BM (2/2) (SIGNAL INTERMEDIATION)
VT (PULSE GENERATOR)
R.BUFF Q670,674
SIG SW Q671
VIDEO R BUFF Q669,673
SIG SW Q672
TEST BUFF Q675
BD SW Q676,677
R BUFF Q678
R AMP Q682-686
R CHA BUFF Q679
R CHA SW Q680,681
R (VIDEO)
G (VIDEO)
B (VIDEO)
G BUFF Q739
Q687-692
Q693
Q694,695
Q696-699,701-705
Q706-711
Q712
Q713,714
Q715-723
R OUT
G OUT
B OUT
R-CHA
G-CHA
B-CHA
J1
J2
J3
OUT R
OUT G
OUT B
TO CARG BOARD
TO CAB BOARD
N.C.
⑭
⑮
⑯
⑰
⑱
⑲
BOARDER
NOR/TEST
VIDEO/RGB
MODE SW Q520,521
SW Q653
SW Q656
BD SW Q857-859
PL GEN Q650,651
TEST BUFF Q652
SG SW Q654,655
SG SW Q660-662
C BRT SW Q663-665
PL
PH
SG
C.BRT
H.SYNC
V.SYNC
2H.SYNC
2V.SYNC
Y
R-Y
B-Y
2Y
2R-Y
2B-Y
REF 1
REF 2
HUC
COLOR
VIDEO/IDTV
NTSC IDTV
PAL IDTV
C.BLK
Y CLAMP Q212
CLAMP Q218
Y.BUFF Q213
R-Y CLAMP Q214
REF DC BUFF Q219
R-Y BUFF Q215
B-Y CLAMP Q216
B-Y BUFF Q217
SCP BUFF Q221
IC005 ID TU SW
SHARPNESS
IC010 SHARPNESS
B.P.C.P
CLAMP
R OUT R(VIDEO)
G OUT G(VIDEO)
B OUT B(VIDEO)
Y.IN
R-Y BUFF Q203
R-Y IN
IC003 MATRIX
B-Y BUFF Q202
B-Y IN
IC012 LEVEL SHIFT
HUE
COL
SW1 DYNAMIC PIC SW
AUTO PED
BRT
PIX
RV201 SUB BRT
RV203 SUB PIC
BLK1
BLK BUFF Q355
C.BLK
VIDEO/IDTV
IC009 50/60 DET
V.SYNC SW Q226
OUT 1
OUT 2
50/60 SW Q225
50/60 SW Q224
IC007 ID TU SW
NTSC IDTV
PAL IDTV
RGB/VIDEO ②
IC006 ID TU SW
2V.SYNC
2H.SYNC
VD ①
HD ①
V.SYNC
H.SYNC
V SYNC SW Q208-210
V SYNC SW Q207
SYNC BUFF Q206
POWER CONT
POWER CONT Q018,019
+12V
+9V
+9V REG Q201
+9V (CM001)
+9V REG Q006
+12V REG IC008
+15.5V
+5V
+5V REG Q222
+5.7V
VIDEO
VIDEO BUFF Q001
CM001
Y-BUFF Q002
DL001
Y-AMP Q003-005
IC001 SYSTEM SW
S-Ⓨ
S-Ⓒ
BPF002
BPF001
VIDEO/YC②
Y.CLAMP Q352
Y.BUFF Q351
BGP SHIFT Q223
REF DC BUFF Q220
IC004 IDTU SW
RV202 H.FREQ
AFC Q204,205
C BUFF Q007
BPF003
L101
SECAM C BUFF Q008
PAL C BUFF Q009
NTSC C BUFF Q010
COUT
C.IN
F.B
DL101
L103 DAT
RV101 DAR
COL
BIAS
R.Y
B.Y
R-Y
B-Y
PAL
SECAM
NT3.58
NT4.43
OSC
IC002 DECORDER
SCP
SECM R.Y
L104 R-Y
SECAM B.Y
L105 B-Y
L102 SECAM ID
ID
ID C Q350
RAMP
RV102 SUB HUE
+5V
MODE SW Q109
MODE SW Q103
SYSTEM SW Q347
SECAM SW Q101,102
MODE SW Q104
MODE SW Q108
NT4.43 SW Q348
MODE SW Q356
W/B SW Q013
MODE SW Q357
W/B SW Q012
SYSTEM SW Q349
PAL OSC SW Q107
NT OSC SW Q106
CT102 4.43M
CT101 3.58M
X102
X101
TRAP SW Q016,017
3.58 4.43 SW Q014,015
3.58
4.43
CODE 2
SECAM ON
CODE 1
N.C.
⑬
S ON G AMP Q905,906
S ON G SYNC SEP Q907-910
S ON G SYNC SEP Q911
SYNC BUFF Q912,913
IC413 S.P GEN
RESET 1
RV901 PULSE ADJ
HD VS DET
N G AMP Q915
TS DET Q919,920,922,923
S ON G AMP Q916-918
TS.DET Q921
TS.DET Q924
IC2 (1/2) P.GEN
IC2 (2/2) P.GEN
IC1(1/4)
IC1(2/4) GATE
IC1(3/4) GATE
IC1(4/4)
SYNC OUT

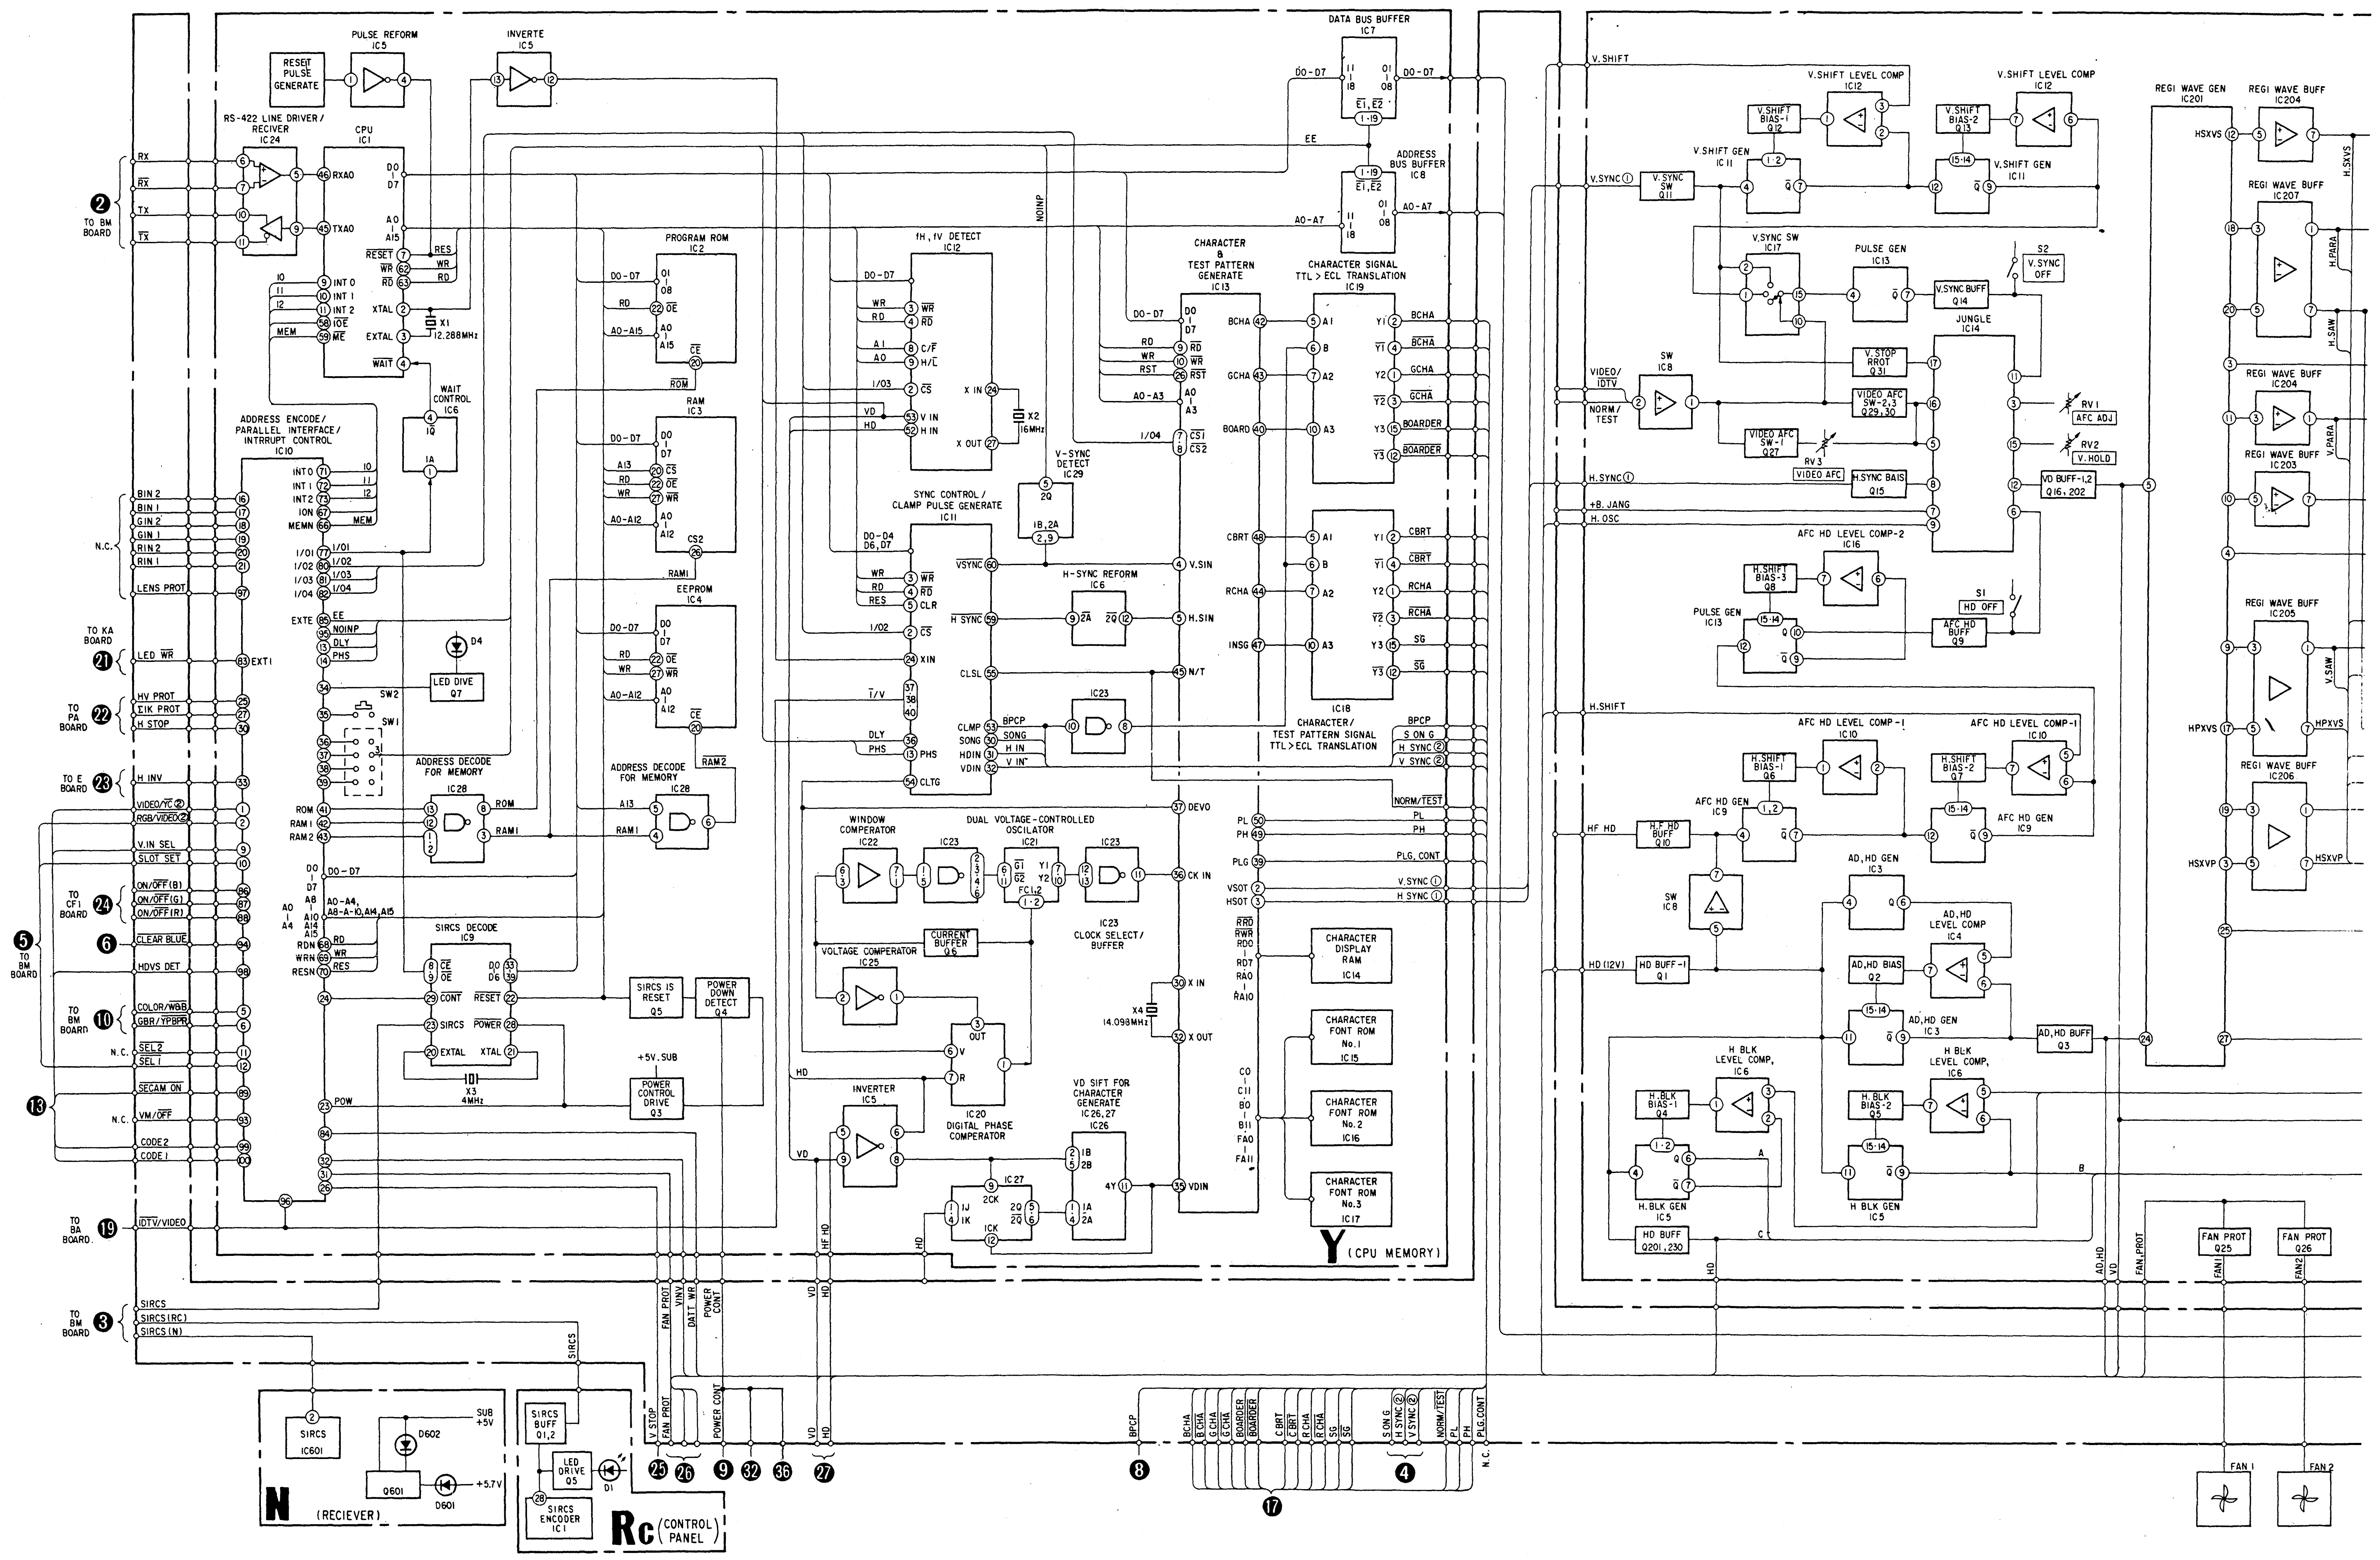
RESET PULSE GENERATE
PULSE REFORM IC5
INVERTE IC5
RS-422 LINE DRIVER / RECIVER IC24
CPU IC1
TO BM BOARD
ADDRESS ENCODE / PARALLEL INTERFACE / INTRRUPT CONTROL IC10
PROGRAM ROM IC2
RAM IC3
EEPROM IC4
WAIT CONTROL IC6
LED DIVE Q7
ADDRESS DECODE FOR MEMORY IC28
SIRCS DECODE IC9
SIRCS RESET Q5
POWER DOWN DETECT Q4
POWER CONTROL DRIVE Q3
X1 12.288MHz
X3 4MHz
fH, 1V DETECT IC12
X2 16MHz
V-SYNC DETECT IC29
SYNC CONTROL / CLAMP PULSE GENERATE IC11
H-SYNC REFORM IC6
IC23
WINDOW COMPERATOR IC22
DUAL VOLTAGE-CONTROLLED OSCILATOR IC21
VOLTAGE COMPERATOR IC25
CURRENT BUFFER Q6
IC23 CLOCK SELECT / BUFFER
IC20 DIGITAL PHASE COMPERATOR
INVERTER IC5
VD SIFT FOR CHARACTER GENERATE IC26, 27
X4 14.098MHz
DATA BUS BUFFER IC7
ADDRESS BUS BUFFER IC8
CHARACTER & TEST PATTERN GENERATE IC13
CHARACTER SIGNAL TTL > ECL TRANSLATION IC19
IC18 CHARACTER / TEST PATTERN SIGNAL TTL > ECL TRANSLATION
CHARACTER DISPLAY RAM IC14
CHARACTER FONT ROM No.1 IC15
CHARACTER FONT ROM No.2 IC16
CHARACTER FONT ROM No.3 IC17
Y (CPU MEMORY)
SIRCS IC601
Q601
D601
D602
N (RECIEVER)
SIRCS BUFF Q1,2
LED DRIVE Q5
SIRCS ENCODER IC1
Rc (CONTROL PANEL)
V.SHIFT
V.SHIFT LEVEL COMP IC12
V.SHIFT BIAS-1 Q12
V.SHIFT BIAS-2 Q13
V.SHIFT GEN IC11
V.SYNC SW Q11
V.SYNC SW IC17
PULSE GEN IC13
S2 V.SYNC OFF
V.SYNC BUFF Q14
JUNGLE IC14
SW IC8
V.STOP RROT Q31
VIDEO AFC SW-2,3 Q29,30
VIDEO AFC SW-1 Q27
RV3 VIDEO AFC
H.SYNC BAIS Q15
RV1 AFC ADJ
RV2 V.HOLD
VD BUFF-1,2 Q16, 202
AFC HD LEVEL COMP-2 IC16
H.SHIFT BIAS-3 Q8
S1 HD OFF
AFC HD BUFF Q9
AFC HD LEVEL COMP-1 IC10
H.SHIFT BIAS-1 Q6
H.SHIFT BIAS-2 Q7
AFC HD GEN IC9
H.F HD BUFF Q10
SW IC8
AD, HD GEN IC3
AD, HD LEVEL COMP IC4
AD, HD BIAS Q2
AD, HD BUFF Q3
HD BUFF-1 Q1
H BLK LEVEL COMP. IC6
H.BLK BIAS-1 Q4
H.BLK BIAS-2 Q5
H.BLK GEN IC5
HD BUFF Q201, 230
REGI WAVE GEN IC201
REGI WAVE BUFF IC204
REGI WAVE BUFF IC207
REGI WAVE BUFF IC203
REGI WAVE BUFF IC205
REGI WAVE BUFF IC206
FAN PROT Q25
FAN PROT Q26
FAN 1
FAN 2
TO KA BOARD
TO PA BOARD
TO E BOARD
TO CFI BOARD
TO BM BOARD
TO BA BOARD
N.C.

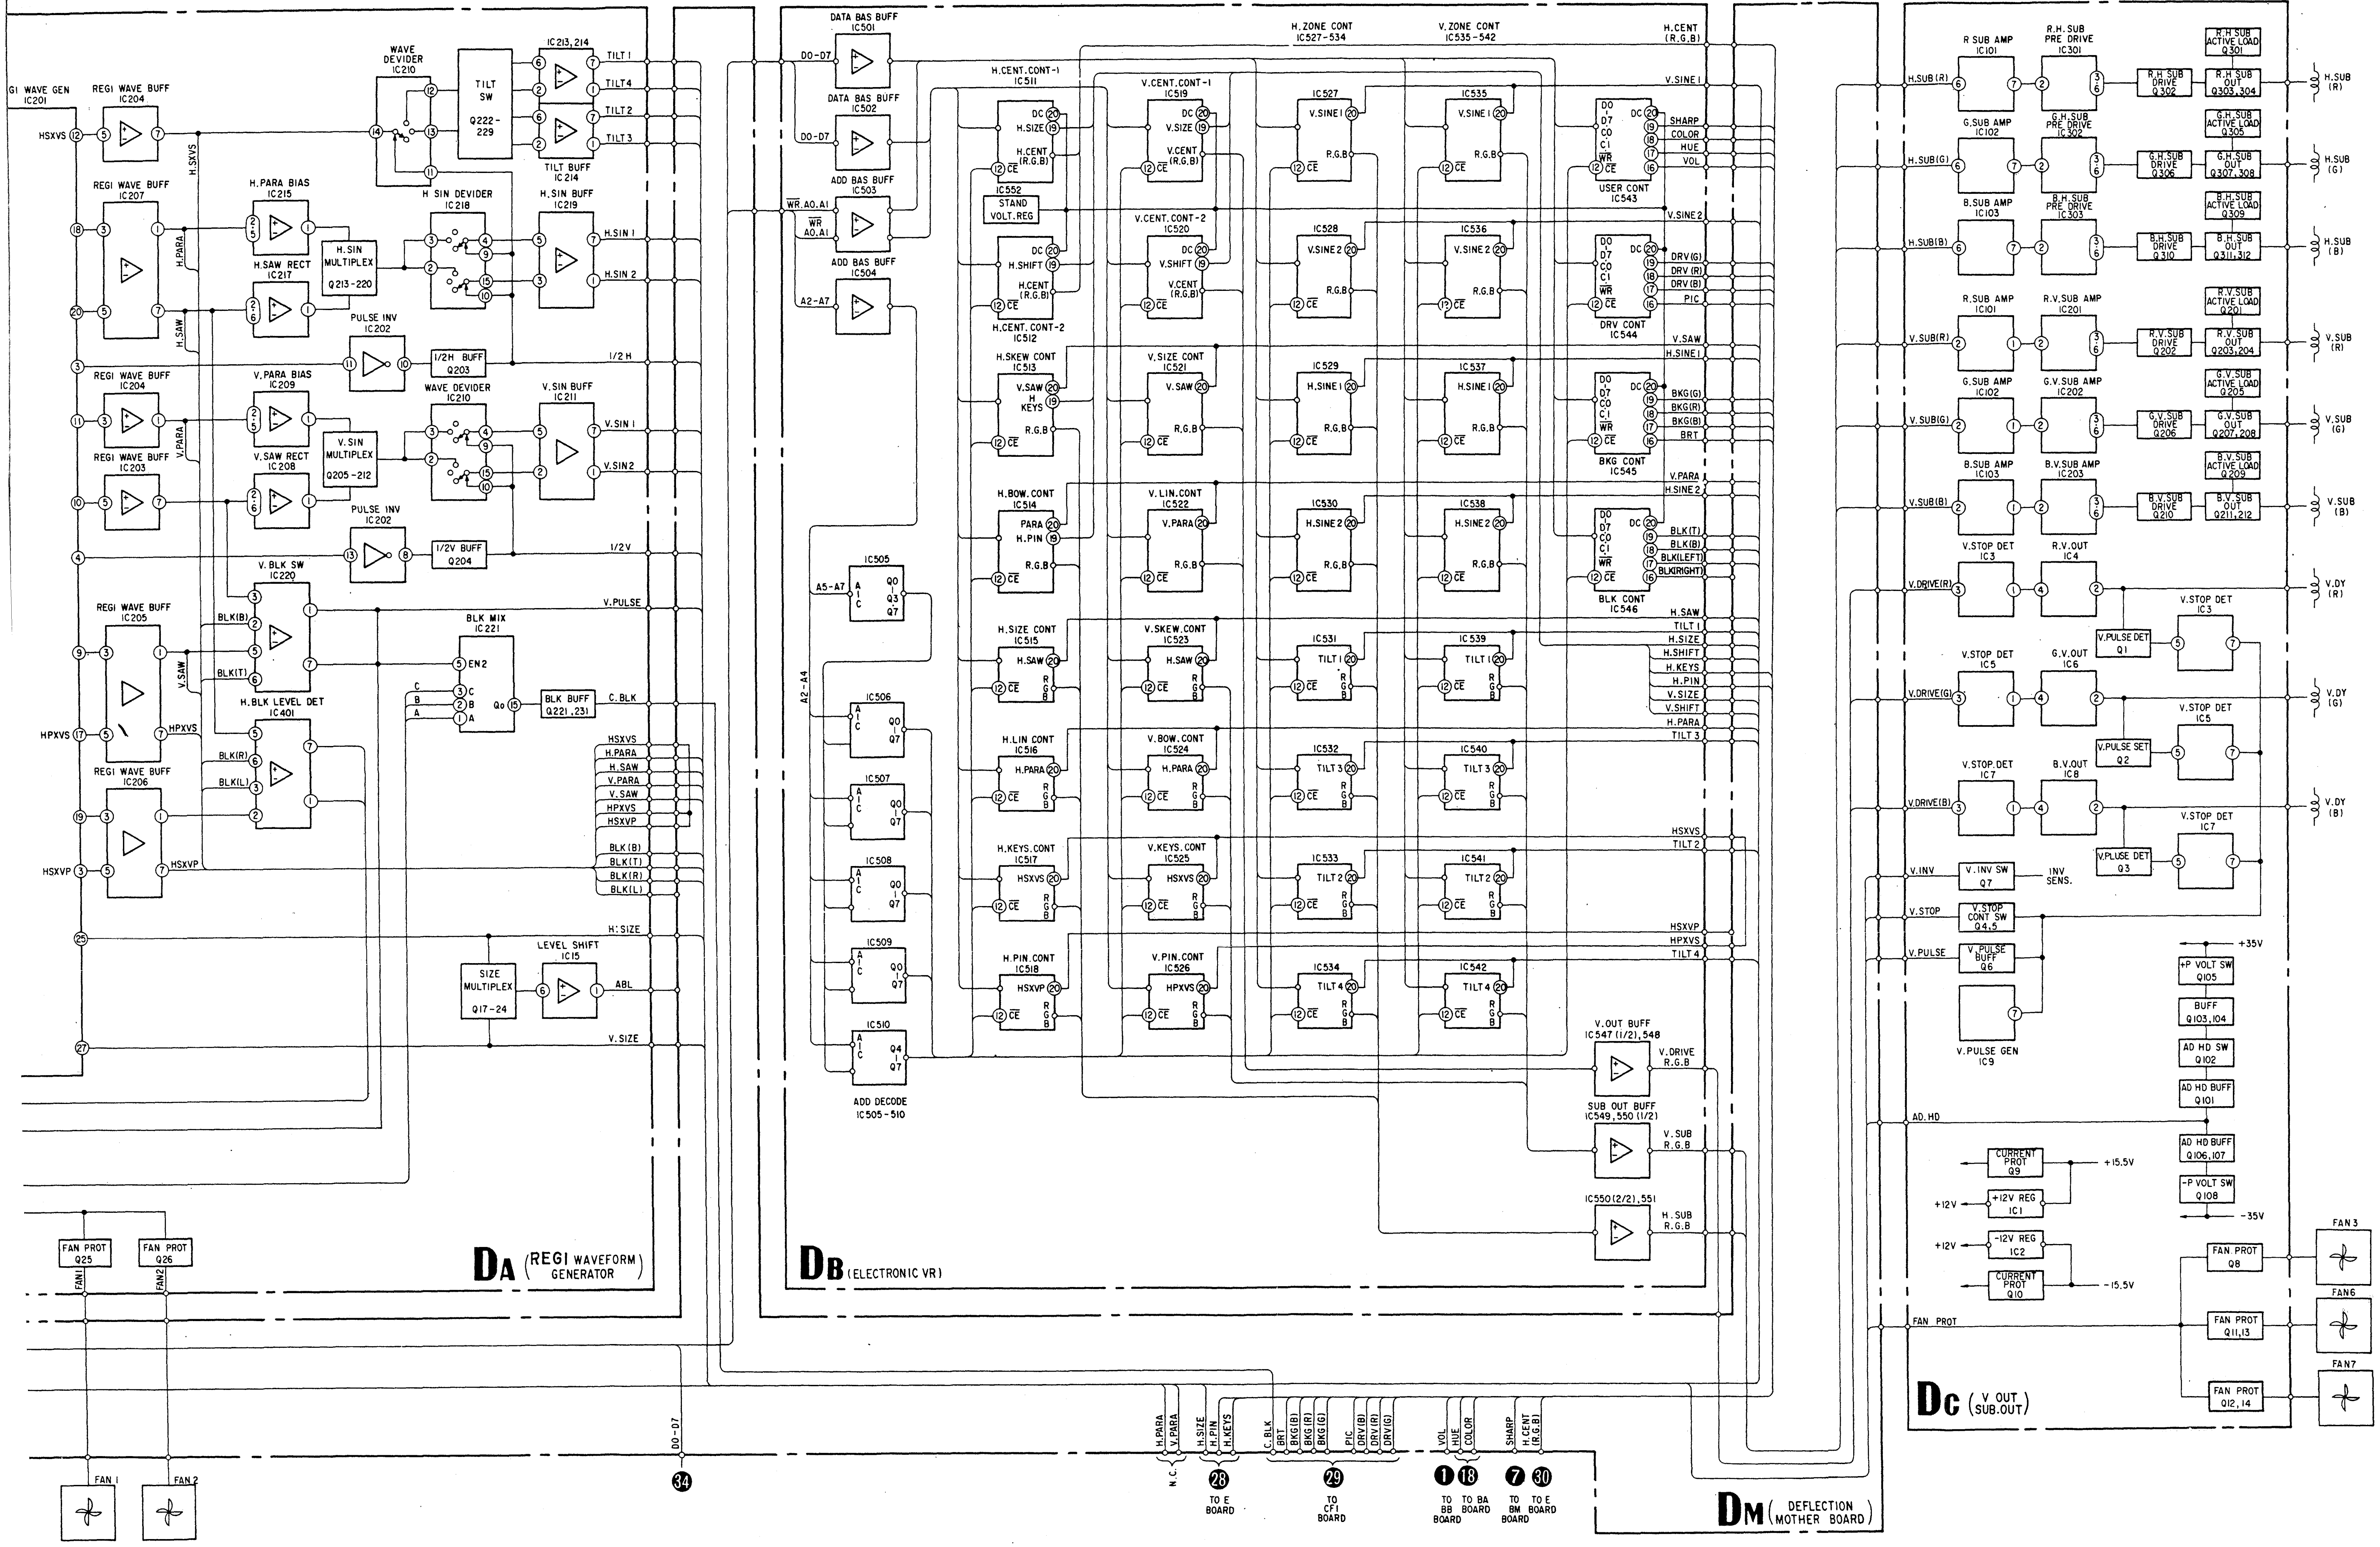
DA (REGI WAVEFORM GENERATOR)
DB (ELECTRONIC VR)
DC (V OUT SUB.OUT)
DM (DEFLECTION MOTHER BOARD)
REGI WAVE BUFF IC204
REGI WAVE BUFF IC207
REGI WAVE BUFF IC203
REGI WAVE BUFF IC205
REGI WAVE BUFF IC206
WAVE DEVIDER IC210
TILT SW Q222-229
TILT BUFF IC214
IC213, 214
H.PARA BIAS IC215
H.SAW RECT IC217
H.SIN MULTIPLEX Q213-220
H SIN DEVIDER IC218
H.SIN BUFF IC219
PULSE INV IC202
1/2H BUFF Q203
V.PARA BIAS IC209
V.SAW RECT IC208
V.SIN MULTIPLEX Q205-212
WAVE DEVIDER IC210
V.SIN BUFF IC211
1/2V BUFF Q204
V.BLK SW IC220
BLK MIX IC221
BLK BUFF Q221, 231
H.BLK LEVEL DET IC401
SIZE MULTIPLEX Q17-24
LEVEL SHIFT IC15
FAN PROT Q25
FAN PROT Q26
FAN 1
FAN 2
DATA BAS BUFF IC501
DATA BAS BUFF IC502
ADD BAS BUFF IC503
ADD BAS BUFF IC504
ADD DECODE IC505-510
H.ZONE CONT IC527-534
V.ZONE CONT IC535-542
H.CENT.CONT-1 IC511
IC552 STAND VOLT. REG
H.CENT. CONT-2 IC512
H.SKEW CONT IC513
H.BOW. CONT IC514
H.SIZE CONT IC515
H.LIN CONT IC516
H.KEYS.CONT IC517
H.PIN.CONT IC518
V.CENT.CONT-1 IC519
V.CENT.CONT-2 IC520
V.SIZE CONT IC521
V.LIN.CONT IC522
V.SKEW.CONT IC523
V.BOW. CONT IC524
V.KEYS. CONT IC525
V.PIN. CONT IC526
USER CONT IC543
DRV CONT IC544
BKG CONT IC545
BLK CONT IC546
V.OUT BUFF IC547 (1/2), 548
SUB OUT BUFF IC549, 550 (1/2)
IC550 (2/2), 551
R SUB AMP IC101
G.SUB AMP IC102
B.SUB AMP IC103
R.H.SUB PRE DRIVE IC301
G.H.SUB PRE DRIVE IC302
B.H.SUB PRE DRIVE IC303
R.V.SUB AMP IC201
G.V.SUB AMP IC202
B.V.SUB AMP IC203
V.STOP DET IC3
V.STOP DET IC5
V.STOP DET IC7
R.V.OUT IC4
G.V.OUT IC6
B.V.OUT IC8
V.PULSE DET Q1
V.PULSE SET Q2
V.PLUSE DET Q3
V.INV SW Q7
INV SENS.
V.STOP CONT SW Q4,5
V.PULSE BUFF Q6
V.PULSE GEN IC9
+P VOLT SW Q105
BUFF Q103, 104
AD HD SW Q102
AD HD BUFF Q101
AD HD BUFF Q106, 107
-P VOLT SW Q108
CURRENT PROT Q9
+12V REG IC1
-12V REG IC2
CURRENT PROT Q10
FAN PROT Q8
FAN PROT Q11, 13
FAN PROT Q12, 14
FAN 3
FAN 6
FAN 7
H.SUB (R)
H.SUB (G)
H.SUB (B)
V.SUB (R)
V.SUB (G)
V.SUB (B)
V.DY (R)
V.DY (G)
V.DY (B)
+35V
-35V
+15.5V
-15.5V
+12V
D0-D7
34
28 TO E BOARD
29 TO CF1 BOARD
1 TO BB BOARD
18 TO BA BOARD
7 TO BM BOARD
30 TO E BOARD

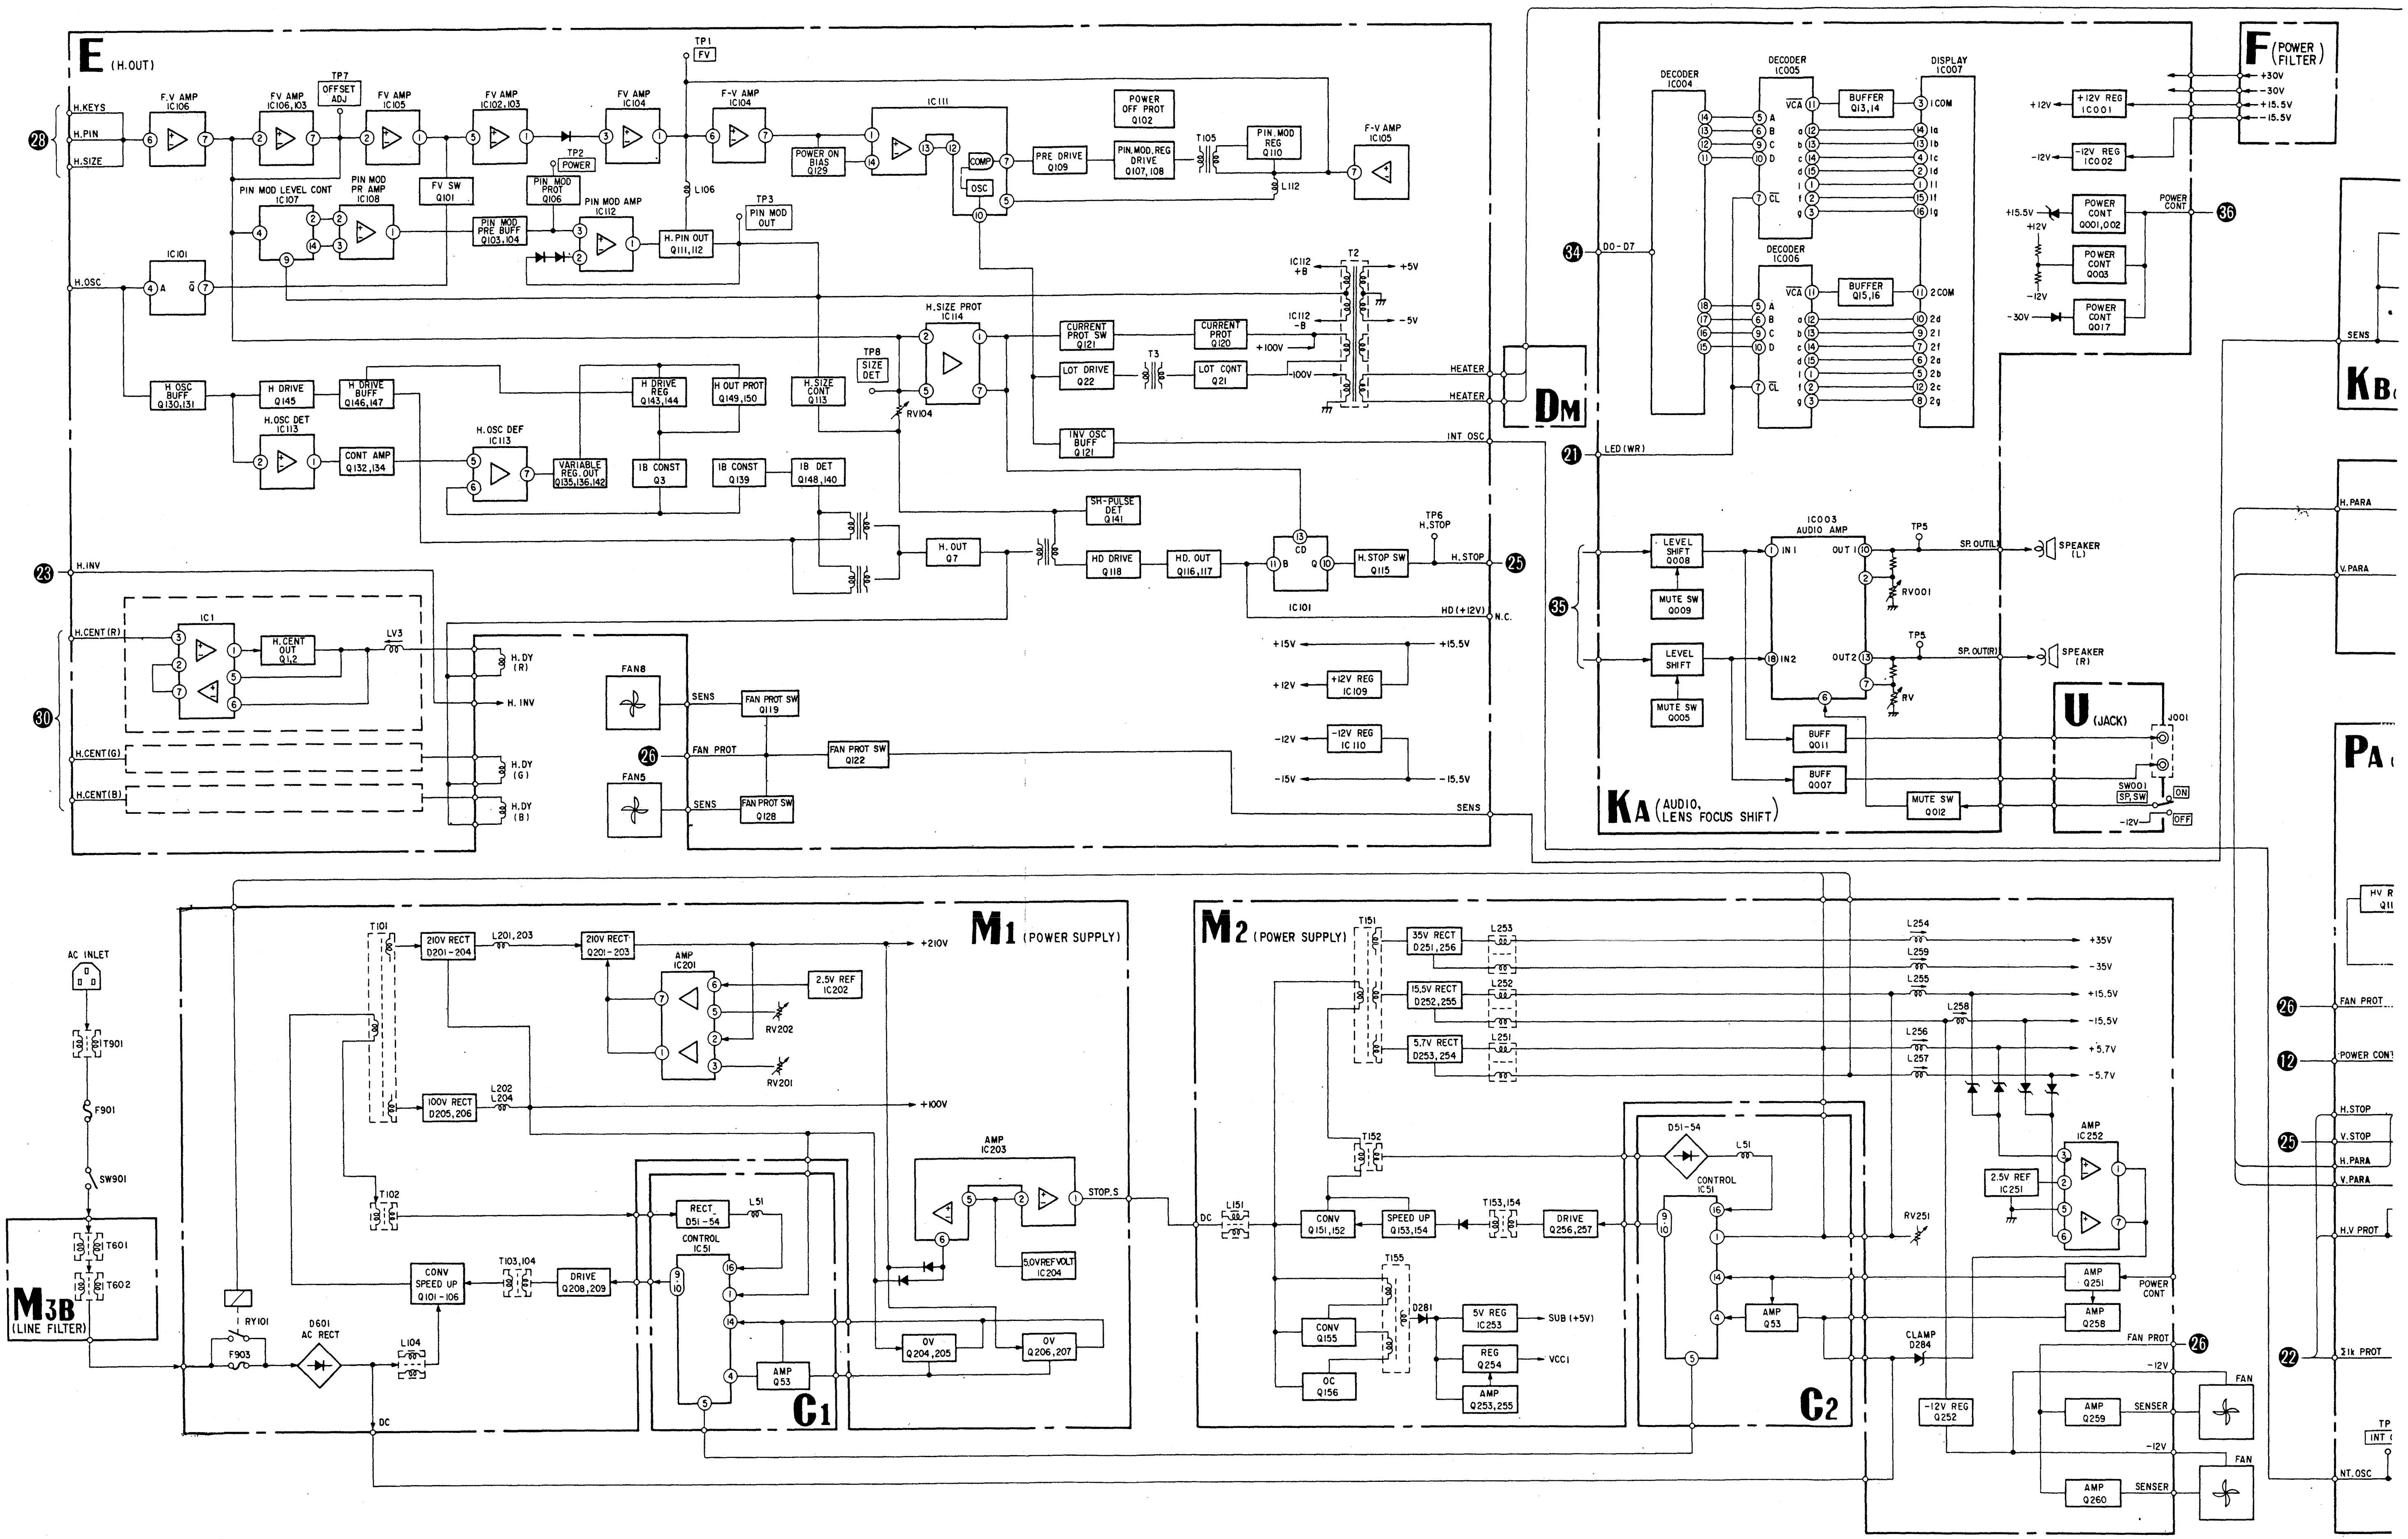
E (H.OUT)
H.KEYS
H.PIN
H.SIZE
H.OSC
H.INV
H.CENT(R)
H.CENT(G)
H.CENT(B)
F.V AMP IC106
FV AMP IC106,103
TP7 OFFSET ADJ
FV AMP IC105
FV AMP IC102,103
FV AMP IC104
F-V AMP IC104
TP1 FV
TP2 POWER
FV SW Q101
PIN MOD LEVEL CONT IC107
PIN MOD PR AMP IC108
PIN MOD PROT Q106
PIN MOD PRE BUFF Q103,104
PIN MOD AMP IC112
H.PIN OUT Q111,112
TP3 PIN MOD OUT
L106
POWER ON BIAS Q129
IC111
COMP
OSC
PRE DRIVE Q109
POWER OFF PROT Q102
PIN.MOD.REG DRIVE Q107,108
T105
PIN.MOD REG Q110
L112
F-V AMP IC105
IC101
H.SIZE PROT IC114
TP8 SIZE DET
RV104
H.SIZE CONT Q113
H OSC BUFF Q130,131
H DRIVE Q145
H DRIVE BUFF Q146,147
H DRIVE REG Q143,144
H OUT PROT Q149,150
H.OSC DET IC113
CONT AMP Q132,134
H.OSC DEF IC113
VARIABLE REG. OUT Q135,136,142
IB CONST Q3
IB CONST Q139
IB DET Q148,140
CURRENT PROT SW Q121
CURRENT PROT Q120
LOT DRIVE Q22
T3
LOT CONT Q21
INV OSC BUFF Q121
IC112 +B
IC112 -B
T2
+5V
-5V
+100V
-100V
HEATER
HEATER
INT OSC
SH-PULSE DET Q141
H.OUT Q7
HD DRIVE Q118
HD. OUT Q116,117
CD
IC101
TP6 H.STOP
H.STOP SW Q115
H.STOP
HD(+12V)
N.C.
IC1
H.CENT OUT Q1,2
LV3
H.DY (R)
H. INV
H.DY (G)
H.DY (B)
FAN8
FAN5
SENS
FAN PROT SW Q119
FAN PROT
FAN PROT SW Q122
FAN PROT SW Q128
SENS
+15V
+15.5V
+12V
+12V REG IC109
-12V
-12V REG IC110
-15V
-15.5V
SENS
㉘ ㉓ ㉚ ㉖ ㉕
DM
DO - D7
㉞
㉑
LED(WR)
DECODER IC004
DECODER IC005
DECODER IC006
BUFFER Q13,14
BUFFER Q15,16
DISPLAY IC007
1COM
2COM
F (POWER FILTER)
+30V
-30V
+15.5V
-15.5V
+12V REG IC001
-12V REG IC002
POWER CONT Q001,002
POWER CONT Q003
POWER CONT Q017
POWER CONT
㊱
IC003 AUDIO AMP
LEVEL SHIFT Q008
MUTE SW Q009
LEVEL SHIFT
MUTE SW Q005
TP5
RV001
SP. OUT(L)
SPEAKER (L)
SP. OUT(R)
SPEAKER (R)
㉟
BUFF Q011
BUFF Q007
MUTE SW Q012
KA (AUDIO, LENS FOCUS SHIFT)
U (JACK)
J001
SW001 SP.SW
ON
OFF
KB
PA
H.PARA
V.PARA
AC INLET
T901
F901
SW901
T601
T602
M3B (LINE FILTER)
RY101
F903
D601 AC RECT
L104
DC
M1 (POWER SUPPLY)
T101
210V RECT D201-204
L201,203
210V RECT Q201-203
+210V
AMP IC201
2.5V REF IC202
RV202
RV201
100V RECT D205,206
L202 L204
+100V
T102
AMP IC203
STOP.S
5.0V REF VOLT IC204
CONV SPEED UP Q101-106
T103,104
DRIVE Q208,209
RECT D51-54
L51
CONTROL IC51
AMP Q53
OV Q204,205
OV Q206,207
C1
M2 (POWER SUPPLY)
T151
35V RECT D251,256
15.5V RECT D252,255
5.7V RECT D253,254
L253
L252
L251
L254
L259
L255
L258
L256
L257
+35V
-35V
+15.5V
-15.5V
+5.7V
-5.7V
T152
L151
CONV Q151,152
SPEED UP Q153,154
T153,154
DRIVE Q256,257
D51-54
CONTROL IC51
T155
D281
5V REG IC253
SUB (+5V)
CONV Q155
REG Q254
VCC1
OC Q156
AMP Q253,255
RV251
AMP IC252
2.5V REF IC251
AMP Q251
AMP Q258
AMP Q53
POWER CONT
CLAMP D284
FAN PROT
-12V REG Q252
AMP Q259
SENSER
AMP Q260
FAN
C2
HV R Q11
FAN PROT
POWER CONT
H.STOP
V.STOP
H.PARA
V.PARA
H.V PROT
Σ1k PROT
TP INT
NT. OSC
㉖ ⑫ ㉕ ㉒

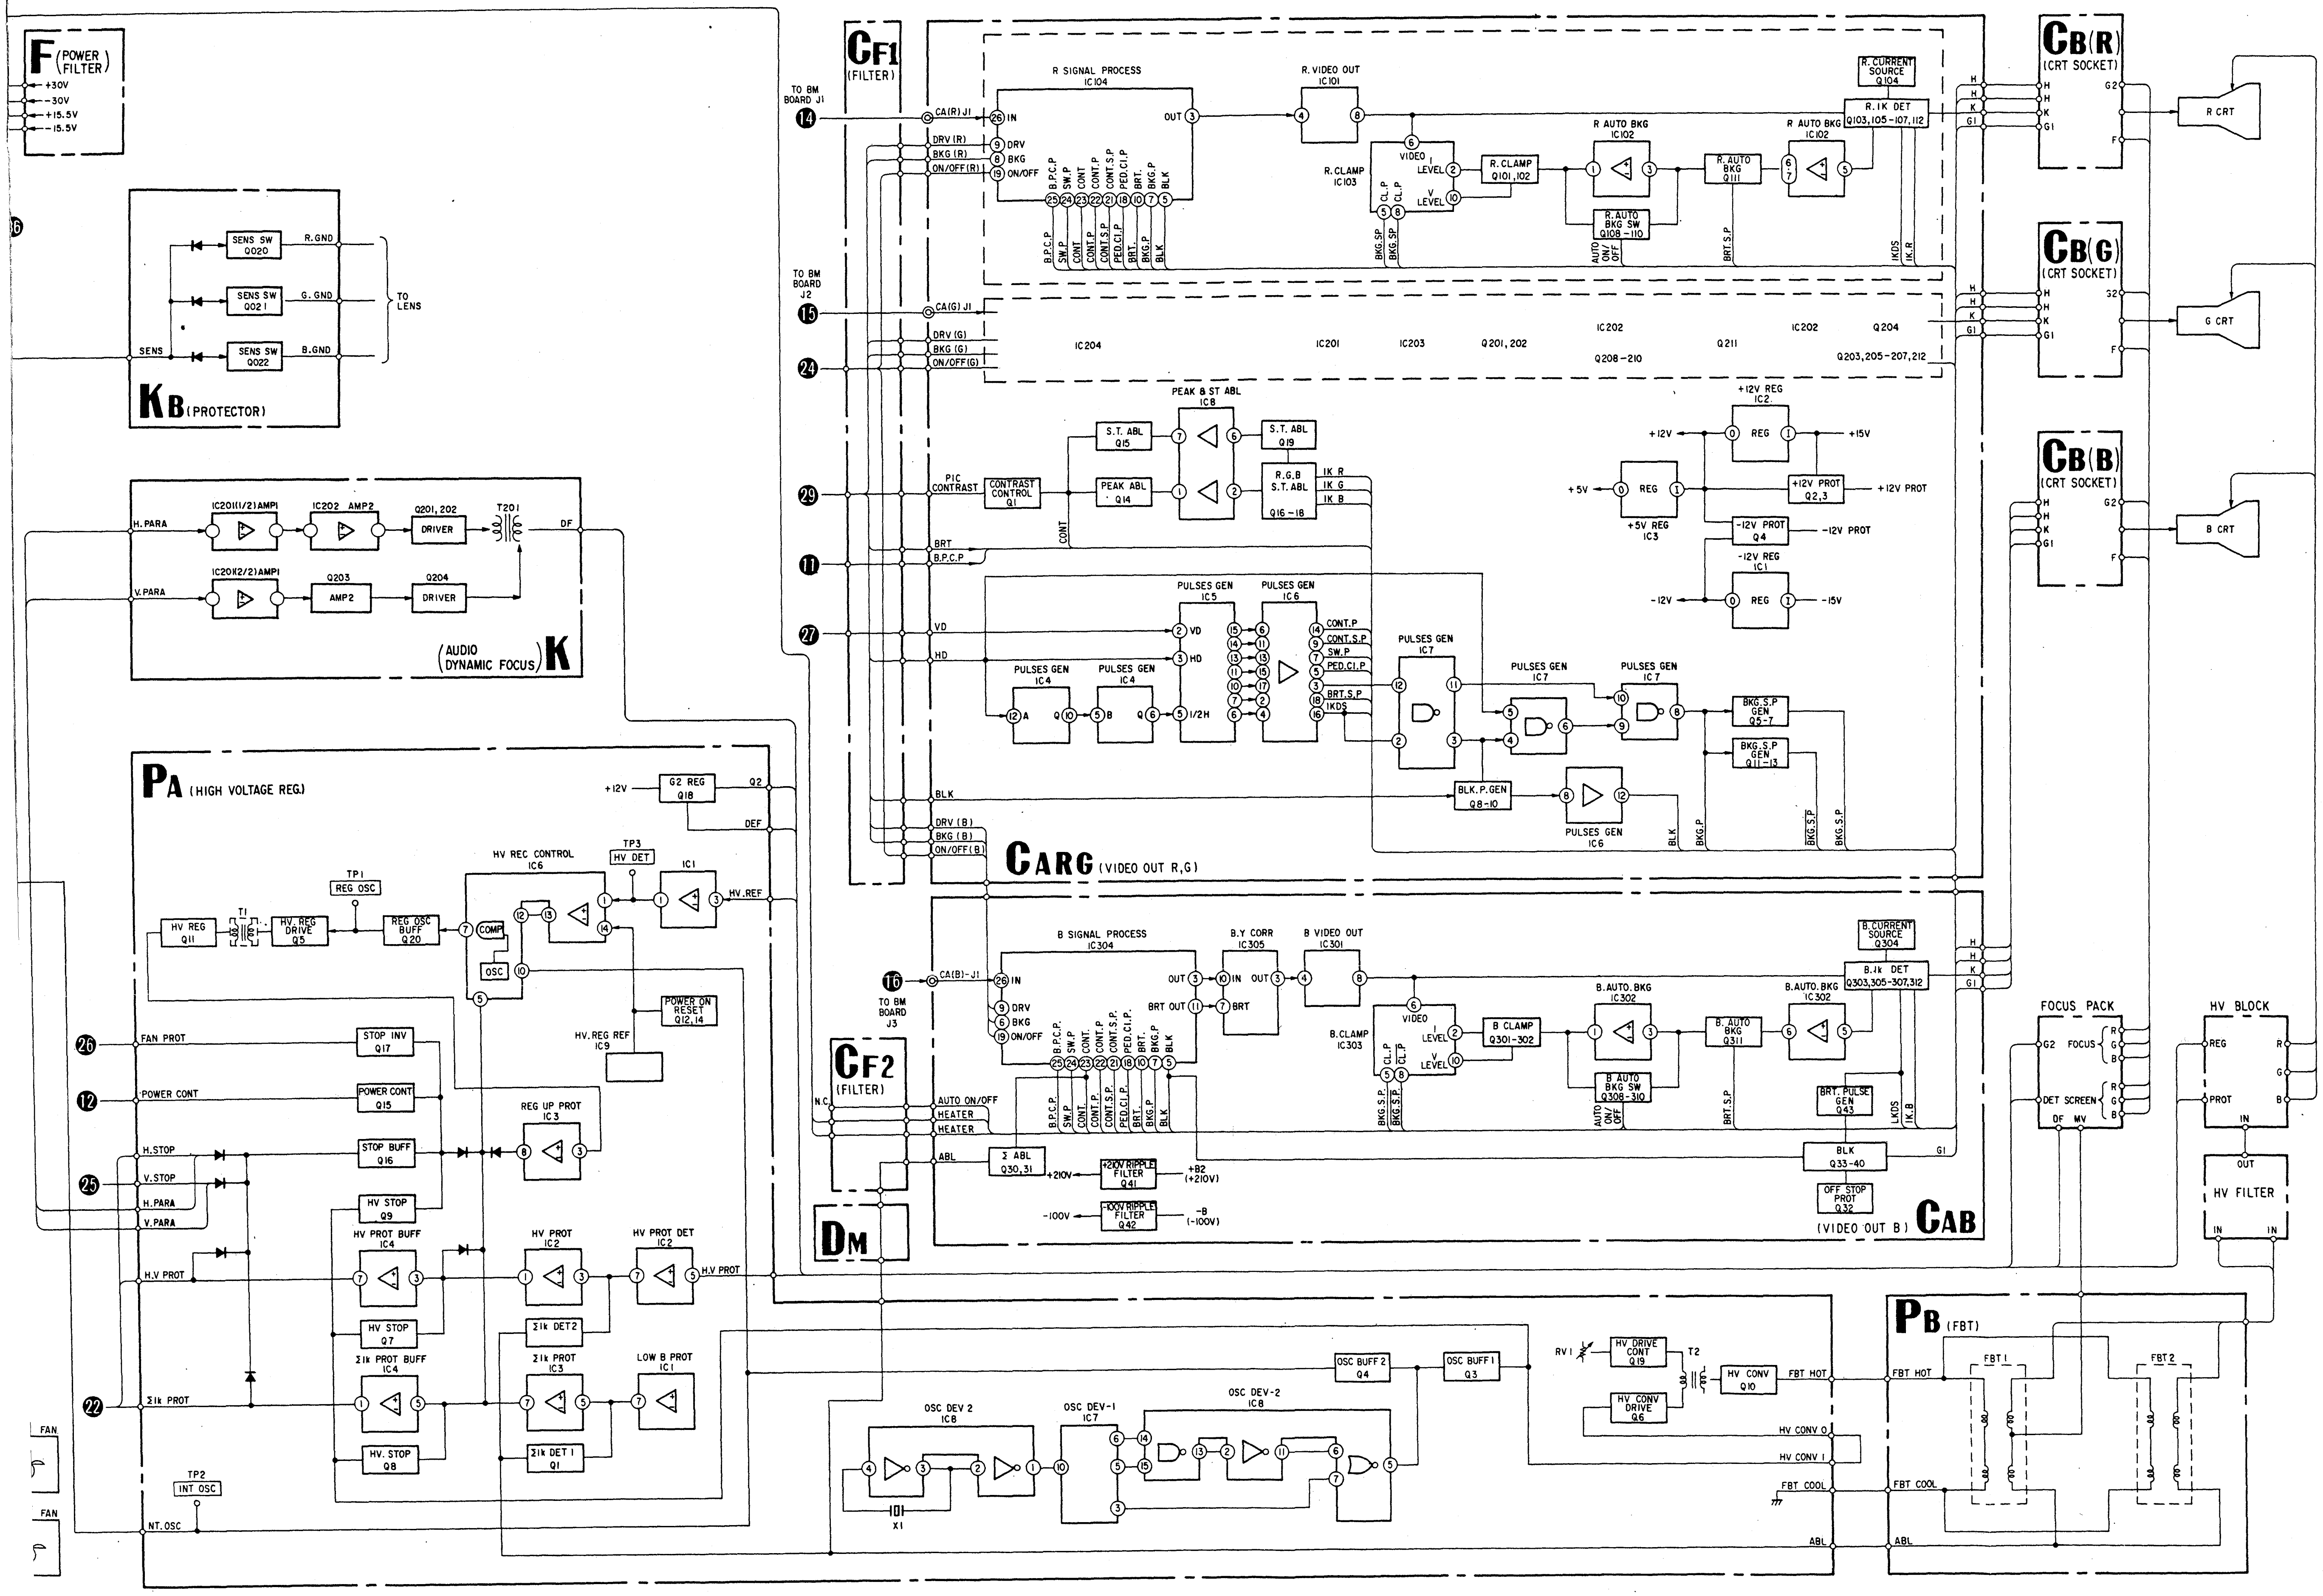
F (POWER FILTER)
+30V
-30V
+15.5V
-15.5V
KB (PROTECTOR)
SENS SW Q020
SENS SW Q021
SENS SW Q022
R.GND
G.GND
B.GND
TO LENS
SENS
K (AUDIO DYNAMIC FOCUS)
IC201(1/2) AMP1
IC202 AMP2
Q201, 202 DRIVER
T201
IC201(2/2) AMP1
Q203 AMP2
Q204 DRIVER
H.PARA
V.PARA
DF
PA (HIGH VOLTAGE REG.)
G2 REG Q18
+12V
Q2
DEF
HV REG Q11
T1
HV REG DRIVE Q5
TP1 REG OSC
REG OSC BUFF Q20
HV REC CONTROL IC6
COMP
OSC
TP3 HV DET
IC1
HV.REF
POWER ON RESET Q12, 14
HV.REG REF IC9
FAN PROT
STOP INV Q17
POWER CONT
POWER CONT Q15
REG UP PROT IC3
H.STOP
V.STOP
STOP BUFF Q16
HV STOP Q9
HV PROT BUFF IC4
HV PROT IC2
HV PROT DET IC2
H.V PROT
HV STOP Q7
Σik DET2
Σik PROT BUFF IC4
Σik PROT IC3
LOW B PROT IC1
Σik PROT
HV. STOP Q8
Σik DET 1 Q1
TP2 INT OSC
INT. OSC
FAN
CF1 (FILTER)
TO BM BOARD J1
TO BM BOARD J2
TO BM BOARD J3
CA(R) J1
DRV (R)
BKG (R)
ON/OFF (R)
R SIGNAL PROCESS IC104
IN
OUT
DRV
BKG
ON/OFF
B.P.C.P
SW.P
CONT
CONT.P
CONT.S.P
PED.CL.P
BRT.
BKG.P
BLK
R. VIDEO OUT IC101
R.CLAMP IC103
VIDEO
I LEVEL
V LEVEL
R.CLAMP Q101,102
R AUTO BKG IC102
R.AUTO BKG Q111
R.AUTO BKG SW Q108-110
R AUTO BKG IC102
R.CURRENT SOURCE Q104
R.IK DET Q103,105-107,112
IKDS
IK.R
CA(G) J1
DRV (G)
BKG (G)
ON/OFF (G)
IC204
IC201
IC203
Q201, 202
Q208-210
IC202
Q211
IC202
Q204
Q203,205-207,212
PEAK & ST ABL IC8
S.T. ABL Q15
S.T. ABL Q19
PIC CONTRAST
CONTRAST CONTROL Q1
PEAK ABL Q14
R.G.B S.T. ABL Q16-18
IK R
IK G
IK B
BRT
B.P.C.P
+12V REG IC2
+12V
REG
+15V
+5V
+5V REG IC3
+12V PROT Q2,3
+12V PROT
-12V PROT Q4
-12V PROT
-12V REG IC1
-12V
-15V
VD
HD
PULSES GEN IC5
PULSES GEN IC6
PULSES GEN IC4
PULSES GEN IC4
1/2H
CONT.P
CONT.S.P
SW.P
PED.CL.P
BRT.S.P
IKDS
PULSES GEN IC7
PULSES GEN IC7
PULSES GEN IC7
BKG.S.P GEN Q5-7
BKG.S.P GEN Q11-13
BLK
BLK.P.GEN Q8-10
PULSES GEN IC6
DRV (B)
BKG (B)
ON/OFF (B)
CARG (VIDEO OUT R,G)
CA(B)-J1
B SIGNAL PROCESS IC304
B.Y CORR IC305
B VIDEO OUT IC301
BRT OUT
B.CLAMP IC303
B CLAMP Q301-302
B.AUTO.BKG IC302
B AUTO BKG Q311
B AUTO BKG SW Q308-310
B.AUTO.BKG IC302
B.CURRENT SOURCE Q304
B.Ik DET Q303,305-307,312
BRT PULSE GEN Q43
IK.B
CF2 (FILTER)
N.C.
AUTO ON/OFF
HEATER
HEATER
ABL
Σ ABL Q30,31
+210V
+210V RIPPLE FILTER Q41
+B2 (+210V)
-100V
-100V RIPPLE FILTER Q42
-B (-100V)
BLK Q33-40
G1
OFF STOP PROT Q32
CAB (VIDEO OUT B)
DM
CB(R) (CRT SOCKET)
R CRT
CB(G) (CRT SOCKET)
G CRT
CB(B) (CRT SOCKET)
B CRT
H
K
G1
G2
F
FOCUS PACK
G2
FOCUS
DET SCREEN
DF
MV
HV BLOCK
REG
PROT
IN
OUT
HV FILTER
PB (FBT)
RV1
HV DRIVE CONT Q19
T2
HV CONV Q10
HV CONV DRIVE Q6
FBT HOT
HV CONV 0
HV CONV 1
FBT COOL
ABL
FBT 1
FBT 2
OSC BUFF 2 Q4
OSC BUFF 1 Q3
OSC DEV 2 IC8
OSC DEV-1 IC7
OSC DEV-2 IC8
X1
14
15
24
29
11
27
16
26
12
25
22

7-4. FRAME SCHEMATIC DIAGRAM

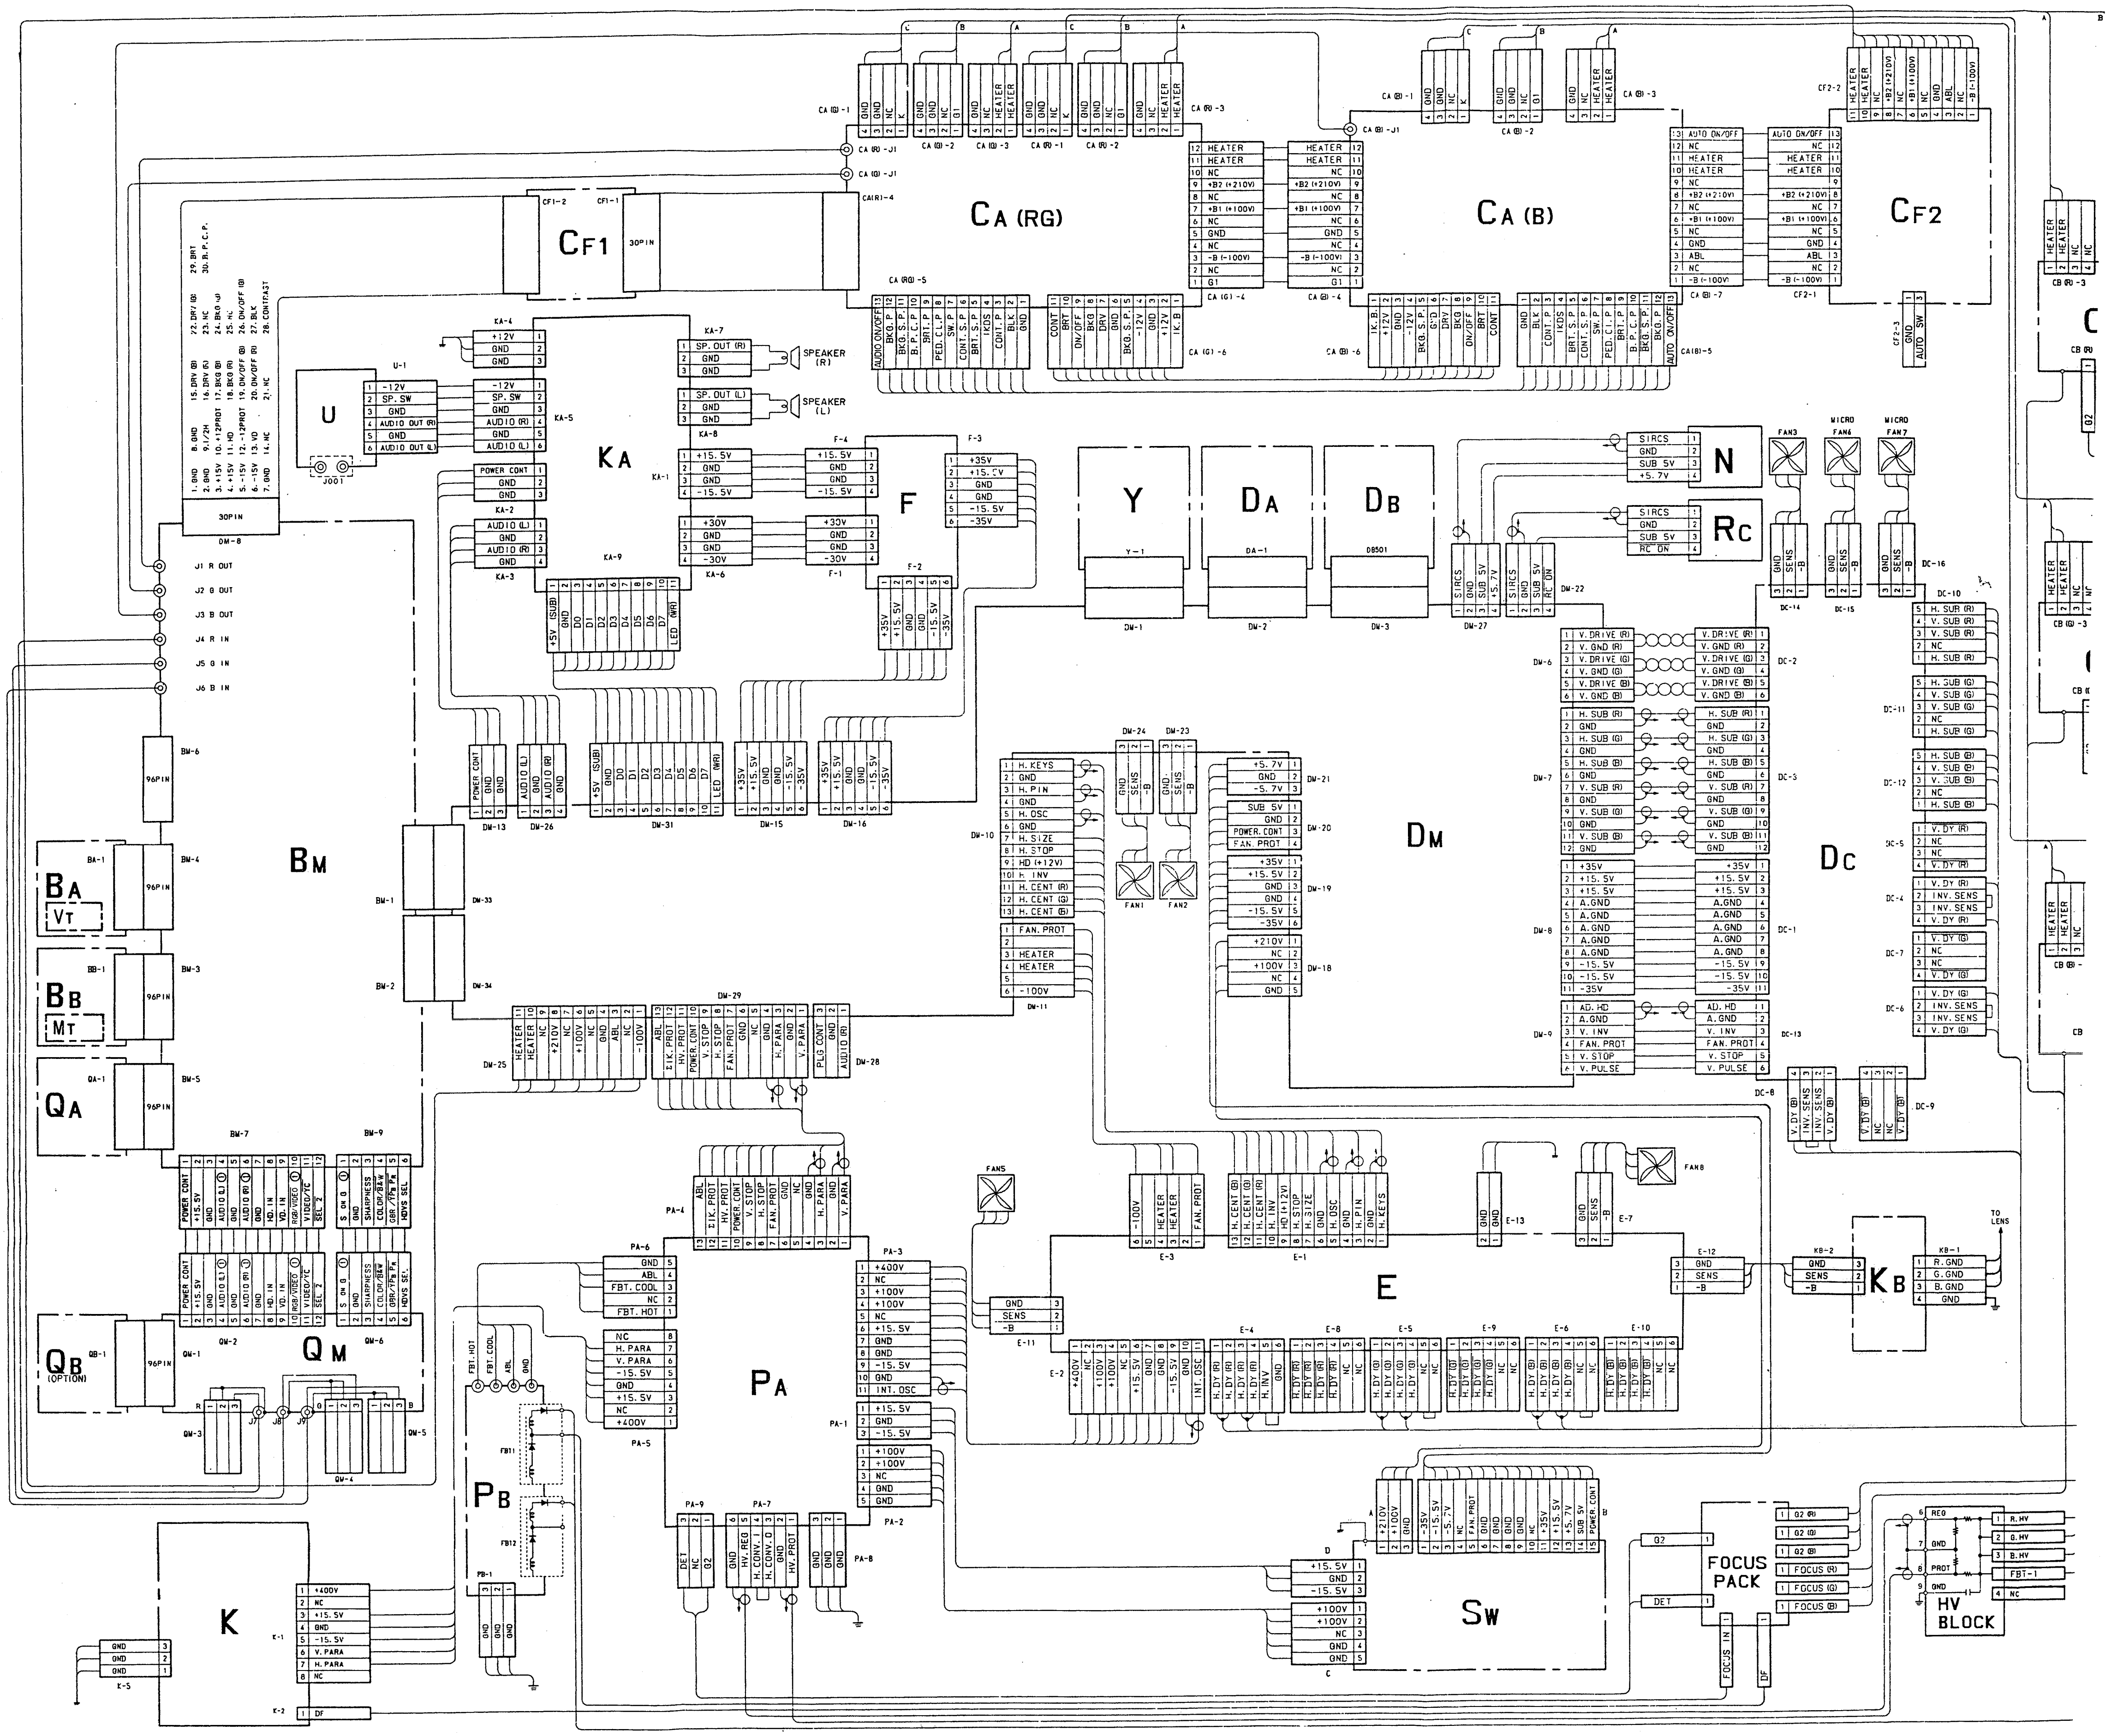
CF1
CA (RG)
CA (B)
CF2
U
KA
F
SPEAKER (R)
SPEAKER (L)
Y
DA
DB
N
RC
BM
BA
VT
BB
MT
QA
QB (OPTION)
QM
DM
DC
E
KB
PA
PB
K
SW
FOCUS PACK
HV BLOCK
TO LENS

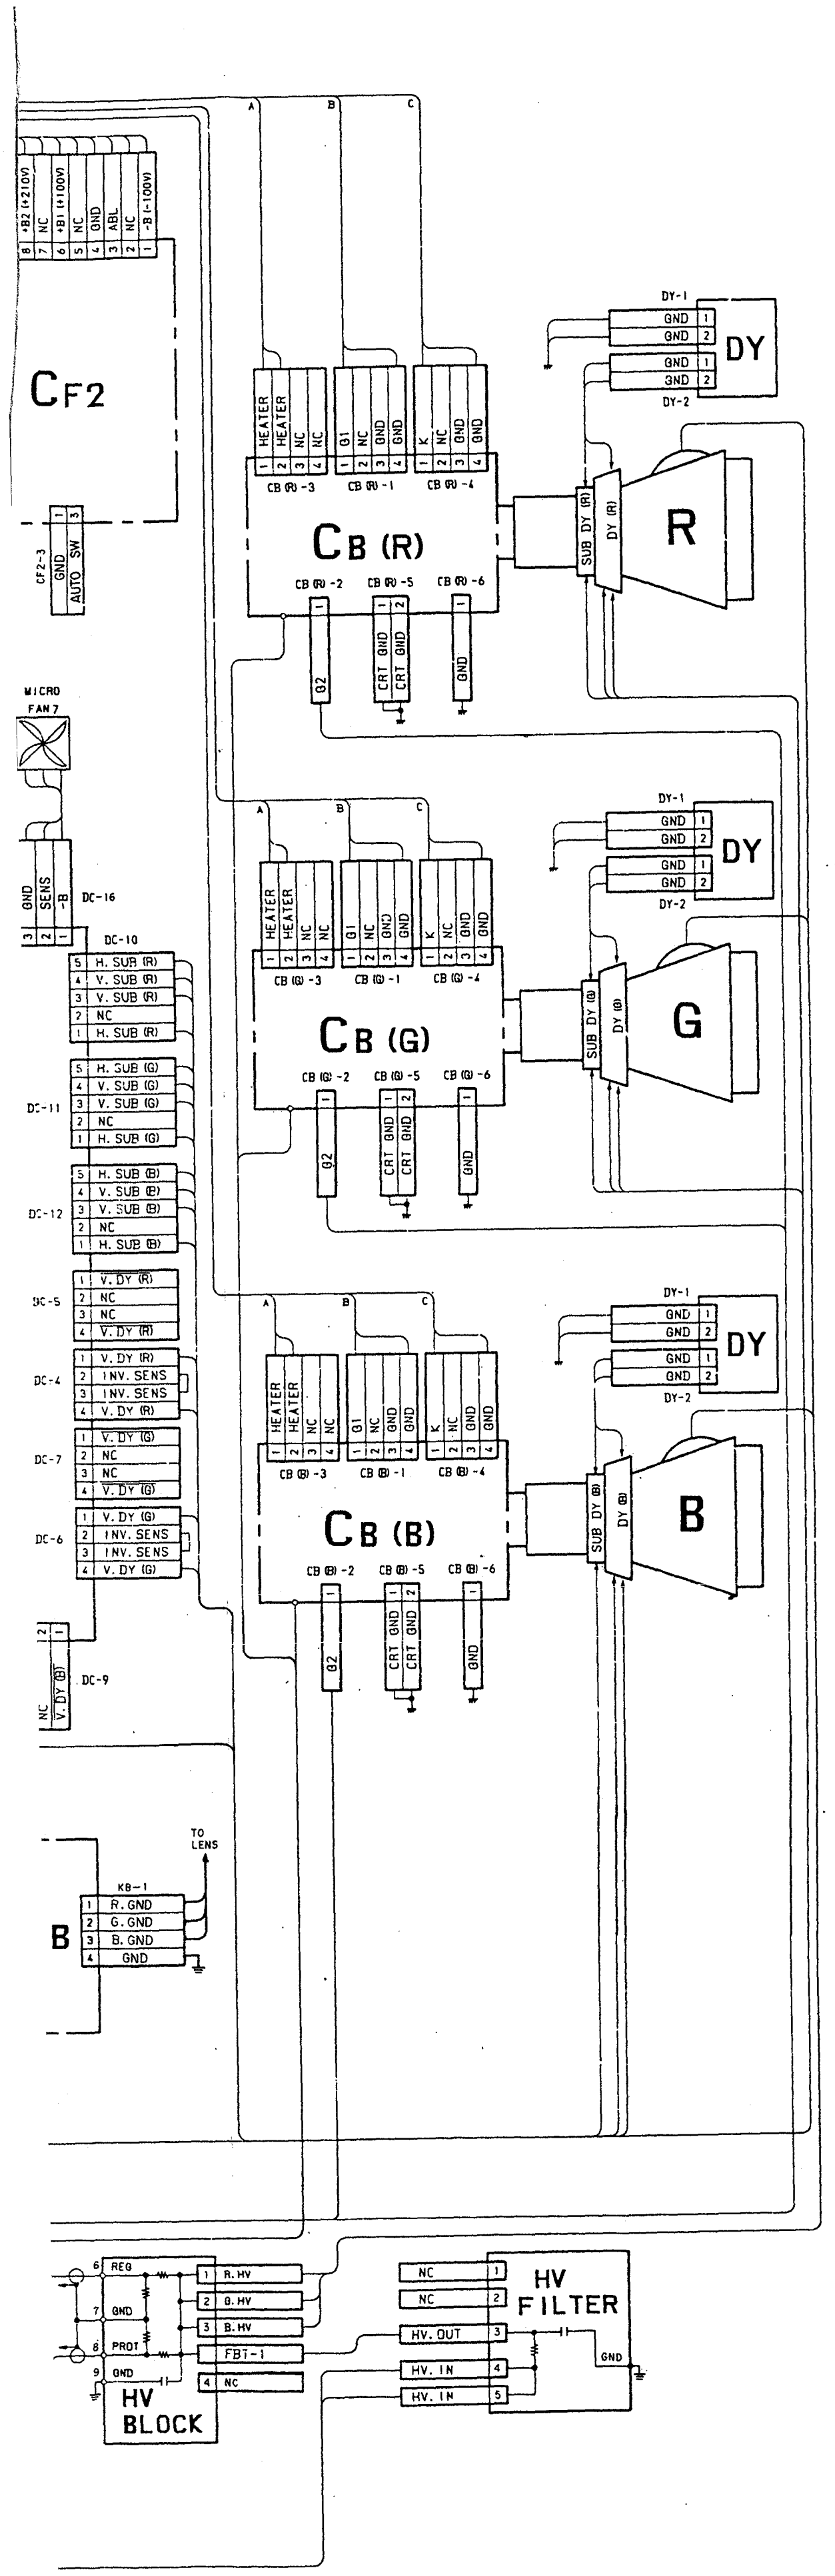

7-5. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in μ F unless otherwise noted. pF : μ μ F 50WV or less are not indicated except for electrolytics.
- All electrolytics are in 50V unless otherwise specified.
- All resistors are in ohms, 1/4W in resistance; 1/10W in chip resistance.
  k Ω =1000 Ω , M Ω =1000k Ω
- METAL FILM (:RN) resistors in 1%, 1/6W unless otherwise specified.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- ☐ : panel designation and adjustment for repair.
- All variable and adjustable resistors have charactristic curve B, unless otherwise noted.

- The components identified by ☒ in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by ◪ , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by ☒ and repeat the adjustment until the specified value is achieved.(Refer to R1, R4, R29, R30, R33, R34, R41, R42 adjust on **Page 94~96**.)

Part replaced (◪)	Adjustment (☒)
IC2, Q7, D9, D12, C13, R20, R21, R22, R23, R24, R32, R33, R34, R35, R36, R82, (PA BOARD) PA MOUNT HV BLOCK	HV HOLD DOWN (R33, R34)
IC1, IC6, IC7, IC8, IC9, D13, C16, R37, R38, R39, R40, R41, R42, R53, R55, R56, R58, R59, R129, X1, (PA BOARD) PA MOUNT, PB MOUNT HV BLOCK	HV REGULATION (R41, R42)
IC2, IC3, IC5, Q1, Q2, Q7, Q8, D4, D5, D9, R1, R2, R3, R4, R5, R6, R7, R8, R9, R10, R20, R21, R22, R23, R24, R43, R44, R45, R46, R47,R82, R88, R119, R120, R121, R122, (PA BOARD) R199 (DA BOARD) PA MOUNT, PB MOUNT	BEAM CURRENT PROTECTOR (R1, R4)
IC1, IC3, IC5, Q8, D4, D5, D10, D11, R9, R10, R26, R28, R29, R30, R31, R88, R95 (PA BOARD) PA MOUNT	LOW B PROTECTOR (R29, R30)

- Voltage value is the reference value between it & the earth, when NTSC 3.58 color bar signal is received from color bar generator (digital multi- meter used : 10M ohms/V DC).
- ☆ : Displays a list of BB, BA board modes.
  (PAL, SECAM, NTSC 3.58, NTSC 4.43)
  Displays a list of existing voltages, when board E has issued a white pattern of internal signals.
- Unit of voltage values is V (volt).
- For other modes, see the respective circuit diagrams.
- ✕ : Measurement disabled
- : B+ line
- : B− line

  (Actual measured value may be different).
- Round numerals indicate Waveform Table No.

- ➡ : signal path

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ※	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

BA [4-STD DECODER]

VT [SYNC. PROCESSOR]

– BA BOARD –

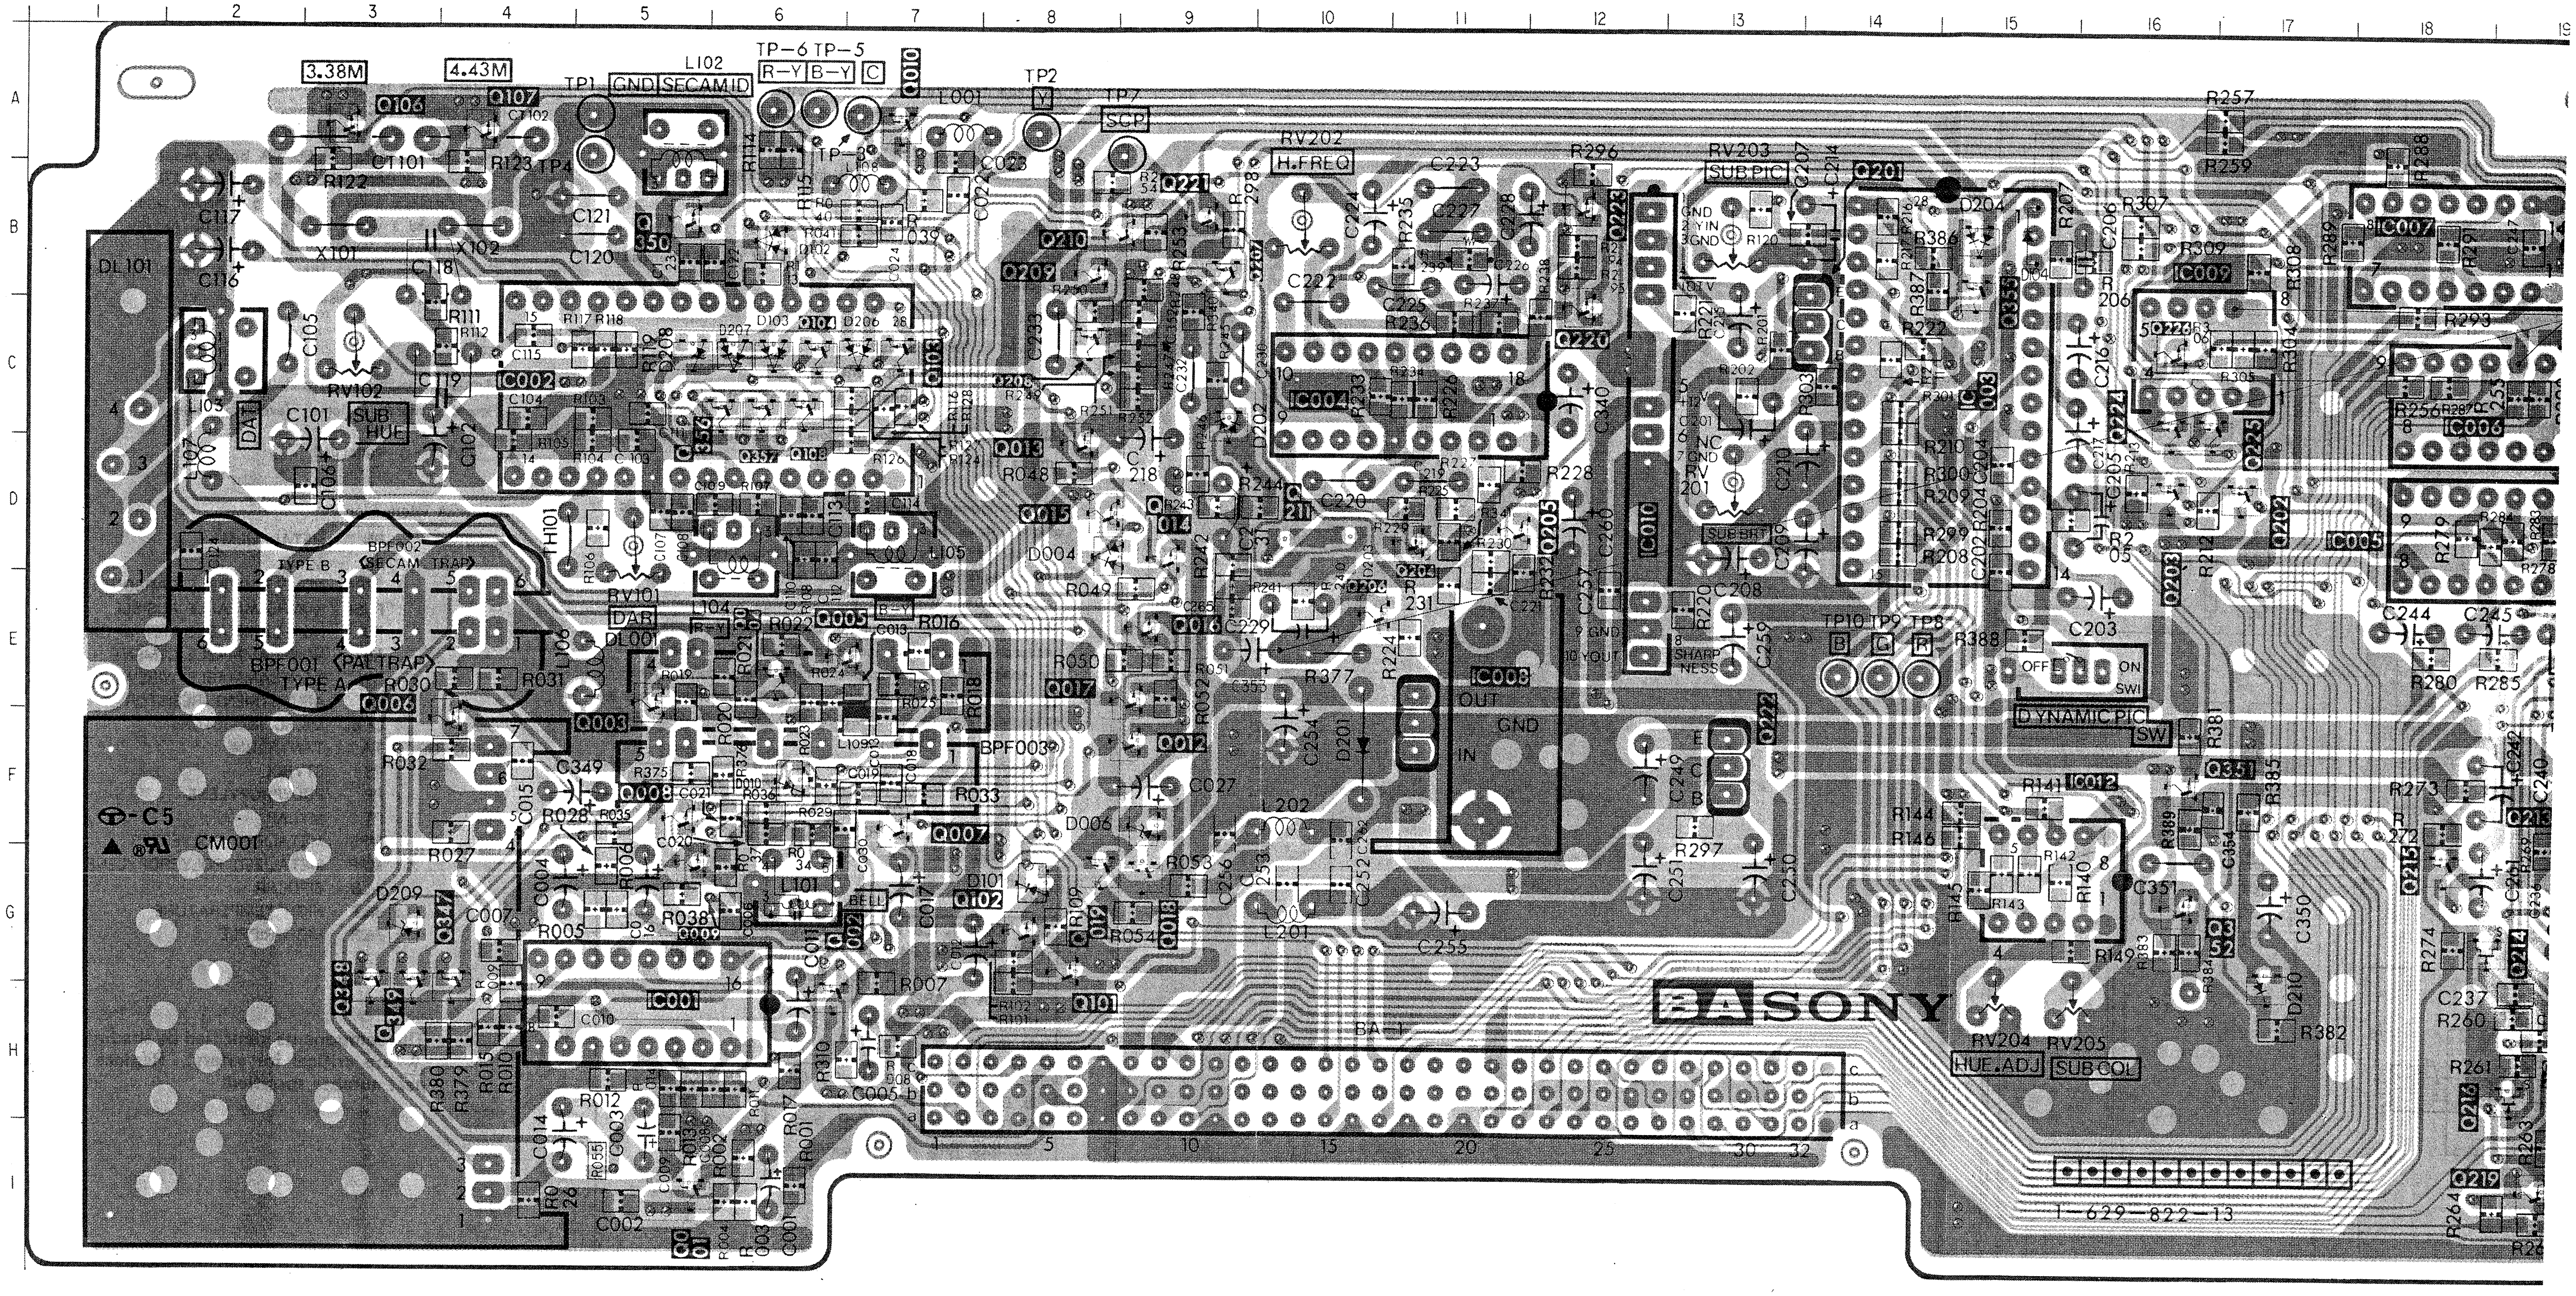
3.38M
4.43M
Q106
Q107
TP1
GND
SECAM ID
L102
TP-6
TP-5
R-Y
B-Y
C
Q010
TP2
Y
TP7
SCP
RV202
H.FREQ
RV203
SUB PIC
Q201
R257
R259
DL101
X101
X102
C117
C116
RV102
SUB HUE
DAT
IC002
IC004
IC007
IC009
IC006
IC005
IC010
IC003
OUT
GND
IN
Q353
D204
SUB BRT
RV201
TP10
TP9
TP8
B
G
R
DYNAMIC PIC SW
OFF
ON
BPF002 SECAM TRAP
TYPE B
BPF001 PAL TRAP
TYPE A
RV101
DAB
BPF003
Q003
Q008
Q007
Q005
Q006
C-5
CM001
IC001
IC012
Q351
BA SONY
RV204
HUE.ADJ
RV205
SUB COL
BA-1
1-629-822-13

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
A
B
C
D
E
F
G
H
I

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

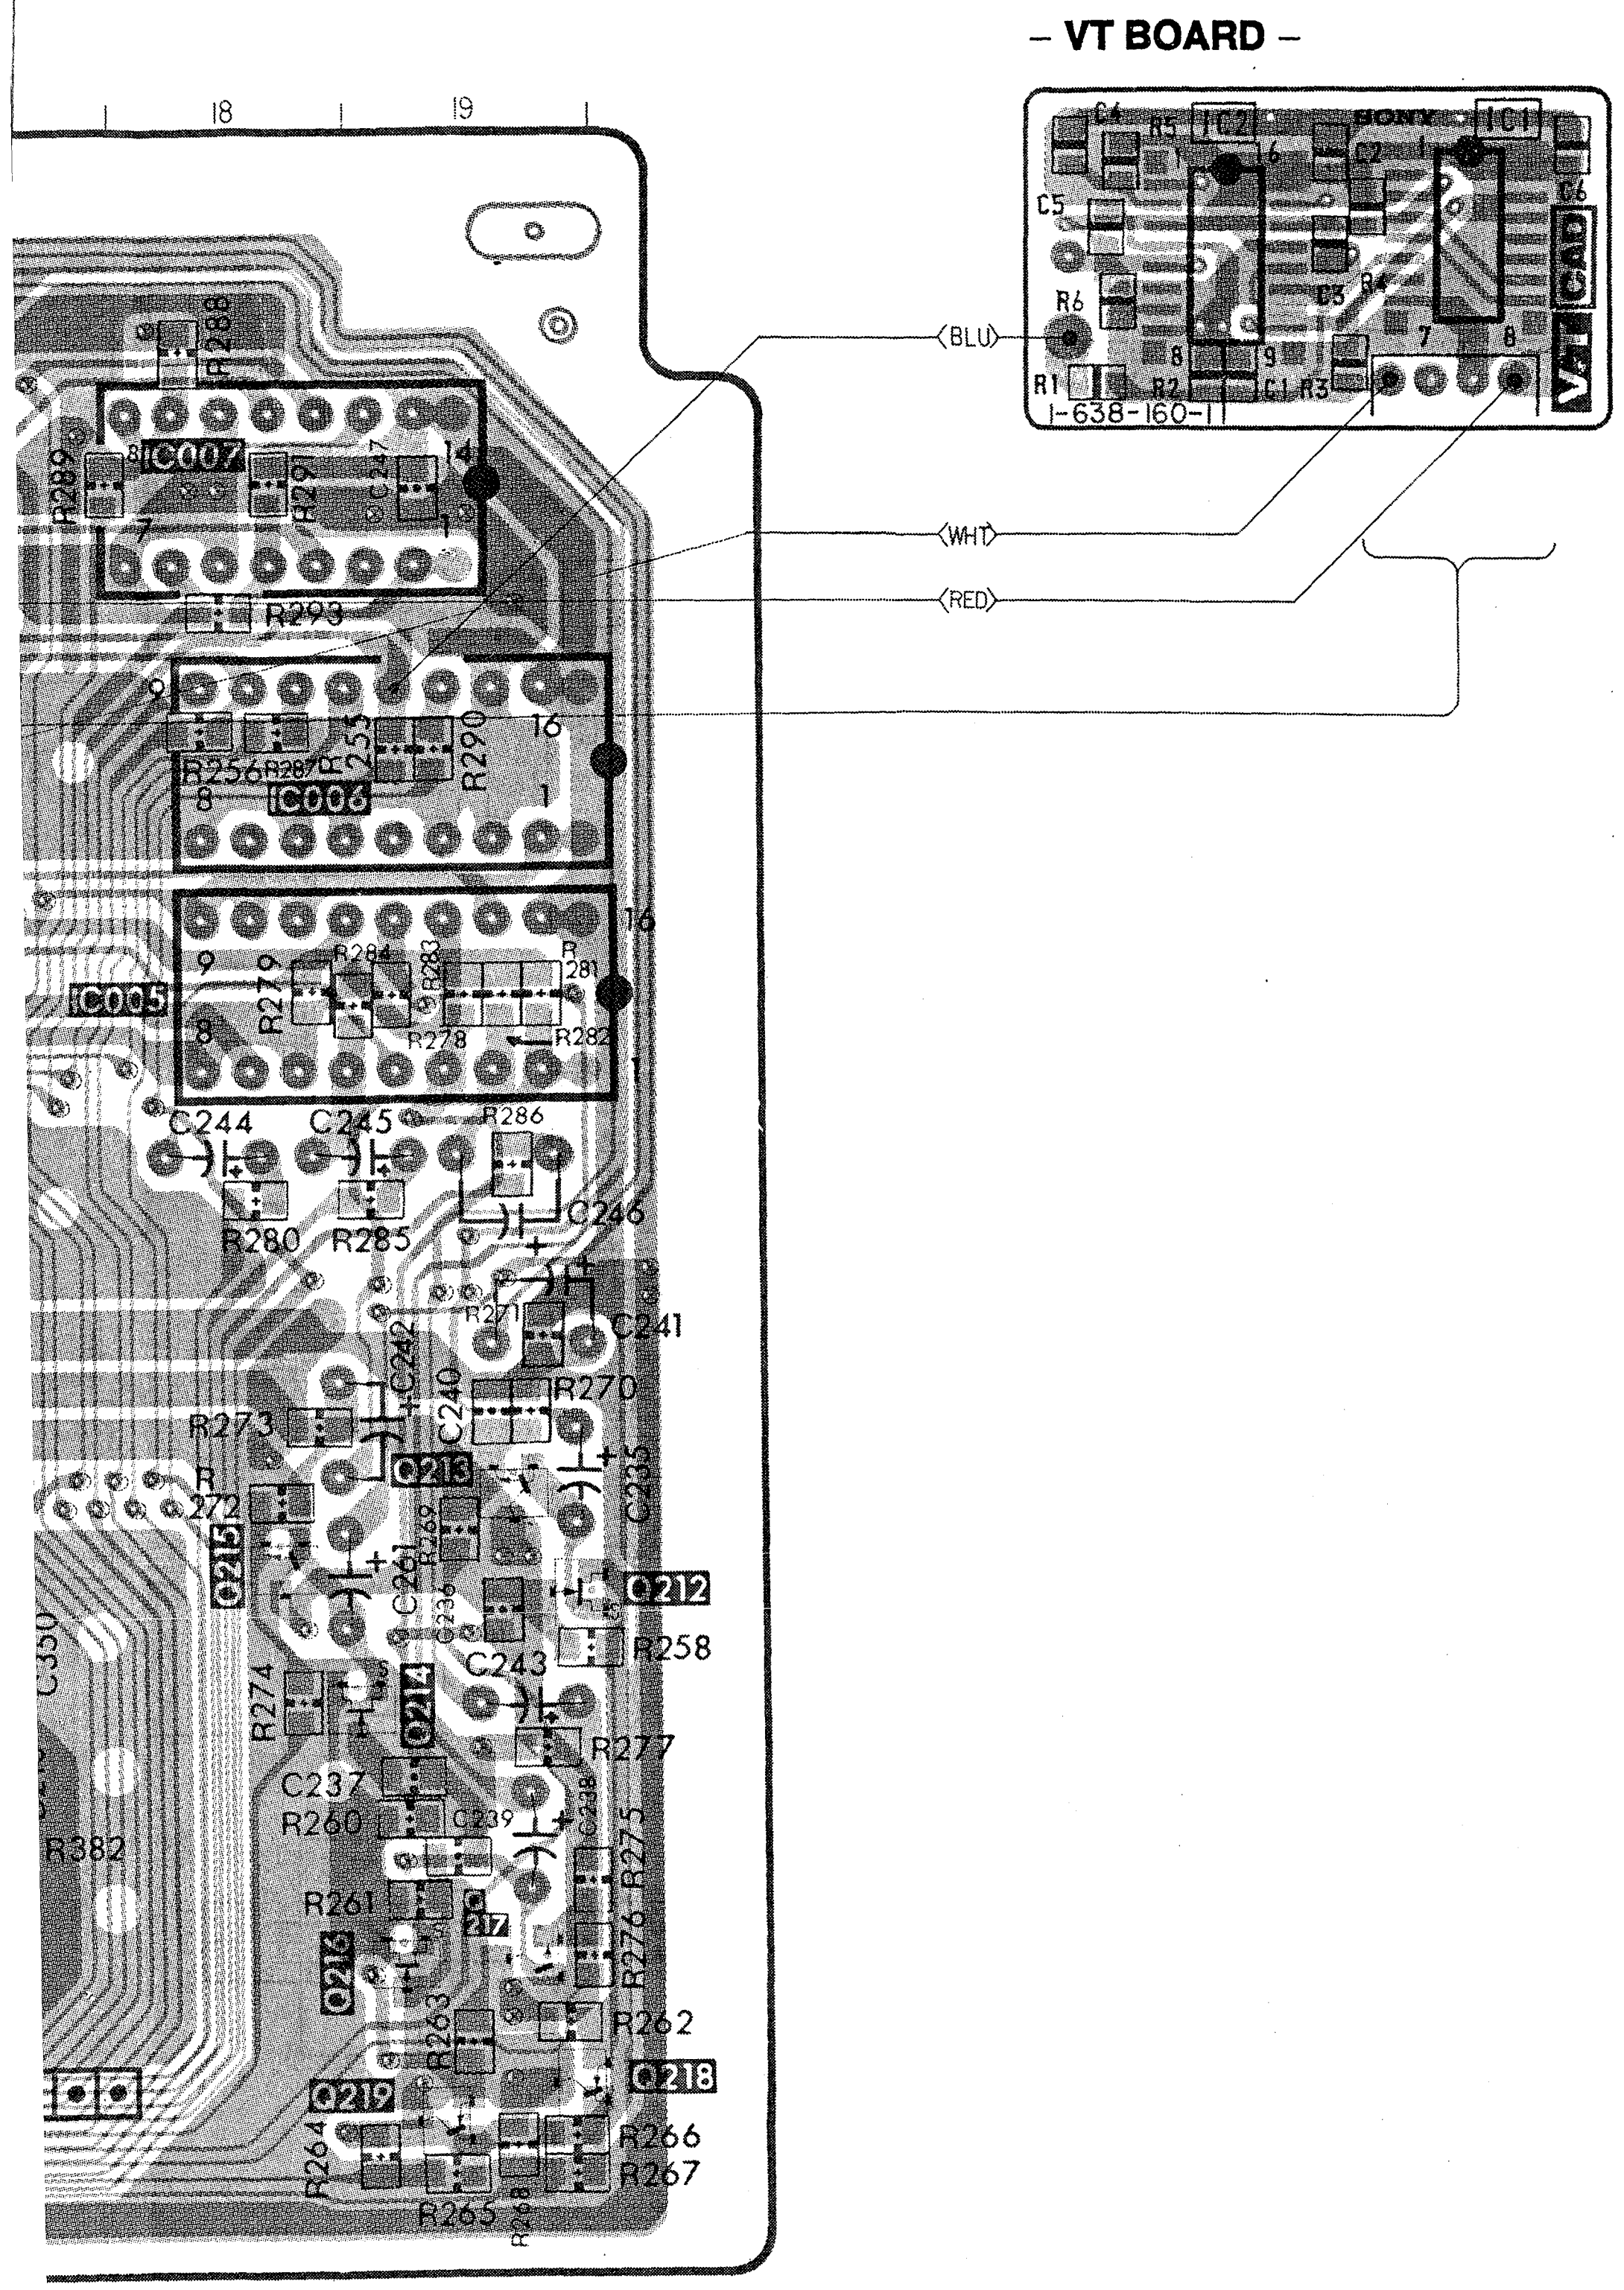

g.

IC	
IC001	H - 5
IC002	C - 4
IC003	C - 15
IC004	C - 10
IC005	D - 18
IC006	C - 18
IC007	B - 18
IC008	F - 11
IC009	C - 16
IC010	D - 12
IC012	G - 15

TRANSISTOR	
Q001	I - 5
Q002	H - 6
Q003	E - 5
Q004	E - 6
Q005	E - 6
Q006	F - 4
Q007	F - 7
Q008	F - 5
Q009	G - 5
Q010	A - 7
Q012	F - 9
Q013	D - 8
Q014	D - 9
Q015	D - 8
Q016	E - 9
Q017	E - 9
Q018	G - 9
Q019	G - 8
Q101	G - 8
Q102	G - 8
Q103	C - 7
Q104	C - 6
Q106	A - 3
Q107	A - 4
Q108	C - 6
Q201	C - 14
Q202	D - 17
Q203	D - 16
Q204	D - 11
Q205	D - 11
Q206	E - 10
Q207	B - 9
Q208	C - 8
Q209	B - 8
Q210	B - 8
Q212	G - 19
Q213	F - 19
Q214	G - 19
Q215	G - 18
Q216	H - 19
Q217	H - 19
Q218	I - 19
Q219	I - 19
Q220	C - 12
Q221	B - 9
Q222	F - 13
Q223	B - 12
Q224	C - 16
Q225	C - 17
Q226	C - 16
Q347	H - 4
Q348	H - 3
Q349	H - 3
Q350	B - 5
Q351	F - 16
Q352	G - 16
Q355	B - 15
Q356	C - 6
Q357	C - 6

DIODE	
D004	D - 8
D006	F - 9
D010	F - 6
D101	G - 8
D102	B - 6
D103	C - 6
D201	F - 10
D202	C - 9
D204	B - 15
D206	C - 7
D207	C - 6
D208	C - 5
D209	G - 3
D210	H - 17

ADJUSTING ELEMENT	
CT101	A - 3
CT102	A - 4
RV101	D - 5
RV102	C - 3
RV201	D - 13
RV202	B - 10
RV203	B - 13
RV204	H - 15
RV205	H - 16

IC-No.	PIN-No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
001	①	0	0	0	0	−0.3
	③	−0.7	−0.7	0	−0.7	−0.3
	④	−0.7	−0.7	0	−0.7	0
	⑨	5.1	5.1	5.1	5.1	0
	⑩	4.7	4.7	0	4.7	0
002	⑤	8.6	4.3	7.2	8.1	6.2
	⑦	8.5	4.4	7	7.9	5.9
	⑳	5.9	5.9	7.7	7.7	7.7
	㉑	8.2	7.5	5.9	5.9	5.9
	㉕	0.1	0.1	0	6.1	0
	㉖	0	0	6.1	0	6.1
	㉗	0.1	6.1	0	0	0
	㉘	6.1	0.1	0	0	0
004	⑩	6.6	6.3	6.5	6.6	6.6
	⑬	1.9	2	1.8	2.2	1.8
006	⑪	1.4	0.3	0.9	0.9	0.7
	⑭	1.3	0.2	0.9	0.9	0.6
007	①	0.3	2.9	0.3	0.3	0.3
	③	0	0	5.1	5.2	5.2
	⑪	0	4.3	0	0	0
009	②	5.1	0	5.1	5.1	5.1
	③	0	5.2	0	0	0
010	⑧	0.3	0.3	0.3	0.3	3.4

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
007	B	−0.7	−0.7	0	−0.7	−0.3
	C	−	−	−	−	−
	E	−0.7	−1.3	−0.7	−1.3	−1
008	B	0	*	0	0	0
	C	−	−	−	−	−
	E	5	5	5.4	5	5.4
009	B	*	0	0	*	0
	C	−	−	−	−	−
	E	5	5	5.4	5	5.4
010	B	0	0	*	0	8
	C	−	−	−	−	−
	E	4.9	5	5.4	4.9	5.4
012	B	−	−	−	−	−
	C	0	0	4.3	0	4.3
	E	−	−	−	−	−
014	B	0.1	6.1	0.2	0.3	0
	C	−	−	−	−	−
	E	0.3	5.5	0	0.4	0
015	B	0.6	0.1	0.2	5.6	0
	C	−	−	−	−	−
	E	5	1.9	0	5	0
016	B	−	−	−	−	−
	C	0.2	4.1	0.1	0.3	0
	E	−	−	−	−	−
017	B	−	−	−	−	−
	C	3.2	3.6	0	3.2	0
	E	−	−	−	−	−
103	B	6.1	0	0.3	0.2	0
	C	−	−	−	−	−
	E	−	−	−	−	−
104	B	0	0	6.1	0.1	6.1
	C	5.2	5.2	0	5.2	0
	E	−	−	−	−	−
106	B	0	0	6.1	0.1	6.1
	C	12.4	12.4	0	12.4	0
	E	−	−	−	−	−
107	B	5.6	0.1	0.2	5.6	0
	C	0	12.4	12.4	0	12.4
	E	−	−	−	−	−
108	B	0.7	0.5	5.6	5.6	5.6
	C	5.2	5.2	0	0	0
	E	−	−	−	−	−
207	B	−0.1	0	−0.2	0	0
	C	−	−	−	−	−
	E	−	−	−	−	−
220	B	4.3	4.3	4.1	4.3	4.4
	C	4.6	4.7	4.4	4.4	4.4
	E	3.9	5.6	4.2	3.8	3.8
223	B	0	6.1	0.2	0	0
	C	−	−	−	−	−
	E	3.9	5.6	4.2	3.8	3.8
224	B	5.1	5.2	0	0	0
	C	5.2	0	5.1	5.2	5.2
	E	−	−	−	−	−
225	B	0	0	5.1	5.1	5.1
	C	0	4.3	0	0	0
	E	−	−	−	−	−
347	B	0	0	4.3	0	0
	C	4.7	4.7	0	4.7	0
	E	−	−	−	−	−
348	B	0	0	0	4.2	0
	C	0	0	4.3	0	0
	E	−	−	−	−	−
349	B	4.3	4.3	0	0	0
	C	0	0	4.3	0	0
	E	−	−	−	−	−
350	B	0	0	5.1	5.1	5.1
	C	−	−	−	−	−
	E	−	−	−	−	−
355	B	1.1	1.2	1	1.2	1.2
	C	−	−	−	−	−
	E	−	−	−	−	−
357	B	−	−	−	−	−
	C	5.2	5.2	0	0	0
	E	−	−	−	−	−

BA	IC1	HD14052BP	SYSTEM SW
	2	TDA4555-VB	DECORDER
	3	CXA1216P	MATRIX
	4	TDA2595	JUNGLE
	5	HD14053BP	IDTV SW-1
	6	TC74HC157AP	IDTV SW-2
	7	TC74HC27AP	IDTV SW-3
	8	NJM78M12A	12V REG
	9	CX-7916	50/60 DET
	10	SNY-9202	SHARPNESS
	12	μ PC4558C	LEVEL SHIFT
	Q1	2SC2712	VIDEO BUFF
	2	2SA1162	Y BUFF-1
	3	2SA2712	Y AMP-1
	4	2SA2712	Y AMP-2
	5	2SA2712	Y AMP-3
	6	2SC2712	9V REG-1
	7	2SC2712	C BUFF
	8	2SC2712	SECAM C BUFF
	9	2SC2712	PAL C BUFF
	10	2SC2712	NTSC C BUFF
	12	DTC144EK	W/B SW-1
	13	DTC144EK	W/B SW-2
	14	2SC2712	NT3.58 SW
	15	2SC2712	NT4.43 SW
	16	DTC144EK	TRAP SW-1
	17	DTC144EK	TRAP SW-2
	18	DTC114EK	POW CONT-1
	19	DTC114EK	POW CONT-2
	101	DTC144EK	SECAM SW-1
	102	2SC2712	SECAM SW-2
	103	DTC144EK	MODE SW-1
	104	DTC144EK	MODE SW-2
	106	DTC144EK	NT OSC SW
	107	DTC144EK	PAL OSC SW
	108	DTC144EK	MODE SW-3
	109	DTC144EK	MODE SW-4
	201	2SD774	9V REG-2
	202	2SA1162	B-Y BUFF-1
	203	2SA1162	R-Y BUFF-1
	204	2SA1162	AFC-1
	205	2SC2712	AFC-2
	206	2SC2712	SYNC BUFF
	207	2SC2712	V.SYNC SW-1
	208	2SC2712	V.SYNC SW-2
	209	2SC2712	V.SYNC SW-3
	210	2SA1162	V.SYNC SW-4
	211	2SC2712	H.SYNC SW
	212	2SK160	Y.CLAMP-1
	213	2SC2712	Y.BUFF-2
	214	2SK160	B-Y CLAMP
	215	2SC2712	R-Y BUFF-2
	216	2SK160	B-Y CLAMP
	217	2SC2712	B-Y BUFF-2
	218	2SA1162	CLAMP
	219	2SA1162	REF DC BUFF-1
	220	2SC2712	REF DC BUFF-2
	221	2SC2712	SCP BUFF
	222	2SD774	+ 5V REG
	223	2SC2712	BGP SHIFT
	224	DTC144EK	50/60 SW-1
	225	DTC144EK	50/60 SW-2
	226	DTC144EK	V.SYNC SW-5
	347	DTC144EK	SYSTEM SW-1
	348	DTC144EK	NT4.43 SW
	349	DTC144EK	SYSTEM SW-2
	350	DTC144EK	ID
	351	2SC2712	Y BUFF-3
	352	2SC2712	Y CLAMP-2
	355	2SC2712	BLK BUFF
	356	DTC144EK	MODE SW-5
	357	DTC144EK	MODE SW-6
	D4	1S2837	NT3.58 DET
	6	RD5.1MB2	POW CONT
	101	1S2837	SECAM SW
	102	1S2837	MODE SW-1
	103	1S2837	MODE SW-2
	201	V06C	+ 12V PROT
	202	1S2835	SYNC SEP.
	203	1S2835	H.SYNC SW
	204	1S2837	BLK ADD
	206	1S2837	W/B SW-2
	207	1S2837	W/B SW-3
	208	RD3.3MB1	W/B SW-1
	209	RD3.3MB1	NT4.43 SW
	210	1S2837	Y.CLAMP

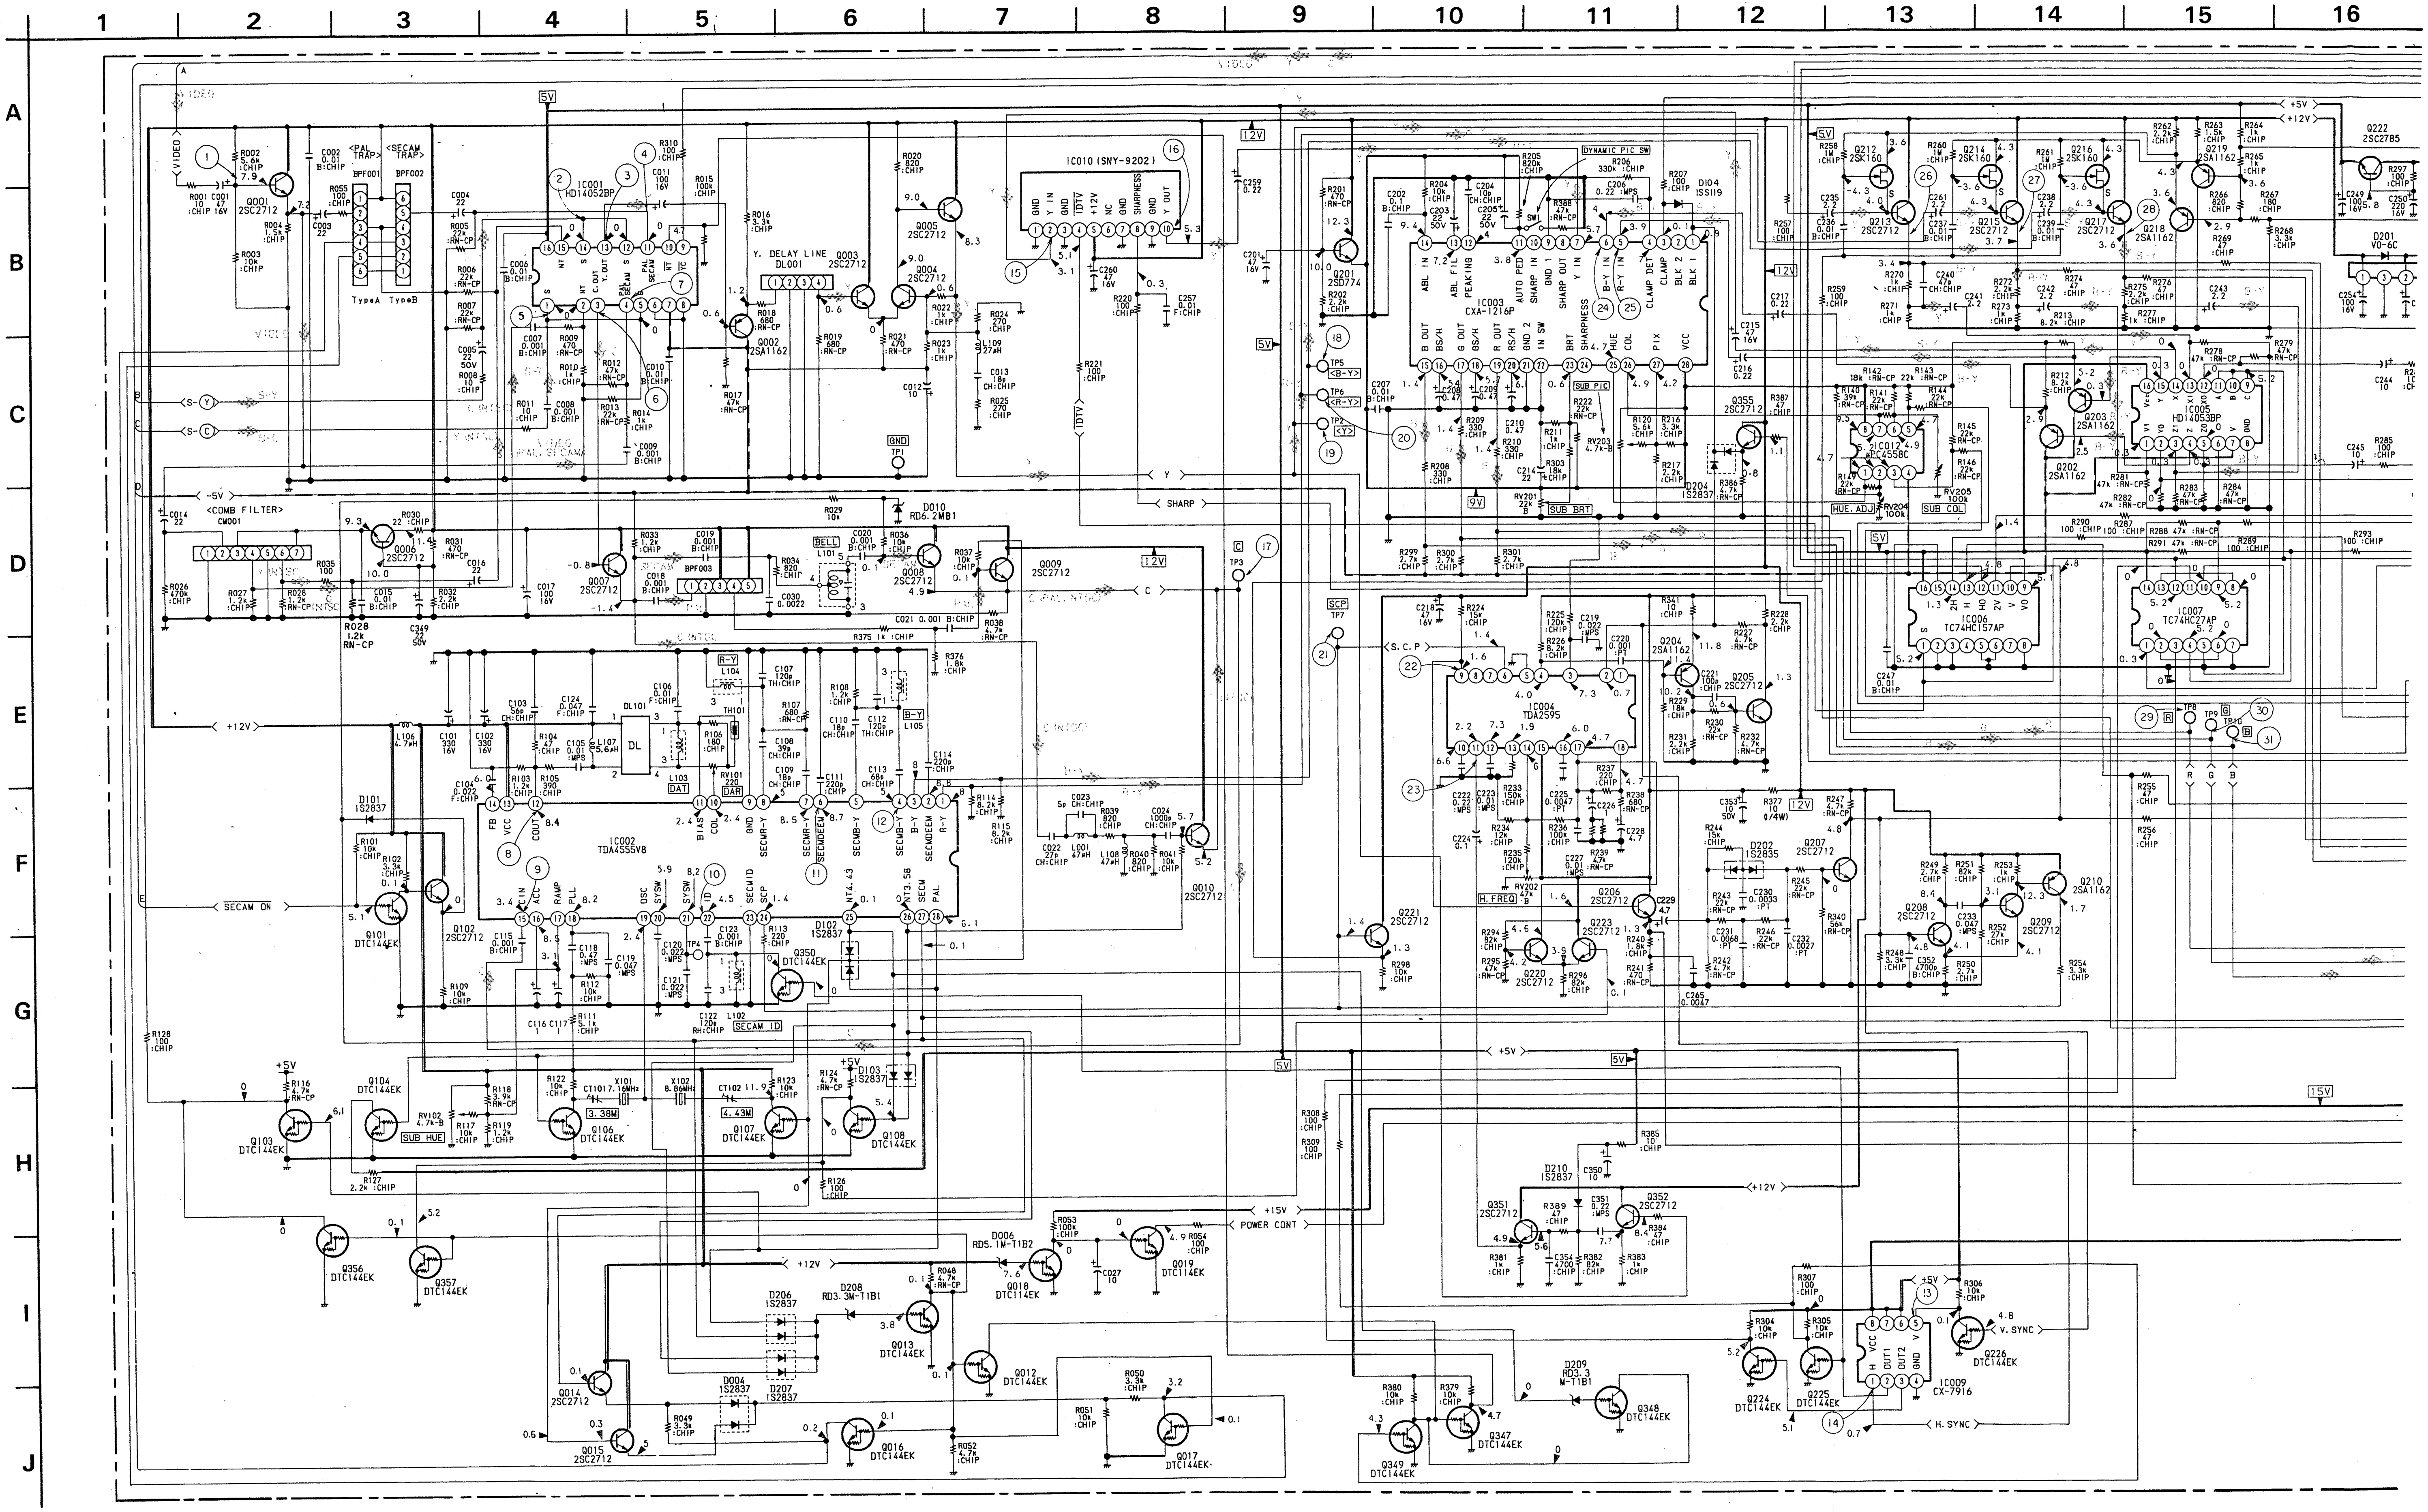
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
VIDEO
Q001 2SC2712
BPF001
BPF002
<PAL TRAP>
<SECAM TRAP>
TypeA TypeB
IC001 HD14052BP
Y. DELAY LINE DL001
Q002 2SA1162
Q003 2SC2712
Q004 2SC2712
Q005 2SC2712
IC010 (SNY-9202)
Q201 2SD774
IC003 CXA-1216P
DYNAMIC PIC SW
D104 1SS119
Q212 2SK160
Q213 2SC2712
Q214 2SK160
Q215 2SC2712
Q216 2SK160
Q217 2SC2712
Q218 2SA1162
Q219 2SA1162
Q222 2SC2785
D201 VO-6C
S-Y
S-C
IC005 HD14053BP
IC012 NJM4558D
Q203 2SA1162
Q202 2SA1162
Q355 2SC2712
D204 1S2837
SUB PIC
SUB BRT
HUE ADJ
SUB COL
<COMB FILTER> CM001
Q006 2SC2712
Q007 2SC2712
D010 RD6.2MB1
BPF003
BELL L101
Q008 2SC2712
Q009 2SC2712
IC006 TC74HC157AP
IC007 TC74HC27AP
TP1
TP3
TP5 <B-Y>
TP6 <R-Y>
TP2 <Y>
TP7 SCP
S.C.P
IC004 TDA2595
Q204 2SA1162
Q205 2SC2712
IC002 TDA4555V8
DL101 DL
TP8 R
TP9 G
TP10 B
R G B
+12V
SECAM ON
Q101 DTC144EK
Q102 2SC2712
D101 1S2837
Q350 DTC144EK
D102 1S2837
D103 1S2837
Q010 2SC2712
Q221 2SC2712
H. FREQ
Q206 2SC2712
Q207 2SC2712
D202 1S2835
Q208 2SC2712
Q209 2SC2712
Q210 2SA1162
Q220 2SC2712
Q223 2SC2712
X101 17.16MHz
X102 8.86MHz
3.38M
4.43M
SECAM ID
SUB HUE
Q103 DTC144EK
Q104 DTC144EK
Q106 DTC144EK
Q107 DTC144EK
Q108 DTC144EK
Q356 DTC144EK
Q357 DTC144EK
D006 RD5.1M-T1B2
Q018 DTC114EK
Q019 DTC114EK
POWER CONT
+15V
D208 RD3.3M-T1B1
Q013 DTC144EK
D206 1S2837
D004 1S2837
D207 1S2837
Q012 DTC144EK
Q014 2SC2712
Q015 2SC2712
Q016 DTC144EK
Q017 DTC144EK
Q351 2SC2712
Q352 2SC2712
D210 1S2837
D209 RD3.3M-T1B1
Q347 DTC144EK
Q348 DTC144EK
Q349 DTC144EK
Q224 DTC144EK
Q225 DTC144EK
Q226 DTC144EK
IC009 CX-7916
V. SYNC
H. SYNC
+5V
5V
12V
9V
15V
SHARP
Y
C

15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

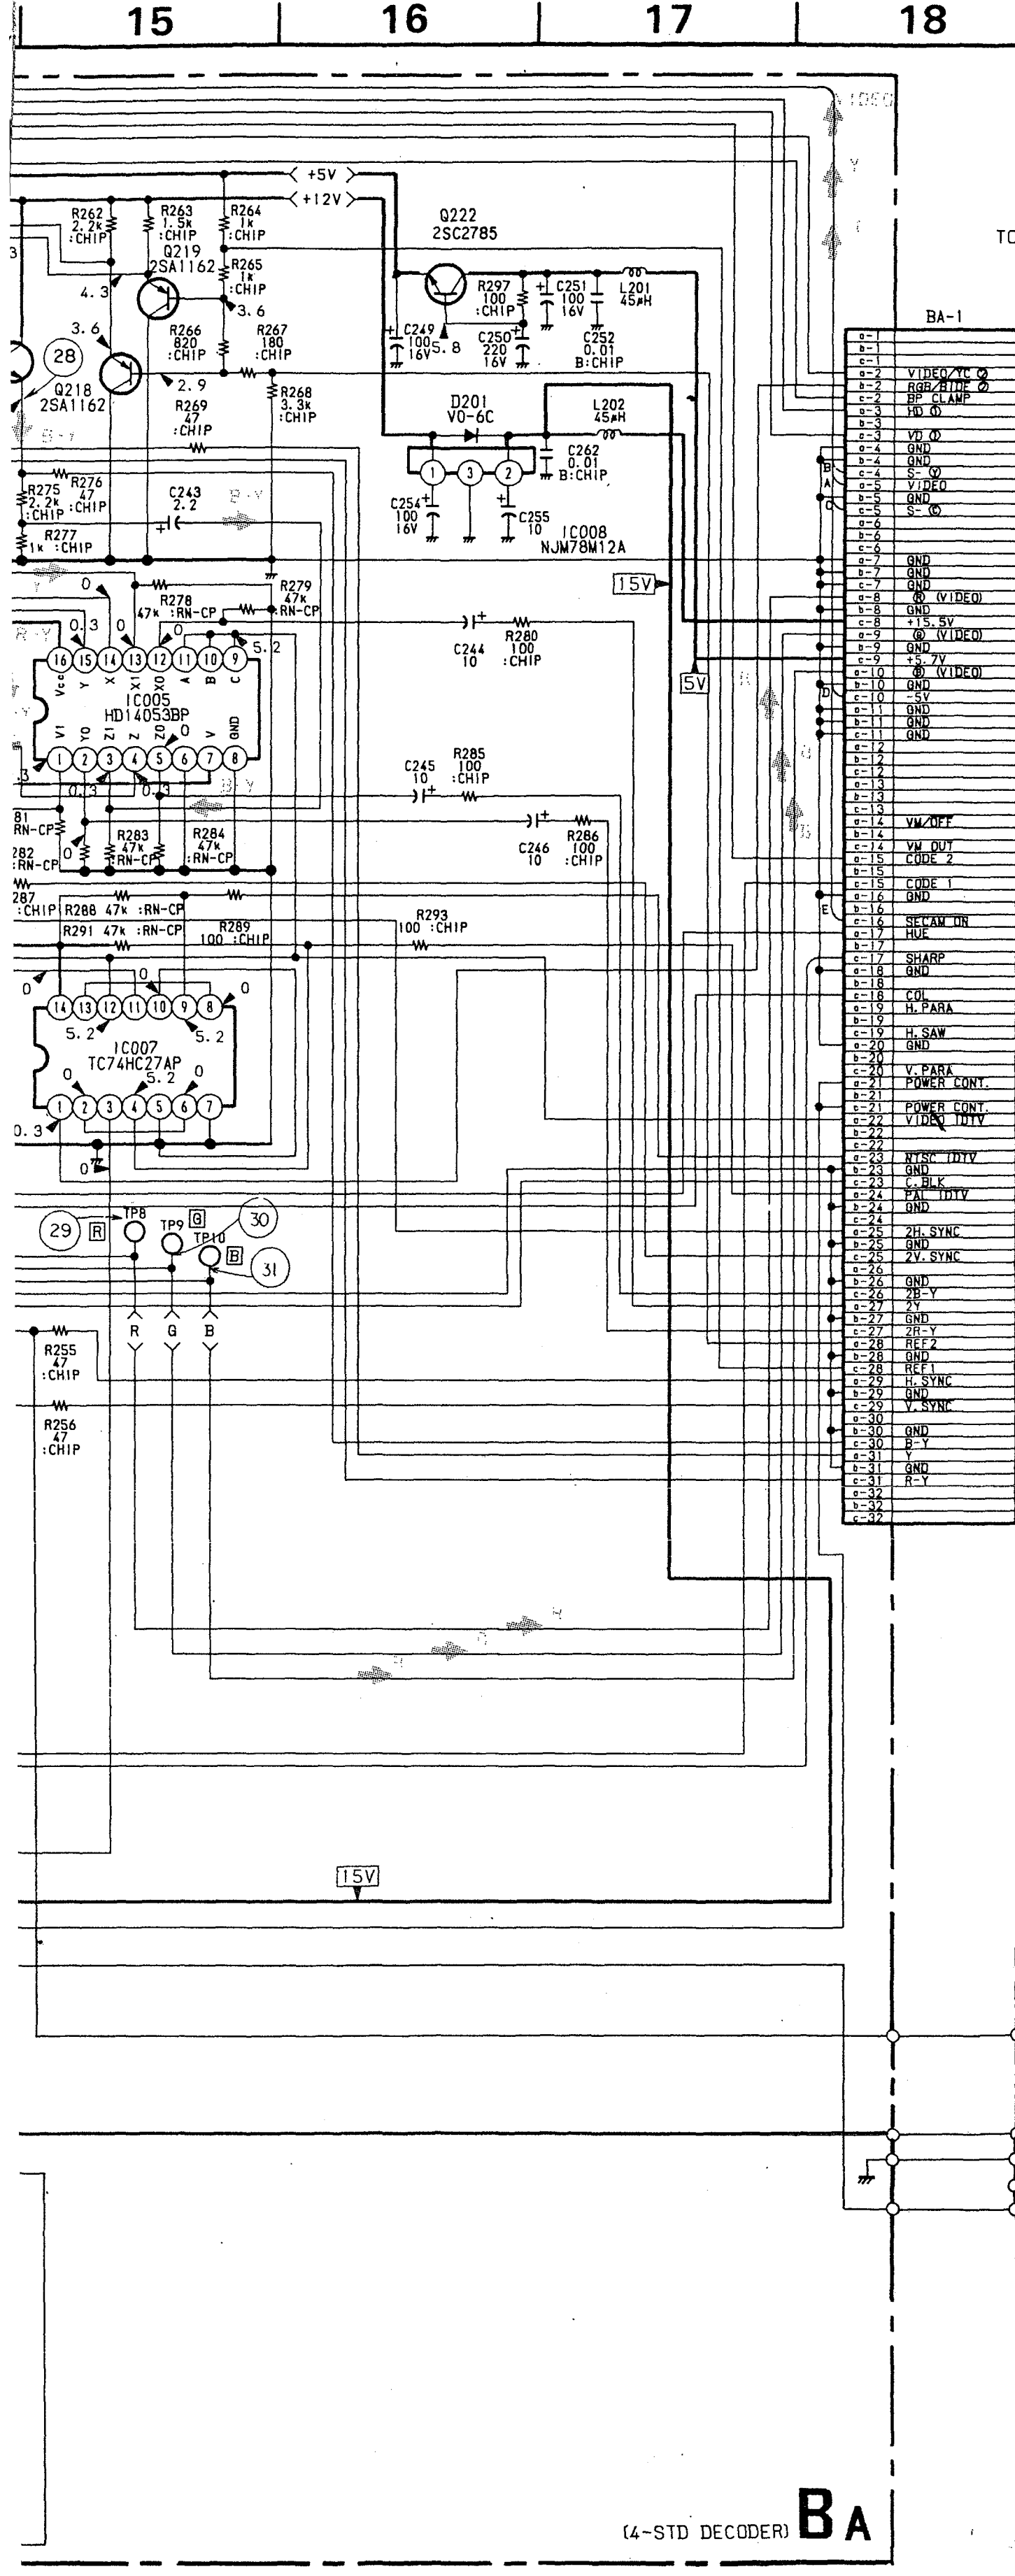
+5V
+12V
R262 2.2k :CHIP
R263 1.5k :CHIP
R264 1k :CHIP
Q219 2SA1162
R265 1k :CHIP
Q222 2SC2785
R297 100 :CHIP
C251 100 16V
L201 45μH
C249 100 16V
C250 220 16V
C252 0.01 B:CHIP
R266 820 :CHIP
R267 180 :CHIP
R268 3.3k :CHIP
Q218 2SA1162
R269 47 :CHIP
D201 VO-6C
L202 45μH
C262 0.01 B:CHIP
C254 100 16V
C255 10
IC008 NJM78M12A
15V
R275 2.2k :CHIP
R276 47 :CHIP
R277 1k :CHIP
C243 2.2
R278 47k :RN-CP
R279 47k :RN-CP
R280 100 :CHIP
C244 10
IC005 HD14053BP
C245 10
R285 100 :CHIP
R281 :RN-CP
R282 :RN-CP
R283 47k :RN-CP
R284 47k :RN-CP
C246 10
R286 100 :CHIP
R287 :CHIP
R288 47k :RN-CP
R291 47k :RN-CP
R289 100 :CHIP
R293 100 :CHIP
IC007 TC74HC27AP
TP8
TP9
TP10
R G B
R255 47 :CHIP
R256 47 :CHIP
5V
15V
TO BM BOARD BM-4
BA-1
VIDEO/TC ⓓ
GND
HD ⓓ
VD ⓓ
GND
S ⓓ
V.VIDEO
GND
S ⓓ
GND
ⓓ (VIDEO)
GND
+15.5V
ⓓ (VIDEO)
GND
+5V
ⓓ (VIDEO)
GND
VM/OFF
VM OUT
CODE 2
CODE 1
GND
SECAM ON
HUE
SHARP
GND
COL
H.PARA
H.SAW
GND
V.PARA
POWER CONT.
POWER CONT.
VIDEO DUTY
NTSC DUTY
GND
BLK
PAL DUTY
GND
2H.SYNC
GND
2V.SYNC
GND
R-Y
GND
2B-Y
REF2
GND
REF1
H.SYNC
GND
V.SYNC
GND
B-Y
GND
R-Y
(4-STD DECODER) BA

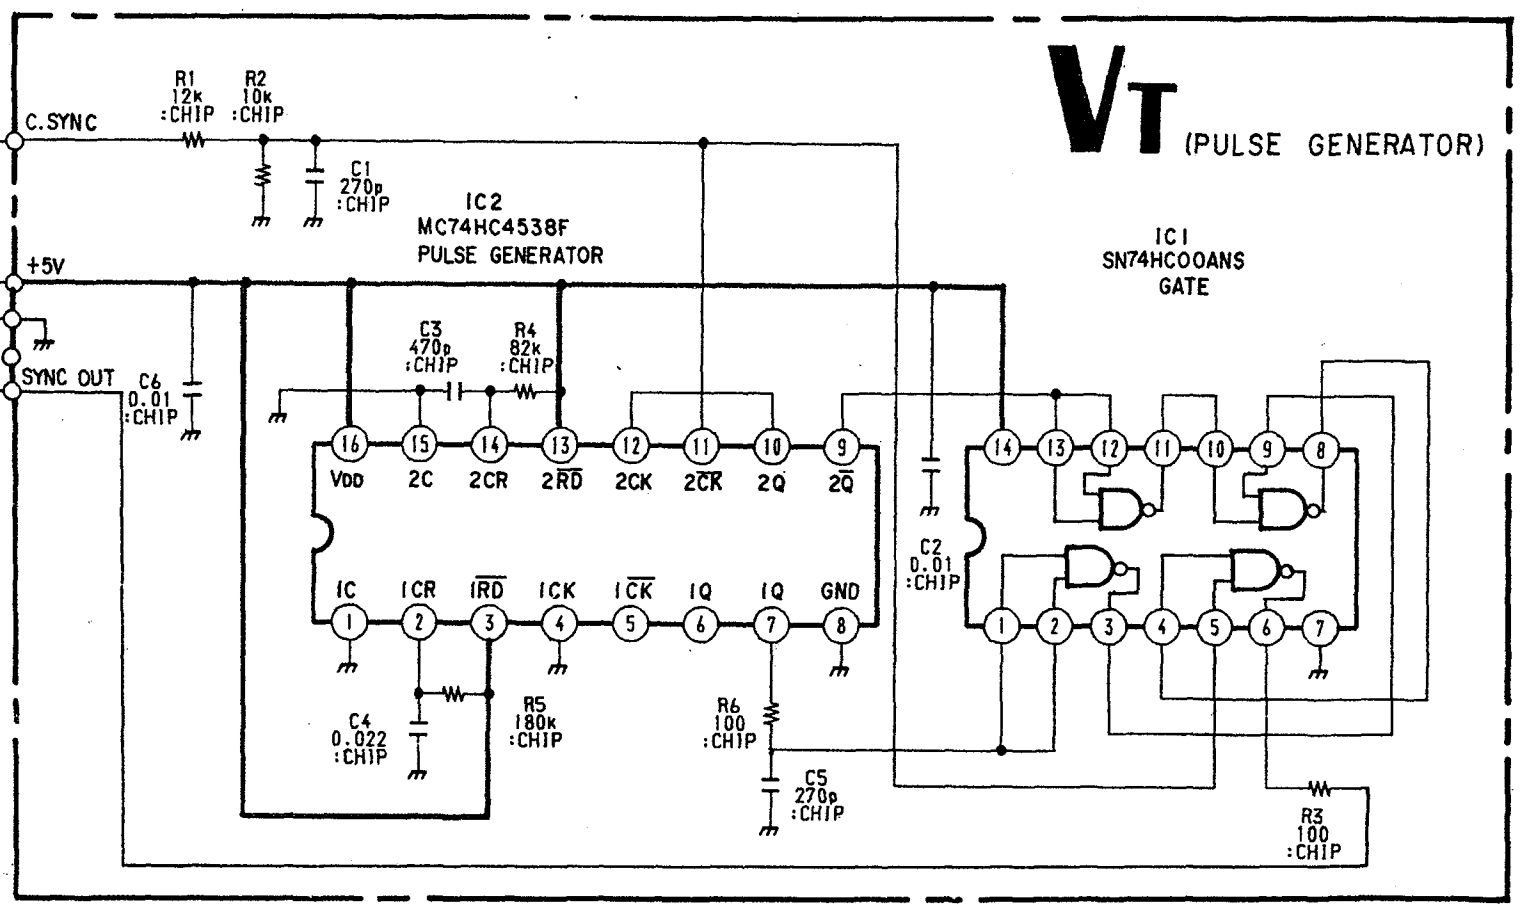
VT (PULSE GENERATOR)
C.SYNC
+5V
SYNC OUT
R1 12k :CHIP
R2 10k :CHIP
C1 270p :CHIP
IC2 MC74HC4538F PULSE GENERATOR
C3 470p :CHIP
R4 82k :CHIP
C6 0.01 :CHIP
VDD 2C 2CR 2RD 2CK 2CK 2Q 2Q
IC ICR IRD ICK ICK IQ IQ GND
C4 0.022 :CHIP
R5 180k :CHIP
R6 100 :CHIP
C5 270p :CHIP
C2 0.01 :CHIP
IC1 SN74HC00ANS GATE
R3 100 :CHIP

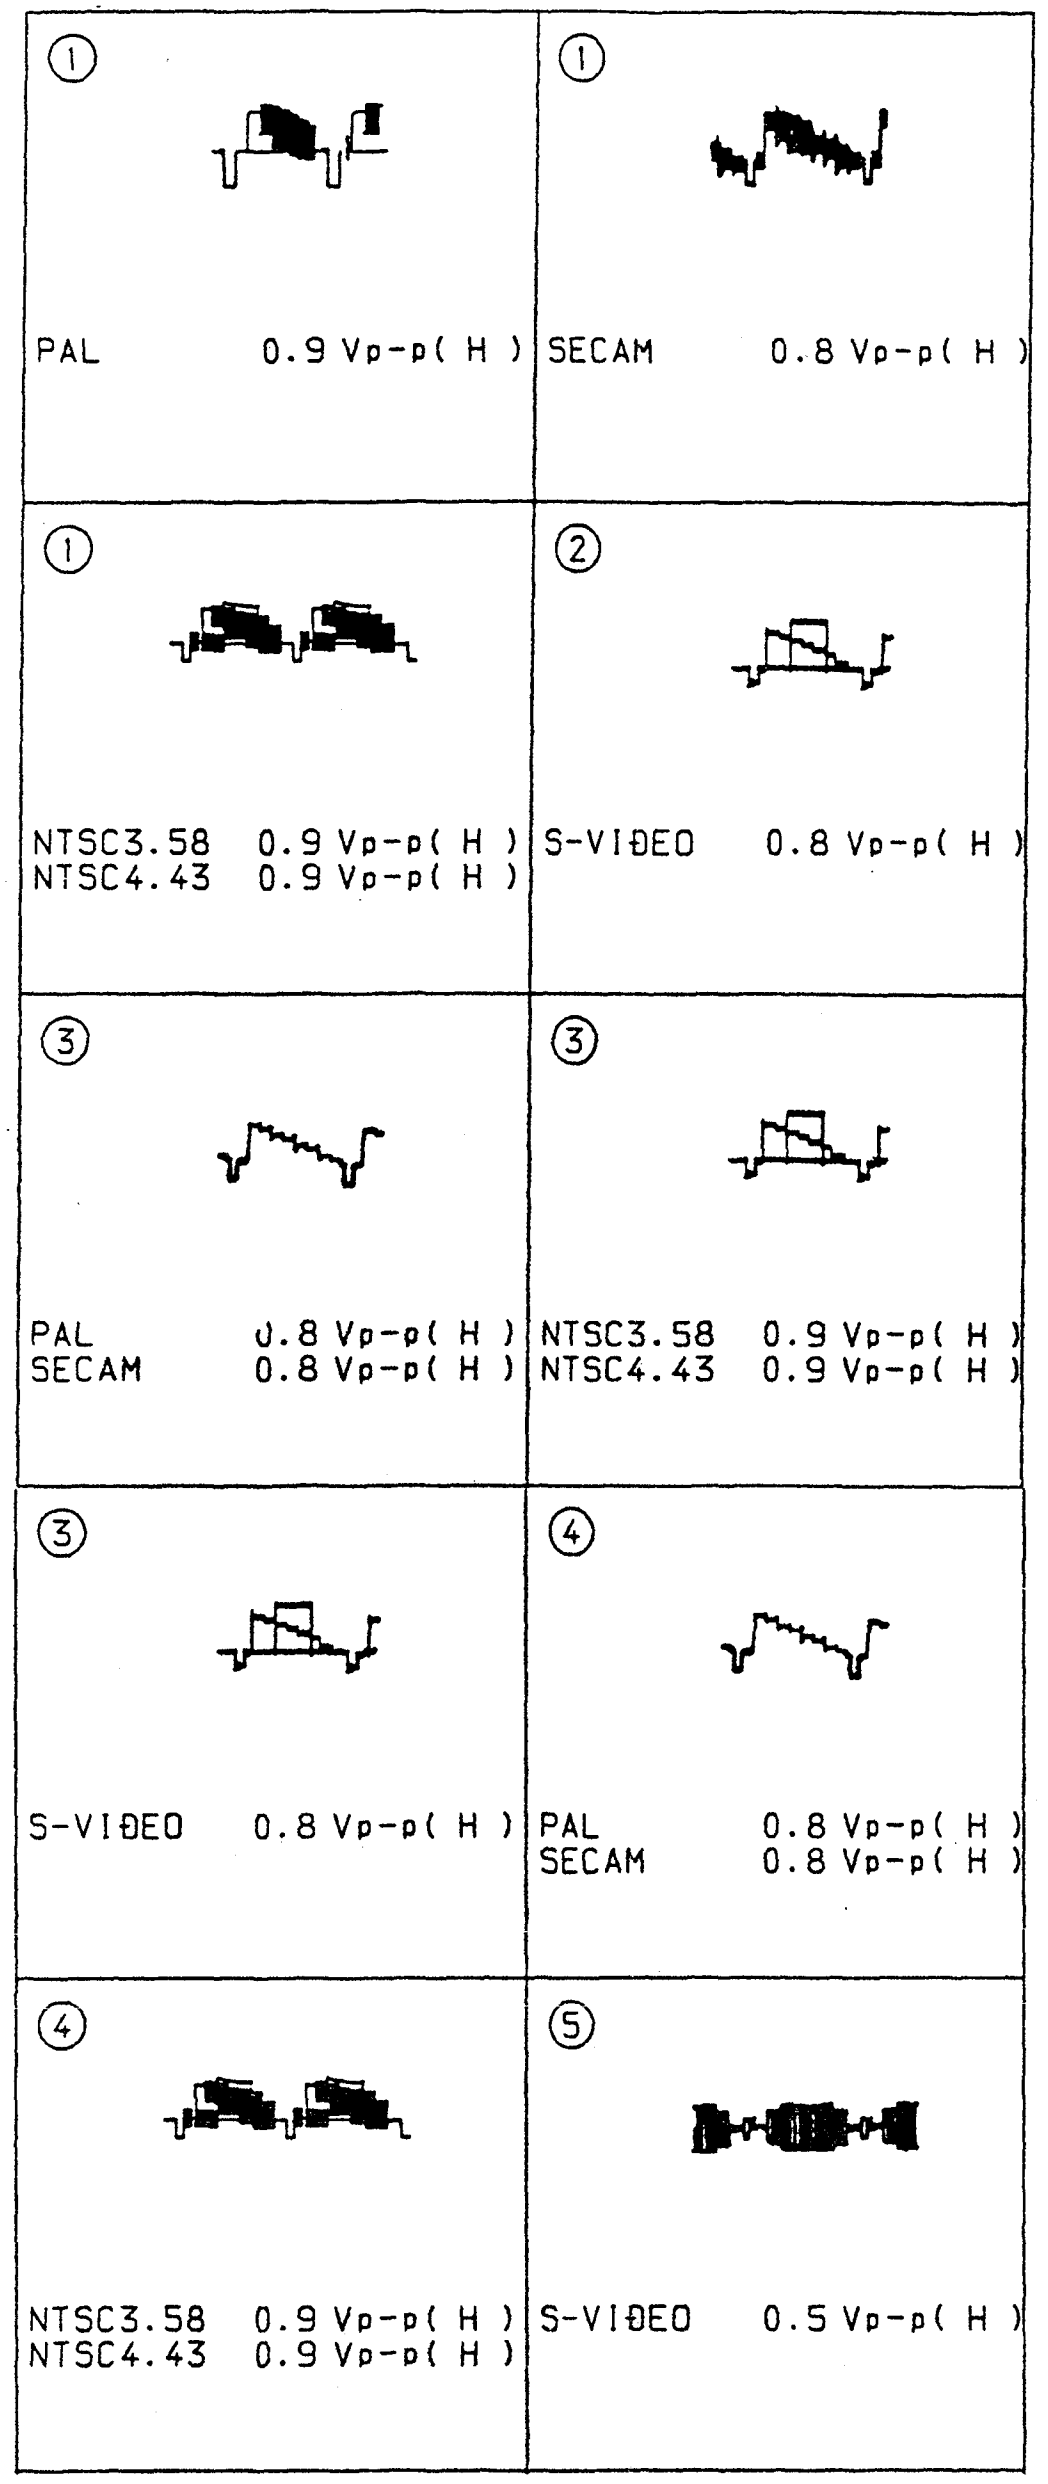

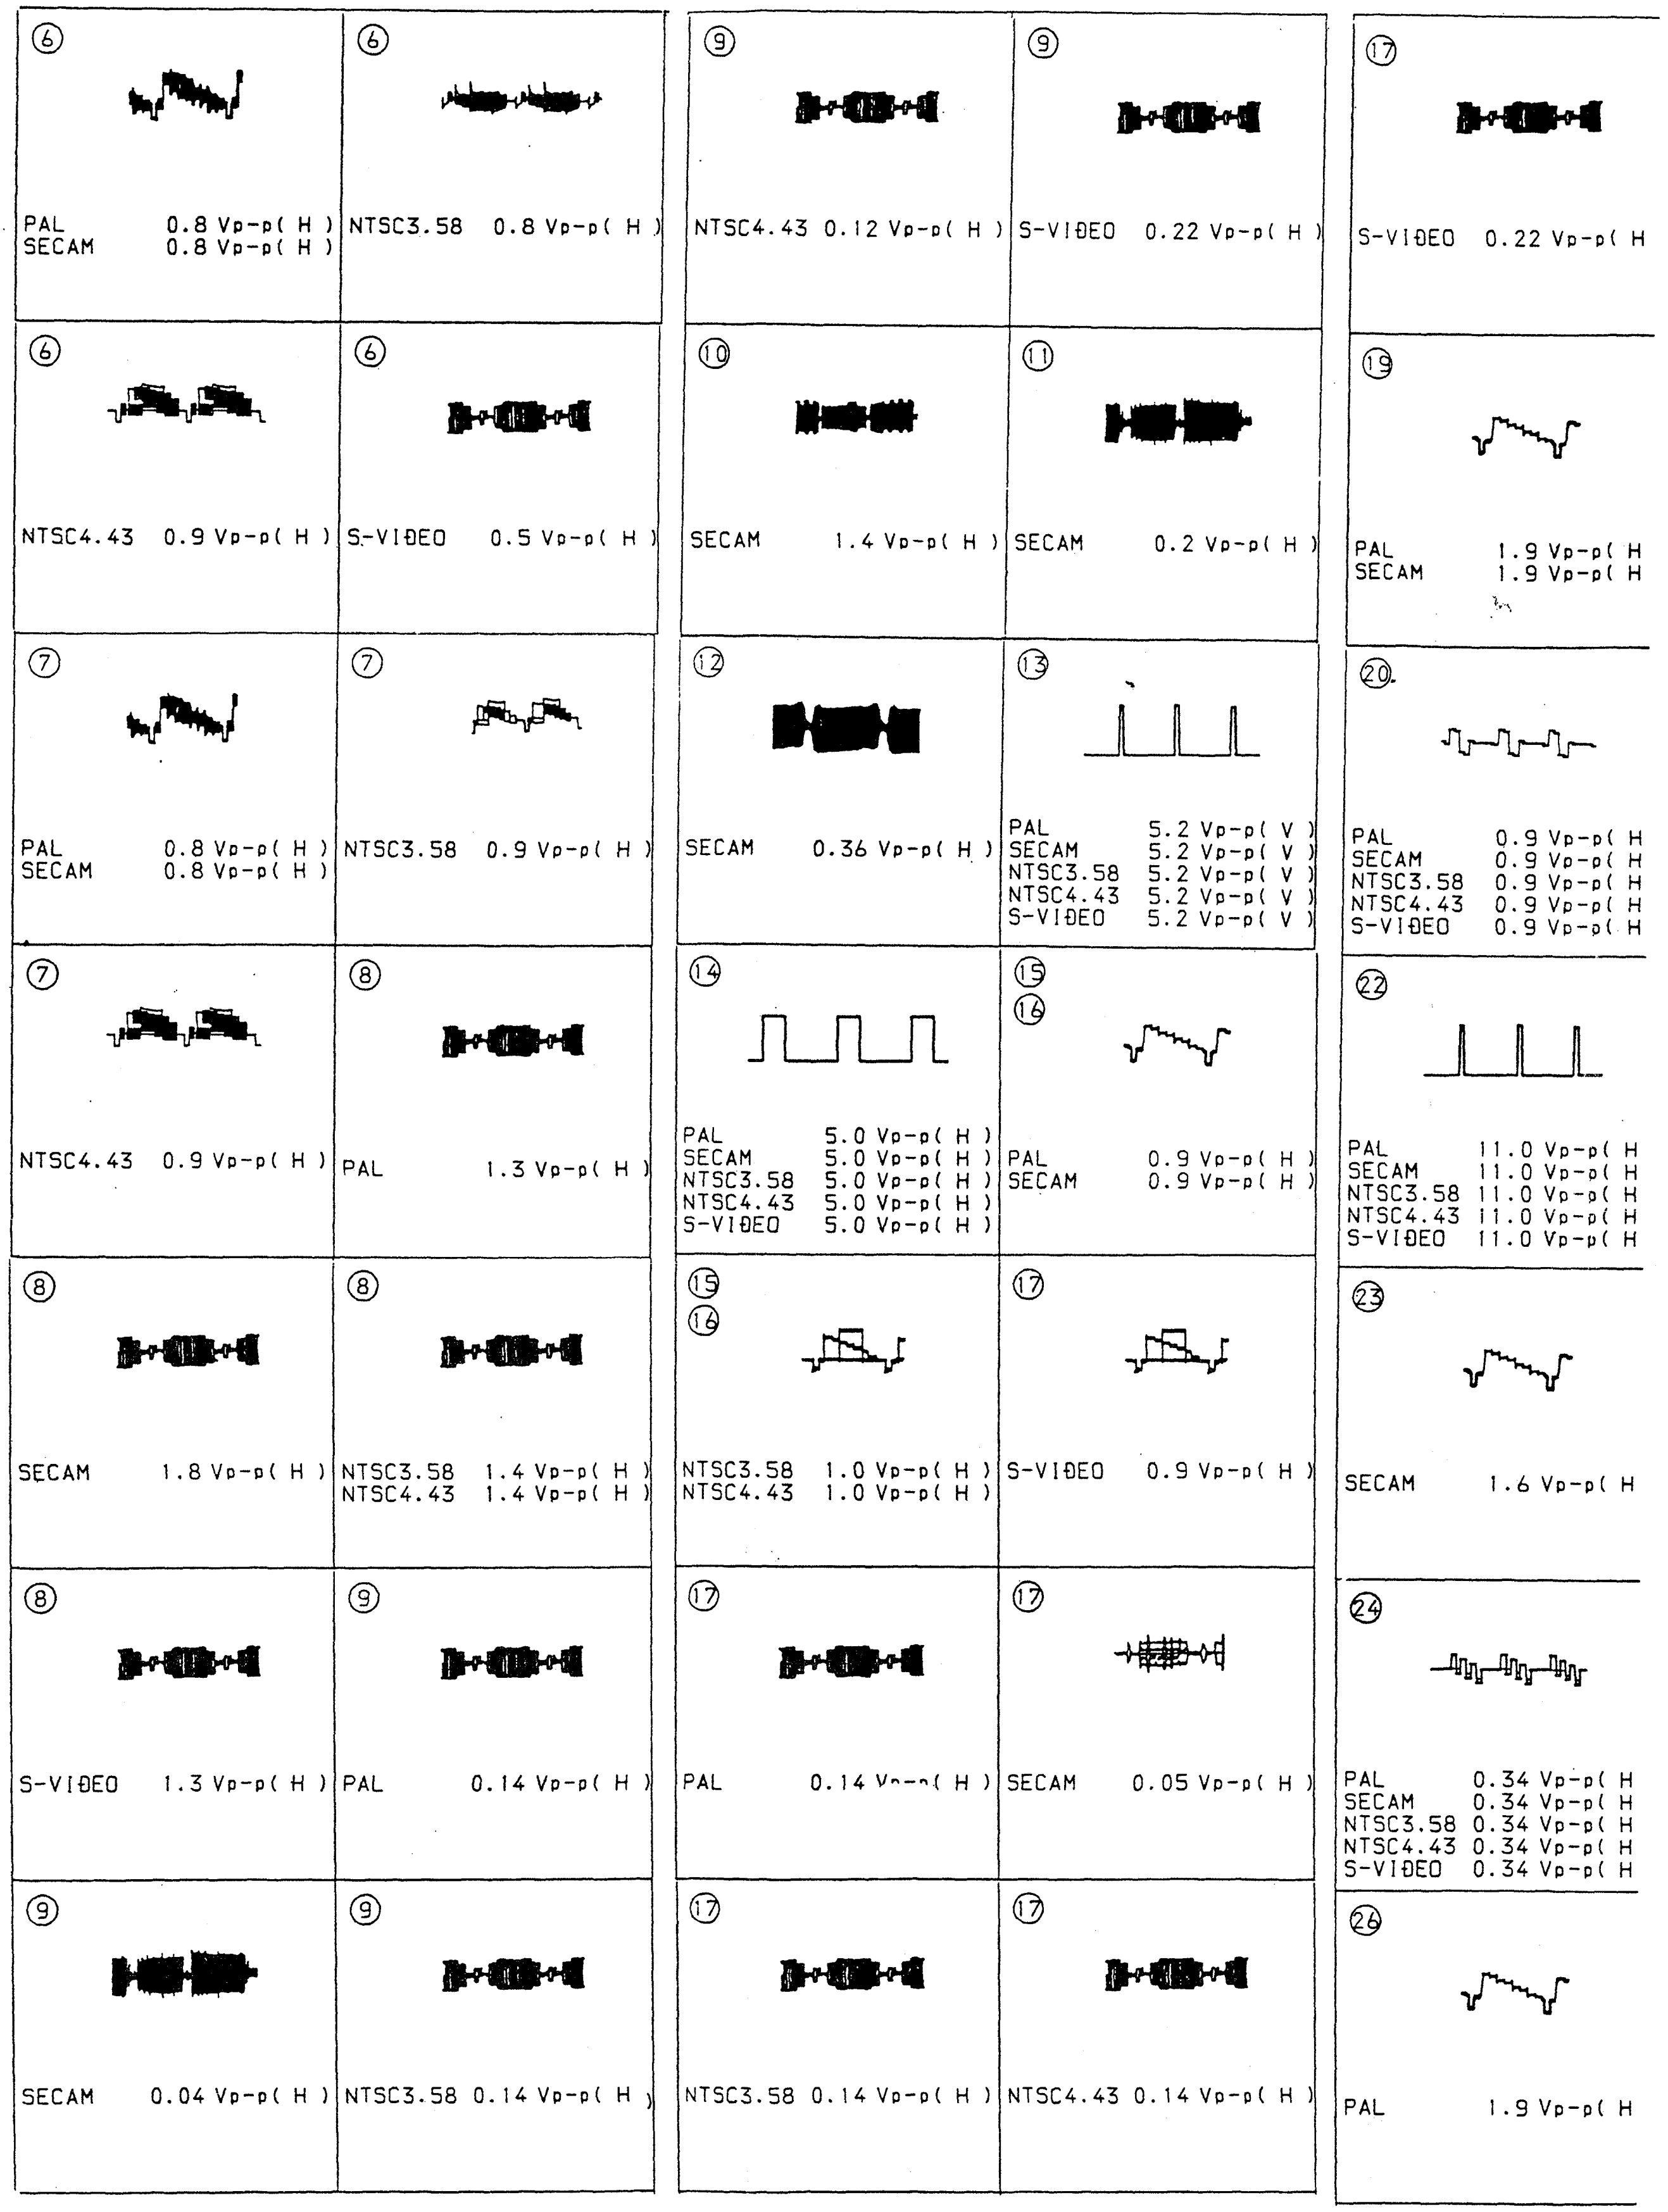

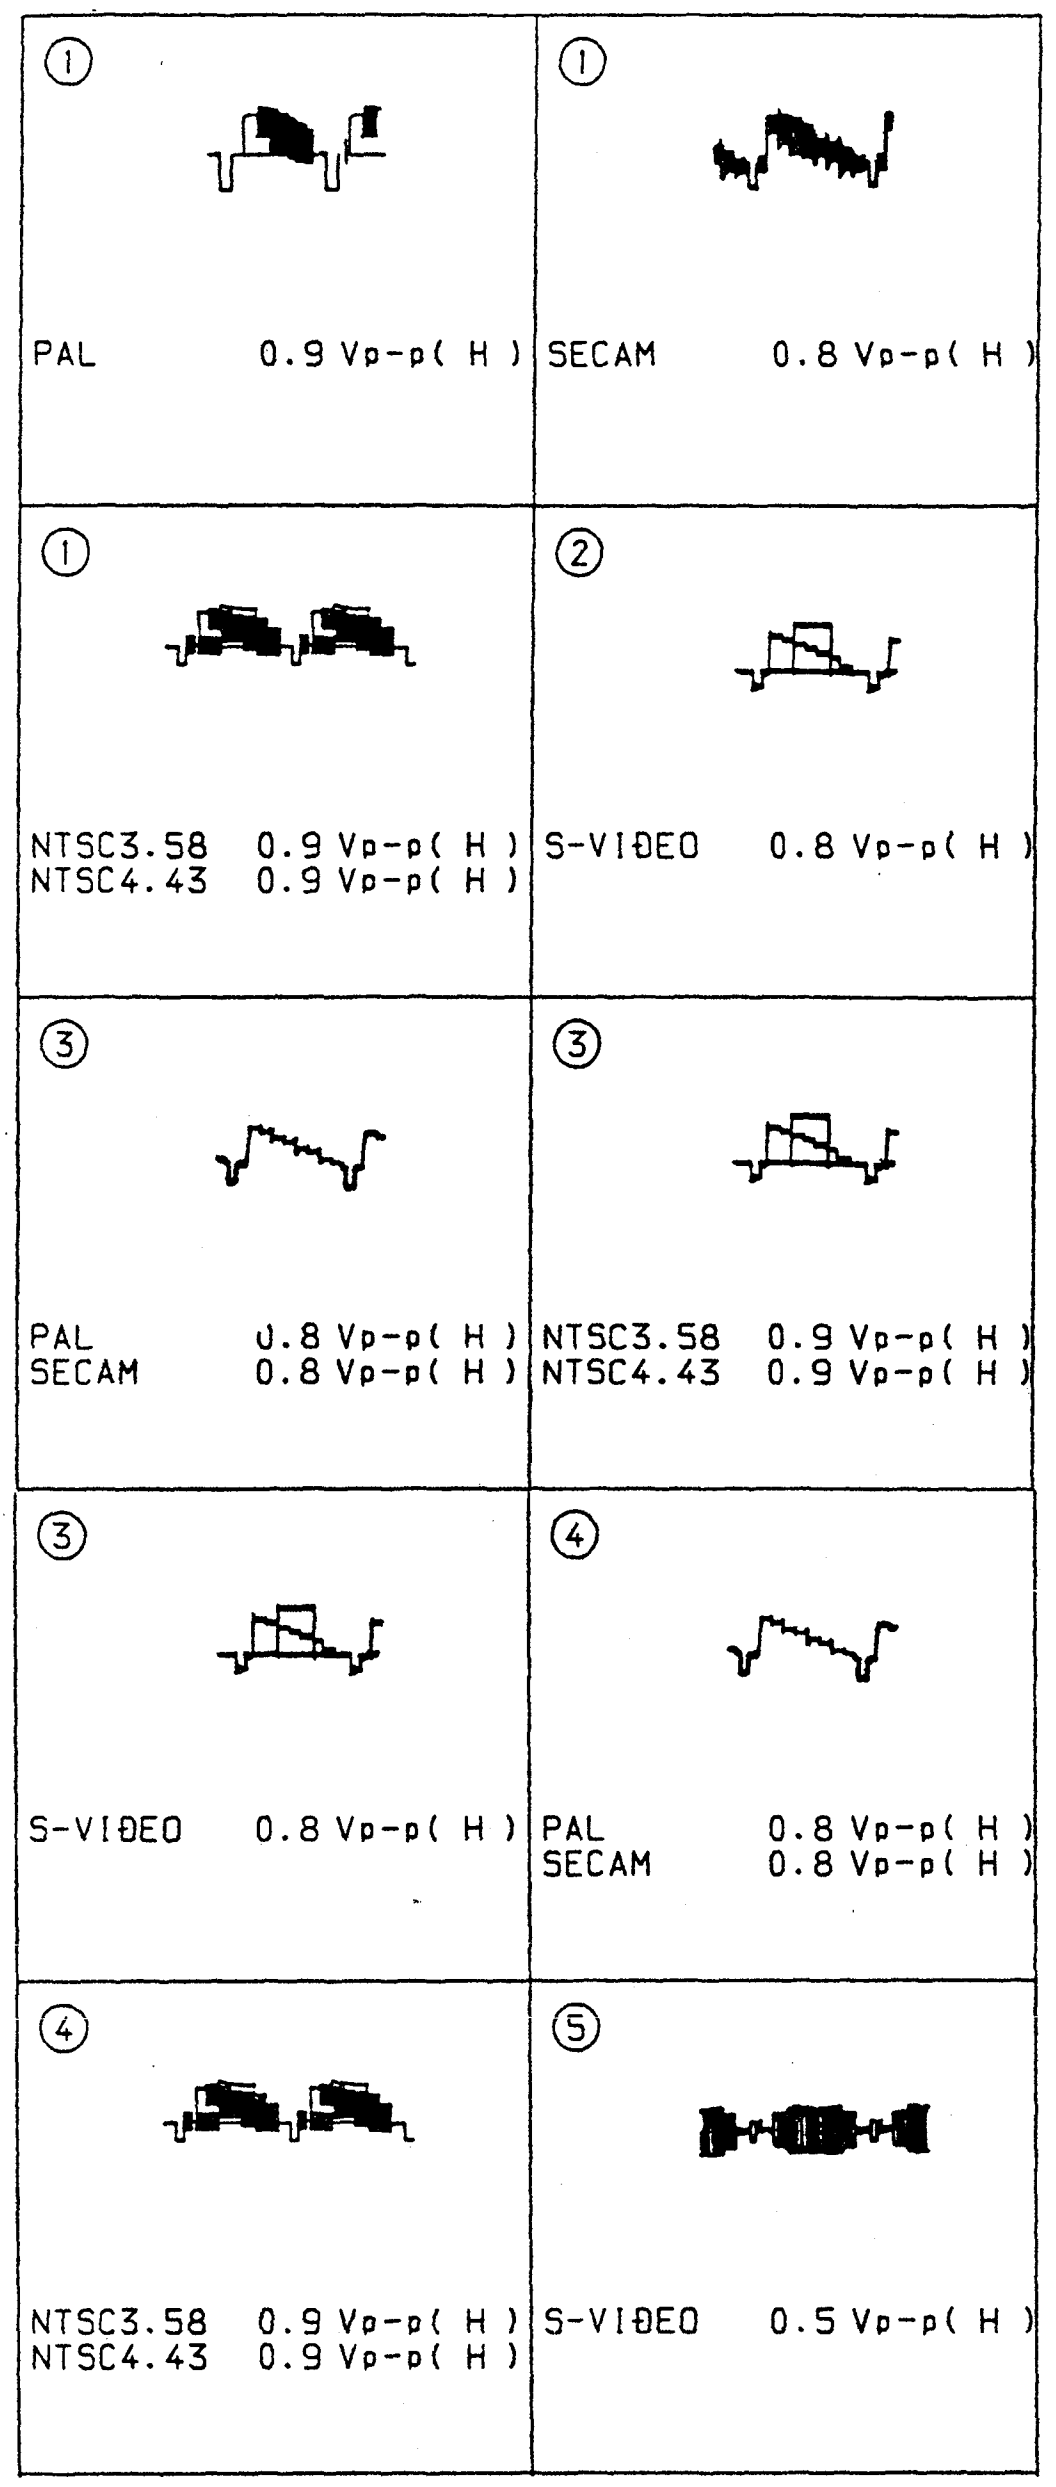
①
PAL 0.9 Vp-p(H)
①
SECAM 0.8 Vp-p(H)
①
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)
②
S-VIDEO 0.8 Vp-p(H)
③
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
③
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)
③
S-VIDEO 0.8 Vp-p(H)
④
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
④
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)
⑤
S-VIDEO 0.5 Vp-p(H)

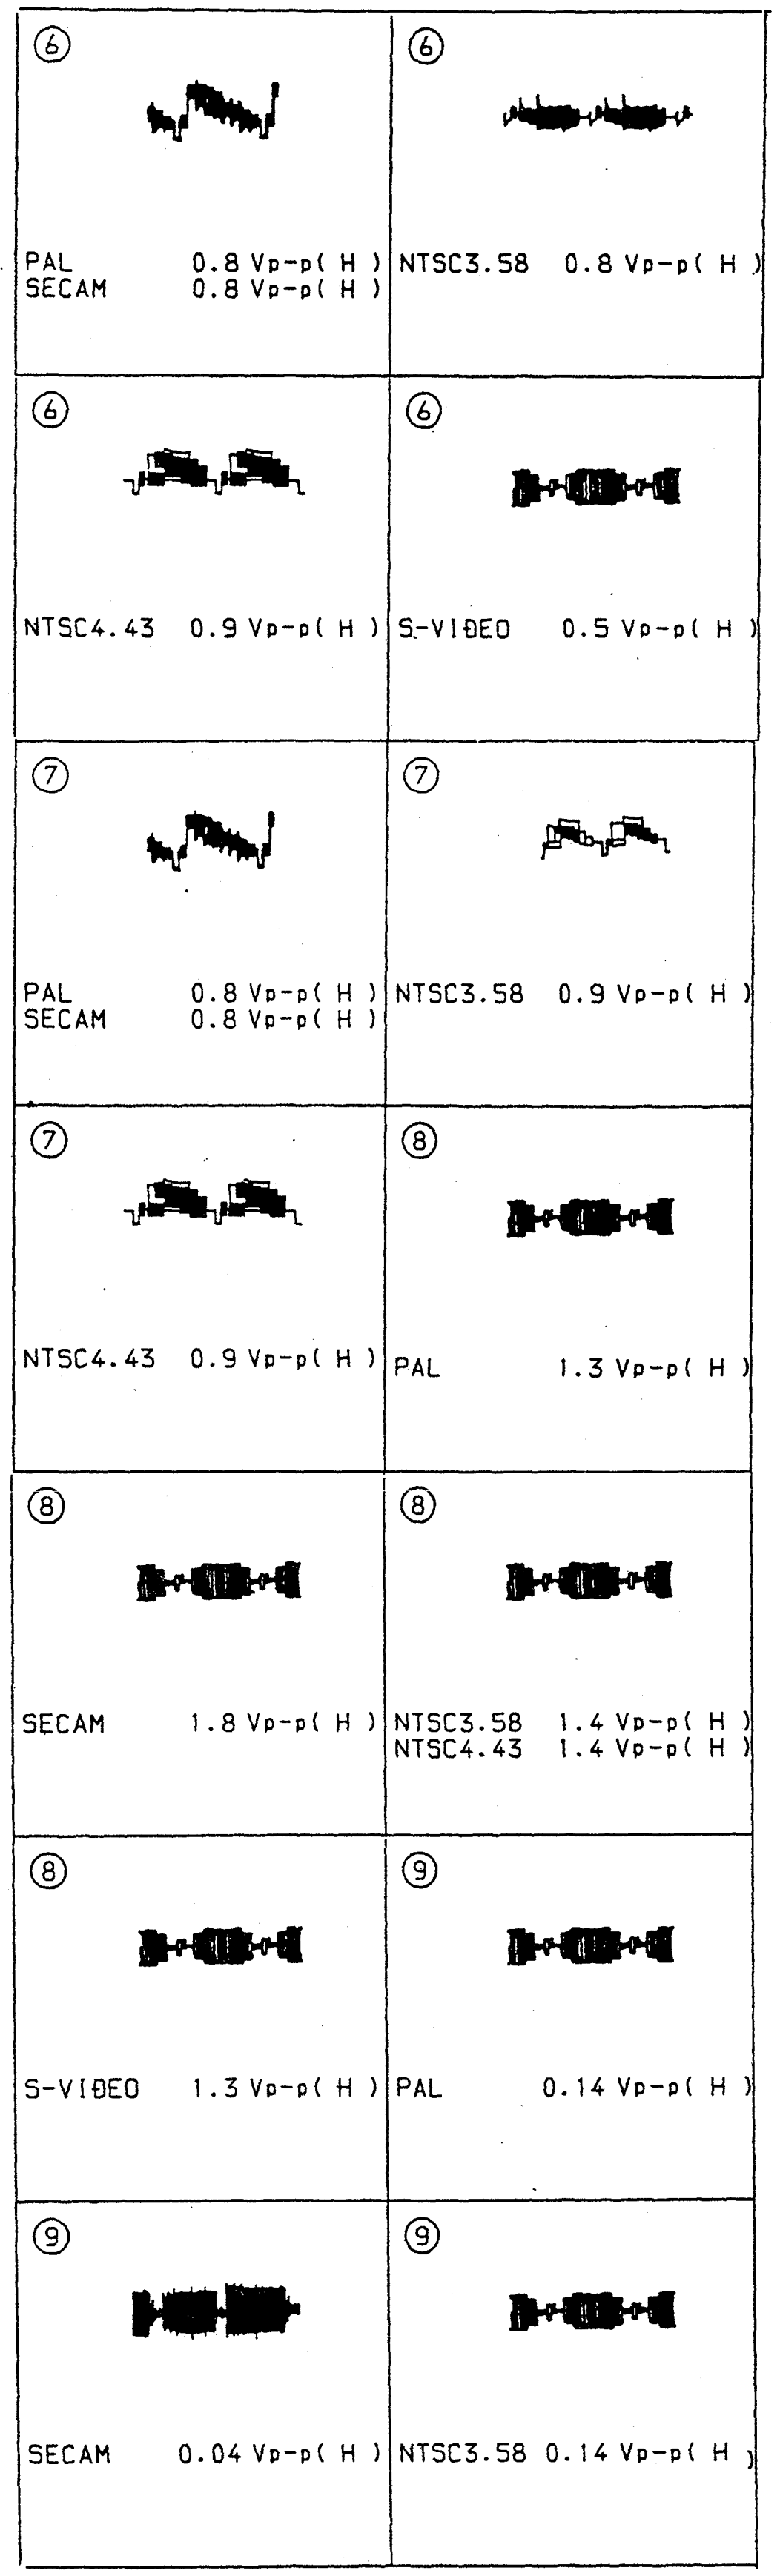
⑥
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
⑥
NTSC3.58 0.8 Vp-p(H)
⑥
NTSC4.43 0.9 Vp-p(H)
⑥
S-VIDEO 0.5 Vp-p(H)
⑦
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
⑦
NTSC3.58 0.9 Vp-p(H)
⑦
NTSC4.43 0.9 Vp-p(H)
⑧
PAL 1.3 Vp-p(H)
⑧
SECAM 1.8 Vp-p(H)
⑧
NTSC3.58 1.4 Vp-p(H)
NTSC4.43 1.4 Vp-p(H)
⑧
S-VIDEO 1.3 Vp-p(H)
⑨
PAL 0.14 Vp-p(H)
⑨
SECAM 0.04 Vp-p(H)
⑨
NTSC3.58 0.14 Vp-p(H)

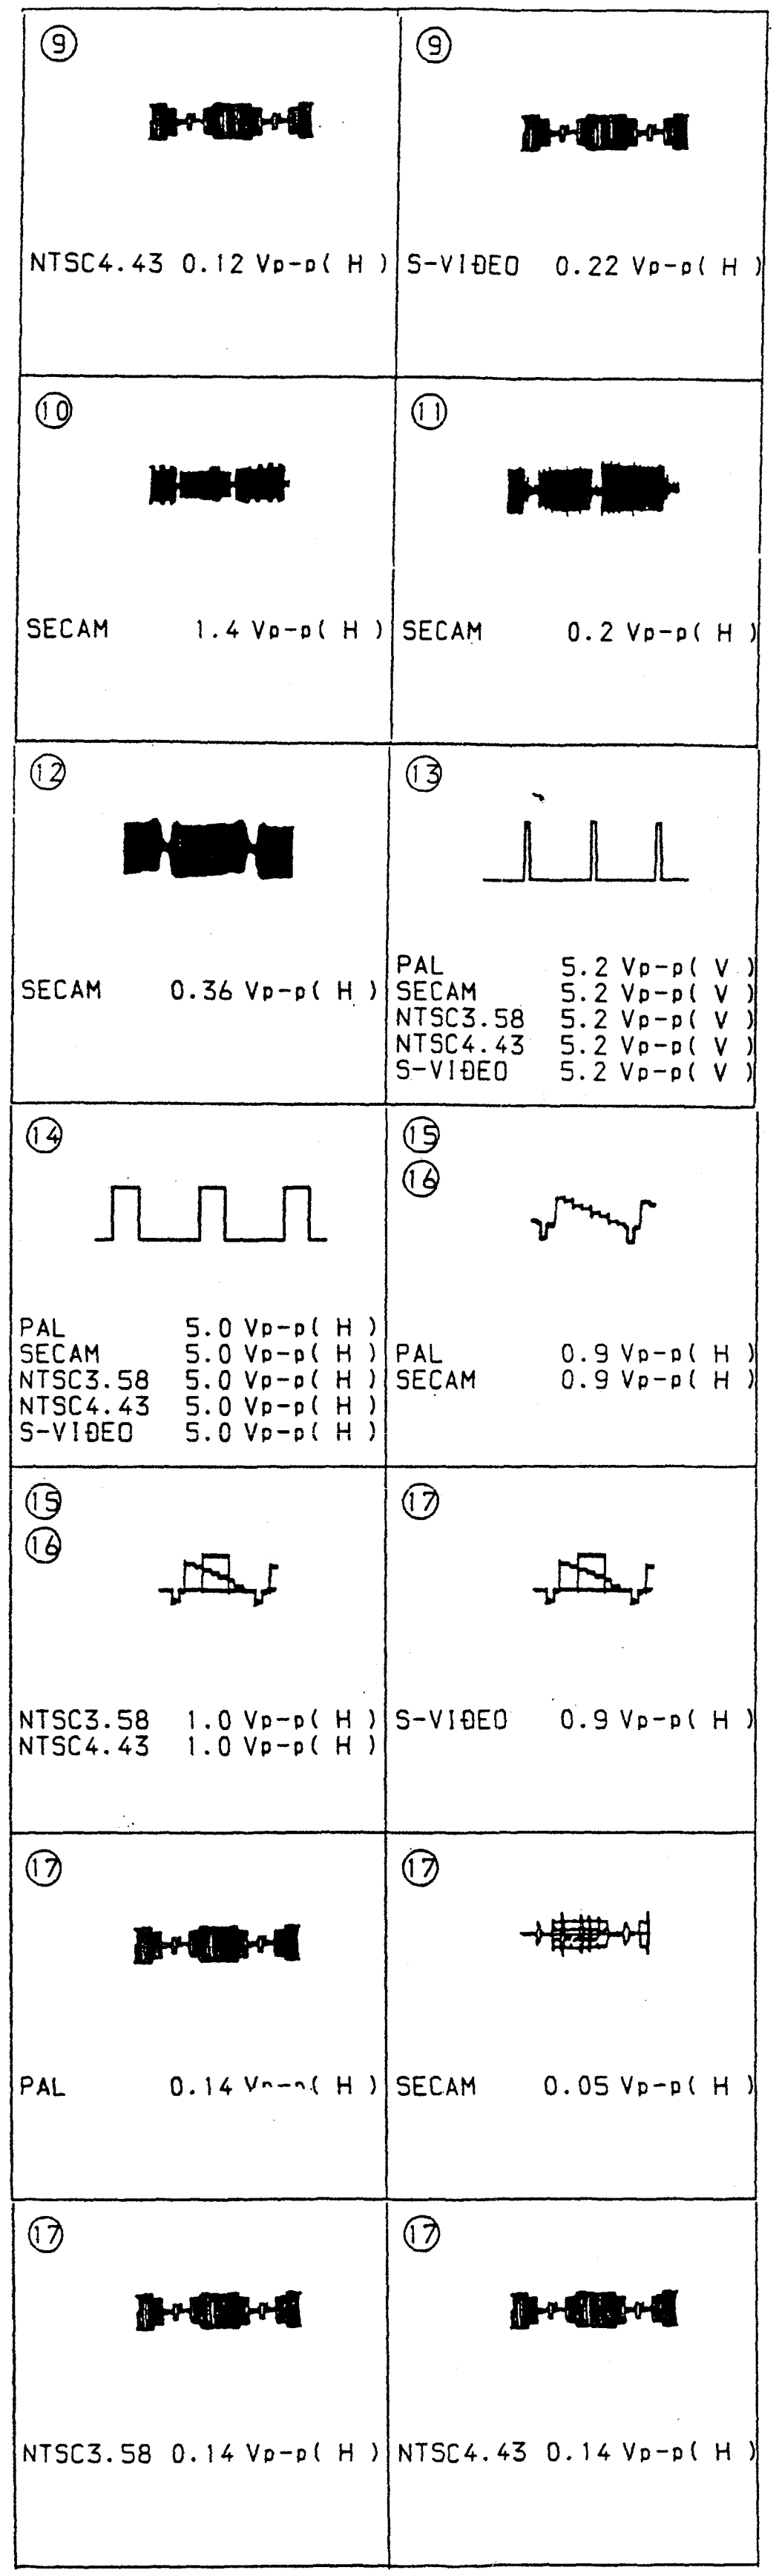
⑨
NTSC4.43 0.12 Vp-p(H)
⑨
S-VIDEO 0.22 Vp-p(H)
⑩
SECAM 1.4 Vp-p(H)
⑪
SECAM 0.2 Vp-p(H)
⑫
SECAM 0.36 Vp-p(H)
⑬
PAL 5.2 Vp-p(V)
SECAM 5.2 Vp-p(V)
NTSC3.58 5.2 Vp-p(V)
NTSC4.43 5.2 Vp-p(V)
S-VIDEO 5.2 Vp-p(V)
⑭
PAL 5.0 Vp-p(H)
SECAM 5.0 Vp-p(H)
NTSC3.58 5.0 Vp-p(H)
NTSC4.43 5.0 Vp-p(H)
S-VIDEO 5.0 Vp-p(H)
⑮
⑯
PAL 0.9 Vp-p(H)
SECAM 0.9 Vp-p(H)
⑮
⑯
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
⑰
S-VIDEO 0.9 Vp-p(H)
⑰
PAL 0.14 Vp-p(H)
⑰
SECAM 0.05 Vp-p(H)
⑰
NTSC3.58 0.14 Vp-p(H)
⑰
NTSC4.43 0.14 Vp-p(H)

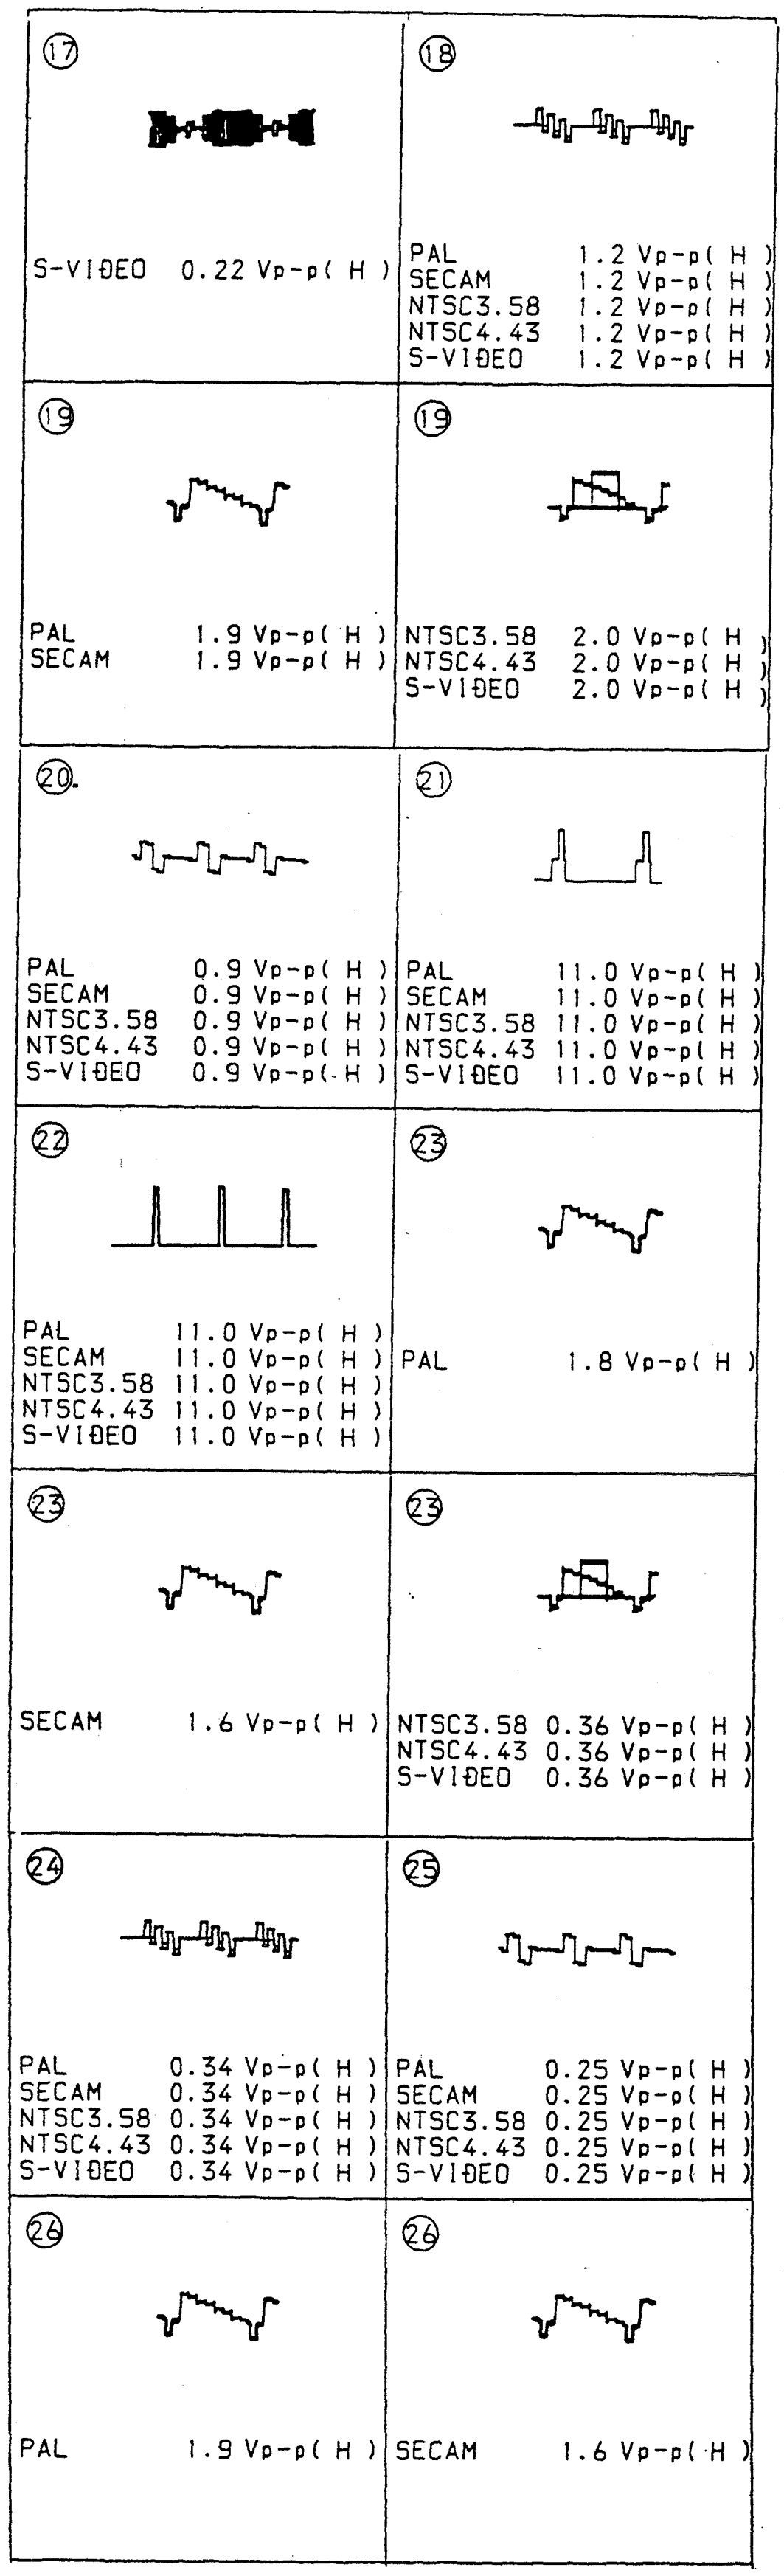
⑰
S-VIDEO 0.22 Vp-p(H)
⑱
PAL 1.2 Vp-p(H)
SECAM 1.2 Vp-p(H)
NTSC3.58 1.2 Vp-p(H)
NTSC4.43 1.2 Vp-p(H)
S-VIDEO 1.2 Vp-p(H)
⑲
PAL 1.9 Vp-p(H)
SECAM 1.9 Vp-p(H)
⑲
NTSC3.58 2.0 Vp-p(H)
NTSC4.43 2.0 Vp-p(H)
S-VIDEO 2.0 Vp-p(H)
⑳
PAL 0.9 Vp-p(H)
SECAM 0.9 Vp-p(H)
NTSC3.58 0.9 Vp-p(H)
NTSC4.43 0.9 Vp-p(H)
S-VIDEO 0.9 Vp-p(H)
㉑
PAL 11.0 Vp-p(H)
SECAM 11.0 Vp-p(H)
NTSC3.58 11.0 Vp-p(H)
NTSC4.43 11.0 Vp-p(H)
S-VIDEO 11.0 Vp-p(H)
㉒
PAL 11.0 Vp-p(H)
SECAM 11.0 Vp-p(H)
NTSC3.58 11.0 Vp-p(H)
NTSC4.43 11.0 Vp-p(H)
S-VIDEO 11.0 Vp-p(H)
㉓
PAL 1.8 Vp-p(H)
㉓
SECAM 1.6 Vp-p(H)
㉓
NTSC3.58 0.36 Vp-p(H)
NTSC4.43 0.36 Vp-p(H)
S-VIDEO 0.36 Vp-p(H)
㉔
PAL 0.34 Vp-p(H)
SECAM 0.34 Vp-p(H)
NTSC3.58 0.34 Vp-p(H)
NTSC4.43 0.34 Vp-p(H)
S-VIDEO 0.34 Vp-p(H)
㉕
PAL 0.25 Vp-p(H)
SECAM 0.25 Vp-p(H)
NTSC3.58 0.25 Vp-p(H)
NTSC4.43 0.25 Vp-p(H)
S-VIDEO 0.25 Vp-p(H)
㉖
PAL 1.9 Vp-p(H)
㉖
SECAM 1.6 Vp-p(H)

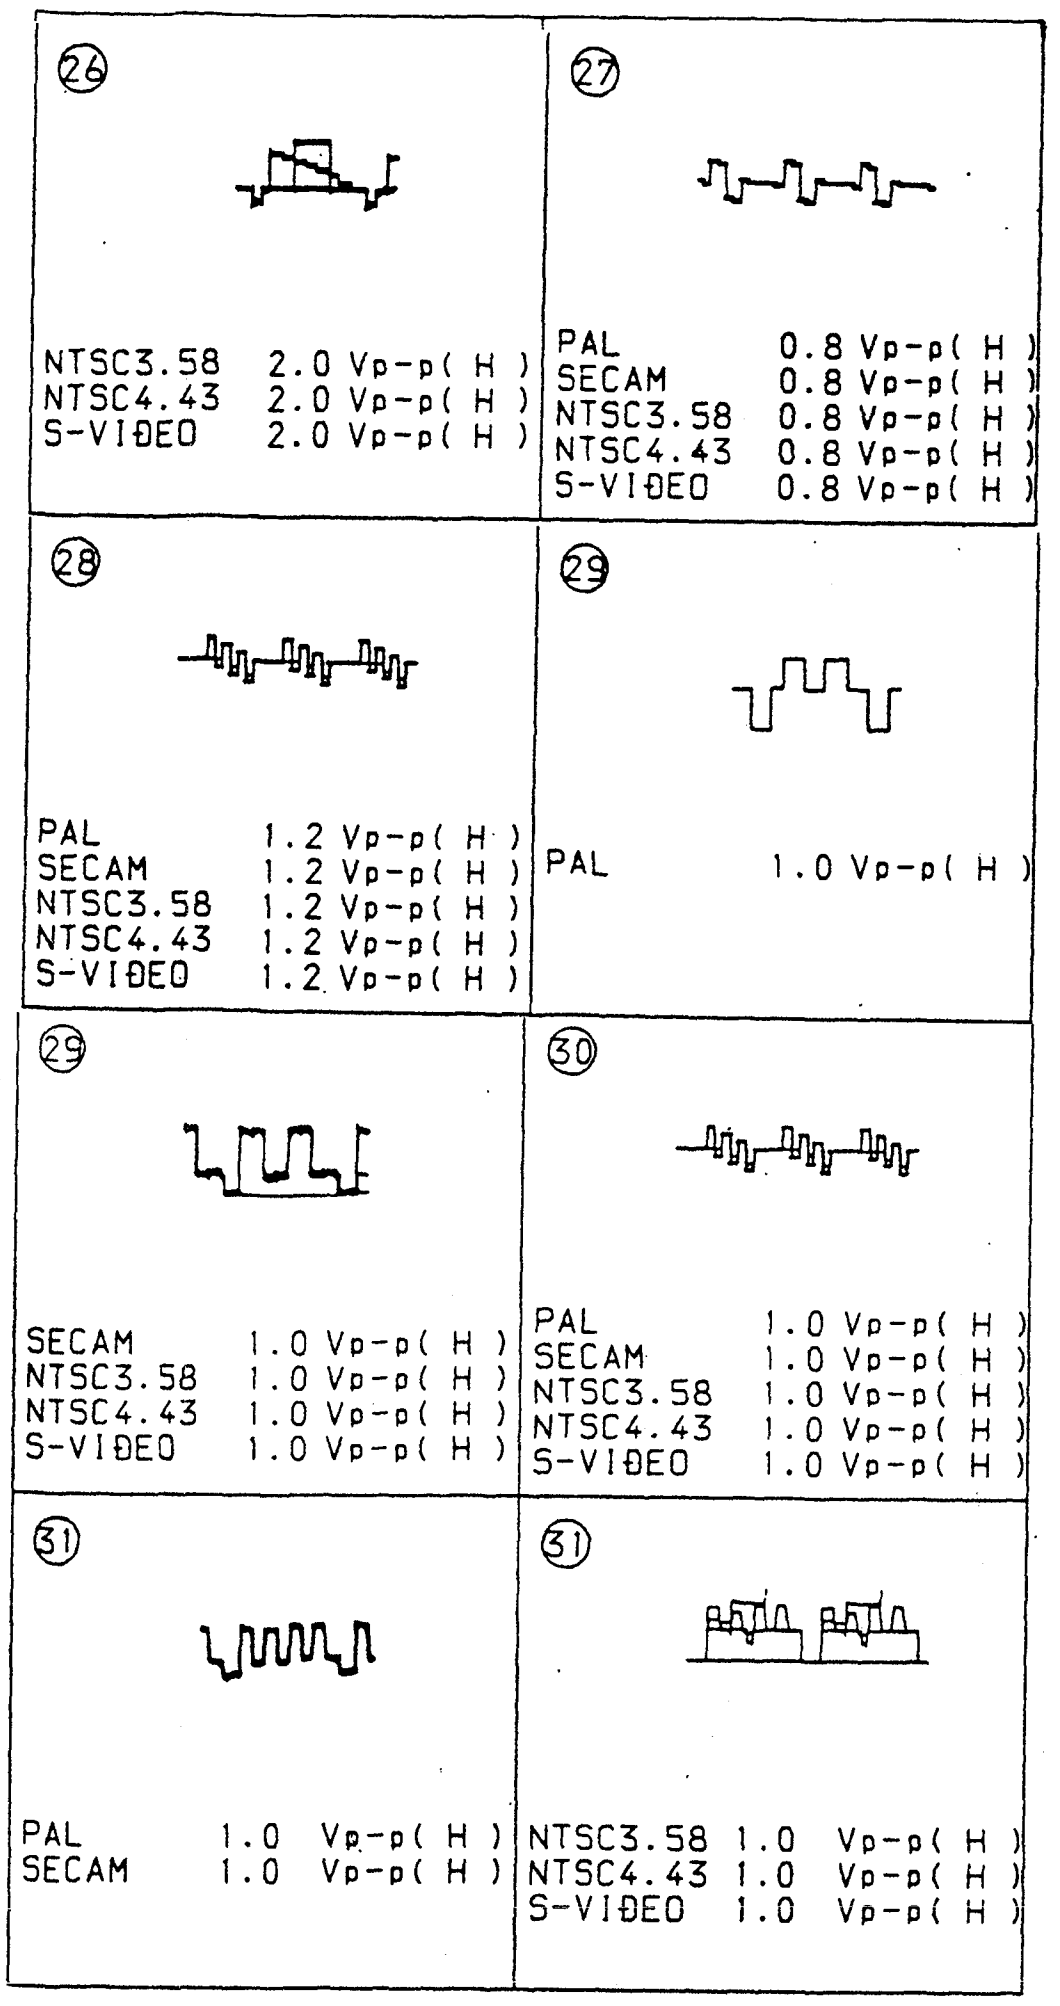
㉖
NTSC3.58 2.0 Vp-p(H)
NTSC4.43 2.0 Vp-p(H)
S-VIDEO 2.0 Vp-p(H)
㉗
PAL 0.8 Vp-p(H)
SECAM 0.8 Vp-p(H)
NTSC3.58 0.8 Vp-p(H)
NTSC4.43 0.8 Vp-p(H)
S-VIDEO 0.8 Vp-p(H)
㉘
PAL 1.2 Vp-p(H)
SECAM 1.2 Vp-p(H)
NTSC3.58 1.2 Vp-p(H)
NTSC4.43 1.2 Vp-p(H)
S-VIDEO 1.2 Vp-p(H)
㉙
PAL 1.0 Vp-p(H)
㉙
SECAM 1.0 Vp-p(H)
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)
㉚
PAL 1.0 Vp-p(H)
SECAM 1.0 Vp-p(H)
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)
㉛
PAL 1.0 Vp-p(H)
SECAM 1.0 Vp-p(H)
㉛
NTSC3.58 1.0 Vp-p(H)
NTSC4.43 1.0 Vp-p(H)
S-VIDEO 1.0 Vp-p(H)

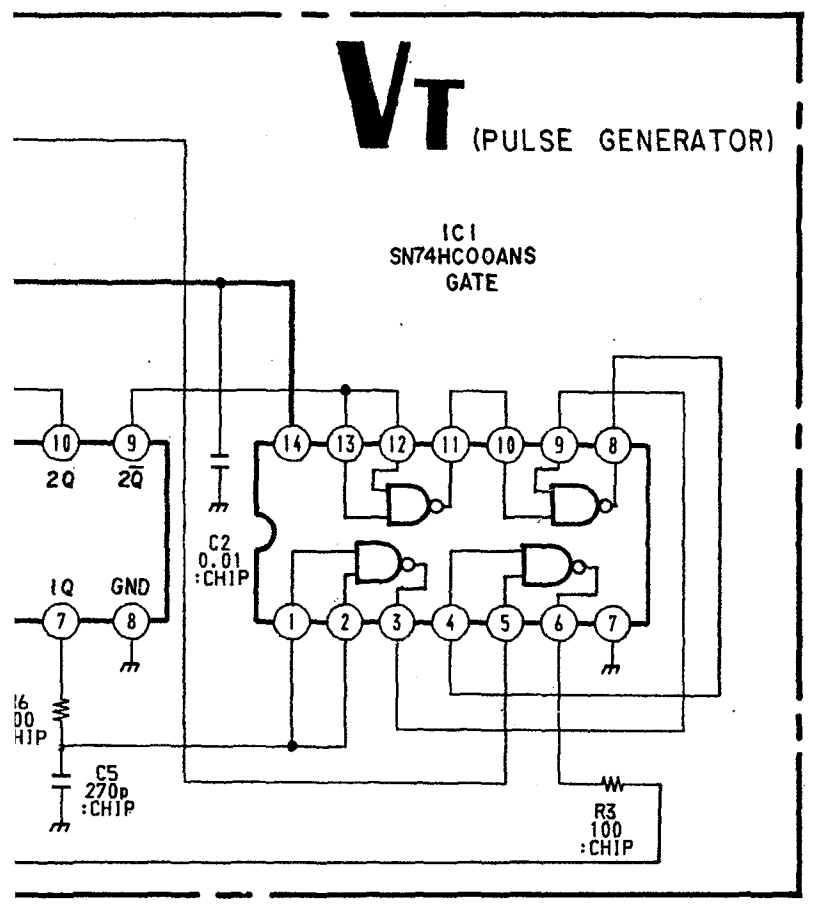
VT (PULSE GENERATOR)
IC1
SN74HC00ANS
GATE
2Q
1Q
GND
C2
0.01
CHIP
C5
270p
CHIP
R3
100
CHIP

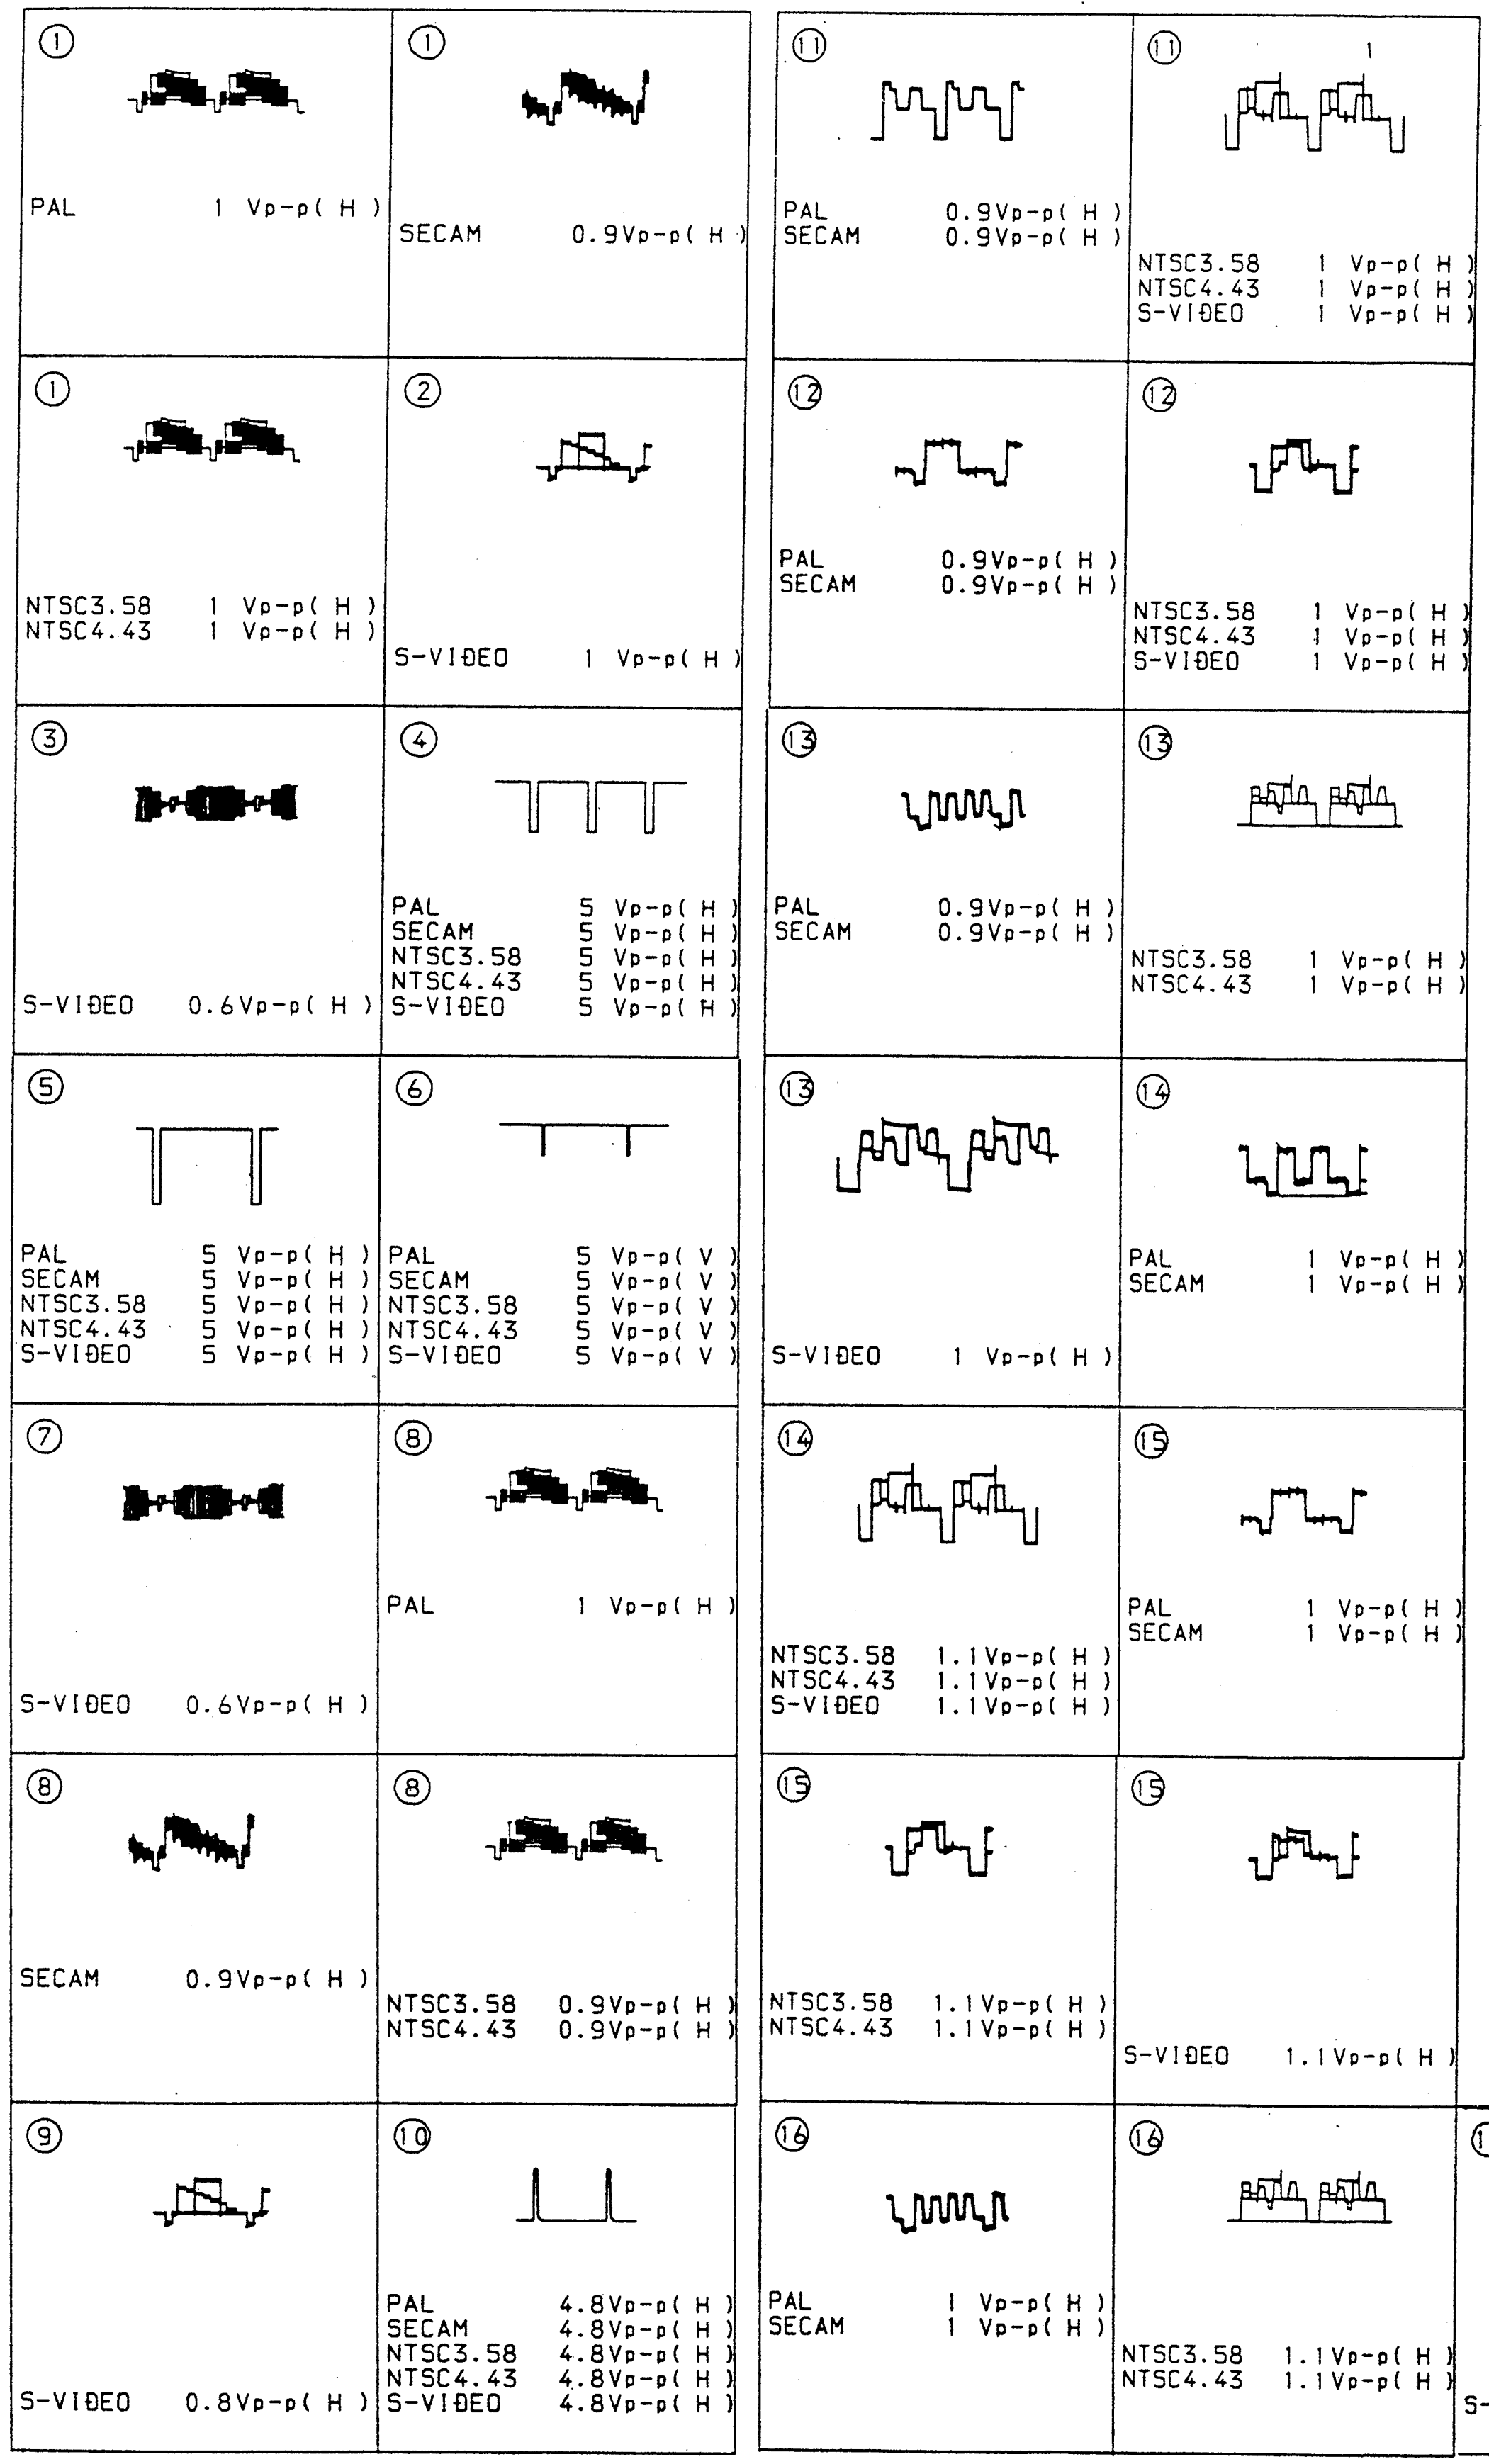

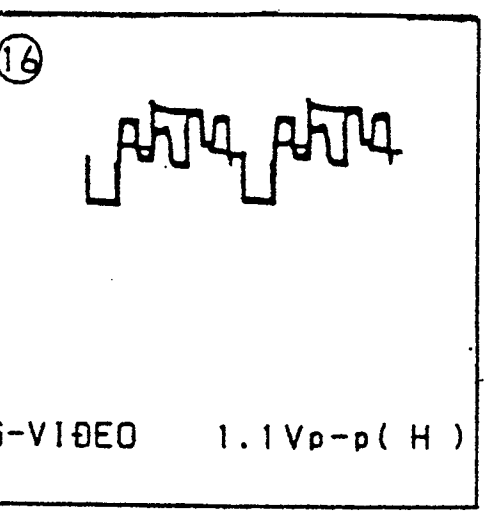

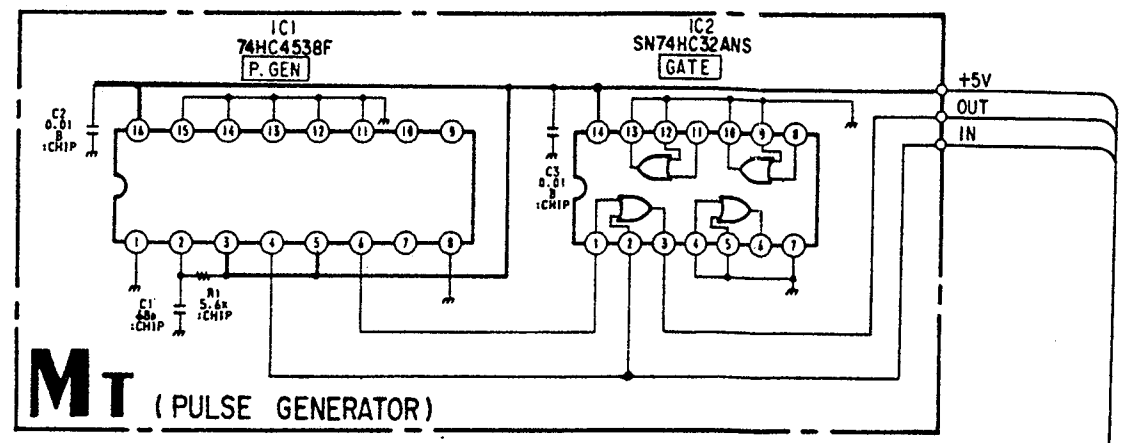
IC1 74HC4538F P. GEN
IC2 SN74HC32ANS GATE
+5V
OUT
IN
MT (PULSE GENERATOR)

IC413 μPC74HC4538N

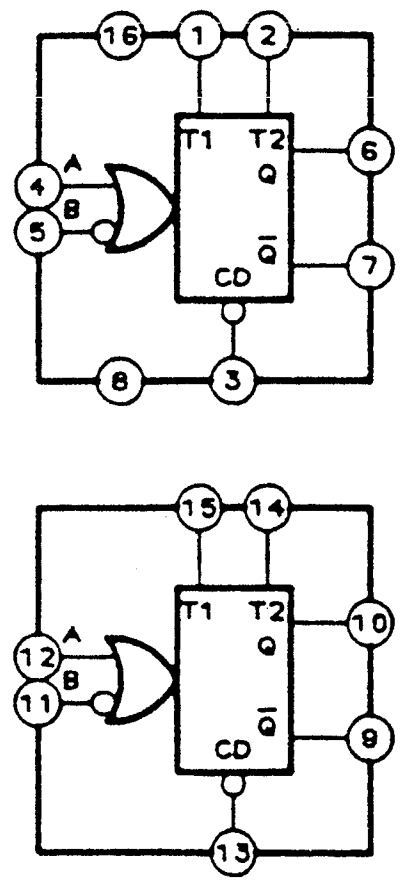
16 1 2
4 5 6 7 8 3
T1 T2 Q Q̄ CD
15 14
12 11 10 9 13

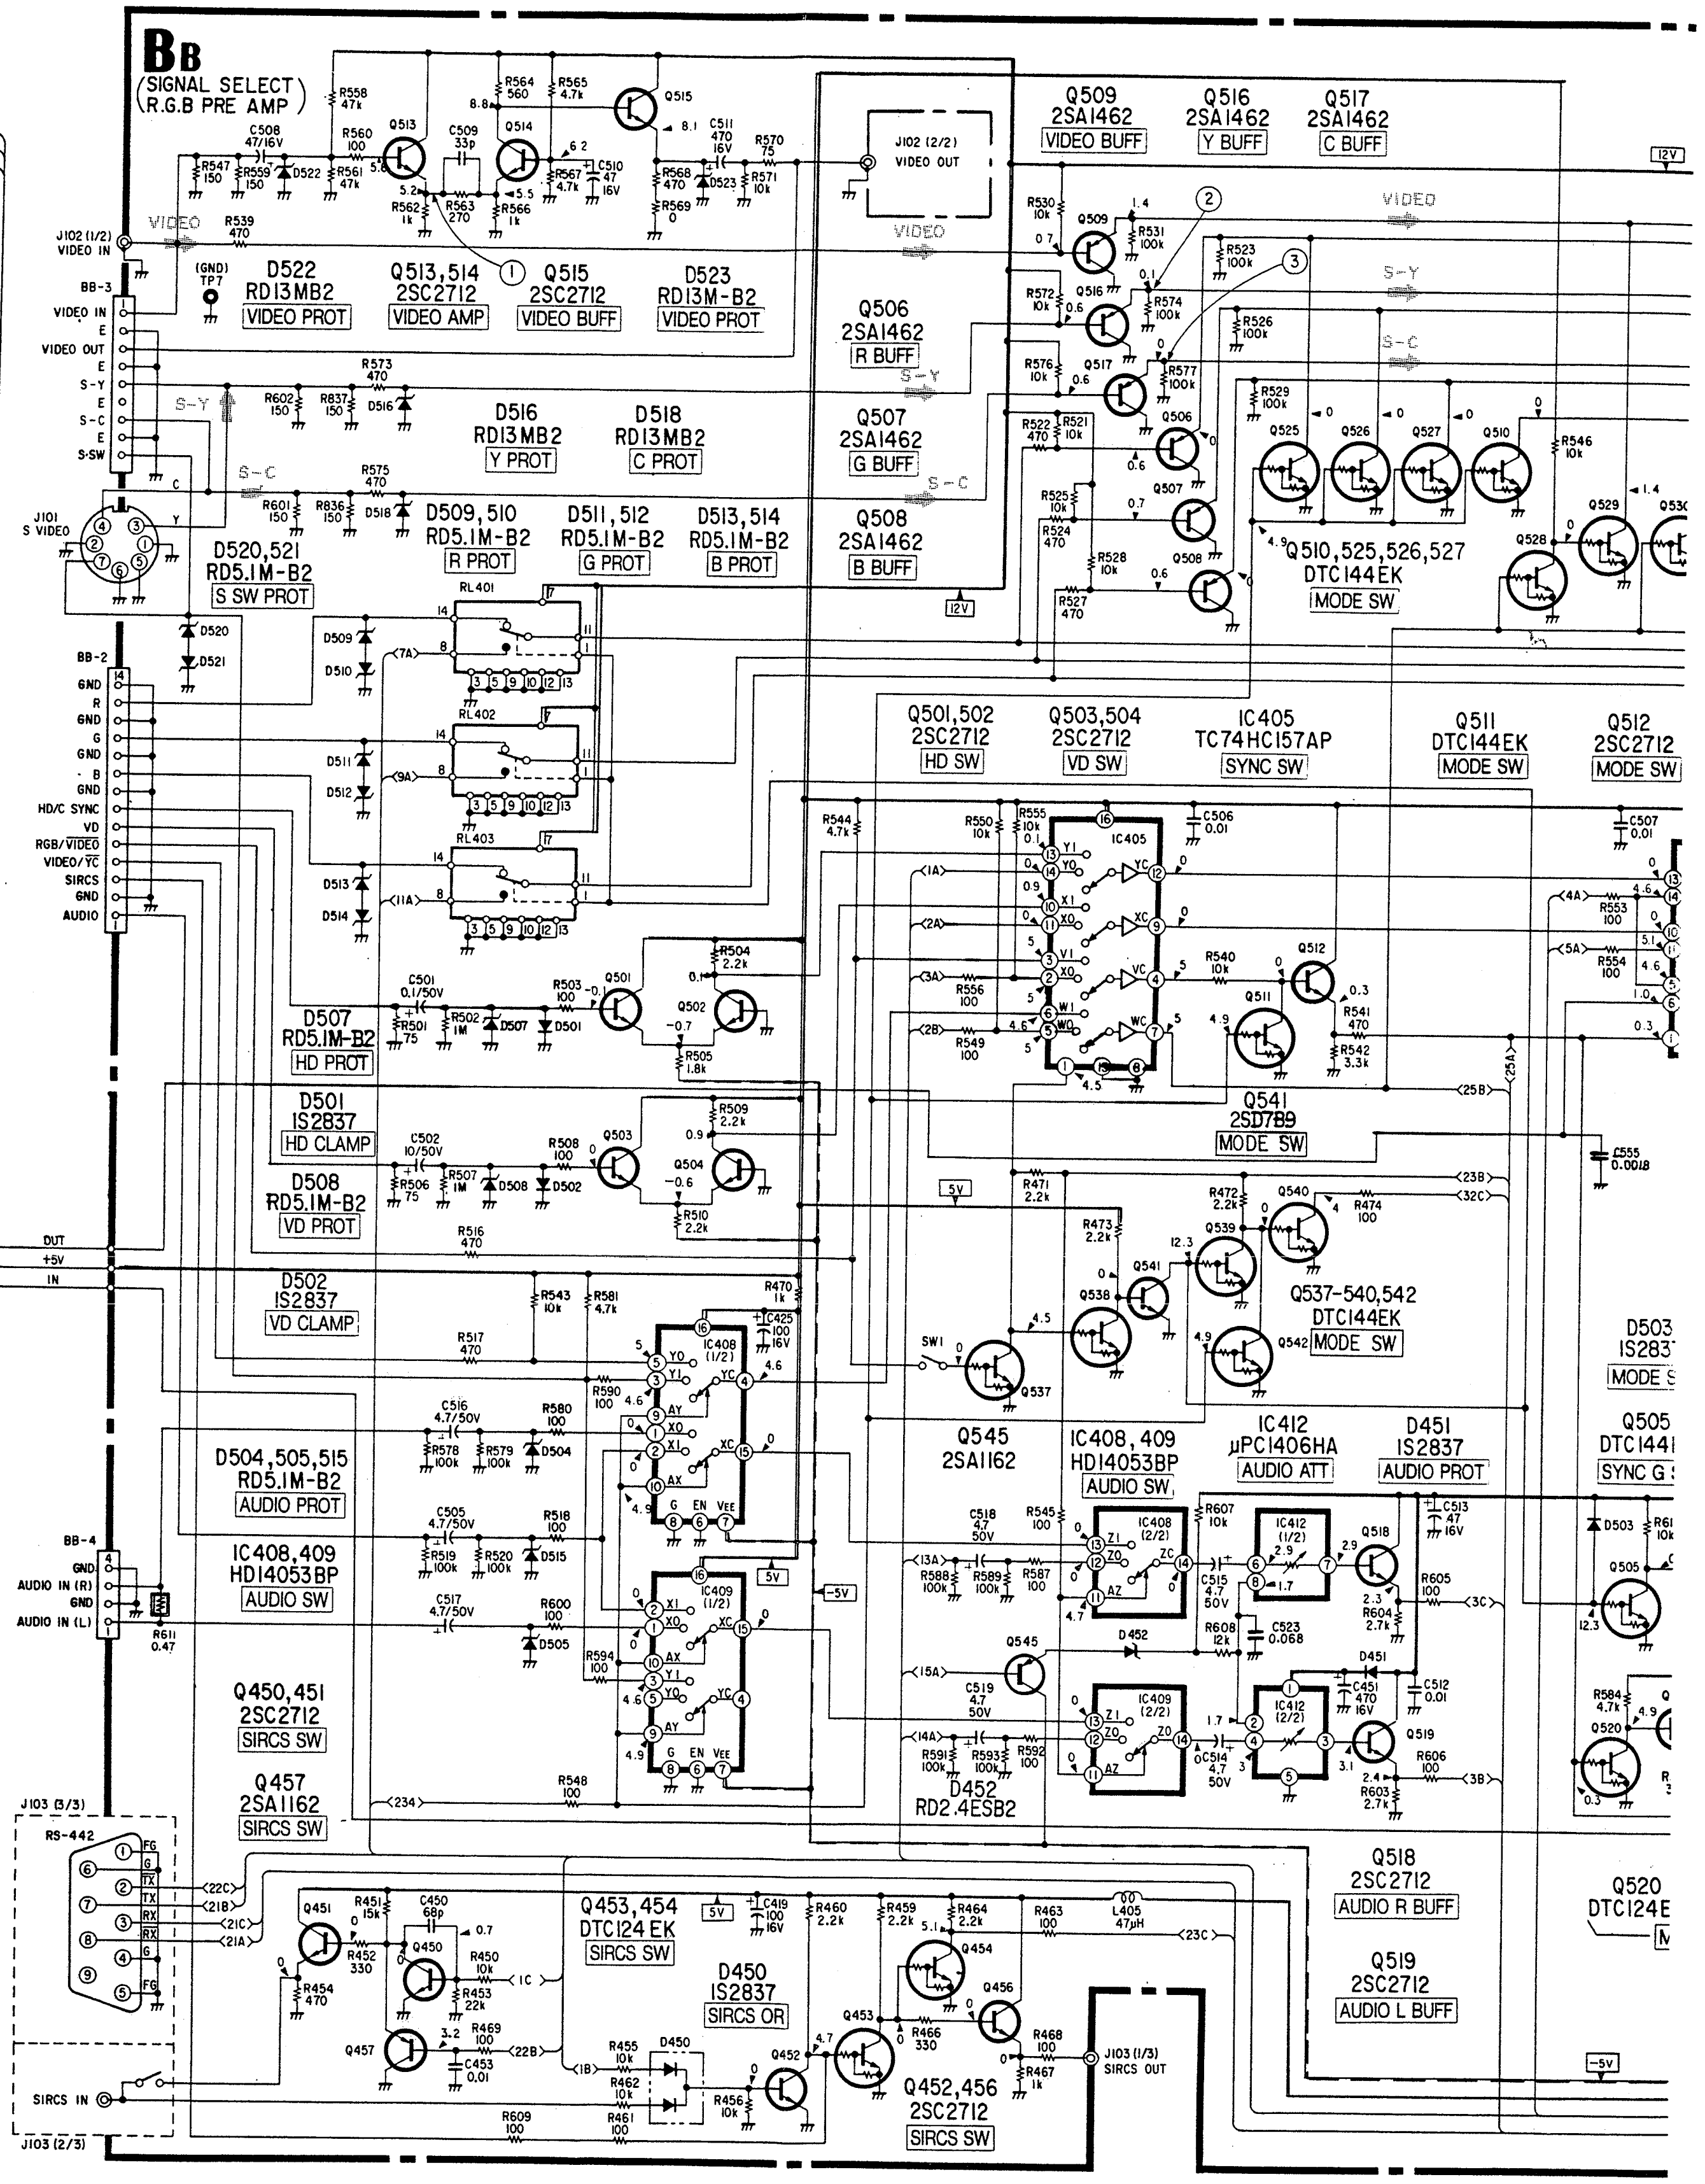
BB (SIGNAL SELECT / R.G.B PRE AMP)
D522 RD13MB2 VIDEO PROT
Q513,514 2SC2712 VIDEO AMP
Q515 2SC2712 VIDEO BUFF
D523 RD13M-B2 VIDEO PROT
D516 RD13MB2 Y PROT
D518 RD13MB2 C PROT
D509,510 RD5.1M-B2 R PROT
D511,512 RD5.1M-B2 G PROT
D513,514 RD5.1M-B2 B PROT
D520,521 RD5.1M-B2 S SW PROT
J102 (2/2) VIDEO OUT
Q509 2SA1462 VIDEO BUFF
Q516 2SA1462 Y BUFF
Q517 2SA1462 C BUFF
Q506 2SA1462 R BUFF
Q507 2SA1462 G BUFF
Q508 2SA1462 B BUFF
Q510,525,526,527 DTC144EK MODE SW
Q501,502 2SC2712 HD SW
Q503,504 2SC2712 VD SW
IC405 TC74HC157AP SYNC SW
Q511 DTC144EK MODE SW
Q512 2SC2712 MODE SW
D507 RD5.1M-B2 HD PROT
D501 1S2837 HD CLAMP
D508 RD5.1M-B2 VD PROT
D502 1S2837 VD CLAMP
Q541 2SD789 MODE SW
Q537-540,542 DTC144EK MODE SW
D503 1S283 MODE S
D504,505,515 RD5.1M-B2 AUDIO PROT
IC408,409 HD14053BP AUDIO SW
Q545 2SA1162
IC408,409 HD14053BP AUDIO SW
IC412 μPC1406HA AUDIO ATT
D451 1S2837 AUDIO PROT
Q505 DTC144 SYNC G
Q450,451 2SC2712 SIRCS SW
Q457 2SA1162 SIRCS SW
D452 RD2.4ESB2
Q453,454 DTC124EK SIRCS SW
D450 1S2837 SIRCS OR
Q452,456 2SC2712 SIRCS SW
Q518 2SC2712 AUDIO R BUFF
Q519 2SC2712 AUDIO L BUFF
Q520 DTC124E
J102 (1/2) VIDEO IN
BB-3 VIDEO IN E VIDEO OUT E S-Y E S-C E S-SW
J101 S VIDEO
BB-2 GND R GND G GND B GND HD/C SYNC VD RGB/VIDEO VIDEO/YC SIRCS GND AUDIO
BB-4 GND AUDIO IN (R) GND AUDIO IN (L)
J103 (3/3) RS-442 TX RX
SIRCS IN J103 (2/3)
J103 (1/3) SIRCS OUT
RL401 RL402 RL403
OUT +5V IN
12V 5V -5V
VIDEO S-Y S-C

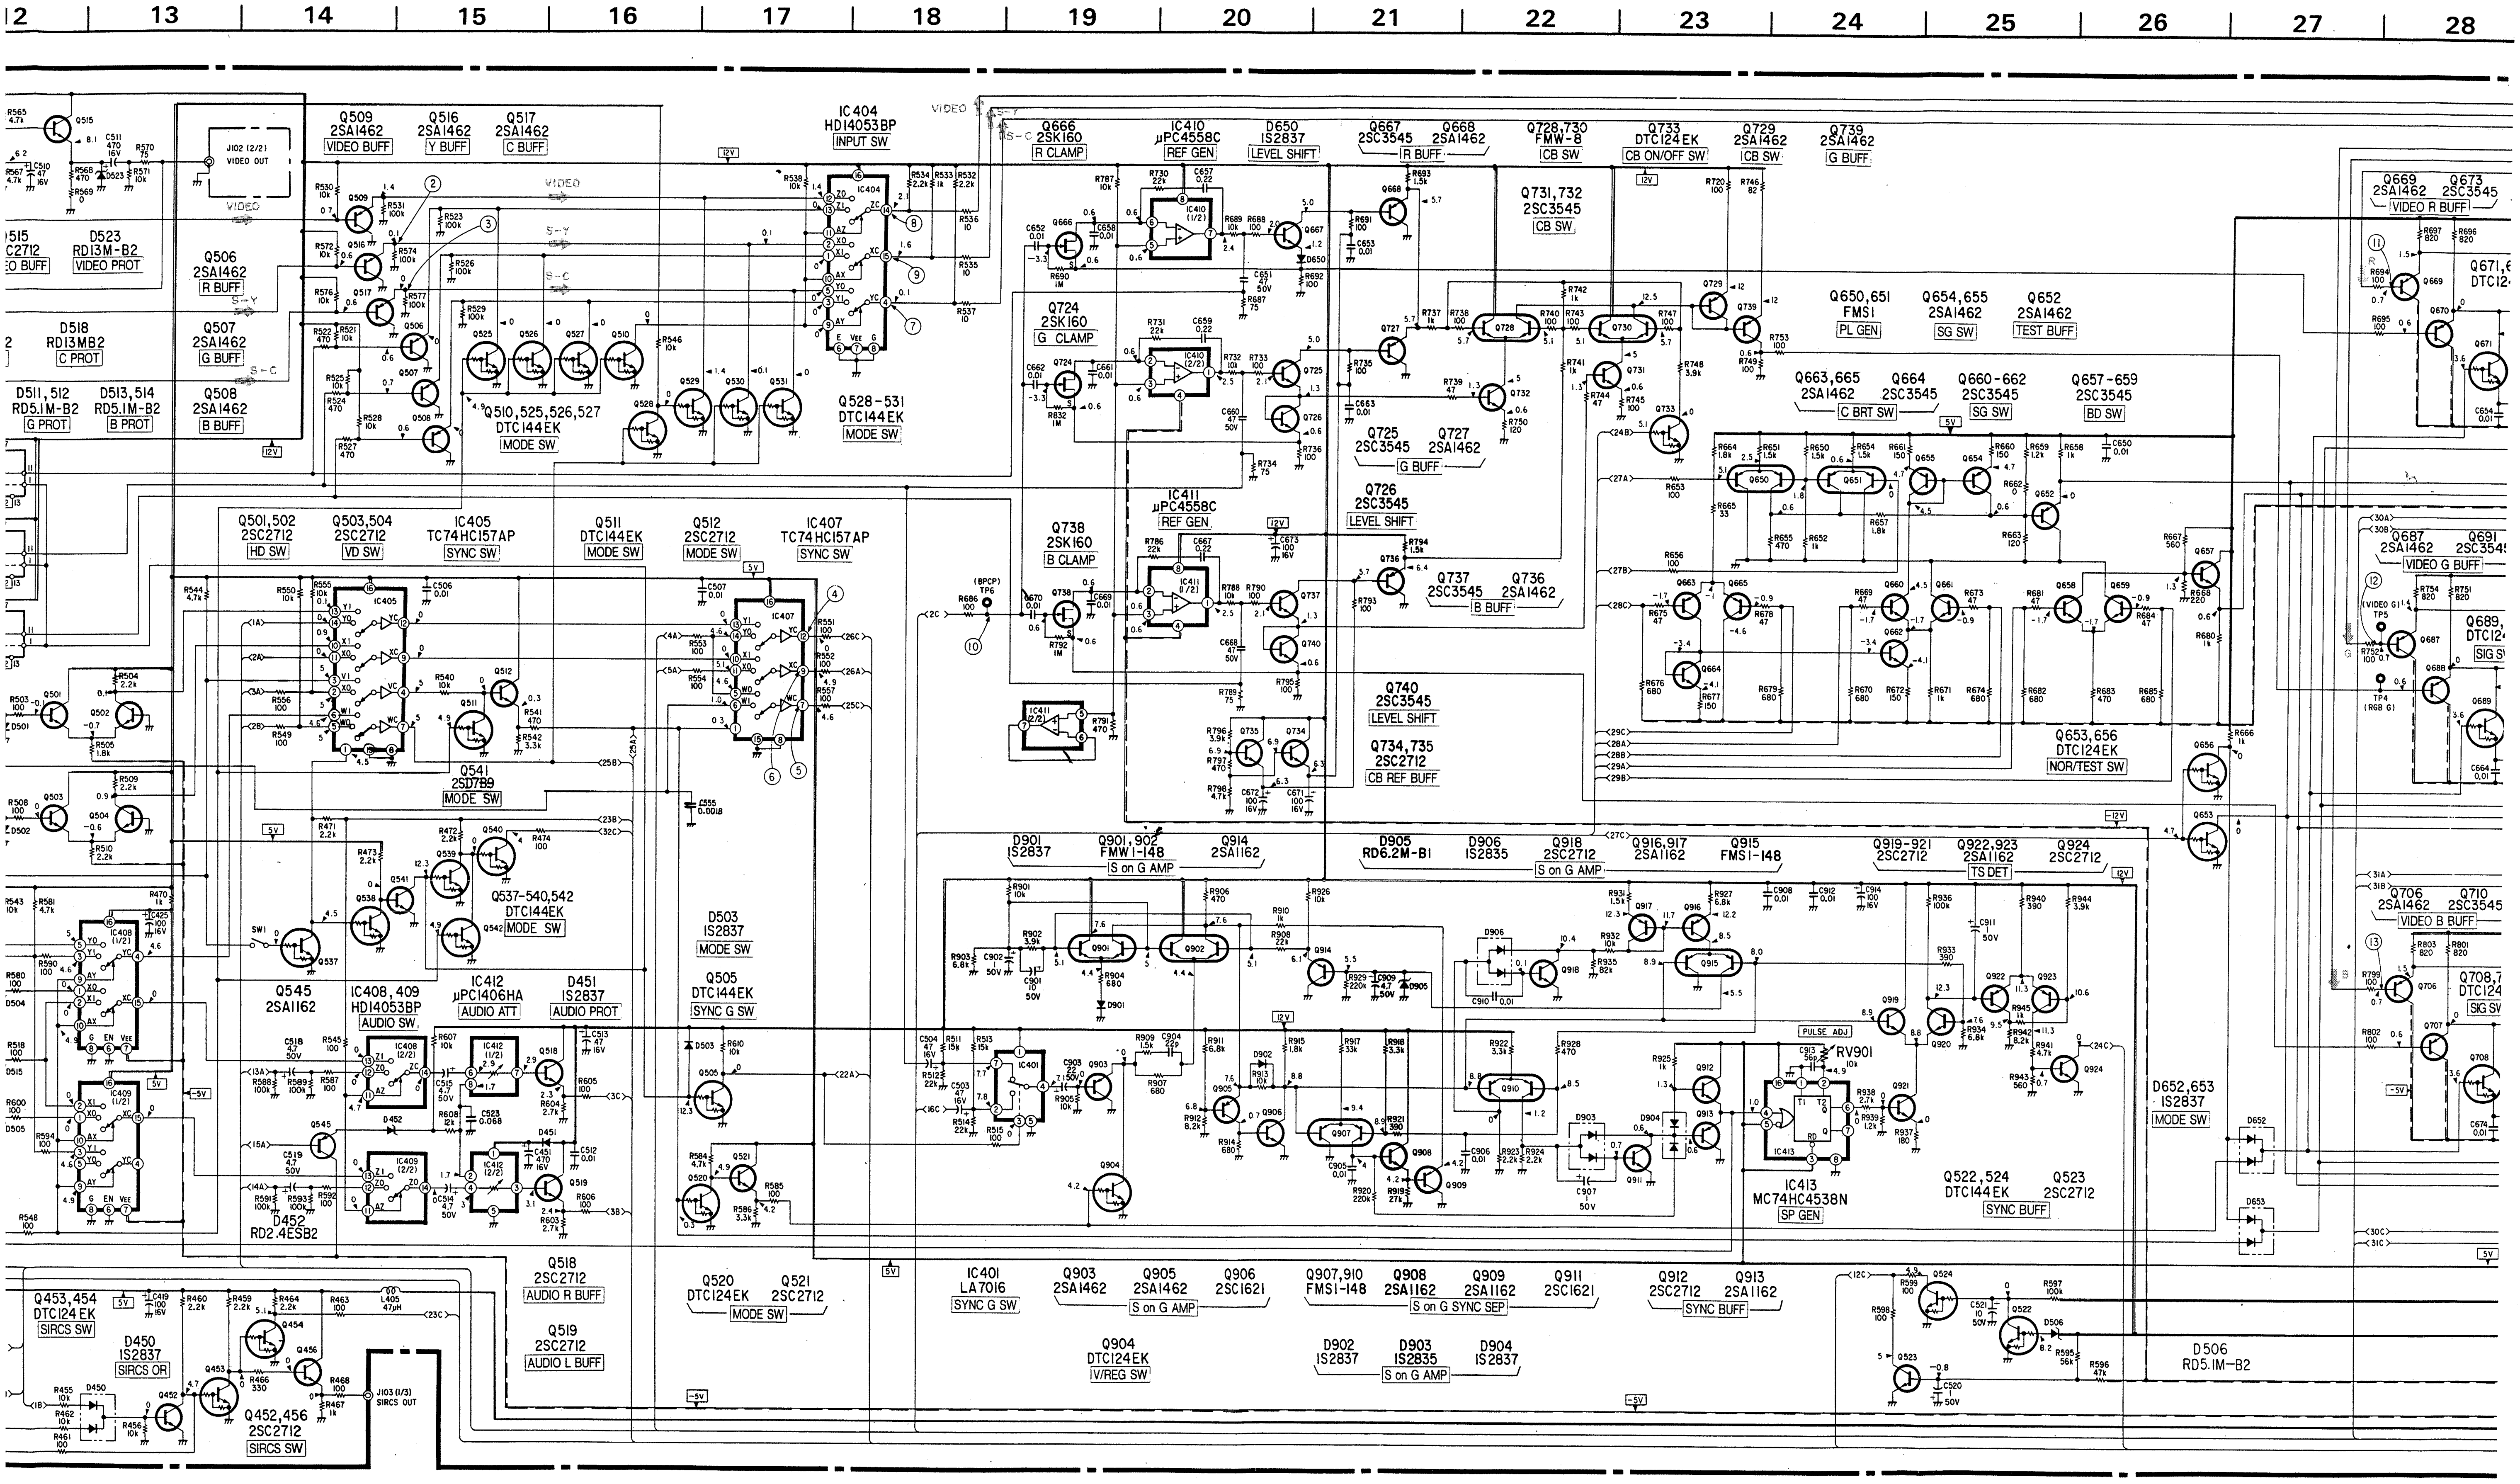
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
Q509 2SA1462 VIDEO BUFF
Q516 2SA1462 Y BUFF
Q517 2SA1462 C BUFF
IC404 HD14053BP INPUT SW
Q666 2SK160 R CLAMP
IC410 µPC4558C REF GEN
D650 1S2837 LEVEL SHIFT
Q667 2SC3545 Q668 2SA1462 R BUFF
Q728,730 FMW-8 CB SW
Q733 DTC124EK CB ON/OFF SW
Q729 2SA1462 CB SW
Q739 2SA1462 G BUFF
Q669 2SA1462 Q673 2SC3545 VIDEO R BUFF
J102 (2/2) VIDEO OUT
VIDEO
S-Y
S-C
D515 2SC2712 VIDEO BUFF
D523 RD13M-B2 VIDEO PROT
Q506 2SA1462 R BUFF
Q507 2SA1462 G BUFF
Q508 2SA1462 B BUFF
D518 RD13MB2 C PROT
D511,512 RD5.1M-B2 G PROT
D513,514 RD5.1M-B2 B PROT
Q510,525,526,527 DTC144EK MODE SW
Q528-531 DTC144EK MODE SW
Q731,732 2SC3545 CB SW
Q724 2SK160 G CLAMP
Q650,651 FMS1 PL GEN
Q654,655 2SA1462 SG SW
Q652 2SA1462 TEST BUFF
Q663,665 2SA1462 Q664 2SC3545 C BRT SW
Q660-662 2SC3545 SG SW
Q657-659 2SC3545 BD SW
Q725 2SC3545 Q727 2SA1462 G BUFF
Q726 2SC3545 LEVEL SHIFT
IC411 µPC4558C REF GEN
Q738 2SK160 B CLAMP
Q737 2SC3545 Q736 2SA1462 B BUFF
Q501,502 2SC2712 HD SW
Q503,504 2SC2712 VD SW
IC405 TC74HC157AP SYNC SW
Q511 DTC144EK MODE SW
Q512 2SC2712 MODE SW
IC407 TC74HC157AP SYNC SW
Q687 2SA1462 Q691 2SC354 VIDEO G BUFF
Q689 DTC12 SIG S
(BPCP) TP6
Q740 2SC3545 LEVEL SHIFT
Q734,735 2SC2712 CB REF BUFF
Q653,656 DTC144EK NOR/TEST SW
Q541 2SD789 MODE SW
Q537-540,542 DTC144EK MODE SW
D503 1S2837 MODE SW
D901 1S2837
Q901,902 FMW1-148 S on G AMP
Q914 2SA1162
D905 RD6.2M-B1
D906 1S2835
Q918 2SC2712 S on G AMP
Q916,917 2SA1162
Q915 FMS1-148
Q919-921 2SC2712
Q922,923 2SA1162 TS DET
Q924 2SC2712
Q706 2SA1462 Q710 2SC3545 VIDEO B BUFF
Q708 DTC124 SIG SV
Q545 2SA1162
IC408,409 HD14053BP AUDIO SW
IC412 µPC1406HA AUDIO ATT
D451 1S2837 AUDIO PROT
Q505 DTC144EK SYNC G SW
PULSE ADJ RV901
IC401 LA7016 SYNC G SW
IC413 MC74HC4538N SP GEN
D652,653 1S2837 MODE SW
D452 RD2.4ESB2
Q518 2SC2712 AUDIO R BUFF
Q519 2SC2712 AUDIO L BUFF
Q520 DTC124EK Q521 2SC2712 MODE SW
Q522,524 DTC144EK Q523 2SC2712 SYNC BUFF
Q453,454 DTC124EK SIRCS SW
D450 1S2837 SIRCS OR
Q452,456 2SC2712 SIRCS SW
J103 (1/3) SIRCS OUT
Q903 2SA1462
Q905 2SA1462 S on G AMP
Q906 2SC1621
Q907,910 FMS1-148
Q908 2SA1162
Q909 2SA1162 S on G SYNC SEP
Q911 2SC1621
Q912 2SC2712 Q913 2SA1162 SYNC BUFF
Q904 DTC124EK V/REG SW
D902 1S2837
D903 1S2835 S on G AMP
D904 1S2837
D506 RD5.1M-B2
12V
5V
-5V

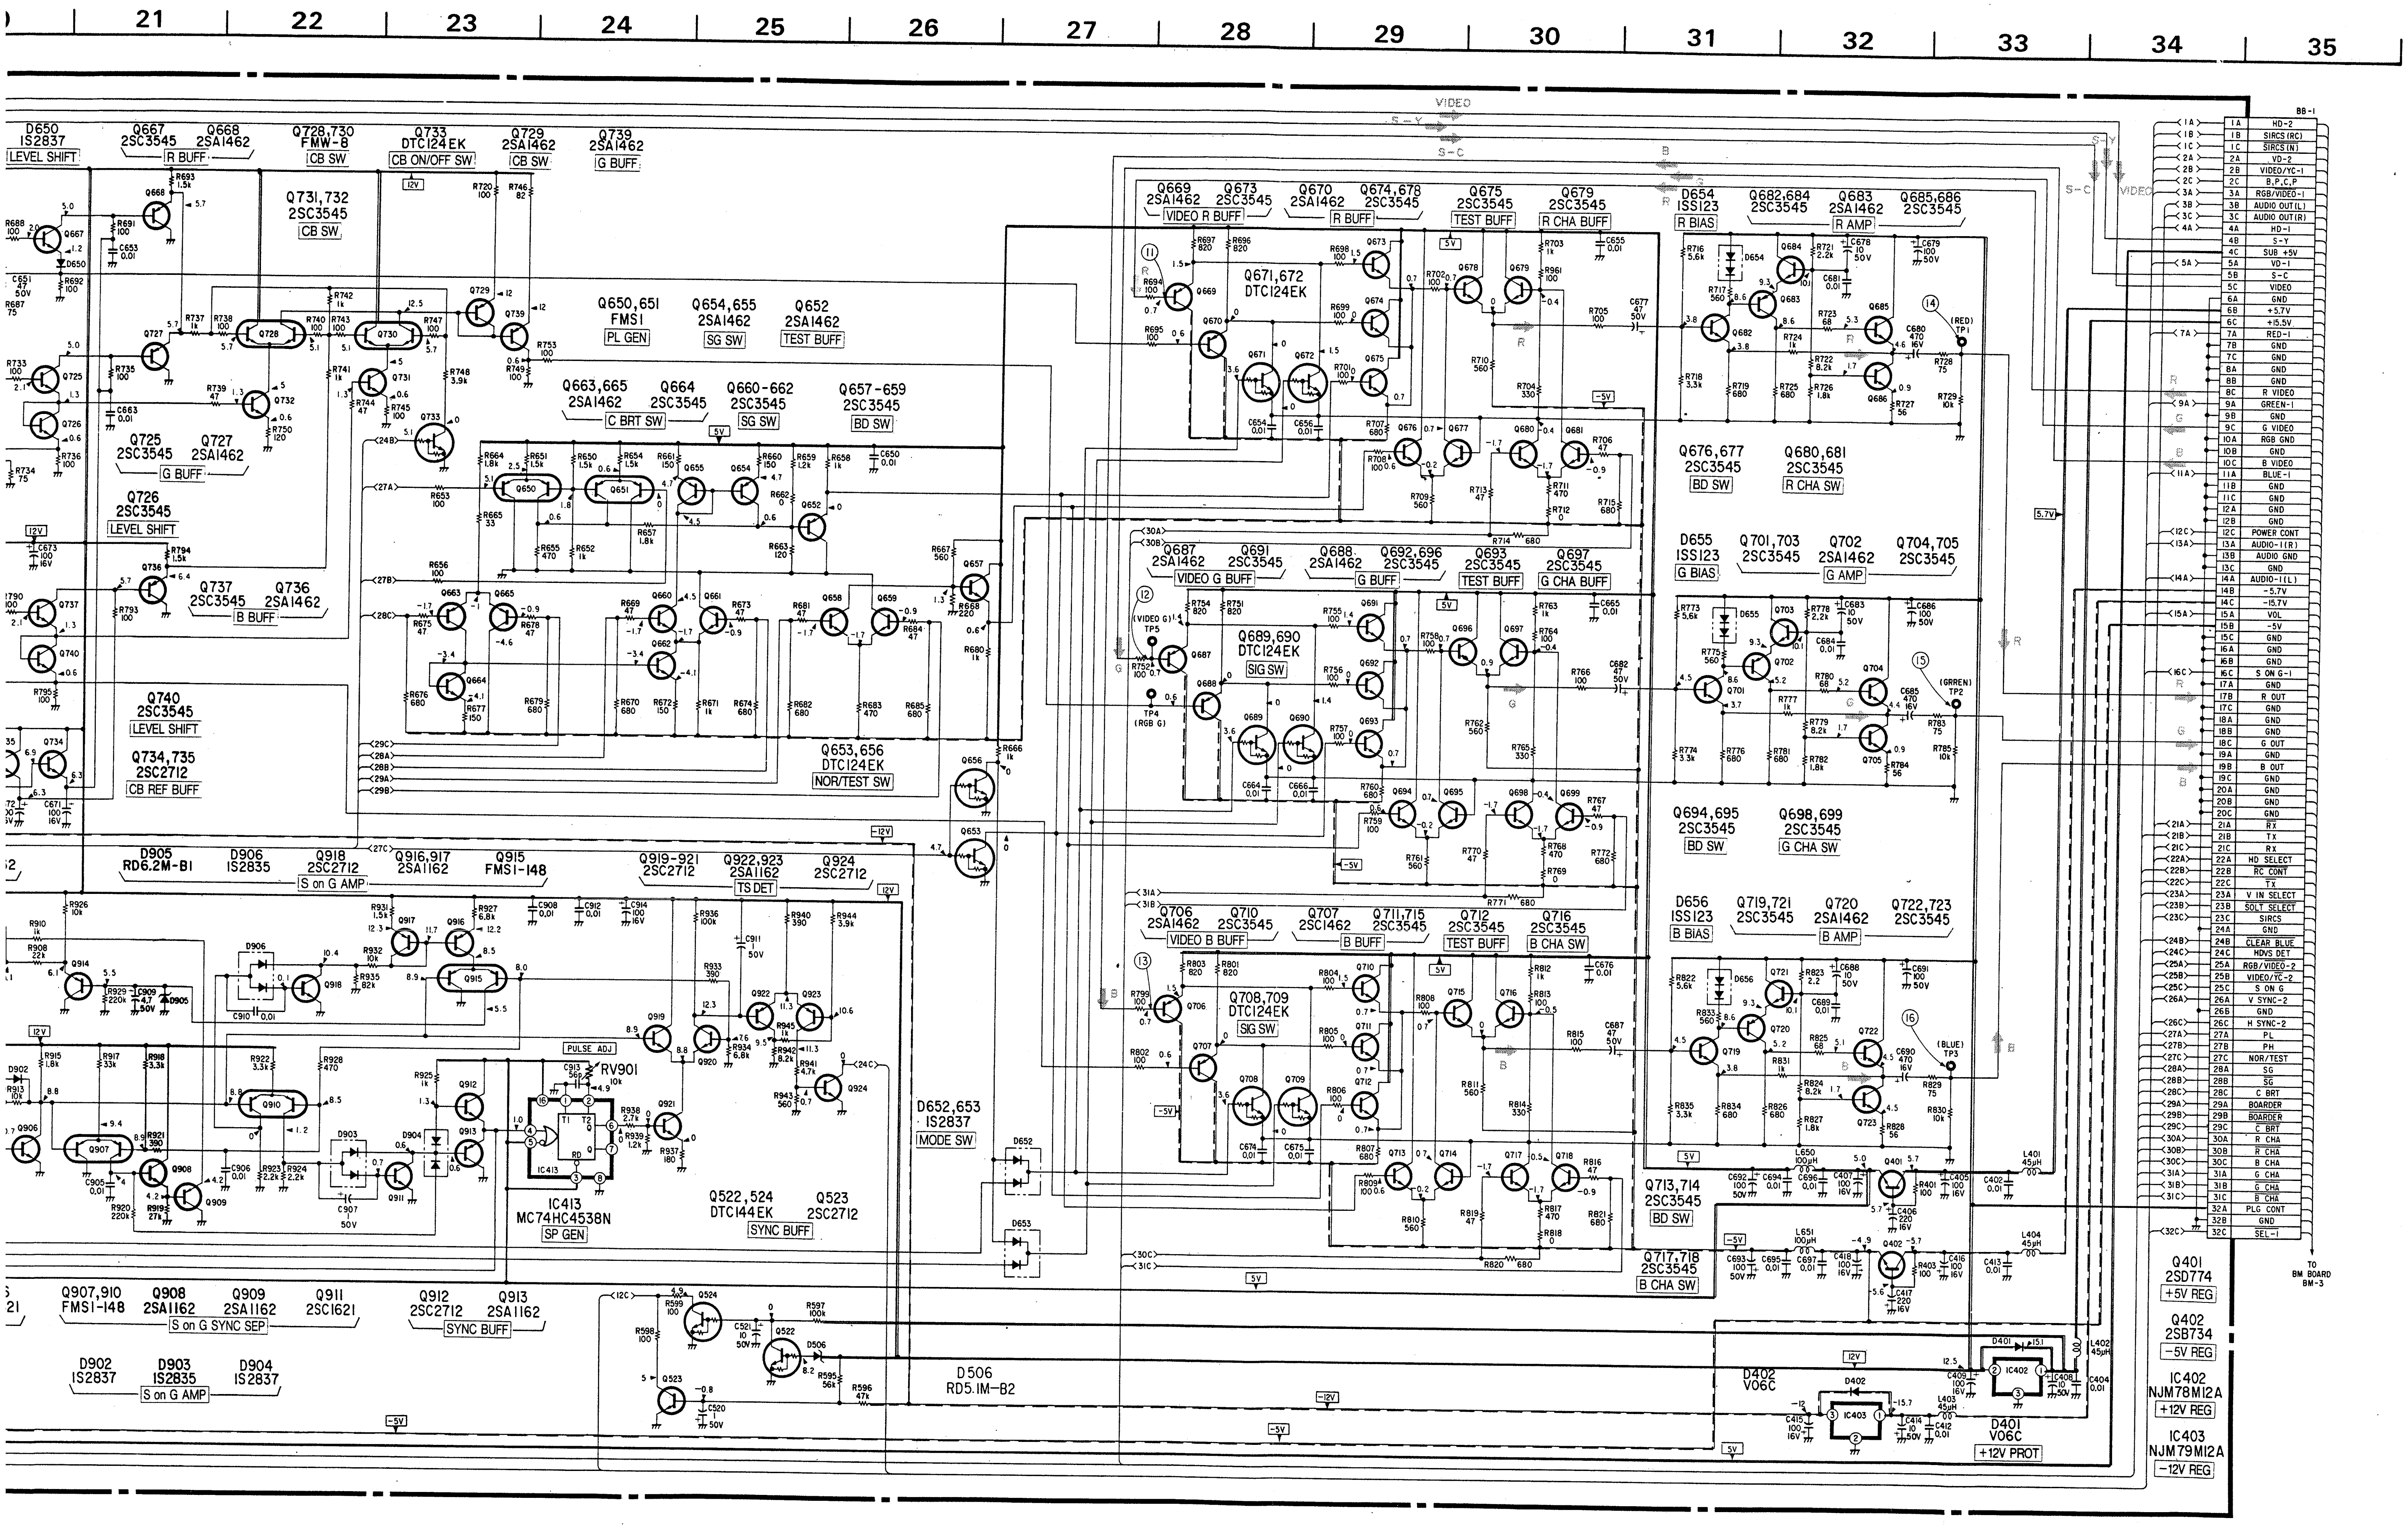
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
D650 IS2837 LEVEL SHIFT
Q667 2SC3545 Q668 2SA1462 R BUFF
Q728,730 FMW-8 CB SW
Q733 DTC124EK CB ON/OFF SW
Q729 2SA1462 CB SW
Q739 2SA1462 G BUFF
Q731,732 2SC3545 CB SW
Q725 2SC3545 Q727 2SA1462 G BUFF
Q726 2SC3545 LEVEL SHIFT
Q737 2SC3545 Q736 2SA1462 B BUFF
Q740 2SC3545 LEVEL SHIFT
Q734,735 2SC2712 CB REF BUFF
Q650,651 FMS1 PL GEN
Q654,655 2SA1462 SG SW
Q652 2SA1462 TEST BUFF
Q663,665 2SA1462 Q664 2SC3545 C BRT SW
Q660-662 2SC3545 SG SW
Q657-659 2SC3545 BD SW
Q653,656 DTC124EK NOR/TEST SW
D905 RD6.2M-B1
D906 IS2835
Q918 2SC2712 S on G AMP
Q916,917 2SA1162
Q915 FMS1-148
Q919-921 2SC2712
Q922,923 2SA1162 TS DET
Q924 2SC2712
IC413 MC74HC4538N SP GEN
PULSE ADJ RV901
Q522,524 DTC144EK Q523 2SC2712 SYNC BUFF
D652,653 IS2837 MODE SW
Q907,910 FMS1-148
Q908 2SA1162
Q909 2SA1162 S on G SYNC SEP
Q911 2SC1621
Q912 2SC2712 Q913 2SA1162 SYNC BUFF
D902 IS2837 D903 IS2835 D904 IS2837 S on G AMP
D506 RD5.1M-B2
VIDEO
S-Y
S-C
Q669 2SA1462 Q673 2SC3545 VIDEO R BUFF
Q670 2SA1462 Q674,678 2SC3545 R BUFF
Q675 2SC3545 TEST BUFF
Q679 2SC3545 R CHA BUFF
Q671,672 DTC124EK
D654 ISS123 R BIAS
Q682,684 2SC3545 Q683 2SA1462 Q685,686 2SC3545 R AMP
Q676,677 2SC3545 BD SW
Q680,681 2SC3545 R CHA SW
(14) (RED) TP1
Q687 2SA1462 Q691 2SC3545 VIDEO G BUFF
Q688 2SA1462 Q692,696 2SC3545 G BUFF
Q693 2SC3545 TEST BUFF
Q697 2SC3545 G CHA BUFF
Q689,690 DTC124EK SIG SW
(12) (VIDEO G) TP5
TP4 (RGB G)
D655 ISS123 G BIAS
Q701,703 2SC3545 Q702 2SA1462 Q704,705 2SC3545 G AMP
(15) (GREEN) TP2
Q694,695 2SC3545 BD SW
Q698,699 2SC3545 G CHA SW
Q706 2SA1462 Q710 2SC3545 VIDEO B BUFF
Q707 2SC1462 Q711,715 2SC3545 B BUFF
Q712 2SC3545 TEST BUFF
Q716 2SC3545 B CHA SW
Q708,709 DTC124EK SIG SW
(13)
D656 ISS123 B BIAS
Q719,721 2SC3545 Q720 2SA1462 Q722,723 2SC3545 B AMP
(16) (BLUE) TP3
Q713,714 2SC3545 BD SW
Q717,718 2SC3545 B CHA SW
Q401 2SD774 +5V REG
Q402 2SB734 -5V REG
IC402 NJM78M12A +12V REG
IC403 NJM79M12A -12V REG
D402 V06C
D401 V06C +12V PROT
BB-1
1A HD-2
1B SIRCS(RC)
1C SIRCS(N)
2A VD-2
2B VIDEO/YC-1
2C B,P,C,P
3A RGB/VIDEO-1
3B AUDIO OUT(L)
3C AUDIO OUT(R)
4A HD-1
4B S-Y
4C SUB +5V
5A VD-1
5B S-C
5C VIDEO
6A GND
6B +5.7V
6C +15.5V
7A RED-1
7B GND
7C GND
8A GND
8B GND
8C R VIDEO
9A GREEN-1
9B GND
9C G VIDEO
10A RGB GND
10B GND
10C B VIDEO
11A BLUE-1
11B GND
11C GND
12A GND
12B GND
12C POWER CONT
13A AUDIO-1(R)
13B AUDIO GND
13C GND
14A AUDIO-1(L)
14B -5.7V
14C -15.7V
15A VOL
15B -5V
15C GND
16A GND
16B GND
16C S ON G-1
17A GND
17B R OUT
17C GND
18A GND
18B GND
18C G OUT
19A GND
19B B OUT
19C GND
20A GND
20B GND
20C GND
21A RX
21B TX
21C RX
22A MD SELECT
22B RC CONT
22C TX
23A V IN SELECT
23B SOLT SELECT
23C SIRCS
24A GND
24B CLEAR BLUE
24C MDVS DET
25A RGB/VIDEO-2
25B VIDEO/YC-2
25C S ON G
26A V SYNC-2
26B GND
26C H SYNC-2
27A PL
27B PH
27C NOR/TEST
28A SG
28B SG
28C C BRT
29A BOARDER
29B BOARDER
29C C BRT
30A R CHA
30B R CHA
30C B CHA
31A B CHA
31B G CHA
31C G CHA
32A PLG CONT
32B GND
32C SEL-1
TO BM BOARD BM-3

]

BB [SIGNAL SELECT, R. G. B. PRE AMP]

MT [SYNC. PROCESSOR]

- BB BOARD - (COMPONENT SIDE)

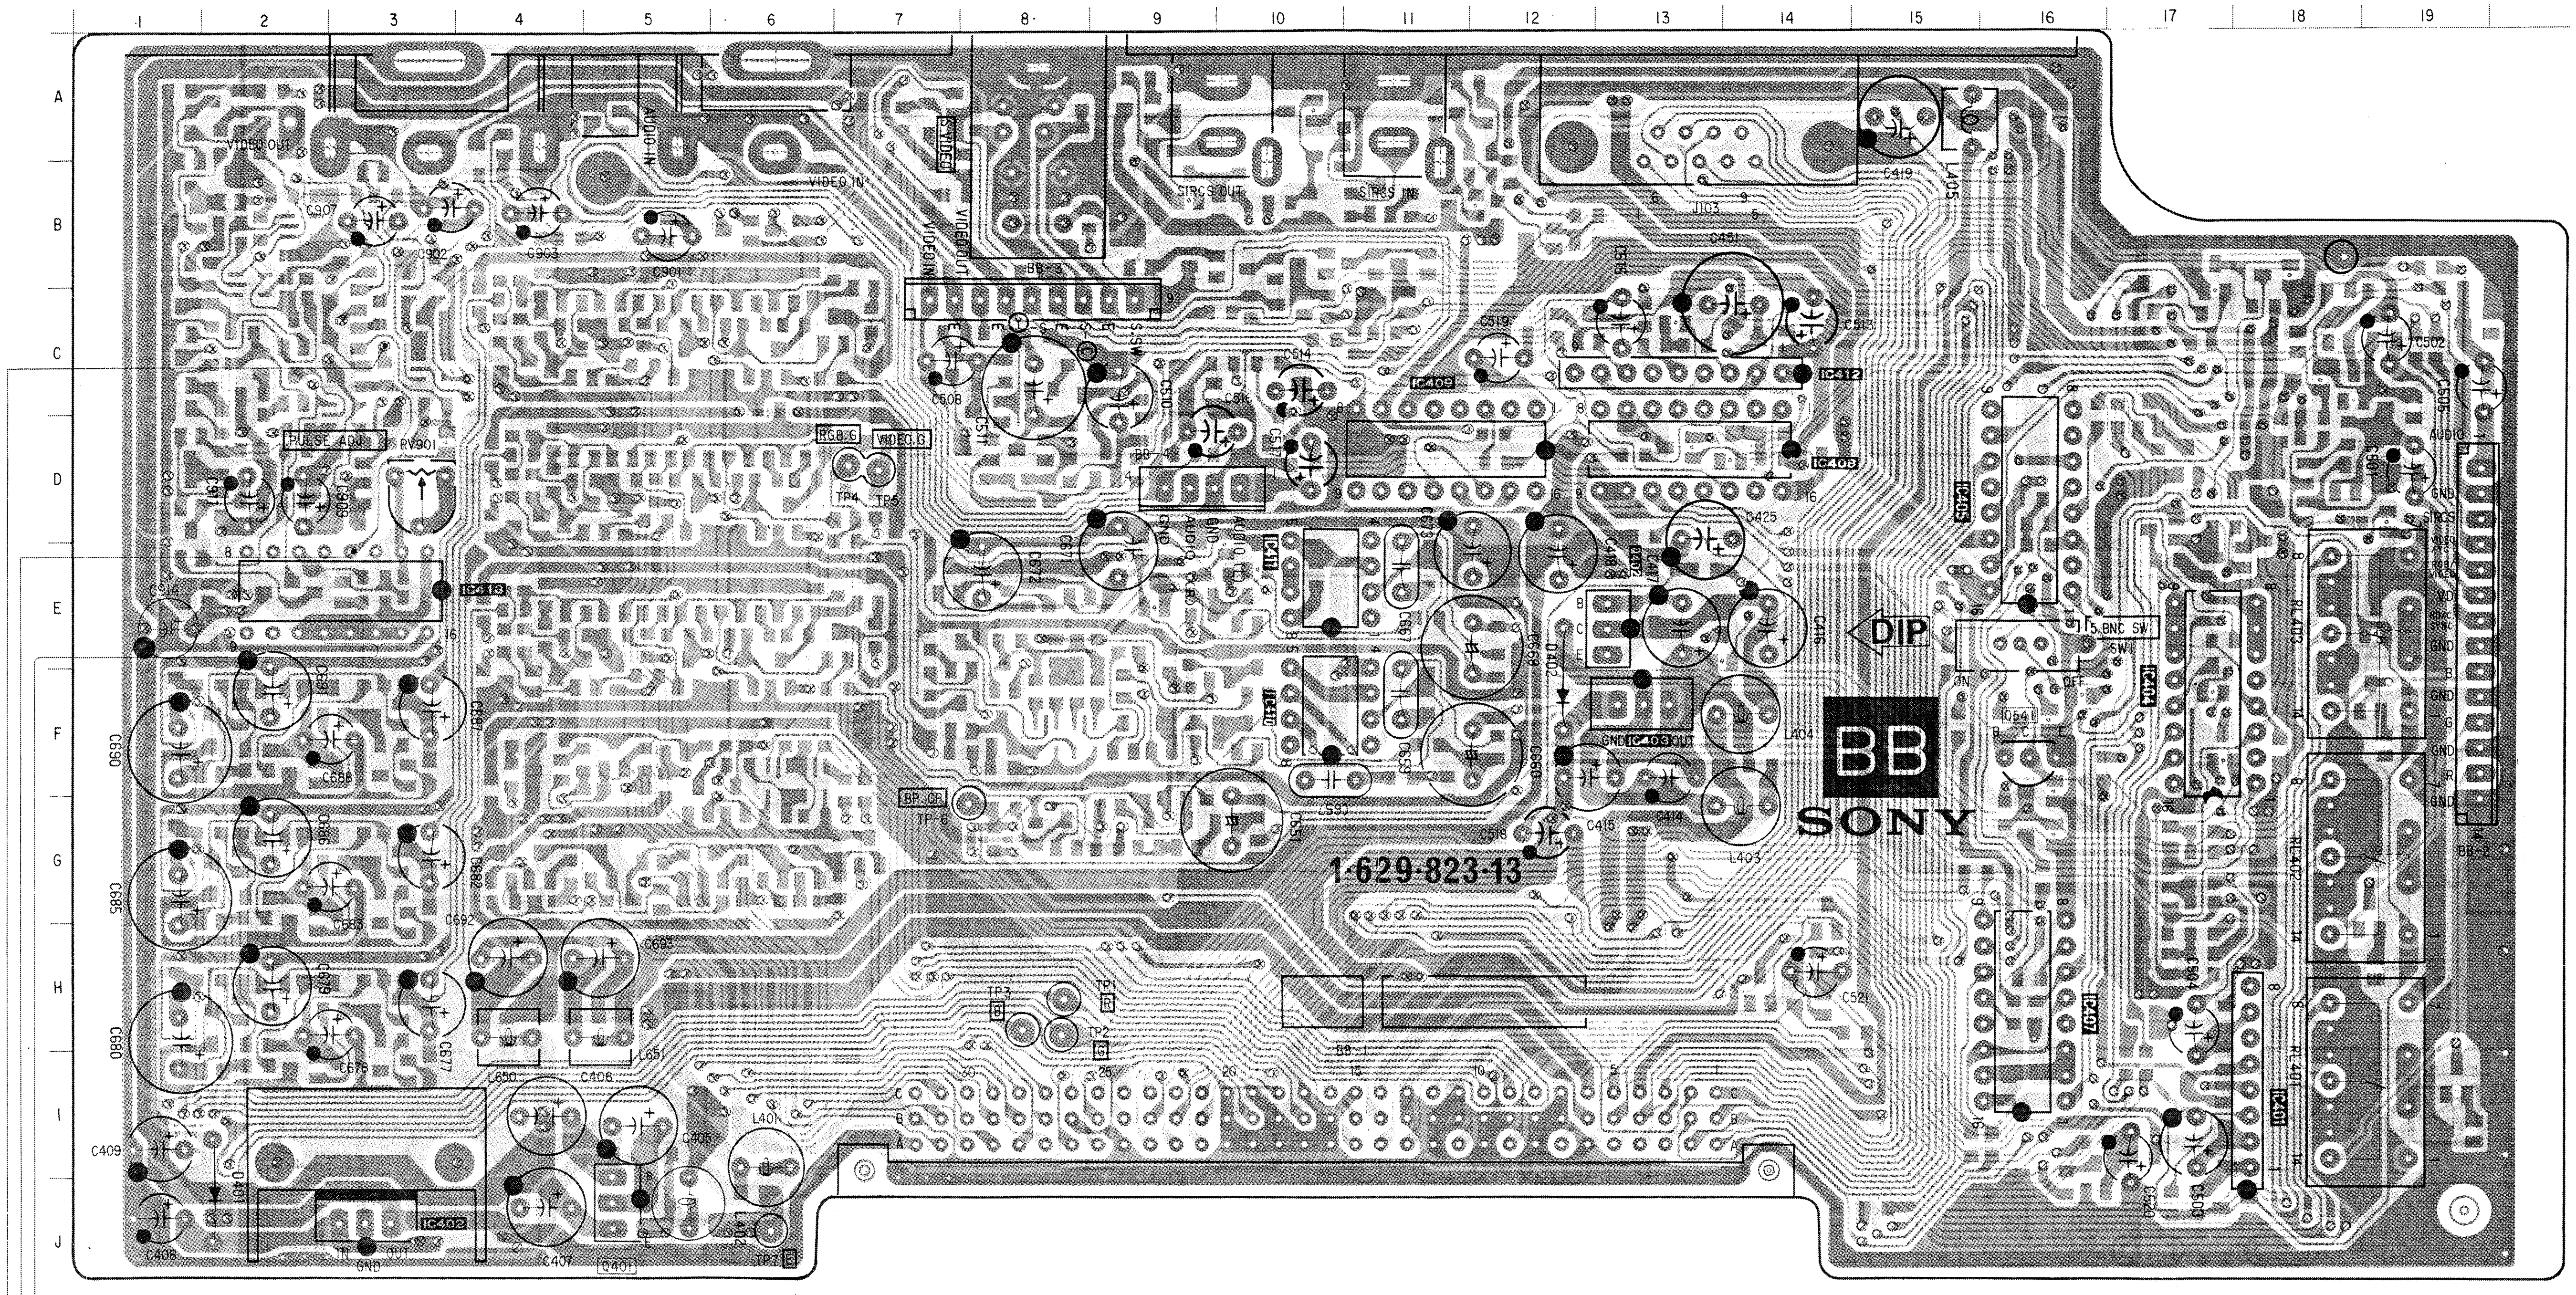
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
A
B
C
D
E
F
G
H
I
J
VIDEO OUT
AUDIO IN
VIDEO IN
S-VIDEO
VIDEO IN
VIDEO OUT
SIRCS OUT
SIRCS IN
J103
PULSE ADJ
RV901
RGB G
VIDEO G
TP4
TP5
TP6
TP7
TP1
TP2
TP3
BR_CR
IC401
IC402
IC403
IC404
IC405
IC407
IC408
IC409
IC410
IC411
IC412
IC413
Q401
L401
L402
L403
L404
L405
L650
L651
RL401
RL402
RL403
C409
C408
C407
C406
C405
C414
C415
C416
C419
C425
C451
C502
C508
C513
C516
C519
C521
C531
C614
C682
C683
C687
C688
C690
C692
C693
C902
C903
C907
C910
C911
DIP
S BNC SW
ON
OFF
BB
SONY
1-629-823-13
AUDIO
GND
SIRCS
R
G
B
BB-1
BB-2
BB-3
BB-4

IC•No.	PIN•No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
404	②	0.1	0.1	0.1	0.1	1.7
	④	0.1	0.8	0.8	0.8	2.8
	⑤	0	0	0	0	1.4
	⑫	1.4	1.6	1.4	1.4	0
	⑭	2.2	2.2	2.2	2.2	0.8
	⑮	1.6	1.6	1.6	1.6	3
405	⑥	4.6	4.6	4.6	4.6	0
	⑦	5	5	5	5	0
	⑬	0.1	0.1	0.1	0.1	0.8
407	⑤	4.8	4.9	4.8	4.8	4.8
408	③	4.6	4.6	4.6	4.6	0
	④	4.6	4.6	4.6	4.6	0
409	③	4.6	4.6	4.6	4.6	0

Q•No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
509	B	–	–	–	–	–
	C	–	–	–	–	–
	E	1.4	1.6	1.4	1.4	0
516	B	–	–	–	–	–
	C	–	–	–	–	–
	E	0.1	0.1	0.1	0.1	1.7
517	B	–	–	–	–	–
	C	–	–	–	–	–
	E	0	0	0	0	1.4
528	B	5	5	5	5	0
	C	0	0	0	0	4.1
	E	–	–	–	–	–
529	B	–	–	–	–	–
	C	1.4	1.6	1.4	1.4	0
	E	–	–	–	–	–

Q•No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
530	B	–	–	–	–	–
	C	0.1	0.1	0.1	0.1	1.7
	E	–	–	–	–	–
531	B	–	–	–	–	–
	C	0	0	0	0	1.4
	E	–	–	–	–	–
650	1	–	–	–	–	–
	2	–	–	–	–	–
	3	5.1	5.1	5.1	5.1	1.8
	4	–	–	–	–	–
	5	1.8	1.8	1.8	1.8	5.1
		–	–	–	–	–
651	1	–	–	–	–	–
	2	–	–	–	–	–
	3	0.8	1.8	1.8	1.8	0
	4	–	–	–	–	–
	5	0	0	0	0	1.8
		–	–	–	–	–

Q•No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
654	B	4.4	6.3	6.2	4.3	4.9
	C	–	–	–	–	–
	E	–	–	–	–	–
655	B	4.4	6.3	6.2	4.3	4.9
	C	4.4	6.3	6.2	4.3	4.9
	E	–	–	–	–	–
660	B	–	–	–	–	–
	C	4.5	6.3	6.2	4.3	5.9
	E	–	–	–	–	–
739	B	–	–	–	–	–
	C	0.6	0.6	0.6	0.6	12
	E	12	12	12	12	0.6
740	B	–	–	–	–	–
	C	–	–	–	–	–
	E	6.4	0.6	6.4	0.6	0.6

- MT BOARD -

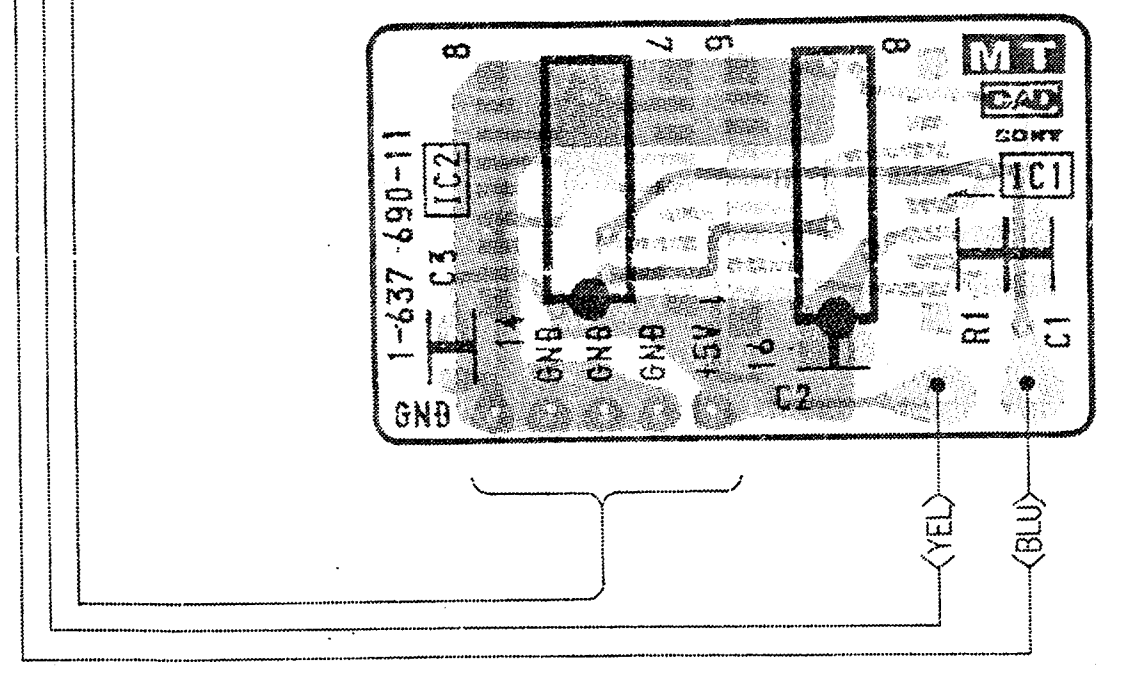
MT
CAD
CONT
IC1
IC2
1-637-069-11
C1
C2
C3
R1
GND
+5V
1
8
7
6
5
4
(YEL)
(BLU)

BB BOAR

I

	CON DUCT SID
IC401	I -
IC402	J -
IC403	F -
IC404	F -
IC405	D -
IC407	H -
IC408	D -
IC409	D -
IC410	F -
IC411	E -
IC412	C -
IC413	E -

TRAN

	CC DUC SI
Q401	J -
Q402	E
Q450	A
Q451	B
Q452	A
Q453	A
Q454	B
Q456	A
Q457	B
Q501	D
Q502	D
Q503	C
Q504	C
Q505	J -
Q506	H
Q507	G
Q508	G
Q509	E
Q510	D
Q511	D
Q512	C
Q513	D
Q514	D
Q515	C
Q516	C
Q517	C
Q518	C
Q519	C
Q520	A
Q521	B
Q522	G
Q523	J
Q524	H
Q525	F
Q526	F
Q527	D
Q528	B
Q529	B
Q530	C
Q531	C
Q537	F
Q538	F
Q539	F
Q540	G
Q541	F
Q542	E
Q545	D
Q650	F
Q651	F
Q652	G
Q653	G
Q654	G
Q655	G
Q656	G
Q657	F
Q658	F
Q659	F
Q660	G
Q661	G

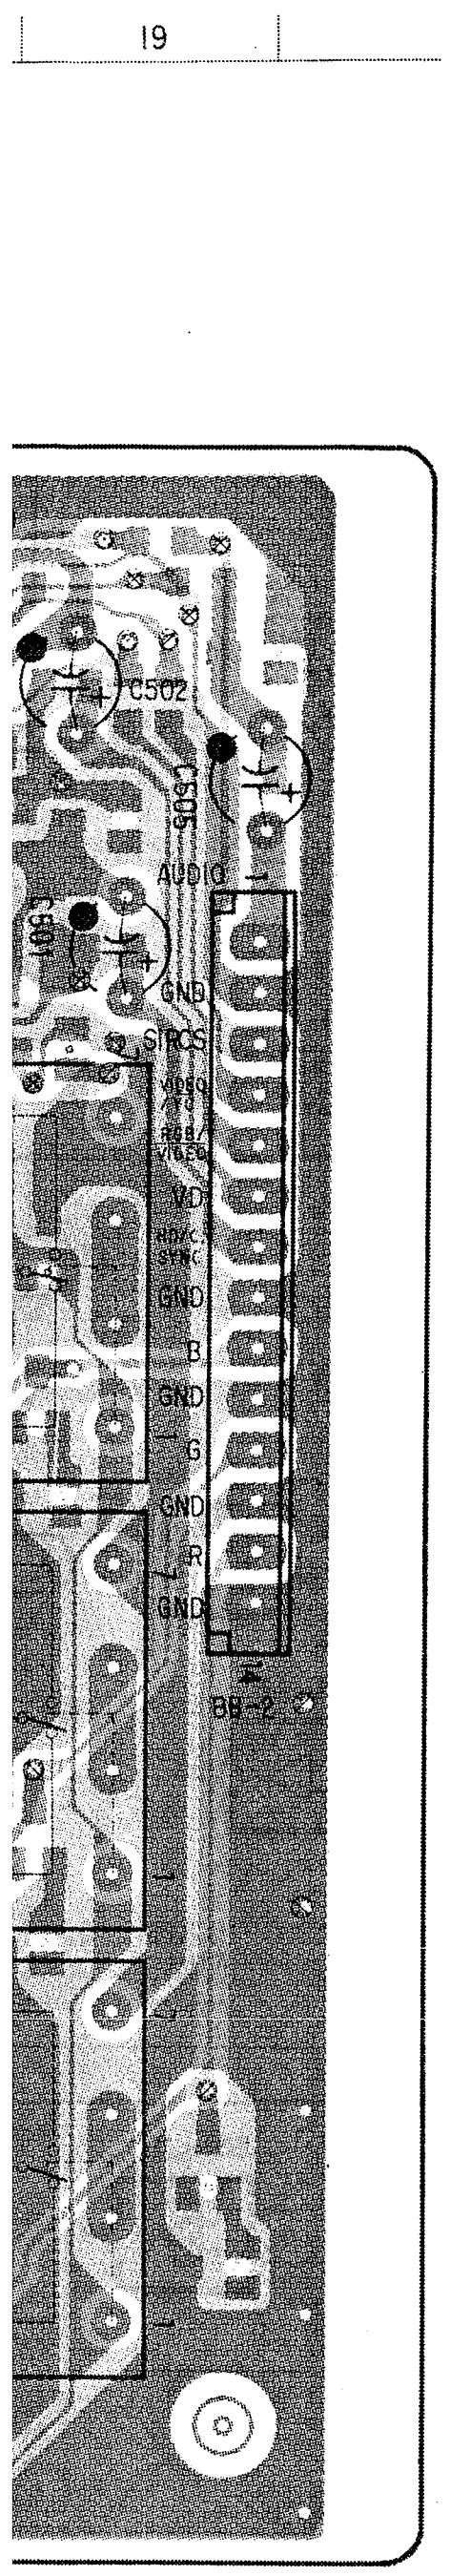
19
C502
AUDIO
GND
SIRCS
VD
GND
GND
GND
BB-2

ECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
6.3	6.2	4.3	4.9
–	–	–	–
–	–	–	–
6.3	6.2	4.3	4.9
6.3	6.2	4.3	4.9
–	–	–	–
–	–	–	–
6.3	6.2	4.3	5.9
–	–	–	–
–	–	–	–
0.6	0.6	0.6	12
12	12	12	0.6
–	–	–	–
–	–	–	–
0.6	6.4	0.6	0.6

BB BOARD

IC

	CON-DUCTOR SIDE	COM-PONENT SIDE
IC401	I - 3	I - 18
IC402	J - 18	J - 3
IC403	F - 8	F - 13
IC404	F - 3	F - 17
IC405	D - 5	D - 16
IC407	H - 5	H - 16
IC408	D - 8	D - 13
IC409	D - 9	D - 11
IC410	F - 10	F - 10
IC411	E - 10	E - 10
IC412	C - 7	C - 13
IC413	E - 18	E - 3

TRANSISTOR

	CON-DUCTOR SIDE	COM-PONENT SIDE
Q401	J - 16	J - 5
Q402	E - 8	E - 13
Q450	A - 9	
Q451	B - 9	
Q452	A - 10	
Q453	A - 10	
Q454	B - 11	
Q456	A - 12	
Q457	B - 9	
Q501	D - 3	
Q502	D - 3	
Q503	C - 3	
Q504	C - 3	
Q505	J - 3	
Q506	H - 4	
Q507	G - 4	
Q508	G - 4	
Q509	E - 3	
Q510	D - 4	
Q511	D - 4	
Q512	C - 4	
Q513	D - 13	
Q514	D - 12	
Q515	C - 12	
Q516	C - 10	
Q517	C - 11	
Q518	C - 8	
Q519	C - 8	
Q520	A - 13	
Q521	B - 13	
Q522	G - 6	
Q523	J - 4	
Q524	H - 6	
Q525	F - 3	
Q526	F - 3	
Q527	D - 2	
Q528	B - 3	
Q529	B - 3	
Q530	C - 3	
Q531	C - 4	
Q537	F - 4	
Q538	F - 5	
Q539	F - 5	
Q540	G - 5	
Q541	F - 5	F - 16
Q542	E - 7	
Q545	D - 7	
Q650	F - 14	
Q651	F - 15	
Q652	G - 14	
Q653	G - 15	
Q654	G - 14	
Q655	G - 15	
Q656	G - 15	
Q657	F - 15	
Q658	F - 16	
Q659	F - 16	
Q660	G - 15	
Q661	G - 16	
Q662	G - 16	
Q663	G - 17	
Q664	G - 16	
Q665	G - 17	
Q666	G - 12	
Q667	G - 11	
Q668	G - 12	
Q669	E - 14	
Q670	E - 14	
Q671	F - 15	
Q672	F - 15	
Q673	E - 15	
Q674	E - 15	
Q675	E - 15	
Q676	E - 16	
Q677	F - 15	
Q678	E - 16	
Q679	E - 16	
Q680	F - 17	
Q681	F - 16	
Q682	H - 18	
Q683	H - 18	
Q684	I - 18	
Q685	I - 19	
Q686	H - 19	
Q687	D - 14	
Q688	D - 14	
Q689	D - 15	
Q690	D - 15	
Q691	D - 14	
Q692	D - 15	
Q693	D - 15	
Q694	D - 16	
Q695	D - 15	
Q696	D - 16	
Q697	D - 16	
Q698	D - 17	
Q699	D - 16	
Q701	G - 18	
Q702	G - 18	
Q703	H - 18	
Q704	G - 19	
Q705	G - 19	
Q706	B - 14	
Q707	C - 14	
Q708	C - 15	
Q709	C - 15	
Q710	C - 15	
Q711	C - 15	
Q712	C - 15	
Q713	C - 16	
Q714	C - 15	
Q715	C - 16	
Q716	C - 16	
Q717	C - 17	
Q718	C - 16	
Q719	F - 18	
Q720	F - 18	
Q721	F - 18	
Q722	F - 19	
Q723	F - 19	
Q724	F - 11	
Q725	F - 11	
Q726	F - 12	
Q727	F - 11	
Q728	F - 12	
Q729	F - 13	
Q730	F - 12	
Q731	E - 13	
Q732	F - 12	
Q733	F - 13	
Q734	E - 12	
Q735	E - 13	
Q736	E - 11	
Q737	E - 11	
Q738	E - 11	
Q739	F - 13	
Q740	E - 12	
Q901	C - 17	
Q902	C - 17	
Q903	A - 17	
Q904	A - 16	
Q905	A - 19	
Q906	A - 19	
Q907	B - 18	
Q908	B - 19	
Q909	B - 19	
Q910	C - 19	
Q911	C - 18	
Q912	D - 17	
Q913	C - 18	
Q914	D - 18	
Q915	D - 18	
Q916	C - 18	
Q917	C - 19	
Q918	C - 19	
Q919	E - 19	
Q920	E - 19	
Q921	E - 18	
Q922	D - 19	
Q923	D - 19	
Q924	C - 19	

DIODE

	CON-DUCTOR SIDE	COM-PONENT SIDE
D401	J - 19	
D402	F - 8	F - 12
D450	B - 10	
D451	C - 7	
D452	D - 7	
D501	D - 2	
D502	C - 2	
D503	E - 2	
D504	C - 11	
D505	D - 11	
D506	H - 7	
D507	C - 2	
D508	C - 2	
D509	I - 1	
D510	I - 1	
D511	G - 2	
D512	H - 2	
D513	F - 2	
D514	F - 2	
D515	C - 1	
D516	B - 10	
D518	B - 10	
D520	B - 11	
D521	B - 12	
D522	C - 13	
D523	D - 13	
D650	G - 12	
D652	B - 15	
D653	B - 15	
D654	I - 18	
D655	G - 18	
D656	F - 18	
D901	B - 18	
D902	A - 19	
D903	B - 18	
D904	C - 18	
D905	D - 18	
D906	C - 18	

ADJUSTING ELEMENT

	CON-DUCTOR SIDE	COM-PONENT SIDE
RV901	D - 17	D - 3

(CONDUCTOR SIDE)

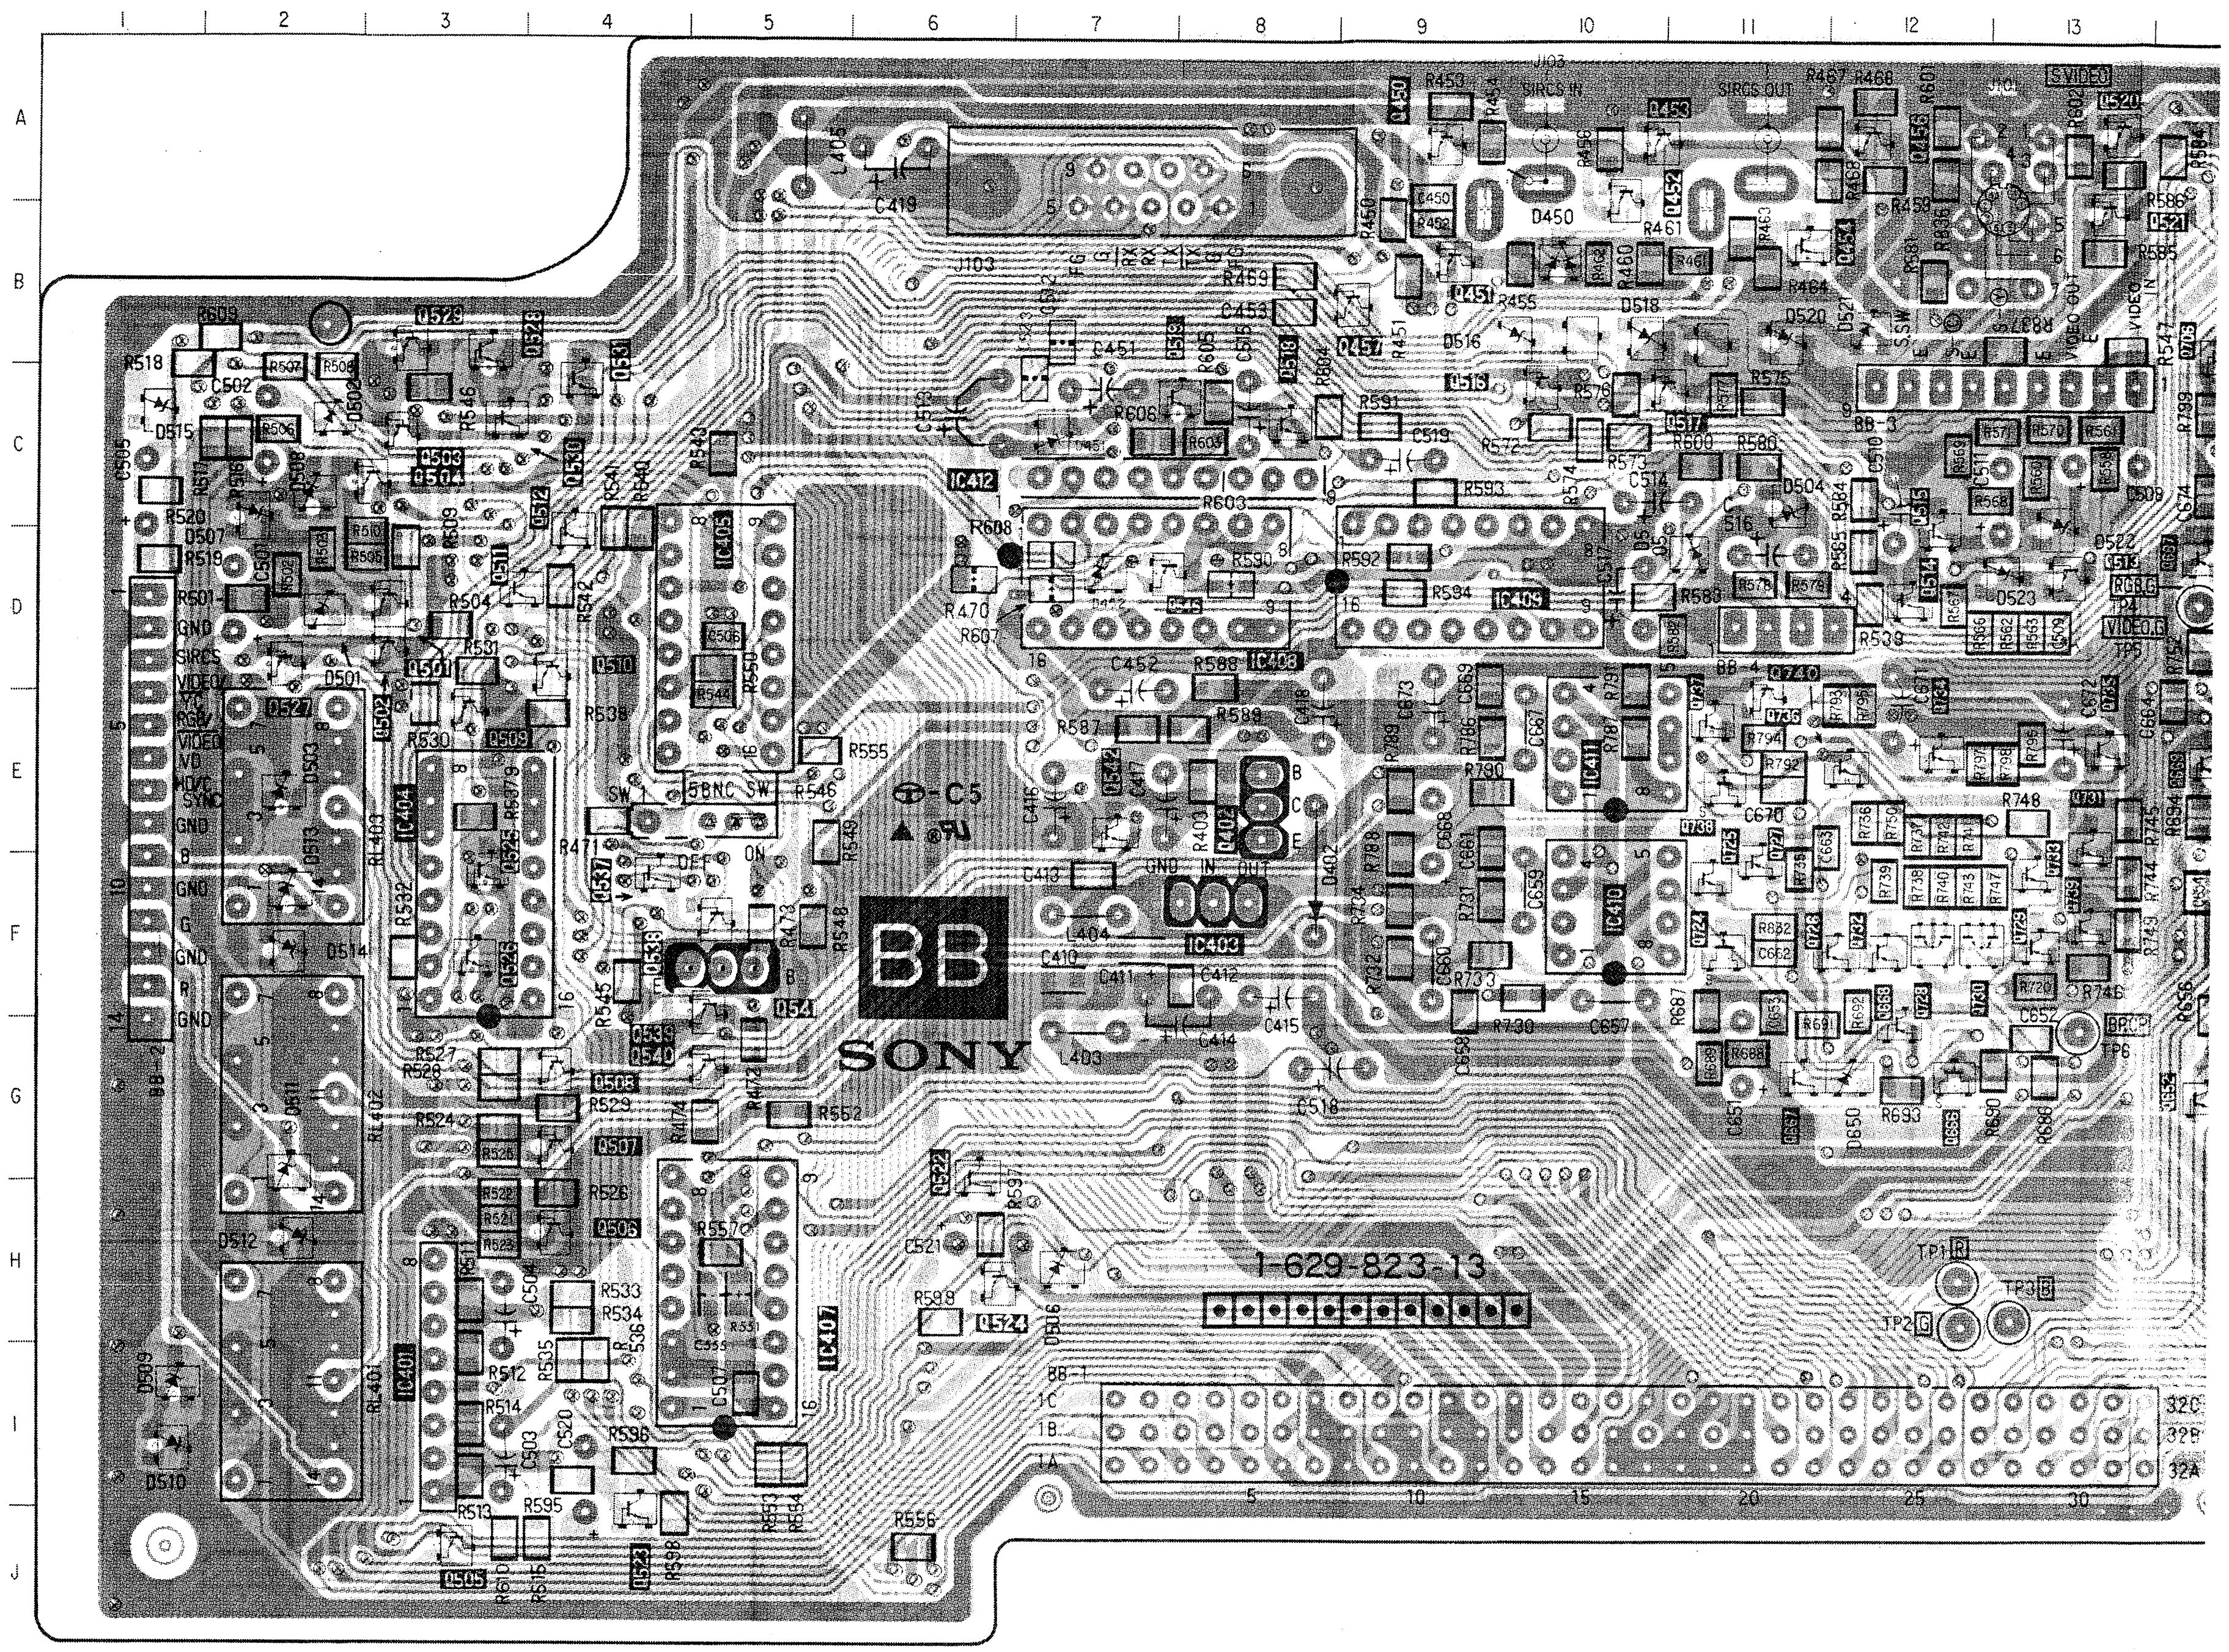
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
BB
SONY
1-629-823-13
IC401
IC402
IC403
IC404
IC405
IC407
IC408
IC409
IC410
IC411
IC412
J103
C-5
BB-1
BB-2
BB-3
TP1
TP2
TP3
S VIDEO
SIRCS IN
SIRCS OUT
BNC SW
RL401
RL402
RL403

(CONDUCTOR SIDE)

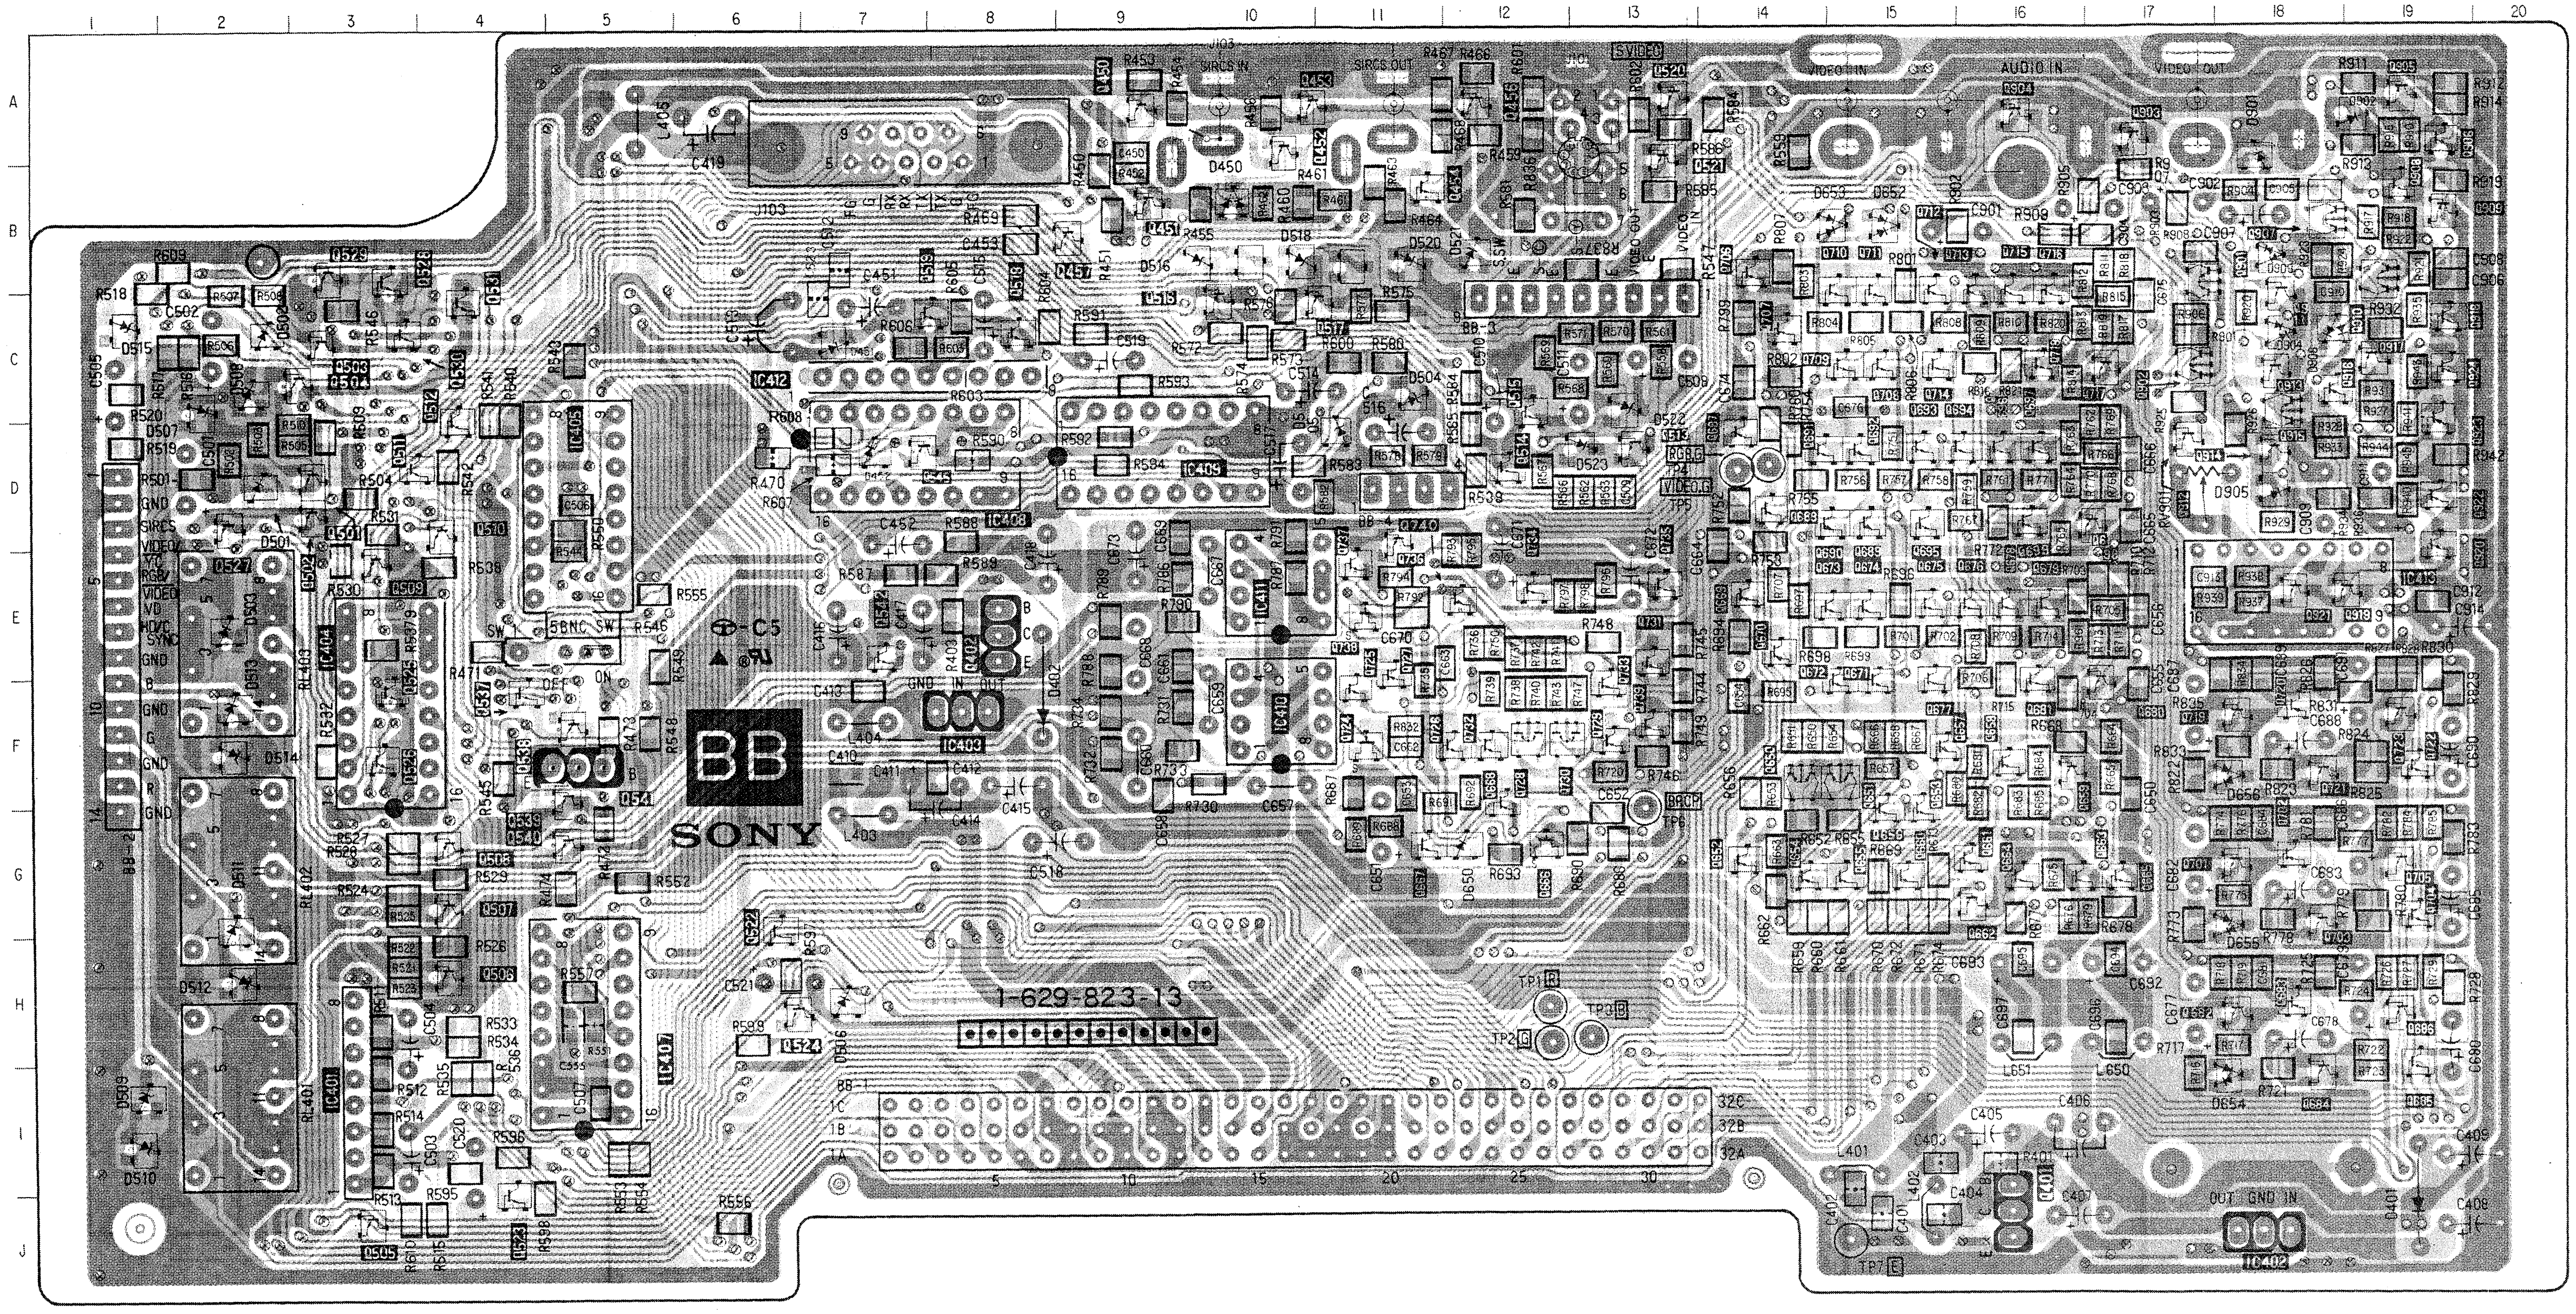
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
BB
SONY
1-629-823-13
J103
SIRCS IN
SIRCS OUT
S VIDEO
VIDEO IN
AUDIO IN
VIDEO OUT
SBNC SW
OUT GND IN
BB-1
BB-2
BB-3
BB-4
TP1
TP2
TP3
TP7

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

IC201 CXA1158P

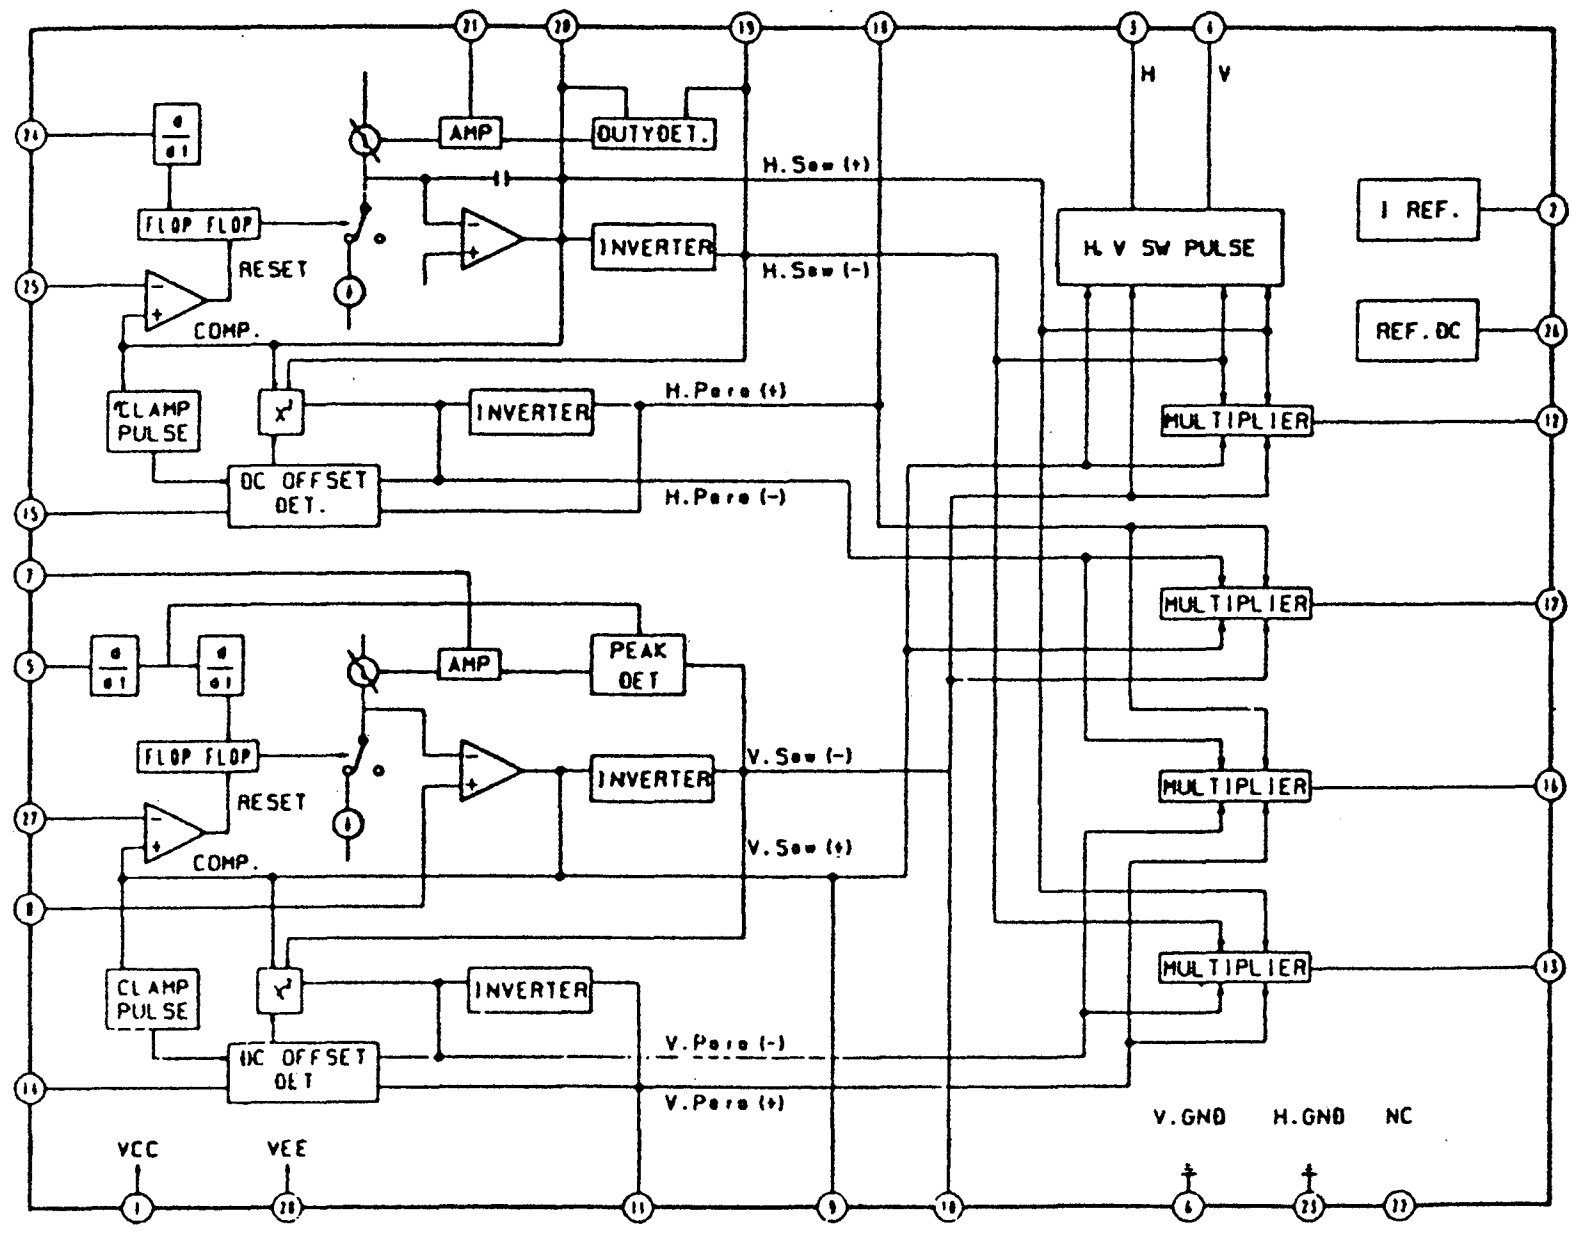
FLOP FLOP
RESET
COMP.
CLAMP PULSE
DC OFFSET DET.
AMP
OUTY DET.
INVERTER
H. Saw (+)
H. Saw (-)
H. Para (+)
H. Para (-)
H. V SW PULSE
I REF.
REF. DC
MULTIPLIER
PEAK DET
V. Saw (-)
V. Saw (+)
V. Para (-)
V. Para (+)
VCC
VEE
V. GND
H. GND
NC

DA

(LARGE WAVEFORM GENERATOR)

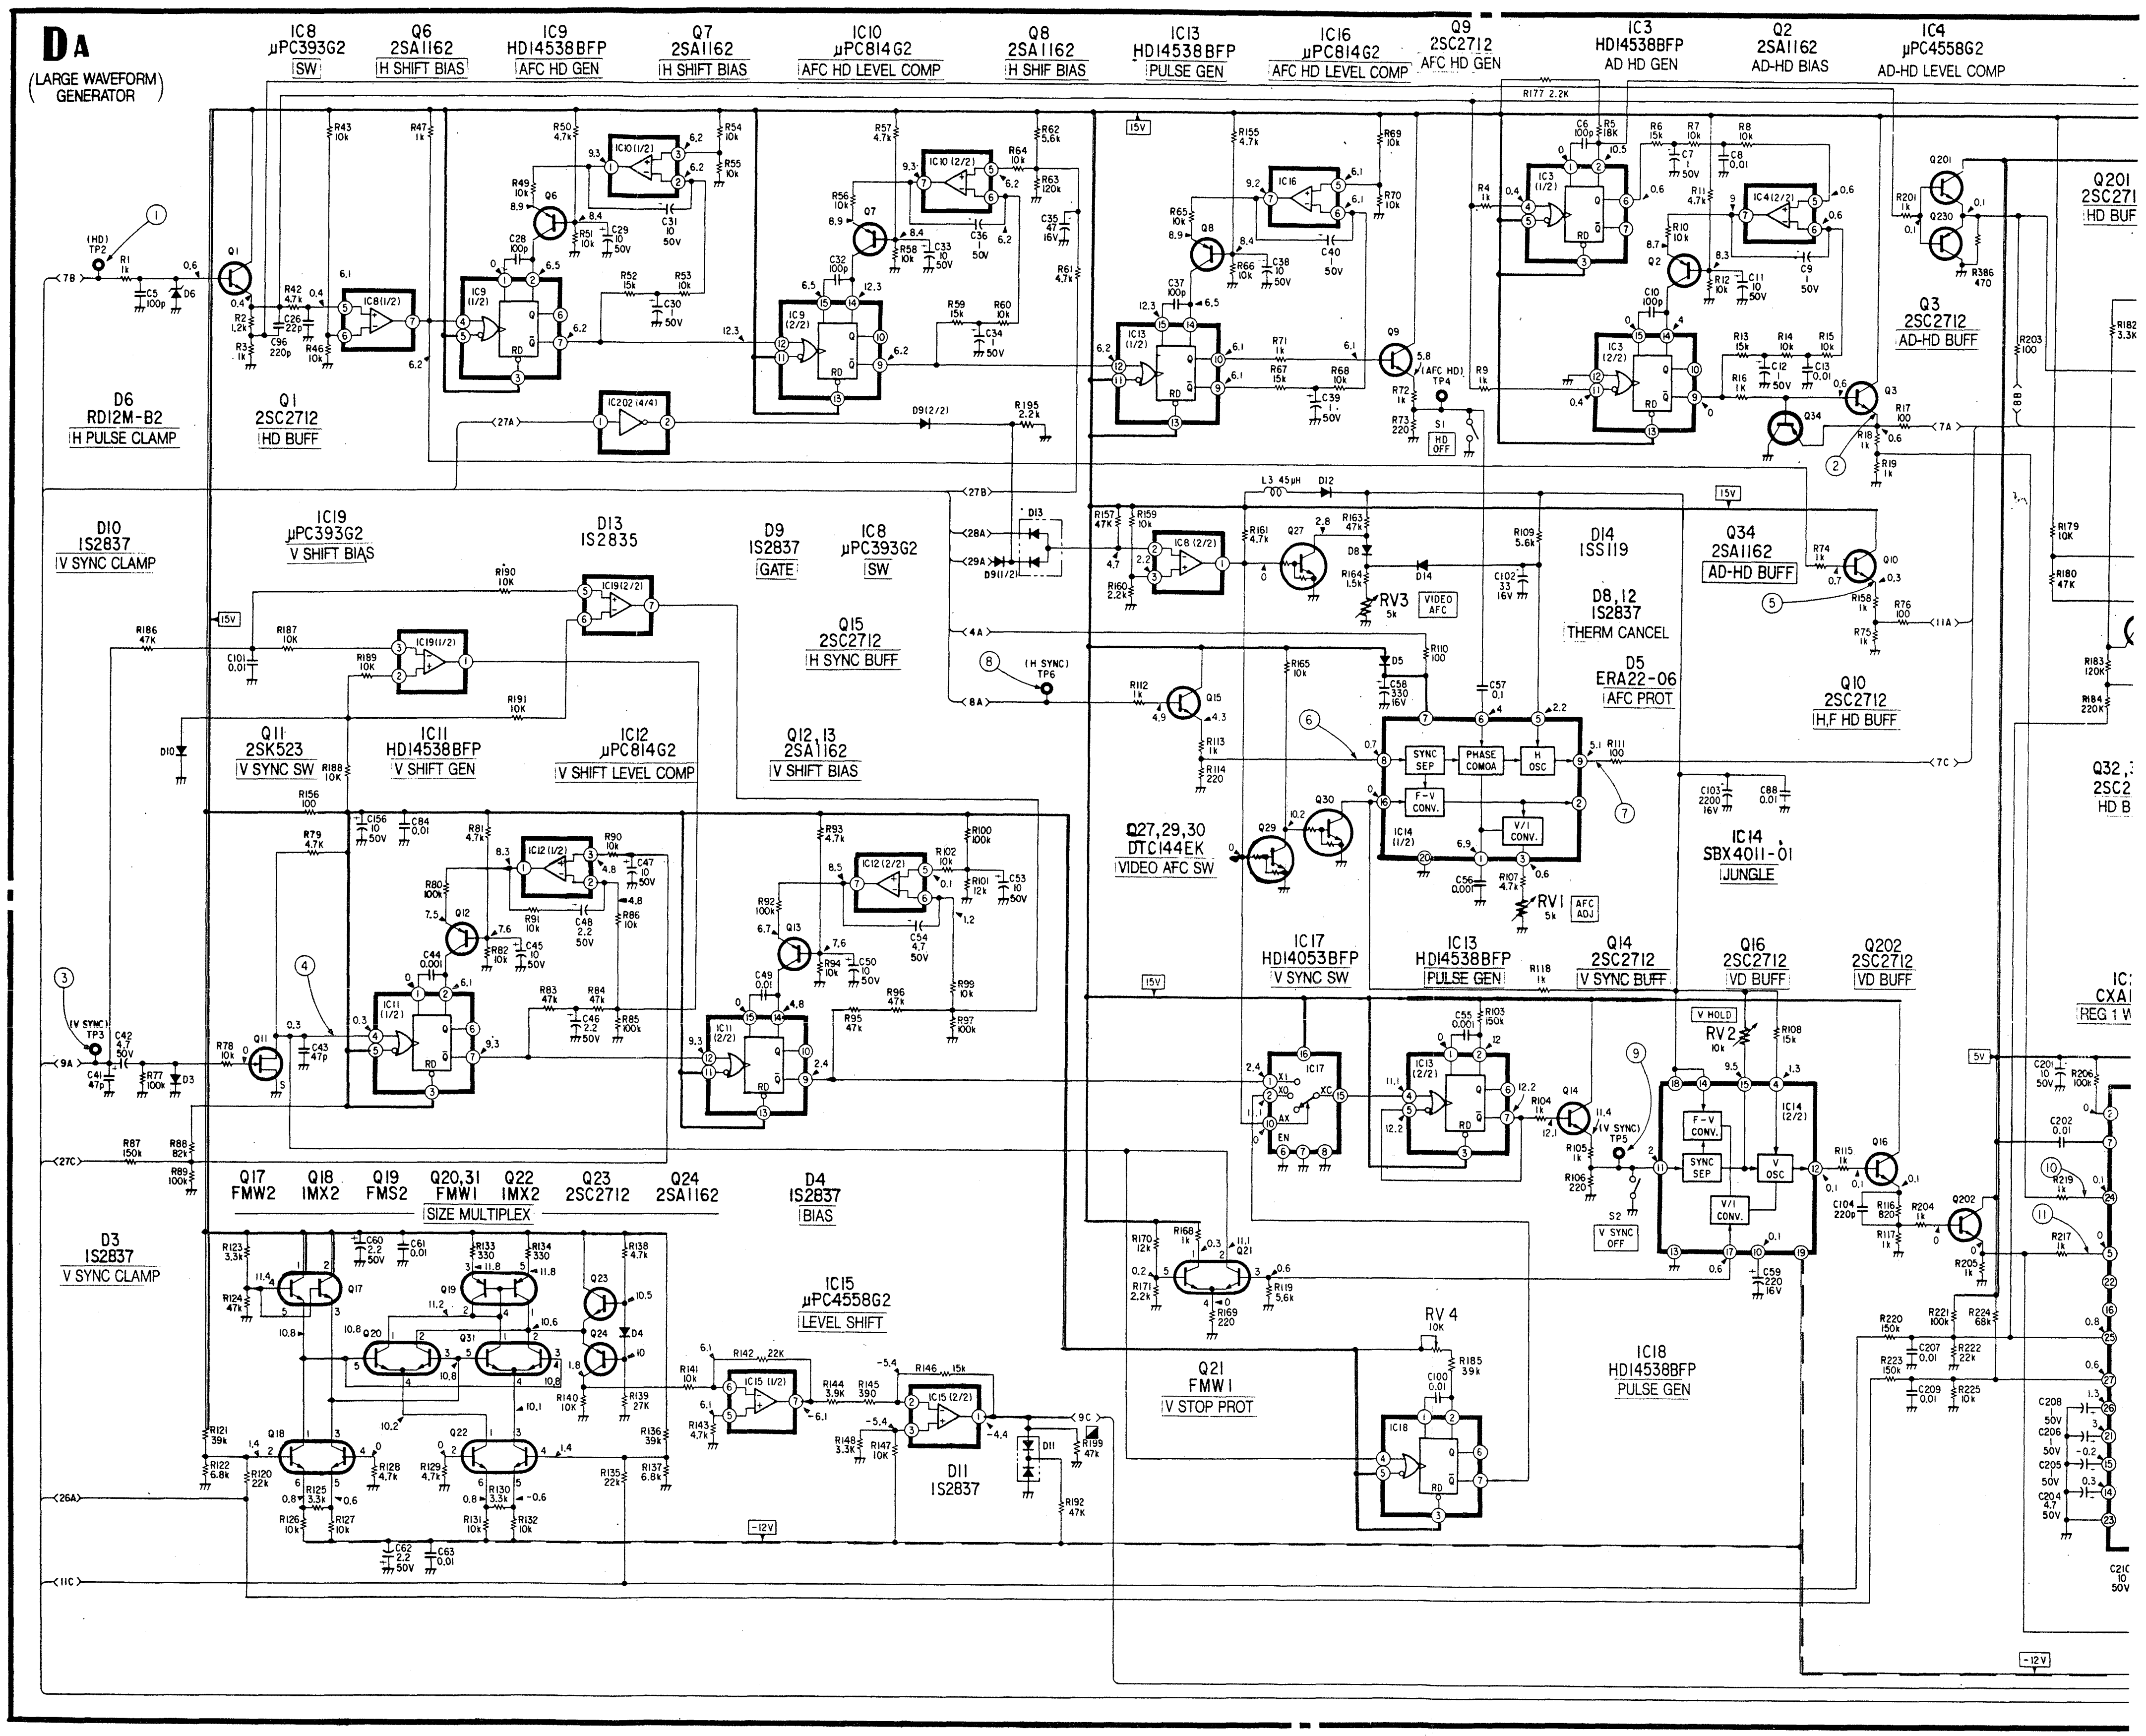
IC8 μPC393G2 SW
Q6 2SA1162 H SHIFT BIAS
IC9 HD14538BFP AFC HD GEN
Q7 2SA1162 H SHIFT BIAS
IC10 μPC814G2 AFC HD LEVEL COMP
Q8 2SA1162 H SHIF BIAS
IC13 HD14538BFP PULSE GEN
IC16 μPC814G2 AFC HD LEVEL COMP
Q9 2SC2712 AFC HD GEN
IC3 HD14538BFP AD HD GEN
Q2 2SA1162 AD-HD BIAS
IC4 μPC4558G2 AD-HD LEVEL COMP
Q201 2SC271 HD BUF
Q3 2SC2712 AD-HD BUFF
D6 RD12M-B2 H PULSE CLAMP
Q1 2SC2712 HD BUFF
D10 1S2837 V SYNC CLAMP
IC19 μPC393G2 V SHIFT BIAS
D13 1S2835
D9 1S2837 GATE
IC8 μPC393G2 SW
Q15 2SC2712 H SYNC BUFF
D14 1SS119
D8,12 1S2837 THERM CANCEL
D5 ERA22-06 AFC PROT
Q34 2SA1162 AD-HD BUFF
Q10 2SC2712 H,F HD BUFF
Q11 2SK523 V SYNC SW
IC11 HD14538BFP V SHIFT GEN
IC12 μPC814G2 V SHIFT LEVEL COMP
Q12,13 2SA1162 V SHIFT BIAS
Q27,29,30 DTC144EK VIDEO AFC SW
IC14 SBX4011-01 JUNGLE
Q32,3 2SC2 HD B
SYNC SEP
PHASE COMOA
H OSC
F-V CONV.
V/I CONV.
RV3
VIDEO AFC
RV1
AFC ADJ
IC17 HD14053BFP V SYNC SW
IC13 HD14538BFP PULSE GEN
Q14 2SC2712 V SYNC BUFF
Q16 2SC2712 VD BUFF
Q202 2SC2712 VD BUFF
IC CXA REG 1 W
V HOLD
RV2
V OSC
Q17 FMW2
Q18 IMX2
Q19 FMS2
Q20,31 FMW1
Q22 IMX2
Q23 2SC2712
Q24 2SA1162
SIZE MULTIPLEX
D4 1S2837 BIAS
D3 1S2837 V SYNC CLAMP
IC15 μPC4558G2 LEVEL SHIFT
D11 1S2837
Q21 FMW1 V STOP PROT
RV 4
IC18 HD14538BFP PULSE GEN
V SYNC OFF
S1 HD OFF
S2
(HD) TP2
(AFC HD) TP4
(H SYNC) TP6
(V SYNC) TP3
(V SYNC) TP5
IC202 (4/4)
15V
5V
-12V
7B
7A
8B
9A
9C
26A
27A
27B
27C
28A
29A
4A
8A
11A
11C
7C
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
A B C D E F G H I J

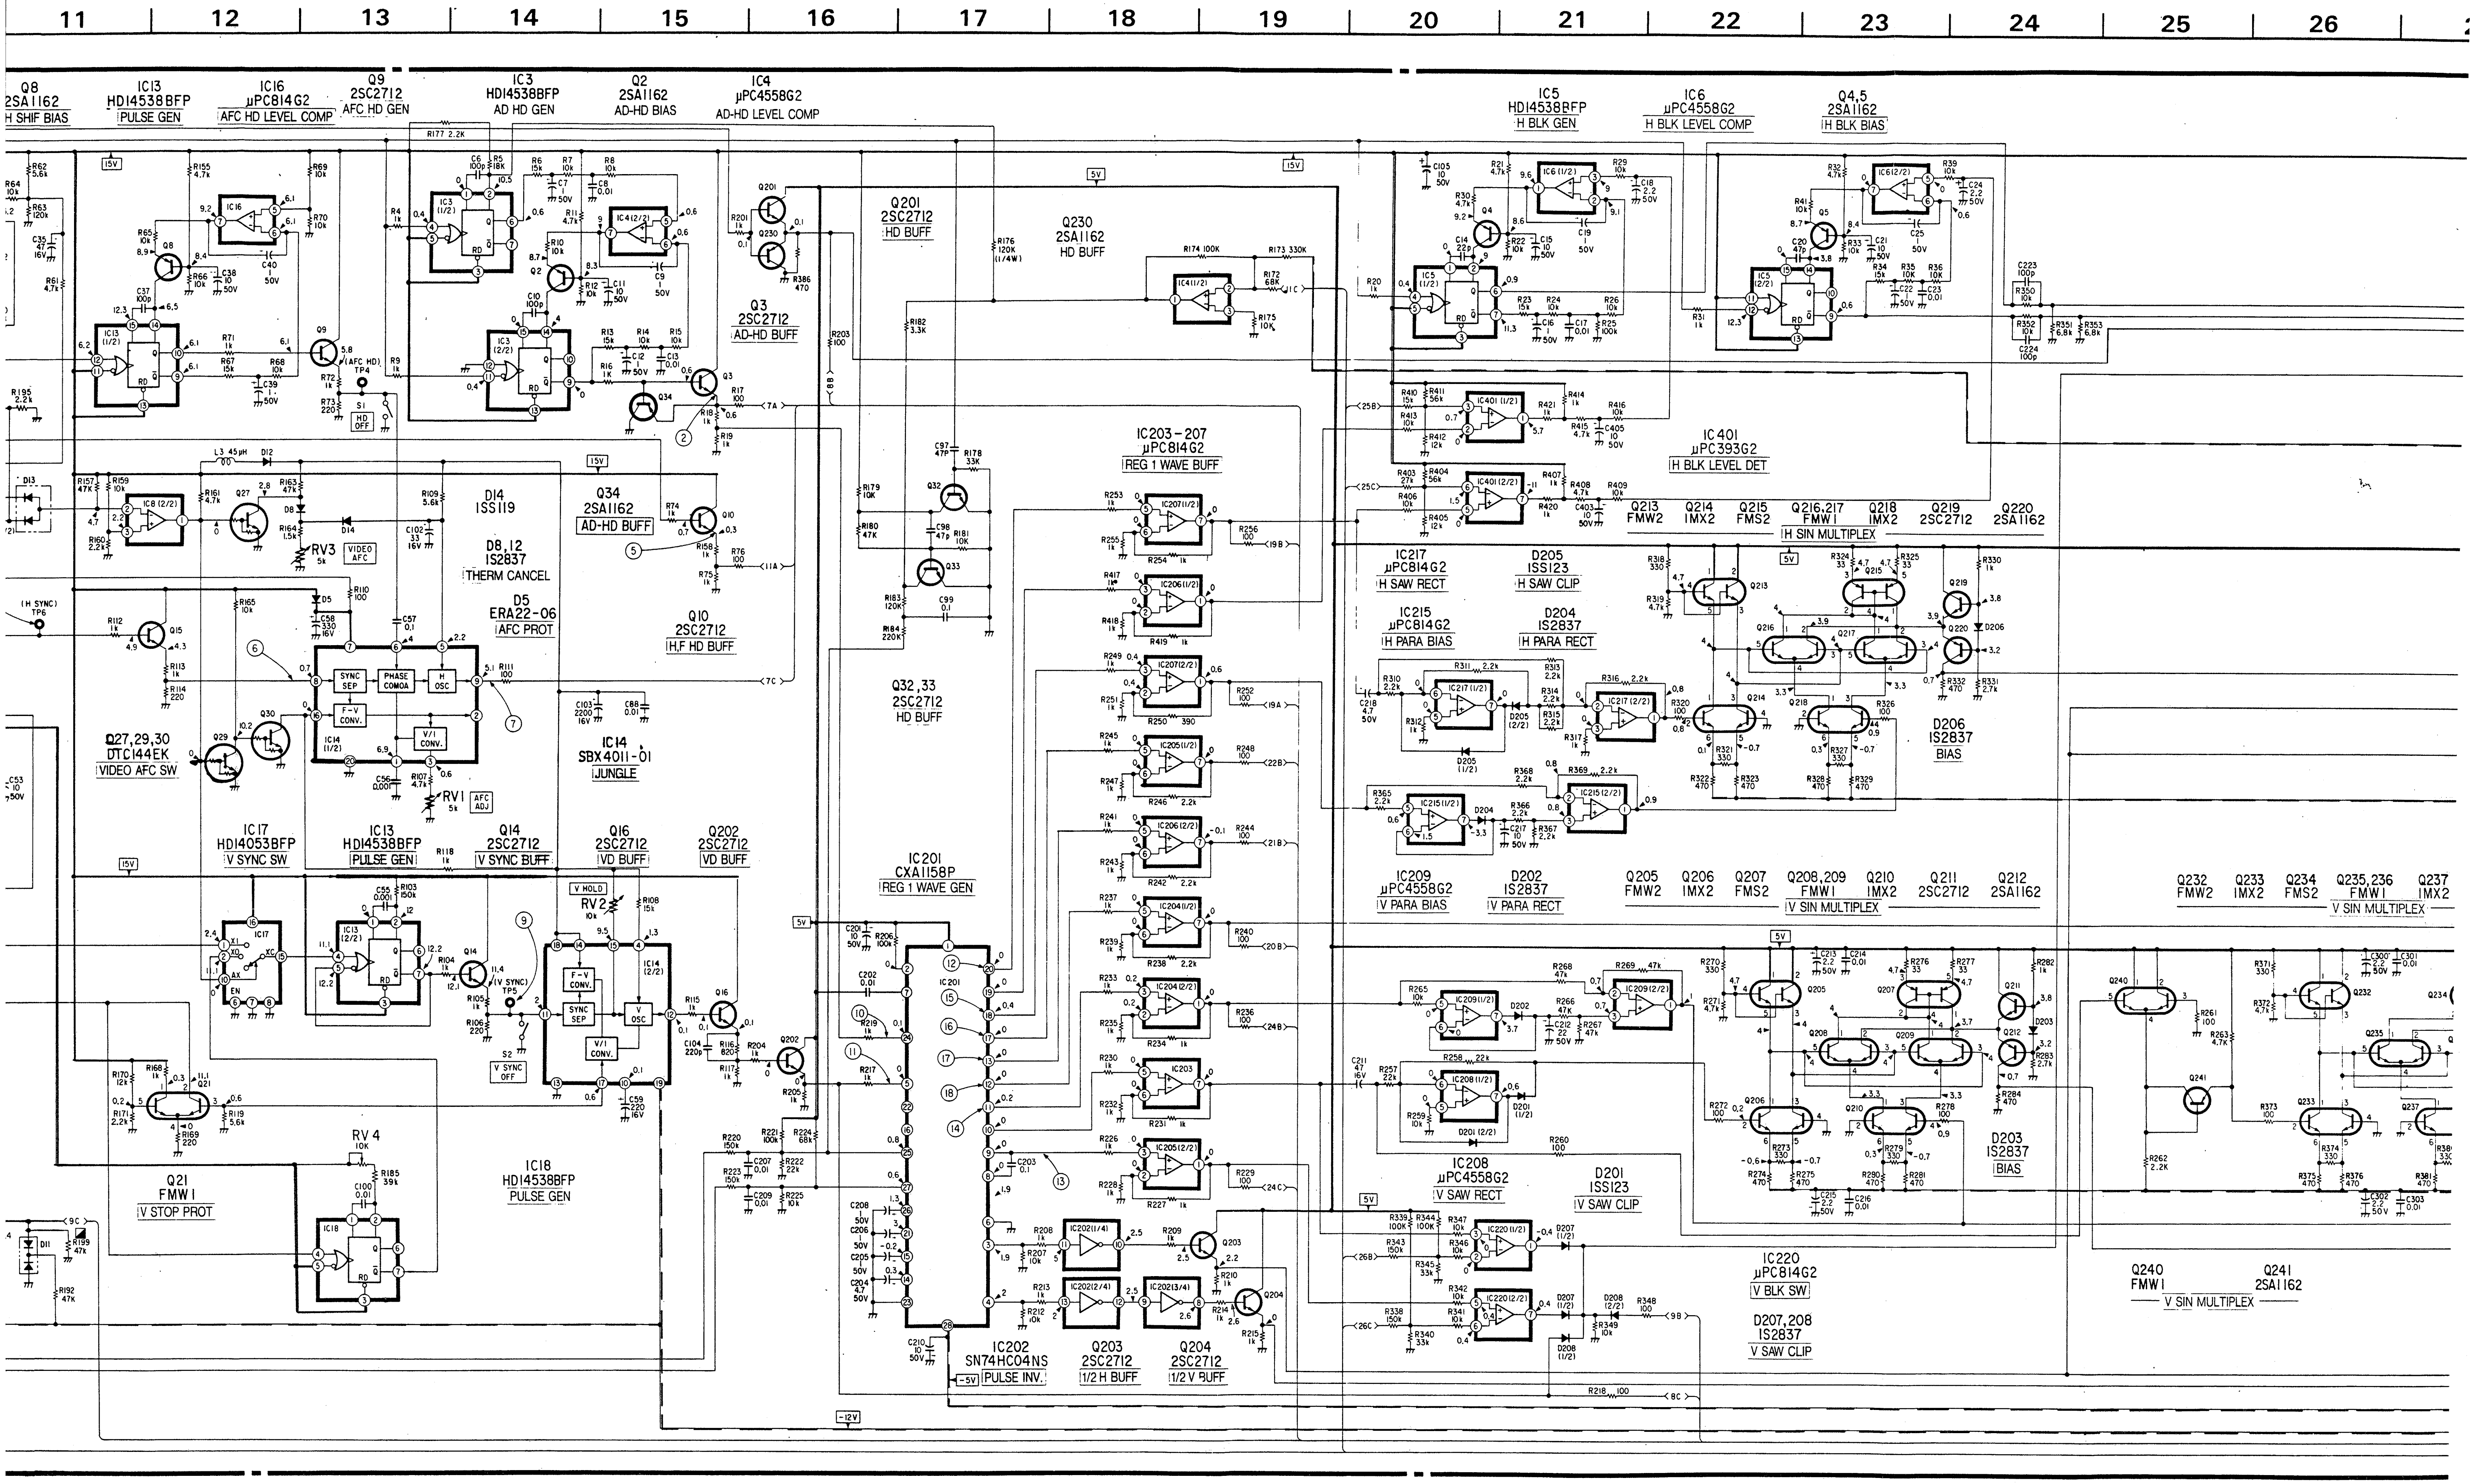
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
Q8 2SA1162 H SHIF BIAS
IC13 HD14538BFP PULSE GEN
IC16 μPC814G2 AFC HD LEVEL COMP
Q9 2SC2712 AFC HD GEN
IC3 HD14538BFP AD HD GEN
Q2 2SA1162 AD-HD BIAS
IC4 μPC4558G2 AD-HD LEVEL COMP
Q3 2SC2712 AD-HD BUFF
Q201 2SC2712 HD BUFF
Q230 2SA1162 HD BUFF
IC5 HD14538BFP H BLK GEN
IC6 μPC4558G2 H BLK LEVEL COMP
Q4,5 2SA1162 H BLK BIAS
IC401 μPC393G2 H BLK LEVEL DET
IC203-207 μPC814G2 REG 1 WAVE BUFF
D14 1SS119
Q34 2SA1162 AD-HD BUFF
D8,12 1S2837 THERM CANCEL
D5 ERA22-06 AFC PROT
Q10 2SC2712 H,F HD BUFF
Q27,29,30 DTC144EK VIDEO AFC SW
IC14 SBX4011-01 JUNGLE
Q32,33 2SC2712 HD BUFF
IC17 HD14053BFP V SYNC SW
IC13 HD14538BFP PULSE GEN
Q14 2SC2712 V SYNC BUFF
Q16 2SC2712 VD BUFF
Q202 2SC2712 VD BUFF
IC201 CXA1158P REG 1 WAVE GEN
Q21 FMW1 V STOP PROT
IC18 HD14538BFP PULSE GEN
IC202 SN74HC04NS PULSE INV.
Q203 2SC2712 1/2 H BUFF
Q204 2SC2712 1/2 V BUFF
IC217 μPC814G2 H SAW RECT
D205 1SS123 H SAW CLIP
IC215 μPC814G2 H PARA BIAS
D204 1S2837 H PARA RECT
Q213 FMW2
Q214 IMX2
Q215 FMS2
Q216,217 FMW1
Q218 IMX2
Q219 2SC2712
Q220 2SA1162
H SIN MULTIPLEX
D206 1S2837 BIAS
IC209 μPC4558G2 V PARA BIAS
D202 1S2837 V PARA RECT
Q205 FMW2
Q206 IMX2
Q207 FMS2
Q208,209 FMW1
Q210 IMX2
Q211 2SC2712
Q212 2SA1162
V SIN MULTIPLEX
D203 1S2837 BIAS
IC208 μPC4558G2 V SAW RECT
D201 1SS123 V SAW CLIP
IC220 μPC814G2 V BLK SW
D207,208 1S2837 V SAW CLIP
Q232 FMW2
Q233 IMX2
Q234 FMS2
Q235,236 FMW1
Q237 IMX2
V SIN MULTIPLEX
Q240 FMW1
Q241 2SA1162
V SIN MULTIPLEX
15V
5V
-5V
-12V
RV1 AFC ADJ
RV2 V HOLD
RV3 VIDEO AFC
RV4
S1 HD OFF
S2 V SYNC OFF
TP4 (AFC HD)
TP5 (V SYNC)
TP6 (H SYNC)

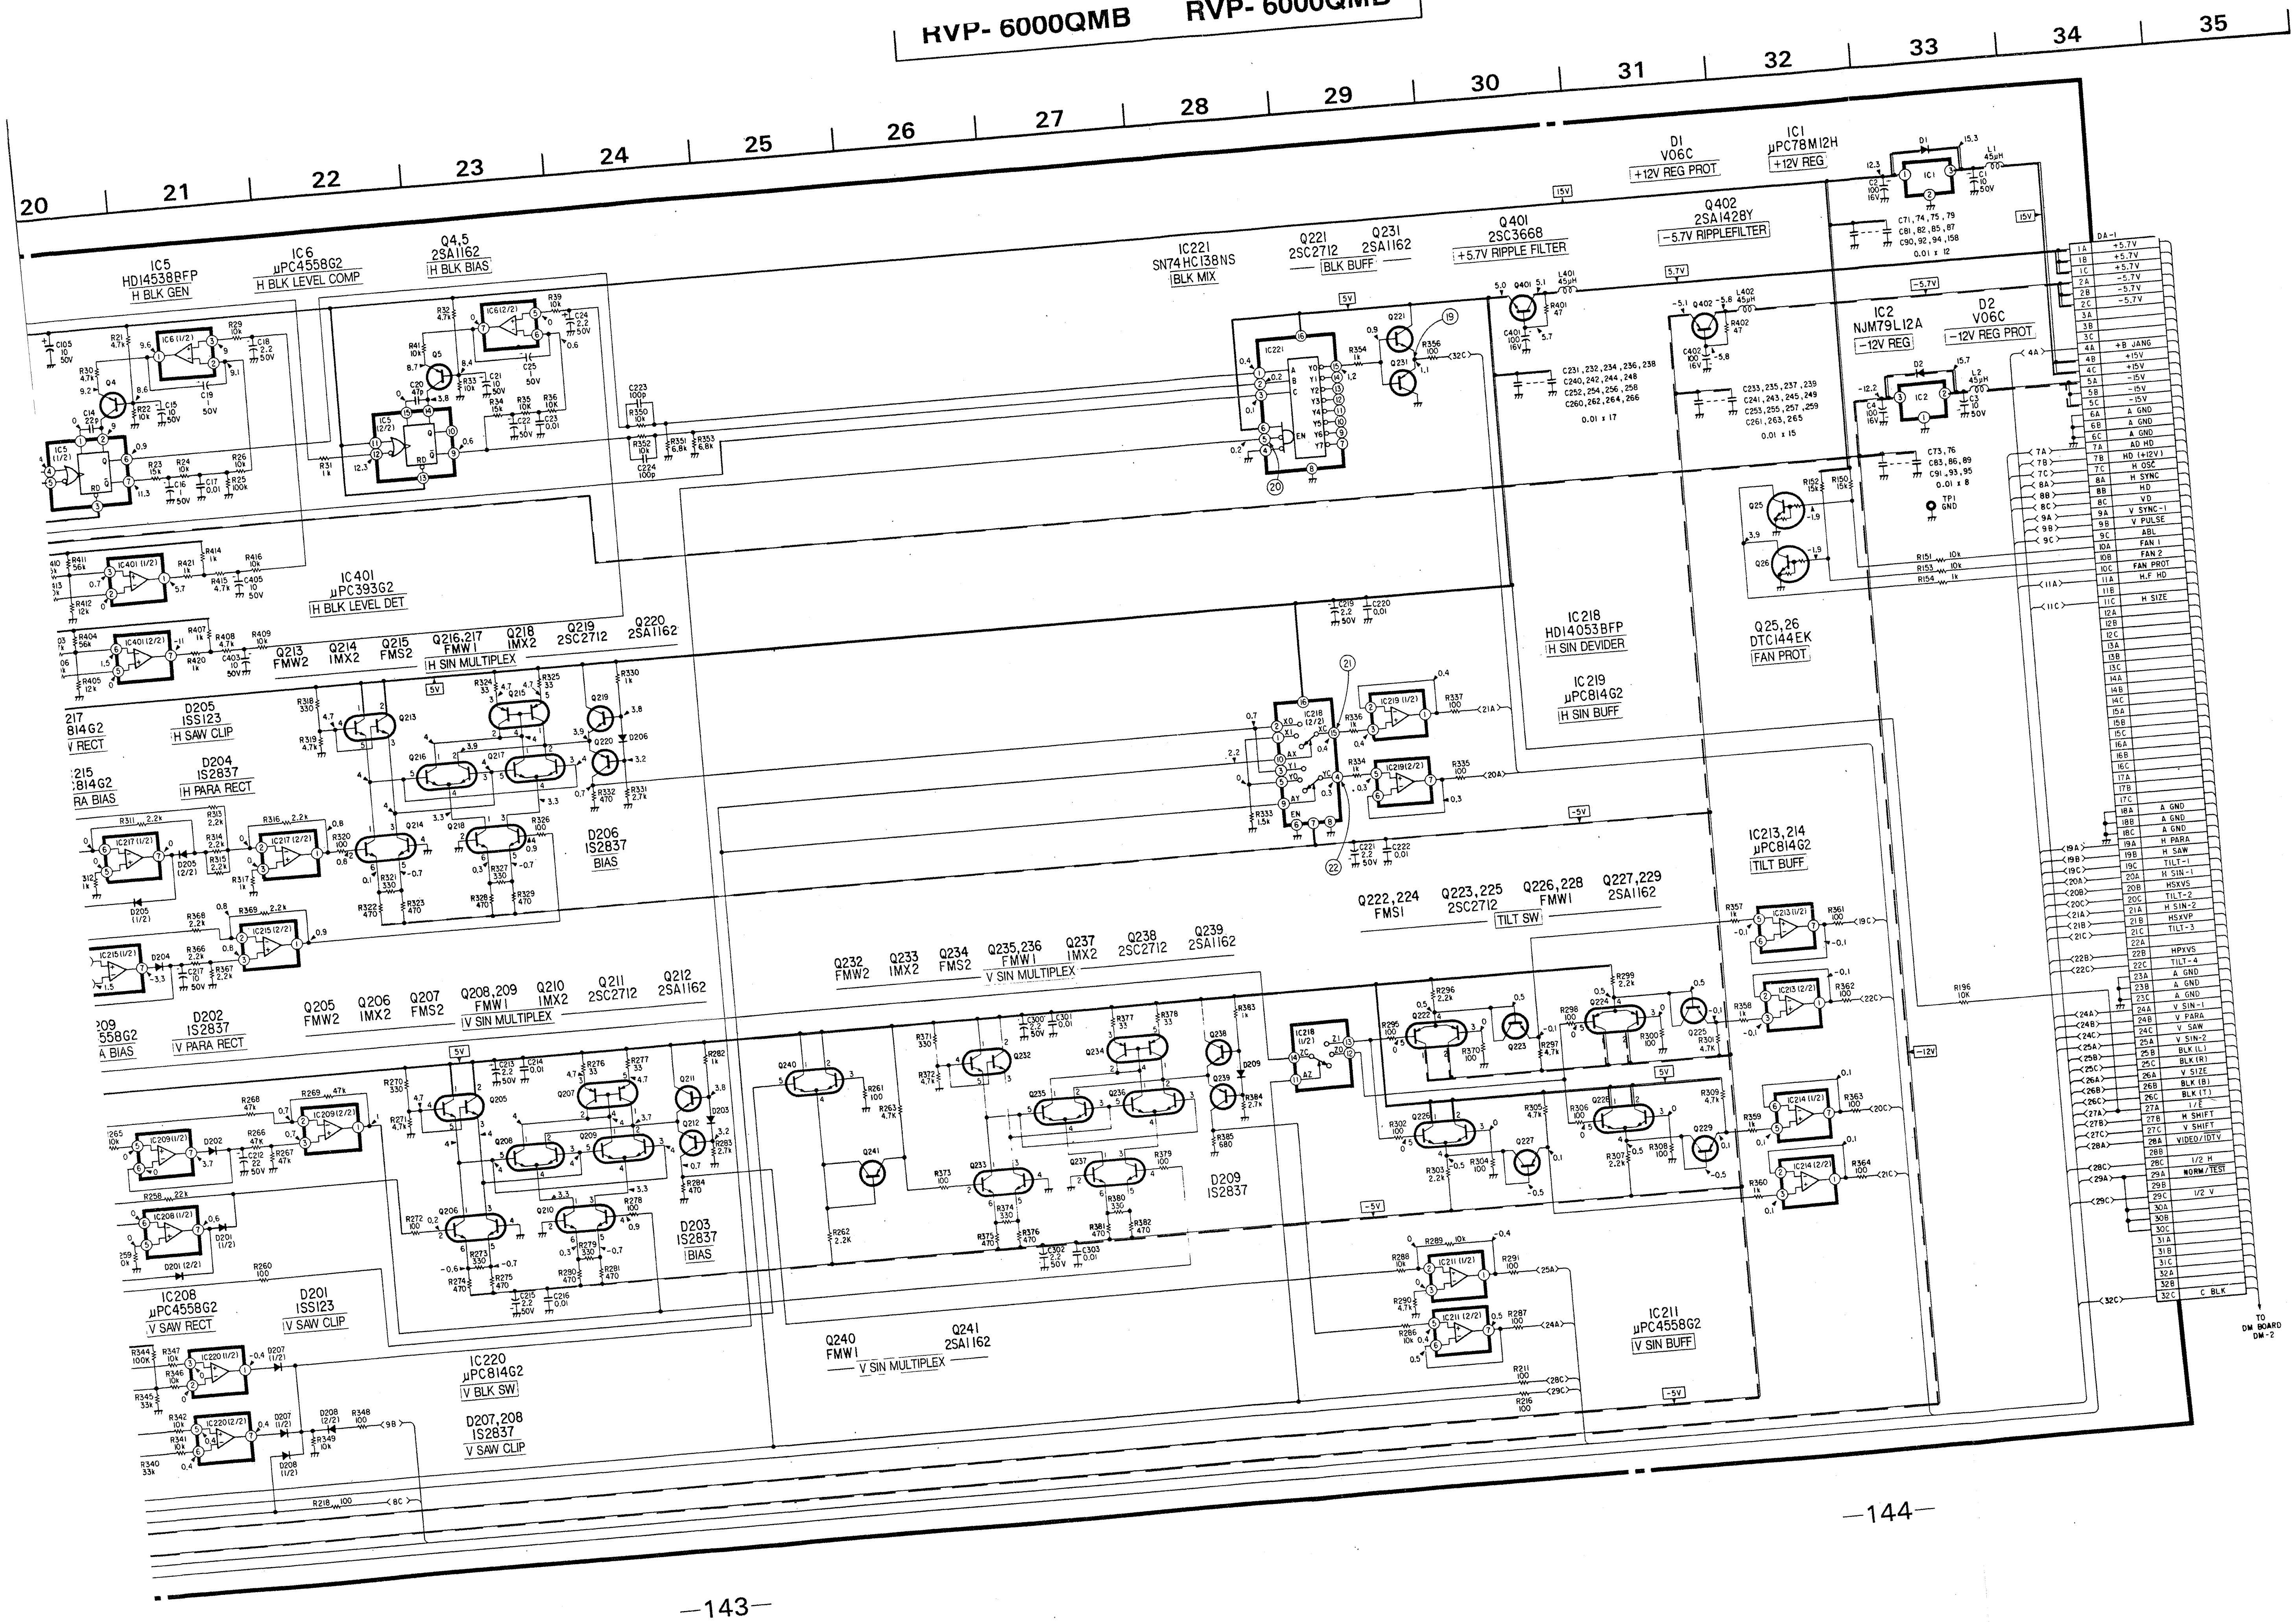
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
IC5
HD14538BFP
H BLK GEN
IC6
µPC4558G2
H BLK LEVEL COMP
Q4,5
2SA1162
H BLK BIAS
IC401
µPC393G2
H BLK LEVEL DET
IC221
SN74HC138NS
BLK MIX
Q221
2SC2712
Q231
2SA1162
BLK BUFF
Q401
2SC3668
+5.7V RIPPLE FILTER
D1
V06C
+12V REG PROT
IC1
µPC78M12H
+12V REG
Q402
2SA1428Y
-5.7V RIPPLEFILTER
IC2
NJM79L12A
-12V REG
D2
V06C
-12V REG PROT
Q213
FMW2
Q214
IMX2
Q215
FMS2
Q216,217
FMW1
Q218
IMX2
Q219
2SC2712
Q220
2SA1162
H SIN MULTIPLEX
D205
1SS123
H SAW CLIP
D204
1S2837
H PARA RECT
D206
1S2837
BIAS
IC218
HD14053BFP
H SIN DEVIDER
IC219
µPC814G2
H SIN BUFF
Q25,26
DTC144EK
FAN PROT
Q205
FMW2
Q206
IMX2
Q207
FMS2
Q208,209
FMW1
Q210
IMX2
Q211
2SC2712
Q212
2SA1162
V SIN MULTIPLEX
D202
1S2837
V PARA RECT
D203
1S2837
BIAS
Q232
FMW2
Q233
IMX2
Q234
FMS2
Q235,236
FMW1
Q237
IMX2
Q238
2SC2712
Q239
2SA1162
V SIN MULTIPLEX
D209
1S2837
Q222,224
FMS1
Q223,225
2SC2712
Q226,228
FMW1
Q227,229
2SA1162
TILT SW
IC213,214
µPC814G2
TILT BUFF
IC208
µPC4558G2
V SAW RECT
D201
1SS123
V SAW CLIP
IC220
µPC814G2
V BLK SW
D207,208
1S2837
V SAW CLIP
Q240
FMW1
Q241
2SA1162
V SIN MULTIPLEX
IC211
µPC4558G2
V SIN BUFF
DA-1
1A +5.7V
1B +5.7V
1C +5.7V
2A -5.7V
2B -5.7V
2C -5.7V
4A +B JANG
4B +15V
4C +15V
5A -15V
5B -15V
5C -15V
6A A GND
6B A GND
6C A GND
7A AD HD
7B HD (+12V)
7C H OSC
8A H SYNC
8B HD
8C VD
9A V SYNC-1
9B V PULSE
9C ABL
10A FAN 1
10B FAN 2
10C FAN PROT
11A H.F HD
11C H SIZE
18A A GND
18B A GND
18C A GND
19A H PARA
19B H SAW
19C TILT-1
20A H SIN-1
20B HSXVS
20C TILT-2
21A H SIN-2
21B HSXVP
21C TILT-3
22B HPXVS
22C TILT-4
23A A GND
23B A GND
23C A GND
24A V SIN-1
24B V PARA
24C V SAW
25A V SIN-2
25B BLK (L)
25C BLK (R)
26A V SIZE
26B BLK (B)
26C BLK (T)
27A I/E
27B H SHIFT
27C V SHIFT
28A VIDEO/IDTV
29A NORM/TEST
28C I/2 H
29C I/2 V
32C C BLK
TO DM BOARD DM-2
TP1 GND
15V
5V
-5V
-12V

DA [LARGE WAVEFORM GENERATOR]

①


PAL	12 Vp-p(H)
SECAM	12 Vp-p(H)
NTSC3.58	12 Vp-p(H)
NTSC4.43	12 Vp-p(H)
S-VIDEO	12 Vp-p(H)
HDTV	12 Vp-p(H)

②


PAL	12 Vp-p(H)
SECAM	12 Vp-p(H)
NTSC3.58	12 Vp-p(H)
NTSC4.43	12 Vp-p(H)
S-VIDEO	12 Vp-p(H)
HDTV	12 Vp-p(H)

③


PAL	5 Vp-p(V)
SECAM	5 Vp-p(V)
NTSC3.58	5 Vp-p(V)
NTSC4.43	5 Vp-p(V)
S-VIDEO	5 Vp-p(V)
HDTV	5 Vp-p(V)

④


PAL	11 Vp-p(V)
SECAM	11 Vp-p(V)
NTSC3.58	11 Vp-p(V)
NTSC4.43	11 Vp-p(V)
S-VIDEO	11 Vp-p(V)
HDTV	11 Vp-p(V)

⑤


PAL	12 Vp-p(H)
SECAM	12 Vp-p(H)
NTSC3.58	12 Vp-p(H)
NTSC4.43	12 Vp-p(H)
S-VIDEO	12 Vp-p(H)
HDTV	12 Vp-p(H)

⑥


PAL	0.8Vp-p(H)
SECAM	0.8Vp-p(H)
NTSC3.58	0.8Vp-p(H)
NTSC4.43	0.8Vp-p(H)
S-VIDEO	0.8Vp-p(H)
HDTV	0.8Vp-p(H)

⑦


PAL	12 Vp-p(H)
SECAM	12 Vp-p(H)
NTSC3.58	12 Vp-p(H)
NTSC4.43	12 Vp-p(H)
S-VIDEO	12 Vp-p(H)
HDTV	12 Vp-p(H)

⑧


PAL	5 Vp-p(H)
SECAM	5 Vp-p(H)
NTSC3.58	5 Vp-p(H)
NTSC4.43	5 Vp-p(H)
S-VIDEO	5 Vp-p(H)
HDTV	5 Vp-p(H)

⑨


PAL	2.0 Vp-p (V)
SECAM	2.0 Vp-p (V)
NTSC3.58	2.0 Vp-p (V)
NTSC4.43	2.0 Vp-p (V)
S-VIDEO	2.0 Vp-p (V)
HDTV	2.0 Vp-p (V)

⑩


PAL	5.5Vp-p(H)
SECAM	5.5Vp-p(H)
NTSC3.58	5.5Vp-p(H)
NTSC4.43	5.5Vp-p(H)
S-VIDEO	5.5Vp-p(H)
HDTV	5.5Vp-p(H)

⑪


PAL	4 Vp-p(V)
SECAM	4 Vp-p(V)
NTSC3.58	4 Vp-p(V)
NTSC4.43	4 Vp-p(V)
S-VIDEO	4 Vp-p(V)
HDTV	4 Vp-p(V)

⑫


PAL	1.6Vp-p(H)
SECAM	1.6Vp-p(H)
NTSC3.58	1.6Vp-p(H)
NTSC4.43	1.6Vp-p(H)
S-VIDEO	1.6Vp-p(H)
HDTV	1.6Vp-p(H)

⑬


PAL	1.2Vp-p(V)
SECAM	1.2Vp-p(V)
NTSC3.58	1.2Vp-p(V)
NTSC4.43	1.2Vp-p(V)
S-VIDEO	1.2Vp-p(V)
HDTV	1.2Vp-p(V)

⑭


PAL	0.7Vp-p(V)
SECAM	0.7Vp-p(V)
NTSC3.58	0.7Vp-p(V)
NTSC4.43	0.7Vp-p(V)
S-VIDEO	0.7Vp-p(V)
HDTV	0.7Vp-p(V)

⑮


PAL	1.6Vp-p(H)
SECAM	1.6Vp-p(H)
NTSC3.58	1.6Vp-p(H)
NTSC4.43	1.6Vp-p(H)
S-VIDEO	1.6Vp-p(H)
HDTV	1.6Vp-p(H)

⑯


PAL	0.7Vp-p(V)
SECAM	0.7Vp-p(V)
NTSC3.58	0.7Vp-p(V)
NTSC4.43	0.7Vp-p(V)
S-VIDEO	0.7Vp-p(V)
HDTV	0.7Vp-p(V)

⑰


PAL	0.6Vp-p(V)
SECAM	0.6Vp-p(V)
NTSC3.58	0.6Vp-p(V)
NTSC4.43	0.6Vp-p(V)
S-VIDEO	0.6Vp-p(V)
HDTV	0.6Vp-p(V)

⑱


PAL	1 Vp-p(V)
SECAM	1 Vp-p(V)
NTSC3.58	1 Vp-p(V)
NTSC4.43	1 Vp-p(V)
S-VIDEO	1 Vp-p(V)
HDTV	1 Vp-p(V)

⑲


PAL	5 Vp-p(V)
SECAM	5 Vp-p(V)
NTSC3.58	5 Vp-p(V)
NTSC4.43	5 Vp-p(V)
S-VIDEO	5 Vp-p(V)
HDTV	5 Vp-p(V)

⑳


PAL	3.6Vp-p(V)
SECAM	3.6Vp-p(V)
NTSC3.58	3.6Vp-p(V)
NTSC4.43	3.6Vp-p(V)
S-VIDEO	3.6Vp-p(V)
HDTV	3.6Vp-p(V)

㉑


PAL	1.2Vp-p(H)
SECAM	1.2Vp-p(H)
NTSC3.58	1.2Vp-p(H)
NTSC4.43	1.2Vp-p(H)
S-VIDEO	1.2Vp-p(H)
HDTV	1.2Vp-p(H)

㉒


PAL	1.2Vp-p(H)
SECAM	1.2Vp-p(H)
NTSC3.58	1.2Vp-p(H)
NTSC4.43	1.2Vp-p(H)
S-VIDEO	1.2Vp-p(H)
HDTV	1.2Vp-p(H)

- DA BOARD - (COMPONENT SIDE)

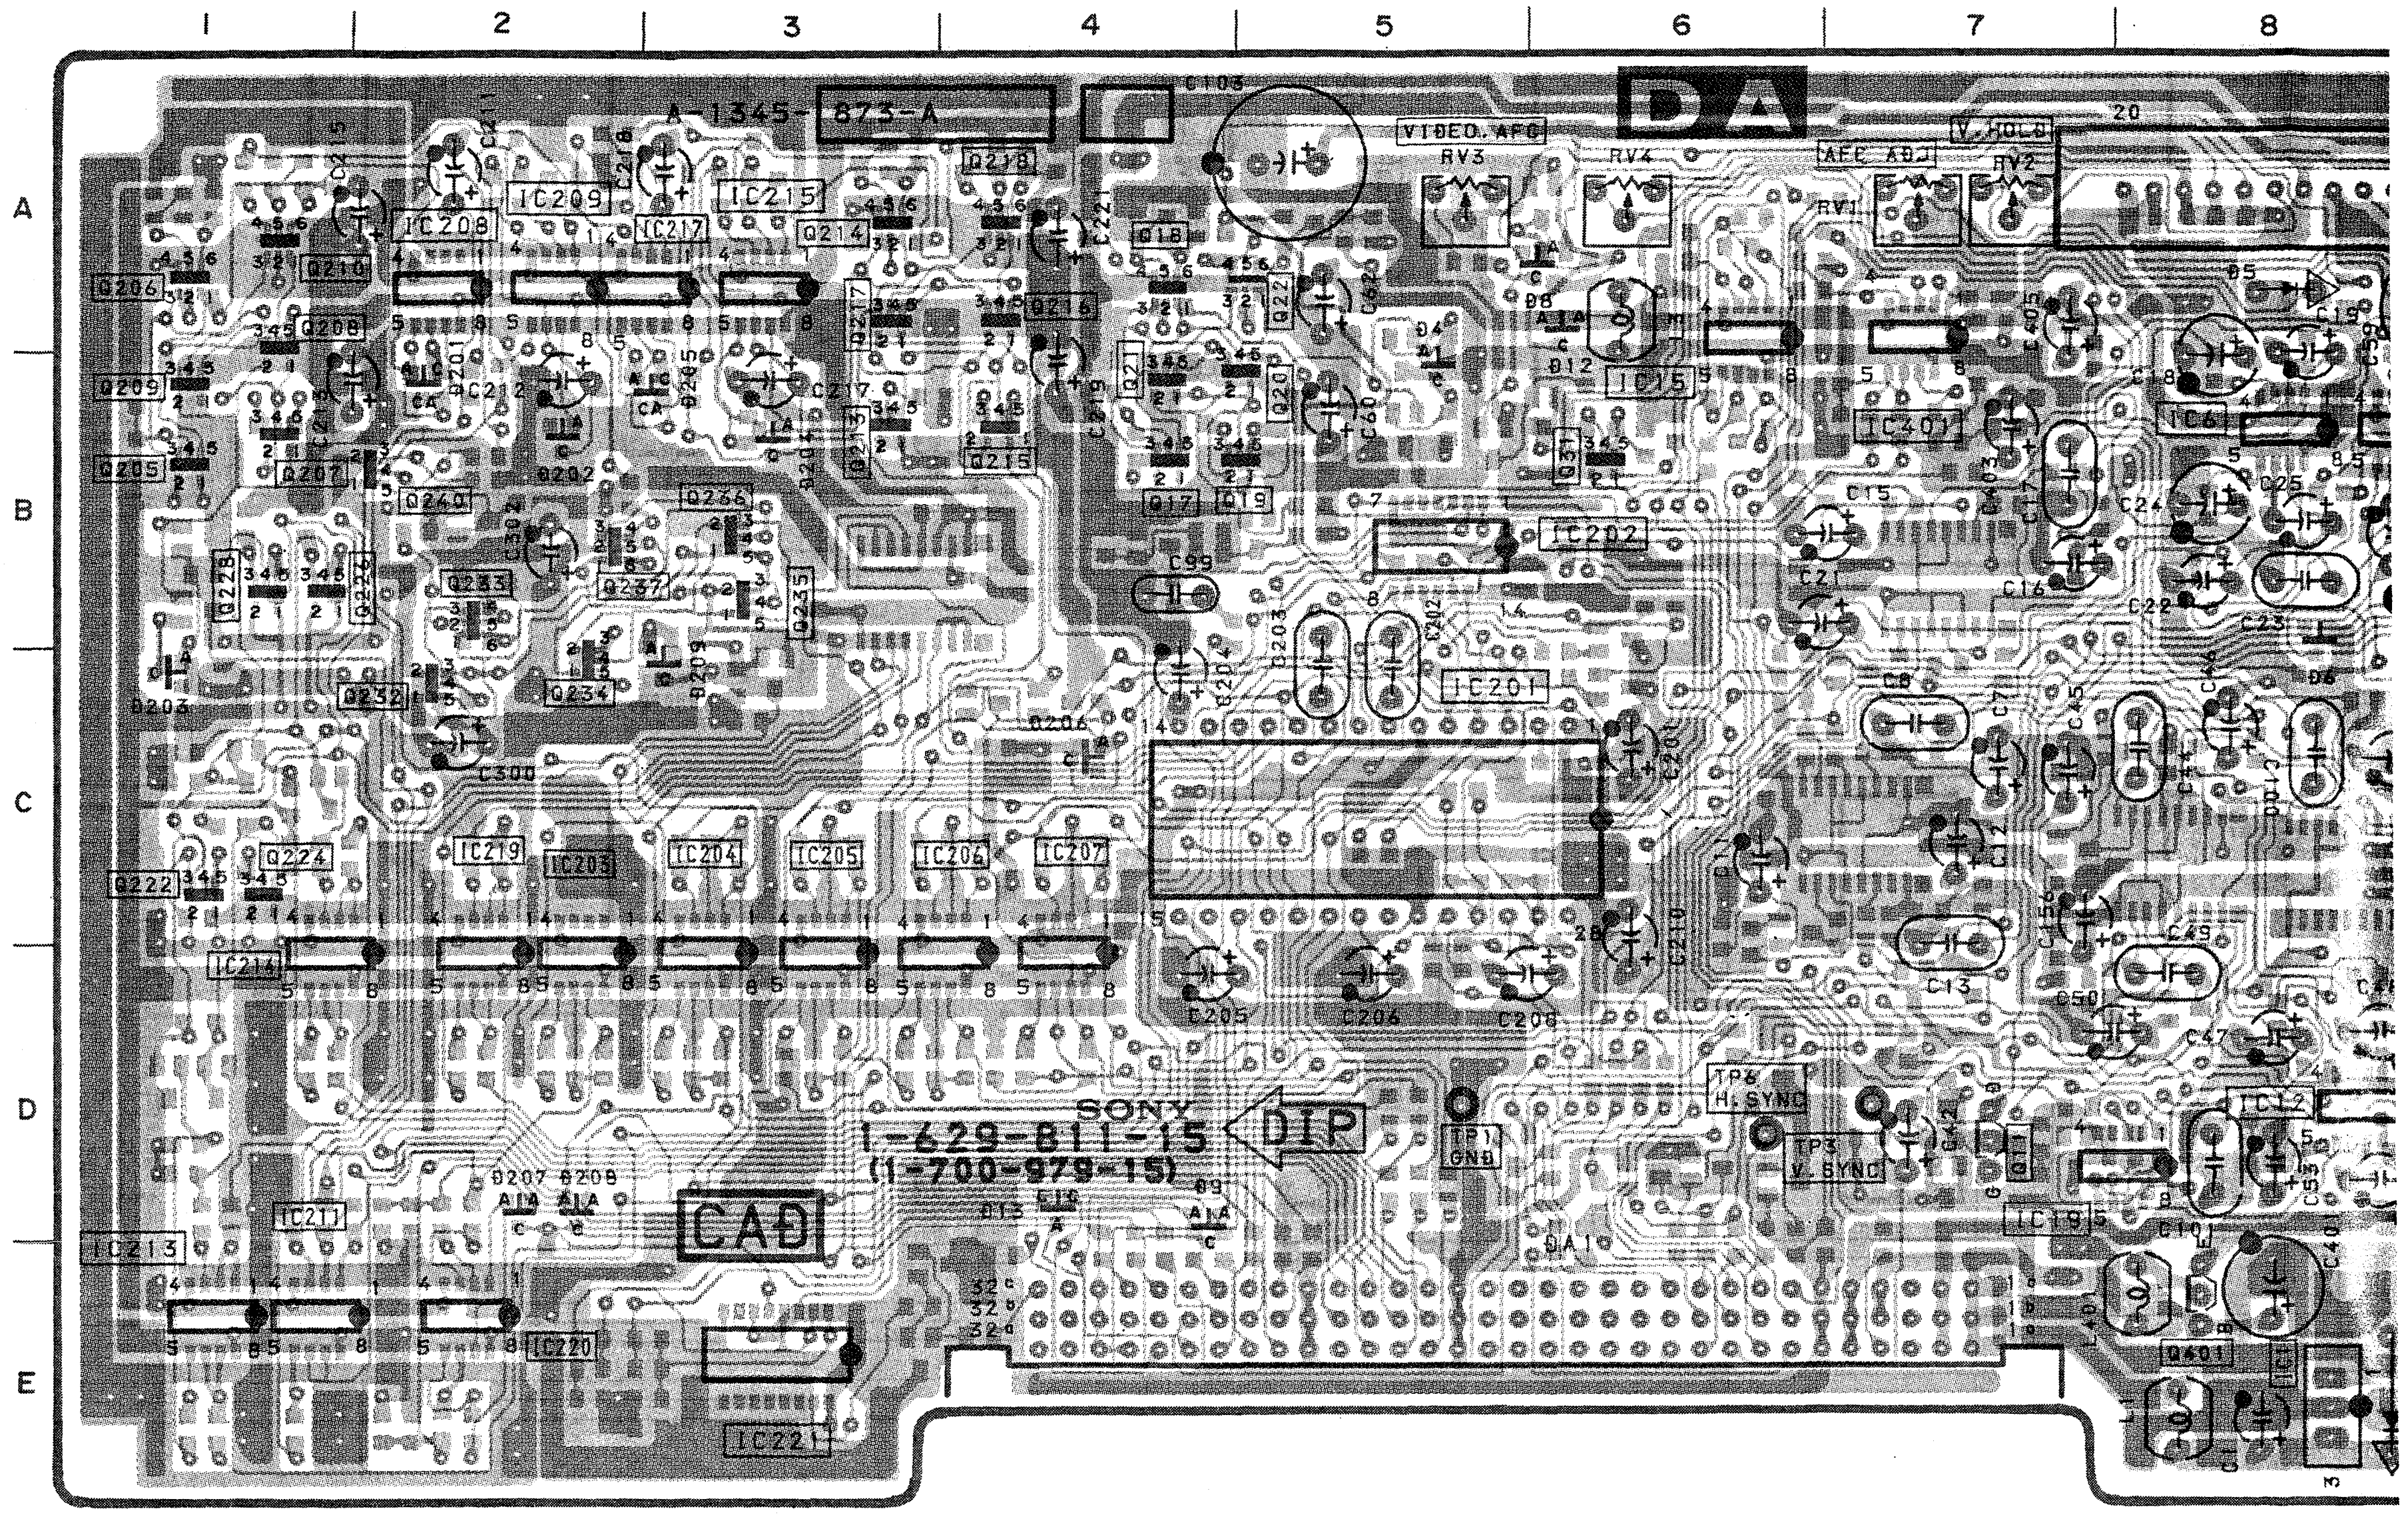
1
2
3
4
5
6
7
8
A
B
C
D
E
DA
A-1345-873-A
C103
VIDEO AFC
RV3
RV4
V.HOLD
AFC ADJ
RV1
RV2
20
IC208
IC209
IC217
IC215
Q218
Q214
Q216
Q206
Q210
Q208
Q209
Q205
Q207
Q240
Q236
Q233
Q237
Q235
Q232
Q234
Q224
Q222
Q217
Q215
IC5
IC401
IC6
IC202
IC201
IC219
IC203
IC204
IC205
IC206
IC207
IC214
IC213
IC211
IC220
IC221
IC19
IC12
C300
C205
C206
C208
C99
TP4 H.SYNC
TP3 V.SYNC
TP1 GND
SONY
1-629-811-15
(1-700-979-15)
DIP
CAD
Q401

R]

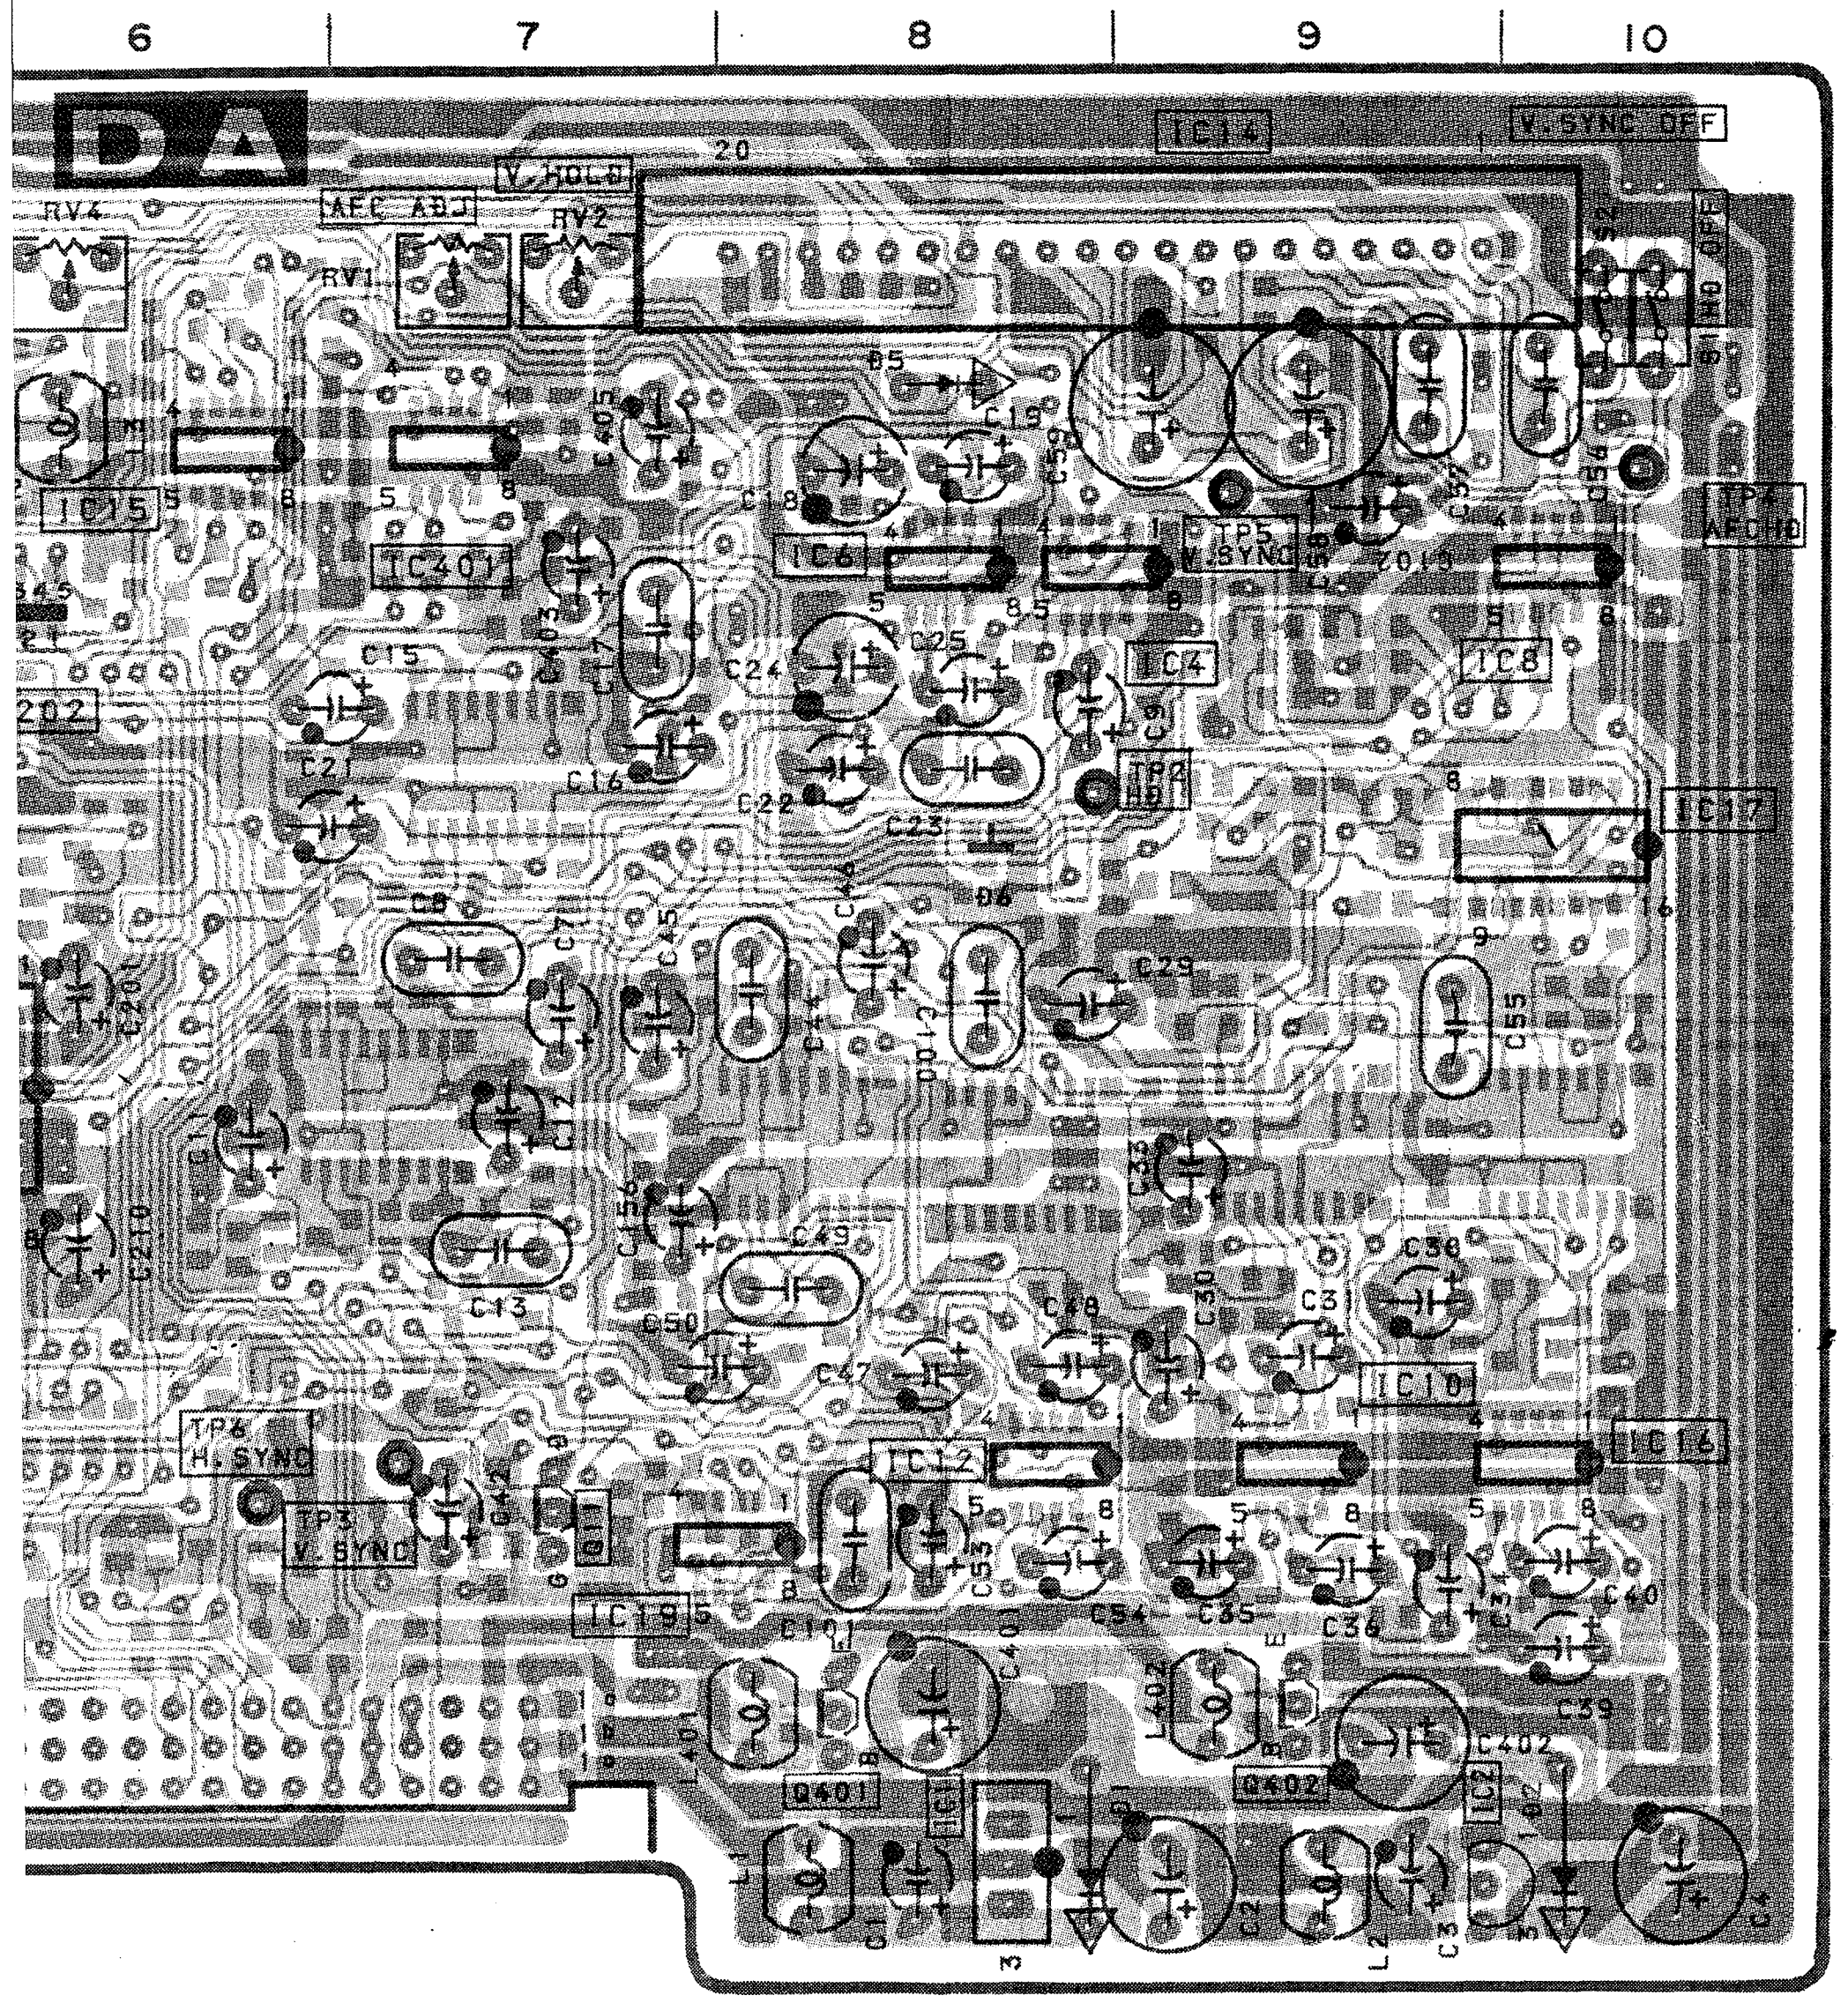
6
7
8
9
10
DA
RV4
AFC ADJ
V.HOLD
RV1
RV2
IC14
V.SYNC OFF
IC15
IC401
IC6
IC4
IC8
IC17
TP5 V.SYNC
TP4 AFC HD
TP2 H&T
IC12
IC10
IC16
IC19
TP6 H.SYNC
TP3 V.SYNC
Q401
Q402
IC1
IC2

DA BOARD

IC

	COM-PONENT SIDE	CON-DUCTOR SIDE
IC1	E - 3	E - 8
IC2	E - 1	E - 10
IC3	C - 4	
IC4		B - 9
IC5	B - 4	
IC6		B - 8
IC8		B - 10
IC9	C - 2	
IC10		D - 9
IC11	C - 3	
IC12		D - 8
IC13	C - 1	
IC14	A - 2	A - 8
IC15		A - 6
IC16		D - 10
IC17		B - 10
IC18	C - 3	
IC201	C - 6	C - 5
IC202		B - 5
IC203		D - 2
IC204		D - 3
IC205		D - 3
IC206		D - 4
IC207		D - 4
IC208		A - 2
IC209		A - 2
IC211		E - 1
IC213		E - 1
IC214		D - 1
IC215		A - 3
IC217		A - 2
IC218	C - 8	
IC219		D - 2
IC220		E - 2
IC221		E - 3
IC401		A - 7

TRANSISTOR

	COM-PONENT SIDE	CON-DUCTOR SIDE
Q1	B - 2	
Q2	C - 4	
Q3	D - 4	
Q4	B - 4	
Q5	C - 4	
Q6	C - 2	
Q7	D - 2	
Q8	D - 1	
Q9	D - 1	
Q10	C - 2	
Q11	D - 4	D - 7
Q12	C - 3	
Q13	D - 3	
Q14	C - 1	
Q15	D - 4	
Q16	C - 2	
Q17		B - 4
Q18		A - 4
Q19		B - 5
Q20		B - 5
Q21		B - 6
Q22		A - 5
Q23	B - 6	
Q24	B - 6	
Q25	D - 5	
Q26	D - 5	
Q27	A - 5	
Q29	A - 5	
Q30	B - 5	
Q31		B - 4
Q32	B - 6	
Q33	B - 7	
Q34	D - 5	
Q201	B - 2	
Q202	B - 2	
Q203	C - 5	
Q204	B - 5	
Q205		B - 1
Q206		A - 1
Q207		B - 1
Q208		B - 1
Q209		B - 1
Q210		A - 1
Q211	B - 10	
Q212	B - 10	
Q213		B - 3
Q214		A - 3
Q215		B - 4
Q216		A - 4
Q217		A - 3
Q218		A - 4
Q219	C - 7	
Q220	C - 7	
Q221	E - 7	
Q222		C - 1
Q223	D - 10	
Q224		C - 1
Q225	D - 10	
Q226		B - 1
Q227	C - 9	
Q228		B - 1
Q229	C - 10	
Q230	B - 2	
Q231	E - 7	
Q232		C - 2
Q233		B - 2
Q234		C - 2
Q235		B - 3
Q236		B - 3
Q237		B - 2
Q238	C - 8	
Q239	C - 8	
Q240		B - 2
Q241	B - 9	
Q401	E - 3	E - 8
Q402	E - 2	E - 9

DIODE

	COM-PONENT SIDE	CON-DUCTOR SIDE
D1	E - 2	E - 9
D2	E - 1	E - 10
D3	D - 4	
D4		B - 5
D5	A - 3	A - 8
D6		B - 8
D7		D - 9
D8		A - 6
D9		D - 4
D10	D - 3	
D11	D - 5	
D12		A - 6
D13		D - 4
D14		A - 5
D201		B - 2
D202		B - 2
D203		C - 1
D204		B - 3
D205		B - 3
D206		C - 4
D207		D - 2
D208		D - 2
D209		C - 3

ADJUSTING ELEMENT

	COM-PONENT SIDE	CON-DUCTOR SIDE
RV1	A - 4	A - 7
RV2	A - 4	A - 7
RV3	A - 6	A - 5
RV4	A - 5	A - 6

(CONDUCTOR SIDE)

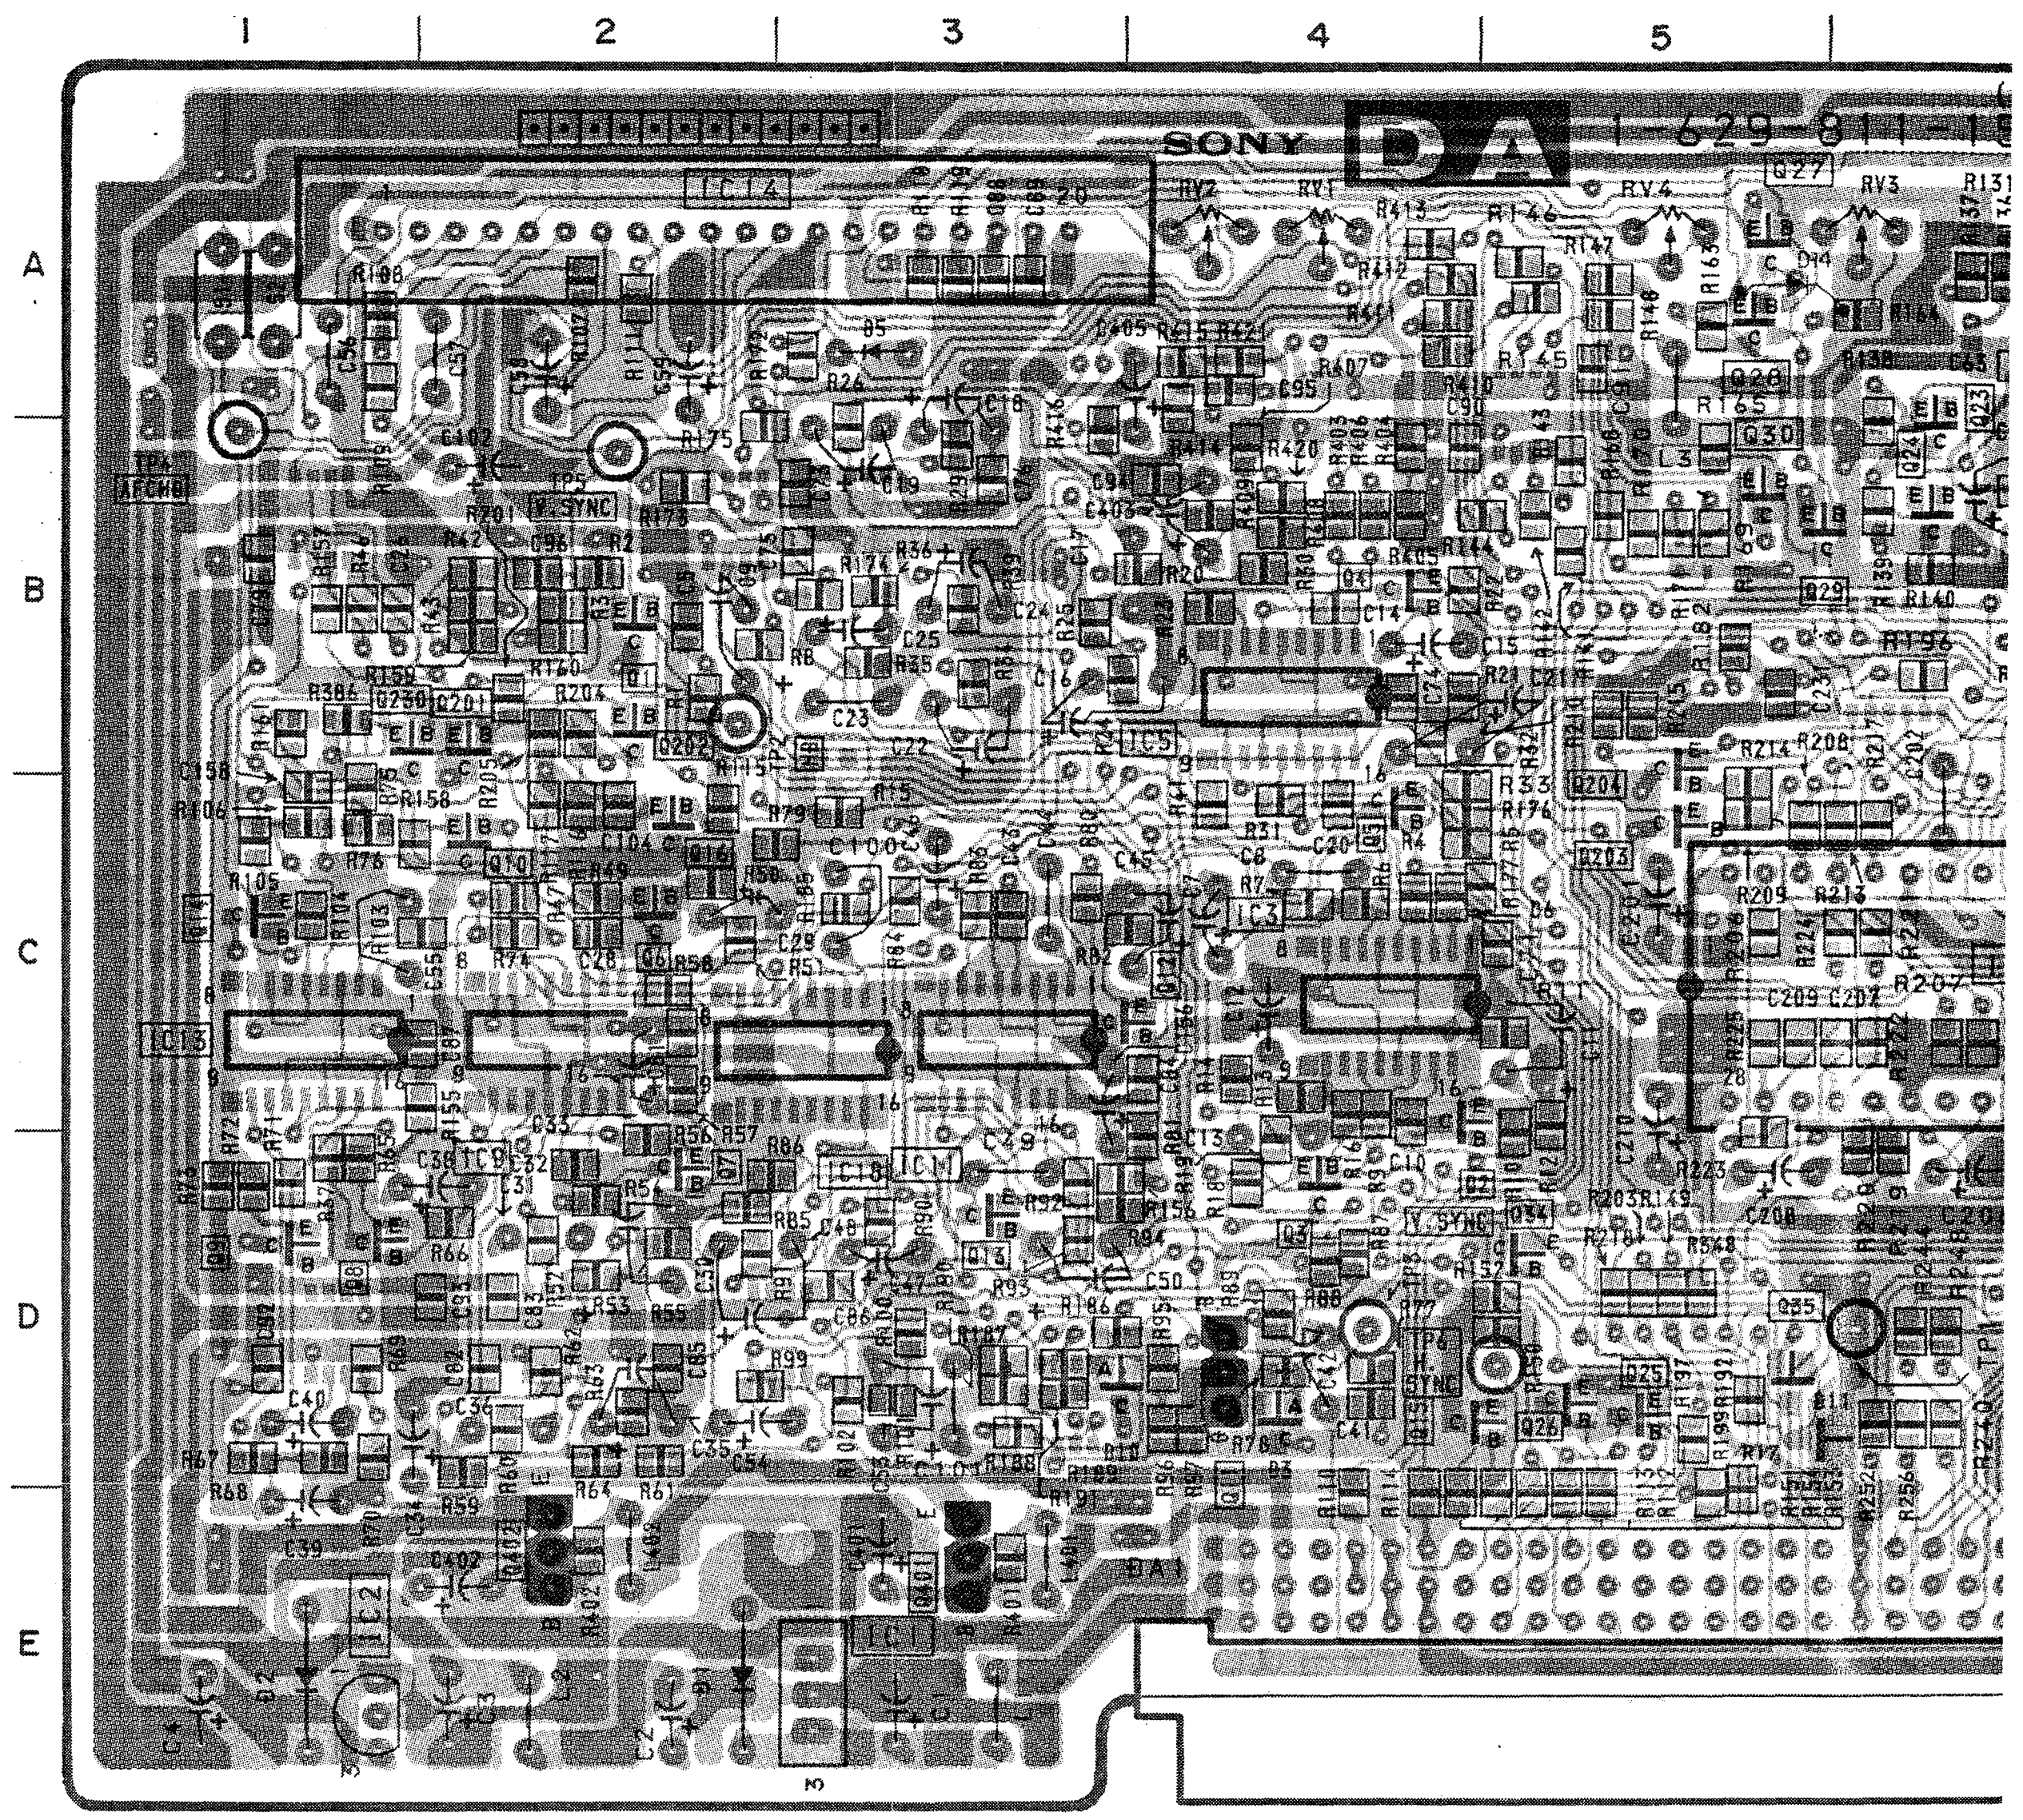
1
2
3
4
5
A
B
C
D
E
SONY
DA
1-629-811-1
IC14
RV2
RV1
RV4
RV3
Q27
Q26
Q30
TP4 AFC HD
V.SYNC
IC5
IC3
IC13
IC9
IC18
IC11
V.SYNC
TP6 H.SYNC
IC2
IC1

OARD

IC

COMPONENT SIDE	CONDUCTOR SIDE
E - 3	E - 8
E - 1	E - 10
C - 4	
	B - 9
B - 4	
	B - 8
	B - 10
C - 2	
	D - 9
C - 3	
	D - 8
C - 1	
A - 2	A - 8
	A - 6
	D - 10
	B - 10
C - 3	
C - 6	C - 5
	B - 5
	D - 2
	D - 3
	D - 3
	D - 4
	D - 4
	A - 2
	A - 2
	E - 1
	E - 1
	D - 1
	A - 3
	A - 2
C - 8	
	D - 2
	E - 2
	E - 3
	A - 7

RANSISTOR

COMPONENT SIDE	CONDUCTOR SIDE
B - 2	
C - 4	
D - 4	
B - 4	
C - 4	
C - 2	
D - 2	
D - 1	
D - 1	
C - 2	
D - 4	D - 7
C - 3	
D - 3	
C - 1	
D - 4	
C - 2	
	B - 4
	A - 4
	B - 5
	B - 5
	B - 6
	A - 5
B - 6	
B - 6	
D - 5	
D - 5	
A - 5	
A - 5	
B - 5	
	B - 4
B - 6	
B - 7	
D - 5	
B - 2	
B - 2	

	COMPONENT SIDE	CONDUCTOR SIDE
Q203	C - 5	
Q204	B - 5	
Q205		B - 1
Q206		A - 1
Q207		B - 1
Q208		B - 1
Q209		B - 1
Q210		A - 1
Q211	B - 10	
Q212	B - 10	
Q213		B - 3
Q214		A - 3
Q215		B - 4
Q216		A - 4
Q217		A - 3
Q218		A - 4
Q219	C - 7	
Q220	C - 7	
Q221	E - 7	
Q222		C - 1
Q223	D - 10	
Q224		C - 1
Q225	D - 10	
Q226		B - 1
Q227	C - 9	
Q228		B - 1
Q229	C - 10	
Q230	B - 2	
Q231	E - 7	
Q232		C - 2
Q233		B - 2
Q234		C - 2
Q235		B - 3
Q236		B - 3
Q237		B - 2
Q238	C - 8	
Q239	C - 8	
Q240		B - 2
Q241	B - 9	
Q401	E - 3	E - 8
Q402	E - 2	E - 9

DIODE

	COMPONENT SIDE	CONDUCTOR SIDE
D1	E - 2	E - 9
D2	E - 1	E - 10
D3	D - 4	
D4		B - 5
D5	A - 3	A - 8
D6		B - 8
D7		D - 9
D8		A - 6
D9		D - 4
D10	D - 3	
D11	D - 5	
D12		A - 6
D13		D - 4
D14		A - 5
D201		B - 2
D202		B - 2
D203		C - 1
D204		B - 3
D205		B - 3
D206		C - 4
D207		D - 2
D208		D - 2
D209		C - 3

ADJUSTING ELEMENT

	COMPONENT SIDE	CONDUCTOR SIDE
RV1	A - 4	A - 7
RV2	A - 4	A - 7
RV3	A - 6	A - 5
RV4	A - 5	A - 6

(CONDUCTOR SIDE)

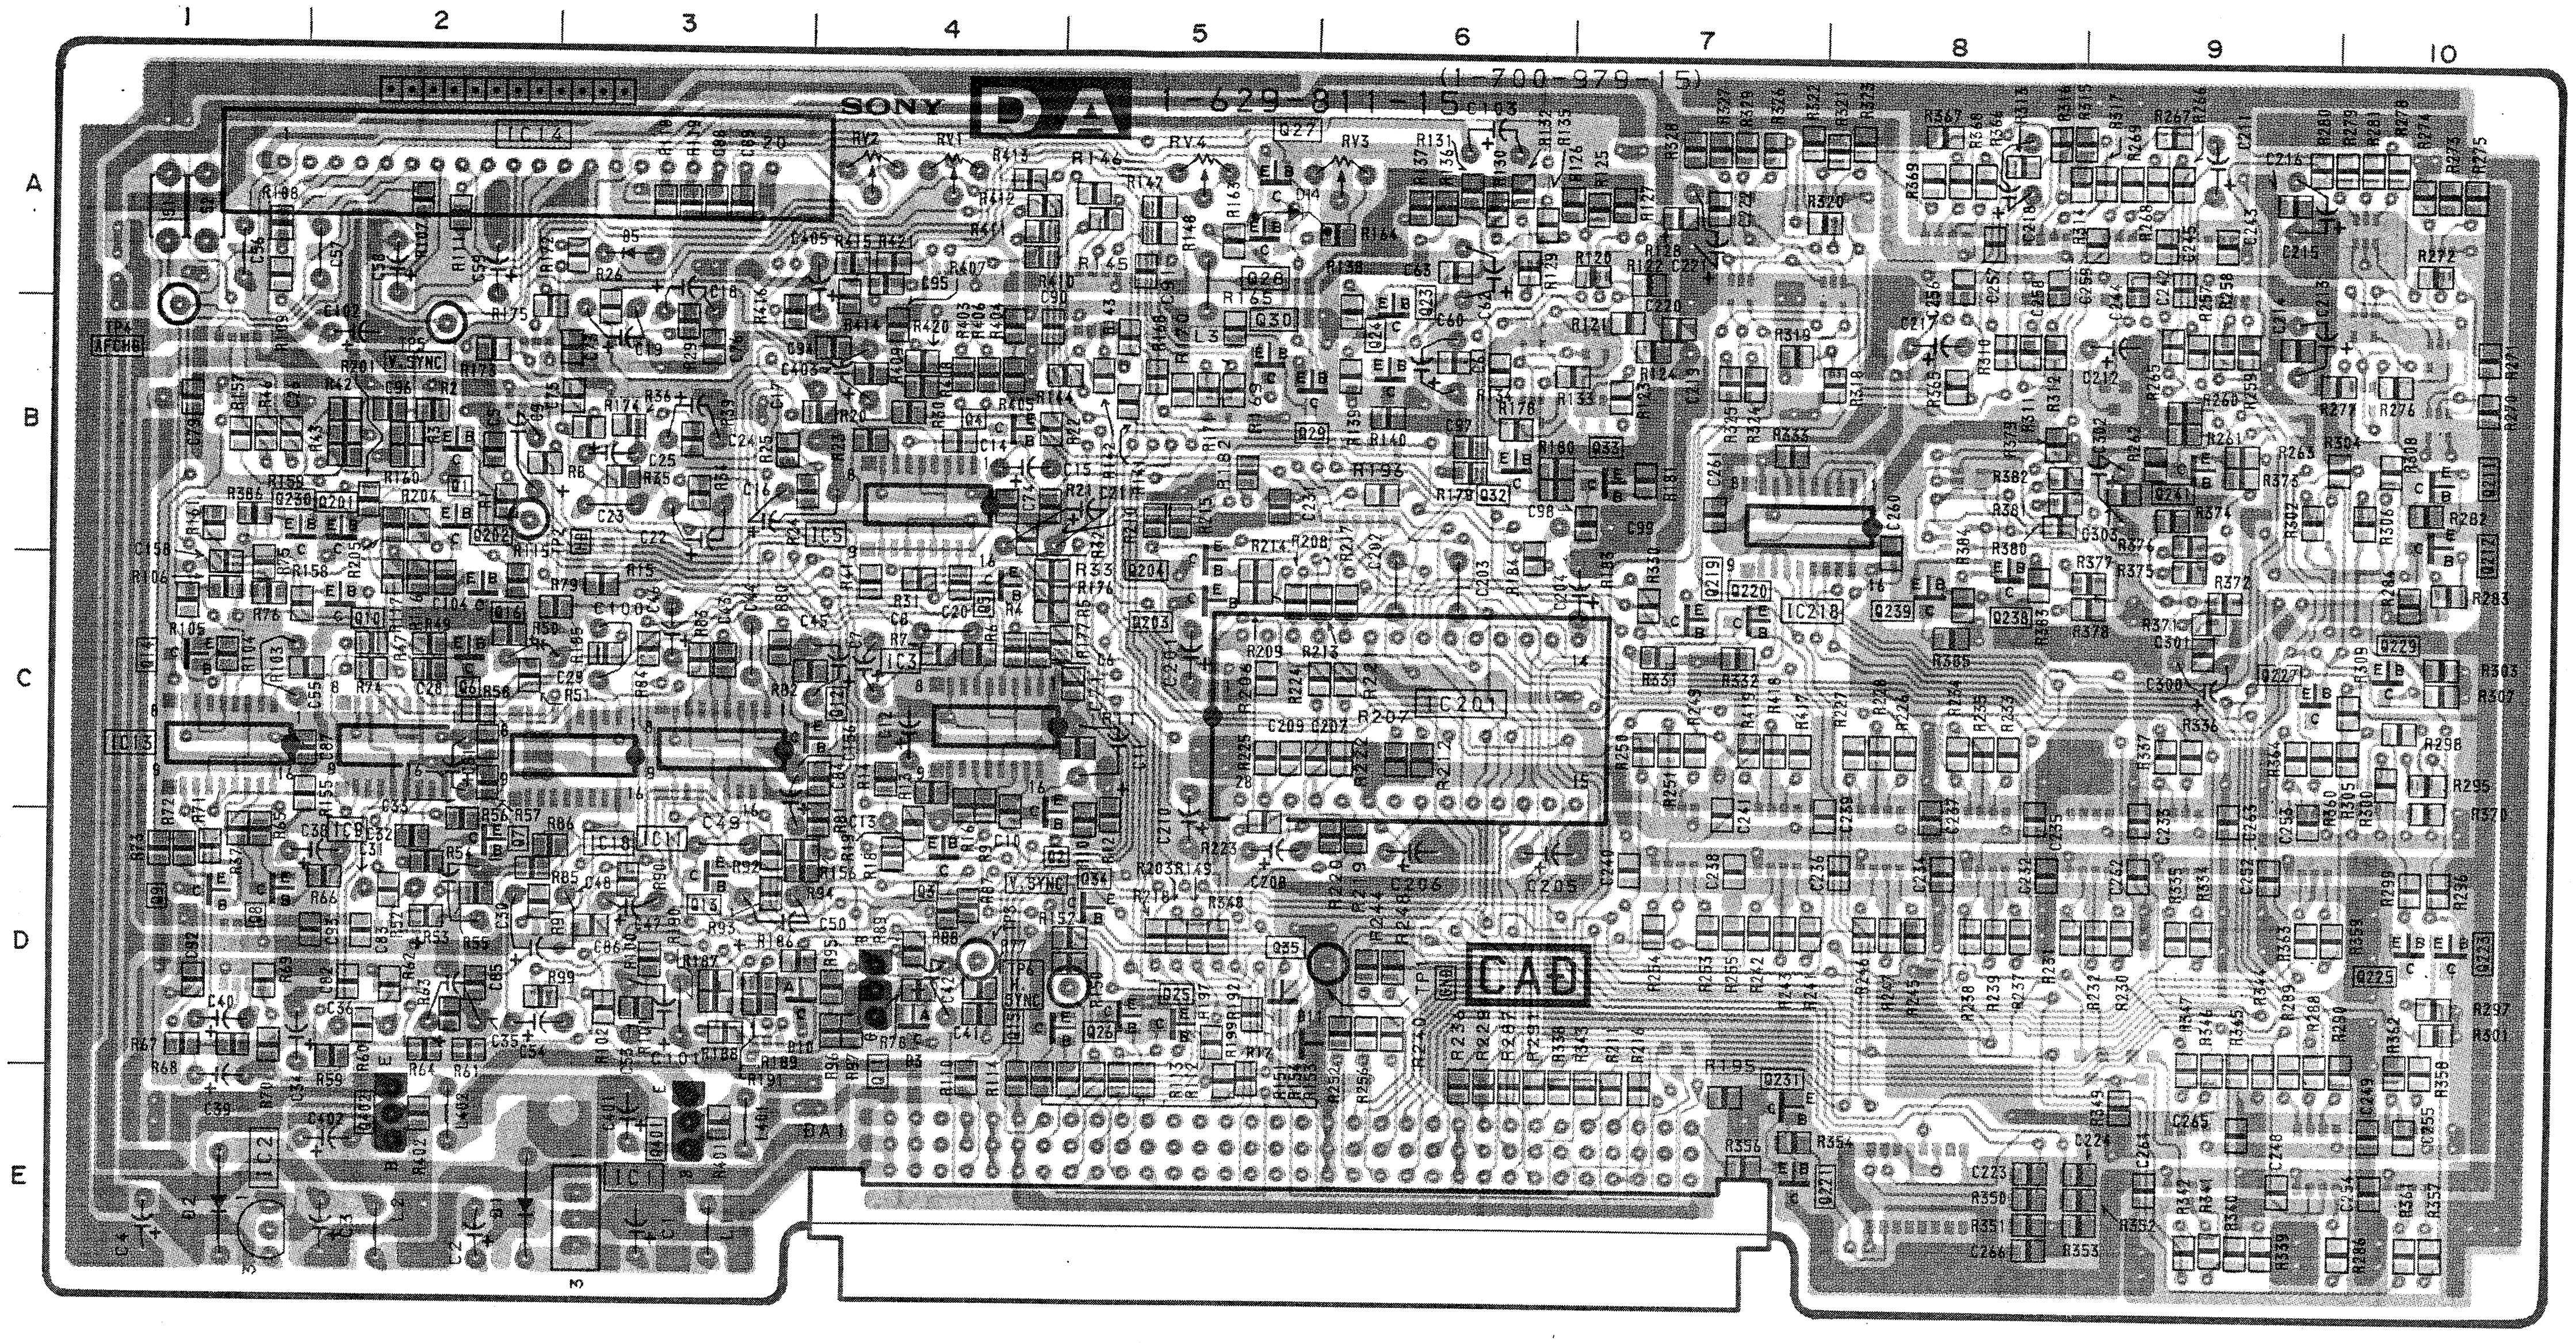

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

①  PAL 1.1Vp-p(H) SECAM 1.1Vp-p(H) NTSC3.58 1.1Vp-p(H) NTSC4.43 1.1Vp-p(H) S-VIDEO 1.1Vp-p(H) HDTV 1.1Vp-p(H)	②  PAL 0.7Vp-p(H) SECAM 0.7Vp-p(H) NTSC3.58 0.7Vp-p(H) NTSC4.43 0.7Vp-p(H) S-VIDEO 0.7Vp-p(H) HDTV 0.7Vp-p(H)
③  PAL 1.5Vp-p(H) SECAM 1.5Vp-p(H) NTSC3.58 1.5Vp-p(H) NTSC4.43 1.5Vp-p(H) S-VIDEO 1.5Vp-p(H) HDTV 1.5Vp-p(H)	④  PAL 0.6Vp-p(V) SECAM 0.6Vp-p(V) NTSC3.58 0.6Vp-p(V) NTSC4.43 0.6Vp-p(V) S-VIDEO 0.6Vp-p(V) HDTV 0.6Vp-p(V)
⑤  PAL 1.1Vp-p(V) SECAM 1.1Vp-p(V) NTSC3.58 1.1Vp-p(V) NTSC4.43 1.1Vp-p(V) S-VIDEO 1.1Vp-p(V) HDTV 1.1Vp-p(V)	⑥  PAL 1.1Vp-p(V) SECAM 1.1Vp-p(V) NTSC3.58 1.1Vp-p(V) NTSC4.43 1.1Vp-p(V) S-VIDEO 1.1Vp-p(V) HDTV 1.1Vp-p(V)
⑦  PAL 1.2Vp-p(H) SECAM 1.2Vp-p(H) NTSC3.58 1.2Vp-p(H) NTSC4.43 1.2Vp-p(H) S-VIDEO 1.2Vp-p(H) HDTV 1.2Vp-p(H)	⑧  PAL 3.6Vp-p(V) SECAM 3.6Vp-p(V) NTSC3.58 3.6Vp-p(V) NTSC4.43 3.6Vp-p(V) S-VIDEO 3.6Vp-p(V) HDTV 3.6Vp-p(V)
⑨  PAL 3.6Vp-p(V) SECAM 3.6Vp-p(V) NTSC3.58 3.6Vp-p(V) NTSC4.43 3.6Vp-p(V) S-VIDEO 3.6Vp-p(V) HDTV 3.6Vp-p(V)	⑩  PAL 3.6Vp-p(V) SECAM 3.6Vp-p(V) NTSC3.58 3.6Vp-p(V) NTSC4.43 3.6Vp-p(V) S-VIDEO 3.6Vp-p(V) HDTV 3.6Vp-p(V)

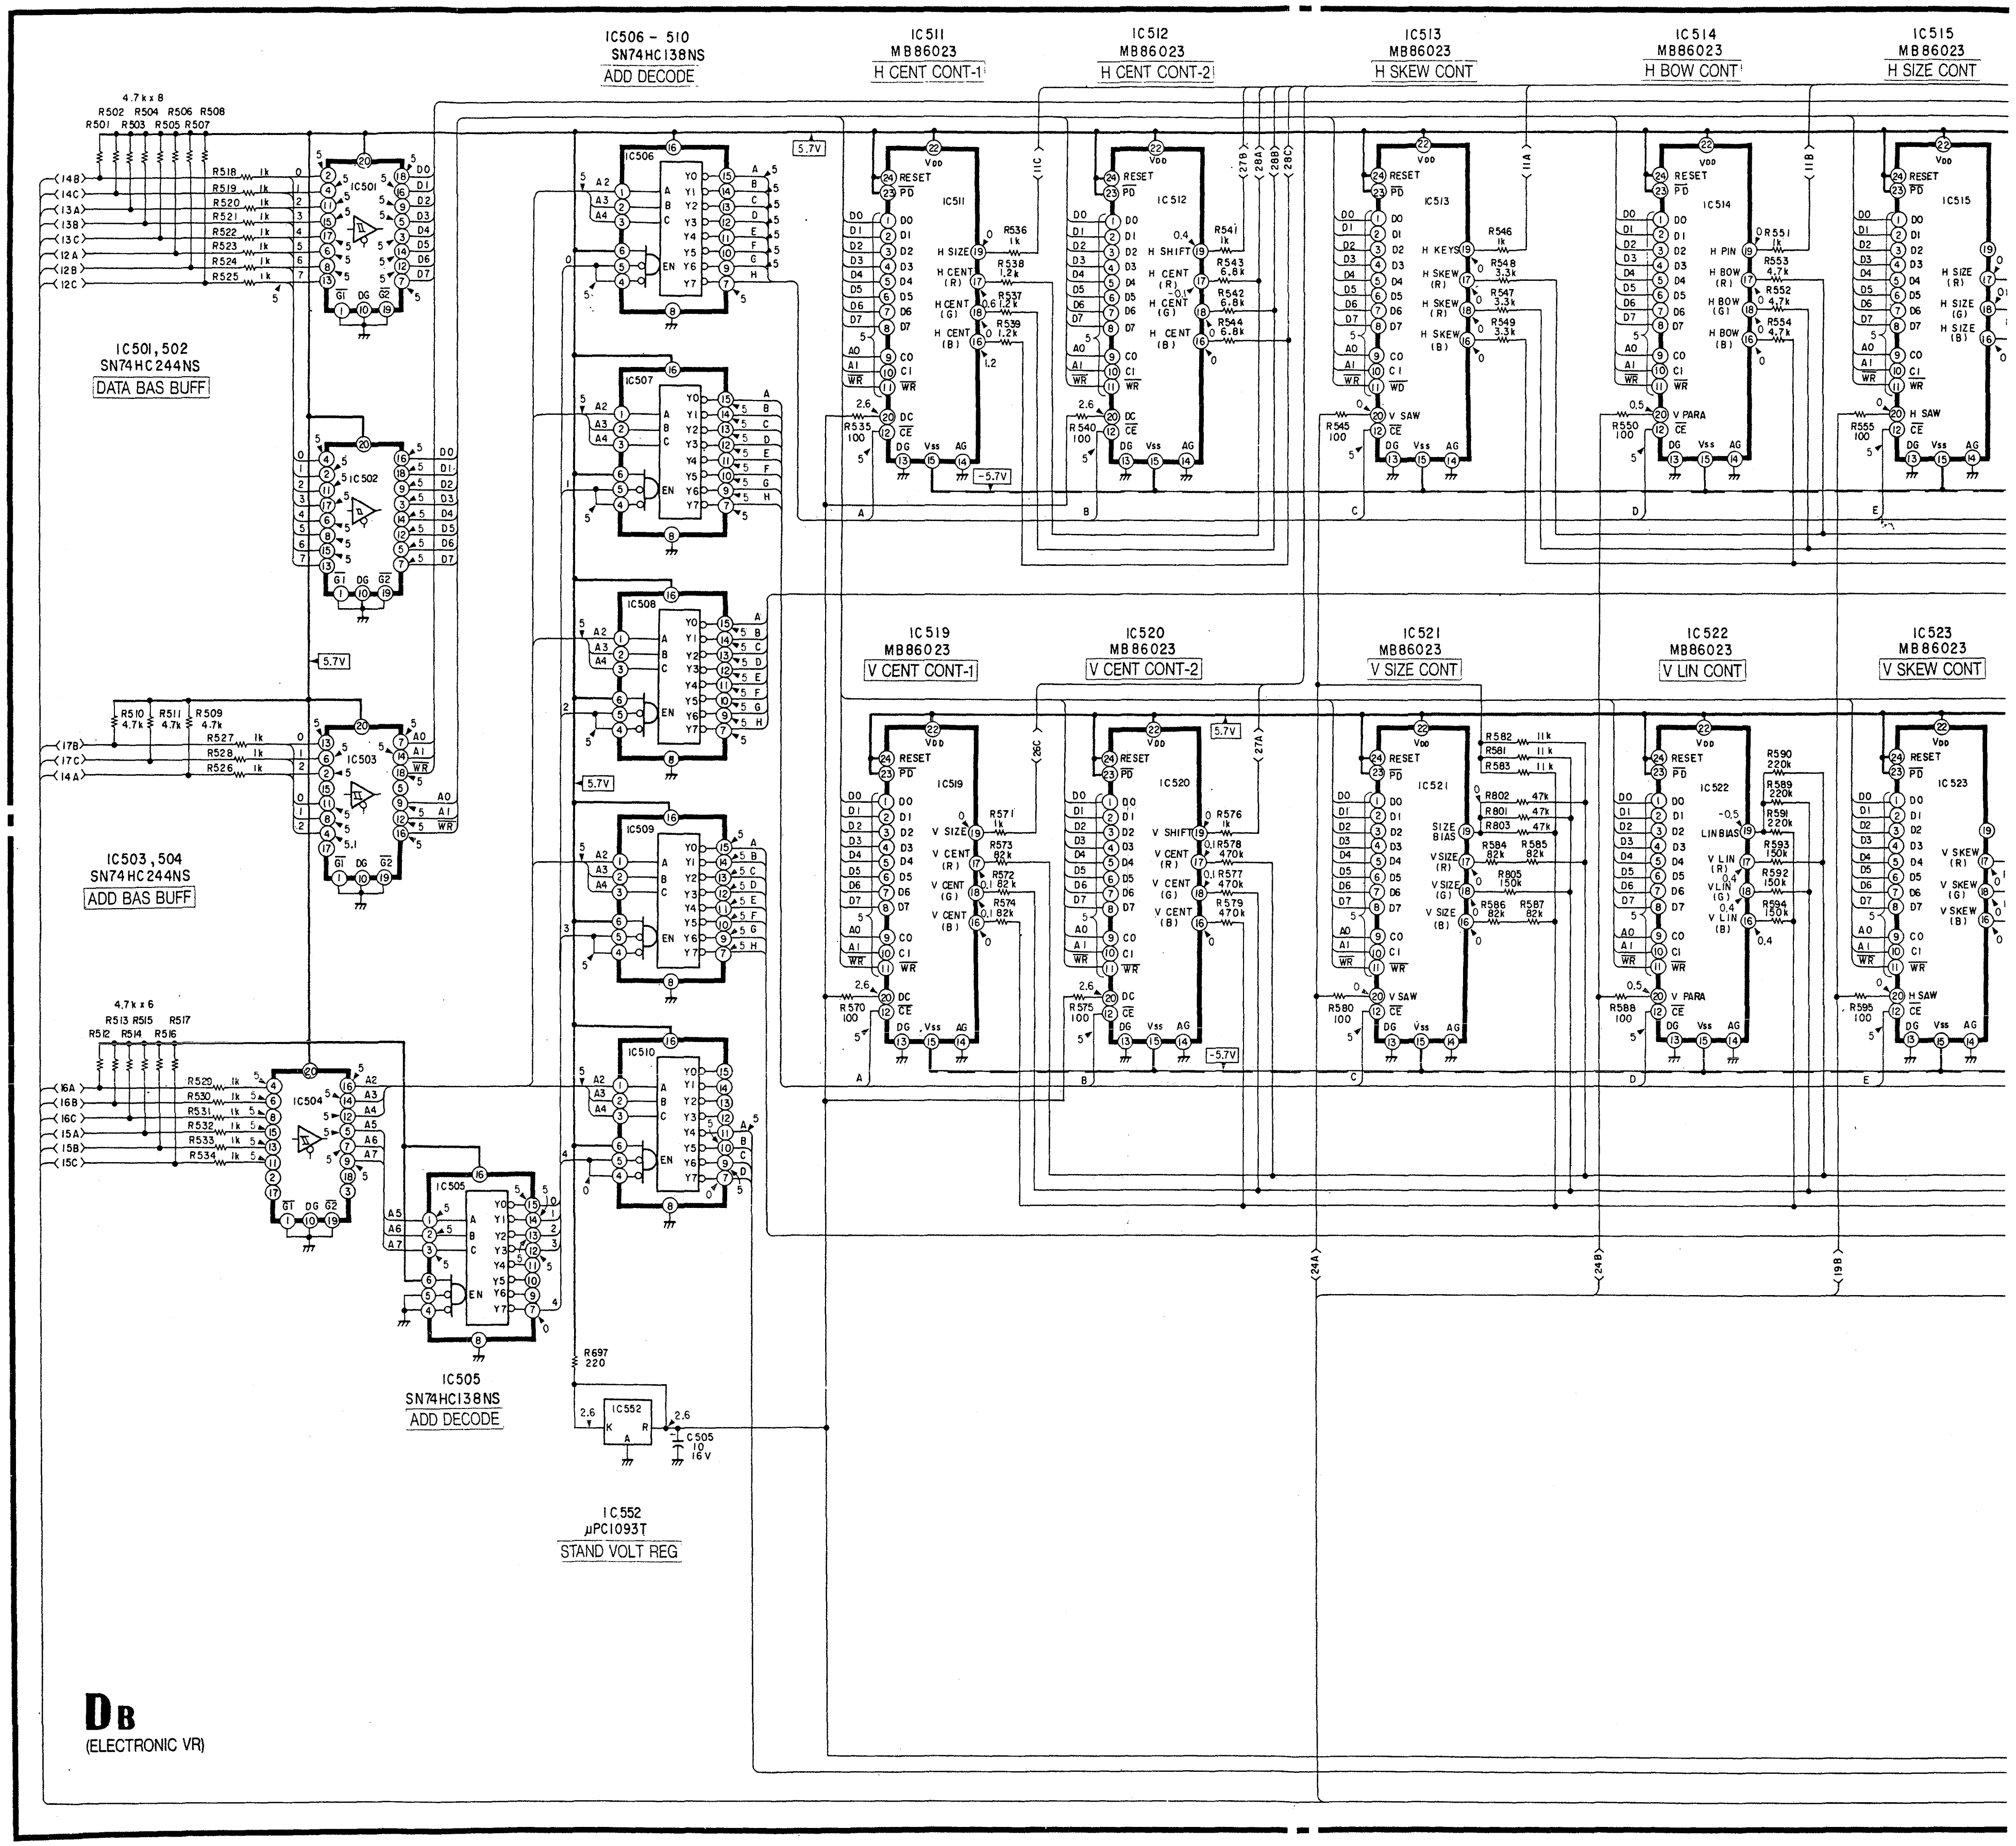
IC506 - 510
SN74HC138NS
ADD DECODE
IC511
MB86023
H CENT CONT-1
IC512
MB86023
H CENT CONT-2
IC513
MB86023
H SKEW CONT
IC514
MB86023
H BOW CONT
IC515
MB86023
H SIZE CONT
IC501, 502
SN74HC244NS
DATA BAS BUFF
IC503, 504
SN74HC244NS
ADD BAS BUFF
IC519
MB86023
V CENT CONT-1
IC520
MB86023
V CENT CONT-2
IC521
MB86023
V SIZE CONT
IC522
MB86023
V LIN CONT
IC523
MB86023
V SKEW CONT
IC505
SN74HC138NS
ADD DECODE
IC552
μPC1093T
STAND VOLT REG
5.7V
R697 220
C505 10 16V
DB
(ELECTRONIC VR)

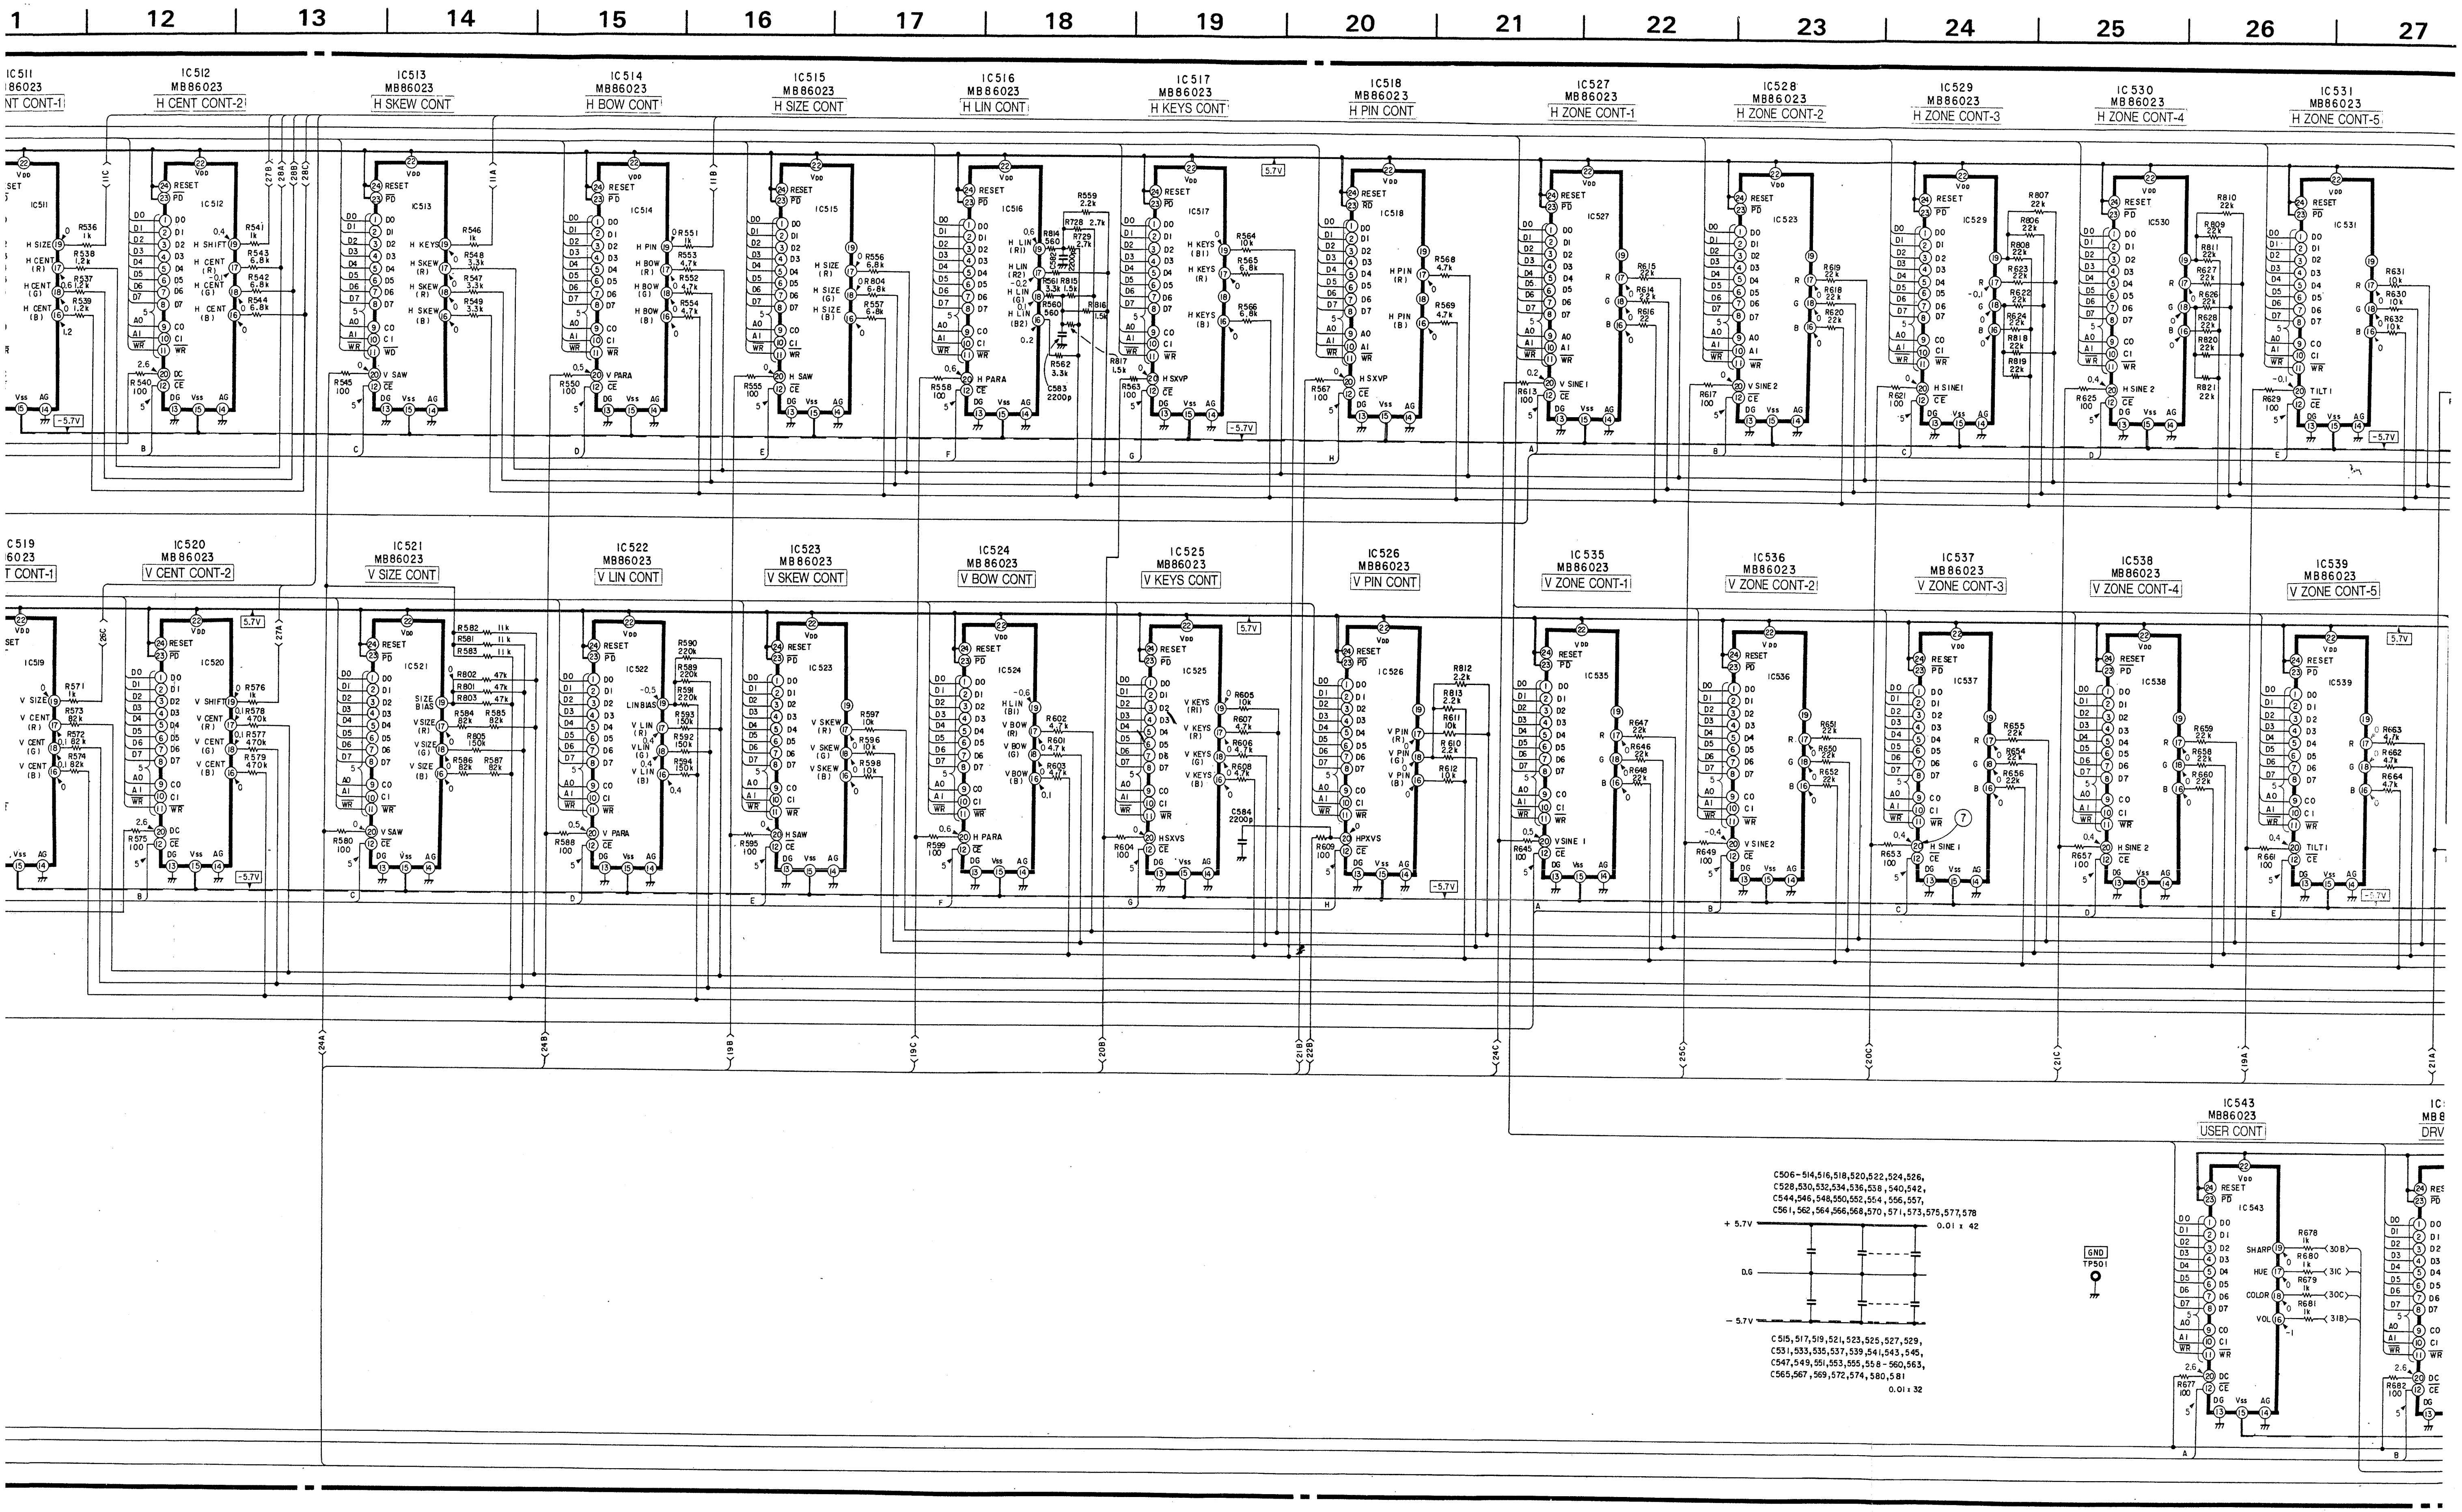
1
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
IC511 MB86023 H CENT CONT-1
IC512 MB86023 H CENT CONT-2
IC513 MB86023 H SKEW CONT
IC514 MB86023 H BOW CONT
IC515 MB86023 H SIZE CONT
IC516 MB86023 H LIN CONT
IC517 MB86023 H KEYS CONT
IC518 MB86023 H PIN CONT
IC527 MB86023 H ZONE CONT-1
IC528 MB86023 H ZONE CONT-2
IC529 MB86023 H ZONE CONT-3
IC530 MB86023 H ZONE CONT-4
IC531 MB86023 H ZONE CONT-5
IC519 MB86023 V CENT CONT-1
IC520 MB86023 V CENT CONT-2
IC521 MB86023 V SIZE CONT
IC522 MB86023 V LIN CONT
IC523 MB86023 V SKEW CONT
IC524 MB86023 V BOW CONT
IC525 MB86023 V KEYS CONT
IC526 MB86023 V PIN CONT
IC535 MB86023 V ZONE CONT-1
IC536 MB86023 V ZONE CONT-2
IC537 MB86023 V ZONE CONT-3
IC538 MB86023 V ZONE CONT-4
IC539 MB86023 V ZONE CONT-5
IC543 MB86023 USER CONT
DRV
5.7V
-5.7V
GND TP501
SHARP
HUE
COLOR
VOL
30B
31C
30C
31B
(24A)
(24B)
(19B)
(19C)
(20B)
(21B)
(22B)
(24C)
(25C)
(20C)
(21C)
(19A)
(21A)
C506-514,516,518,520,522,524,526,
C528,530,532,534,536,538,540,542,
C544,546,548,550,552,554,556,557,
C561,562,564,566,568,570,571,573,575,577,578
+ 5.7V
0.01 x 42
D.G
- 5.7V
C515,517,519,521,523,525,527,529,
C531,533,535,537,539,541,543,545,
C547,549,551,553,555,558-560,563,
C565,567,569,572,574,580,581
0.01 x 32

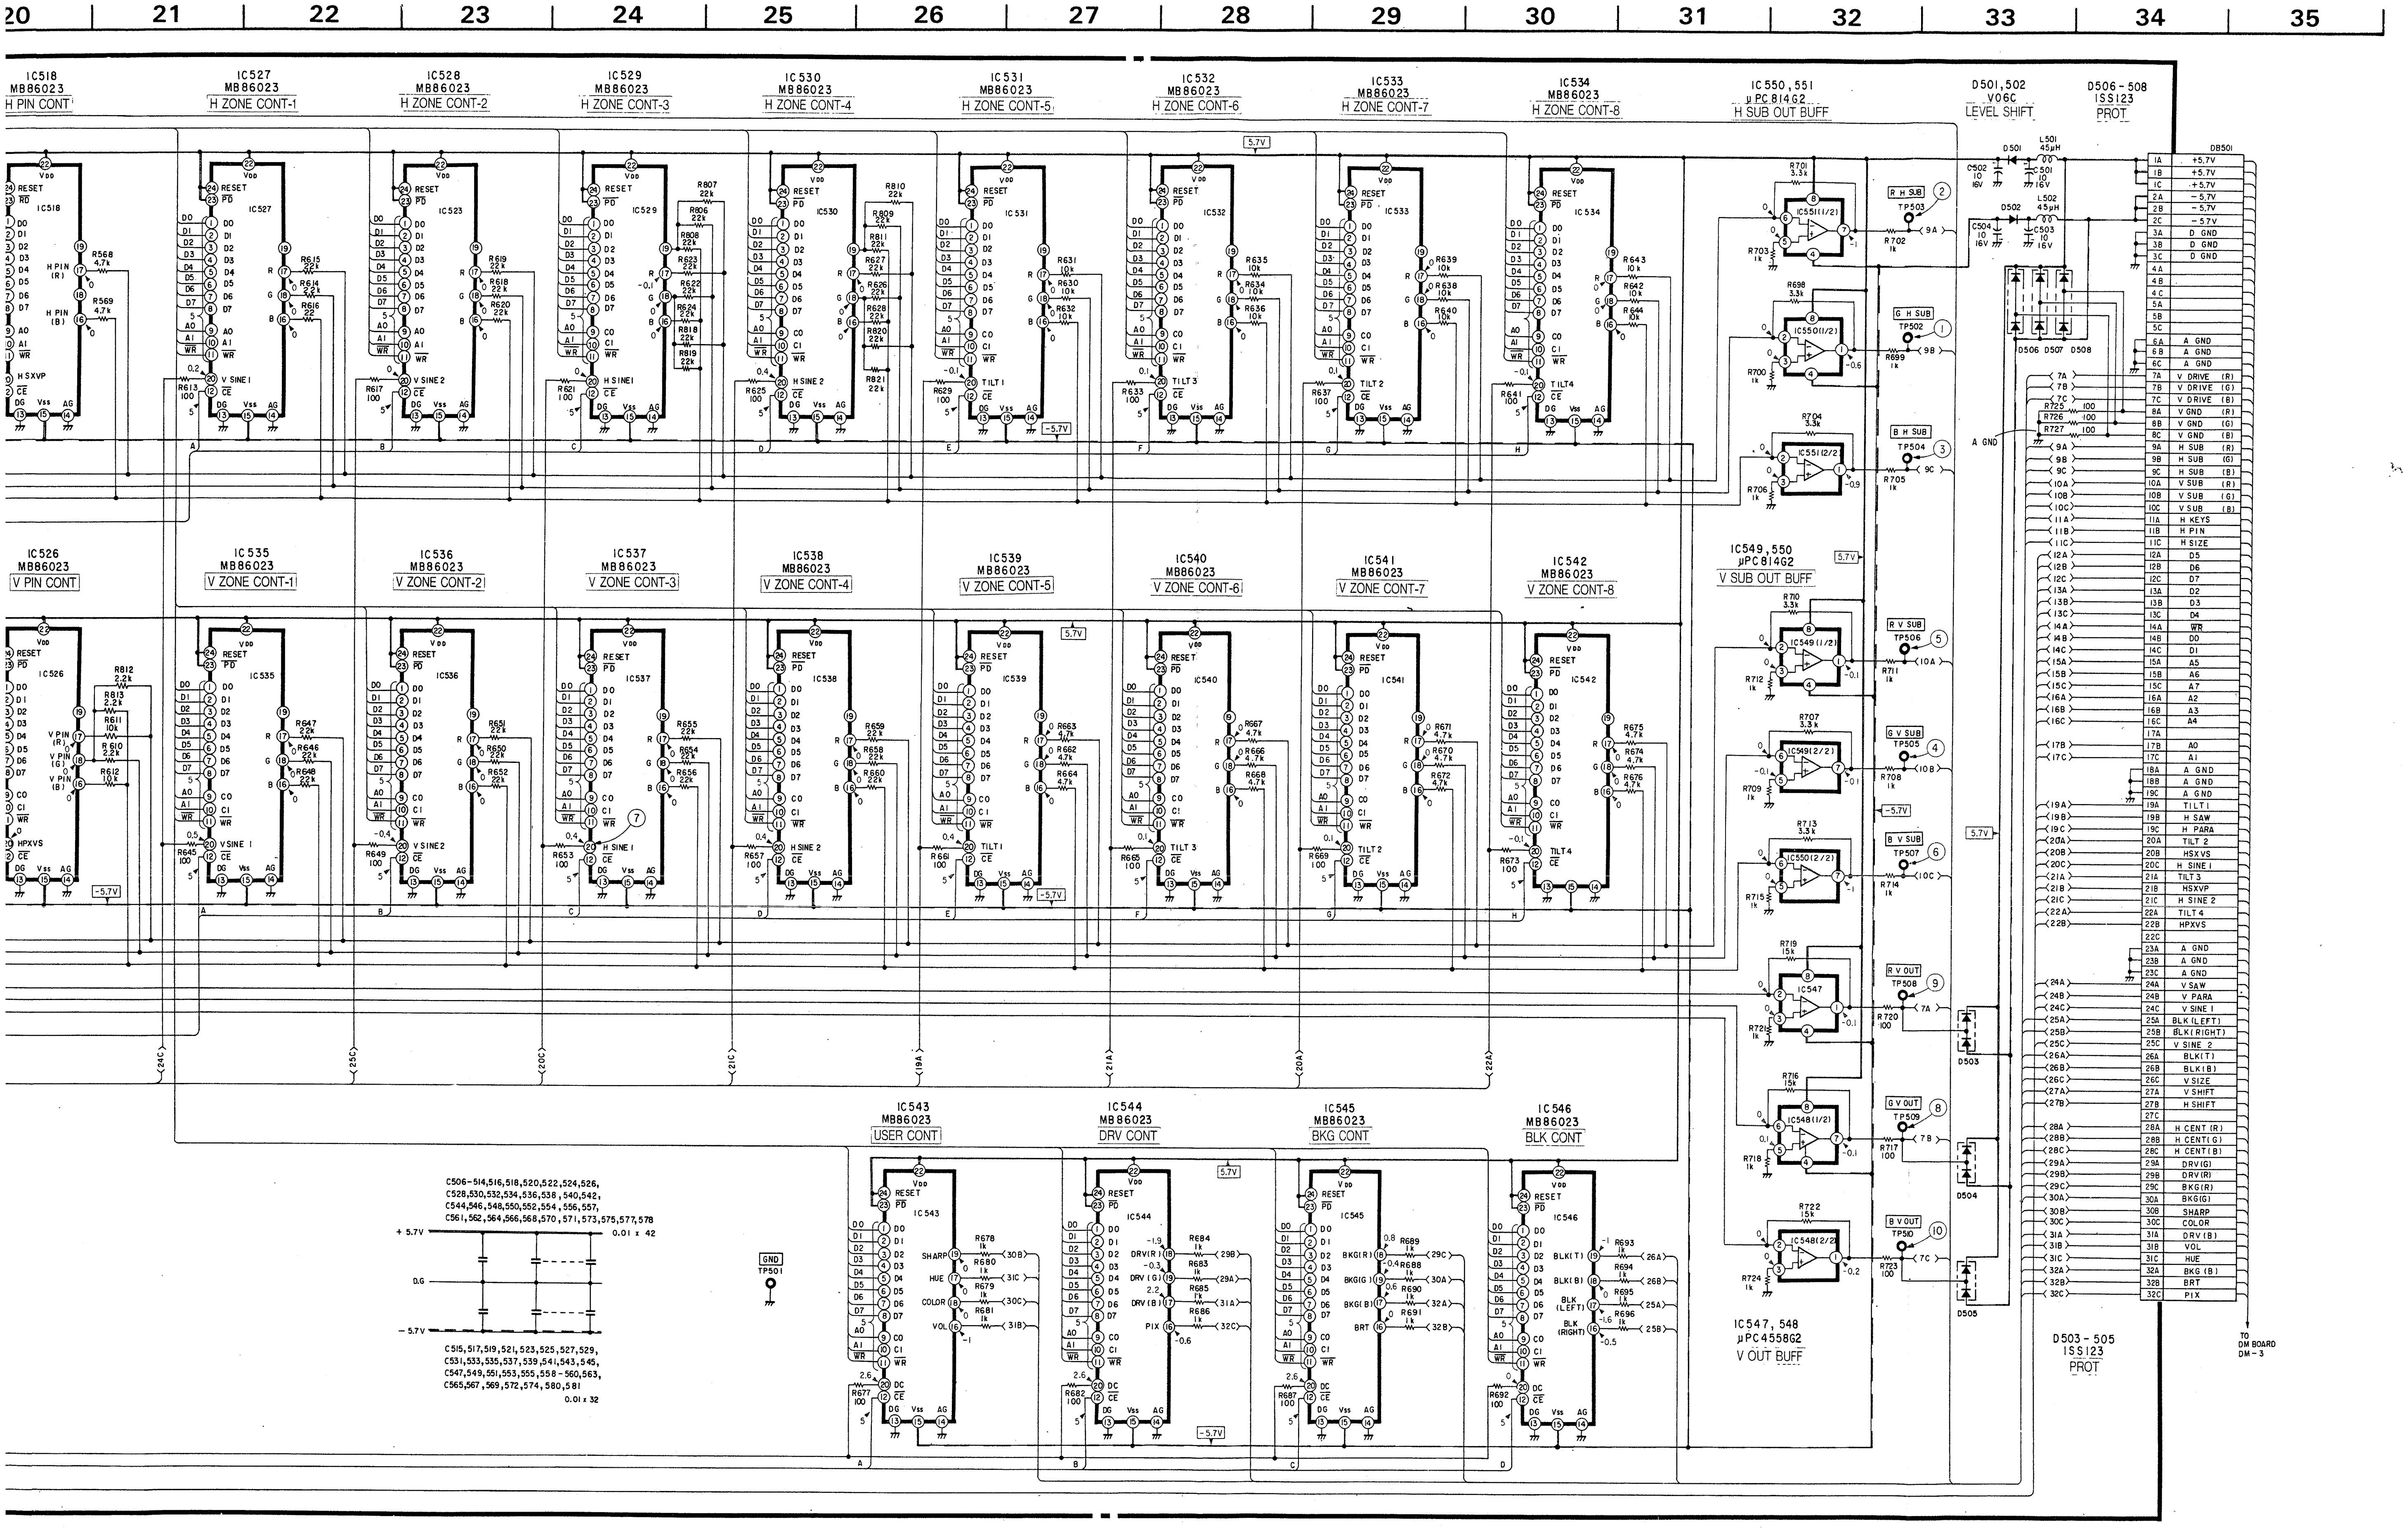
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
IC518 MB86023 H PIN CONT
IC527 MB86023 H ZONE CONT-1
IC528 MB86023 H ZONE CONT-2
IC529 MB86023 H ZONE CONT-3
IC530 MB86023 H ZONE CONT-4
IC531 MB86023 H ZONE CONT-5
IC532 MB86023 H ZONE CONT-6
IC533 MB86023 H ZONE CONT-7
IC534 MB86023 H ZONE CONT-8
IC550,551 μPC814G2 H SUB OUT BUFF
D501,502 V06C LEVEL SHIFT
D506-508 1SS123 PROT
IC526 MB86023 V PIN CONT
IC535 MB86023 V ZONE CONT-1
IC536 MB86023 V ZONE CONT-2
IC537 MB86023 V ZONE CONT-3
IC538 MB86023 V ZONE CONT-4
IC539 MB86023 V ZONE CONT-5
IC540 MB86023 V ZONE CONT-6
IC541 MB86023 V ZONE CONT-7
IC542 MB86023 V ZONE CONT-8
IC549,550 μPC814G2 V SUB OUT BUFF
IC543 MB86023 USER CONT
IC544 MB86023 DRV CONT
IC545 MB86023 BKG CONT
IC546 MB86023 BLK CONT
IC547, 548 μPC4558G2 V OUT BUFF
D503-505 1SS123 PROT
C506-514,516,518,520,522,524,526, C528,530,532,534,536,538,540,542, C544,546,548,550,552,554,556,557, C561,562,564,566,568,570,571,573,575,577,578 0.01 x 42
+5.7V
DG
-5.7V
C515,517,519,521,523,525,527,529, C531,533,535,537,539,541,543,545, C547,549,551,553,555,558-560,563, C565,567,569,572,574,580,581 0.01 x 32
GND TP501
R H SUB TP503
G H SUB TP502
B H SUB TP504
R V SUB TP506
G V SUB TP505
B V SUB TP507
R V OUT TP508
G V OUT TP509
B V OUT TP510
L501 45μH
L502 45μH
A GND
DB501
TO DM BOARD DM-3
1A +5.7V
1B +5.7V
1C +5.7V
2A -5.7V
2B -5.7V
2C -5.7V
3A D GND
3B D GND
3C D GND
6A A GND
6B A GND
6C A GND
7A V DRIVE (R)
7B V DRIVE (G)
7C V DRIVE (B)
8A V GND (R)
8B V GND (G)
8C V GND (B)
9A H SUB (R)
9B H SUB (G)
9C H SUB (B)
10A V SUB (R)
10B V SUB (G)
10C V SUB (B)
11A H KEYS
11B H PIN
11C H SIZE
12A D5
12B D6
12C D7
13A D2
13B D3
13C D4
14A WR
14B D0
14C D1
15A A5
15B A6
15C A7
16A A2
16B A3
16C A4
17B A0
17C A1
18A A GND
18B A GND
18C A GND
19A TILT1
19B H SAW
19C H PARA
20A TILT 2
20B HSXVS
20C H SINE 1
21A TILT 3
21B HSXVP
21C H SINE 2
22A TILT 4
22B HPXVS
23A A GND
23B A GND
23C A GND
24A V SAW
24B V PARA
24C V SINE 1
25A BLK (LEFT)
25B BLK (RIGHT)
25C V SINE 2
26A BLK (T)
26B BLK (B)
26C V SIZE
27A V SHIFT
27B H SHIFT
28A H CENT (R)
28B H CENT (G)
28C H CENT (B)
29A DRV (G)
29B DRV (R)
30A BKG (R)
30B BKG (G)
30B SHARP
30C COLOR
31A DRV (B)
31B VOL
31C HUE
32A BKG (B)
32B BRT
32C PIX

DB [ELECTRONIC VR]

IC511 MB86023

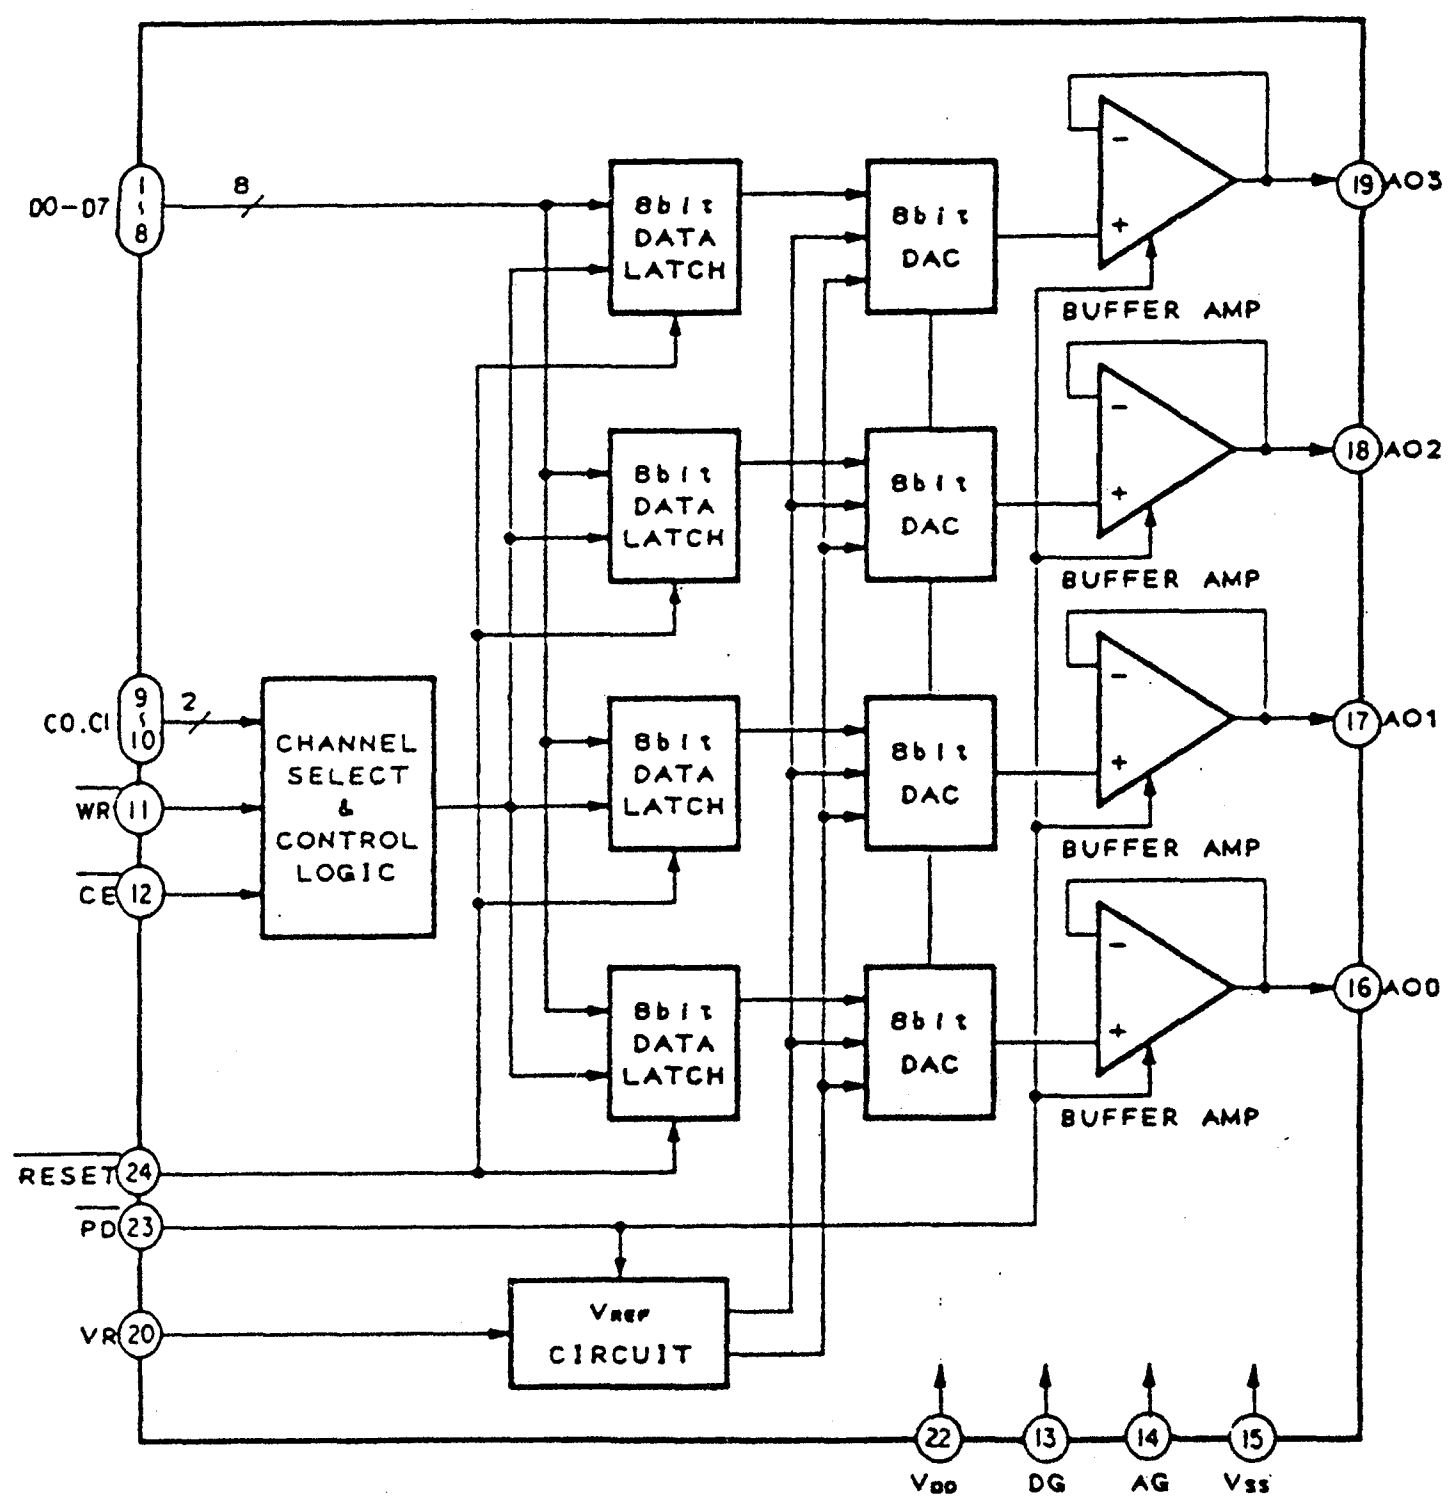
D0-D7
1~8
8
8bit DATA LATCH
8bit DAC
BUFFER AMP
19 AO3
18 AO2
17 AO1
16 AO0
C0,C1
9~10
2
WR 11
CE 12
CHANNEL SELECT & CONTROL LOGIC
RESET 24
PD 23
VR 20
Vref CIRCUIT
22 VDD
13 DG
14 AG
15 VSS

- DB BOARD - (COMPONENT SIDE)

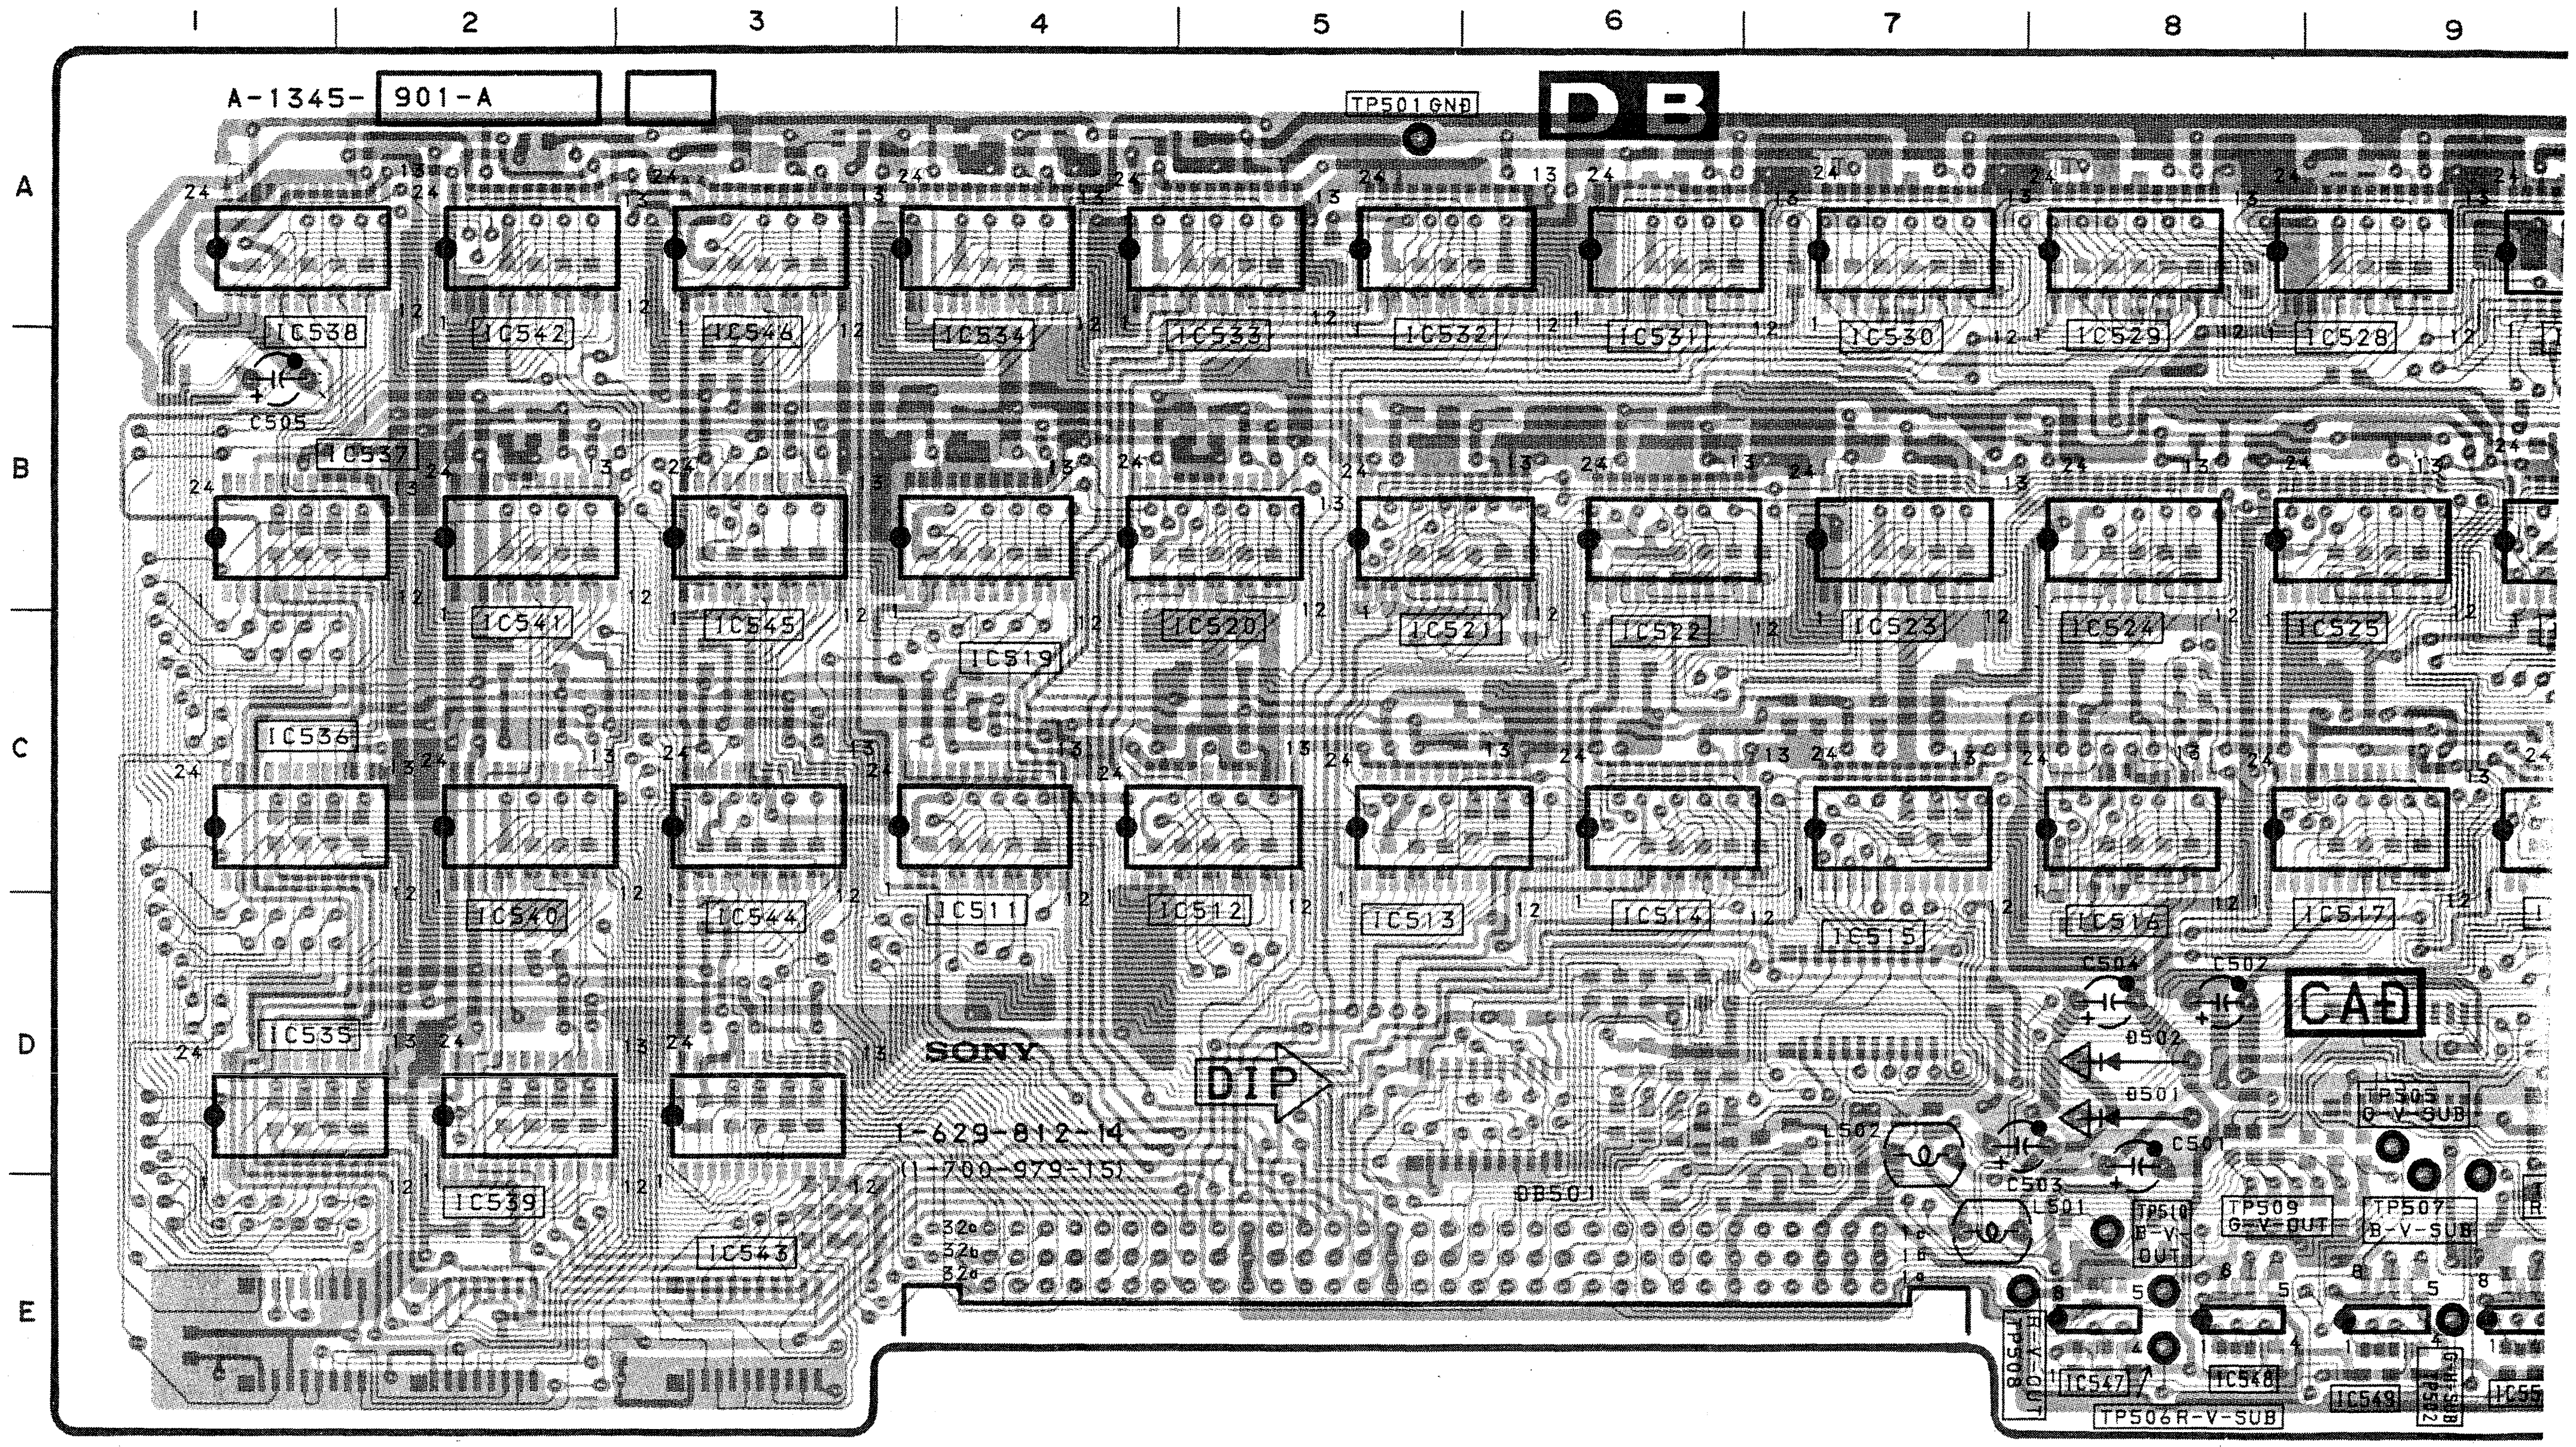
1
2
3
4
5
6
7
8
9
A
B
C
D
E
A-1345-901-A
TP501 GND
DB
IC538
IC542
IC546
IC534
IC533
IC532
IC531
IC530
IC529
IC528
C505
IC537
IC541
IC545
IC519
IC520
IC521
IC522
IC523
IC524
IC525
IC536
IC540
IC544
IC511
IC512
IC513
IC514
IC515
IC516
IC517
IC535
IC539
IC543
SONY
DIP
1-629-812-14
(1-700-979-15)
CN501
C504
C502
CAD
D502
D501
C501
C503
L501
TP505 G-V-SUB
TP510 B-V-OUT
TP509 G-V-OUT
TP507 B-V-SUB
TP508 R-V-OUT
TP506 R-V-SUB
TP502
IC547
IC548
IC549
24
13
12
1

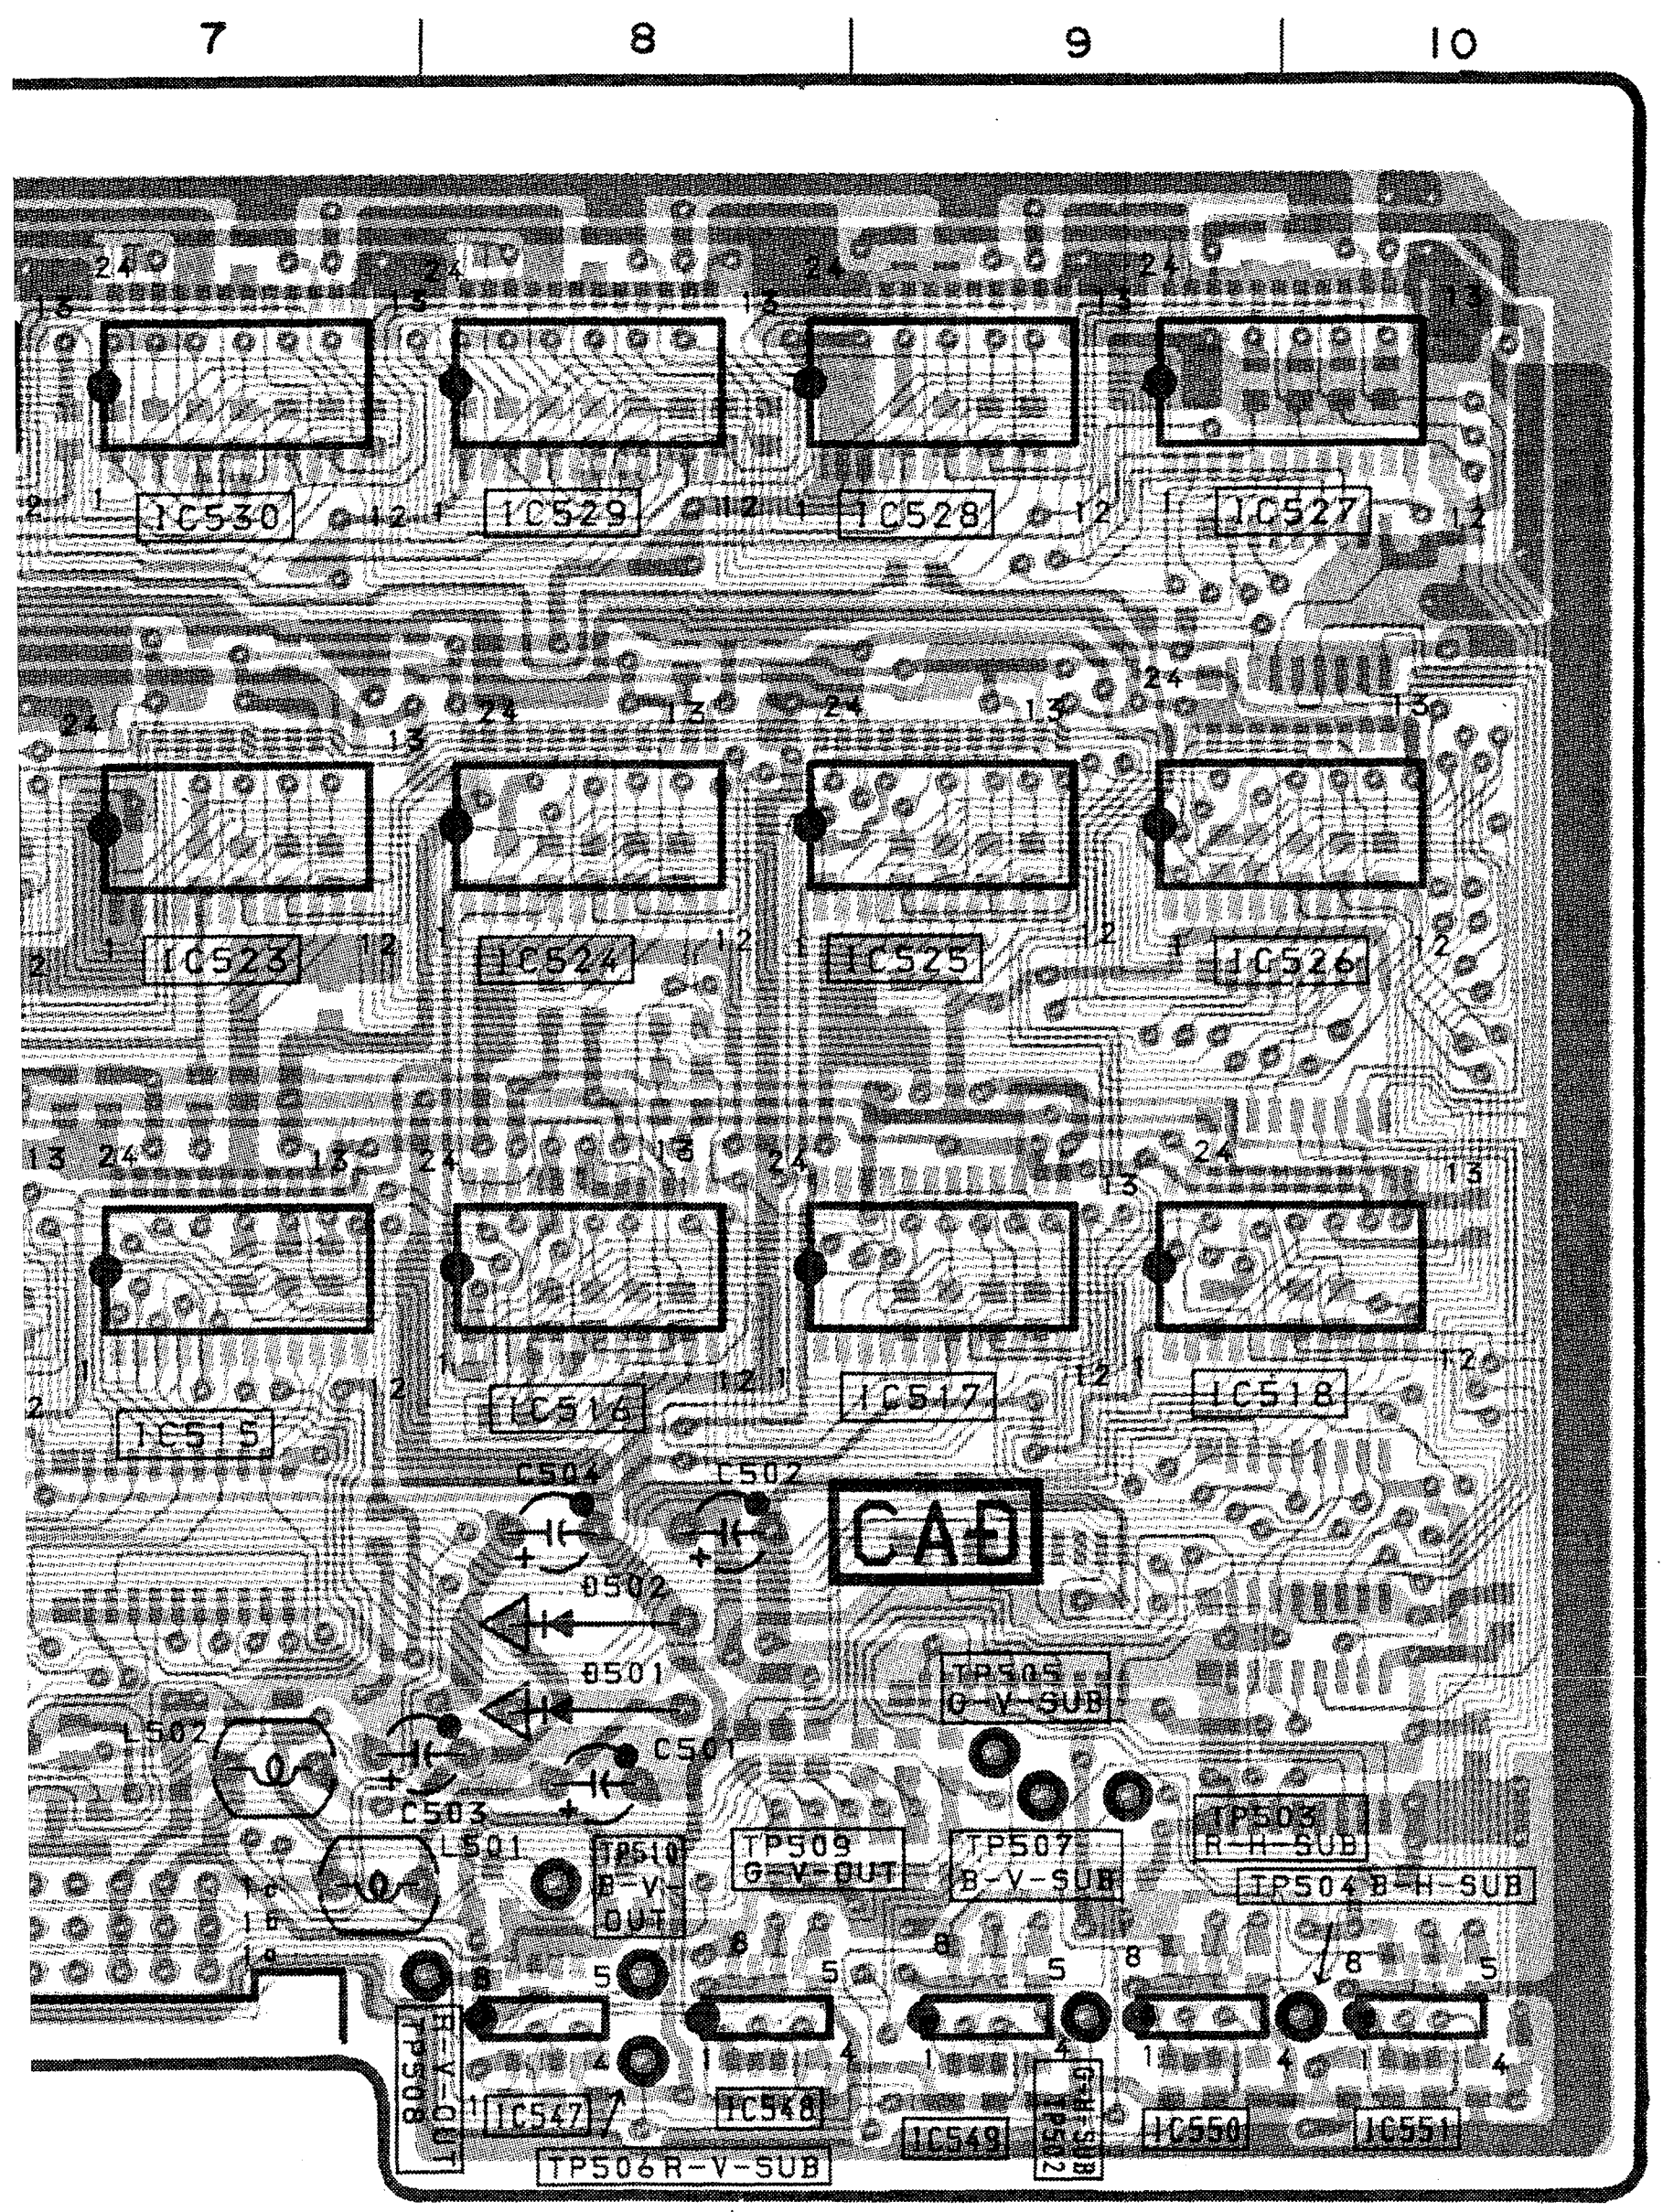
7
8
9
10
IC530
IC529
IC528
IC527
IC523
IC524
IC525
IC526
IC515
IC516
IC517
IC518
CAD
C504
C502
D502
D501
C501
C503
L502
L501
TP510 B-V-OUT
TP509 G-V-OUT
TP507 B-V-SUB
TP505 G-V-SUB
TP503 R-H-SUB
TP504 B-H-SUB
TP508 R-V-OUT
TP506 R-V-SUB
TP512
IC547
IC548
IC549
IC550
IC551

DB BOARD

IC

	COM-PONENT SIDE	CON-DUCTOR SIDE
IC501	D - 5	
IC502	D - 4	
IC503	E - 8	
IC504	D - 2	
IC505	D - 1	
IC506	D - 1	
IC507	C - 1	
IC508	B - 1	
IC509	E - 9	
IC510	E - 9	
IC511		C - 4
IC512		C - 5
IC513		C - 5
IC514		C - 6
IC515		C - 7
IC516		C - 8
IC517		C - 9
IC518		C - 10
IC519		B - 4
IC520		B - 5
IC521		B - 5
IC522		B - 6
IC523		B - 7
IC524		B - 8
IC525		B - 9
IC526		B - 10
IC527		A - 10
IC528		A - 9
IC529		A - 8
IC530		A - 7
IC531		A - 6
IC532		A - 5
IC533		A - 5
IC534		A - 4
IC535		D - 1
IC536		C - 1
IC537		B - 1
IC538		A - 1
IC539		D - 2
IC540		C - 2
IC541		B - 2
IC542		A - 2
IC543		D - 3
IC544		C - 3
IC545		B - 3
IC546		A - 3
IC547		E - 8
IC548		E - 8
IC549		E - 9
IC550		E - 9
IC551		E - 10
IC552	B - 10	

DIODE

	CON-DUCTOR SIDE	COM-PONENT SIDE
D501	D - 3	D - 8
D502	D - 3	D - 8
D503	E - 3	
D504	E - 3	
D505	E - 3	
D506	D - 4	
D507	D - 4	
D508	E - 5	

(CONDUCTOR SIDE)

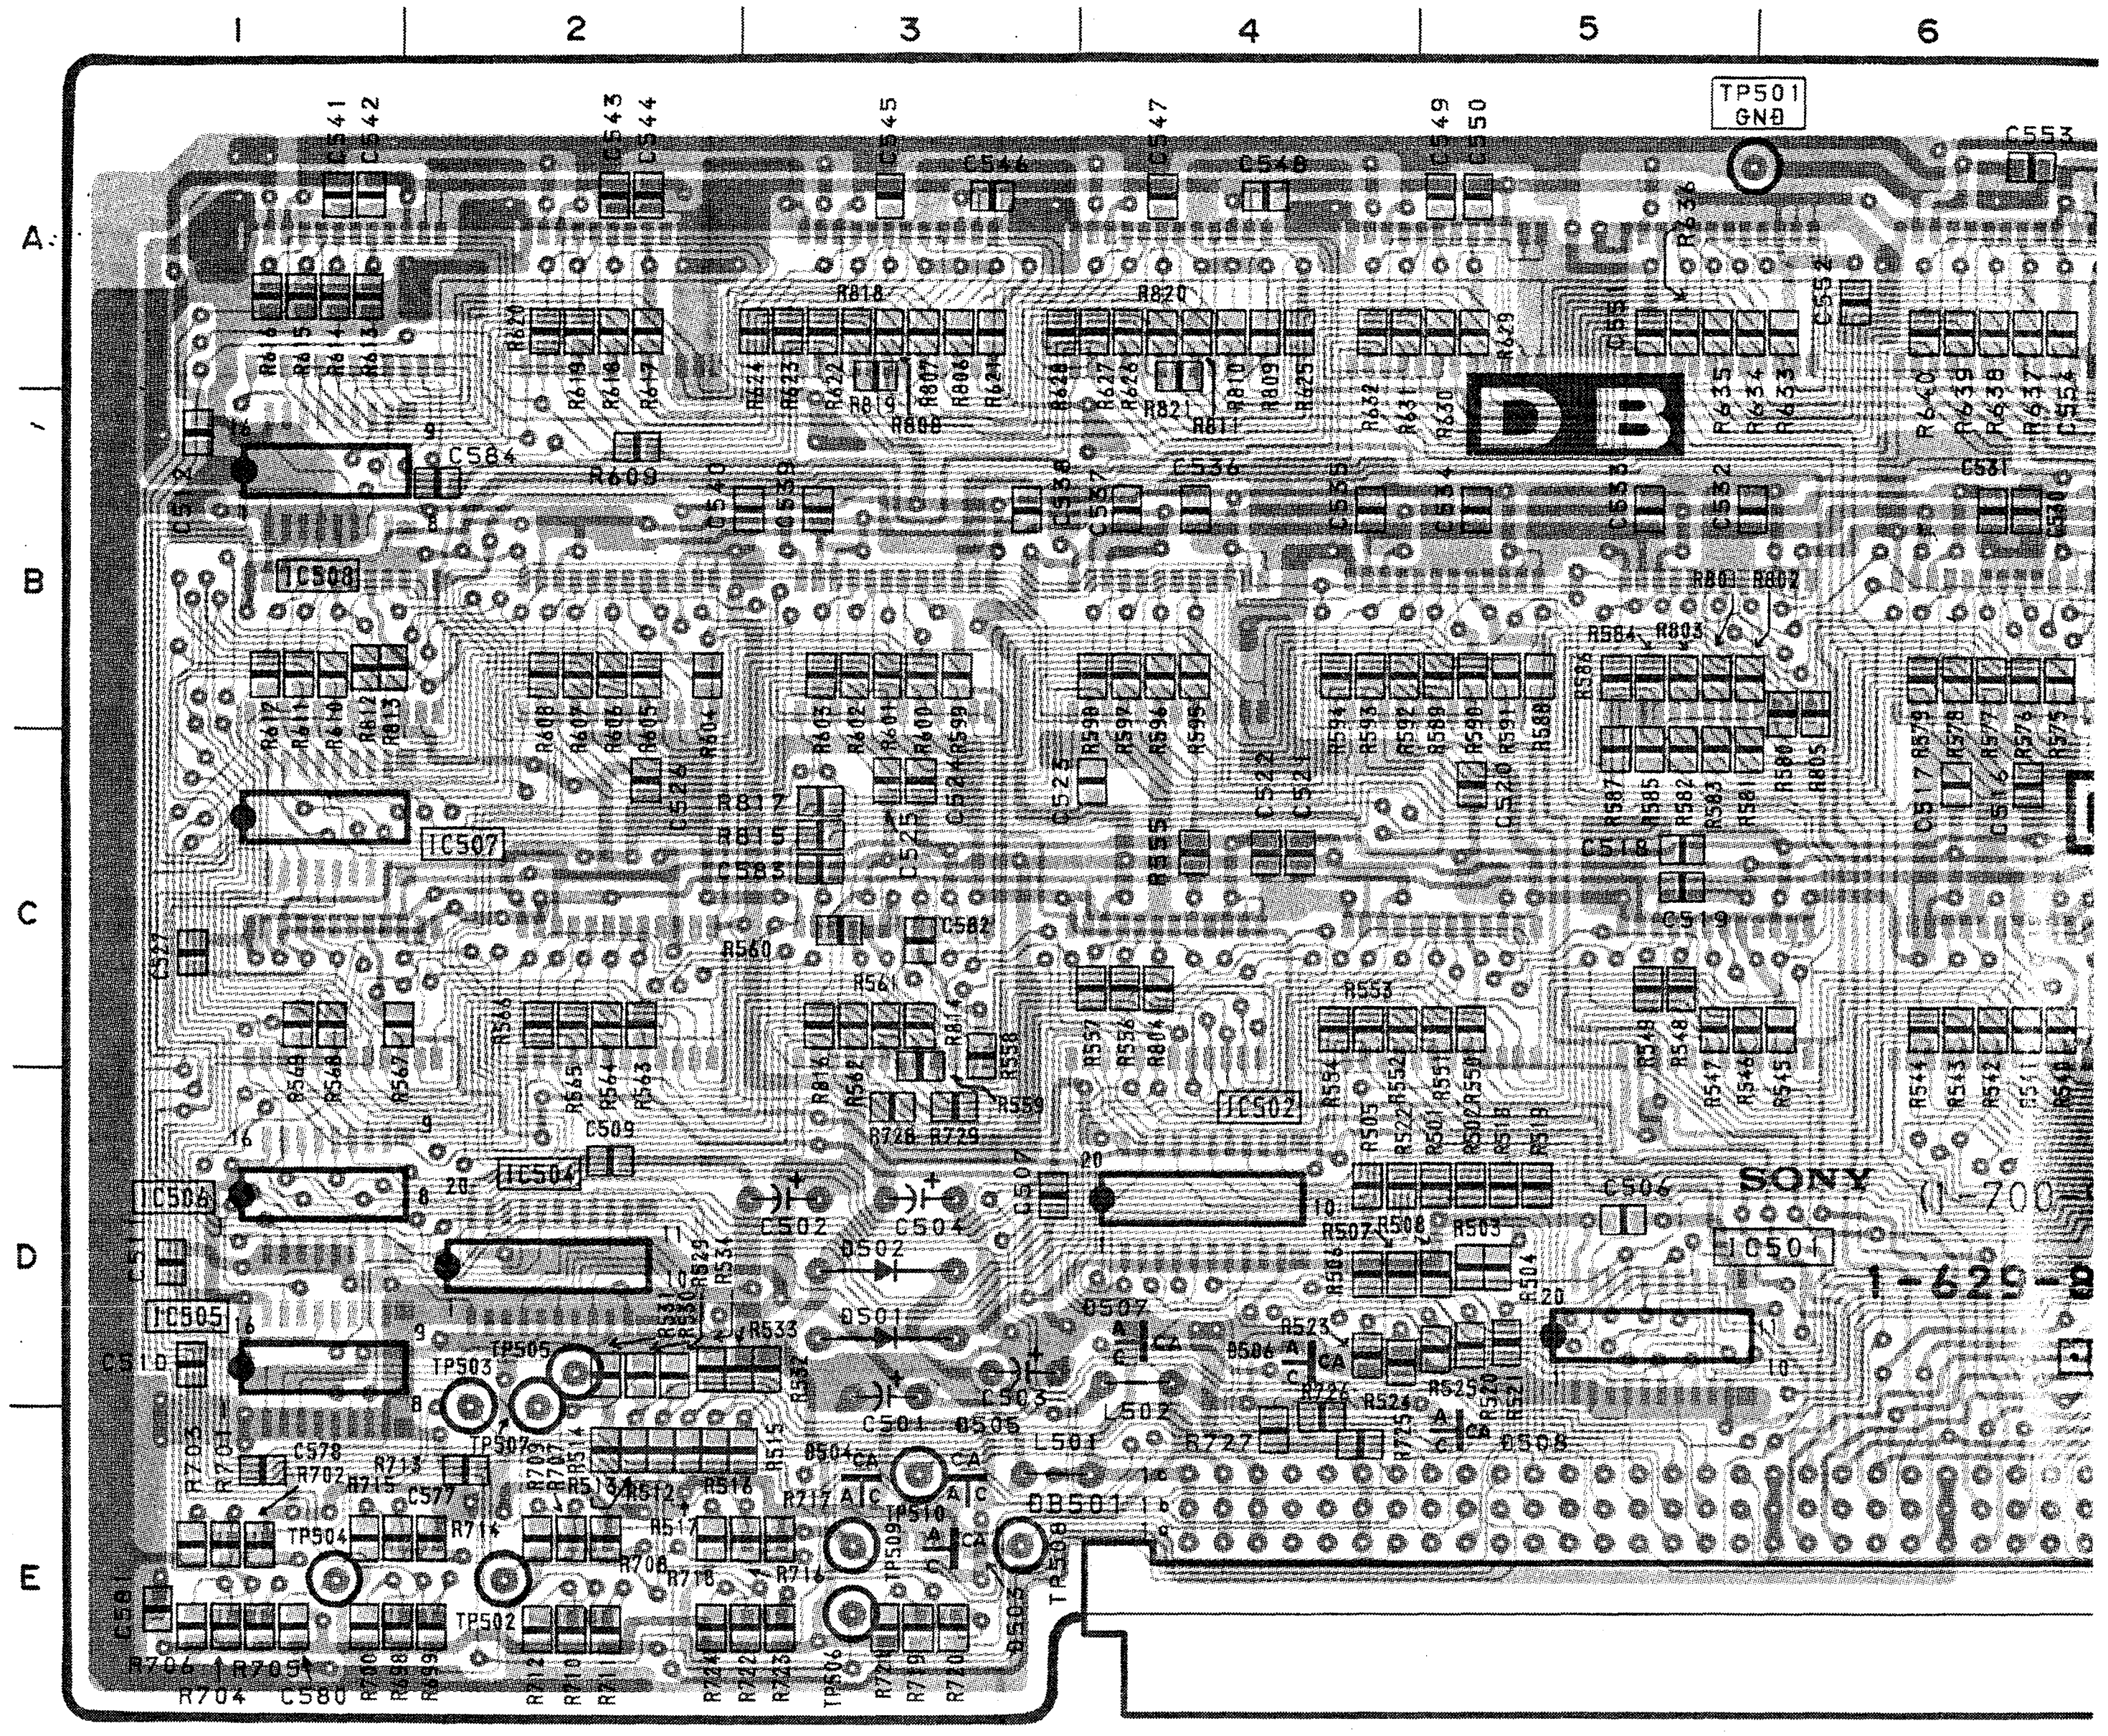
1
2
3
4
5
6
A
B
C
D
E
TP501 GND
DB
IC508
IC507
IC506
IC505
IC504
IC502
IC501
SONY
1-629-
C544
C548
C553
C584
C536
R609
R818
R820
C502
C504
C501
C503
D502
D501
L502
L501
TP503
TP505
TP504
TP502
TP507
TP509
TP510
R706
R704
R705
C580
C581
C578
C577
C509
C506
C508
C518
C519
C582
R560
R561

(CONDUCTOR SIDE)

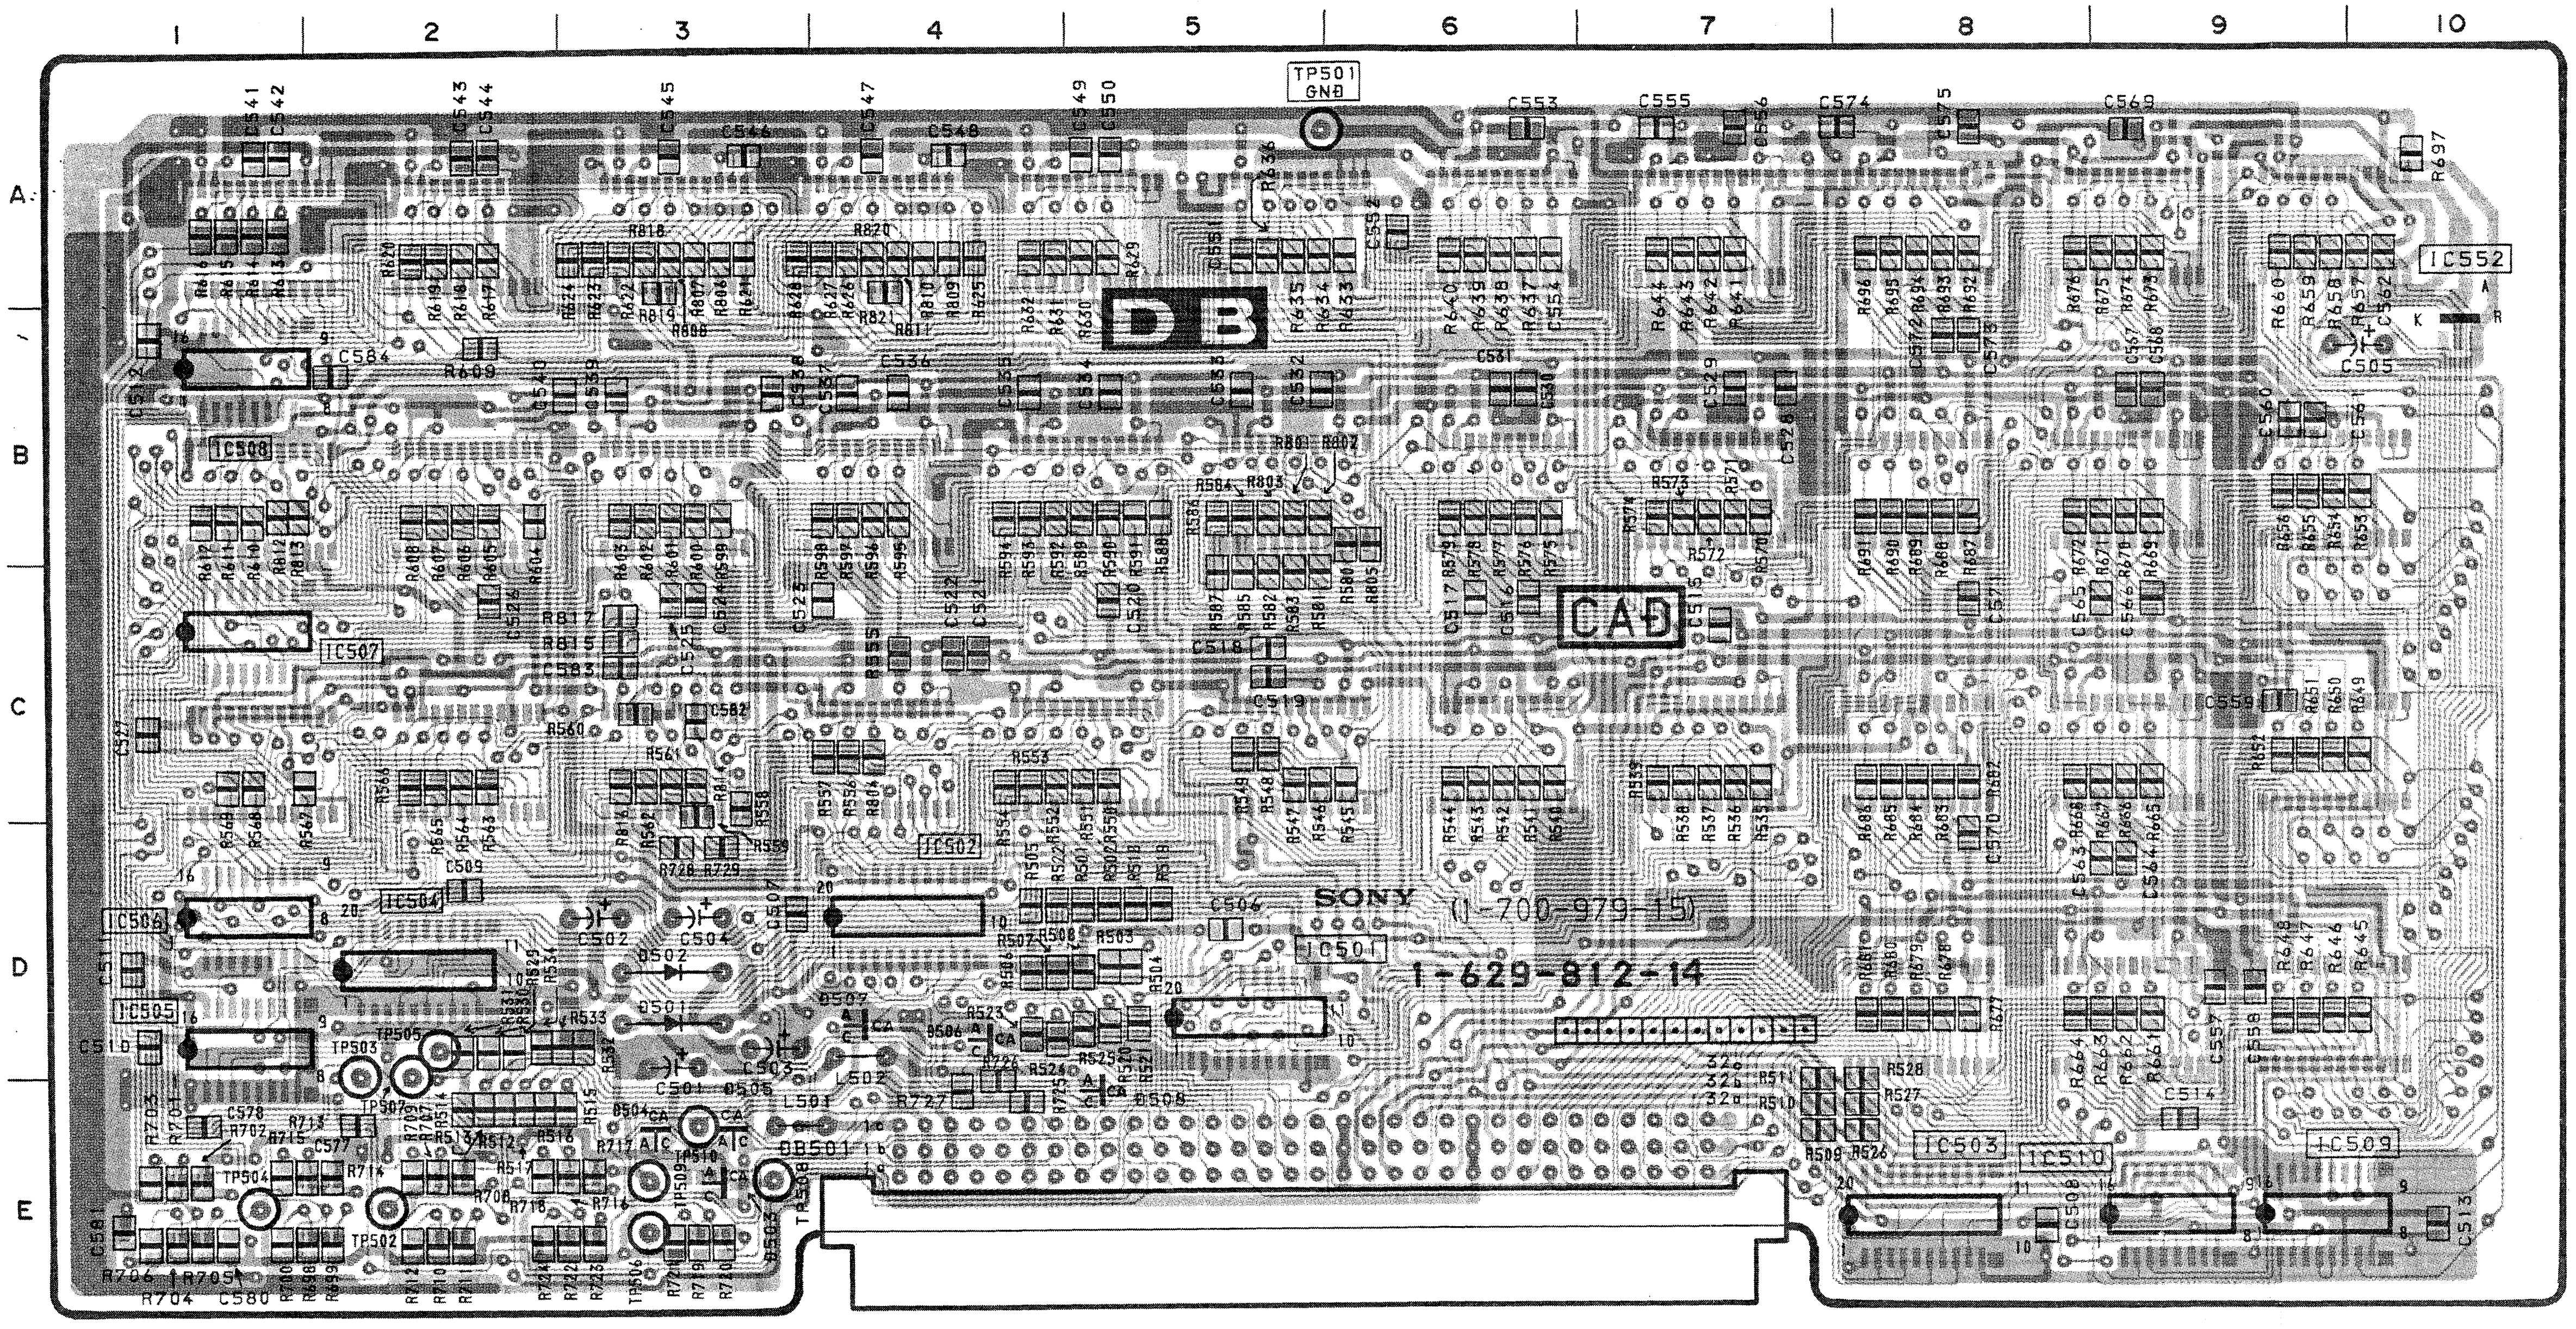
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
TP501 GND
DB
CAD
SONY
(1-700-979-15)
1-629-812-14
IC501
IC502
IC503
IC504
IC505
IC506
IC507
IC508
IC509
IC510
IC552
TP502
TP503
TP504
TP505
TP506
TP507
TP508
TP509
DB501

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
1	B	–	–	–	–	–	–
	C	1.2	1.2	1.2	1.2	1.2	1.0
	E	–	–	–	–	–	–
2	B	–	–	–	–	–	–
	C	1.2	1.2	1.2	1.2	1.2	1.0
	E	–	–	–	–	–	–
3	B	–	–	–	–	–	–
	C	1.2	1.2	1.2	1.2	1.2	1.0
	E	–	–	–	–	–	–
6	B	1.0	1.0	1.0	1.0	1.0	0.3
	C	–	–	–	–	–	–
	E	–	–	–	–	–	–
11	B	9.8	9.8	9.8	9.8	9.8	10
	C	–	–	–	–	–	–
	E	–	–	–	–	–	–
12	B	7.4	7.4	7.4	7.4	7.4	7.6
	C	–	–	–	–	–	–
	E	–	–	–	–	–	–
101	B	0.6	0.6	0.6	0.6	0.6	1.5
	C	–	–	–	–	–	–
	E	0	0	0	0	0	0.9
102	G	– 6.2	– 6.2	– 6.2	– 6.2	– 6.2	– 5.6
	D	13.7	13.7	13.7	13.7	13.7	13
	S	–	–	–	–	–	–
103	B	13.8	13.8	13.8	13.8	13.8	13
	C	14.5	14.5	14.5	14.5	14.5	14.9
	E	13.2	13.2	13.2	13.2	13.2	12.5
104	B	13.8	13.8	13.8	13.8	13.8	13
	C	–	–	–	–	–	–
	E	13.2	13.2	13.2	13.2	13.2	12.5
105	G	35.5	35.5	35.5	35.5	35.5	34.9
	D	– 1.2	– 1.2	– 1.2	– 1.2	– 1.2	9
	S	–	–	–	–	–	–
106	B	0.6	0.6	0.6	0.6	0.6	1.5
	C	14.5	14.5	14.5	14.5	14.5	14.9
	E	1.1	1.1	1.1	1.1	1.1	2
107	B	0.6	0.6	0.6	0.6	0.6	1.5
	C	–	–	–	–	–	–
	E	1.1	1.1	1.1	1.1	1.1	2
108	G	– 35.7	– 35.7	– 35.7	– 35.7	– 35.7	– 35.1
	D	– 17.9	– 17.9	– 17.9	– 17.9	– 17.9	– 14.9
	S	–	–	–	–	–	–
202	B	– 34	– 34	– 34	– 34	– 34	– 33.8
	C	–	–	–	–	–	–
	E	–	–	–	–	–	–
203	B	–	–	–	–	–	–
	C	15	15	15	15	15	17
	E	–	–	–	–	–	–
204	B	–	–	–	–	–	–
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	–	–	–	–	–	–
207	B	–	–	–	–	–	–
	C	15	15	15	15	15	17
	E	–	–	–	–	–	–
208	B	–	–	–	–	–	–
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	–	–	–	–	–	–
210	B	–	–	–	–	–	–
	C	– 0.3	– 0.3	– 0.3	– 0.3	– 0.3	– 5.3
	E	–	–	–	–	–	–
211	B	–	–	–	–	–	–
	C	15	15	15	15	15	17
	E	0.4	0.4	0.4	0.4	0.4	5
212	B	–	–	–	–	–	–
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	–	–	–	–	–	–
301	B	32.1	32.1	32.1	32.1	32.1	– 32.2
	C	2	2	2	2	2	0.3
	E	–	–	–	–	–	–
302	B	– 34.1	– 34.1	– 34.1	– 34.1	– 34.1	– 33.8
	C	0.5	0.5	0.5	0.5	0.5	– 1.2
	E	–	–	–	–	–	–

Q-No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
303	B	1.7	1.7	1.7	1.7	1.7	0.2
	C	14.9	14.9	14.9	14.9	14.9	16.9
	E	1.0	1.0	1.0	1.0	1.0	– 0.1
304	B	0.5	0.5	0.5	0.5	0.5	– 1
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	0.6	0.6	0.6	0.6	0.6	– 0.5
305	B	–	–	–	–	–	–
	C	2.7	2.7	2.7	2.7	2.7	1.5
	E	–	–	–	–	–	–
306	B	–	–	–	–	–	–
	C	1.3	1.3	1.3	1.3	1.3	0
	E	–	–	–	–	–	–
307	B	32.1	32.1	32.1	32.1	32.1	1.3
	C	2.7	2.7	2.7	2.7	2.7	16.9
	E	32.7	32.7	32.7	32.7	32.7	0.7
308	B	1.3	1.3	1.3	1.3	1.3	0
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	1.7	1.7	1.7	1.7	1.7	0.3
309	B	–	–	–	–	–	–
	C	3.7	3.7	3.7	3.7	3.7	3.0
	E	–	–	–	–	–	–
310	B	–	–	–	–	–	–
	C	2.1	2.1	2.1	2.1	2.1	1.5
	E	–	–	–	–	–	–
311	B	3.2	3.2	3.2	3.2	3.2	2.7
	C	14.9	14.9	14.9	14.9	14.9	17
	E	2.4	2.4	2.4	2.4	2.4	1.9
312	B	2.1	2.1	2.1	2.1	2.1	1.5
	C	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	– 18.1
	E	– 18.4	– 18.4	– 18.4	– 18.4	– 18.4	1.2

IC-No.	PIN-No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
3	⑤	1.2	1.2	1.2	1.2	1.2	1.0
	⑥	6.0	6.0	6.0	6.0	6.0	6.2
	⑦	– 10.8	– 10.8	– 10.8	– 10.8	– 10.8	– 11
4	②	0.5	0.5	0.5	0.5	0.5	0.2
	③	11.7	11.7	11.7	11.7	11.7	11.9
	④	– 11.3	– 11.3	– 11.3	– 11.3	– 11.3	– 10.4
5	⑤	1.2	1.2	1.2	1.2	1.2	1
	⑦	– 10.8	– 10.8	– 10.8	– 10.8	– 10.8	– 11
6	②	0	0	0	0	0	– 0.2
	③	11.7	11.7	11.7	11.7	11.7	11.9
	④	– 11.2	– 11.2	– 11.2	– 11.2	– 11.2	– 10.4
	⑤	– 11.2	– 11.2	– 11.2	– 11.2	– 11.2	– 11.4
7	⑤	1.2	1.2	1.2	1.2	1.2	1.0
	⑥	6.0	6.0	6.0	6.0	6.0	6.2
	⑦	– 10.8	– 10.8	– 10.8	– 10.8	– 10.8	– 11
8	②	0.7	0.7	0.7	0.7	0.7	0.4
	③	11.7	11.7	11.7	11.7	11.7	11.9
	④	– 11.2	– 11.2	– 11.2	– 11.2	– 11.2	– 11.4
	⑤	– 11.3	– 11.3	– 11.3	– 11.3	– 11.3	– 11.5
101	⑦	0.6	0.6	0.6	0.6	0.6	– 0.2
102	⑦	1.3	1.3	1.3	1.3	1.3	1
103	⑦	1.3	1.3	1.3	1.3	1.3	1
201	⑥	– 4.1	– 4.1	– 4.1	– 4.1	– 4.1	– 3.8
202	⑥	– 3.1	– 3.1	– 3.1	– 3.1	– 3.1	– 2.8
203	⑥	– 3.8	– 3.8	– 3.8	– 3.8	– 3.8	– 3.6
302	①	– 15.0	– 15.0	– 15.0	– 15.0	– 15.0	– 14.8
	②	0.6	0.6	0.6	0.6	0.6	– 0.2
	③	0.6	0.6	0.6	0.6	0.6	– 0.2
	⑥	– 4.9	– 4.9	– 4.9	– 4.9	– 4.9	– 2.6
303	②	1.3	1.3	1.3	1.3	1.3	1
	③	1.3	1.3	1.3	1.3	1.3	1
	⑥	– 4	– 4	– 4	– 4	– 4	– 3.3

IC1 μPC7812H

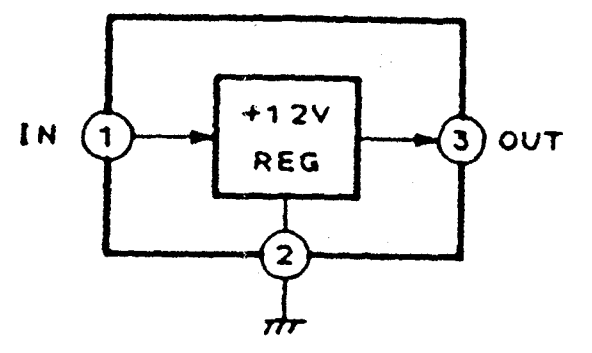
IN
①
+12V
REG
③
OUT
②

IC2 μPC7912H

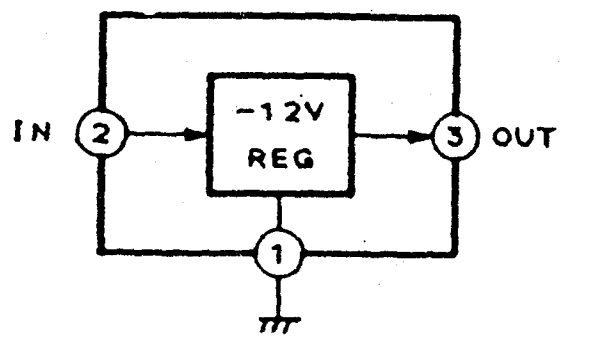
IN
②
-12V
REG
③
OUT
①

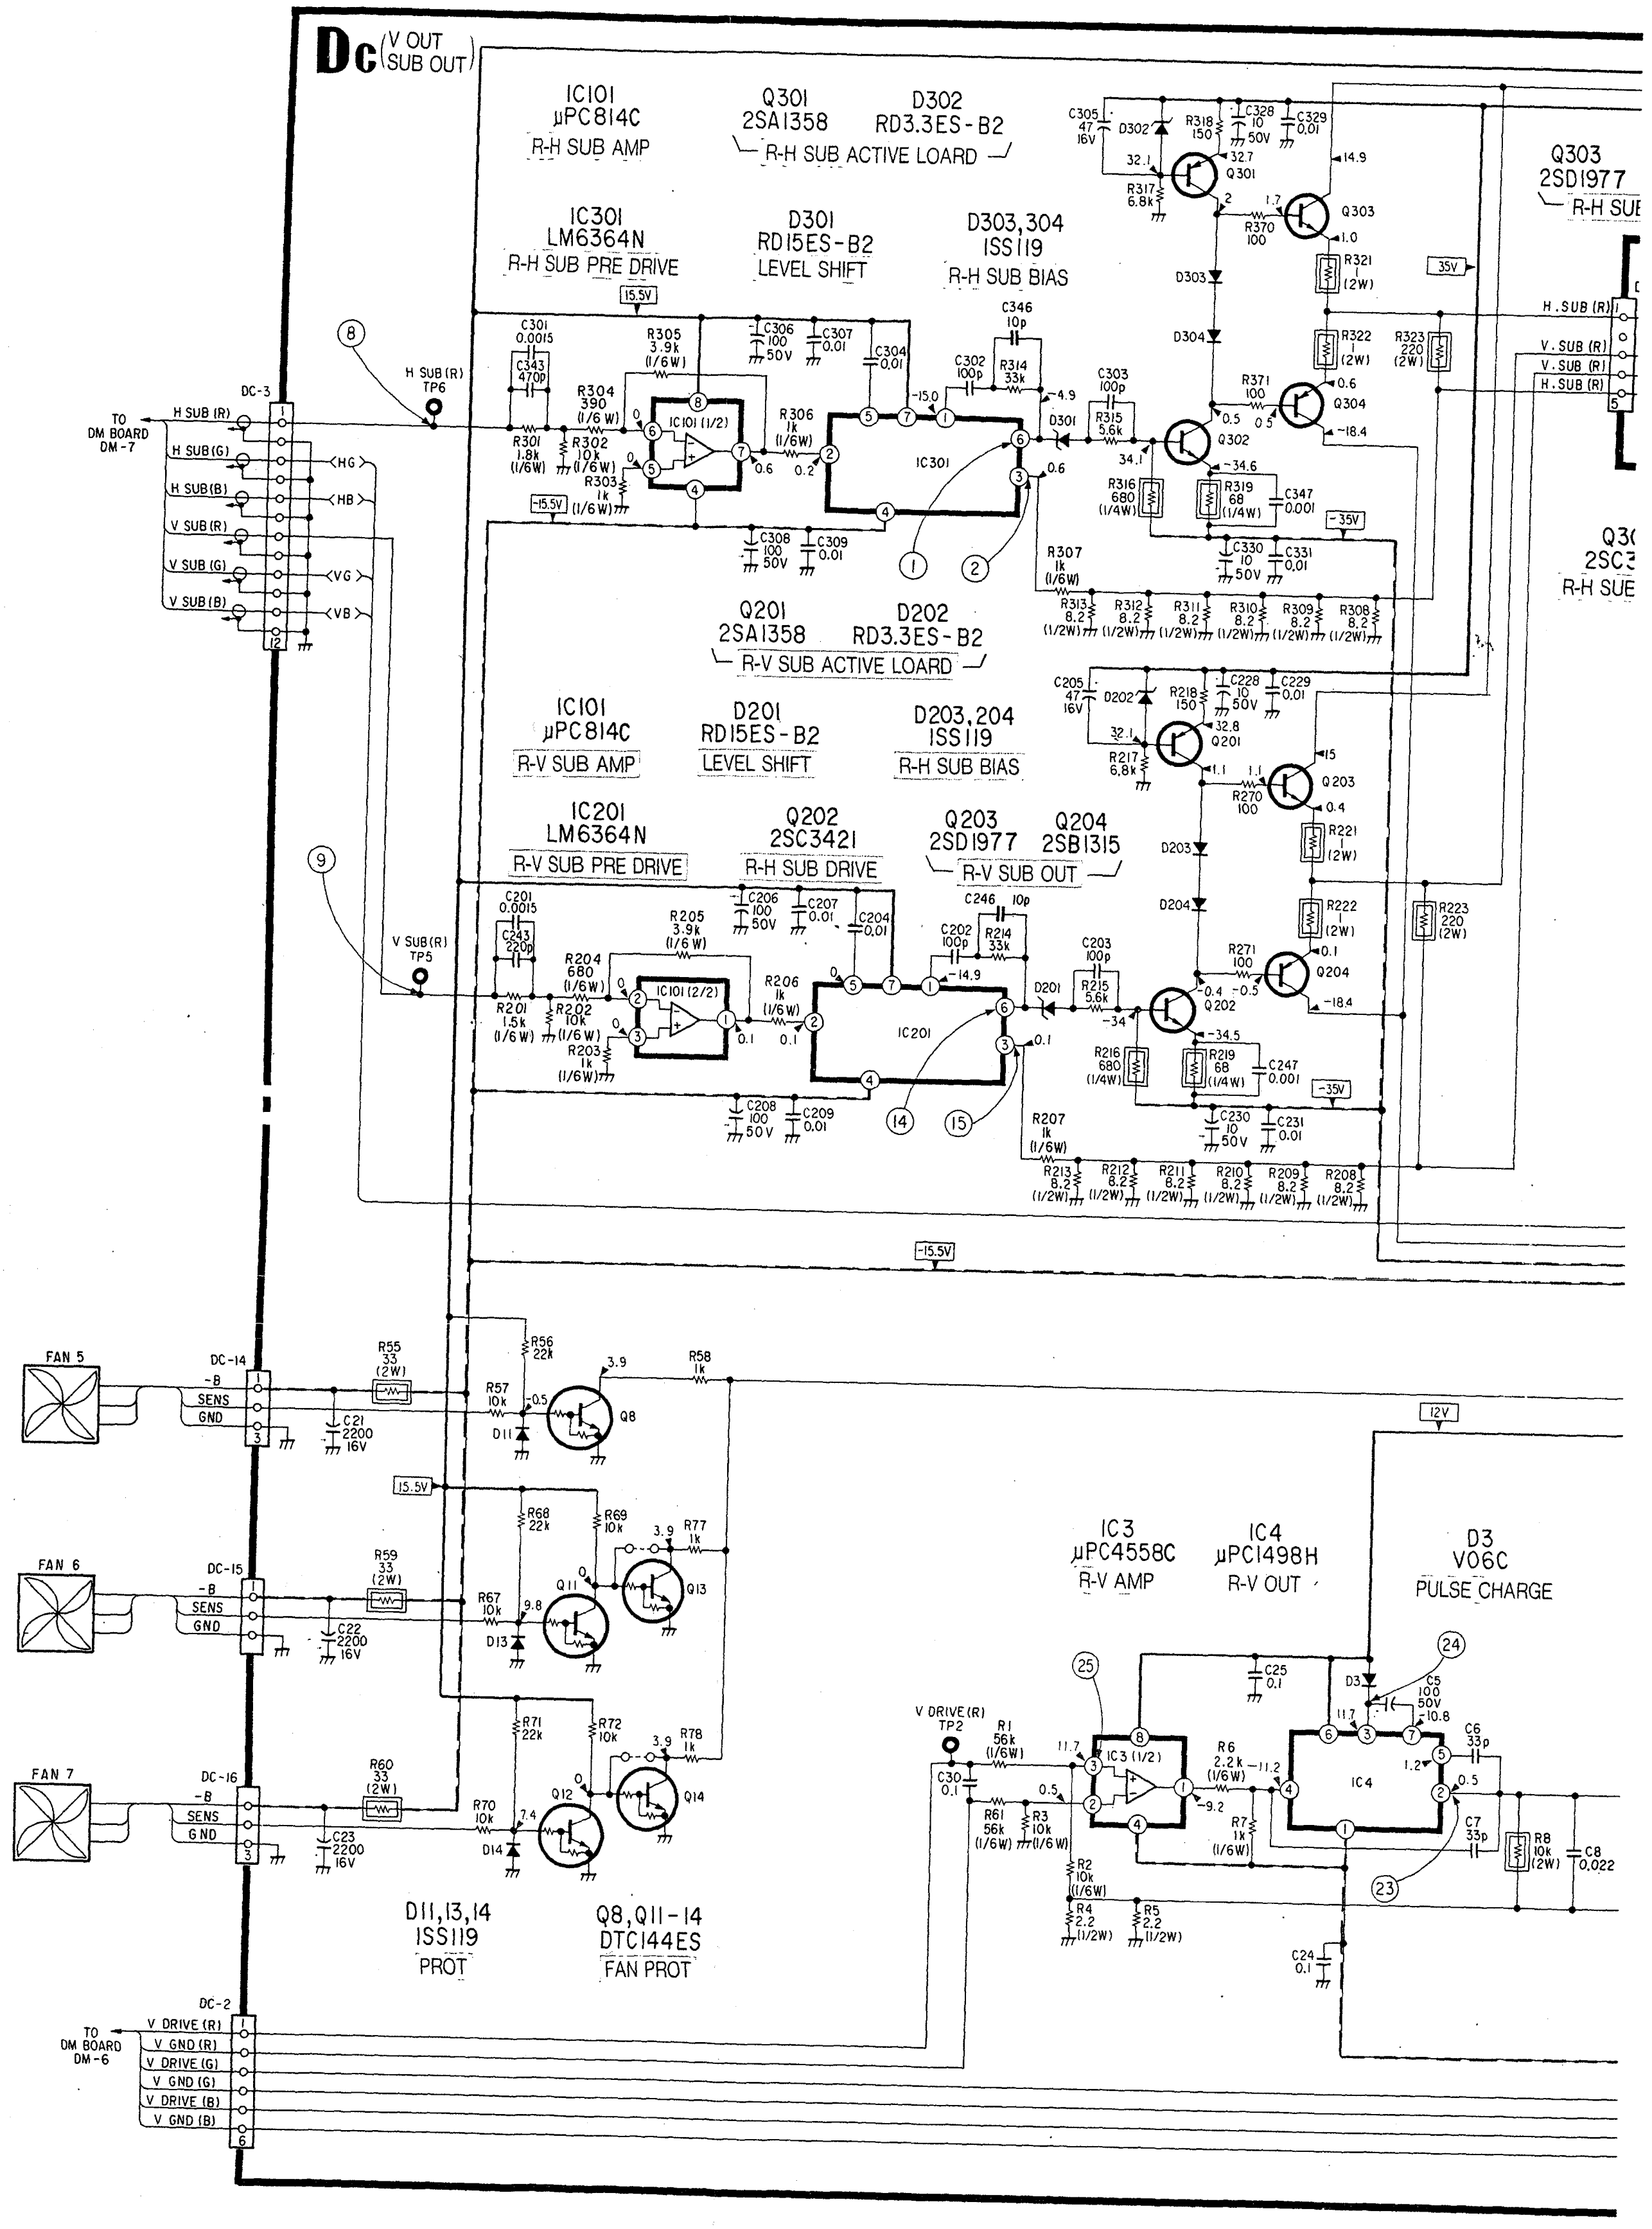
Dc
V OUT
SUB OUT
IC101
μPC814C
R-H SUB AMP
Q301
2SA1358
D302
RD3.3ES-B2
R-H SUB ACTIVE LOARD
IC301
LM6364N
R-H SUB PRE DRIVE
D301
RD15ES-B2
LEVEL SHIFT
D303,304
ISS119
R-H SUB BIAS
Q303
2SD1977
R-H SUB
Q201
2SA1358
D202
RD3.3ES-B2
R-V SUB ACTIVE LOARD
IC101
μPC814C
R-V SUB AMP
D201
RD15ES-B2
LEVEL SHIFT
D203,204
ISS119
R-H SUB BIAS
IC201
LM6364N
R-V SUB PRE DRIVE
Q202
2SC3421
R-H SUB DRIVE
Q203
2SD1977
Q204
2SB1315
R-V SUB OUT
TO DM BOARD DM-7
H SUB (R)
H SUB (G)
H SUB (B)
V SUB (R)
V SUB (G)
V SUB (B)
DC-3
H SUB (R) TP6
V SUB (R) TP5
FAN 5
FAN 6
FAN 7
DC-14
DC-15
DC-16
SENS
GND
Q8
Q11
Q12
Q13
Q14
D11,13,14
ISS119
PROT
Q8,Q11-14
DTC144ES
FAN PROT
IC3
μPC4558C
R-V AMP
IC4
μPC1498H
R-V OUT
D3
V06C
PULSE CHARGE
V DRIVE (R) TP2
TO DM BOARD DM-6
DC-2
V DRIVE (R)
V GND (R)
V DRIVE (G)
V GND (G)
V DRIVE (B)
V GND (B)
15.5V
-15.5V
-35V
35V
12V

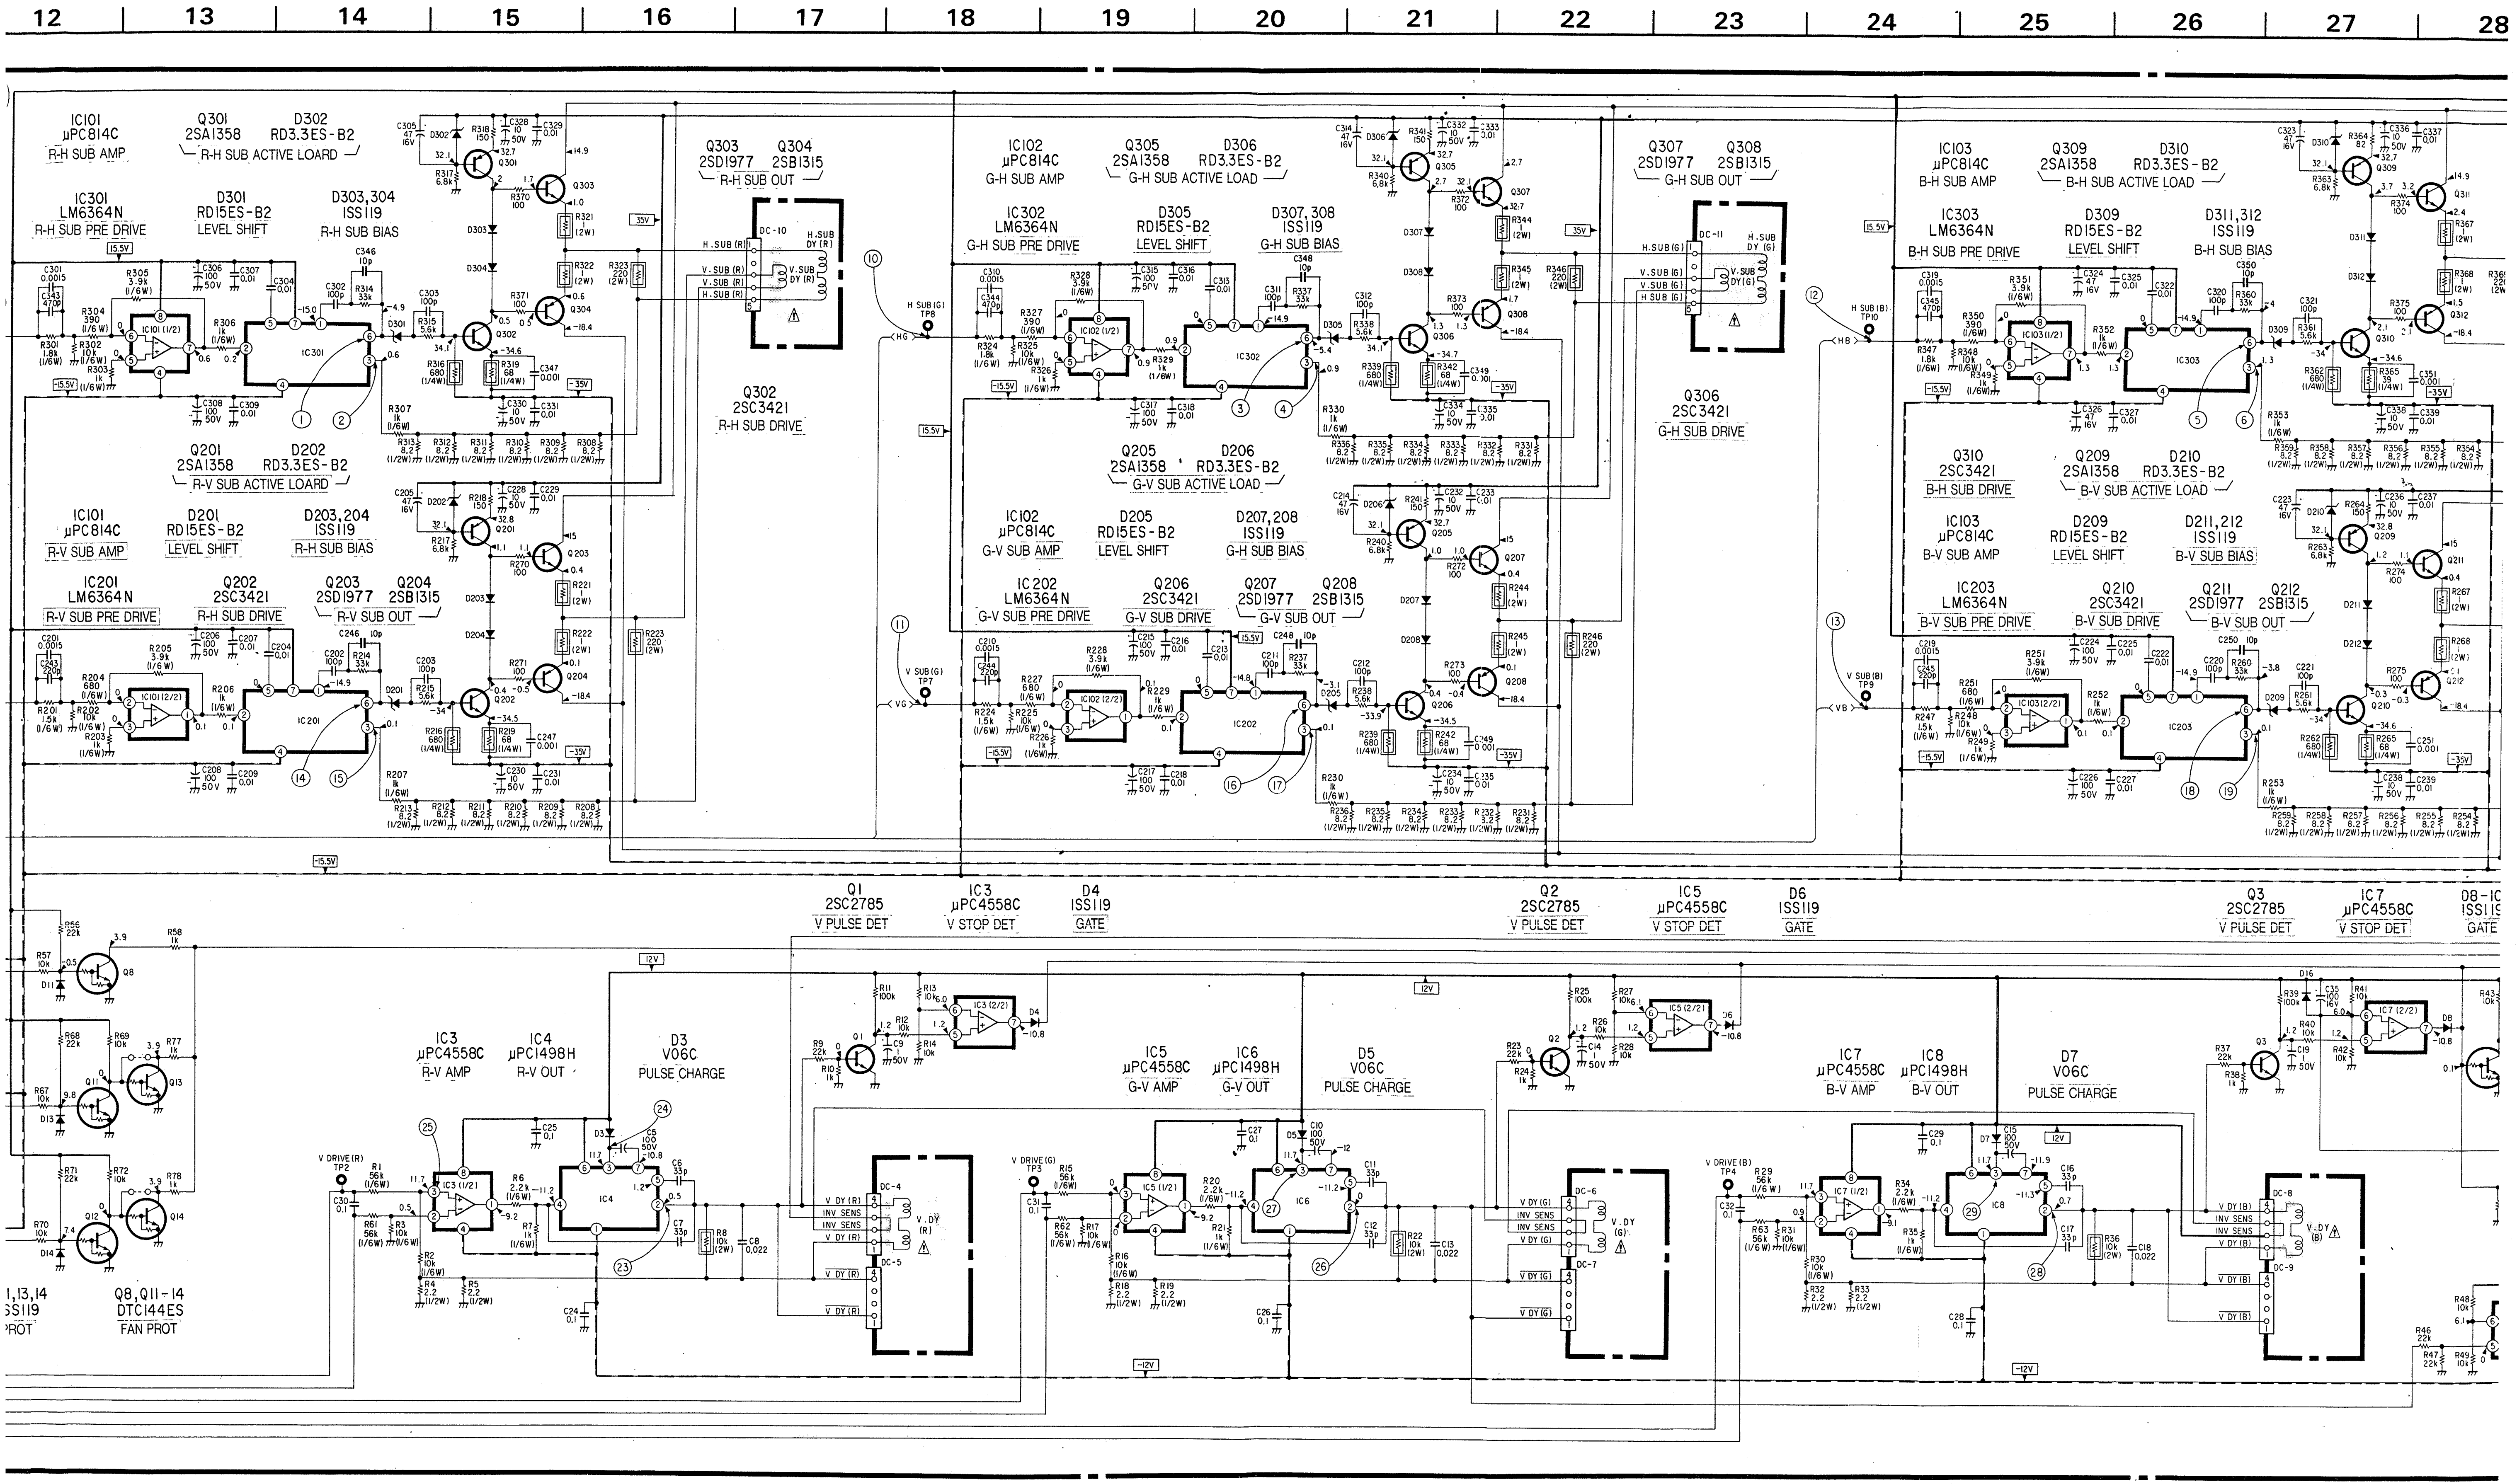
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
IC101 μPC814C R-H SUB AMP
Q301 2SA1358 D302 RD3.3ES-B2 R-H SUB ACTIVE LOARD
IC301 LM6364N R-H SUB PRE DRIVE
D301 RD15ES-B2 LEVEL SHIFT
D303,304 ISS119 R-H SUB BIAS
Q303 2SD1977 Q304 2SB1315 R-H SUB OUT
Q302 2SC3421 R-H SUB DRIVE
H.SUB (R)
V.SUB (R)
DC-10
IC102 μPC814C G-H SUB AMP
Q305 2SA1358 D306 RD3.3ES-B2 G-H SUB ACTIVE LOAD
IC302 LM6364N G-H SUB PRE DRIVE
D305 RD15ES-B2 LEVEL SHIFT
D307,308 ISS119 G-H SUB BIAS
Q307 2SD1977 Q308 2SB1315 G-H SUB OUT
Q306 2SC3421 G-H SUB DRIVE
H SUB (G) TP8
DC-11
IC103 μPC814C B-H SUB AMP
Q309 2SA1358 D310 RD3.3ES-B2 B-H SUB ACTIVE LOAD
IC303 LM6364N B-H SUB PRE DRIVE
D309 RD15ES-B2 LEVEL SHIFT
D311,312 ISS119 B-H SUB BIAS
H SUB (B) TP10
Q201 2SA1358 D202 RD3.3ES-B2 R-V SUB ACTIVE LOARD
IC101 μPC814C R-V SUB AMP
D201 RD15ES-B2 LEVEL SHIFT
D203,204 ISS119 R-H SUB BIAS
IC201 LM6364N R-V SUB PRE DRIVE
Q202 2SC3421 R-H SUB DRIVE
Q203 2SD1977 Q204 2SB1315 R-V SUB OUT
Q205 2SA1358 D206 RD3.3ES-B2 G-V SUB ACTIVE LOAD
IC102 μPC814C G-V SUB AMP
D205 RD15ES-B2 LEVEL SHIFT
D207,208 ISS119 G-H SUB BIAS
IC202 LM6364N G-V SUB PRE DRIVE
Q206 2SC3421 G-V SUB DRIVE
Q207 2SD1977 Q208 2SB1315 G-V SUB OUT
V SUB (G) TP7
Q310 2SC3421 B-H SUB DRIVE
Q209 2SA1358 D210 RD3.3ES-B2 B-V SUB ACTIVE LOAD
IC103 μPC814C B-V SUB AMP
D209 RD15ES-B2 LEVEL SHIFT
D211,212 ISS119 B-V SUB BIAS
IC203 LM6364N B-V SUB PRE DRIVE
Q210 2SC3421 B-V SUB DRIVE
Q211 2SD1977 Q212 2SB1315 B-V SUB OUT
V SUB (B) TP9
15.5V
-15.5V
35V
-35V
12V
-12V
Q1 2SC2785 V PULSE DET
IC3 μPC4558C V STOP DET
D4 ISS119 GATE
Q2 2SC2785 V PULSE DET
IC5 μPC4558C V STOP DET
D6 ISS119 GATE
Q3 2SC2785 V PULSE DET
IC7 μPC4558C V STOP DET
D8-IC ISS11 GATE
IC3 μPC4558C R-V AMP
IC4 μPC1498H R-V OUT
D3 V06C PULSE CHARGE
V DRIVE (R) TP2
IC5 μPC4558C G-V AMP
IC6 μPC1498H G-V OUT
D5 V06C PULSE CHARGE
V DRIVE (G) TP3
IC7 μPC4558C B-V AMP
IC8 μPC1498H B-V OUT
D7 V06C PULSE CHARGE
V DRIVE (B) TP4
DC-4
DC-5
DC-6
DC-7
DC-8
DC-9
V.DY (R)
V.DY (G)
V.DY (B)
INV SENS
D11,13,14 ISS119 PROT
Q8,Q11-14 DTC144ES FAN PROT

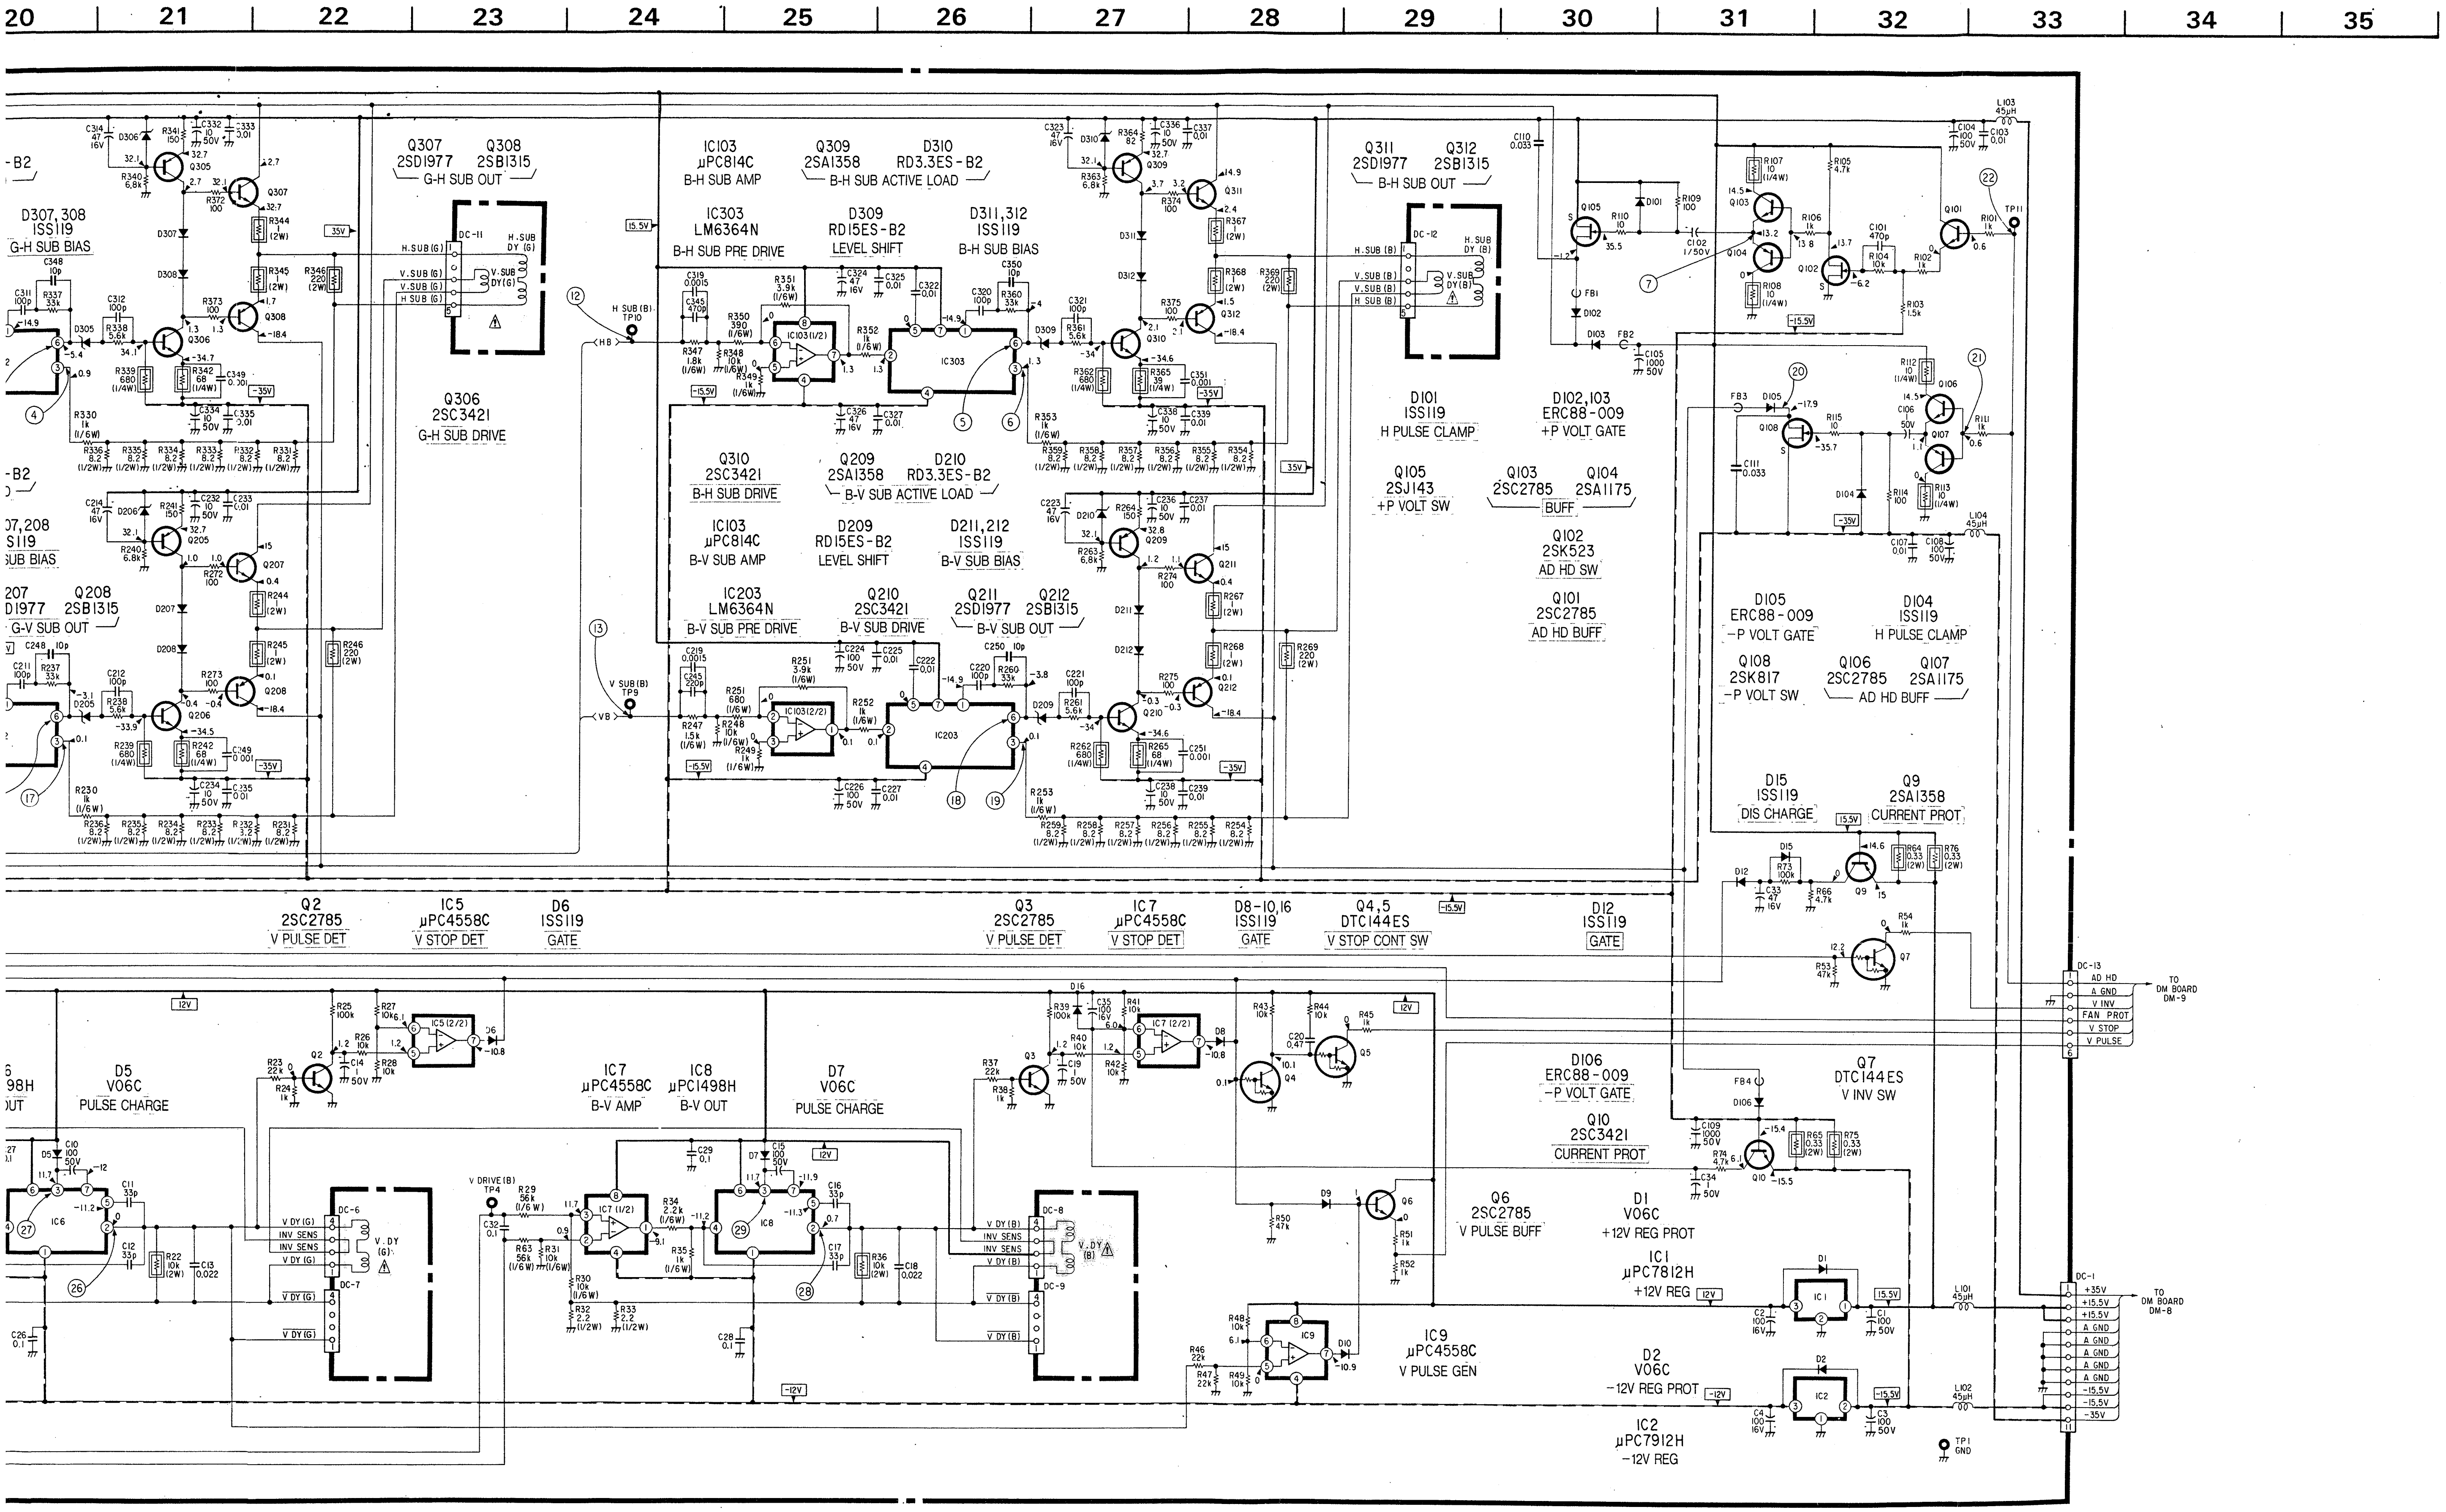
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
Q307 2SD1977 Q308 2SB1315 G-H SUB OUT
IC103 μPC814C B-H SUB AMP
Q309 2SA1358 D310 RD3.3ES-B2 B-H SUB ACTIVE LOAD
Q311 2SD1977 Q312 2SB1315 B-H SUB OUT
IC303 LM6364N B-H SUB PRE DRIVE
D309 RD15ES-B2 LEVEL SHIFT
D311,312 ISS119 B-H SUB BIAS
D307,308 ISS119 G-H SUB BIAS
DC-11
DC-12
H.SUB (G)
V.SUB (G)
H SUB (G)
H.SUB (B)
V.SUB (B)
H SUB (B)
H SUB(B) TP10
HB
V SUB(B) TP9
VB
Q306 2SC3421 G-H SUB DRIVE
Q310 2SC3421 B-H SUB DRIVE
Q209 2SA1358 D210 RD3.3ES-B2 B-V SUB ACTIVE LOAD
IC103 μPC814C B-V SUB AMP
D209 RD15ES-B2 LEVEL SHIFT
D211,212 ISS119 B-V SUB BIAS
IC203 LM6364N B-V SUB PRE DRIVE
Q210 2SC3421 B-V SUB DRIVE
Q211 2SD1977 Q212 2SB1315 B-V SUB OUT
207 D1977 Q208 2SB1315 G-V SUB OUT
D101 ISS119 H PULSE CLAMP
D102,103 ERC88-009 +P VOLT GATE
Q105 2SJ143 +P VOLT SW
Q103 2SC2785 Q104 2SA1175 BUFF
Q102 2SK523 AD HD SW
Q101 2SC2785 AD HD BUFF
D105 ERC88-009 -P VOLT GATE
D104 ISS119 H PULSE CLAMP
Q108 2SK817 -P VOLT SW
Q106 2SC2785 Q107 2SA1175 AD HD BUFF
D15 ISS119 DIS CHARGE
Q9 2SA1358 CURRENT PROT
Q2 2SC2785 V PULSE DET
IC5 μPC4558C V STOP DET
D6 ISS119 GATE
Q3 2SC2785 V PULSE DET
IC7 μPC4558C V STOP DET
D8-10,16 ISS119 GATE
Q4,5 DTC144ES V STOP CONT SW
D12 ISS119 GATE
D5 V06C PULSE CHARGE
IC7 μPC4558C B-V AMP
IC8 μPC1498H B-V OUT
D7 V06C PULSE CHARGE
V DRIVE(B) TP4
DC-6
DC-7
DC-8
DC-9
V DY (G)
INV SENS
V DY (B)
D106 ERC88-009 -P VOLT GATE
Q7 DTC144ES V INV SW
Q10 2SC3421 CURRENT PROT
Q6 2SC2785 V PULSE BUFF
D1 V06C +12V REG PROT
IC1 μPC7812H +12V REG
IC9 μPC4558C V PULSE GEN
D2 V06C -12V REG PROT
IC2 μPC7912H -12V REG
DC-13
AD HD
A GND
V INV
FAN PROT
V STOP
V PULSE
TO DM BOARD DM-9
DC-1
+35V
+15.5V
A GND
-15.5V
-35V
TO DM BOARD DM-8
TP11
TP1 GND
L101 45μH
L102 45μH
L103 45μH
L104 45μH
15.5V
-15.5V
35V
-35V
12V
-12V

①



PAL 26 Vp-p(V)
SECAM 26 Vp-p(V)
NTSC3.58 26 Vp-p(V)
NTSC4.43 26 Vp-p(V)
S-VIDEO 26 Vp-p(V)
HDTV 26 Vp-p(V)

②



PAL 1.8 Vp-p(H)
SECAM 1.8 Vp-p(H)
NTSC3.58 1.8 Vp-p(H)
NTSC4.43 1.8 Vp-p(H)
S-VIDEO 1.8 Vp-p(H)

②



HDTV 2 Vp-p(H)

③



PAL 26 Vp-p(V)
SECAM 26 Vp-p(V)
NTSC3.58 26 Vp-p(V)
NTSC4.43 26 Vp-p(V)
S-VIDEO 26 Vp-p(V)
HDTV 26 Vp-p(V)

④



PAL 3 Vp-p(H)
SECAM 3 Vp-p(H)
NTSC3.58 3 Vp-p(H)
NTSC4.43 3 Vp-p(H)
S-VIDEO 3 Vp-p(H)

④



HDTV 1 Vp-p(H)

⑤



PAL 26 Vp-p(H)
SECAM 26 Vp-p(H)
NTSC3.58 26 Vp-p(H)
NTSC4.43 26 Vp-p(H)
S-VIDEO 26 Vp-p(H)
HDTV 26 Vp-p(H)

⑥



PAL 4.4 Vp-p(H)
SECAM 4.4 Vp-p(H)
NTSC3.58 4.4 Vp-p(H)
NTSC4.43 4.4 Vp-p(H)
S-VIDEO 4.4 Vp-p(H)

⑥



HDTV 3.4Vp-p(H)

⑦



PAL 12 Vp-p(V)
SECAM 12 Vp-p(V)
NTSC3.58 12 Vp-p(V)
NTSC4.43 12 Vp-p(V)
S-VIDEO 12 Vp-p(V)

⑦



HDTV 14 Vp-p(H)

⑧



PAL 0.8Vp-p(H)
SECAM 0.8Vp-p(H)
NTSC3.58 0.8Vp-p(H)
NTSC4.43 0.8Vp-p(H)
S-VIDEO 0.8Vp-p(H)
HDTV 0.8Vp-p(H)

⑨



PAL 1.1Vp-p(H)
SECAM 1.1Vp-p(H)
NTSC3.58 1.1Vp-p(H)
NTSC4.43 1.1Vp-p(H)
S-VIDEO 1.1Vp-p(H)

⑨



HDTV 2.0 Vp-p(H)

⑩



PAL 1.1Vp-p(V)
SECAM 1.1Vp-p(V)
NTSC3.58 1.1Vp-p(V)
NTSC4.43 1.1Vp-p(V)
S-VIDEO 1.1Vp-p(V)
HDTV 1.1Vp-p(V)

⑪



PAL 0.7 Vp-p(V)
SECAM 0.7 Vp-p(V)
NTSC3.58 0.7 Vp-p(V)
NTSC4.43 0.7 Vp-p(V)
S-VIDEO 0.7 Vp-p(V)

⑪



HDTV 1.3Vp-p(V)

⑬



PAL 1.5 Vp-p(H)
SECAM 1.5 Vp-p(H)
NTSC3.58 1.5 Vp-p(H)
NTSC4.43 1.5 Vp-p(H)
S-VIDEO 1.5 Vp-p(H)
HDTV 1.5 Vp-p(H)

⑬



PAL 1.3 Vp-p(V)
SECAM 1.3 Vp-p(V)
NTSC3.58 1.3 Vp-p(V)
NTSC4.43 1.3 Vp-p(V)
S-VIDEO 1.3 Vp-p(V)

⑬



HDTV 2 Vp-p(V)

⑭



PAL 6 Vp-p(V)
SECAM 6 Vp-p(V)
NTSC3.58 6 Vp-p(V)
NTSC4.43 6 Vp-p(V)
S-VIDEO 6 Vp-p(V)

⑭



HDTV 10 Vp-p(V)

⑮



PAL 2 Vp-p(V)
SECAM 2 Vp-p(V)
NTSC3.58 2 Vp-p(V)
NTSC4.43 2 Vp-p(V)
S-VIDEO 2 Vp-p(V)

⑮



HDTV 4 Vp-p(V)

⑯



PAL 16 Vp-p(V)
SECAM 16 Vp-p(V)
NTSC3.58 16 Vp-p(V)
NTSC4.43 16 Vp-p(V)
S-VIDEO 16 Vp-p(V)
HDTV 16 Vp-p(V)

⑰



PAL 1.4Vp-p(V)
SECAM 1.4Vp-p(V)
NTSC3.58 1.4Vp-p(V)
NTSC4.43 1.4Vp-p(V)
S-VIDEO 1.4Vp-p(V)

⑰



HDTV 3 Vp-p(V)

⑱



PAL 16Vp-p(V)
SECAM 16Vp-p(V)
NTSC3.58 16Vp-p(V)
NTSC4.43 16Vp-p(V)
S-VIDEO 16Vp-p(V)

⑱



HDTV 20Vp-p(V)

⑲



PAL 3.2Vp-p(V)
SECAM 3.2Vp-p(V)
NTSC3.58 3.2Vp-p(V)
NTSC4.43 3.2Vp-p(V)
S-VIDEO 3.2Vp-p(V)

⑲



HDTV 5.2 Vp-p(V)

⑳



PAL 24Vp-p(V)
SECAM 24Vp-p(V)
NTSC3.58 24Vp-p(V)
NTSC4.43 24Vp-p(V)
S-VIDEO 24Vp-p(V)
HDTV 24Vp-p(V)

㉑



PAL 11 Vp-p(H)
SECAM 11 Vp-p(H)
NTSC3.58 11 Vp-p(H)
NTSC4.43 11 Vp-p(H)
S-VIDEO 11 Vp-p(H)
HDTV 11 Vp-p(H)

㉒



PAL 11.5 Vp-p(H)
SECAM 11.5 Vp-p(H)
NTSC3.58 11.5 Vp-p(H)
NTSC4.43 11.5 Vp-p(H)
S-VIDEO 11.5 Vp-p(H)
HDTV 11.5 Vp-p(H)

㉓



PAL 44 Vp-p(V)
SECAM 44 Vp-p(V)
NTSC3.58 44 Vp-p(V)
NTSC4.43 44 Vp-p(V)
S-VIDEO 44 Vp-p(V)

㉓



HDTV 46Vp-p(V)

㉔



PAL 26Vp-p(V)
SECAM 26Vp-p(V)
NTSC3.58 26Vp-p(V)
NTSC4.43 26Vp-p(V)
S-VIDEO 26Vp-p(V)
HDTV 26Vp-p(V)

㉕



PAL 0.34Vp-p(V)
SECAM 0.34Vp-p(V)
NTSC3.58 0.34Vp-p(V)
NTSC4.43 0.34Vp-p(V)
S-VIDEO 0.34Vp-p(V)
HDTV 0.34Vp-p(V)

㉖



PAL 44 Vp-p(V)
SECAM 44 Vp-p(V)
NTSC3.58 44 Vp-p(V)
NTSC4.43 44 Vp-p(V)
S-VIDEO 44 Vp-p(V)
HDTV 44 Vp-p(V)

㉗



PAL 26 Vp-p(V)
SECAM 26 Vp-p(V)
NTSC3.58 26 Vp-p(V)
NTSC4.43 26 Vp-p(V)
S-VIDEO 26 Vp-p(V)
HDTV 26 Vp-p(V)

㉘



PAL 44 Vp-p(V)
SECAM 44 Vp-p(V)
NTSC3.58 44 Vp-p(V)
NTSC4.43 44 Vp-p(V)
S-VIDEO 44 Vp-p(V)
HDTV 44 Vp-p(V)

㉙



PAL 26 Vp-p(V)
SECAM 26 Vp-p(V)
NTSC3.58 26 Vp-p(V)
NTSC4.43 26 Vp-p(V)
S-VIDEO 26 Vp-p(V)
HDTV 26 Vp-p(V)

DC [V OUT, SUB OUT]

DC BOARD

IC	
IC1	F - 5
IC2	G - 5
IC3	I - 2
IC4	I - 4
IC5	G - 2
IC6	G - 4
IC7	E - 2
IC8	D - 4
IC9	D - 3
IC101	E - 8
IC102	E - 10
IC103	E - 12
IC201	D - 7
IC202	D - 10
IC203	C - 12
IC301	G - 8
IC302	G - 9
IC303	G - 12

TRANSISTOR	
Q1	I - 1
Q2	G - 1
Q3	F - 2
Q4	C - 2
Q5	D - 2
Q6	D - 2
Q7	H - 2
Q8	F - 1
Q9	B - 2
Q10	G - 4
Q11	I - 13
Q12	B - 12
Q13	G - 13
Q14	D - 13
Q101	B - 2
Q102	A - 1
Q103	A - 2
Q104	A - 2
Q105	A - 2
Q106	B - 2
Q107	B - 2
Q108	A - 3
Q201	B - 8
Q202	B - 7
Q203	A - 6
Q204	A - 5
Q205	B - 10
Q206	B - 9
Q207	A - 9
Q208	A - 7
Q209	B - 12
Q210	B - 11
Q211	A - 11
Q212	A - 10
Q301	I - 8
Q302	I - 7
Q303	J - 6
Q304	J - 5
Q305	I - 10
Q306	I - 9
Q307	J - 9
Q308	J - 8
Q309	I - 13
Q310	I - 12
Q311	J - 11
Q312	J - 10

DIODE	
D1	F - 5
D2	G - 5
D3	I - 3
D4	I - 2
D5	F - 3
D6	G - 2
D7	D - 3
D8	F - 2
D9	D - 2
D10	D - 3
D11	F - 1
D12	C - 2
D13	I - 13
D14	B - 12
D15	B - 2
D16	E - 2
D101	A - 2
D102	A - 3
D103	B - 3
D104	A - 4
D105	A - 4
D106	C - 4
D201	D - 7
D202	C - 8
D203	A - 7
D204	A - 7
D205	B - 10
D206	C - 10
D207	A - 9
D208	A - 9
D209	B - 13
D210	C - 13
D211	B - 11
D212	B - 11
D301	H - 8
D302	H - 8
D303	I - 6
D304	I - 6
D305	H - 9
D306	H - 10
D307	I - 9
D308	I - 8
D309	H - 12
D310	I - 12
D311	I - 11
D312	I - 10

5
5
3
2
3
2
3
2
2
3
1
2
13
12
2
2
2
3
3
4
4
4
7
8
7
7
10
10
9
9
13
13
11
11
8
8
6
6
9
10
9
8
12
12
11
10

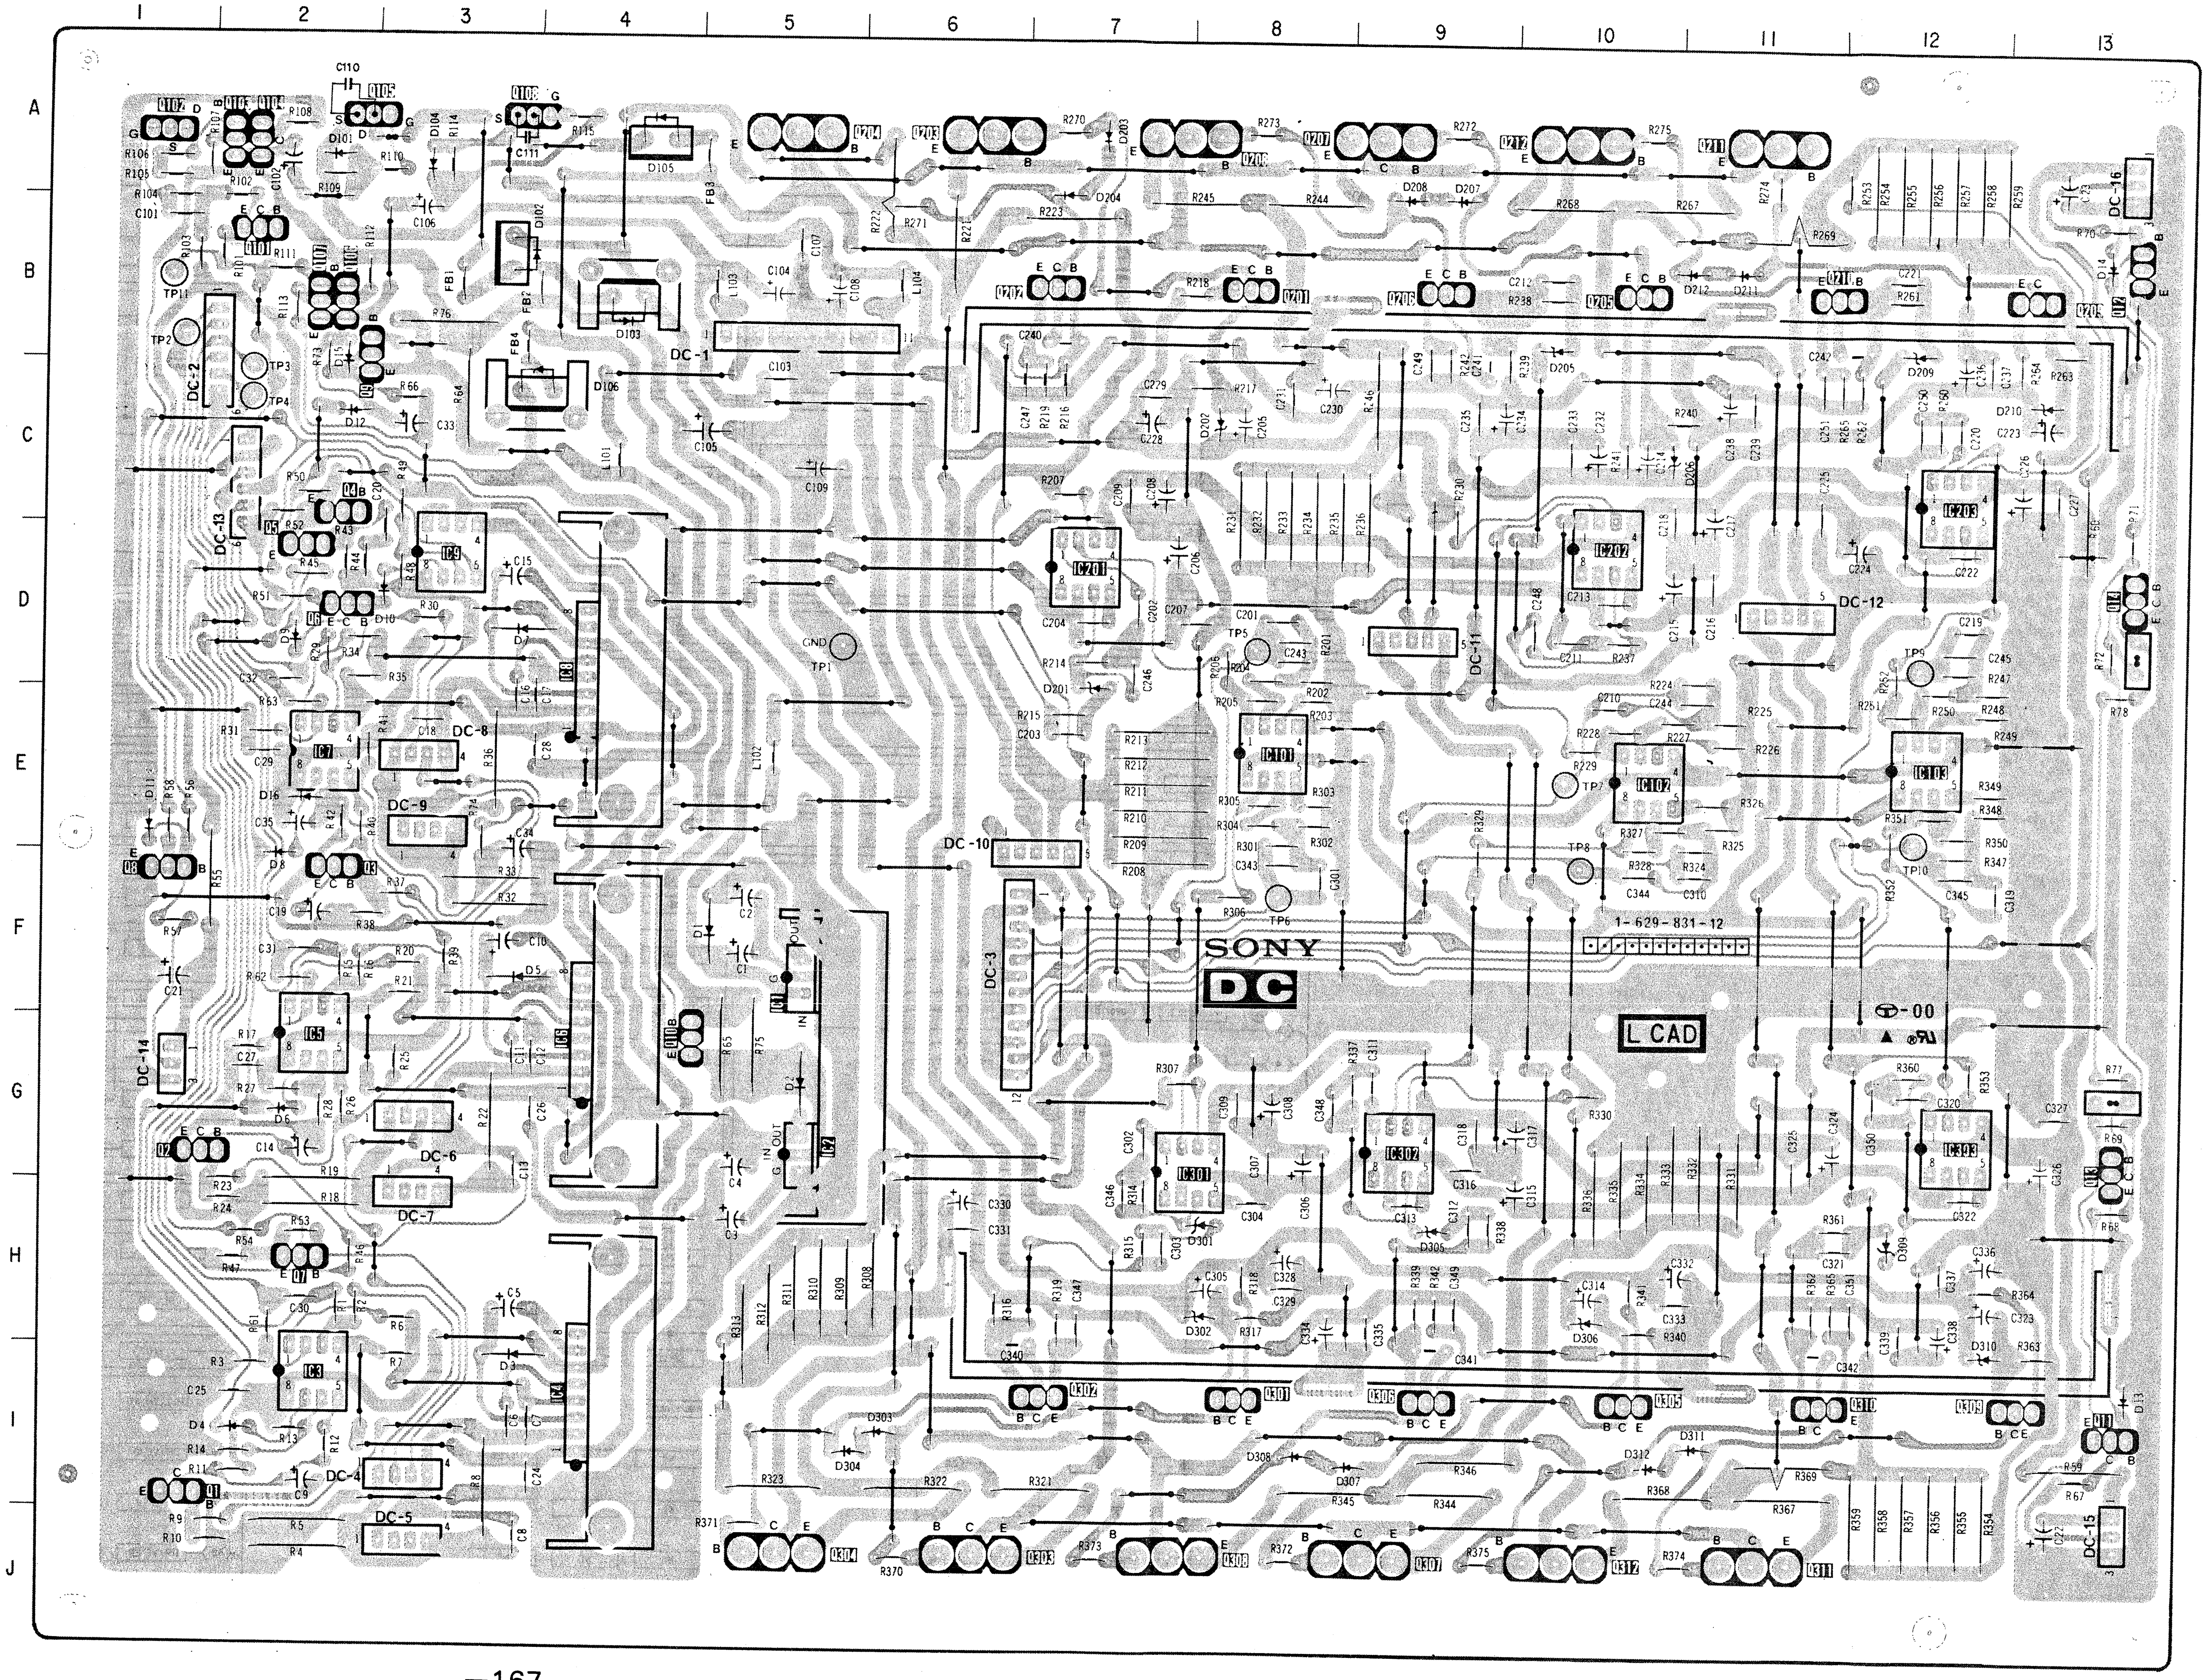
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
SONY
DC
L CAD
1-629-831-12
DC-1
DC-2
DC-3
DC-4
DC-5
DC-6
DC-7
DC-8
DC-9
DC-10
DC-11
DC-12
DC-13
DC-14
DC-15
DC-16
IC1
IC2
IC3
IC4
IC5
IC6
IC7
IC8
IC9
IC101
IC102
IC103
IC201
IC202
IC203
IC301
IC302
IC303
GND TP1
TP2
TP3
TP4
TP5
TP6
TP7
TP8
TP9
TP10
TP11

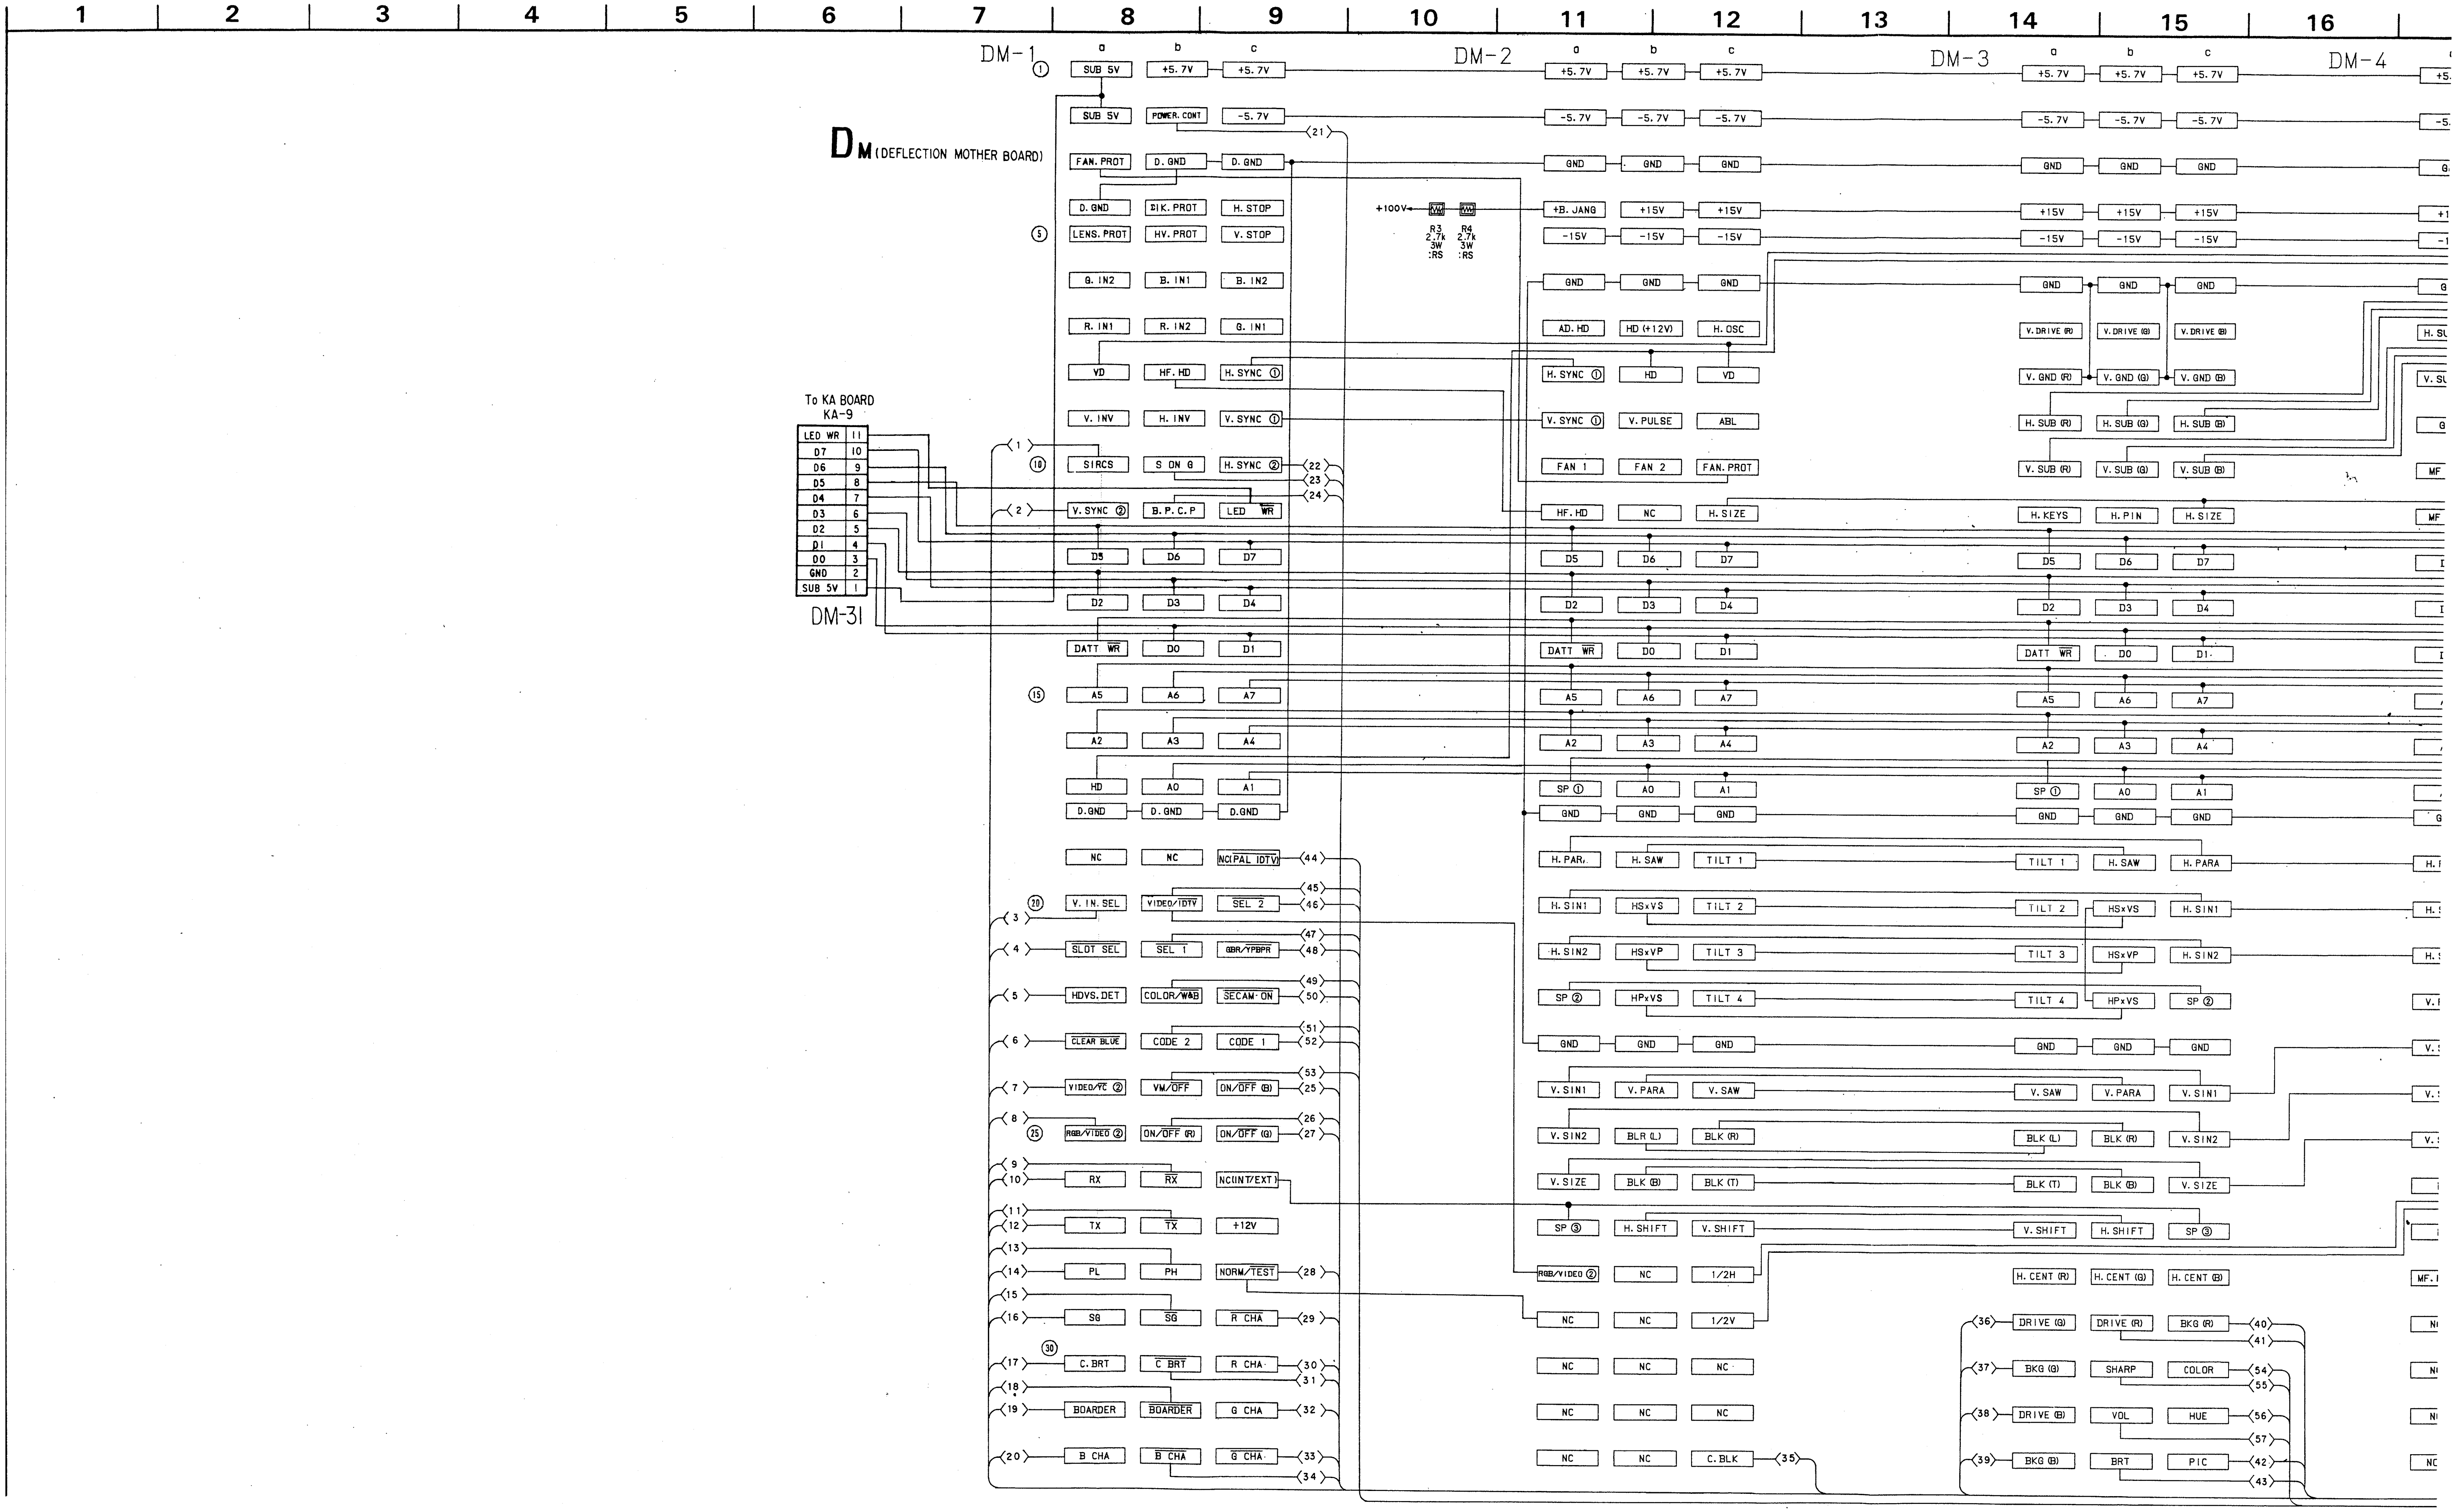
DM (DEFLECTION MOTHER BOARD)
DM-1
DM-2
DM-3
DM-4
To KA BOARD
KA-9
DM-31
LED WR
D7
D6
D5
D4
D3
D2
D1
D0
GND
SUB 5V
+100V
R3
2.7k
3W
:RS
R4
2.7k
3W
:RS

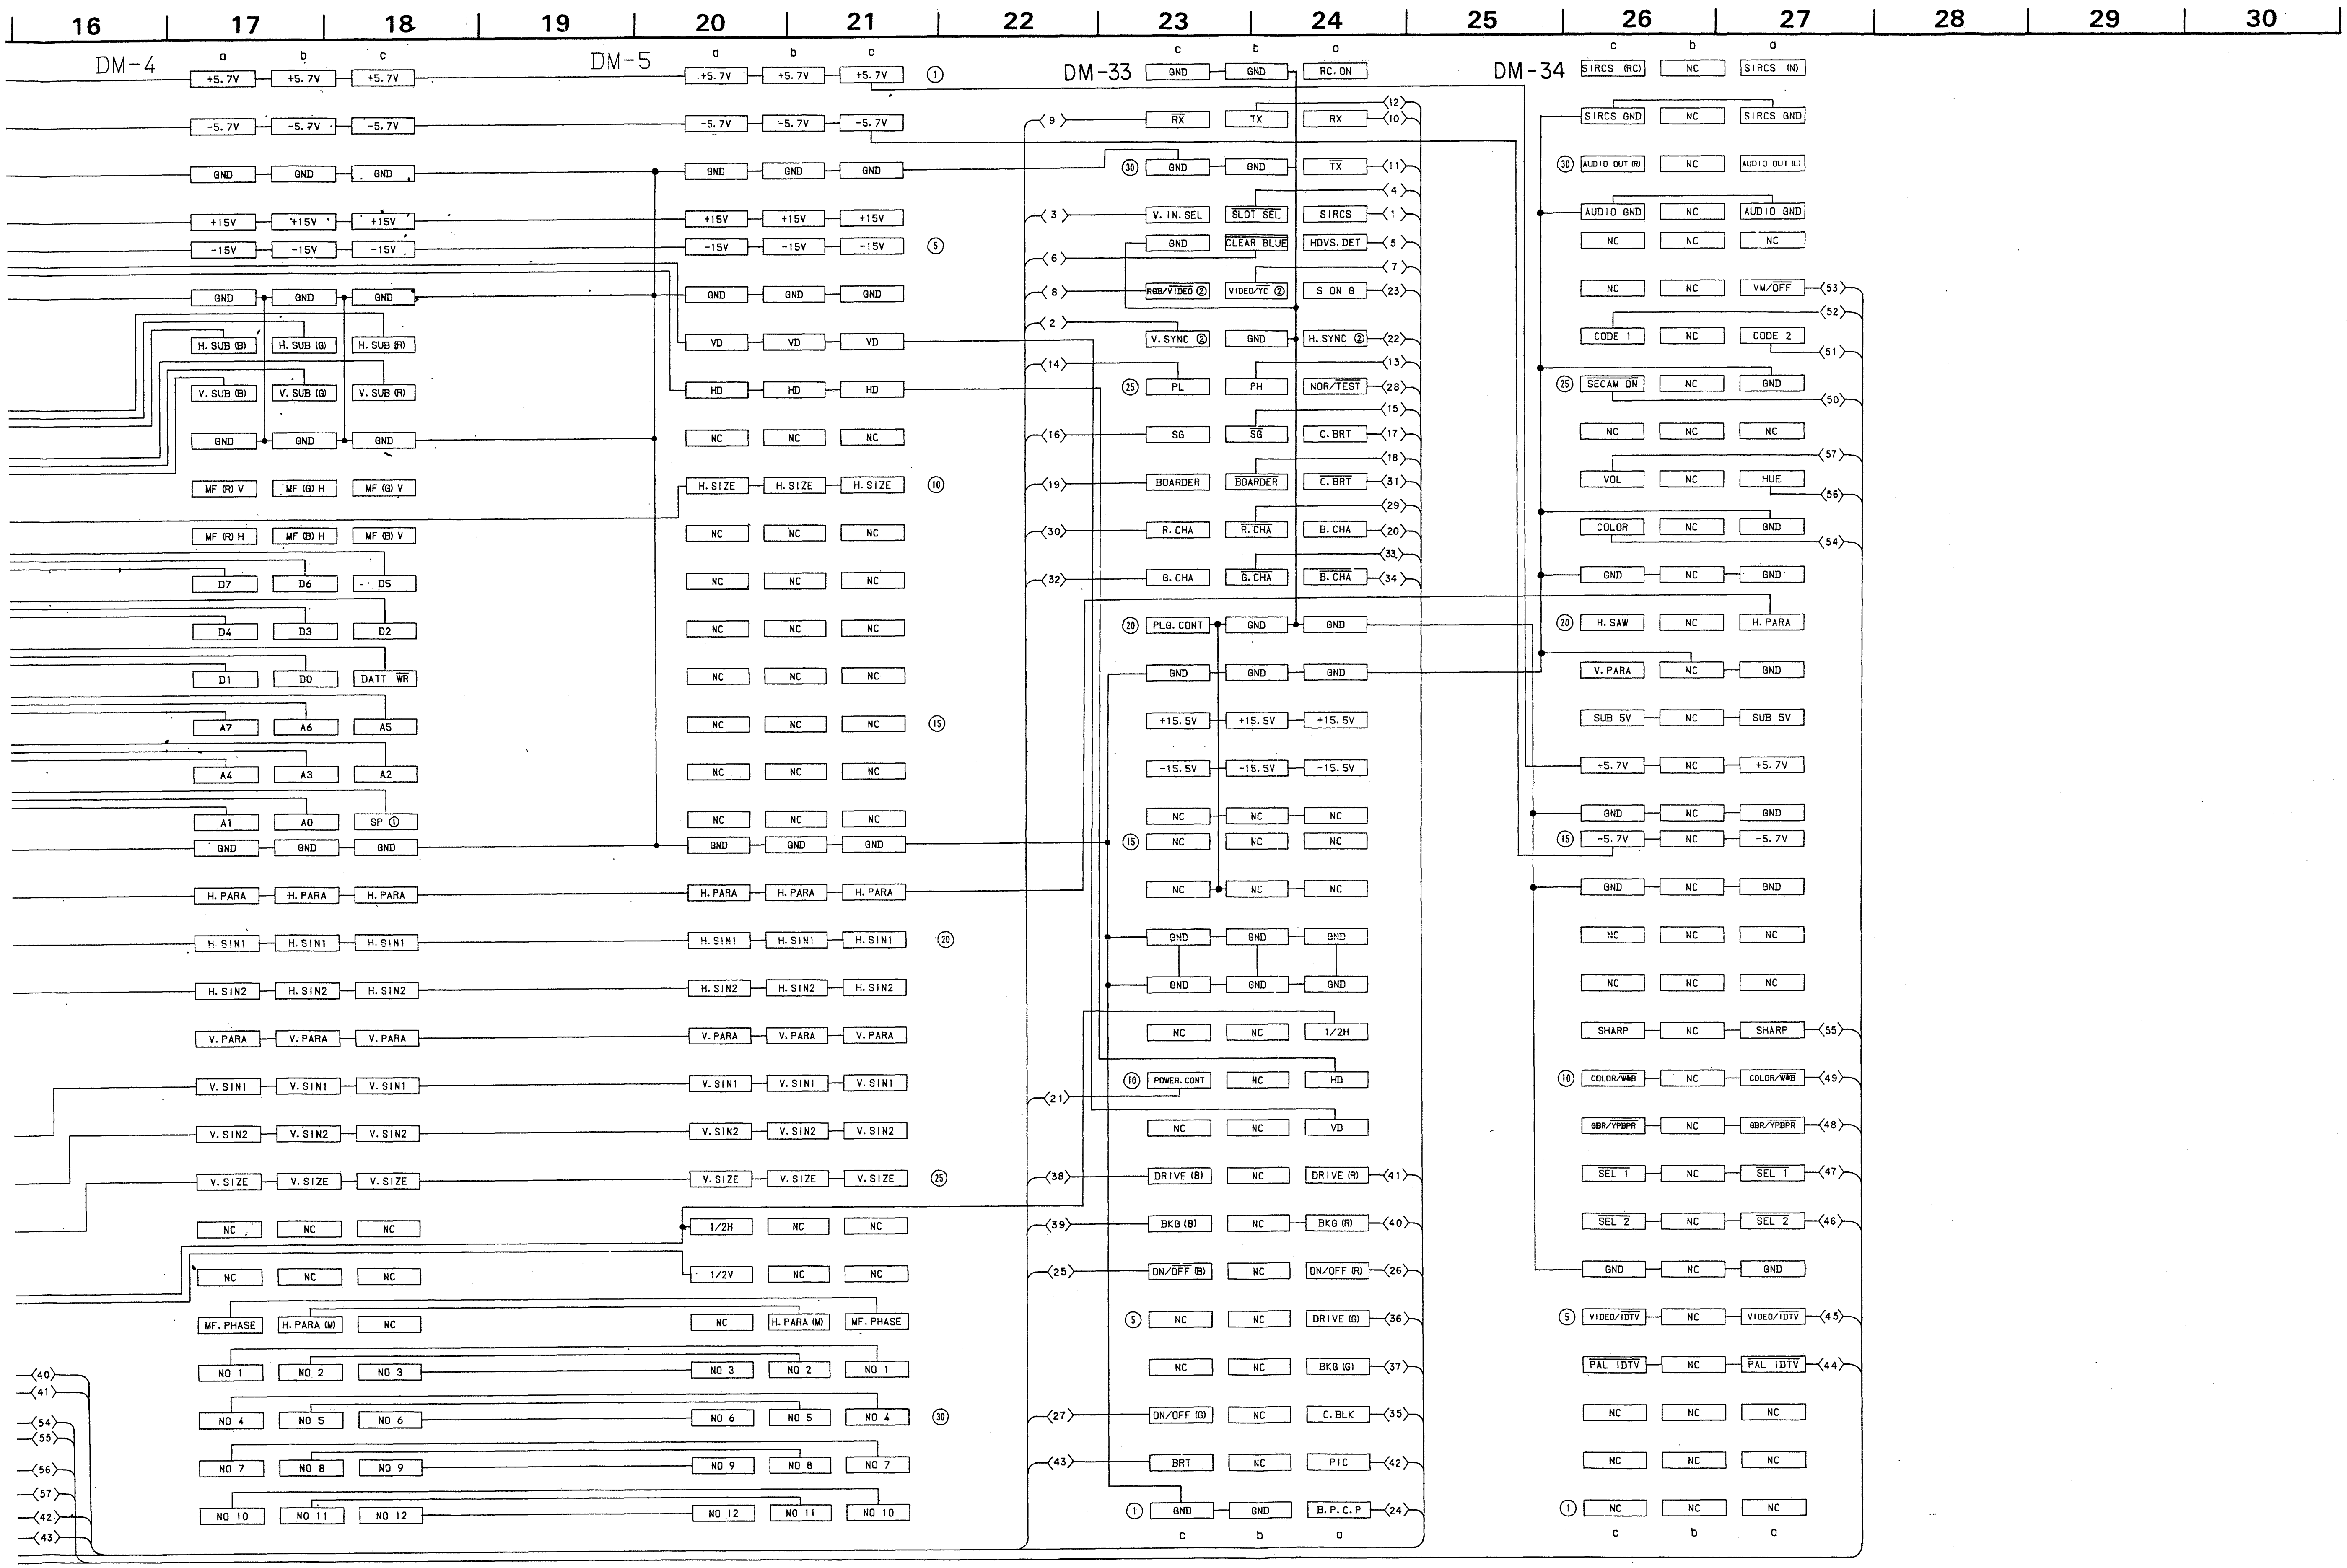
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
DM-4
a b c
+5.7V +5.7V +5.7V
-5.7V -5.7V -5.7V
GND GND GND
+15V +15V +15V
-15V -15V -15V
GND GND GND
H.SUB (B) H.SUB (G) H.SUB (R)
V.SUB (B) V.SUB (G) V.SUB (R)
GND GND GND
MF (R) V MF (G) H MF (G) V
MF (R) H MF (B) H MF (B) V
D7 D6 D5
D4 D3 D2
D1 D0 DATT WR
A7 A6 A5
A4 A3 A2
A1 A0 SP ①
GND GND GND
H.PARA H.PARA H.PARA
H.SIN1 H.SIN1 H.SIN1
H.SIN2 H.SIN2 H.SIN2
V.PARA V.PARA V.PARA
V.SIN1 V.SIN1 V.SIN1
V.SIN2 V.SIN2 V.SIN2
V.SIZE V.SIZE V.SIZE
NC NC NC
NC NC NC
MF.PHASE H.PARA (M) NC
NO 1 NO 2 NO 3
NO 4 NO 5 NO 6
NO 7 NO 8 NO 9
NO 10 NO 11 NO 12
(40) (41) (54) (55) (56) (57) (42) (43)
DM-5
a b c
+5.7V +5.7V +5.7V ①
-5.7V -5.7V -5.7V
GND GND GND
+15V +15V +15V
-15V -15V -15V ⑤
GND GND GND
VD VD VD
HD HD HD
NC NC NC
H.SIZE H.SIZE H.SIZE ⑩
NC NC NC
NC NC NC
NC NC NC
NC NC NC
NC NC NC ⑮
NC NC NC
NC NC NC
GND GND GND
H.PARA H.PARA H.PARA
H.SIN1 H.SIN1 H.SIN1 ⑳
H.SIN2 H.SIN2 H.SIN2
V.PARA V.PARA V.PARA
V.SIN1 V.SIN1 V.SIN1
V.SIN2 V.SIN2 V.SIN2
V.SIZE V.SIZE V.SIZE ㉕
1/2H NC NC
1/2V NC NC
NC H.PARA (M) MF.PHASE
NO 3 NO 2 NO 1
NO 6 NO 5 NO 4 ㉚
NO 9 NO 8 NO 7
NO 12 NO 11 NO 10
DM-33
c b a
GND GND RC.ON (12)
(9) RX TX RX (10)
㉚ GND GND TX (11)
(4)
(3) V.IN.SEL SLOT SEL SIRCS (1)
GND CLEAR BLUE HDVS.DET (5)
(6) (7)
(8) RGB/VIDEO ② VIDEO/YC ② S ON G (23)
(2) V.SYNC ② GND H.SYNC ② (22)
(14) (13)
㉕ PL PH NOR/TEST (28)
(15)
(16) SG SG C.BRT (17)
(18)
(19) BOARDER BOARDER C.BRT (31)
(29)
(30) R.CHA R.CHA B.CHA (20)
(33)
(32) G.CHA G.CHA B.CHA (34)
⑳ PLG.CONT GND GND
GND GND GND
+15.5V +15.5V +15.5V
-15.5V -15.5V -15.5V
NC NC NC
⑮ NC NC NC
NC NC NC
GND GND GND
GND GND GND
NC NC 1/2H
⑩ POWER.CONT NC HD
(21) NC NC VD
(38) DRIVE (B) NC DRIVE (R) (41)
(39) BKG (B) NC BKG (R) (40)
(25) ON/OFF (B) NC ON/OFF (R) (26)
⑤ NC NC DRIVE (G) (36)
NC NC BKG (G) (37)
(27) ON/OFF (G) NC C.BLK (35)
(43) BRT NC PIC (42)
① GND GND B.P.C.P (24)
c b a
DM-34
c b a
SIRCS (RC) NC SIRCS (IN)
SIRCS GND NC SIRCS GND
㉚ AUDIO OUT (R) NC AUDIO OUT (L)
AUDIO GND NC AUDIO GND
NC NC NC
NC NC VM/OFF (53)
(52)
CODE 1 NC CODE 2 (51)
㉕ SECAM ON NC GND
(50)
NC NC NC
(57)
VOL NC HUE (56)
COLOR NC GND (54)
GND NC GND
⑳ H.SAW NC H.PARA
V.PARA NC GND
SUB 5V NC SUB 5V
+5.7V NC +5.7V
GND NC GND
⑮ -5.7V NC -5.7V
GND NC GND
NC NC NC
NC NC NC
SHARP NC SHARP (55)
⑩ COLOR/W/B NC COLOR/W/B (49)
GBR/YPBPR NC GBR/YPBPR (48)
SEL 1 NC SEL 1 (47)
SEL 2 NC SEL 2 (46)
GND NC GND
⑤ VIDEO/IDTV NC VIDEO/IDTV (45)
PAL IDTV NC PAL IDTV (44)
NC NC NC
NC NC NC
① NC NC NC
c b a

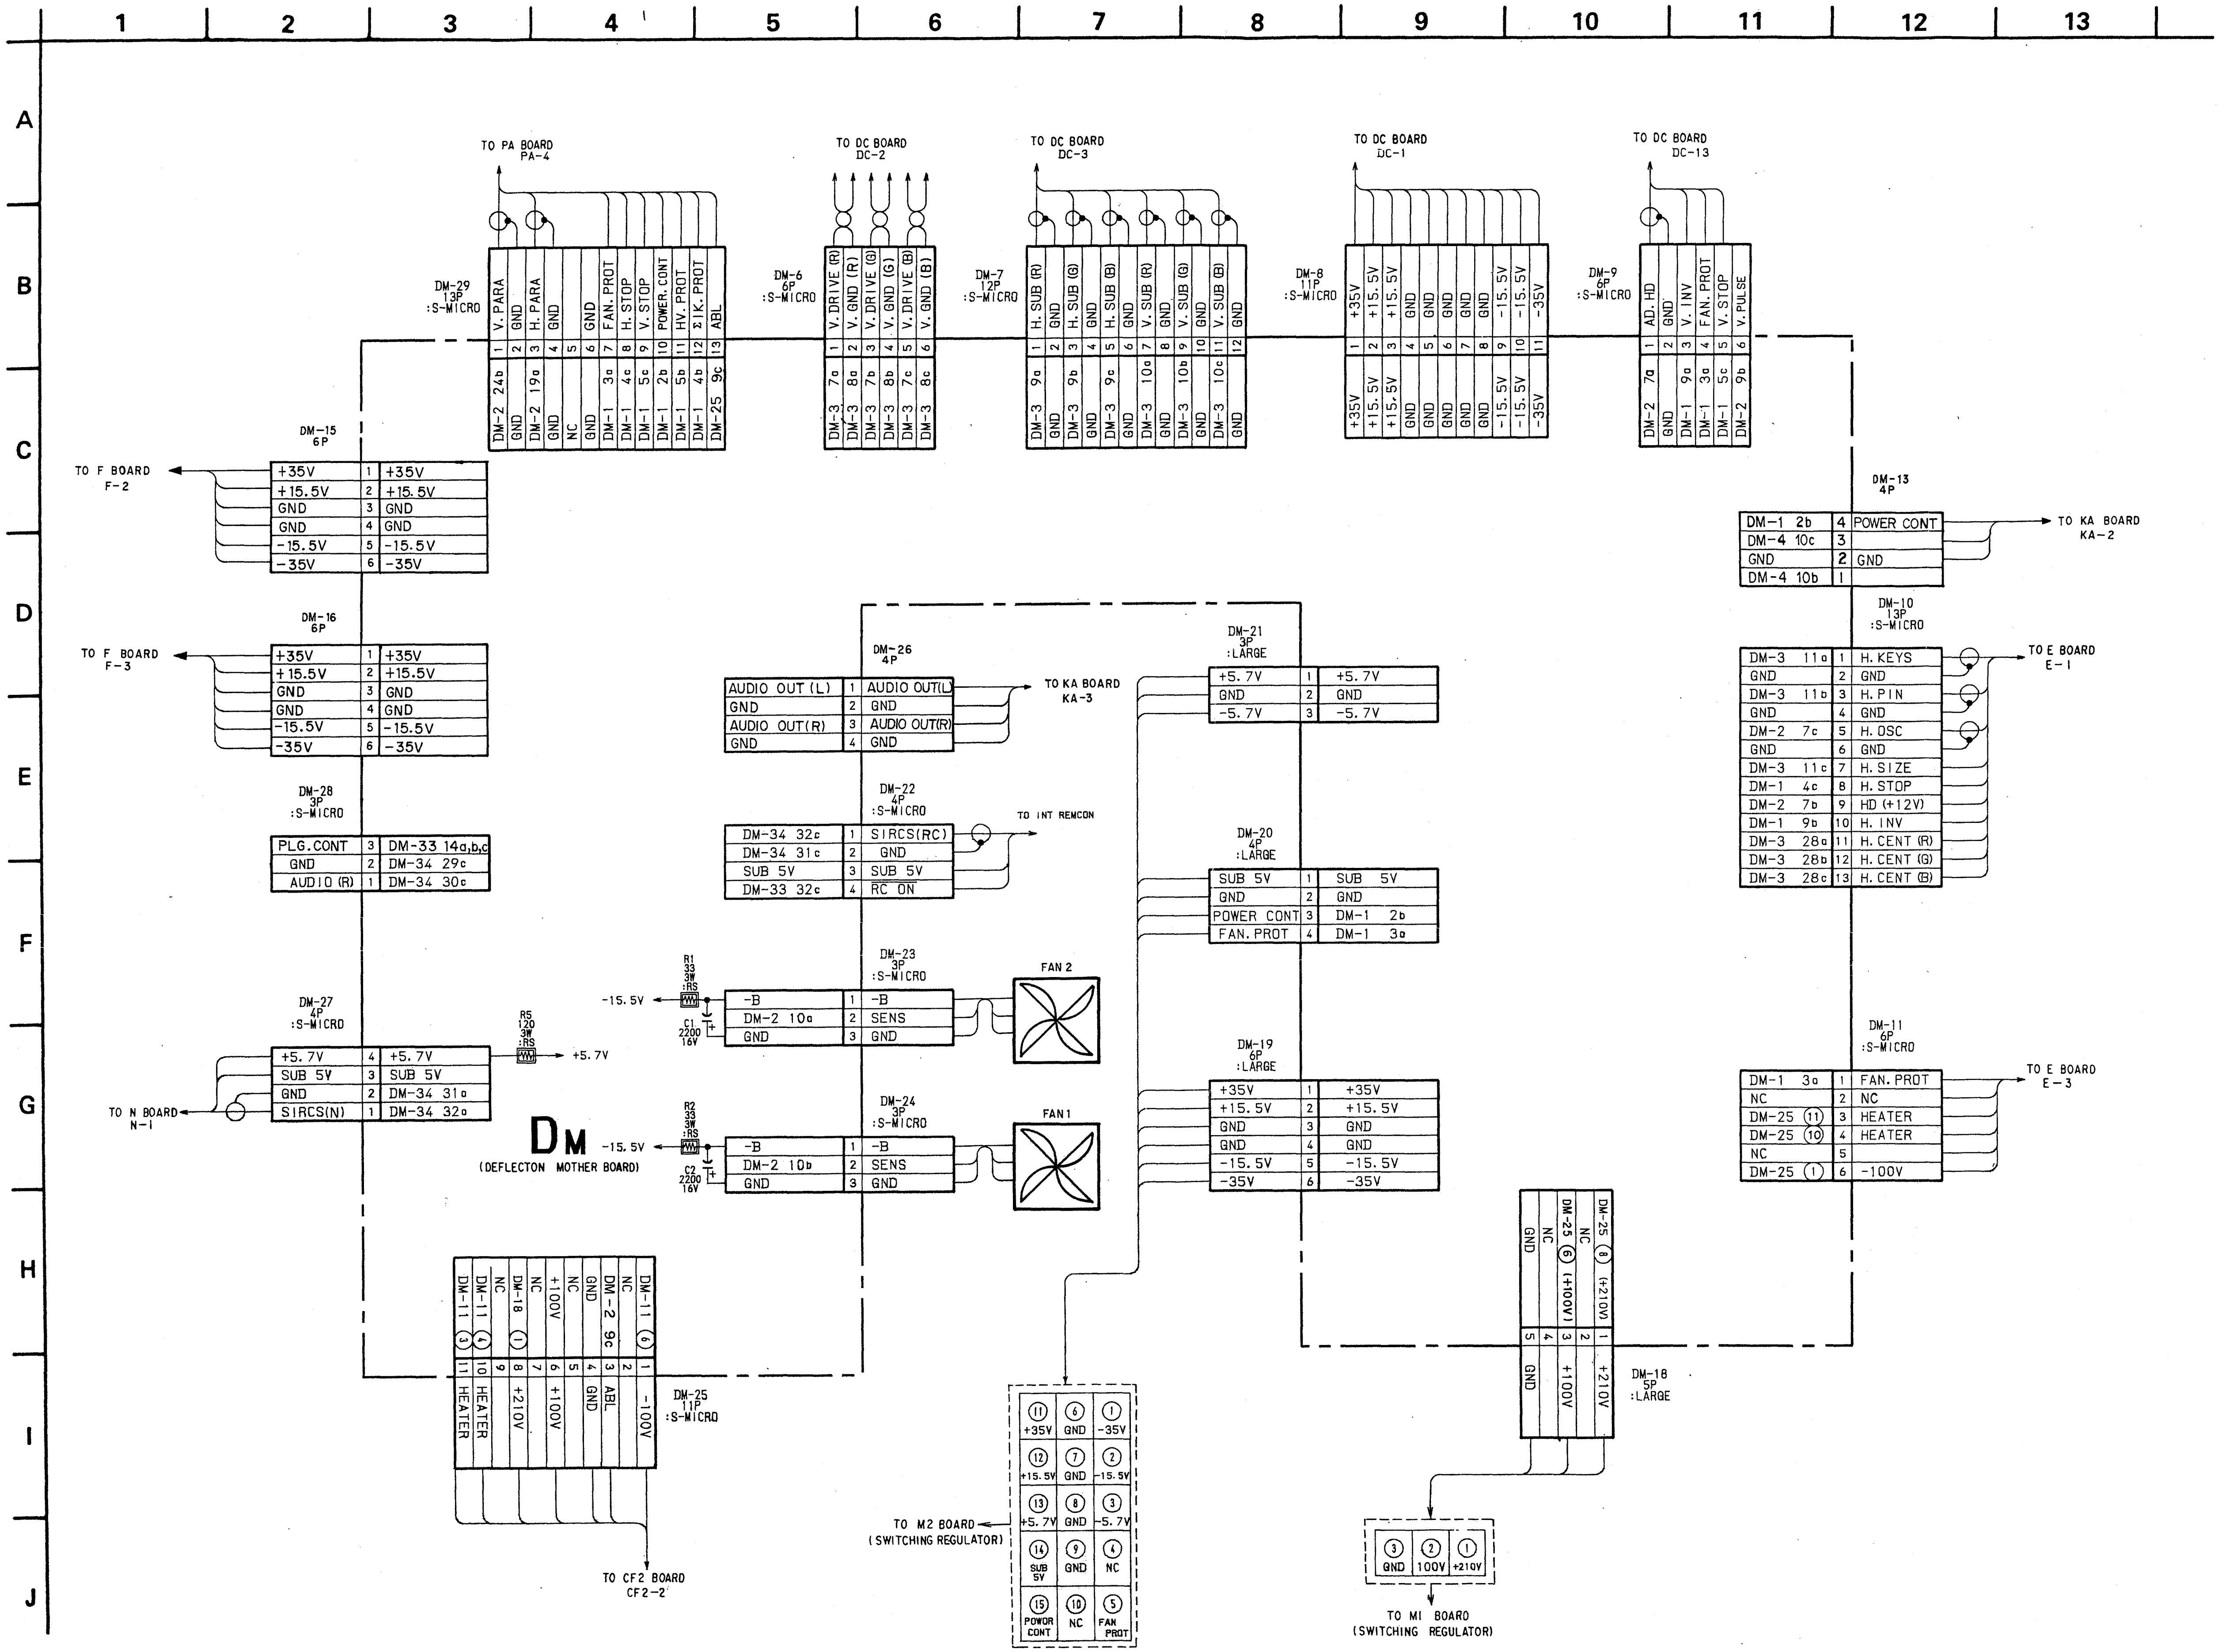
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
TO PA BOARD PA-4
DM-29 13P :S-MICRO
V.PARA
GND
H.PARA
GND
GND
FAN.PROT
H.STOP
V.STOP
POWER.CONT
HV.PROT
ΣIK.PROT
ABL
DM-2 24b
GND
DM-2 19a
GND
NC
GND
DM-1 3a
DM-1 4c
DM-1 5c
DM-1 2b
DM-1 5b
DM-1 4b
DM-25 9c
TO DC BOARD DC-2
DM-6 6P :S-MICRO
V.DRIVE (R)
V.GND (R)
V.DRIVE (G)
V.GND (G)
V.DRIVE (B)
V.GND (B)
DM-3 7a
DM-3 8a
DM-3 7b
DM-3 8b
DM-3 7c
DM-3 8c
TO DC BOARD DC-3
DM-7 12P :S-MICRO
H.SUB (R)
GND
H.SUB (G)
GND
H.SUB (B)
GND
V.SUB (R)
GND
V.SUB (G)
GND
V.SUB (B)
GND
DM-3 9a
DM-3 9b
DM-3 9c
DM-3 10a
DM-3 10b
DM-3 10c
TO DC BOARD DC-1
DM-8 11P :S-MICRO
+35V
+15.5V
+15.5V
GND
GND
GND
GND
GND
-15.5V
-15.5V
-35V
TO DC BOARD DC-13
DM-9 6P :S-MICRO
AD.HD
GND
V.INV
FAN.PROT
V.STOP
V.PULSE
DM-2 7a
GND
DM-1 9a
DM-1 3a
DM-1 5c
DM-2 9b
TO F BOARD F-2
DM-15 6P
+35V
+15.5V
GND
GND
-15.5V
-35V
TO F BOARD F-3
DM-16 6P
DM-28 3P :S-MICRO
PLG.CONT
GND
AUDIO (R)
DM-33 14a,b,c
DM-34 29c
DM-34 30c
DM-27 4P :S-MICRO
TO N BOARD N-1
+5.7V
SUB 5V
GND
SIRCS(N)
DM-34 31a
DM-34 32a
R5 120 3W :RS
+5.7V
DM
(DEFLECTON MOTHER BOARD)
DM-26 4P
AUDIO OUT(L)
GND
AUDIO OUT(R)
TO KA BOARD KA-3
DM-22 4P :S-MICRO
DM-34 32c
DM-34 31c
SUB 5V
DM-33 32c
SIRCS(RC)
RC ON
TO INT REMCON
DM-23 3P :S-MICRO
R1 33 3W :RS
-15.5V
C1 2200 16V
-B
DM-2 10a
SENS
FAN 2
DM-24 3P :S-MICRO
R2 33 3W :RS
C2 2200 16V
DM-2 10b
FAN1
DM-25 11P :S-MICRO
DM-1 6
NC
DM-2 9c
GND
NC
NC
DM-18 1
NC
DM-11 4
DM-11 3
-100V
ABL
+100V
+210V
HEATER
TO CF2 BOARD CF2-2
DM-21 3P :LARGE
+5.7V
-5.7V
DM-20 4P :LARGE
POWER CONT
FAN.PROT
DM-1 2b
DM-1 3a
DM-19 6P :LARGE
TO M2 BOARD (SWITCHING REGULATOR)
11 +35V
6 GND
1 -35V
12 +15.5V
7 GND
2 -15.5V
13 +5.7V
8 GND
3 -5.7V
14 SUB 5V
9 GND
4 NC
15 POWOR CONT
10 NC
5 FAN PROT
DM-18 5P :LARGE
DM-25 8 (+210V)
DM-25 6 (+100V)
TO MI BOARD (SWITCHING REGULATOR)
3 GND
2 100V
1 +210V
DM-13 4P
DM-1 2b
DM-4 10c
DM-4 10b
POWER CONT
TO KA BOARD KA-2
DM-10 13P :S-MICRO
TO E BOARD E-1
DM-3 11a
DM-3 11b
DM-2 7c
DM-3 11c
DM-1 4c
DM-2 7b
DM-1 9b
DM-3 28a
DM-3 28b
DM-3 28c
H.KEYS
H.PIN
H.OSC
H.SIZE
H.STOP
HD (+12V)
H.INV
H.CENT (R)
H.CENT (G)
H.CENT (B)
DM-11 6P :S-MICRO
TO E BOARD E-3
DM-1 3a
DM-25 11
DM-25 10
DM-25 1
FAN.PROT
HEATER
-100V

– DM BOARD –

DM [DEFLECTION MOTHER BOARD]

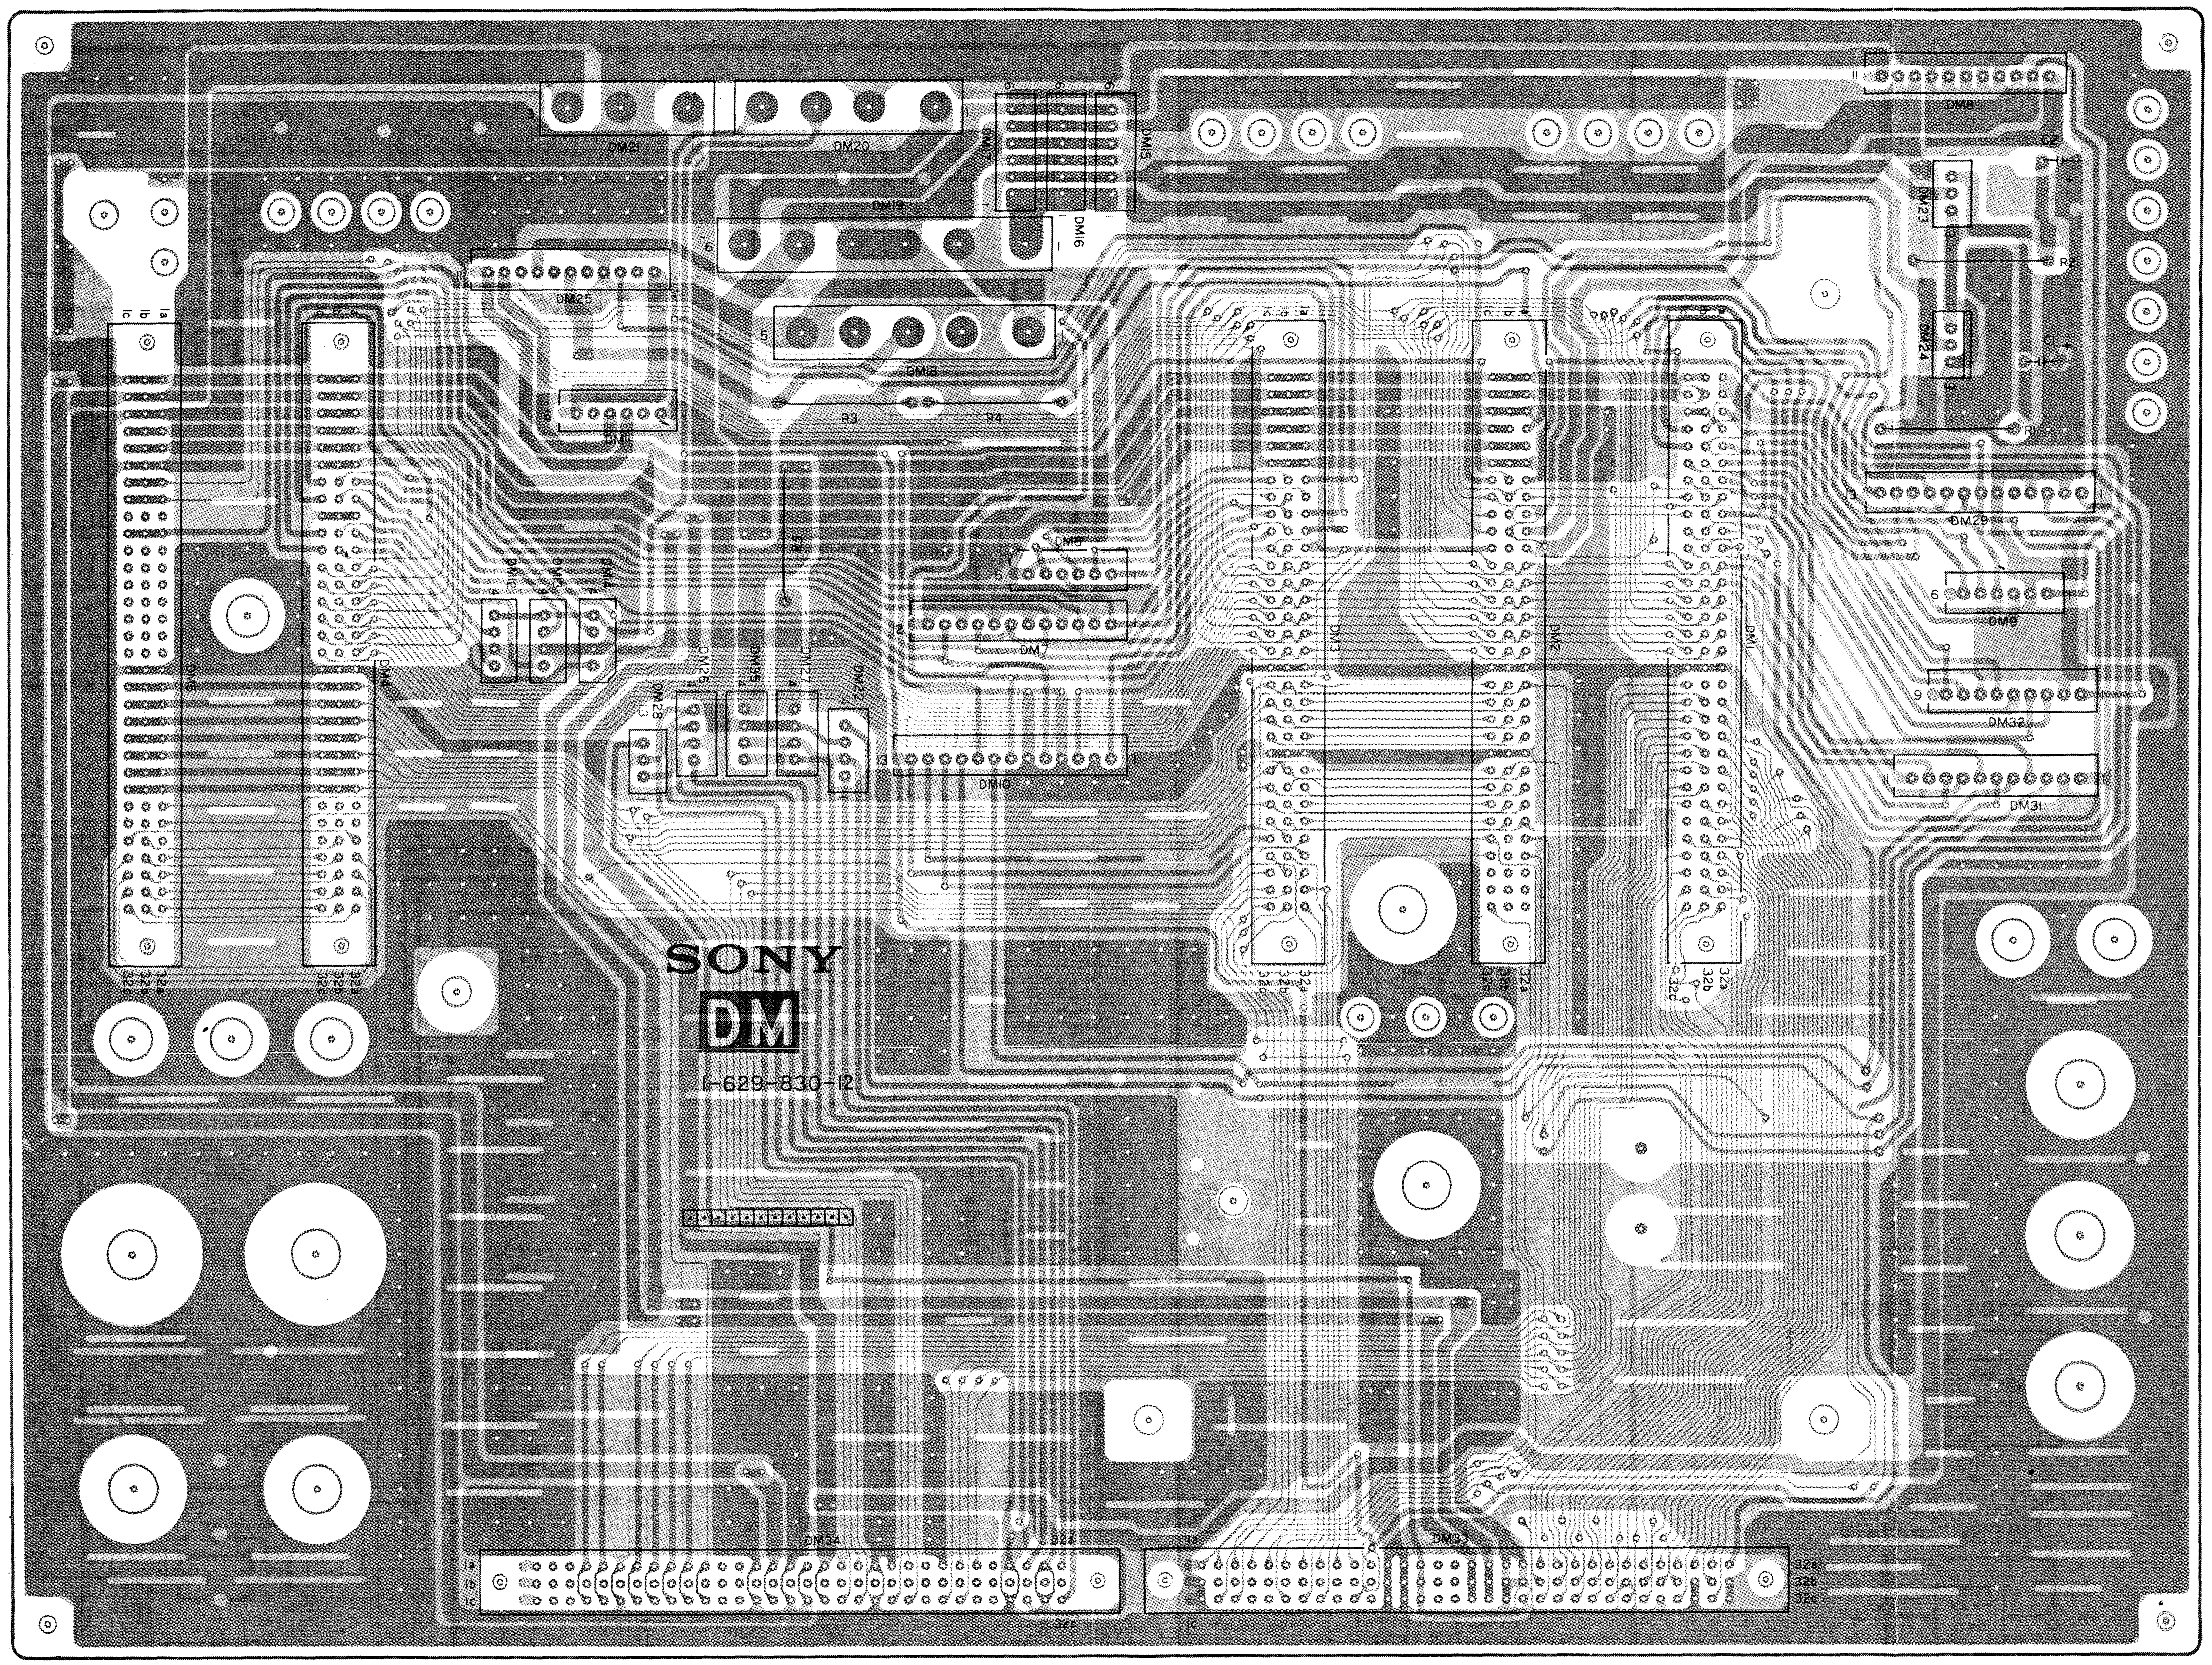
DM21
DM20
DM17
DM15
DM16
DM19
DM8
DM23
DM24
DM25
DM18
DM11
R3
R4
R1
R2
C1
C2
DM29
DM6
DM9
DM7
DM12
DM13
DM14
DM26
DM28
DM35
DM27
DM22
DM10
DM5
DM4
DM3
DM2
DM1
DM32
DM31
DM34
DM33
SONY
DM
1-629-830-12
1a
1b
1c
32a
32b
32c

• ▨ : Pattern from the side which enables seeing.
• ▧ : Pattern of the rear side.

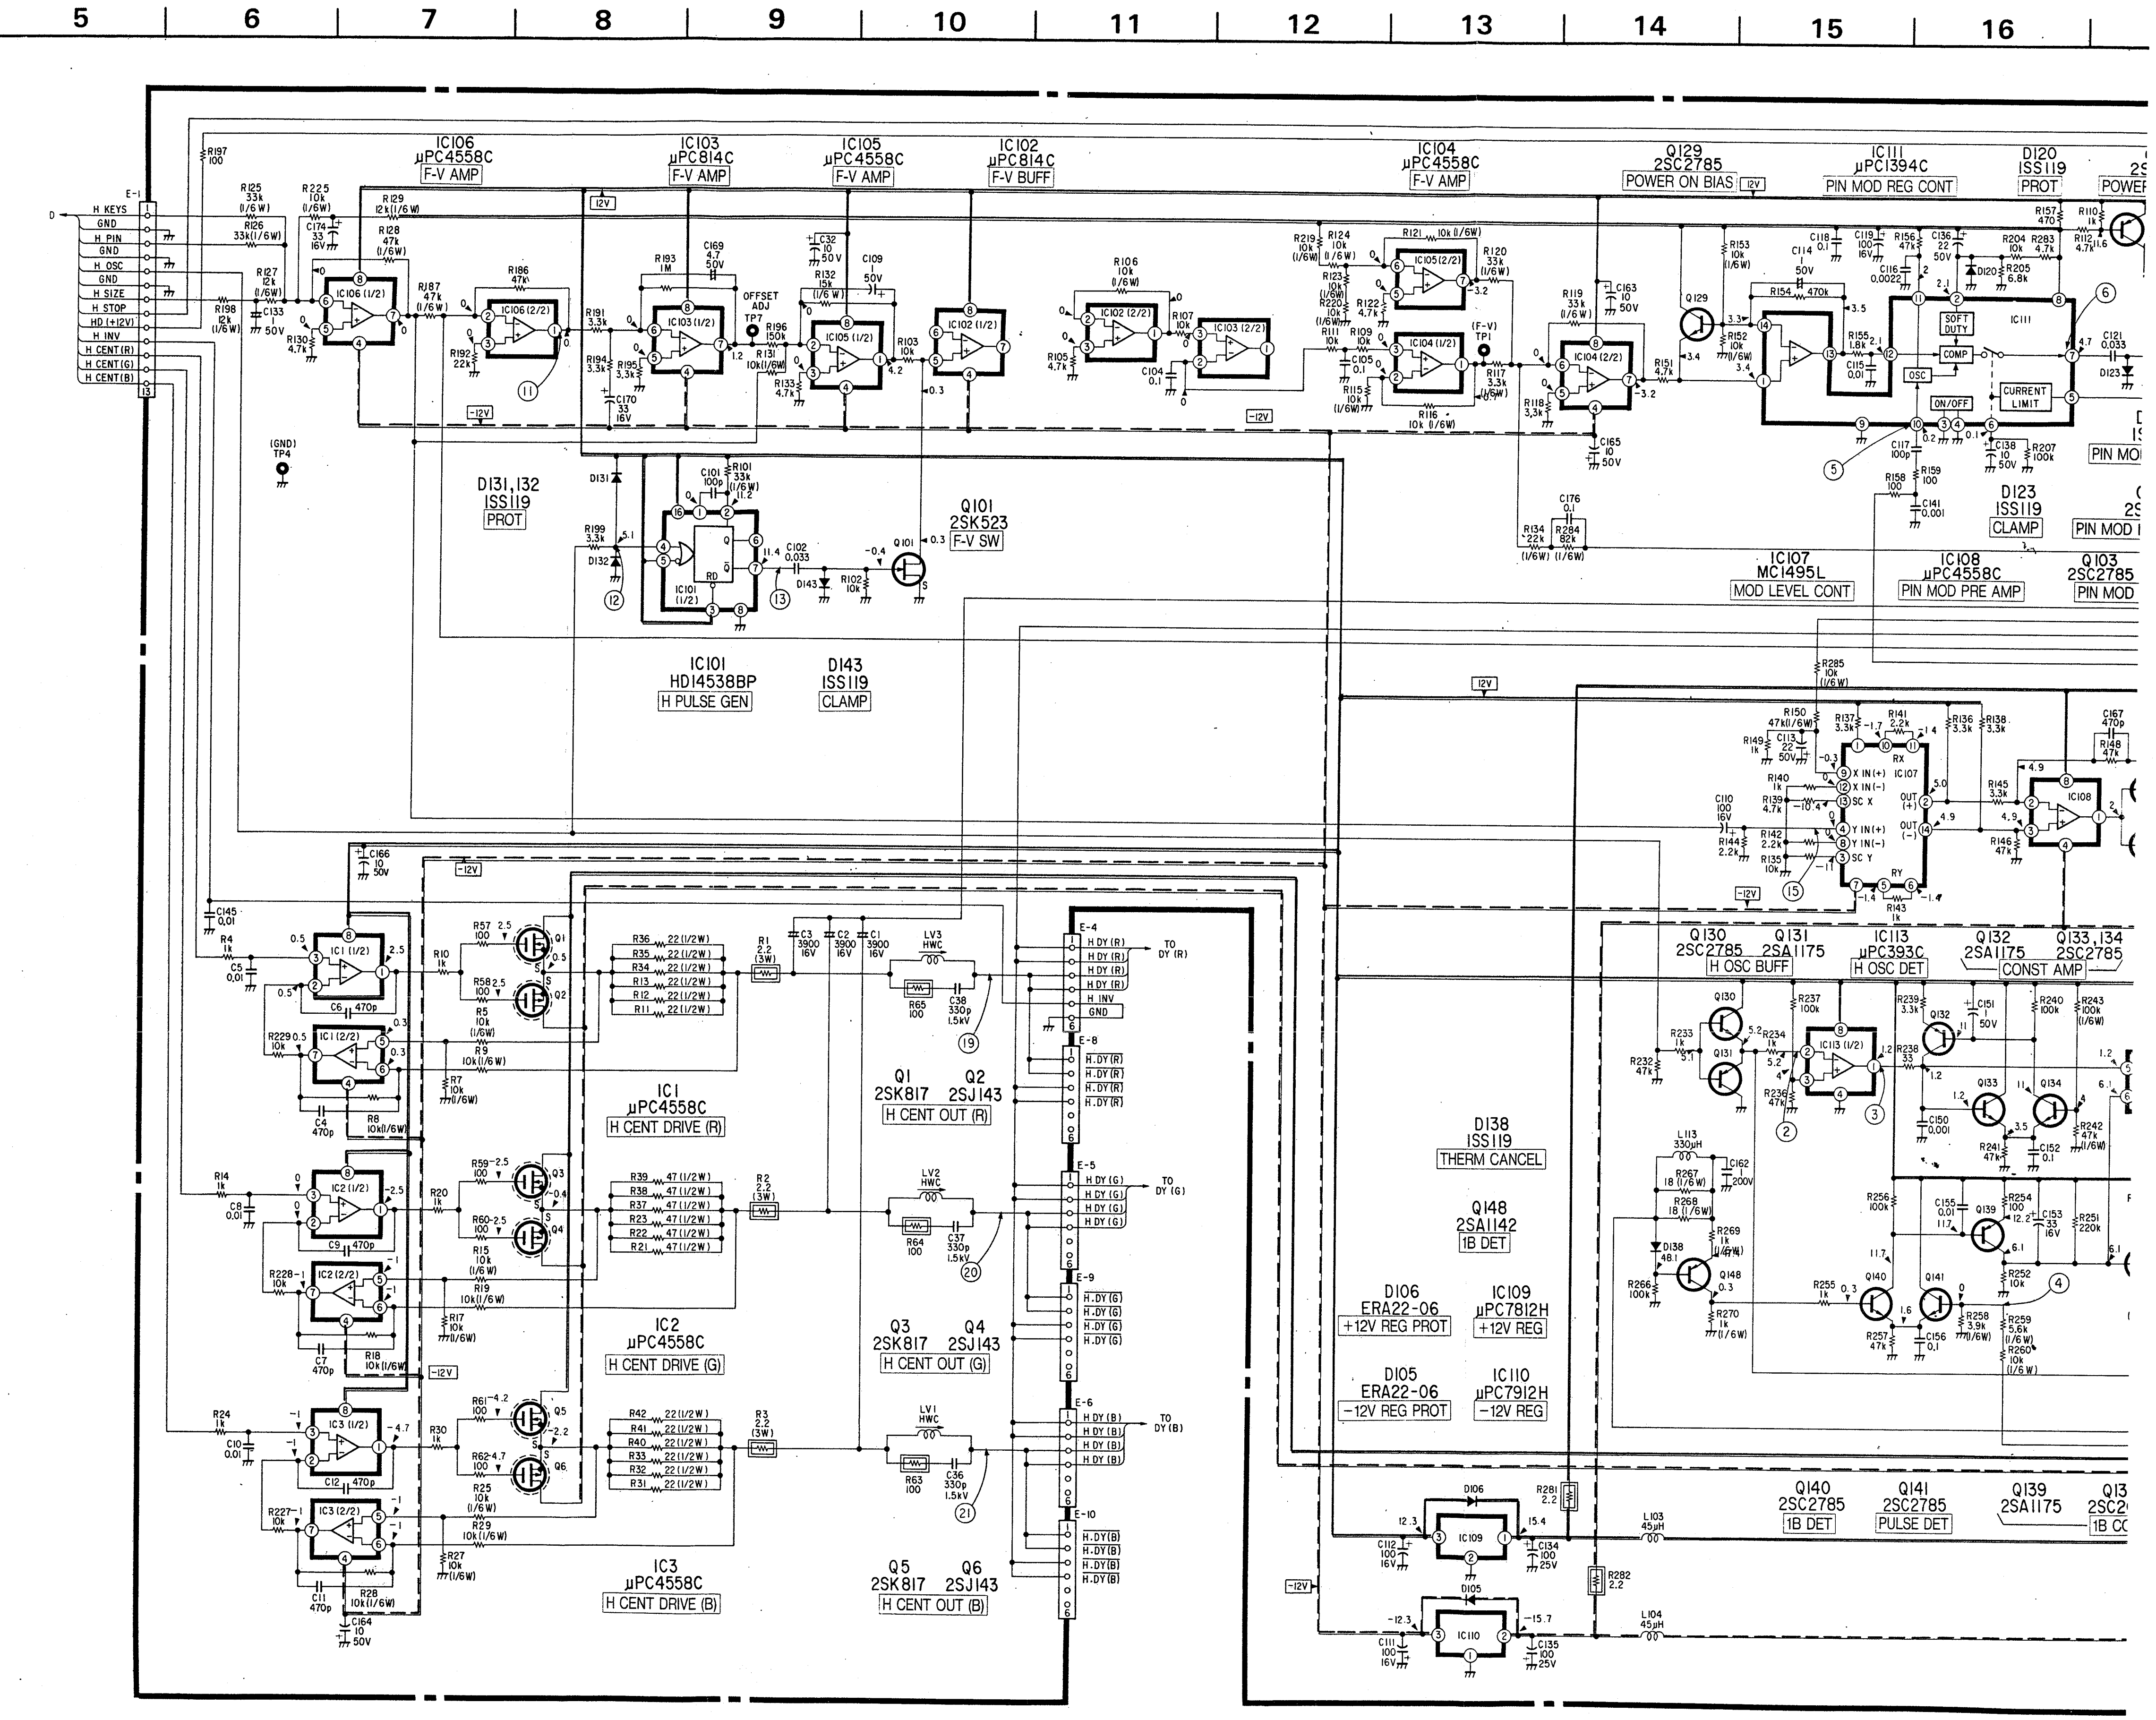
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
IC106 µPC4558C F-V AMP
IC103 µPC814C F-V AMP
IC105 µPC4558C F-V AMP
IC102 µPC814C F-V BUFF
IC104 µPC4558C F-V AMP
Q129 2SC2785 POWER ON BIAS
IC111 µPC1394C PIN MOD REG CONT
D120 1SS119 PROT
H KEYS
GND
H PIN
GND
H OSC
GND
H SIZE
H STOP
HD (+12V)
H INV
H CENT(R)
H CENT(G)
H CENT(B)
OFFSET ADJ TP7
(F-V) TP1
(GND) TP4
D131,132 1SS119 PROT
Q101 2SK523 F-V SW
IC101 HD14538BP H PULSE GEN
D143 1SS119 CLAMP
D123 1SS119 CLAMP
IC107 MC1495L MOD LEVEL CONT
IC108 µPC4558C PIN MOD PRE AMP
Q103 2SC2785 PIN MOD
SOFT DUTY
COMP
OSC
ON/OFF
CURRENT LIMIT
IC1 µPC4558C H CENT DRIVE (R)
IC2 µPC4558C H CENT DRIVE (G)
IC3 µPC4558C H CENT DRIVE (B)
Q1 2SK817 Q2 2SJ143 H CENT OUT (R)
Q3 2SK817 Q4 2SJ143 H CENT OUT (G)
Q5 2SK817 Q6 2SJ143 H CENT OUT (B)
LV3 HWC
LV2 HWC
LV1 HWC
TO DY (R)
TO DY (G)
TO DY (B)
H.DY (R)
H.DY (G)
H.DY (B)
H INV
GND
D138 1SS119 THERM CANCEL
Q148 2SA1142 1B DET
D106 ERA22-06 +12V REG PROT
IC109 µPC7812H +12V REG
D105 ERA22-06 -12V REG PROT
IC110 µPC7912H -12V REG
Q130 2SC2785 Q131 2SA1175 H OSC BUFF
IC113 µPC393C H OSC DET
Q132 2SA1175 Q133,134 2SC2785 CONST AMP
Q140 2SC2785 1B DET
Q141 2SC2785 PULSE DET
Q139 2SA1175
12V
-12V

IC109 µPC7812

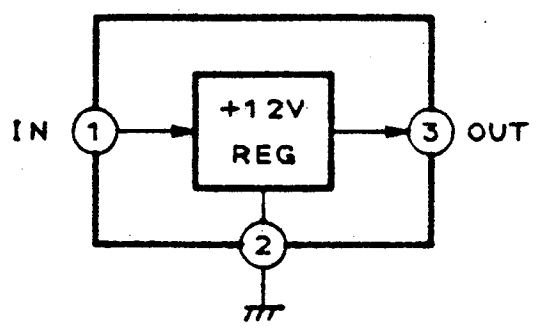
IN
1
+12V REG
3
OUT
2

IC110 µPC7912

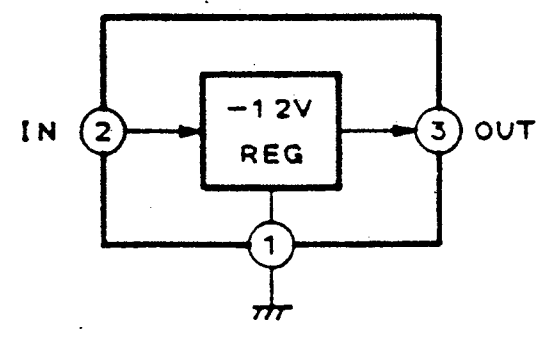
IN
2
-12V REG
3
OUT
1

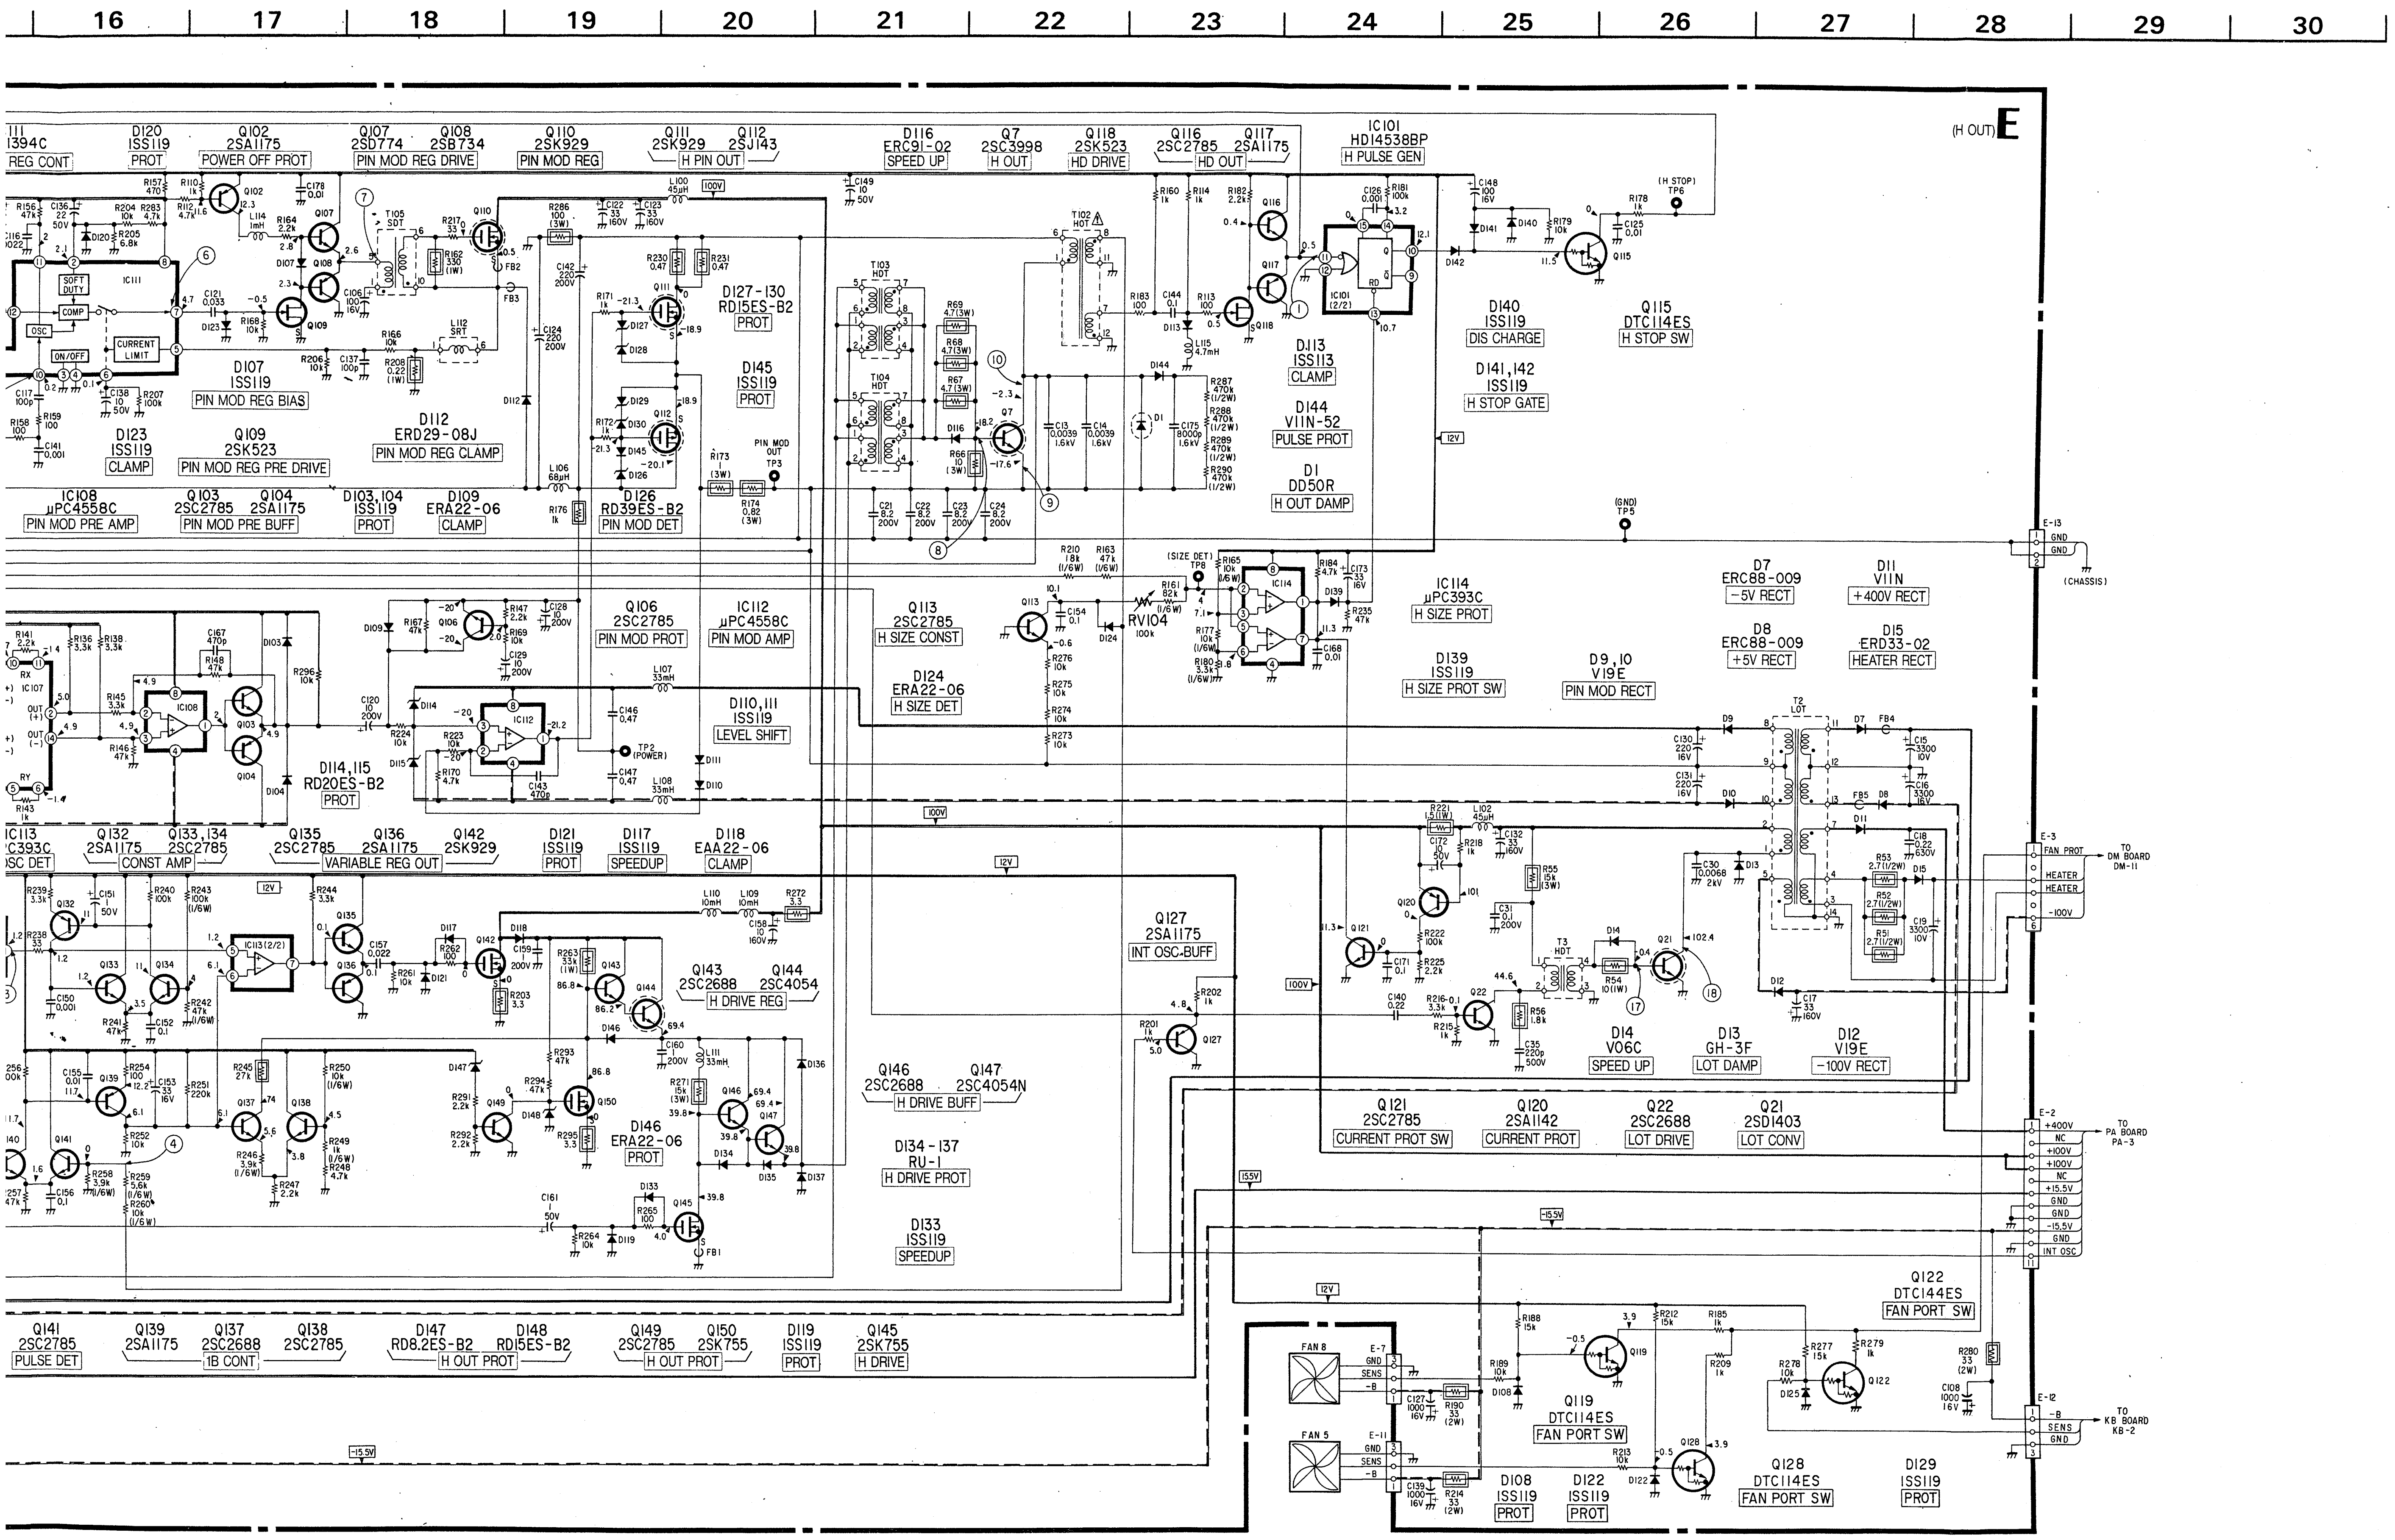
(H OUT) E
Q102 2SA1175 POWER OFF PROT
Q107 2SD774 Q108 2SB734 PIN MOD REG DRIVE
Q110 2SK929 PIN MOD REG
Q111 2SK929 Q112 2SJ143 H PIN OUT
D116 ERC91-02 SPEED UP
Q7 2SC3998 H OUT
Q118 2SK523 HD DRIVE
Q116 2SC2785 Q117 2SA1175 HD OUT
IC101 HD14538BP H PULSE GEN
D120 1SS119 PROT
D107 1SS119 PIN MOD REG BIAS
D112 ERD29-08J PIN MOD REG CLAMP
D127-130 RD15ES-B2 PROT
D145 1SS119 PROT
D123 1SS119 CLAMP
Q109 2SK523 PIN MOD REG PRE DRIVE
IC108 μPC4558C PIN MOD PRE AMP
Q103 2SC2785 Q104 2SA1175 PIN MOD PRE BUFF
D103,104 1SS119 PROT
D109 ERA22-06 CLAMP
D126 RD39ES-B2 PIN MOD DET
D140 1SS119 DIS CHARGE
Q115 DTC114ES H STOP SW
D141,142 1SS119 H STOP GATE
D113 1SS113 CLAMP
D144 V11N-52 PULSE PROT
D1 DD50R H OUT DAMP
Q106 2SC2785 PIN MOD PROT
IC112 μPC4558C PIN MOD AMP
Q113 2SC2785 H SIZE CONST
D124 ERA22-06 H SIZE DET
IC114 μPC393C H SIZE PROT
D139 1SS119 H SIZE PROT SW
D7 ERC88-009 -5V RECT
D8 ERC88-009 +5V RECT
D11 V11N +400V RECT
D15 ERD33-02 HEATER RECT
D9,10 V19E PIN MOD RECT
D110,111 1SS119 LEVEL SHIFT
D114,115 RD20ES-B2 PROT
IC113 μPC393C OSC DET
Q132 2SA1175 Q133,134 2SC2785 CONST AMP
Q135 2SC2785 Q136 2SA1175 VARIABLE REG OUT
Q142 2SK929
D121 1SS119 PROT
D117 1SS119 SPEEDUP
D118 EAA22-06 CLAMP
Q127 2SA1175 INT OSC-BUFF
Q143 2SC2688 Q144 2SC4054 H DRIVE REG
Q146 2SC2688 Q147 2SC4054N H DRIVE BUFF
D146 ERA22-06 PROT
D134-137 RU-1 H DRIVE PROT
D133 1SS119 SPEEDUP
D14 V06C SPEED UP
D13 GH-3F LOT DAMP
D12 V19E -100V RECT
Q121 2SC2785 CURRENT PROT SW
Q120 2SA1142 CURRENT PROT
Q22 2SC2688 LOT DRIVE
Q21 2SD1403 LOT CONV
Q122 DTC144ES FAN PORT SW
Q141 2SC2785 PULSE DET
Q139 2SA1175
Q137 2SC2688 1B CONT
Q138 2SC2785
D147 RD8.2ES-B2 D148 RD15ES-B2 H OUT PROT
Q149 2SC2785 Q150 2SK755 H OUT PROT
D119 1SS119 PROT
Q145 2SK755 H DRIVE
Q119 DTC114ES FAN PORT SW
D108 1SS119 PROT
D122 1SS119 PROT
Q128 DTC114ES FAN PORT SW
D129 1SS119 PROT
FAN 8
FAN 5
T2 LOT
T3 HDT
T102 HOT
T103 HDT
T104 HDT
TO DM BOARD DM-11
TO PA BOARD PA-3
TO KB BOARD KB-2
(CHASSIS)
(H STOP) TP6
(GND) TP5
(SIZE DET) TP8
PIN MOD OUT TP3
TP2 (POWER)
12V
100V
15.5V
-15.5V
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

Q•No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
1	G	2.5	2.5	2.5	2.5	2.5	3
	D	–	–	–	–	–	–
	S	0.5	0.5	0.5	0.5	0.5	0.9
2	G	2.5	2.5	2.5	2.5	2.5	3
	D	–	–	–	–	–	–
	S	0.5	0.5	0.5	0.5	0.5	0.9
3	G	−2.5	−2.5	−2.5	−2.5	−2.5	2.1
	D	–	–	–	–	–	–
	S	−0.4	−0.4	−0.4	−0.4	−0.4	0.2
4	G	−2.5	−2.5	−2.5	−2.5	−2.5	2.1
	D	–	–	–	–	–	–
	S	−0.4	−0.4	−0.4	−0.4	−0.4	0.2
5	G	–	–	–	–	–	–
	D	–	–	–	–	–	–
	S	−2.2	−2.2	−2.2	−2.2	−2.2	−1.8
6	G	−4.7	−4.7	−4.7	−4.7	−4.7	−4.2
	D	–	–	–	–	–	–
	S	−2.2	−2.2	−2.2	−2.2	−2.2	−1.8
7	B	−18.2	−18.2	−18.2	−18.2	−18.2	−51.9
	C	−2.3	−2.3	−2.3	−2.3	−2.3	−12
	E	−17.6	−17.6	−17.6	−17.6	−17.6	−51.2
21	B	−0.4	−0.4	−0.4	−0.4	−0.4	0
	C	–	–	–	–	–	–
	E	–	–	–	–	–	–
22	B	–	–	–	–	–	–
	C	44.6	44.6	44.6	44.6	44.6	44.8
	E	–	–	–	–	–	–
101	G	−0.4	−0.4	−0.4	−0.4	−0.4	−1.4
	D	0.3	0.3	0.3	0.3	0.3	0.8
	S	–	–	–	–	–	–
103	B	2	2	2	2	2	2.2
	C	–	–	–	–	–	–
	E	4.9	4.9	4.9	4.9	4.9	2.9
104	B	2	2	2	2	2	2.2
	C	–	–	–	–	–	–
	E	4.9	4.9	4.9	4.9	4.9	2.9
106	B	−2.0	−2.0	−2.0	−2.0	−2.0	−53.5
	C	−20	−20	−20	−20	−20	−53.4
	E	−20	−20	−20	−20	−20	−53.5
107	B	2.8	2.8	2.8	2.8	2.8	4.3
	C	–	–	–	–	–	–
	E	2.6	2.6	2.6	2.6	2.6	4.1
108	B	2.3	2.3	2.3	2.3	2.3	3.8
	C	–	–	–	–	–	–
	E	2.6	2.6	2.6	2.6	2.6	4.1
109	G	−0.5	−0.5	−0.5	−0.5	−0.5	1.2
	D	2.3	2.3	2.3	2.3	2.3	3.8
	S	–	–	–	–	–	–
110	G	0	0	0	0	0	−0.2
	D	–	–	–	–	–	–
	S	–	–	–	–	–	–
111	G	−21.3	−21.3	−21.3	−21.3	−21.3	−54.6
	D	–	–	–	–	–	–
	S	–	–	–	–	–	–
112	G	−21.3	−21.3	−21.3	−21.3	−21.3	−54.6
	D	−18.9	−18.9	−18.9	−18.9	−18.9	−53.5
	S	−20.1	−20.1	−20.1	−20.1	−20.1	−52.1
113	B	–	–	–	–	–	–
	C	10.1	10.1	10.1	10.1	10.1	13.5
	E	–	–	–	–	–	–
116	B	0.4	0.4	0.4	0.4	0.4	0.9
	C	–	–	–	–	–	–
	E	0.5	0.5	0.5	0.5	0.5	1.2
117	B	0.4	0.4	0.4	0.4	0.4	0.9
	C	–	–	–	–	–	–
	E	0.5	0.5	0.5	0.5	0.5	1.2
118	G	0.5	0.5	0.5	0.5	0.5	0
	D	0.4	0.4	0.4	0.4	0.4	0.9
	S	–	–	–	–	–	–
127	B	–	–	–	–	–	–
	C	–	–	–	–	–	–
	E	4.8	4.8	4.8	4.8	4.8	5
130	B	5.1	5.1	5.1	5.1	5.1	5.8
	C	–	–	–	–	–	–
	E	5.2	5.2	5.2	5.2	5.2	5.8
131	B	5.1	5.1	5.1	5.1	5.1	5.8
	C	5.2	5.2	5.2	5.2	5.2	5.8
	E	–	–	–	–	–	–
132	B	11.4	11.4	11.4	11.4	11.4	10.9
	C	–	–	–	–	–	–
	E	11.9	11.9	11.9	11.9	11.9	11.4

Q•No.		PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
137	B	6.1	6.1	6.1	6.1	6.1	4.9
	C	74	74	74	74	74	91.4
	E	5.6	5.6	5.6	5.6	5.6	4.4
139	B	–	–	–	–	–	–
	C	6.1	6.1	6.1	6.1	6.1	5
	E	12.2	12.2	12.2	12.2	12.2	12.4
140	B	–	–	–	–	–	–
	C	–	–	–	–	–	–
	E	1.6	1.6	1.6	1.6	1.6	2.4
141	B	–	–	–	–	–	–
	C	–	–	–	–	–	–
	E	1.6	1.6	1.6	1.6	1.6	2.4
143	B	86.8	86.8	86.8	86.8	86.8	95.3
	C	–	–	–	–	–	–
	E	86.2	86.2	86.2	86.2	86.2	94.8
144	B	86.2	86.2	86.2	86.2	86.2	94.8
	C	–	–	–	–	–	–
	E	69.4	69.4	69.4	69.4	69.4	94.1
145	G	4.0	4.0	4.0	4.0	4.0	4.5
	D	39.8	39.8	39.8	39.8	39.8	47.7
	S	–	–	–	–	–	–
146	B	39.8	39.8	39.8	39.8	39.8	47.7
	C	69.4	69.4	69.4	69.4	69.4	94.1
	E	39.8	39.8	39.8	39.8	39.8	47.8
147	B	39.8	39.8	39.8	39.8	39.8	47.8
	C	69.4	69.4	69.4	69.4	69.4	94.1
	E	39.8	39.8	39.8	39.8	39.8	47.8
148	B	48.1	48.1	48.1	48.1	48.1	47.3
	C	–	–	–	–	–	–
	E	47.4	47.4	47.4	47.4	47.4	47.1
150	G	–	–	–	–	–	–
	D	86.8	86.8	86.8	86.8	86.8	95.3
	S	–	–	–	–	–	–

IC•No.	PIN•No.	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	HDTV
1	①	2.5	2.5	2.5	2.5	2.5	3.0
	⑤	0.3	0.3	0.3	0.3	0.3	0.5
	⑥	0.3	0.3	0.3	0.3	0.3	0.5
2	①	−2.5	−2.5	−2.5	−2.5	−2.5	2.1
	②	0	0	0	0	0	0.3
	③	0	0	0	0	0	0.3
	⑤	−1	−1	−1	−1	−1	0.1
	⑥	−1	−1	−1	−1	−1	0.1
	⑦	−1	−1	−1	−1	−1	0.3
3	①	−4.7	−4.7	−4.7	−4.7	−4.7	−4.2
101	②	11.2	11.2	11.2	11.2	11.2	10.1
	④	5.1	5.1	5.1	5.1	5.1	5.8
	⑦	11.4	11.4	11.4	11.4	11.4	10.4
	⑪	0.5	0.5	0.5	0.5	0.5	1.2
	⑭	3.2	3.2	3.2	3.2	3.2	1.7
102	⑤	0.3	0.3	0.3	0.3	0.3	0.8
	⑥	0.3	0.3	0.3	0.3	0.3	0.9
	⑦	0.3	0.3	0.3	0.3	0.3	0.9
103	⑦	1.2	1.2	1.2	1.2	1.2	5
104	①	0.7	0.7	0.7	0.7	0.7	1.7
	②	0.3	0.3	0.3	0.3	0.3	0.9
	③	0.3	0.3	0.3	0.3	0.3	0.9
	⑦	−3.2	−3.2	−3.2	−3.2	−3.2	3.3
105	①	4.2	4.2	4.2	4.2	4.2	5.3
106	⑦	0	0	0	0	0	−3.8
107	⑨	−0.3	−0.3	−0.3	−0.3	−0.3	−0.9
	⑩	−1.7	−1.7	−1.7	−1.7	−1.7	−2.3
111	②	2.1	2.1	2.1	2.1	2.1	2.3
	⑦	4.7	4.7	4.7	4.7	4.7	3.9
112	①	−21.2	−21.2	−21.2	−21.2	−21.2	−54.6
	②	−20	−20	−20	−20	−20	−53.3
	③	−20	−20	−20	−20	−20	−53.3
113	②	5.2	5.2	5.2	5.2	5.2	5.8
	⑥	6.1	6.1	6.1	6.1	6.1	4.9
114	②	4	4	4	4	4	5.4
	⑤	4	4	4	4	4	5.4

①



PAL	12.0Vp-p(H)
SECAM	12.0Vp-p(H)
NTSC3.58	12.0Vp-p(H)
NTSC4.43	12.0Vp-p(H)
S-VIDEO	12.0Vp-p(H)
HDTV	12.0Vp-p(H)

②



PAL	11.0Vp-p(H)
SECAM	11.0Vp-p(H)
NTSC3.58	11.0Vp-p(H)
NTSC4.43	11.0Vp-p(H)
S-VIDEO	11.0Vp-p(H)
HDTV	11.0Vp-p(H)

③



PAL	4.2Vp-p(H)
SECAM	4.2Vp-p(H)
NTSC3.58	4.2Vp-p(H)
NTSC4.43	4.2Vp-p(H)
S-VIDEO	4.2Vp-p(H)
HDTV	4.2Vp-p(H)

④



PAL	2.4 Vp-p(H)
SECAM	2.4 Vp-p(H)
NTSC3.58	2.4 Vp-p(H)
NTSC4.43	2.4 Vp-p(H)
S-VIDEO	2.4 Vp-p(H)
HDTV	2.4 Vp-p(H)

⑤



PAL	7.2Vp-p(H)
SECAM	7.2Vp-p(H)
NTSC3.58	7.2Vp-p(H)
NTSC4.43	7.2Vp-p(H)
S-VIDEO	7.2Vp-p(H)
HDTV	7.2Vp-p(H)

⑥



PAL	6.0Vp-p(H)
SECAM	6.0Vp-p(H)
NTSC3.58	6.0Vp-p(H)
NTSC4.43	6.0Vp-p(H)
S-VIDEO	6.0Vp-p(H)
HDTV	6.0Vp-p(H)

⑦



PAL	12.0Vp-p(H)
SECAM	12.0Vp-p(H)
NTSC3.58	12.0Vp-p(H)
NTSC4.43	12.0Vp-p(H)
S-VIDEO	12.0Vp-p(H)
HDTV	12.0Vp-p(H)

⑧



PAL	12.0 Vp-p(H)
SECAM	12.0 Vp-p(H)
NTSC3.58	12.0 Vp-p(H)
NTSC4.43	12.0 Vp-p(H)
S-VIDEO	12.0 Vp-p(H)
HDTV	12.0 Vp-p(H)

⑨



PAL	0.2Vp-p(H)
SECAM	0.2Vp-p(H)
NTSC3.58	0.2Vp-p(H)
NTSC4.43	0.2Vp-p(H)
S-VIDEO	0.2Vp-p(H)
HDTV	0.2Vp-p(H)

⑩



PAL	1200Vp-p(H)
SECAM	1200Vp-p(H)
NTSC3.58	1200Vp-p(H)
NTSC4.43	1200Vp-p(H)
S-VIDEO	1200Vp-p(H)

⑩



HDTV	1600Vp-p(H)

⑪



PAL	0.14Vp-p(V)
SECAM	0.14Vp-p(V)
NTSC3.58	0.14Vp-p(V)
NTSC4.43	0.14Vp-p(V)
S-VIDEO	0.14Vp-p(V)
HDTV	0.34Vp-p(V)

⑫



PAL	12.0Vp-p(H)
SECAM	12.0Vp-p(H)
NTSC3.58	12.0Vp-p(H)
NTSC4.43	12.0Vp-p(H)
S-VIDEO	12.0Vp-p(H)
HDTV	12.0Vp-p(H)

⑬



PAL	12.0 Vp-p(H)
SECAM	12.0 Vp-p(H)
NTSC3.58	12.0 Vp-p(H)
NTSC4.43	12.0 Vp-p(H)
S-VIDEO	12.0 Vp-p(H)
HDTV	12.0 Vp-p(H)

⑭



PAL	4.2 Vp-p(.H)
SECAM	4.2 Vp-p(H)
NTSC3.58	4.2 Vp-p(H)
NTSC4.43	4.2 Vp-p(H)
S-VIDEO	4.2 Vp-p(H)
HDTV	4.2 Vp-p(H)

⑮



PAL	0.12 Vp-p(V)
SECAM	0.12 Vp-p(V)
NTSC3.58	0.12 Vp-p(V)
NTSC4.43	0.12 Vp-p(V)
S-VIDEO	0.12 Vp-p(V)
HDTV	0.12 Vp-p(V)

⑯



PAL	0.6 Vp-p(V)
SECAM	0.6 Vp-p(V)
NTSC3.58	0.6 Vp-p(V)
NTSC4.43	0.6 Vp-p(V)
S-VIDEO	0.6 Vp-p(V)

⑯



HDTV	1.6 Vp-p(V)

⑰



PAL	11.0Vp-p(H)
SECAM	11.0Vp-p(H)
NTSC3.58	11.0Vp-p(H)
NTSC4.43	11.0Vp-p(H)
S-VIDEO	11.0Vp-p(H)
HDTV	11.0Vp-p(H)

⑱



PAL	1400 Vp-p(H)
SECAM	1400 Vp-p(H)
NTSC3.58	1400 Vp-p(H)
NTSC4.43	1400 Vp-p(H)
S-VIDEO	1400 Vp-p(H)
HDTV	1400 Vp-p(H)

⑲



PAL	58 Vp-p(H)
SECAM	58 Vp-p(H)
NTSC3.58	58 Vp-p(H)
NTSC4.43	58 Vp-p(H)
S-VIDEO	58 Vp-p(H)

⑲



HDTV	80 Vp-p(H)

⑳



PAL	46Vp-p(H)
SECAM	46Vp-p(H)
NTSC3.58	46Vp-p(H)
NTSC4.43	46Vp-p(H)
S-VIDEO	46Vp-p(H)

⑳



HDTV	60 Vp-p(H)

㉑



PAL	52 Vp-p(H)
SECAM	52 Vp-p(H)
NTSC3.58	52 Vp-p(H)
NTSC4.43	52 Vp-p(H)
S-VIDEO	52 Vp-p(H)

㉑



HDTV	68 Vp-p(H)

E [H. OUT]

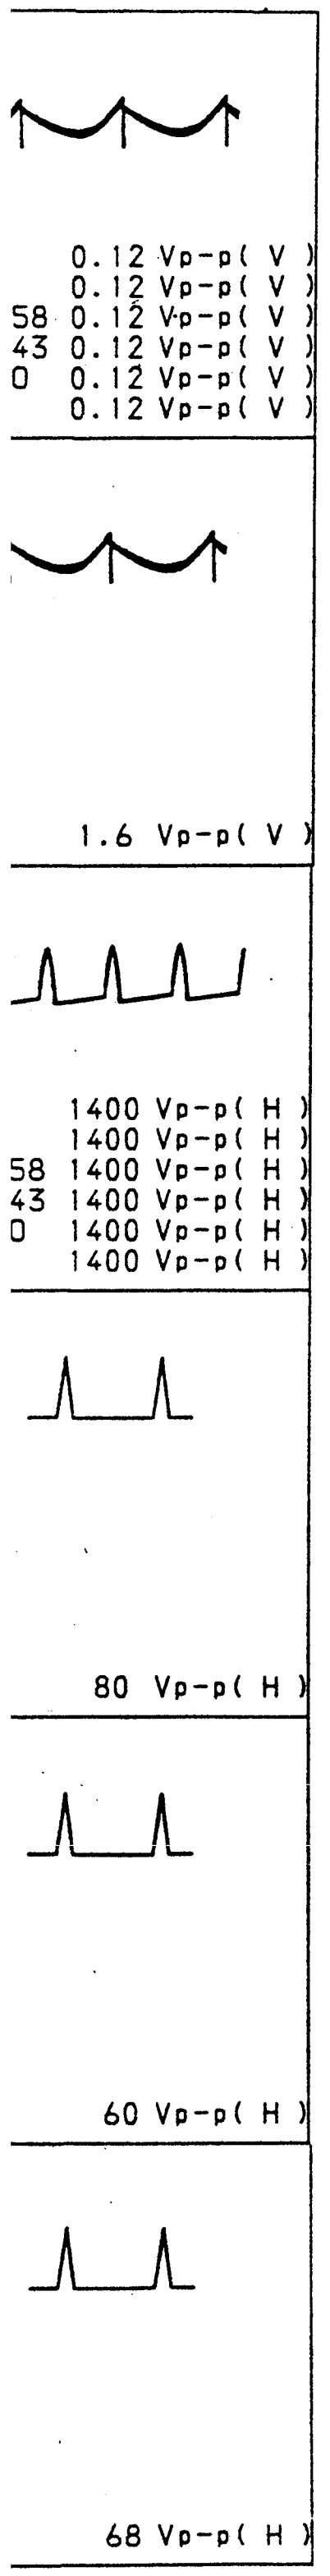

– E BOARD –

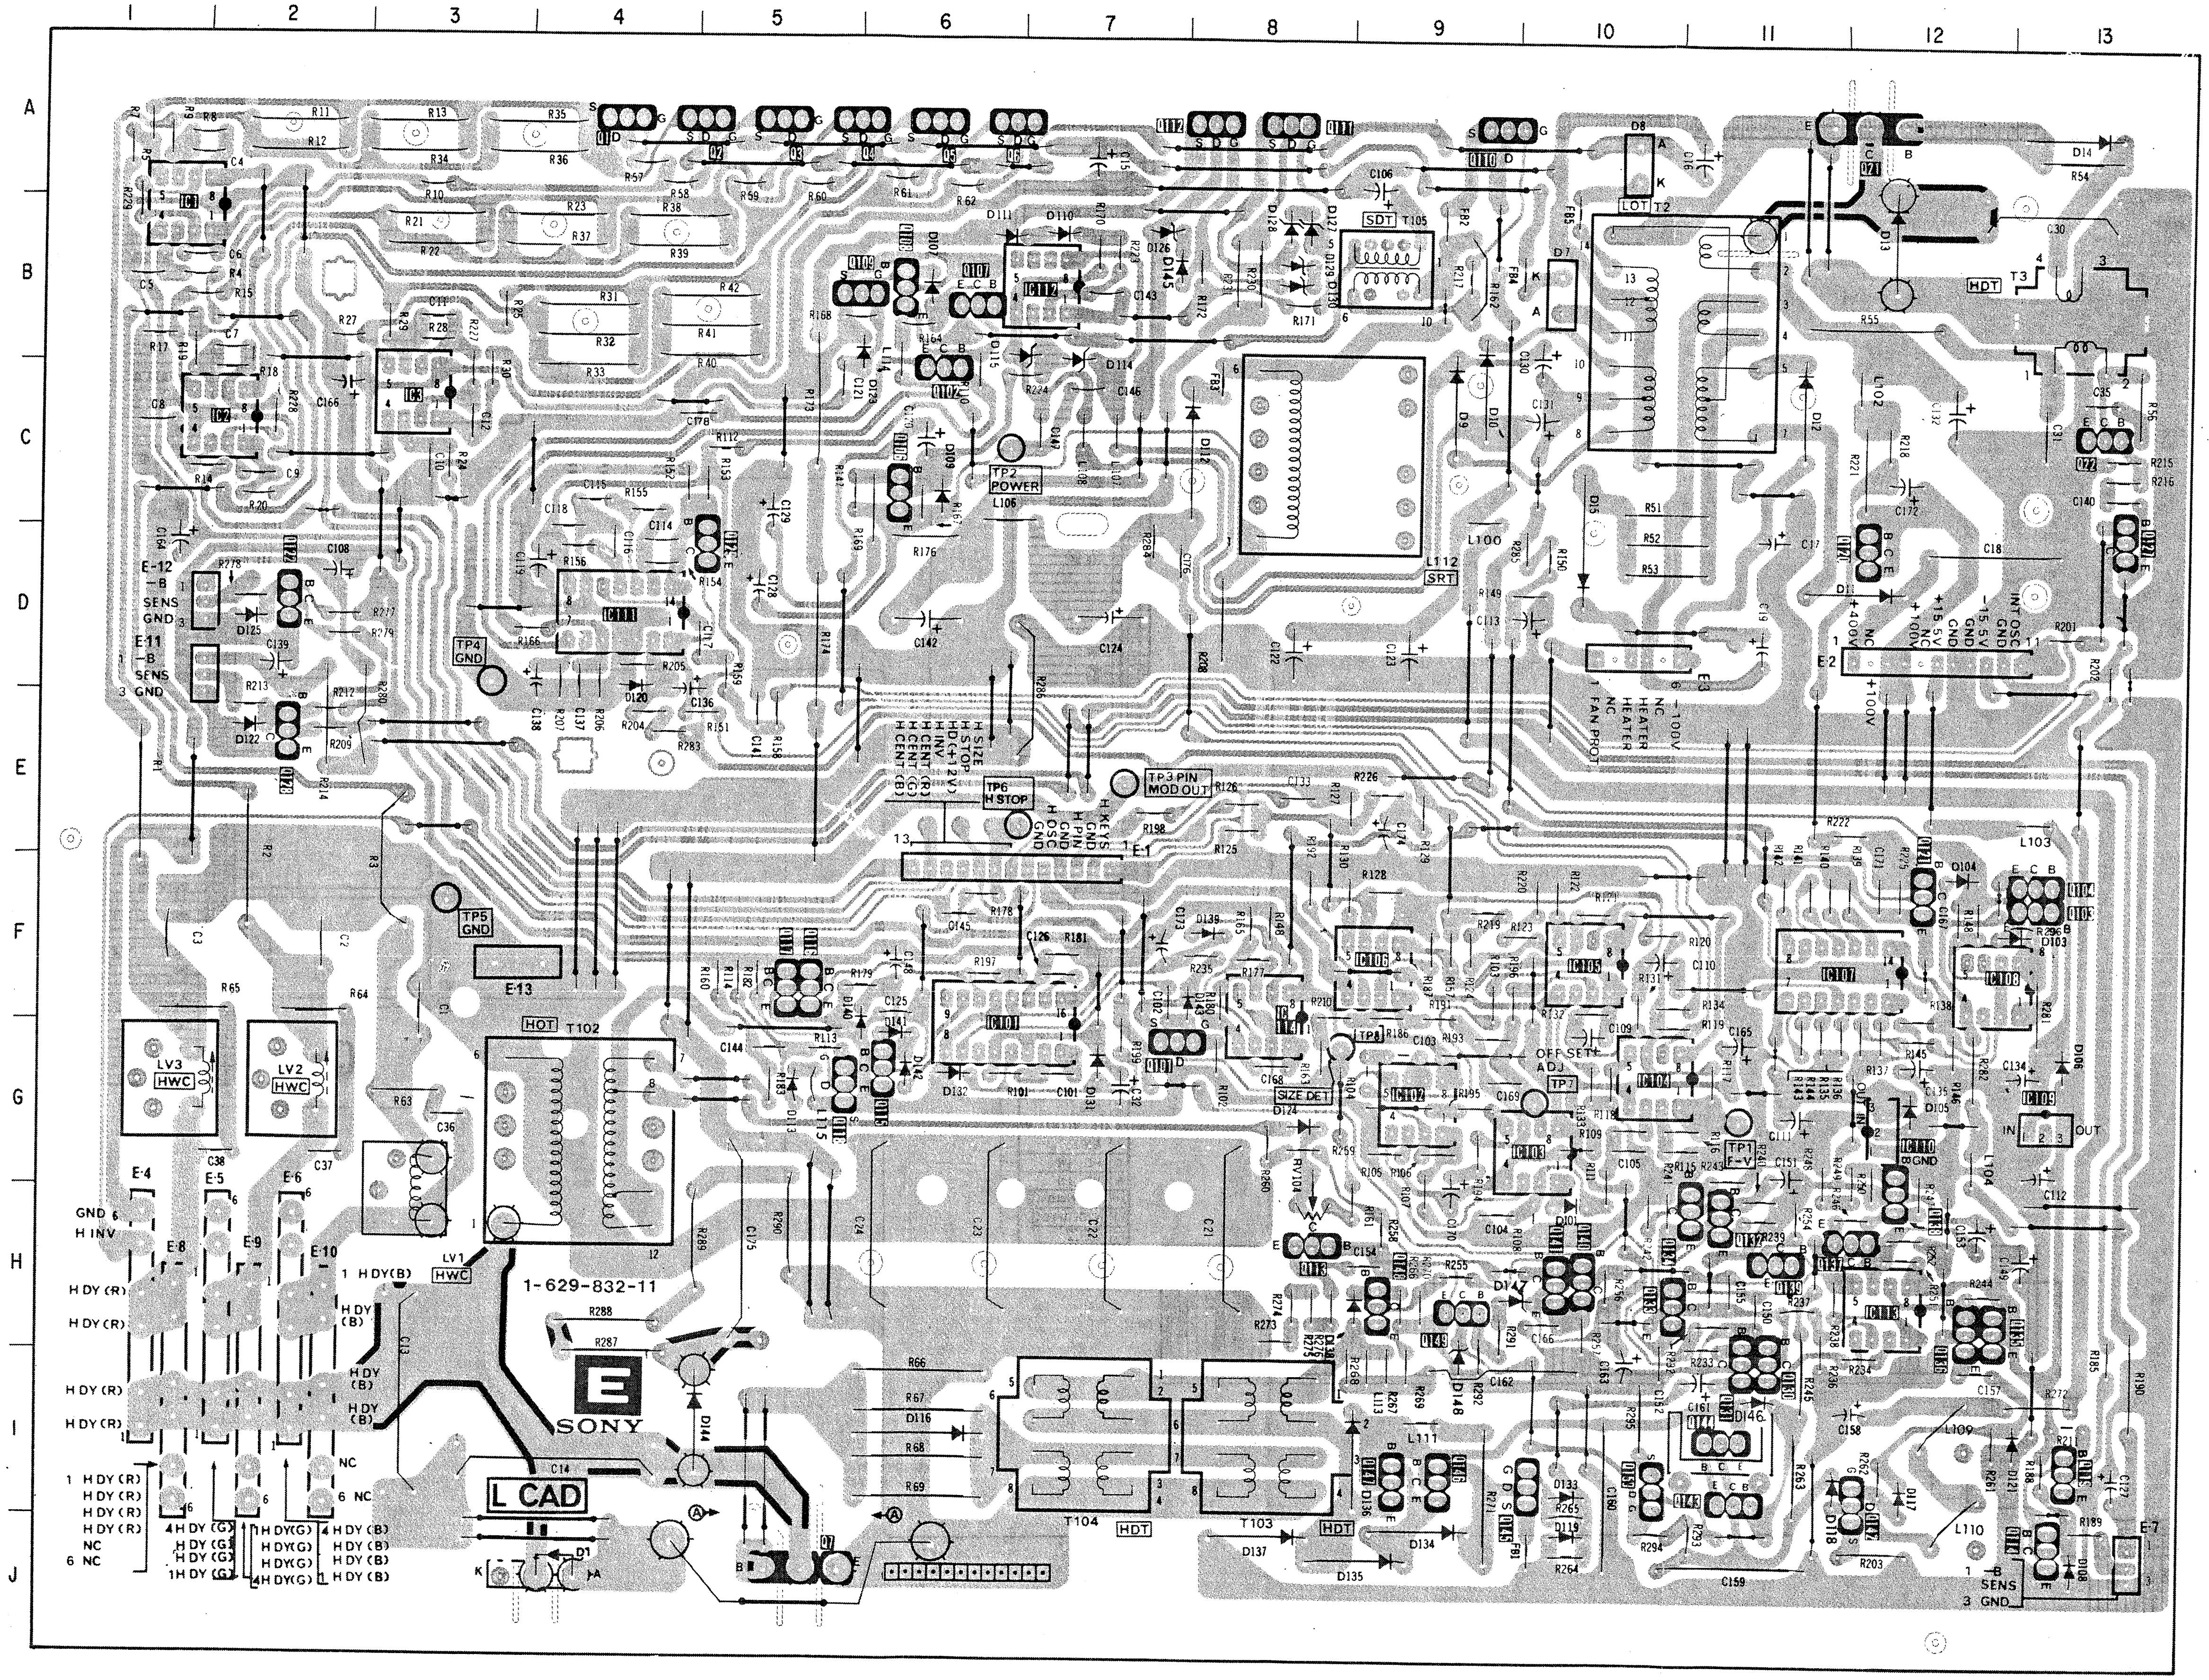
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
TP2 POWER
TP3 PIN MOD OUT
TP4 GND
TP5 GND
TP6 H STOP
TP7
TP1 F-V
SDT T105
LOT T2
HDT T3
HOT T102
T104 HDT
T103 HDT
L112 SRT
LV1 HWC
LV2 HWC
LV3 HWC
SIZE DET
OFF SET ADJ
E-12 -B SENS GND
E-11 -B SENS 3 GND
E-13
E-2
E-3
E-1
E-4
E-5
E-6
E-7
E-8
E-9
E-10
GND H INV
H DY(R)
H DY(G)
H DY(B)
NC
1-629-832-11
E SONY
L CAD
IC1
IC2
IC3
IC101
IC102
IC103
IC104
IC105
IC106
IC107
IC108
IC109
IC110
IC111
IC112
IC113
IN OUT
NC HEATER HEATER NC FAN PROT -100V
+15.5V INT OSC +15.5V GND GND NC +100V +400V
H SIZE H STOP HDC(+12V) H CENT(R) H CENT(G) H CENT(B)
H KEY GND H PIN GND H SIZE GND

E

[H. OUT]

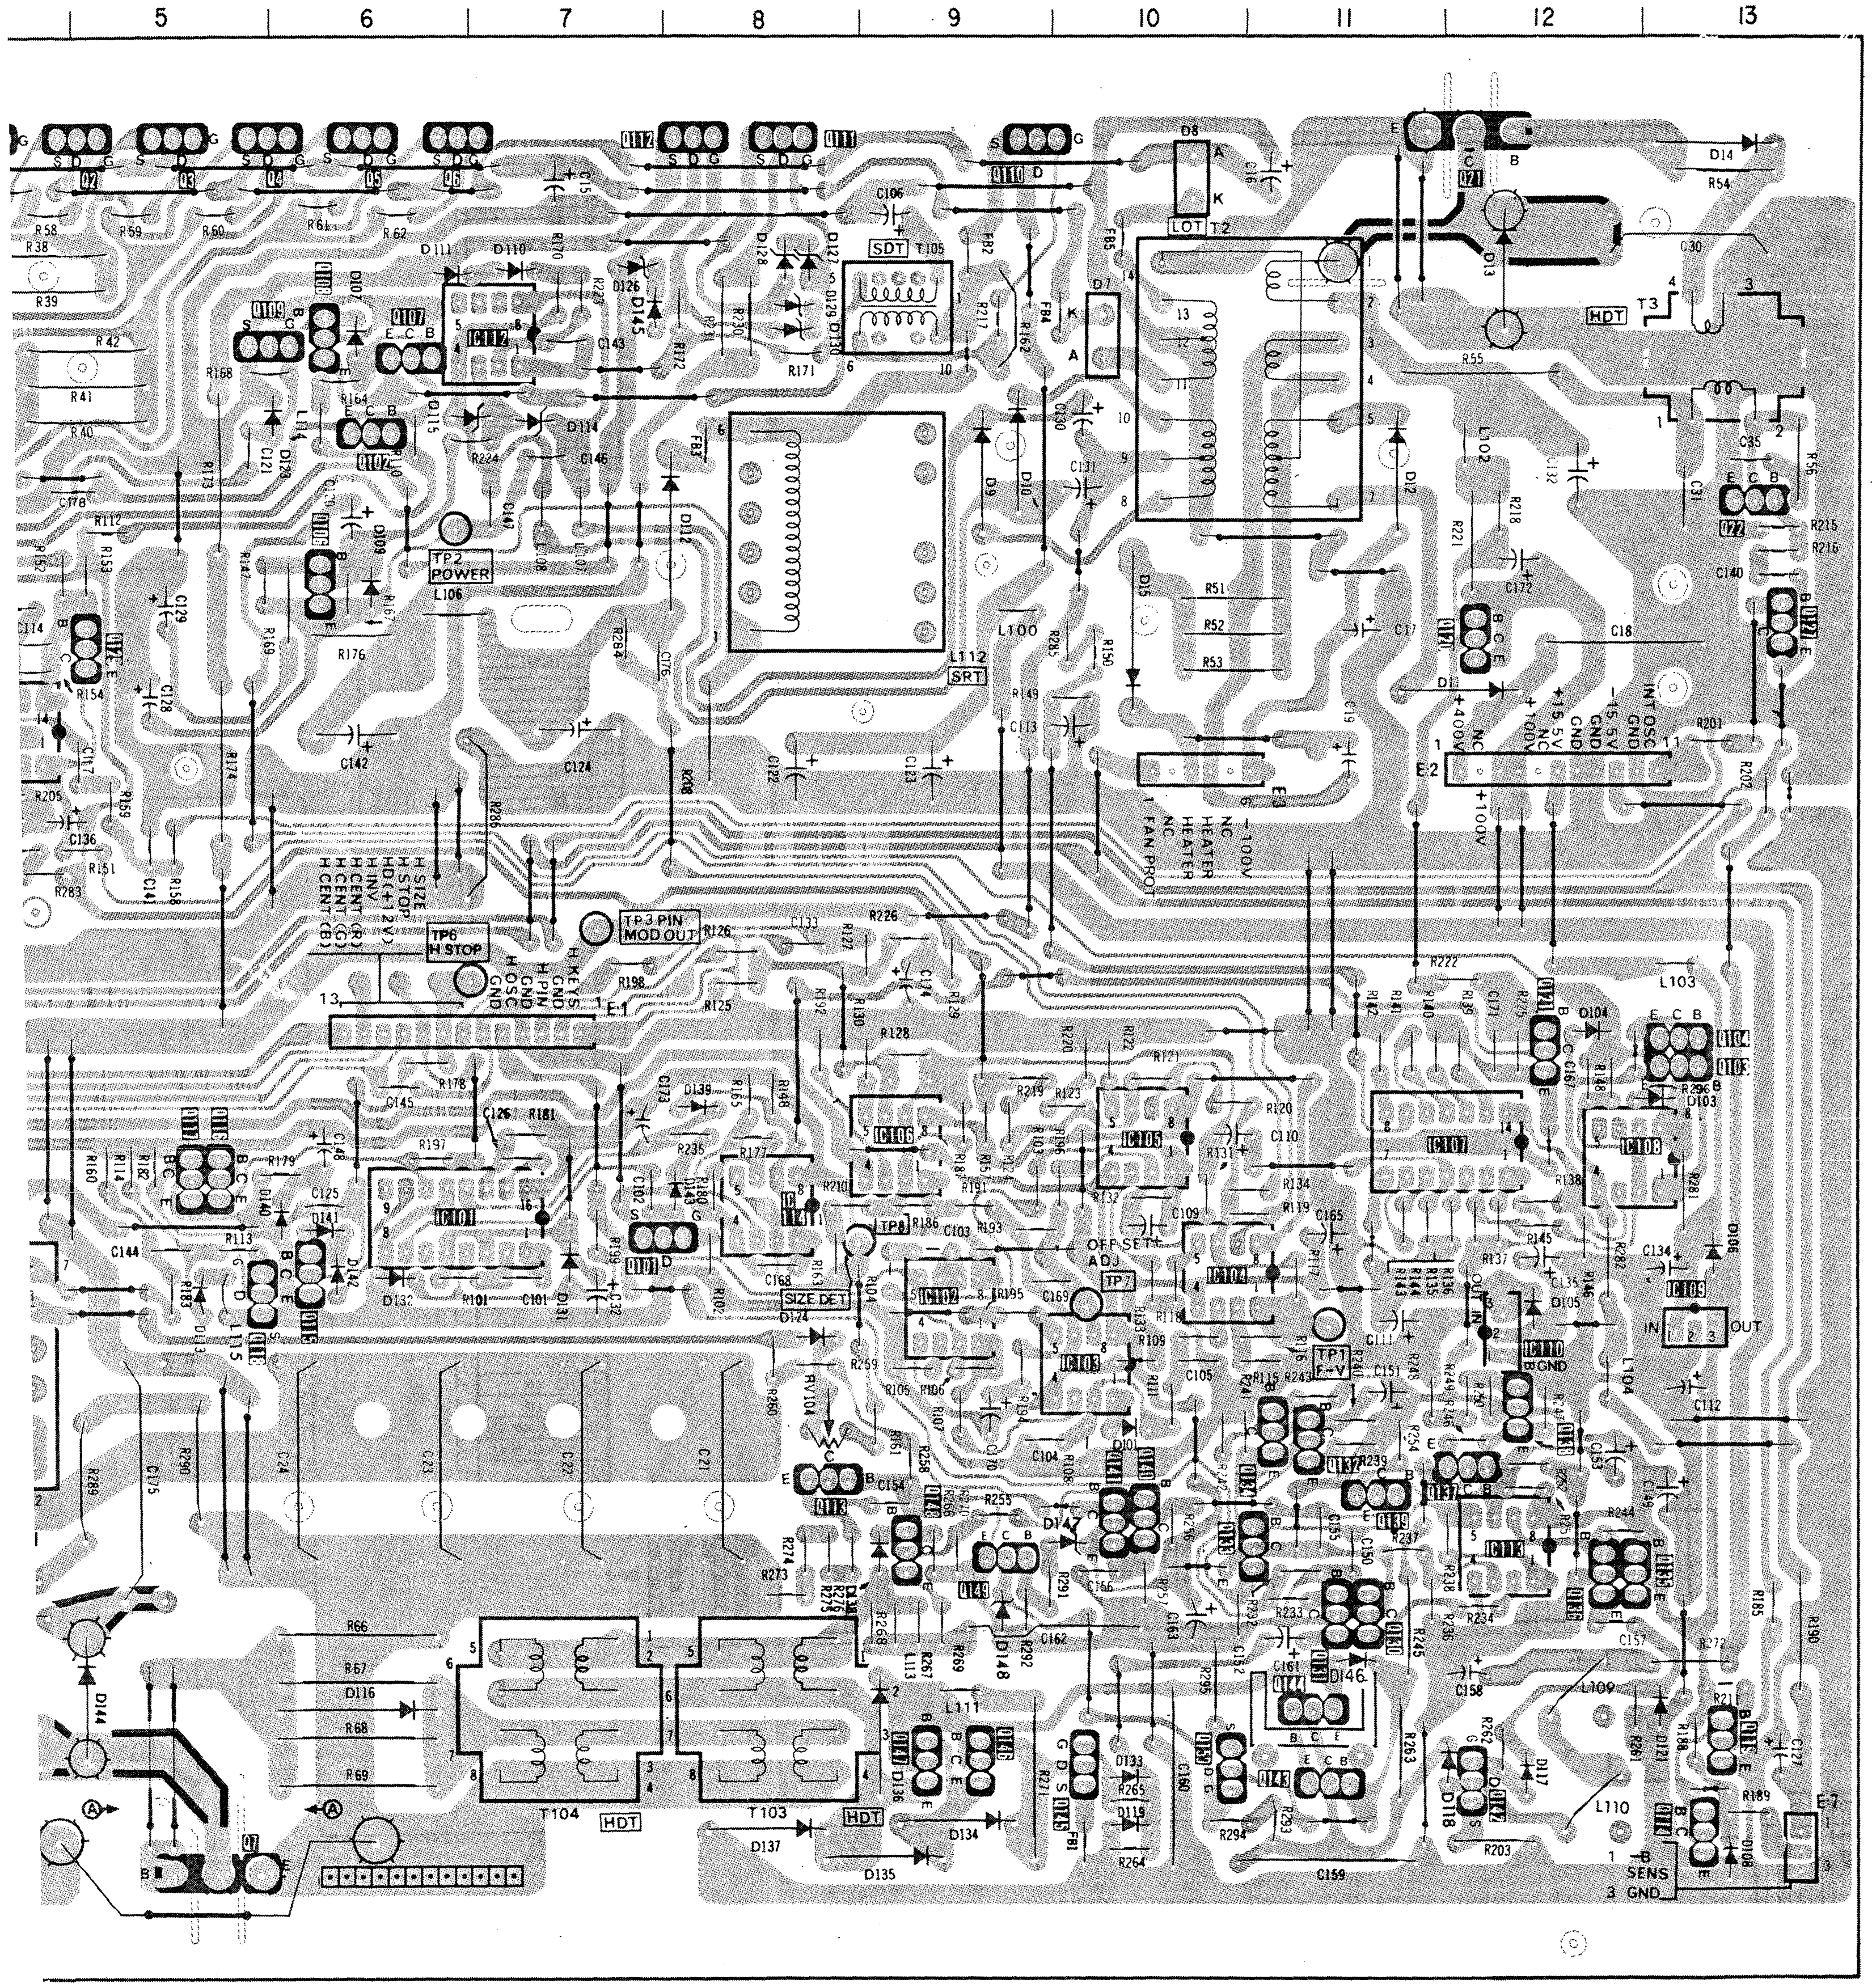
5
6
7
8
9
10
11
12
13
SDT
LOT
HDT
T3
TP2 POWER
L106
L112
SRT
L100
E3
E2
E1
-100V
NC
HEATER
HEATER
NC
FAN PROT
+400V
NC
+100V
+15.5V
GND
-15.5V
GND
INT OSC
TP3 PIN MOD OUT
TP6 H STOP
H SIZE
H STOP
H INV
HDF (+12V)
H CENT (R)
H CENT (G)
H CENT (B)
H KEYS
H PIN
GND
H OSC
GND
IC101
IC102
IC103
IC104
IC105
IC106
IC107
IC108
IC109
IC110
IC112
TP8
TP7
TP1 F-V
OFFSET ADJ
SIZE DET
RV104
IN
OUT
L103
L104
L109
L110
L111
T103
T104
HDT
SENS
GND
E7

E BOARD

IC	
IC1	B – 1
IC2	C - 2
IC3	C - 3
IC101	F - 6
IC102	G - 9
IC103	G - 10
IC104	G - 10
IC105	F - 10
IC106	F - 9
IC107	F - 12
IC108	F - 12
IC109	G - 13
IC110	G - 12
IC111	D - 4
IC112	B - 7
IC113	H - 12
IC114	F - 1

TRANSISTOR	
Q1	A – 4
Q2	A – 5
Q3	A – 5
Q4	A - 6
Q5	A - 6
Q6	A - 6
Q7	J – 5
Q21	A - 12
Q22	C - 13
Q101	G - 7
Q102	C - 6
Q103	F - 13
Q104	F - 13
Q106	C - 6
Q107	B - 6
Q108	B - 6
Q109	B - 6
Q110	A - 9
Q111	A - 8
Q112	A - 8
Q113	H - 8
Q115	G - 6
Q116	F - 5
Q117	F - 5
Q118	G - 5
Q120	D - 12
Q121	F - 12
Q122	D - 2
Q127	D - 13
Q128	E - 2
Q129	D - 5
Q130	I - 11
Q131	I - 11
Q132	H - 11
Q133	H - 11
Q134	H - 11
Q135	H - 12
Q136	H - 12
Q137	H - 12
Q138	G - 12
Q139	H - 11
Q140	H - 10
Q141	H - 10
Q142	I - 12
Q143	I - 11
Q144	I - 11
Q145	I - 10
Q146	I - 9
Q147	I - 9
Q148	H - 9
Q149	H - 9
Q150	I - 10

DIODE	
D1	J - 4
D7	B - 10
D8	A - 10
D9	C - 9
D10	C - 9
D11	D - 12
D12	C - 11
D13	B - 12
D14	A - 13
D15	D - 10
D103	F - 13
D104	F - 12
D105	G - 12
D106	G - 13
D107	B - 6
D108	J - 13
D109	C - 6
D110	B - 7
D111	B - 6
D112	C - 8
D113	G - 5
D114	B - 7
D115	B - 7
D116	I - 6
D117	I - 12
D118	I - 12
D119	J - 10
D120	D - 4
D121	I - 13
D122	E - 2
D123	B - 6
D124	G - 8
D125	D - 2
D126	B - 7
D127	B - 8
D128	B - 8
D129	B - 8
D130	B - 8
D131	G - 7
D132	G - 6
D133	I - 10
D134	J - 9
D135	J - 9
D136	I - 9
D137	J - 8
D138	H - 9
D139	F - 8
D140	G - 6
D141	G - 6
D142	G - 6
D143	F - 8
D144	I - 5
D145	B - 7
D146	I - 11
D147	H - 10
D148	I - 9

ADJUSTING ELEMENT	
RV104	G - 8

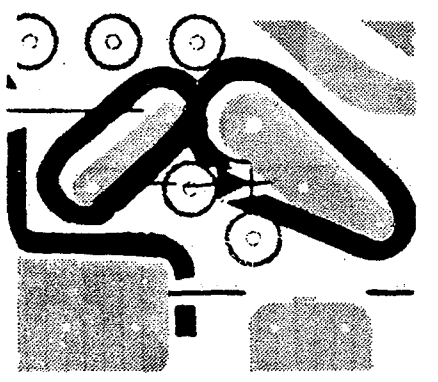

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

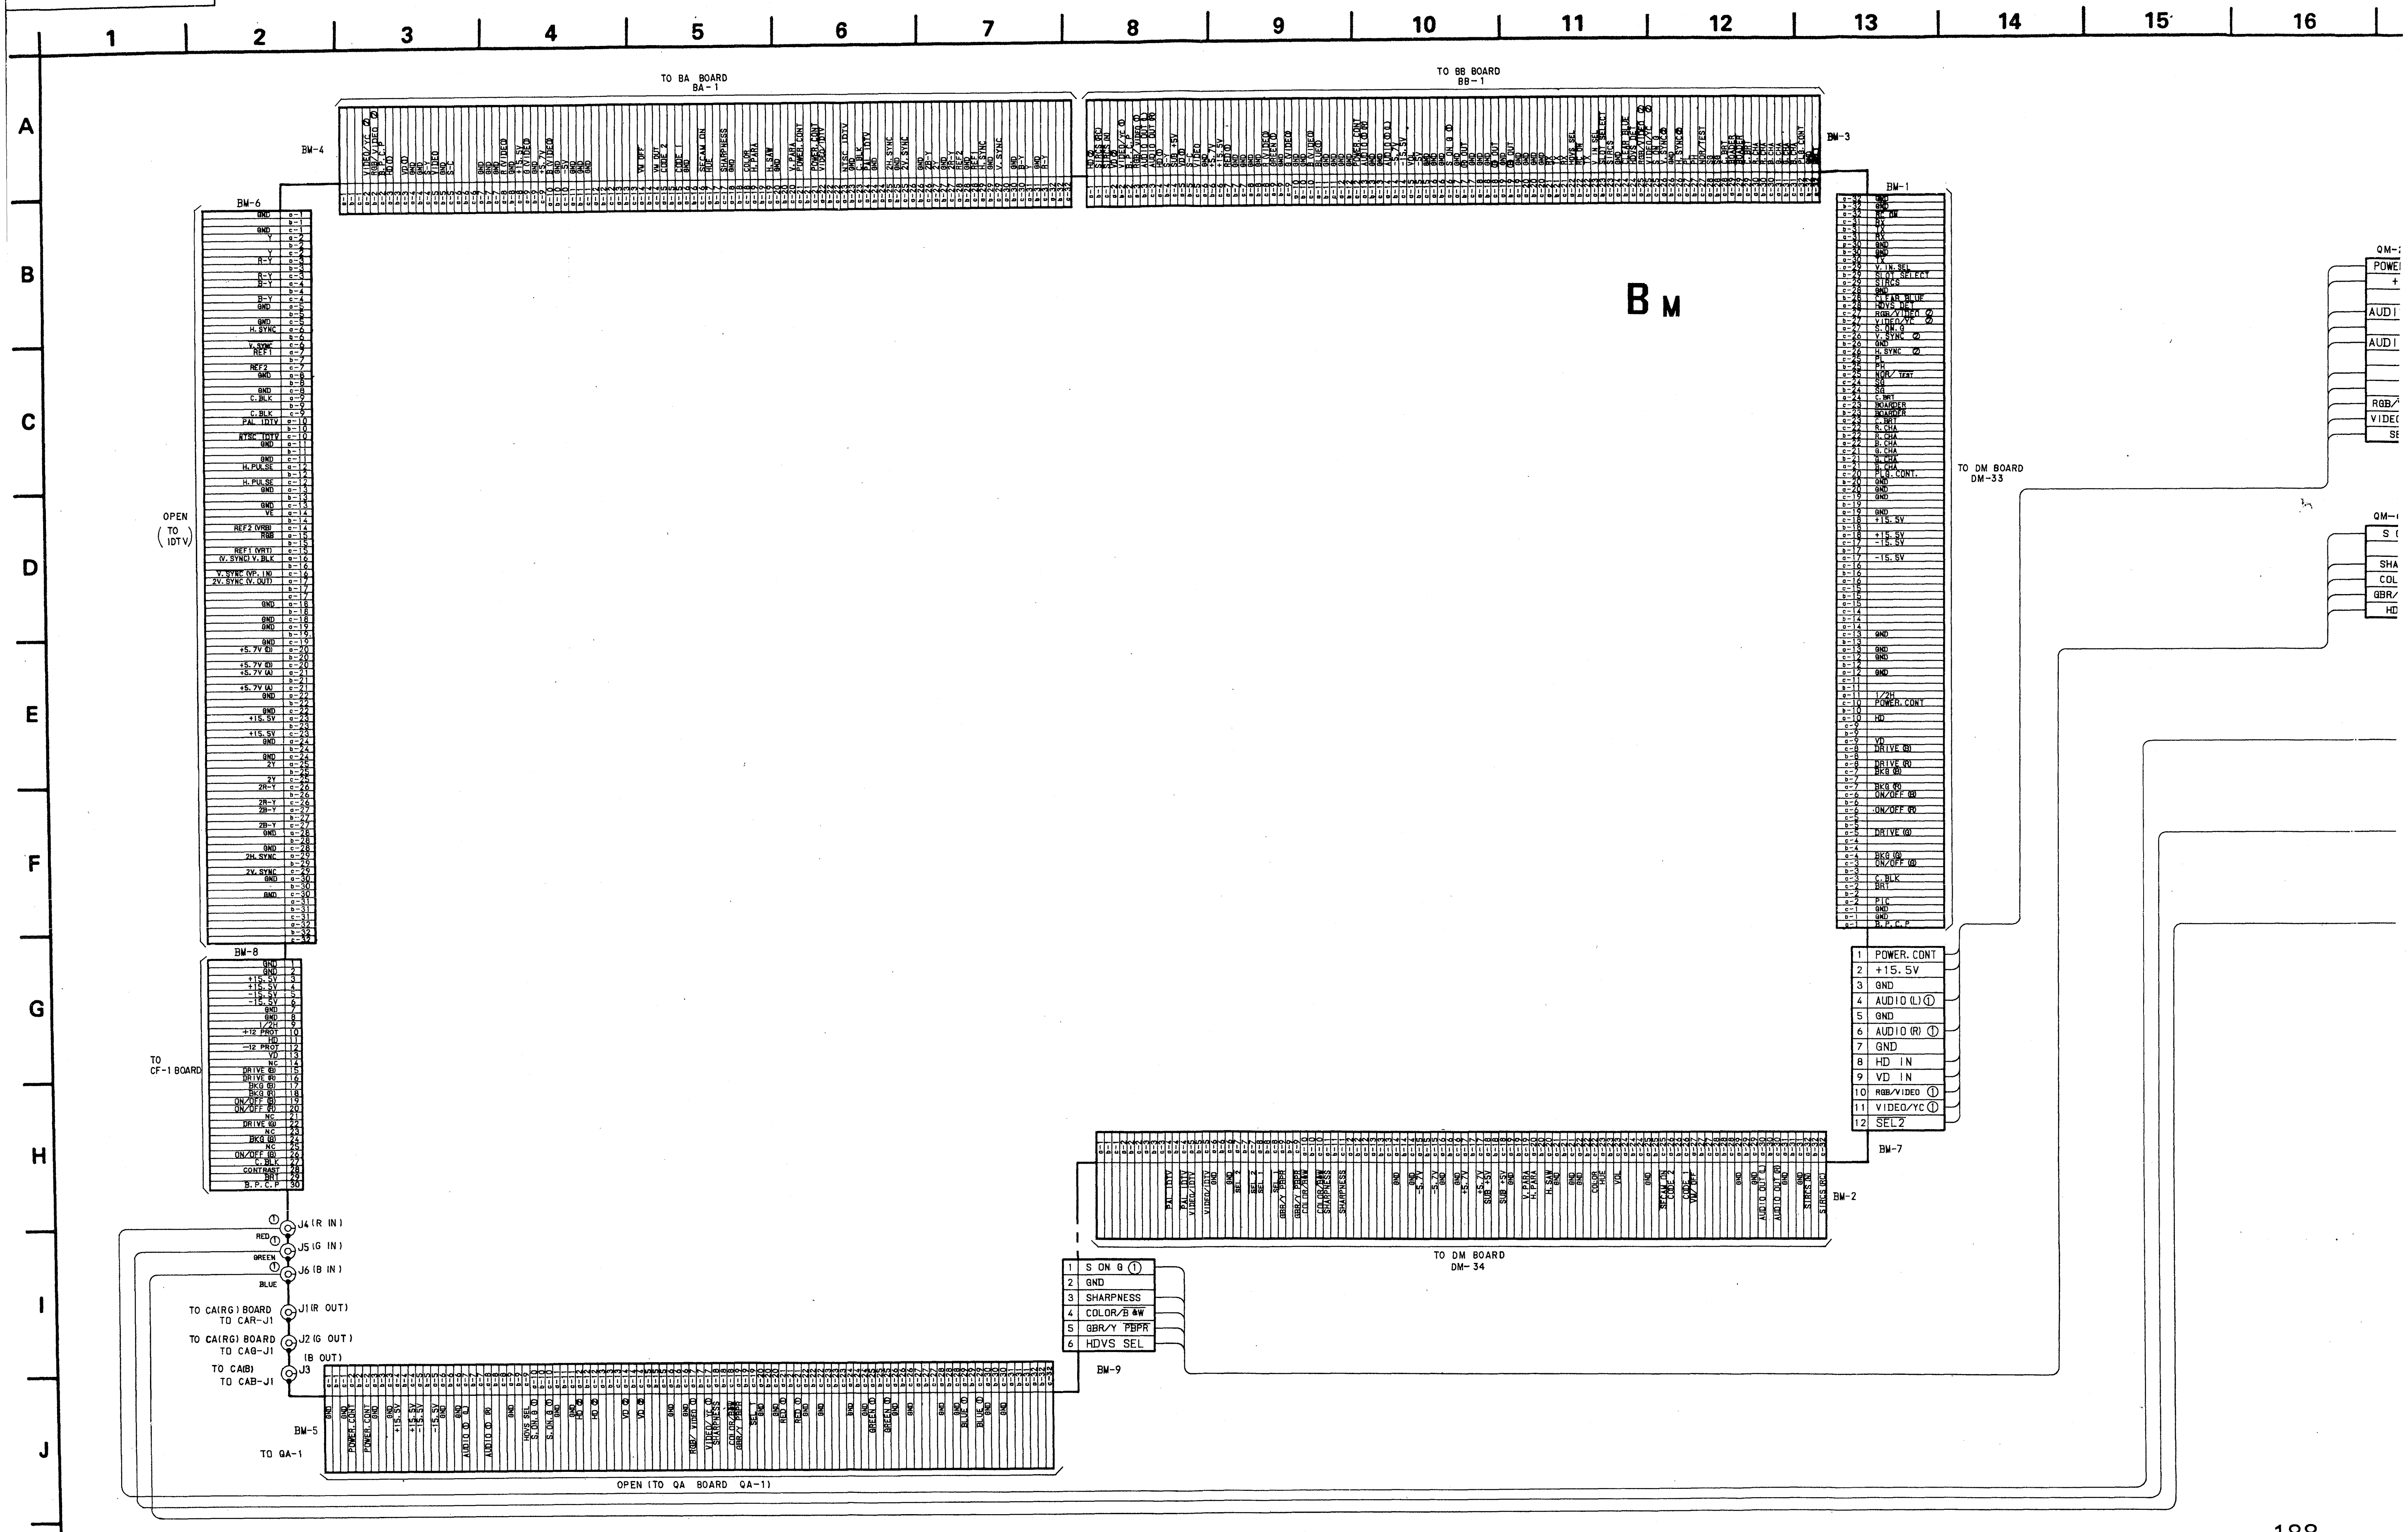
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
TO BA BOARD BA-1
BM-4
TO BB BOARD BB-1
BM-3
BM-6
BM-1
B M
OPEN (TO IDTV)
TO DM BOARD DM-33
BM-8
TO CF-1 BOARD
1 POWER. CONT
2 +15.5V
3 GND
4 AUDIO (L) ①
5 GND
6 AUDIO (R) ①
7 GND
8 HD IN
9 VD IN
10 RGB/VIDEO ①
11 VIDEO/YC ①
12 SEL 2
BM-7
BM-2
TO DM BOARD DM-34
1 S ON G ①
2 GND
3 SHARPNESS
4 COLOR/B &W
5 GBR/Y PBPR
6 HDVS SEL
BM-9
① J4 (R IN)
RED ① J5 (G IN)
GREEN J6 (B IN)
BLUE
TO CA(RG) BOARD TO CAR-J1 J1 (R OUT)
TO CA(RG) BOARD TO CAG-J1 J2 (G OUT)
(B OUT)
TO CA(B) TO CAB-J1 J3
BM-5
TO QA-1
OPEN (TO QA BOARD QA-1)
QM-
POWE
AUDI
AUDI
RGB/
VIDE
SE
QM-
S
SHA
COL
GBR/
HD

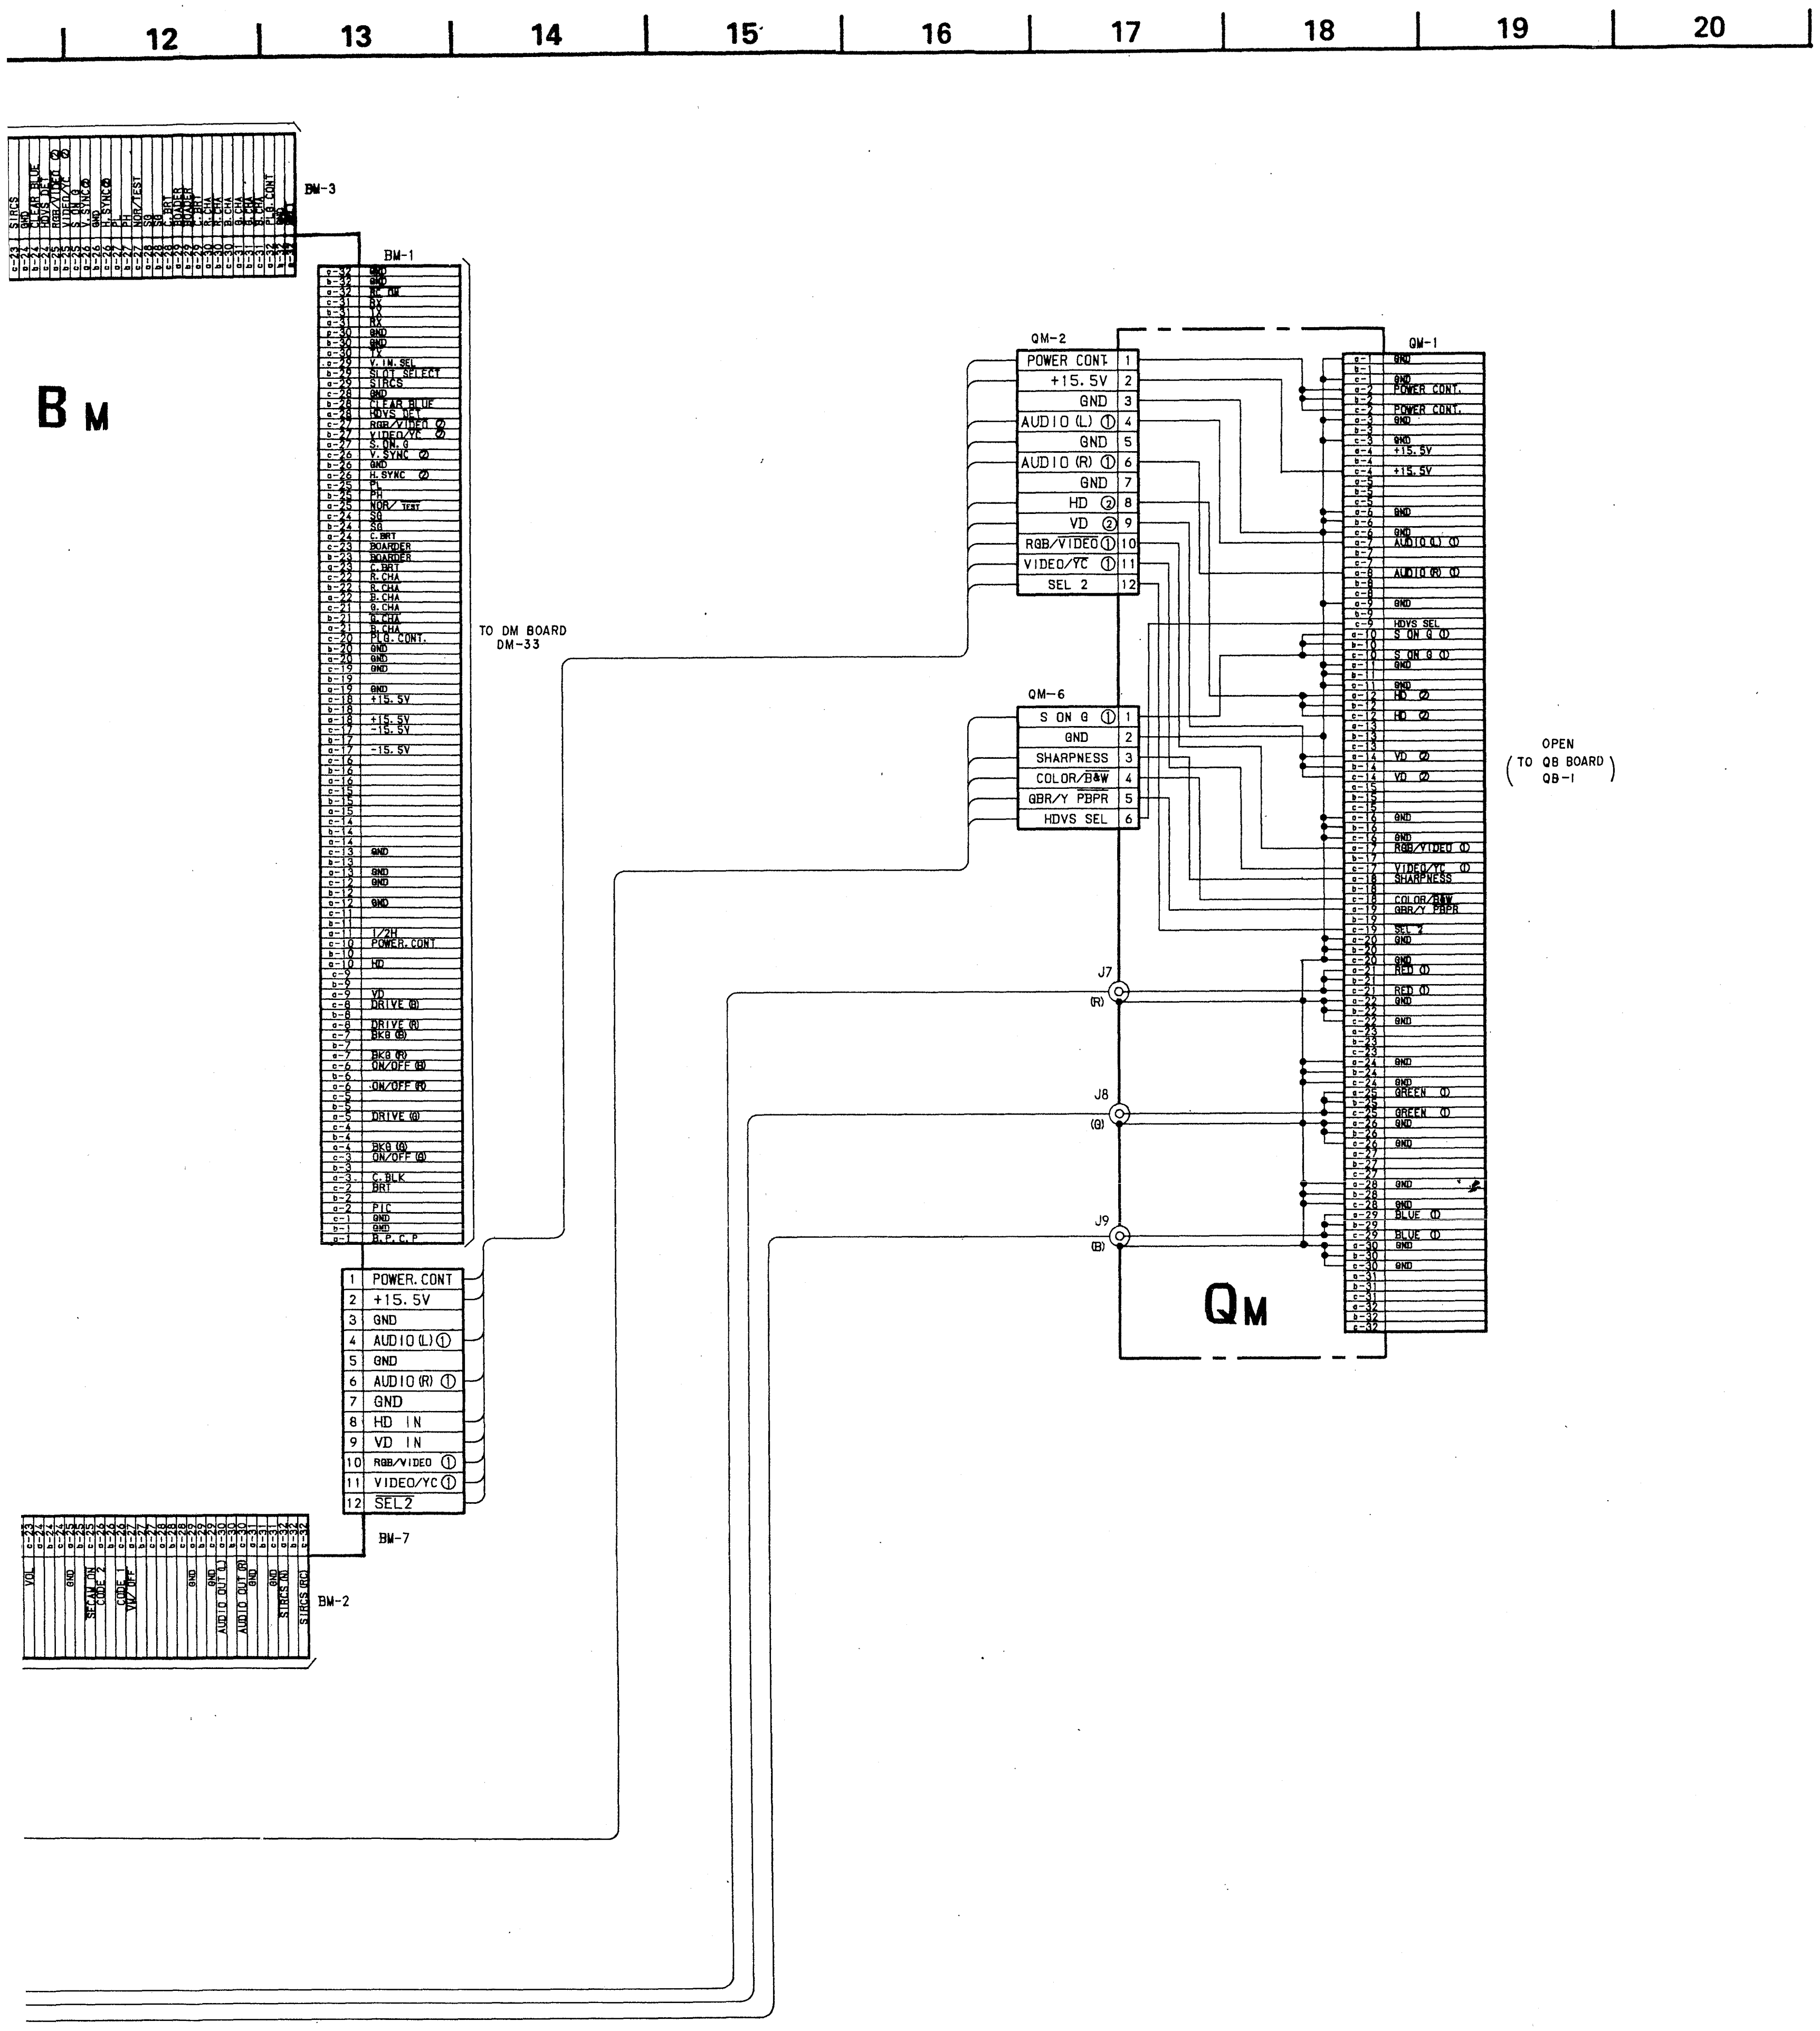
12
13
14
15
16
17
18
19
20
BM-3
BM-1
BM
TO DM BOARD DM-33
QM-2
POWER CONT 1
+15.5V 2
GND 3
AUDIO (L) ① 4
GND 5
AUDIO (R) ① 6
GND 7
HD ② 8
VD ② 9
RGB/VIDEO ① 10
VIDEO/YC ① 11
SEL 2 12
QM-6
S ON G ① 1
GND 2
SHARPNESS 3
COLOR/B&W 4
GBR/Y PBPR 5
HDVS SEL 6
QM-1
OPEN
(TO QB BOARD QB-1)
J7
(R)
J8
(G)
J9
(B)
QM
1 POWER.CONT
2 +15.5V
3 GND
4 AUDIO (L) ①
5 GND
6 AUDIO (R) ①
7 GND
8 HD IN
9 VD IN
10 RGB/VIDEO
11 VIDEO/YC ①
12 SEL2
BM-7
BM-2

BM [MOTHER BOARD] **QM** [MOTHER BOARD]

- BM BOARD -

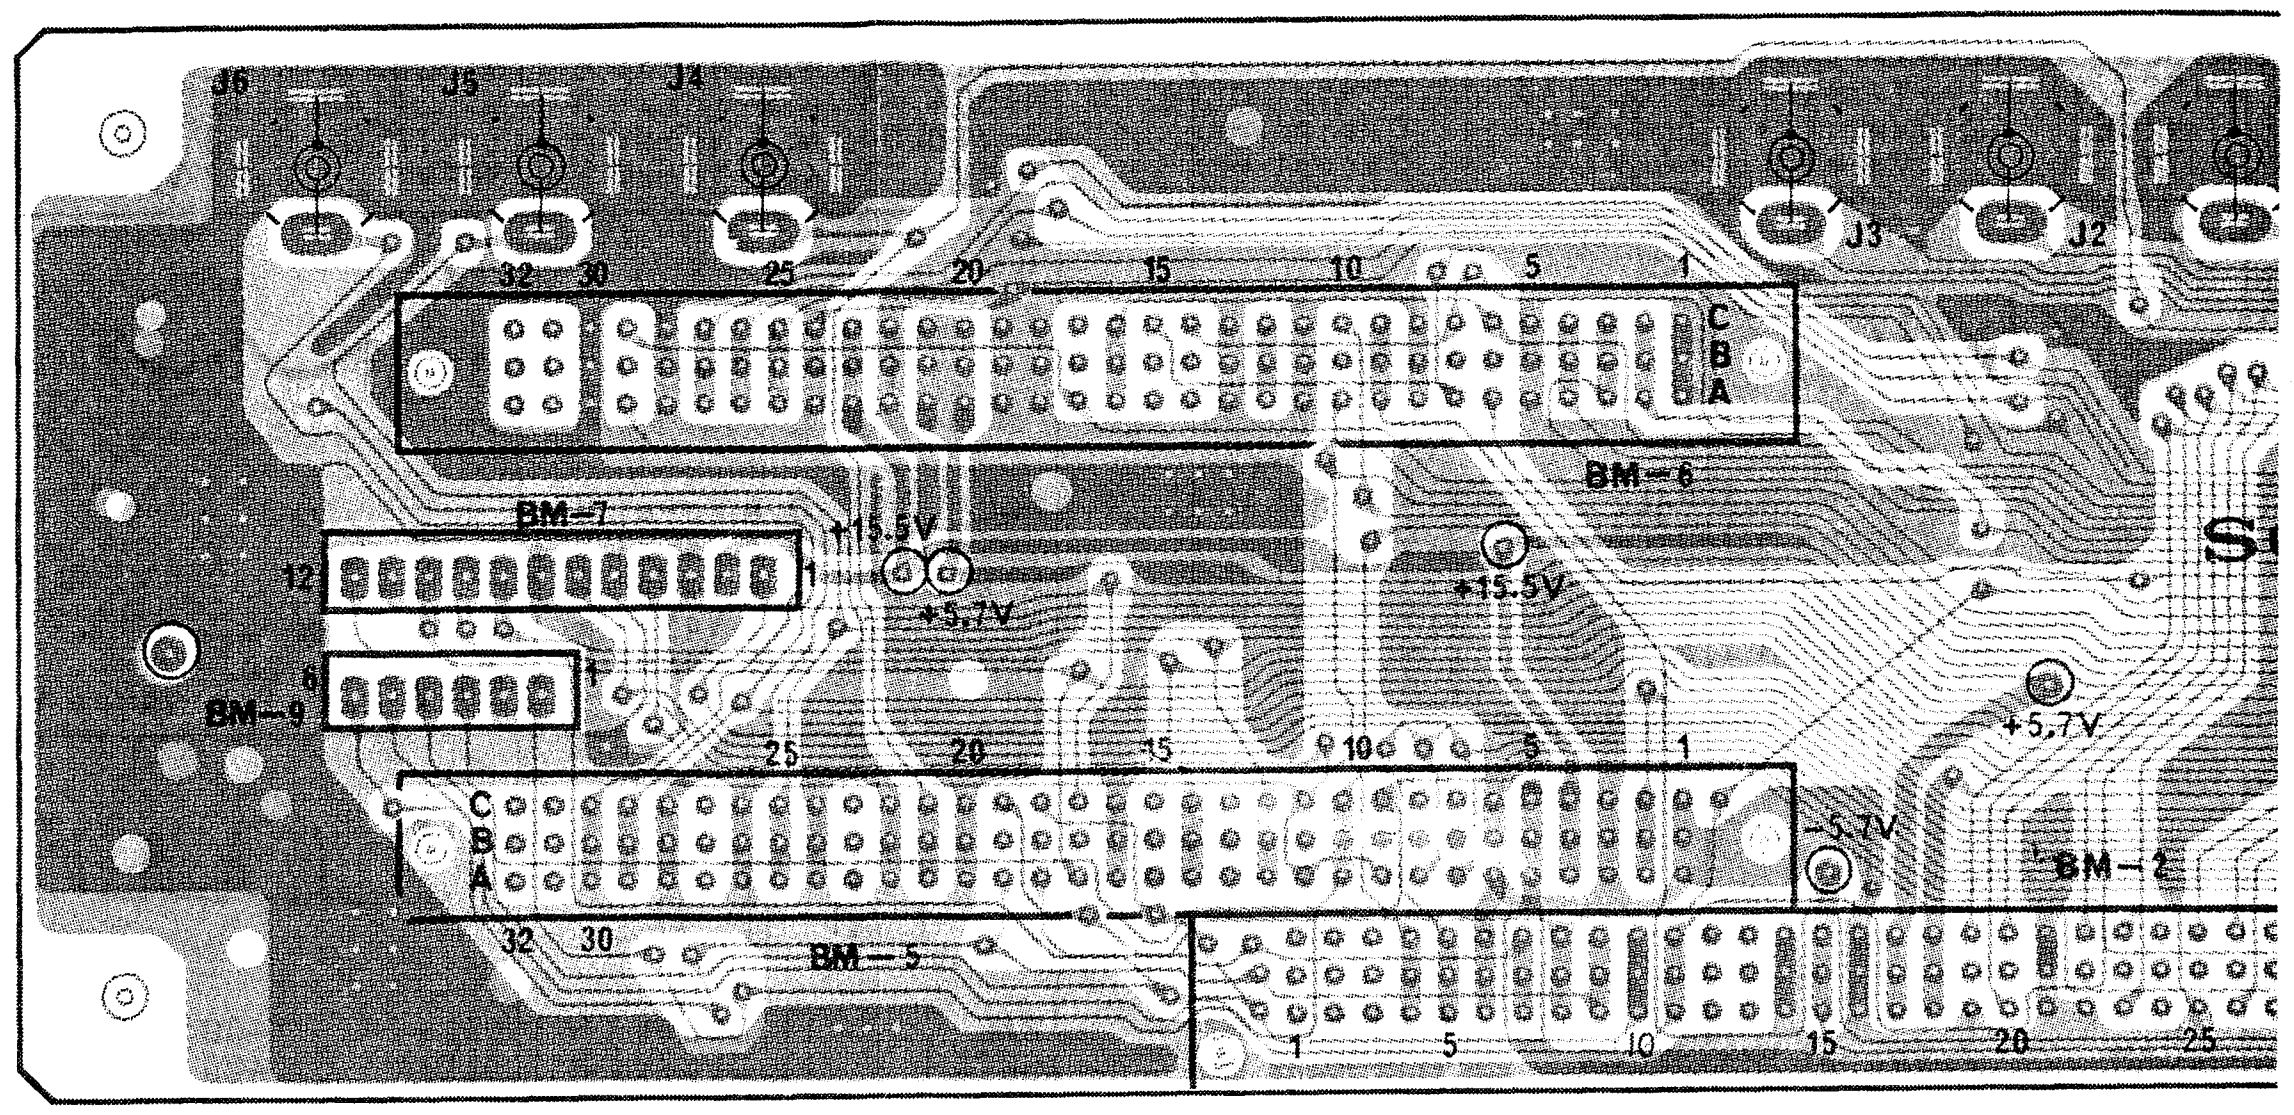
J6
J5
J4
J3
J2
32
30
25
20
15
10
5
1
C
B
A
BM-6
BM-7
12
BM-9
+15.5V
+5.7V
-5.7V
BM-2
BM-5

- QM BOARD -

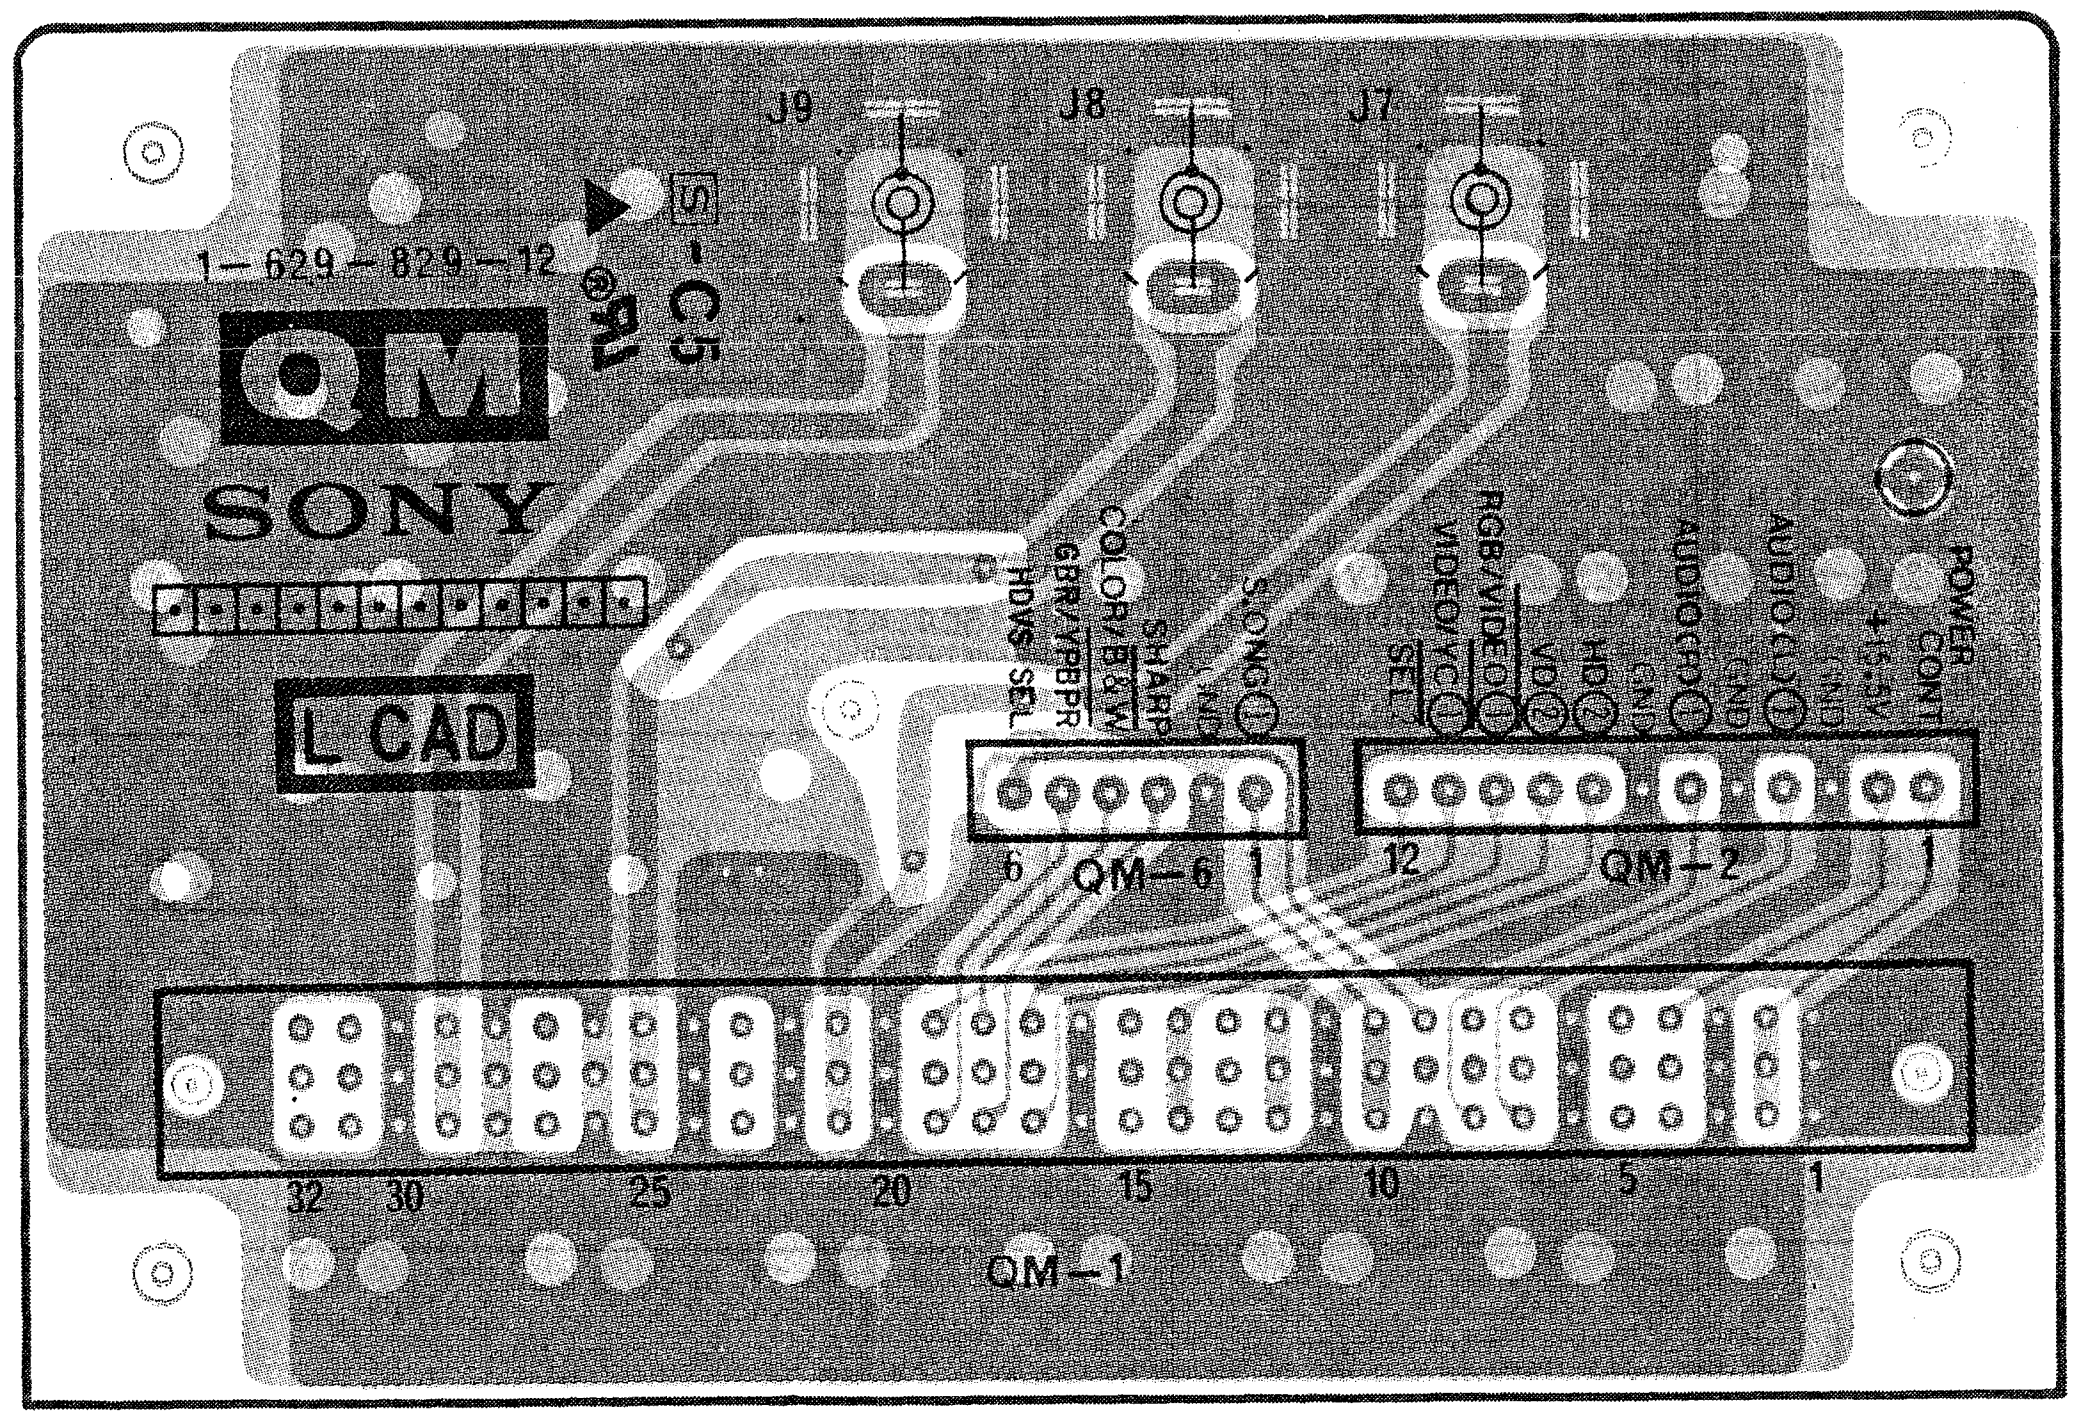
J9
J8
J7
1-629-829-12
QM
SONY
L CAD
HDVS SEL
GBR/YPBPR
COLOR/B.W
SHARP
S.ON G
SEL
VIDEO/YC
RGB/VIDEO
VD
HD
AUDIO(R)
AUDIO(L)
+15.5V
POWER CONT
QM-6
QM-2
12
6
1
32
30
25
20
15
10
5
1
QM-1

BM [MOTHER BOARD] **QM** [MOTHER BOARD]

– BM BOARD –

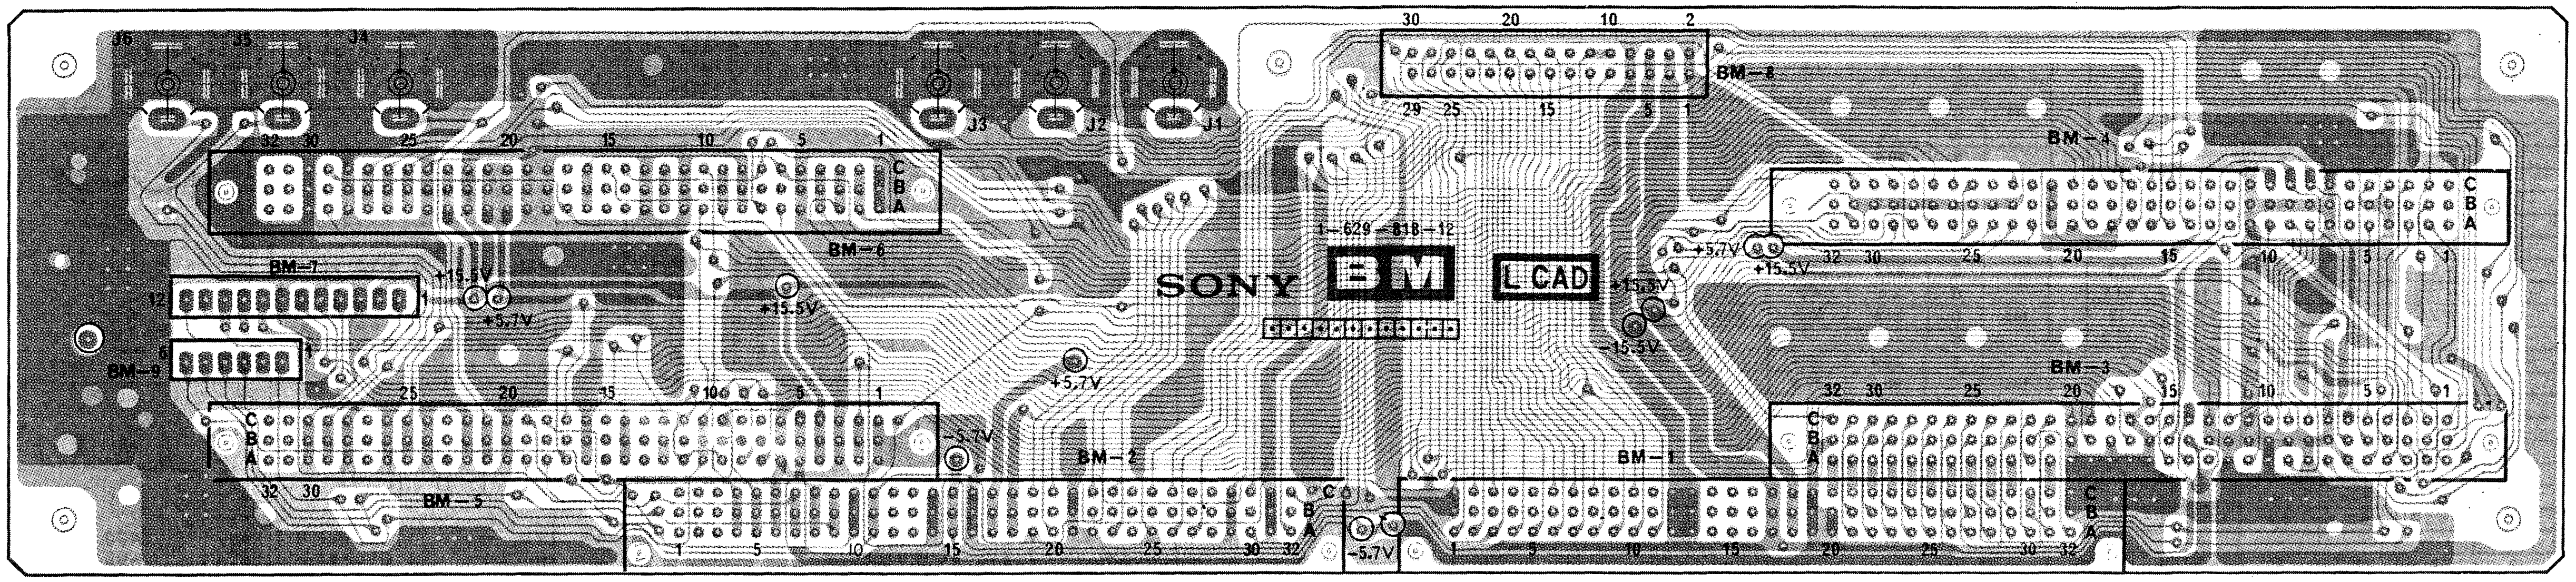
J6
J5
J4
J3
J2
J1
BM-8
30
20
10
2
29
25
15
5
BM-4
BM-6
BM-7
BM-9
BM-5
BM-2
BM-1
BM-3
C
B
A
32
30
25
20
15
10
5
1
12
+15.5V
+5.7V
-5.7V
SONY
BM
L CAD
1-629-818-12

– QM BOARD –

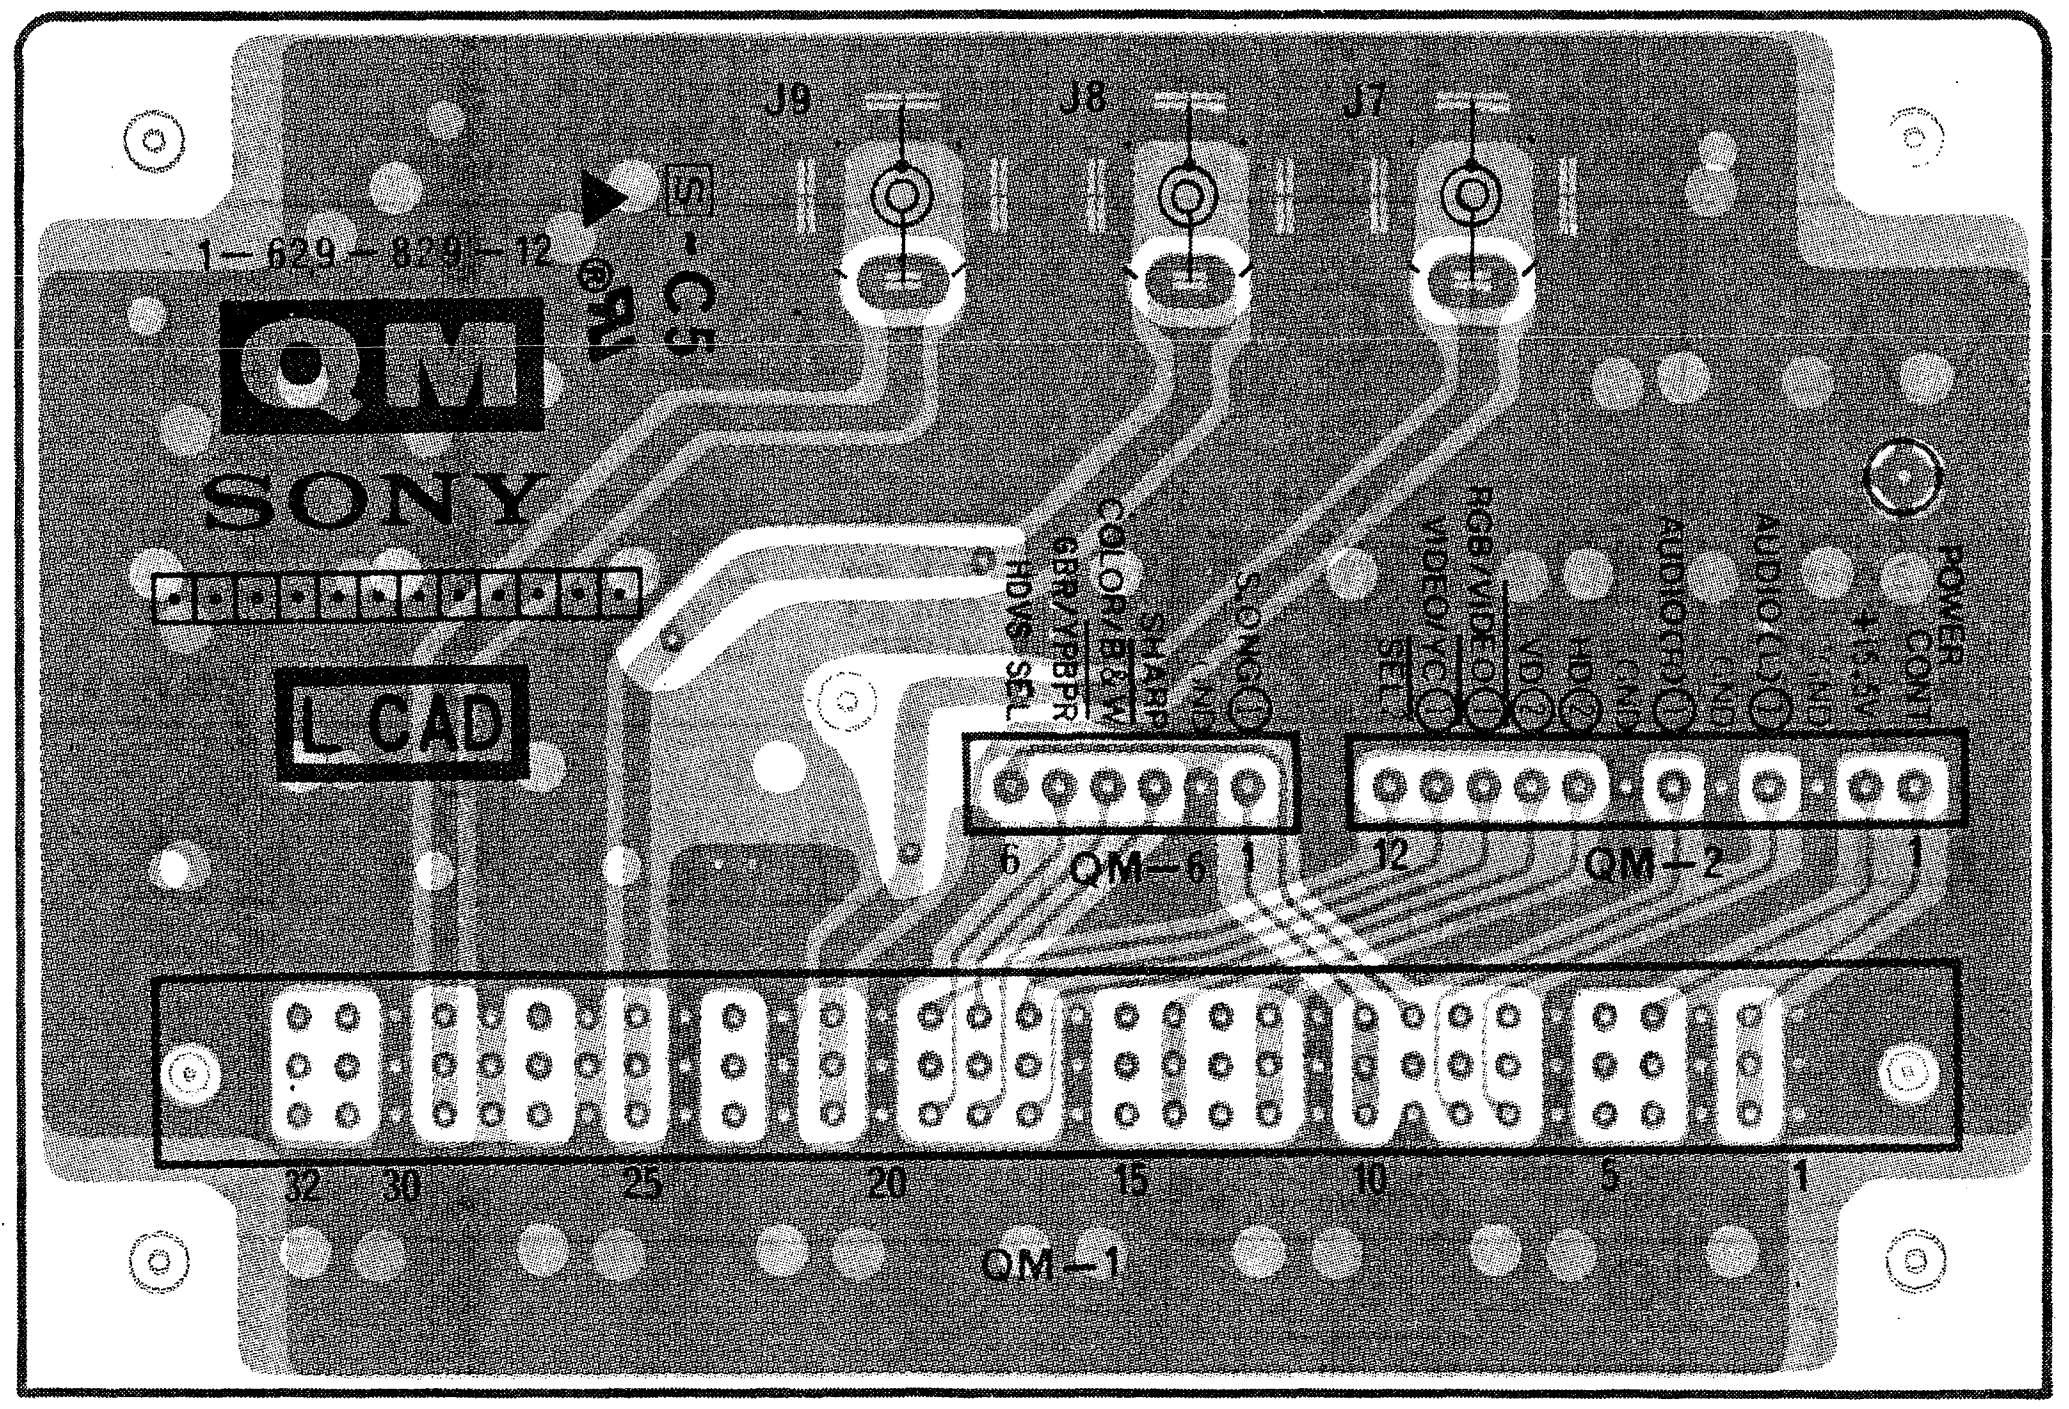
J9
J8
J7
1-629-829-12
QM
SONY
L CAD
S.ONG
GND
SHARP
COLOR/B&W
GBR/YBPR
HD/VS SEL
RGB/VIDEO
VIDEO/YC
SEL
VD
HD
GND
AUDIO(R)
GND
AUDIO(L)
GND
+15.5V
POWER
CONT
6
QM-6
1
12
QM-2
1
32
30
25
20
15
10
5
1
QM-1

- ▨ : Pattern from the side which enables seeing.
- ▩ : Pattern of the rear side.

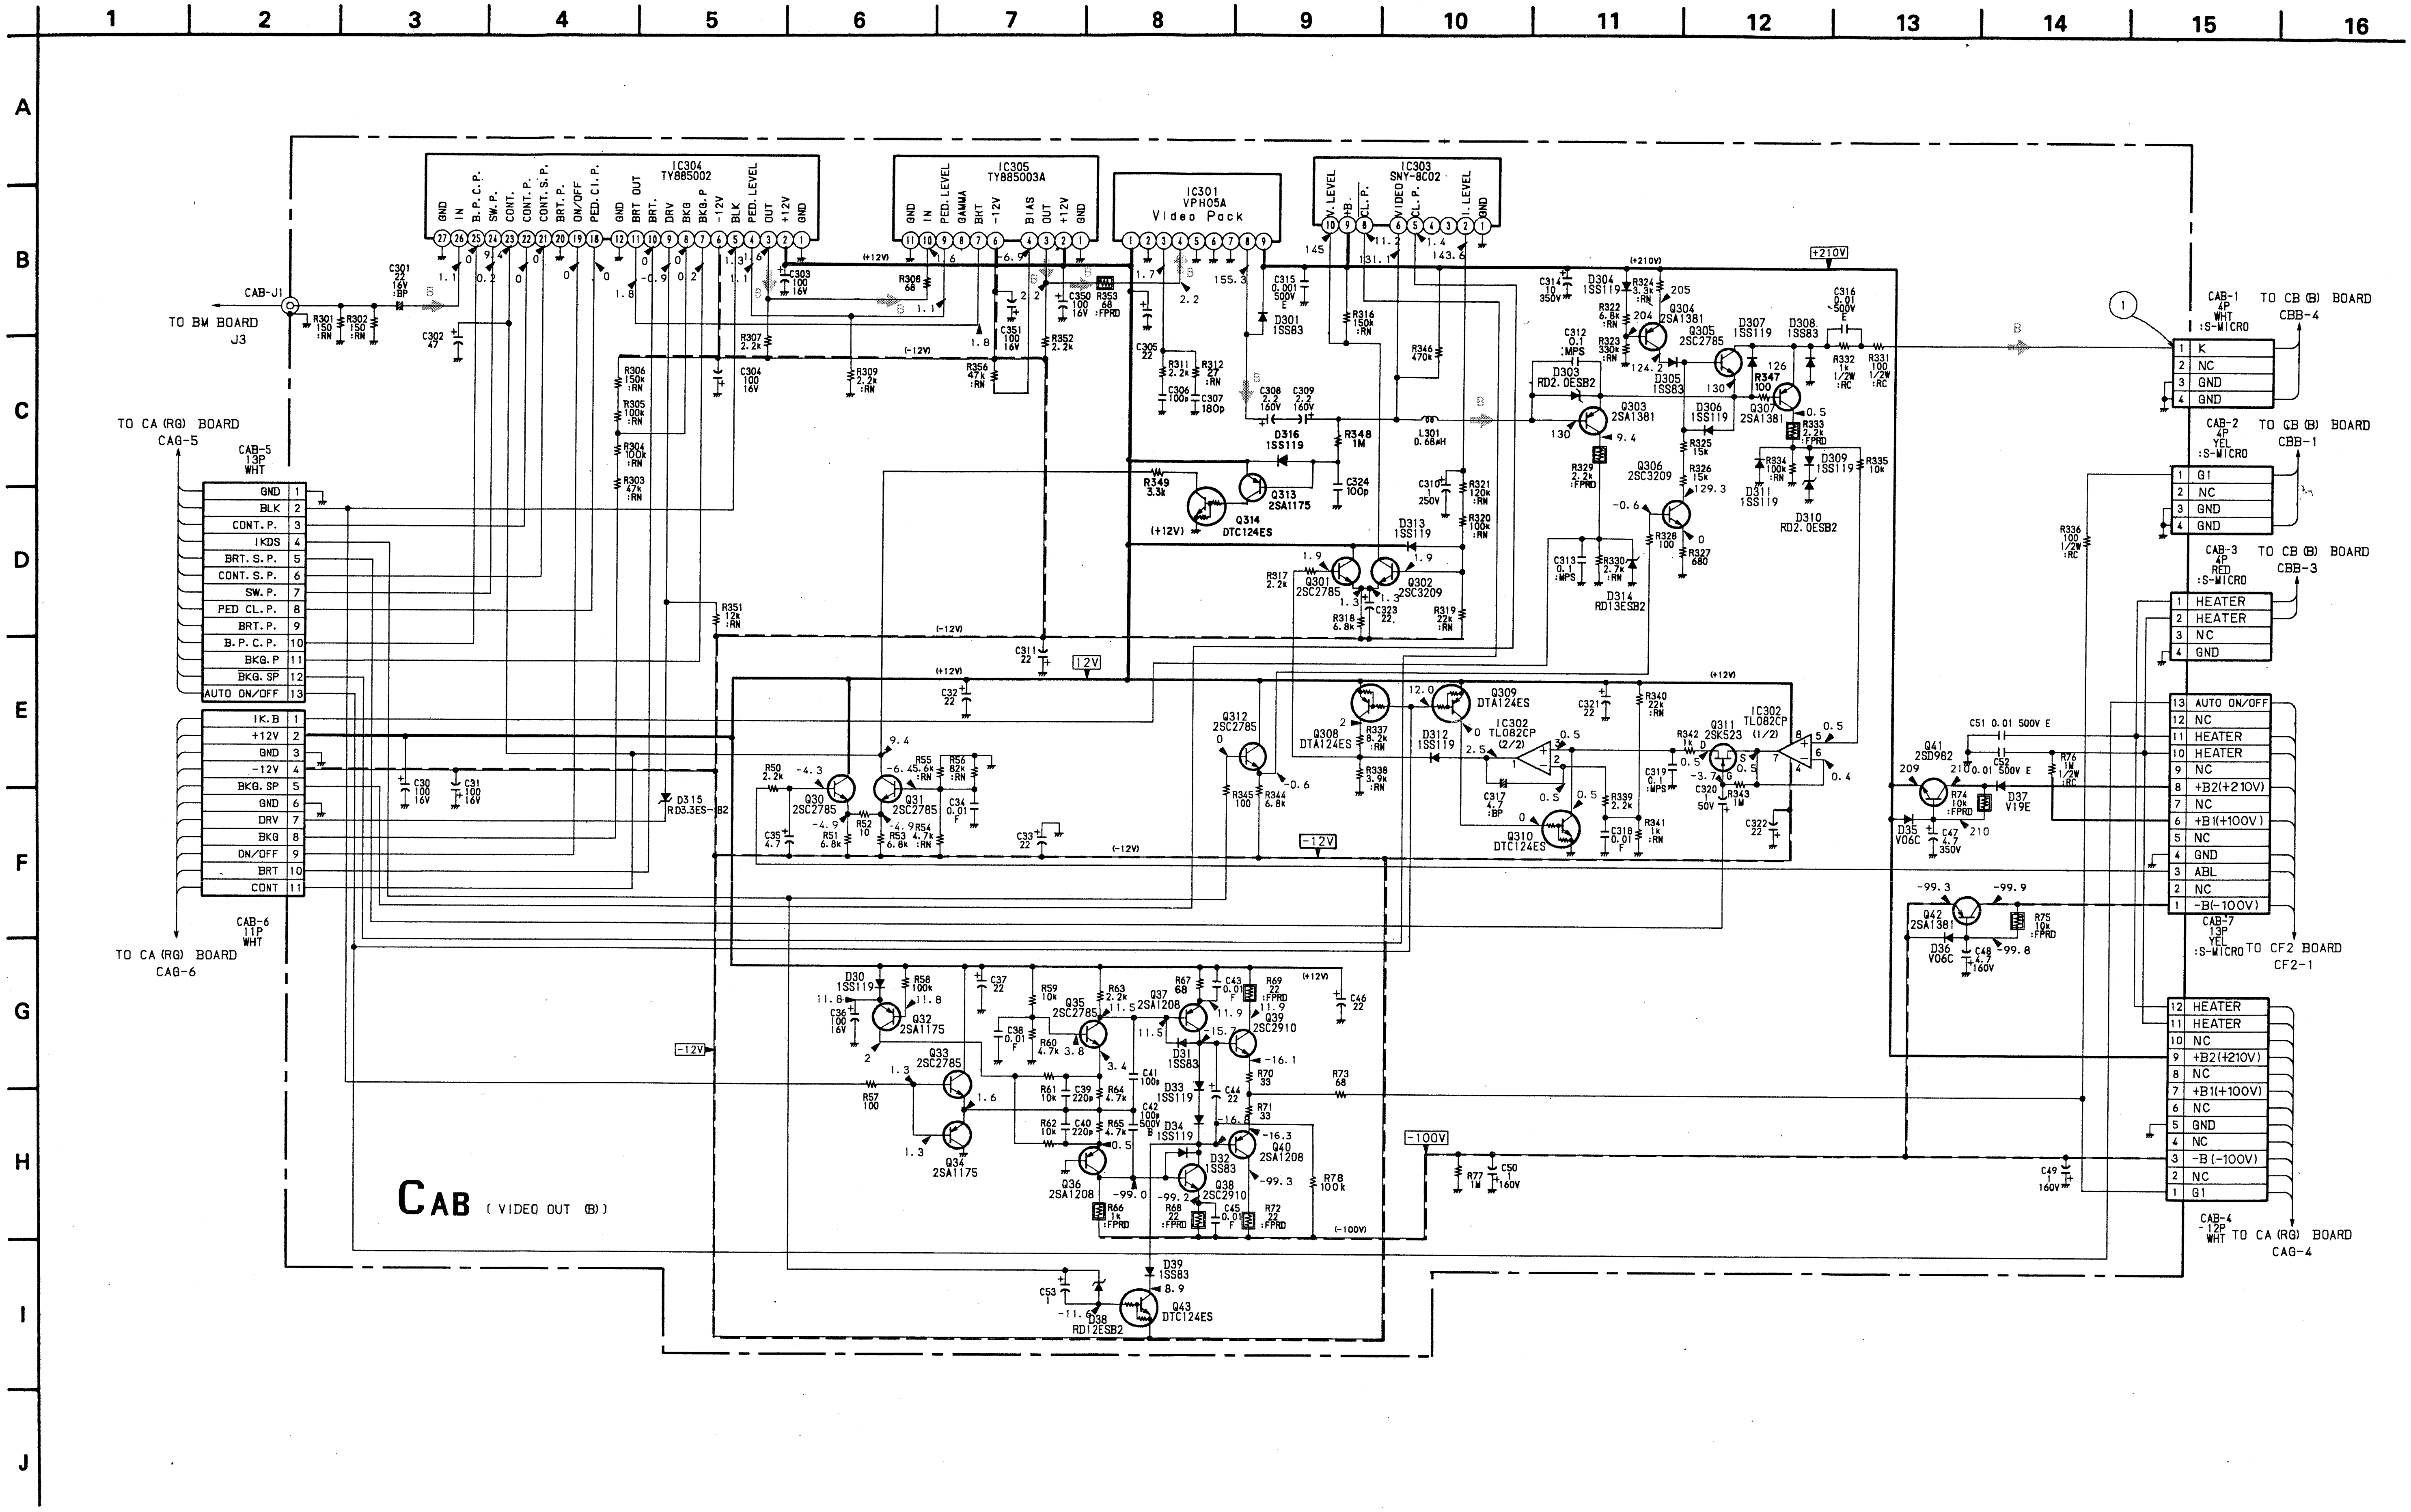
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
IC304
TY885002
GND
IN
B.P.C.P.
SW.P.
CONT.
CONT.P.
CONT.S.P.
BRT.P.
ON/OFF
PED.CL.P.
GND
BRT OUT
BRT.
DRV
BKG
BKG.P
-12V
BLK
PED.LEVEL
OUT
+12V
GND
IC305
TY885003A
GND
IN
PED.LEVEL
GAMMA
BHT
-12V
BIAS
OUT
+12V
GND
IC301
VPH05A
Video Pack
IC303
SNY-BC02
V.LEVEL
+B
CL.P.
VIDEO
CL.P.
I.LEVEL
GND
CAB-J1
TO BM BOARD
J3
TO CA (RG) BOARD
CAG-5
CAB-5
13P
WHT
GND
BLK
CONT.P.
IKDS
BRT.S.P.
CONT.S.P.
SW.P.
PED CL.P.
BRT.P.
B.P.C.P.
BKG.P
BKG.SP
AUTO ON/OFF
IK.B
+12V
GND
-12V
BKG.SP
GND
DRV
BKG
ON/OFF
BRT
CONT
CAB-6
11P
WHT
TO CA (RG) BOARD
CAG-6
CAB-1
4P
WHT
:S-MICRO
TO CB (B) BOARD
CBB-4
K
NC
GND
GND
CAB-2
4P
YEL
:S-MICRO
TO CB (B) BOARD
CBB-1
G1
NC
GND
GND
CAB-3
4P
RED
:S-MICRO
TO CB (B) BOARD
CBB-3
HEATER
HEATER
NC
GND
AUTO ON/OFF
NC
HEATER
HEATER
NC
+B2(+210V)
NC
+B1(+100V)
NC
GND
ABL
NC
-B(-100V)
CAB-7
13P
YEL
:S-MICRO
TO CF2 BOARD
CF2-1
HEATER
HEATER
NC
+B2(+210V)
NC
+B1(+100V)
NC
GND
NC
-B(-100V)
NC
G1
CAB-4
12P
WHT
TO CA (RG) BOARD
CAG-4
+210V
12V
-12V
-100V
Q301 2SC2785
Q302 2SC3209
Q303 2SA1381
Q304 2SA1381
Q305 2SC2785
Q306 2SC3209
Q307 2SA1381
Q308 DTA124ES
Q309 DTA124ES
Q310 DTC124ES
Q311 2SK523
Q312 2SC2785
Q313 2SA1175
Q314 DTC124ES
IC302 TL082CP (1/2)
IC302 TL082CP (2/2)
D301 1SS83
D303 RD2.0ESB2
D304 1SS119
D305 1SS83
D306 1SS119
D307 1SS119
D308 1SS83
D309 1SS119
D310 RD2.0ESB2
D311 1SS119
D312 1SS119
D313 1SS119
D314 RD13ESB2
D315 RD3.3ES-B2
D316 1SS119
L301 0.68μH
Q30 2SC2785
Q31 2SC2785
Q32 2SA1175
Q33 2SC2785
Q34 2SA1175
Q35 2SC2785
Q36 2SA1208
Q37 2SA1208
Q38 2SC2910
Q39 2SC2910
Q40 2SA1208
Q41 2SD982
Q42 2SA1381
Q43 DTC124ES
D30 1SS119
D31 1SS83
D32 1SS83
D33 1SS119
D34 1SS119
D35 V06C
D36 V06C
D37 V19E
D38 RD12ESB2
D39 1SS83
C51 0.01 500V E
C52 0.01 500V E
1
B
CAB (VIDEO OUT (B))

CA (B) [VIDEO OUT (B)]

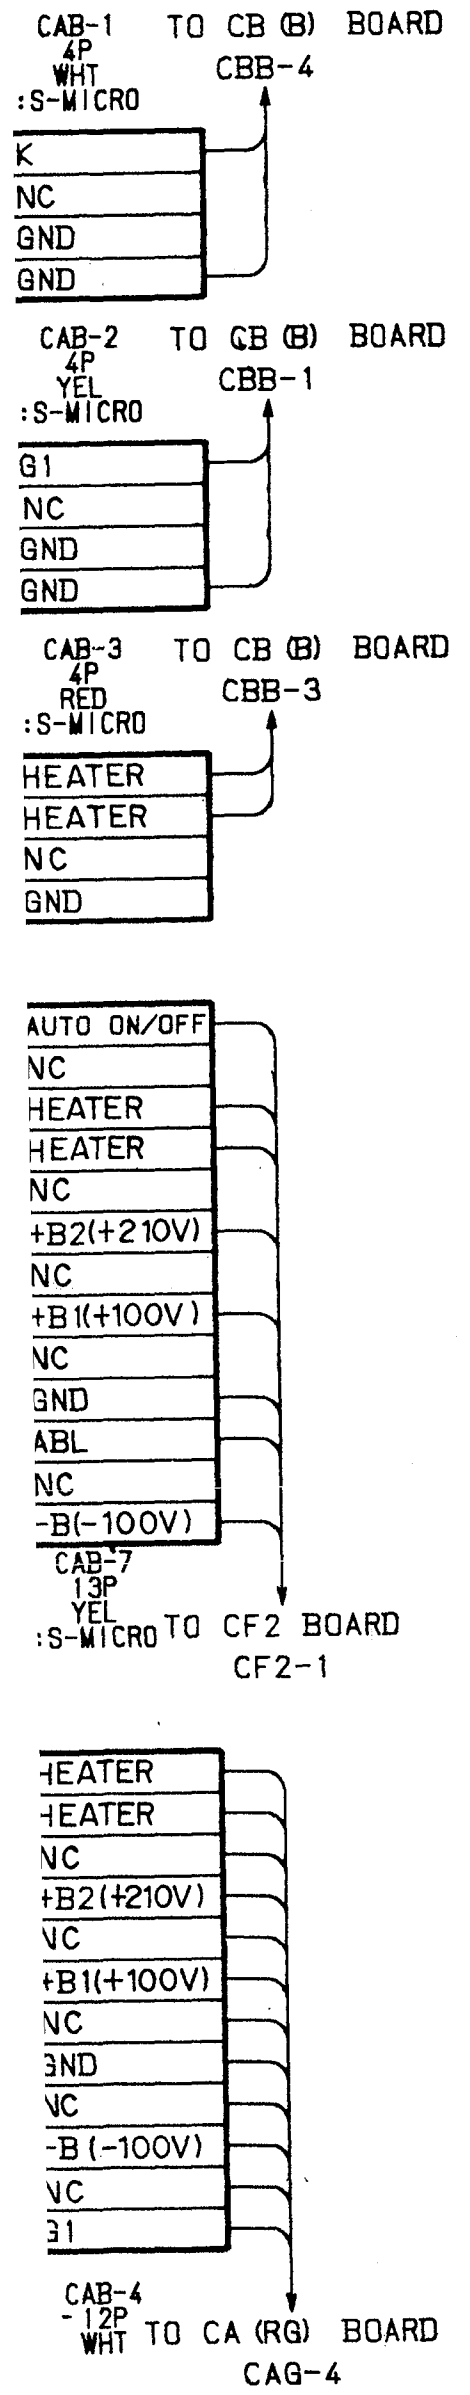
CAB-1
4P
WHT
:S-MICRO
TO CB (B) BOARD
CBB-4
K
NC
GND
GND
CAB-2
4P
YEL
:S-MICRO
TO CB (B) BOARD
CBB-1
G1
NC
GND
GND
CAB-3
4P
RED
:S-MICRO
TO CB (B) BOARD
CBB-3
HEATER
HEATER
NC
GND
AUTO ON/OFF
NC
HEATER
HEATER
NC
+B2(+210V)
NC
+B1(+100V)
NC
GND
ABL
NC
-B(-100V)
CAB-7
13P
YEL
:S-MICRO
TO CF2 BOARD
CF2-1
HEATER
HEATER
NC
+B2(+210V)
NC
+B1(+100V)
NC
GND
NC
-B(-100V)
NC
G1
CAB-4
12P
WHT
TO CA (RG) BOARD
CAG-4

CA (B)	IC301	VPH05	B VIDEO OUT
	302	TL082CP	B AUTO BKG
	303	SNY-8C02	B CLAMP
	304	TY885002	B SIGNAL PROCESS
	305	TY885003	B γ CORR.
	Q30	2SC2785	Σ ABL
	31	2SC2785	Σ ABL
	32	2SA1175	OFF SPOT PROT
	33	2SC2785	BLK
	34	2SA1175	BLK
	35	2SC2785	BLK
	36	2SA1208	BLK
	37	2SA1208	BLK
	38	2SC2910	BLK
	39	2SC2910	BLK
	40	2SA1208	BLK
	41	2SD982	+ 210V RIPPLE FILTER
	42	2SA1381	− 100V RIPPLE FILTER
	43	DTC124ES	BRT PULSE GEN
	301	2SC2785	B CLAMP
	302	2S3209	B CLAMP
	303	2SA1381	B IK DET-1
	304	2SA1381	B CURRENT SOURCE
	305	2SC2785	B IK DET-2
	306	2SC3209	B IK DET-2
	307	2SA1381	B IK DET-2
	308	DTA124ES	B AUTO BKG SW
	309	DTA124ES	B AUTO BKG SW
	310	DTC124ES	B·AUTO BKG SW
	311	2SK523	B AUTO BKG
	312	2SC2785	B IK DET-2
	313	2SA1175	
	314	DTC124ES	
	D30	1SS119	OFF SPOT PROT
	31	1SS83	BLK
	32	1SS83	BLK
	33	1SS119	BLK
	34	1SS119	BLK
	35	V06C	+ 12V RIPPLE FILTER PROT
	36	V06C	− 100V RIPPLE FILTER PROT
	37	V19E	+ 210V RIPPLE FILTER PROT
	38	RD12ESB2	BRT PULSE GEN
	39	1SS83	BRT PULSE GEN
	301	1SS83	B VIDEO OUT PROT
	303	RD2.0ESB2	B IK DET-1 PROT
	304	1SS119	B THERM COMP
	305	1SS83	B IK DET-2 PROT
	306	1SS119	B IK DET-2 PROT
	307	1SS119	B IK DET-2 PROT
	308	1SS83	B VIDEO OUT PROT
	309	1SS119	B IK DET-2 PROT
	310	RD2.0ESB2	B IK DET-2 PROT
	311	1SS119	B IK DET-2 PROT
	312	1SS119	B AUTO BKG SW
	313	1SS119	B OFF SPOT PROT
	314	RD13ESB2	B IK DET-2 PROT
	315	RD3.3ESB2	B DRV
	316	1SS119	

– CA (B) BOARD –

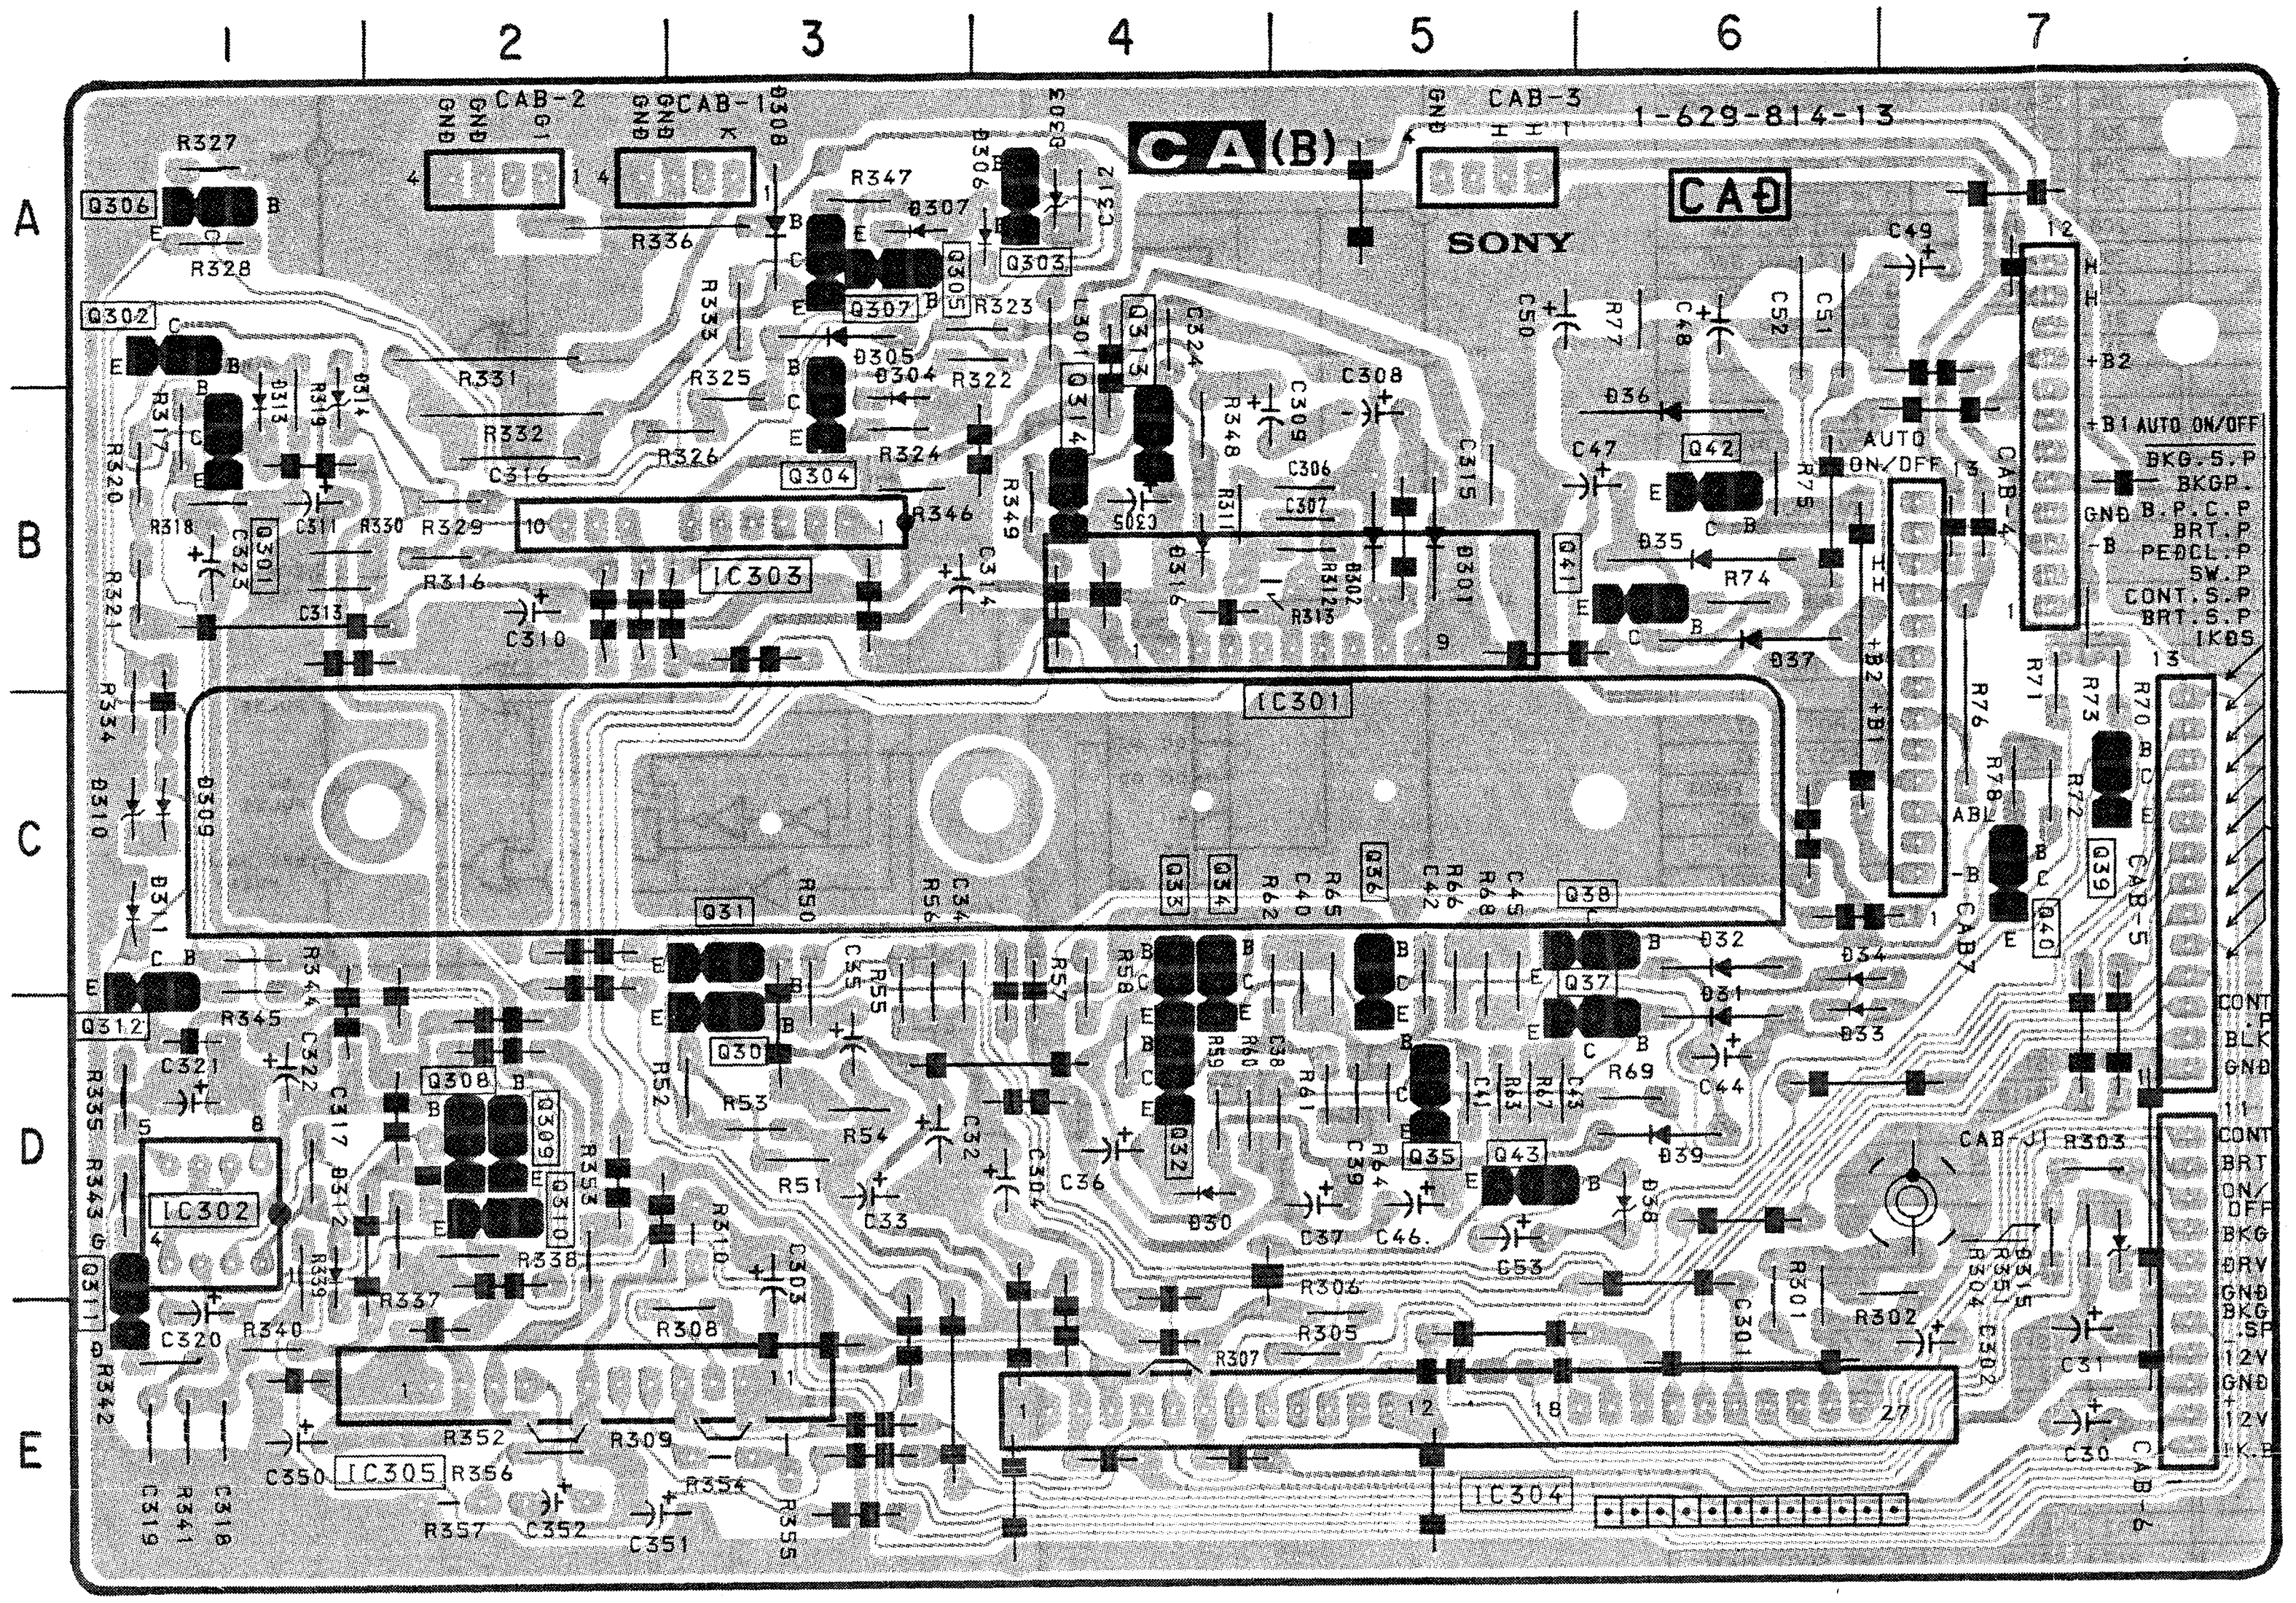
1
2
3
4
5
6
7
A
B
C
D
E
CA(B)
CAD
SONY
1-629-814-13
CAB-2
CAB-1
CAB-3
CAB-4
CAB-5
CAB-6
CAB-7
IC301
IC302
IC303
IC304
IC305
Q302
Q303
Q304
Q306
Q307
Q308
Q309
Q310
Q311
Q312
Q313
Q314
Q30
Q31
Q32
Q33
Q34
Q35
Q36
Q37
Q38
Q39
Q40
Q41
Q42
Q43
AUTO ON/OFF
+B2
+B1
GND
-B
BKG.S.P
BKGP.
B.P.C.P
BRT.P
PEDCL.P
SW.P
CONT.S.P
BRT.S.P
IKBS
CONT
BLK
BRT
ON/OFF
BKG
DRV
12V
K

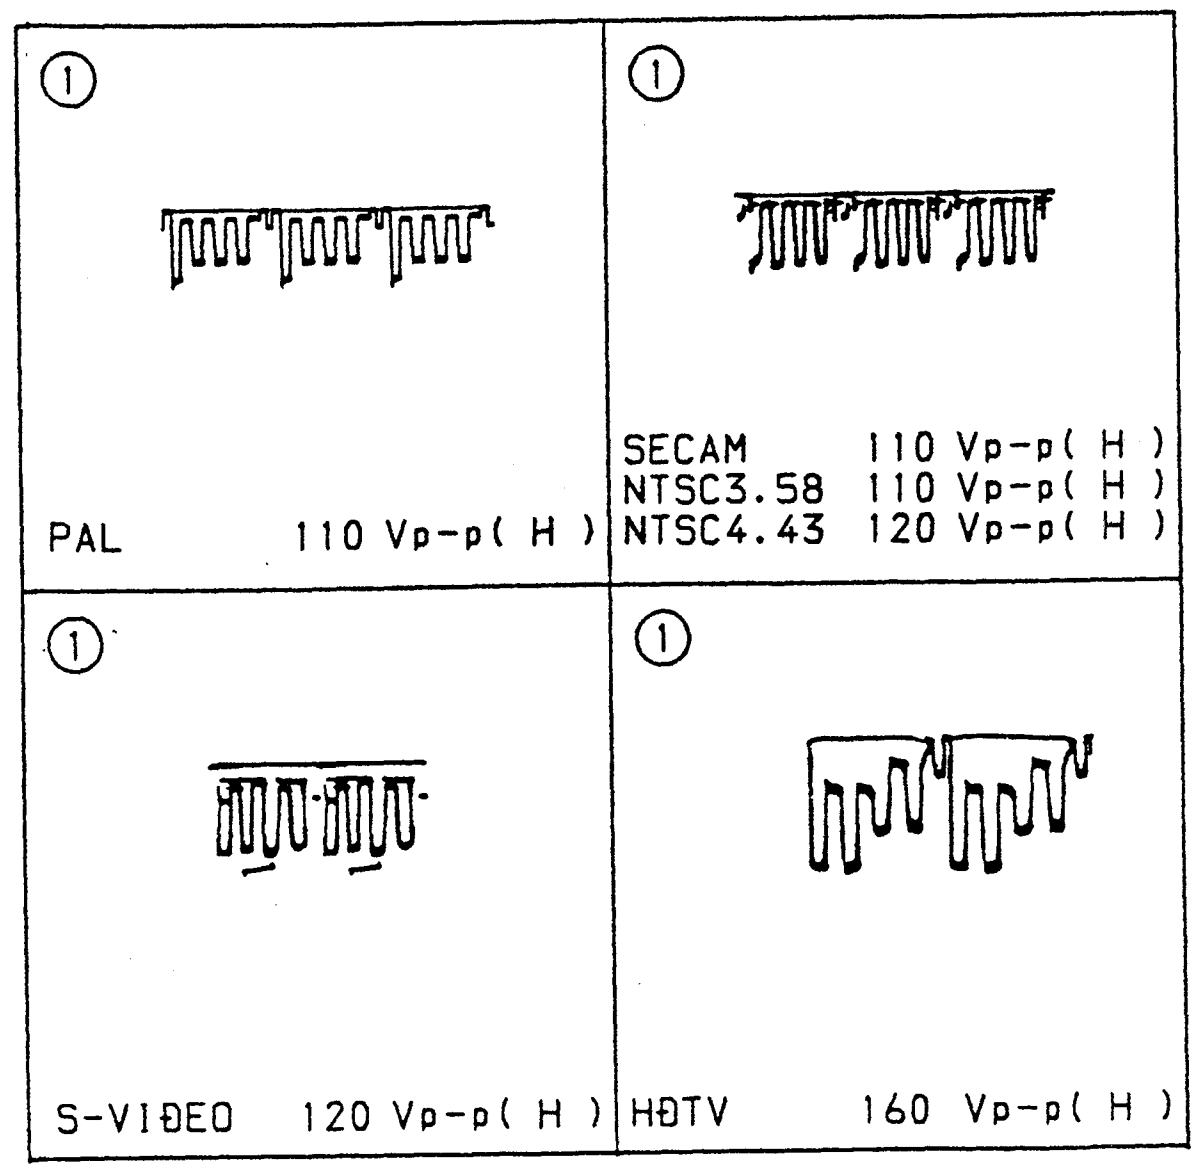

CA(B) BOARD

IC	
IC301	B - 5
IC302	D - 1
IC303	B - 3
IC304	E - 5
IC305	E - 2

TRANSISTOR	
Q30	D - 3
Q31	C - 3
Q32	D - 4
Q33	C - 4
Q34	C - 4
Q35	D - 5
Q36	C - 5
Q37	D - 6
Q38	C - 6
Q39	C - 7
Q40	C - 7
Q41	B - 6
Q42	B - 6
Q43	D - 5
Q301	B - 1
Q302	A - 1
Q303	A - 4
Q304	B - 3
Q305	A - 3
Q306	A - 1
Q307	A - 3
Q308	D - 2
Q309	D - 2
Q310	D - 2
Q311	D - 1
Q312	C - 1
Q313	B - 4
Q314	B - 4

DIODE	
D30	D - 4
D31	D - 6
D32	C - 6
D33	D - 6
D34	C - 6
D35	B - 6
D36	B - 6
D37	B - 6
D38	D - 6
D39	D - 6
D301	B - 5
D303	A - 4
D304	B - 3
D305	A - 3
D306	A - 4
D307	A - 3
D308	A - 3
D309	C - 1
D310	C - 1
D311	C - 1
D312	D - 1
D313	B - 1
D314	B - 1
D315	D - 7
D316	B - 4

CA (RG)	IC1	µ PC7912H	− 12V REG	203	2SA1381	G IK DET-1
	2	µ PC7812H	+ 12V REG	204	2SA1381	G CURRENT SOURCE
	3	µ PC78L05	+ 5V REG	205	2SC2785	G IK DET-2
	4	MC74HC4538N	PULSE GEN	206	2SC3209	G IK DET-2
	5	MB675429	PULSE GEN	207	2SA1381	G IK DET-2
	6	MC74HC244N	PULSE GEN	208	DTA124ES	G AUTO BKG SW
	7	MC74HC00N	PULSE GEN	209	DTA124ES	G AUTO BKG SW
	8	TL082CP	PEAK & S. T. ABL	210	DTC124ES	G AUTO BKG SW
	101	VPH05	R VIDEO OUT	211	2SK523	G AUTO BKG
	102	TL082CP	R AUTO BKG	212	2SC2785	G IK DET-2
	103	SNY-8C02	R CLAMP			
	104	TY885002	R SIGNAL PROCESS	D1	V06C	− 12V REG PROT
	201	VPH05	G VIDEO OUT	2	V06C	+ 12V REG PROT
	202	TL082CP	G AUTO BKG	3	RD5.6ESB2	+ 12V PROT
	203	SNY-8C02	G CLAMP	4	1SS119	− 12V PROT
	204	TY885002	G SIGNAL PROCESS	5	1SS119	BIAS
				6	1SS119	BIAS
	Q1	2SC2785	CONTRAST CONTROL	7	1SS119	PEAK ABL
	2	DTC124ES	+ 12V PROT	8	1SS119	S.T. ABL
	3	DTC124ES	+ 12V PROT	9	RD6.2ESB2	CONT PROT
	4	2SC2785	− 12V PROT	11	ERA22-06	PROT
	5	2SA1175	BKG S.P. GEN	12	1SS119	ON SPOT PROT
	6	2SC2785	BKG S.P. GEN	13	RD5.1ESB2	ON SPOT PROT
	7	2SA1175	BKG S.P. GEN	101	1SS83	R VIDEO OUT PROT
	8	2SA1175	BLK P. GEN	103	RD2.0ESB2	R IK DET-1 PROT
	9	2SA1175	BLK P. GEN	104	1SS119	R THERM COMP
	10	2SC2785	BLK P. GEN	105	1SS83	R IK DET-2 PROT
	11	2SC2785	BKG S.P. GEN	106	1SS119	R IK DET-2 PROT
	12	2SC2785	BKG S.P. GEN	107	1SS119	R IK DET-2 PROT
	13	2SA1175	BKG S.P. GEN	108	1SS83	R VIDEO OUT PROT
	14	2SC2785	PEAK ABL	109	1SS119	R IK DET-2 PROT
	15	2SC2785	S.T. ABL	110	RD2.0ESB2	R IK DET-2 PROT
	16	2SC2785	B.S.T. ABL	111	1SS119	R IK DET-2 PROT
	17	2SC2785	G.S.T. ABL	112	1SS119	R AUTO BKG SW
	18	2SC2785	R.S.T. ABL	113	1SS119	R OFF SPOT PROT
	19	2SA1175	S.T. ABL	114	RD13ESB2	R IK DET-1 PROT
	101	2SC2785	R CLAMP	115	1SS119	R γ CORR
	102	2SC3209	R CLAMP	201	1SS83	G VIDEO OUT PROT
	103	2SA1381	R IK DET-1	203	RD2.0ESB2	G IK DET-1 PROT
	104	2SA1381	R CURRENT SOURCE	204	1SS119	G THERM COMP
	105	2SC2785	R IK DET-2	205	1SS83	G IK DET-2 PROT
	106	2SC3209	R IK DET-2	206	1SS119	G IK DET-2 PROT
	107	2SA1381	R IK DET-2	207	1SS119	G IK DET-2 PROT
	108	DTA124ES	R AUTO BKG SW	208	1SS83	G VIDEO OUT PROT
	109	DTA124ES	R AUTO BKG SW	209	1SS119	G IK DET-2T PROT
	110	DTC124ES	R AUTO BKG SW	210	RD2.0ESB2	G IK DET-2T PROT
	111	2SK523	R AUTO BKG	211	1SS119	G IK DET-2T PROT
	112	2SC2785	R IK DET-2	212	1SS119	G AUTO BKG SW
	113	2SC2785	R γ CORR	213	1SS119	G OFF SPOT PROT
	201	2SC2785	G CLAMP	214	RD13ESB2	G IK DET-1 PROT
	202	2SC3209	G CLAMP			

IC5 MB675429

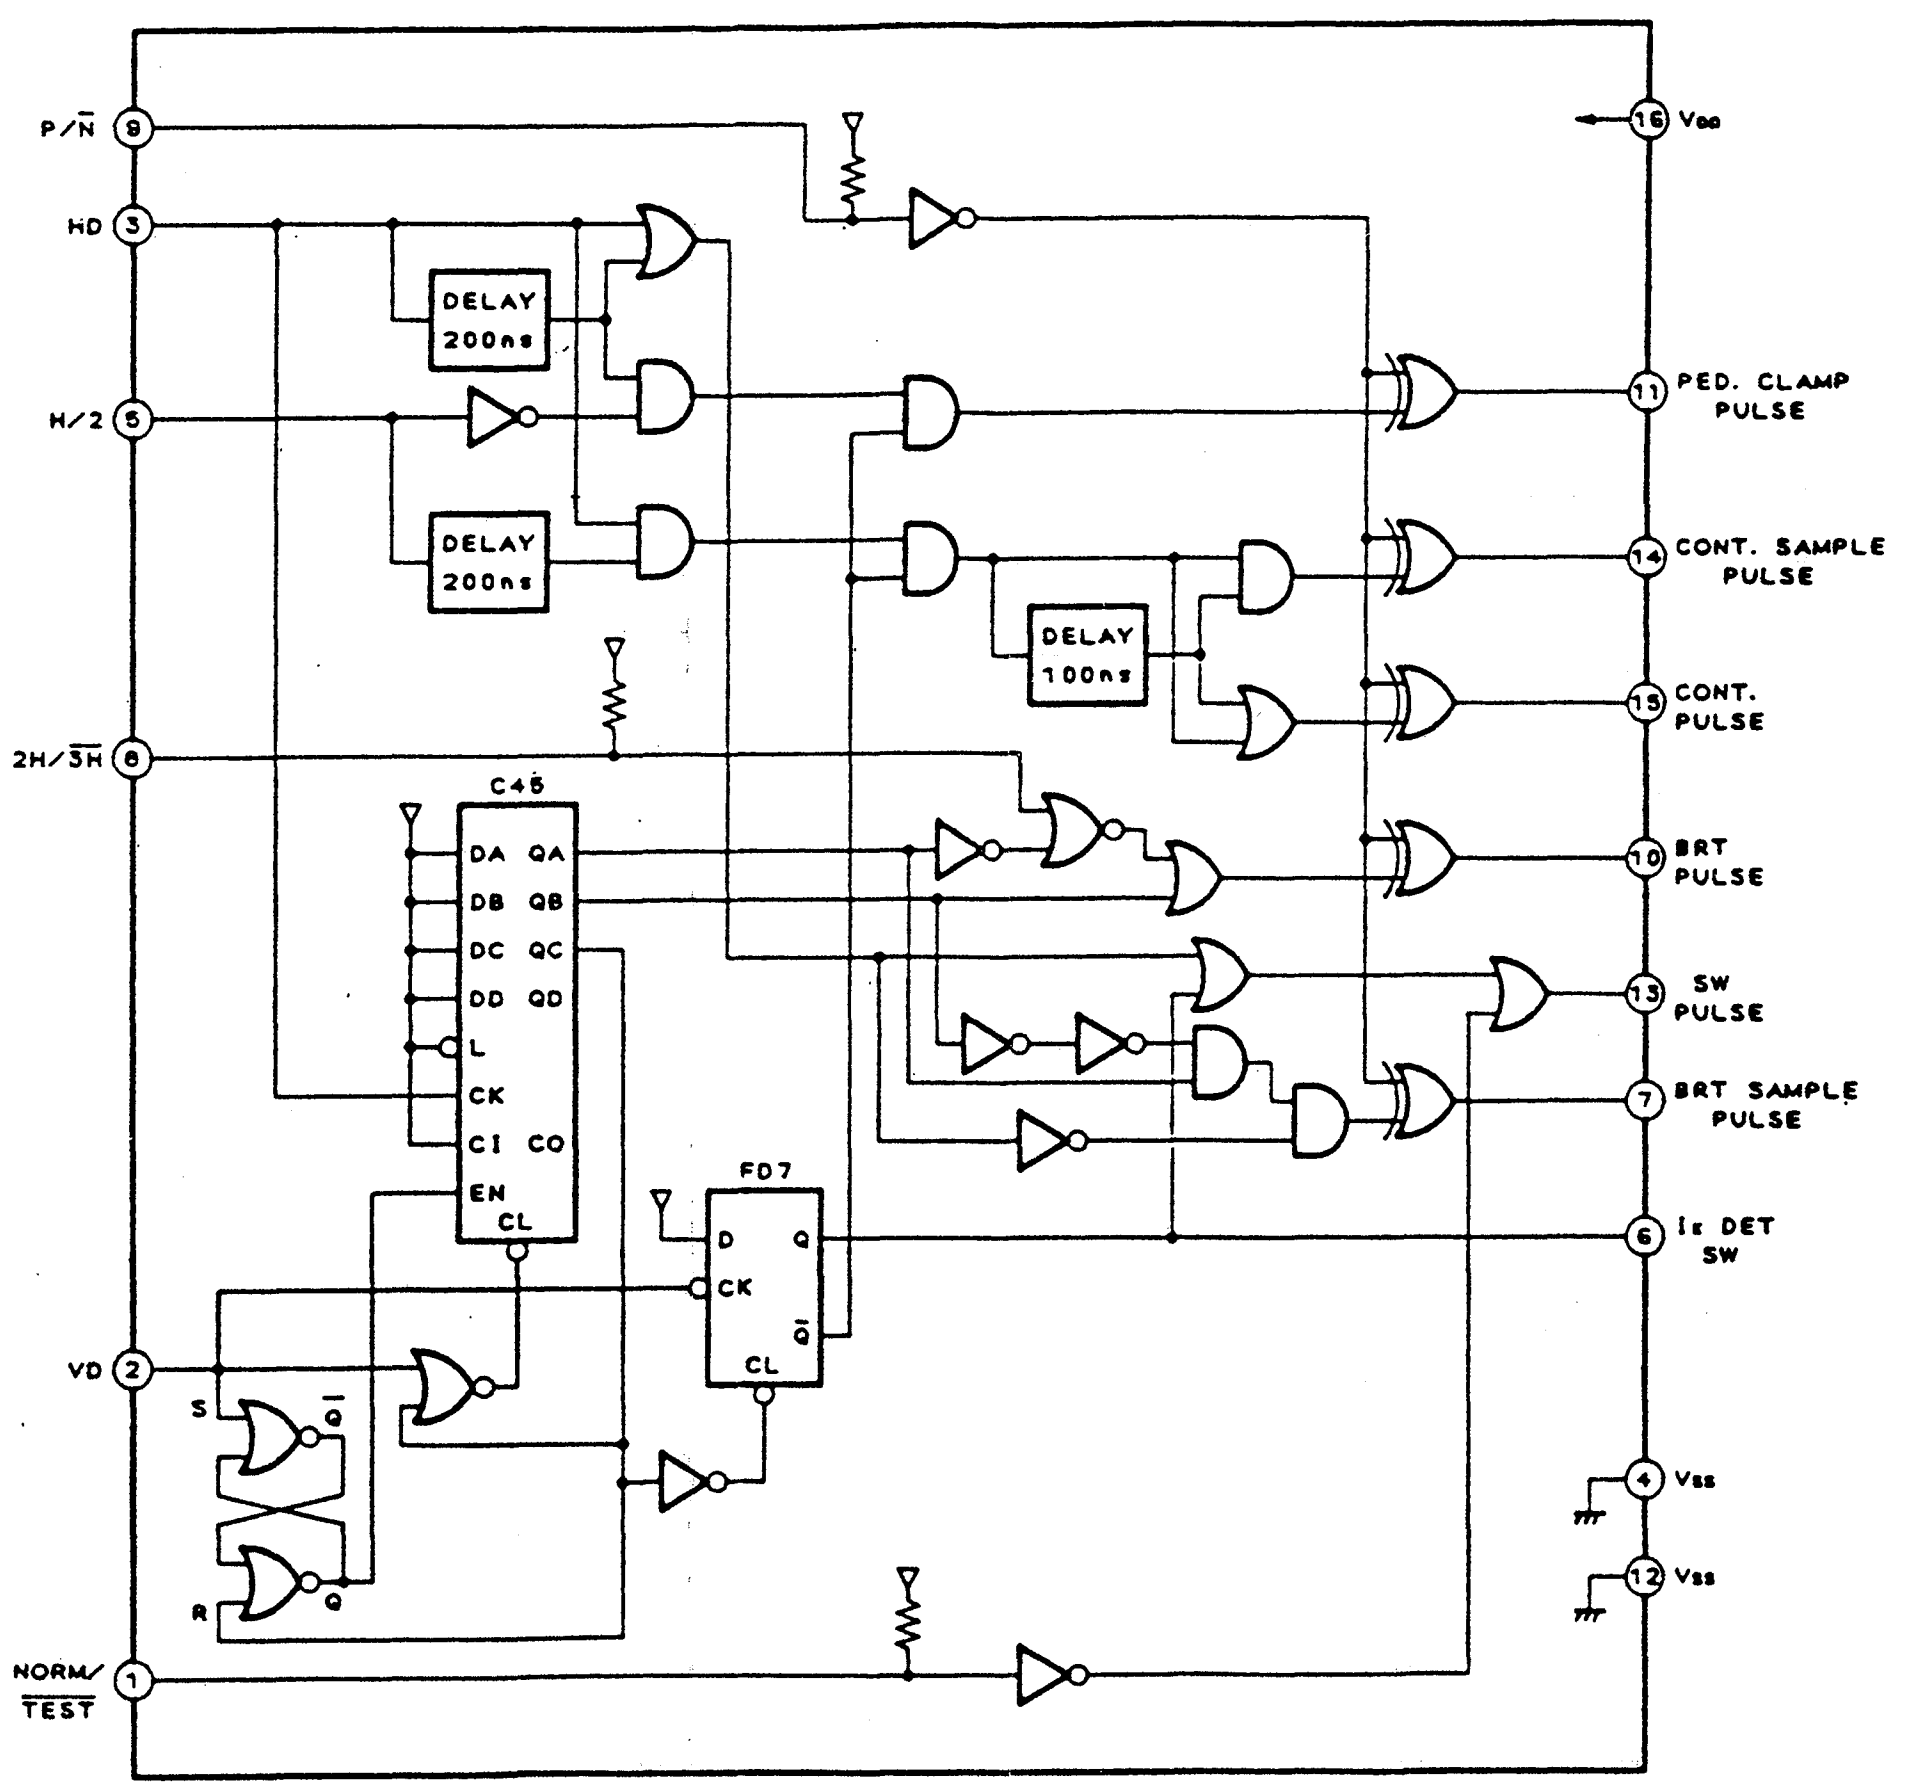
P/N̄ 9
HD 3
H/2 5
2H/3H 8
VD 2
NORM/TEST 1
DELAY 200ns
DELAY 200ns
DELAY 100ns
C45
DA QA
DB QB
DC QC
DD QD
L
CK
CI CO
EN CL
FD7
D Q
CK
CL Q̄
S
R
16 VDD
11 PED. CLAMP PULSE
14 CONT. SAMPLE PULSE
15 CONT. PULSE
10 BRT PULSE
13 SW PULSE
7 BRT SAMPLE PULSE
6 IK DET SW
4 VSS
12 VSS

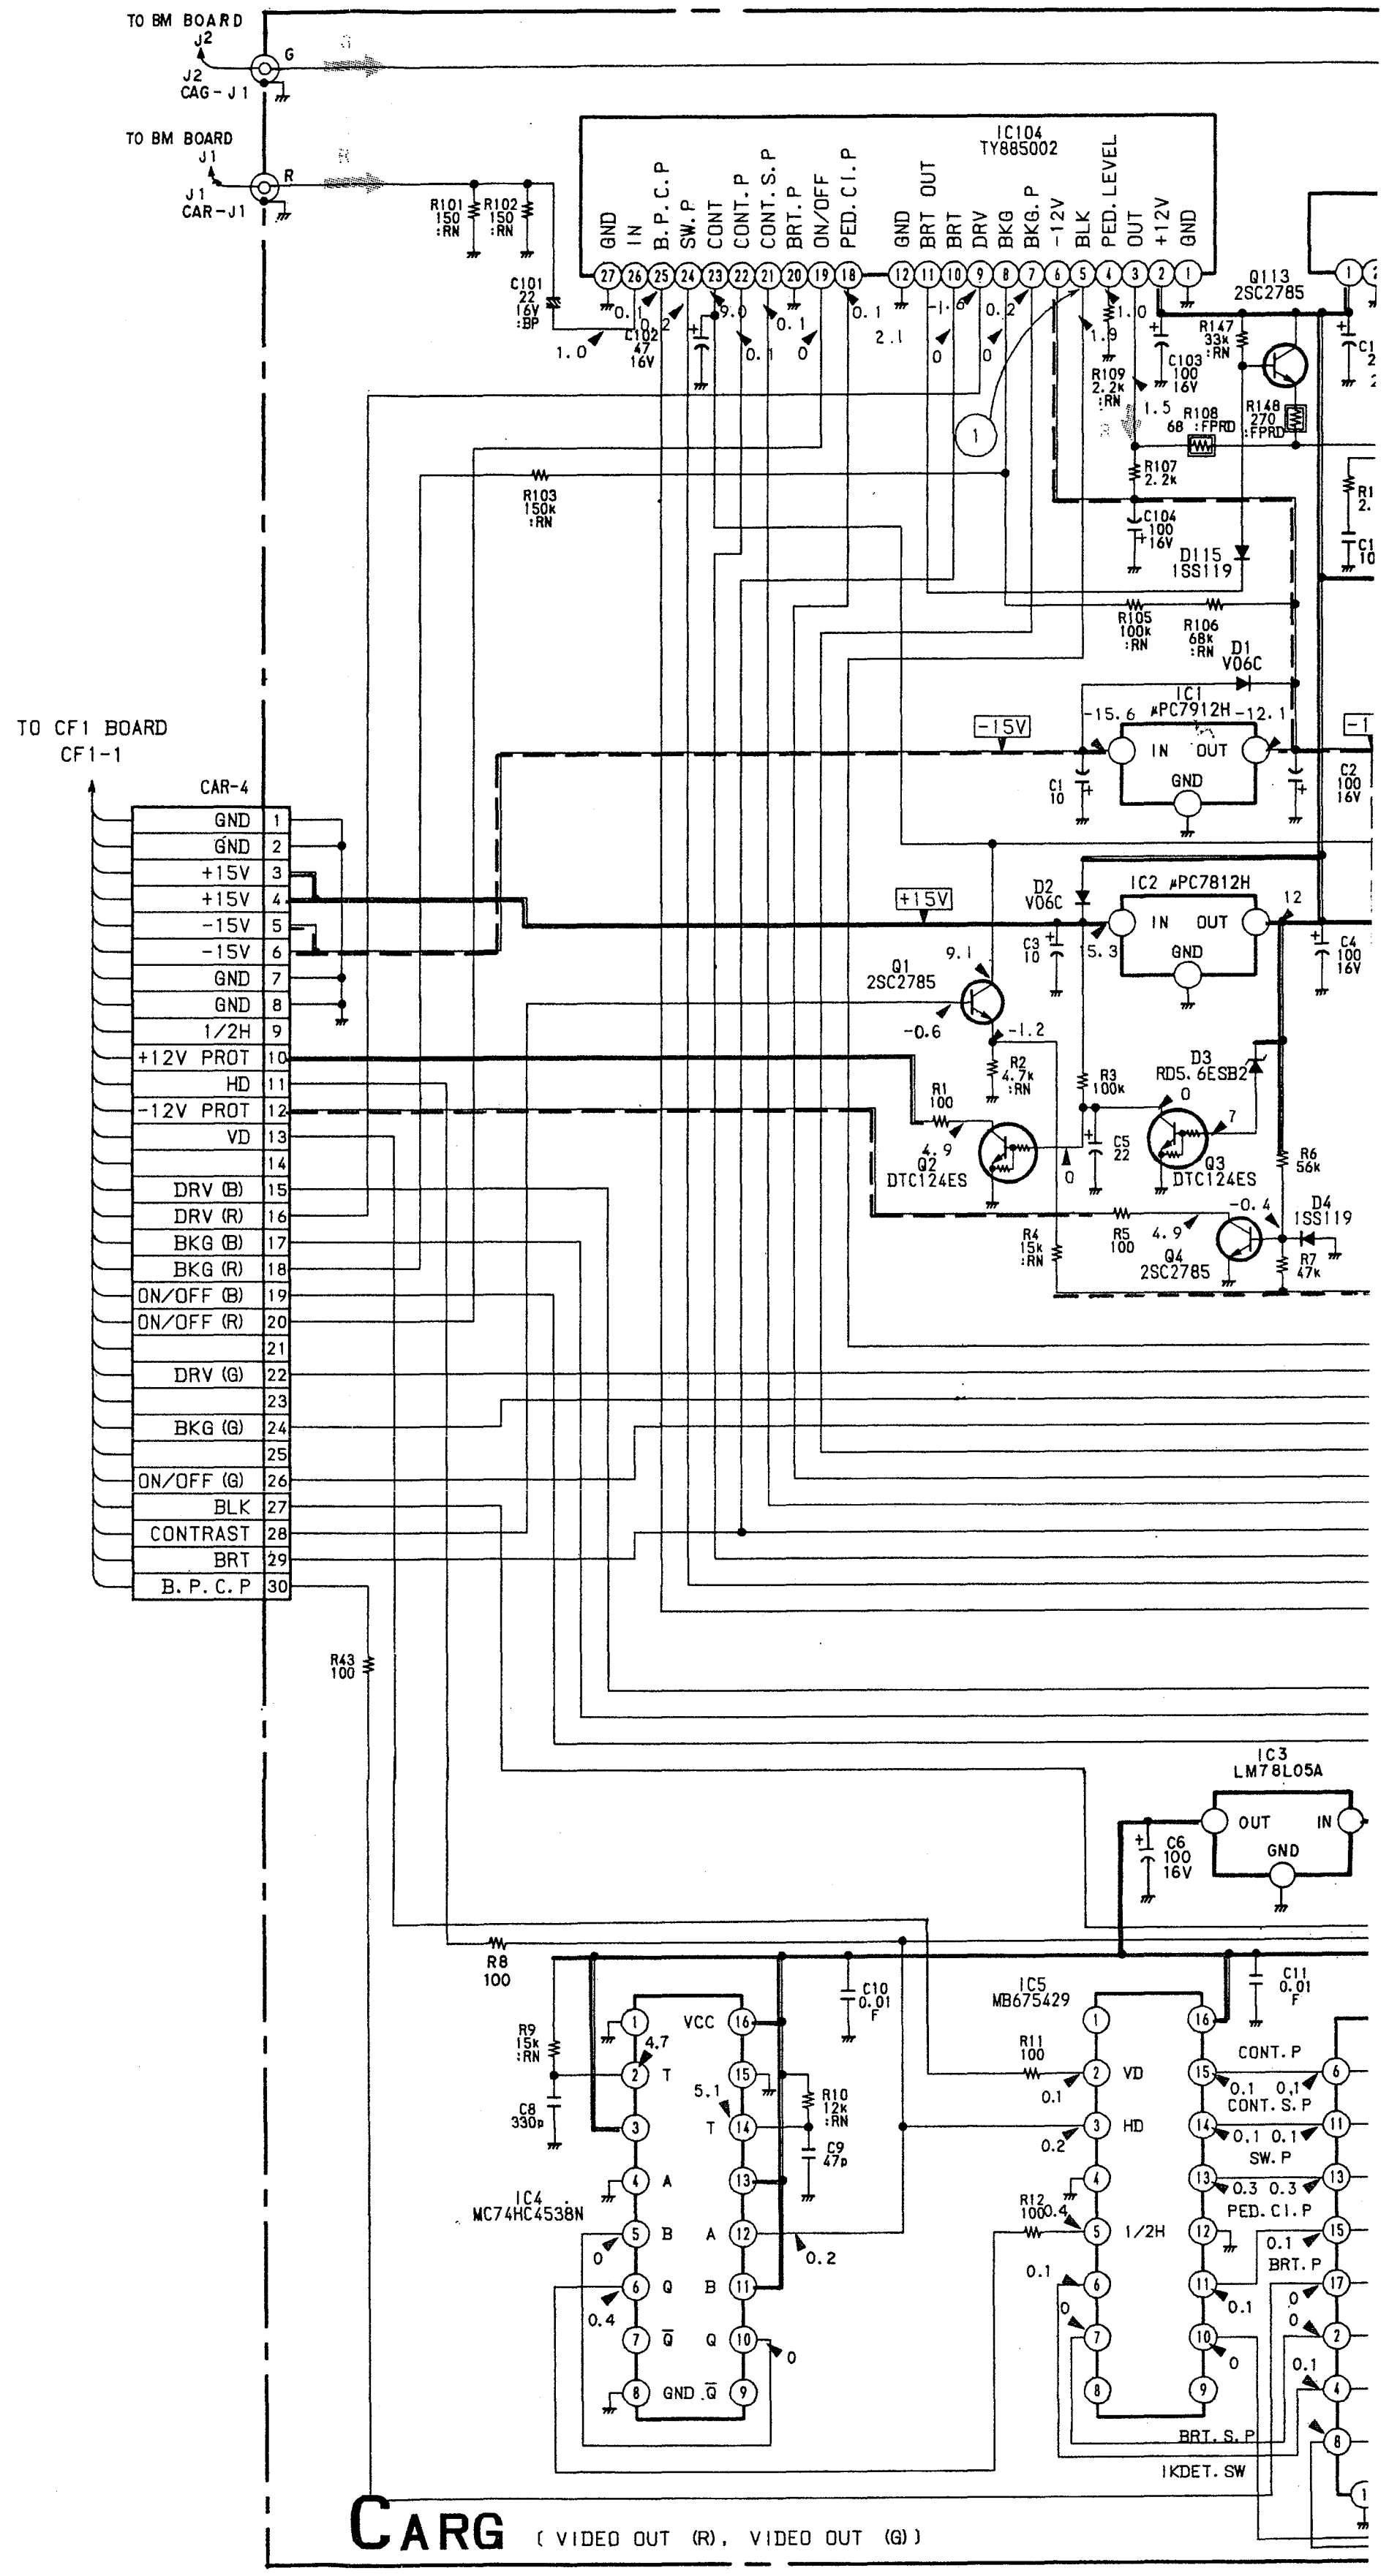
TO BM BOARD J2
CAG-J1
TO BM BOARD J1
CAR-J1
IC104 TY885002
GND IN B.P.C.P SW.P CONT CONT.S.P CONT.P BRT.P ON/OFF PED.CL.P GND BRT OUT BRT DRV BKG.P BKG −12V BLK PED.LEVEL OUT +12V GND
Q113 2SC2785
D115 1SS119
D1 V06C
IC1 µPC7912H
IC2 µPC7812H
−15V
+15V
Q1 2SC2785
D2 V06C
D3 RD5.6ESB2
Q2 DTC124ES
Q3 DTC124ES
Q4 2SC2785
D4 1SS119
TO CF1 BOARD CF1-1
CAR-4
1 GND
2 GND
3 +15V
4 +15V
5 −15V
6 −15V
7 GND
8 GND
9 1/2H
10 +12V PROT
11 HD
12 −12V PROT
13 VD
14
15 DRV (B)
16 DRV (R)
17 BKG (B)
18 BKG (R)
19 ON/OFF (B)
20 ON/OFF (R)
21
22 DRV (G)
23
24 BKG (G)
25
26 ON/OFF (G)
27 BLK
28 CONTRAST
29 BRT
30 B.P.C.P
IC3 LM78L05A
OUT IN GND
IC4 MC74HC4538N
VCC T T A B Q Q̄ GND
IC5 MB675429
VD HD 1/2H
CONT.P CONT.S.P SW.P PED.CL.P BRT.P BRT.S.P
IKDET.SW

CARG (VIDEO OUT (R), VIDEO OUT (G))

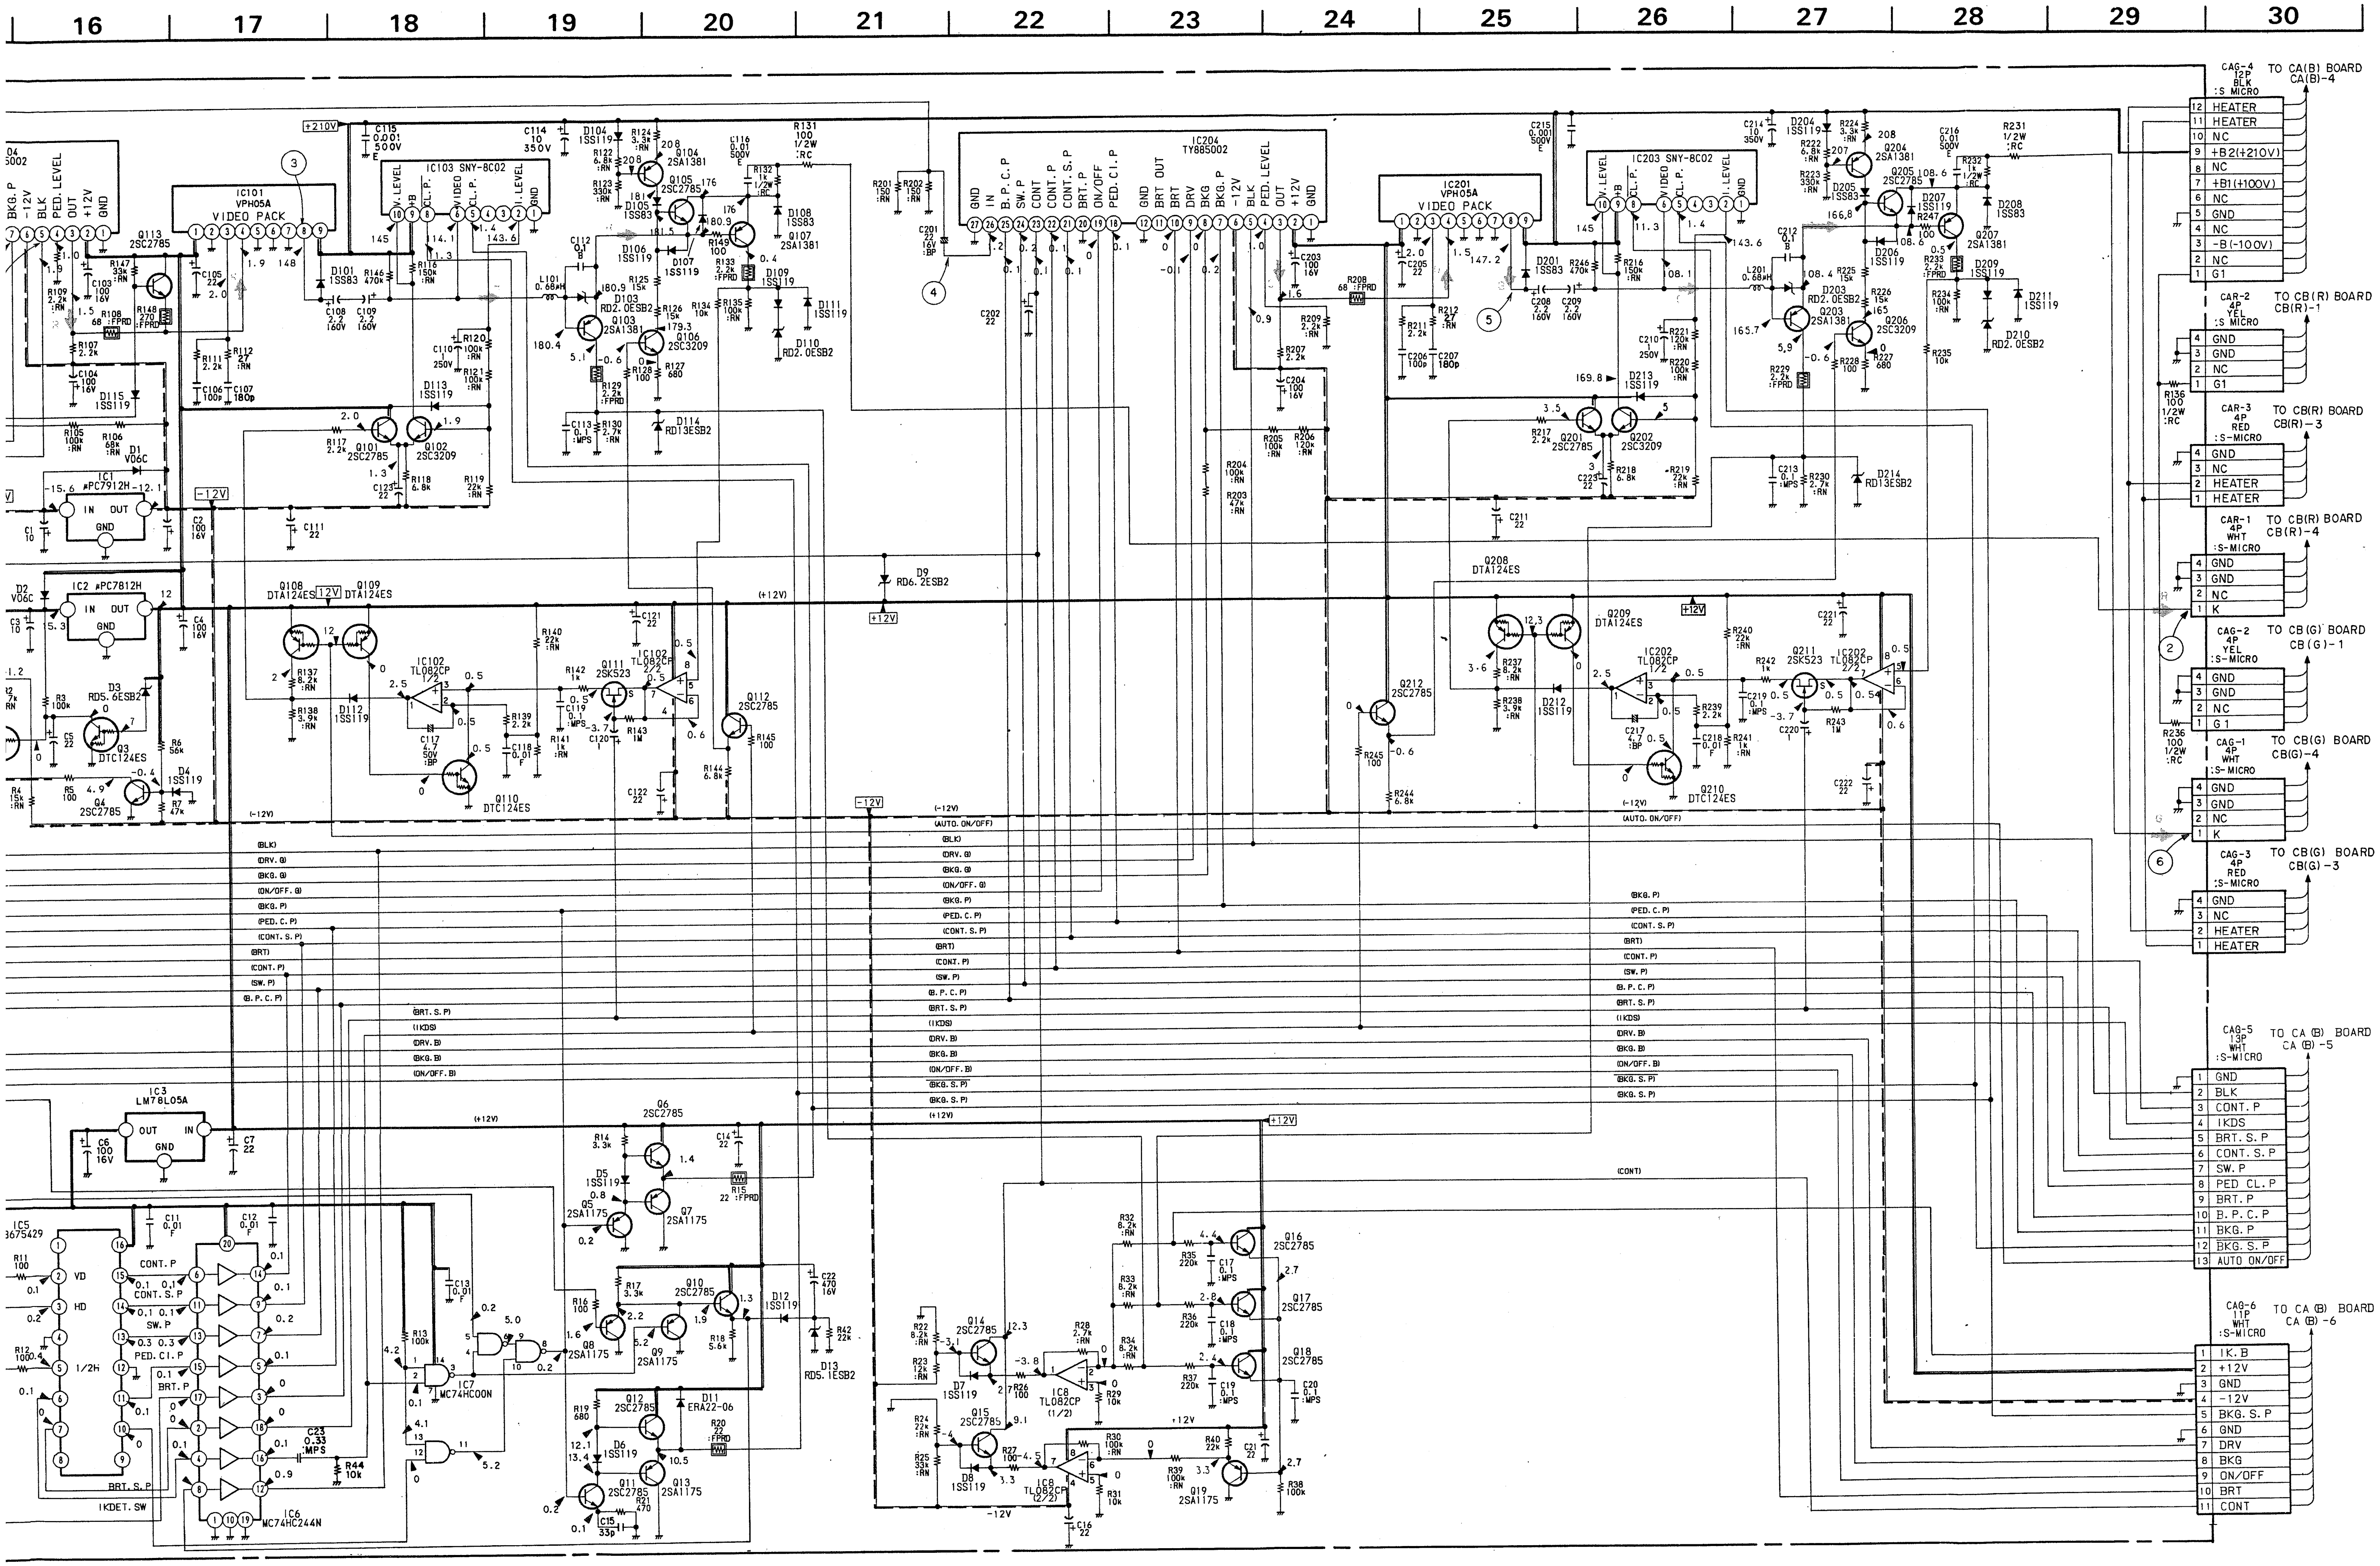
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
IC101 VPH05A VIDEO PACK
IC103 SNY-8C02
IC204 TY885002
IC201 VPH05A VIDEO PACK
IC203 SNY-8C02
IC1 μPC7912H
IC2 μPC7812H
IC3 LM78L05A
IC5 3675429
IC6 MC74HC244N
IC7 MC74HC00N
IC8 TL082CP
IC102 TL082CP
IC202 TL082CP
Q113 2SC2785
Q101 2SC2785
Q102 2SC3209
Q103 2SA1381
Q104 2SA1381
Q105 2SC2785
Q106 2SC3209
Q107 2SA1381
Q108 DTA124ES
Q109 DTA124ES
Q110 DTC124ES
Q111 2SK523
Q112 2SC2785
Q201 2SC2785
Q202 2SC3209
Q203 2SA1381
Q204 2SA1381
Q205 2SC2785
Q206 2SC3209
Q207 2SA1381
Q208 DTA124ES
Q209 DTA124ES
Q210 DTC124ES
Q211 2SK523
Q212 2SC2785
Q3 DTC124ES
Q4 2SC2785
Q5 2SA1175
Q6 2SC2785
Q7 2SA1175
Q8 2SA1175
Q9 2SA1175
Q10 2SC2785
Q11 2SC2785
Q12 2SC2785
Q13 2SA1175
Q14 2SC2785
Q15 2SC2785
Q16 2SC2785
Q17 2SC2785
Q18 2SC2785
Q19 2SA1175
D9 RD6.2ESB2
+210V
+12V
-12V
(AUTO. ON/OFF)
(BLK)
(DRV. G)
(BKG. G)
(ON/OFF. G)
(BKG. P)
(PED. C. P)
(CONT. S. P)
(BRT)
(CONT. P)
(SW. P)
(B. P. C. P)
(BRT. S. P)
(IKDS)
(DRV. B)
(BKG. B)
(ON/OFF. B)
(BKG. S. P)
(CONT)
CAG-4 12P BLK :S MICRO TO CA(B) BOARD CA(B)-4
12 HEATER
11 HEATER
10 NC
9 +B2(+210V)
8 NC
7 +B1(+100V)
6 NC
5 GND
4 NC
3 -B(-100V)
2 NC
1 G1
CAR-2 4P YEL :S MICRO TO CB(R) BOARD CB(R)-1
4 GND
3 GND
2 NC
1 G1
R136 100 1/2W :RC
CAR-3 4P RED :S-MICRO TO CB(R) BOARD CB(R)-3
4 GND
3 NC
2 HEATER
1 HEATER
CAR-1 4P WHT :S-MICRO TO CB(R) BOARD CB(R)-4
4 GND
3 GND
2 NC
1 K
②
CAG-2 4P YEL :S-MICRO TO CB(G) BOARD CB(G)-1
4 GND
3 GND
2 NC
1 G1
R236 100 1/2W :RC
CAG-1 4P WHT :S-MICRO TO CB(G) BOARD CB(G)-4
4 GND
3 GND
2 NC
1 K
⑥
CAG-3 4P RED :S-MICRO TO CB(G) BOARD CB(G)-3
4 GND
3 NC
2 HEATER
1 HEATER
CAG-5 13P WHT :S-MICRO TO CA (B) BOARD CA (B)-5
1 GND
2 BLK
3 CONT. P
4 IKDS
5 BRT. S. P
6 CONT. S. P
7 SW. P
8 PED CL. P
9 BRT. P
10 B. P. C. P
11 BKG. P
12 BKG. S. P
13 AUTO ON/OFF
CAG-6 11P WHT :S-MICRO TO CA (B) BOARD CA (B)-6
1 IK. B
2 +12V
3 GND
4 -12V
5 BKG. S. P
6 GND
7 DRV
8 BKG
9 ON/OFF
10 BRT
11 CONT
③
④
⑤

CA (RG)

[VIDEO OUT (R)] [VIDEO OUT (G)]

①



PAL	5.2Vp-p(H)
SECAM	5.2Vp-p(H)
NTSC3.58	5.2Vp-p(H)
NTSC4.43	5.2Vp-p(H)
S-VIDEO	5.2Vp-p(H)
HDTV	5.2Vp-p(H)

②



PAL 60 Vp-p(H)

②



SECAM	54 Vp-p(H)
NTSC3.58	60 Vp-p(H)
NTSC4.43	60 Vp-p(H)

②



S-VIDEO 62 Vp-p(H)

②



HDTV 120Vp-p(H)

③



PAL 80 Vp-p(H)

③



SECAM	70 Vp-p(H)
NTSC3.58	75 Vp-p(H)
NTSC4.43	78 Vp-p(H)

③



S-VIDEO 80 Vp-p(H)

③



HDTV 160Vp-p(H)

④



PAL	5.3Vp-p(H)
SECAM	5.3Vp-p(H)
NTSC3.58	5.3Vp-p(H)
NTSC4.43	5.3Vp-p(H)
S-VIDEO	5.3Vp-p(H)
HDTV	5.3Vp-p(H)

⑤



PAL	5.3Vp-p(H)
SECAM	5.3Vp-p(H)
NTSC3.58	5.3Vp-p(H)
NTSC4.43	5.3Vp-p(H)
S-VIDEO	5.3Vp-p(H)
HDTV	5.3Vp-p(H)

⑥



PAL	4 Vp-p(H)
SECAM	4 Vp-p(H)
NTSC3.58	4 Vp-p(H)
NTSC4.43	4 Vp-p(H)
S-VIDEO	4 Vp-p(H)
HDTV	4 Vp-p(H)

⑦



PAL	0.7Vp-p(H)
SECAM	0.7Vp-p(H)
NTSC3.58	0.7Vp-p(H)
NTSC4.43	0.7Vp-p(H)
S-VIDEO	0.7Vp-p(H)
HDTV	0.7Vp-p(H)

– CA (RG) BOARD –

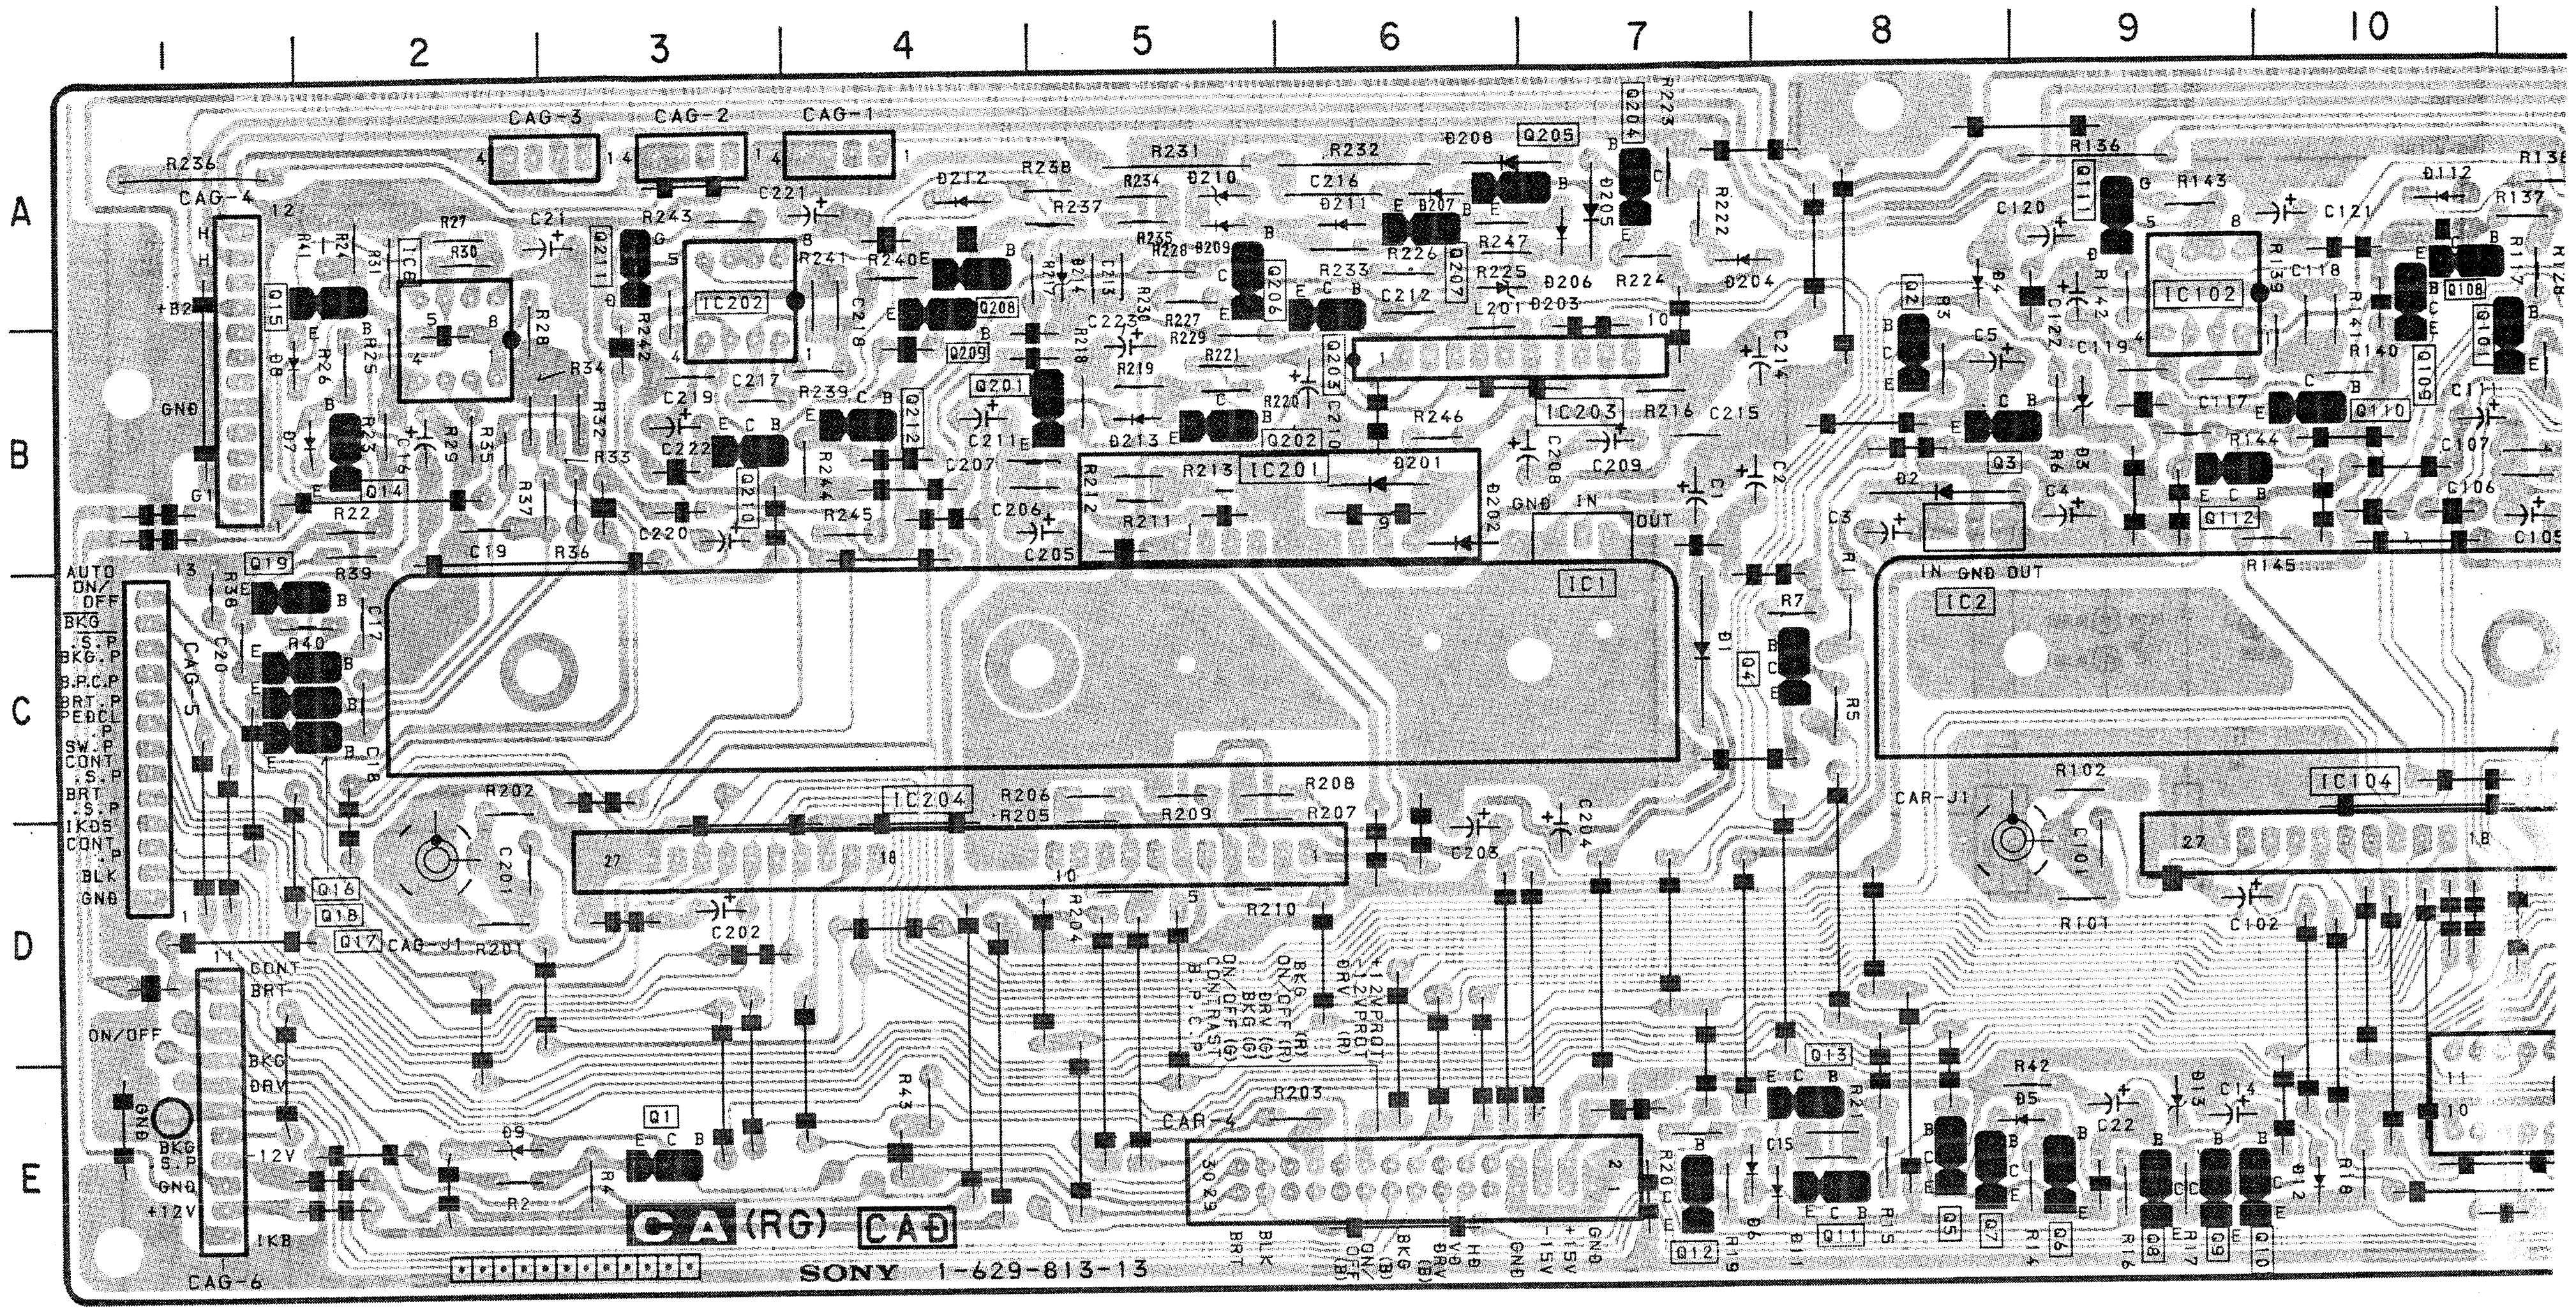
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
CAG-3
CAG-2
CAG-1
CAG-4
CAG-5
CAG-6
CAR-4
CAR-J1
CAG-J1
IC1
IC2
IC102
IC104
IC201
IC202
IC203
IC204
AUTO ON/OFF
ON/OFF
GND
+12V
IKB
IN GND OUT
CA (RG) CAD
SONY 1-629-813-13

(G)]

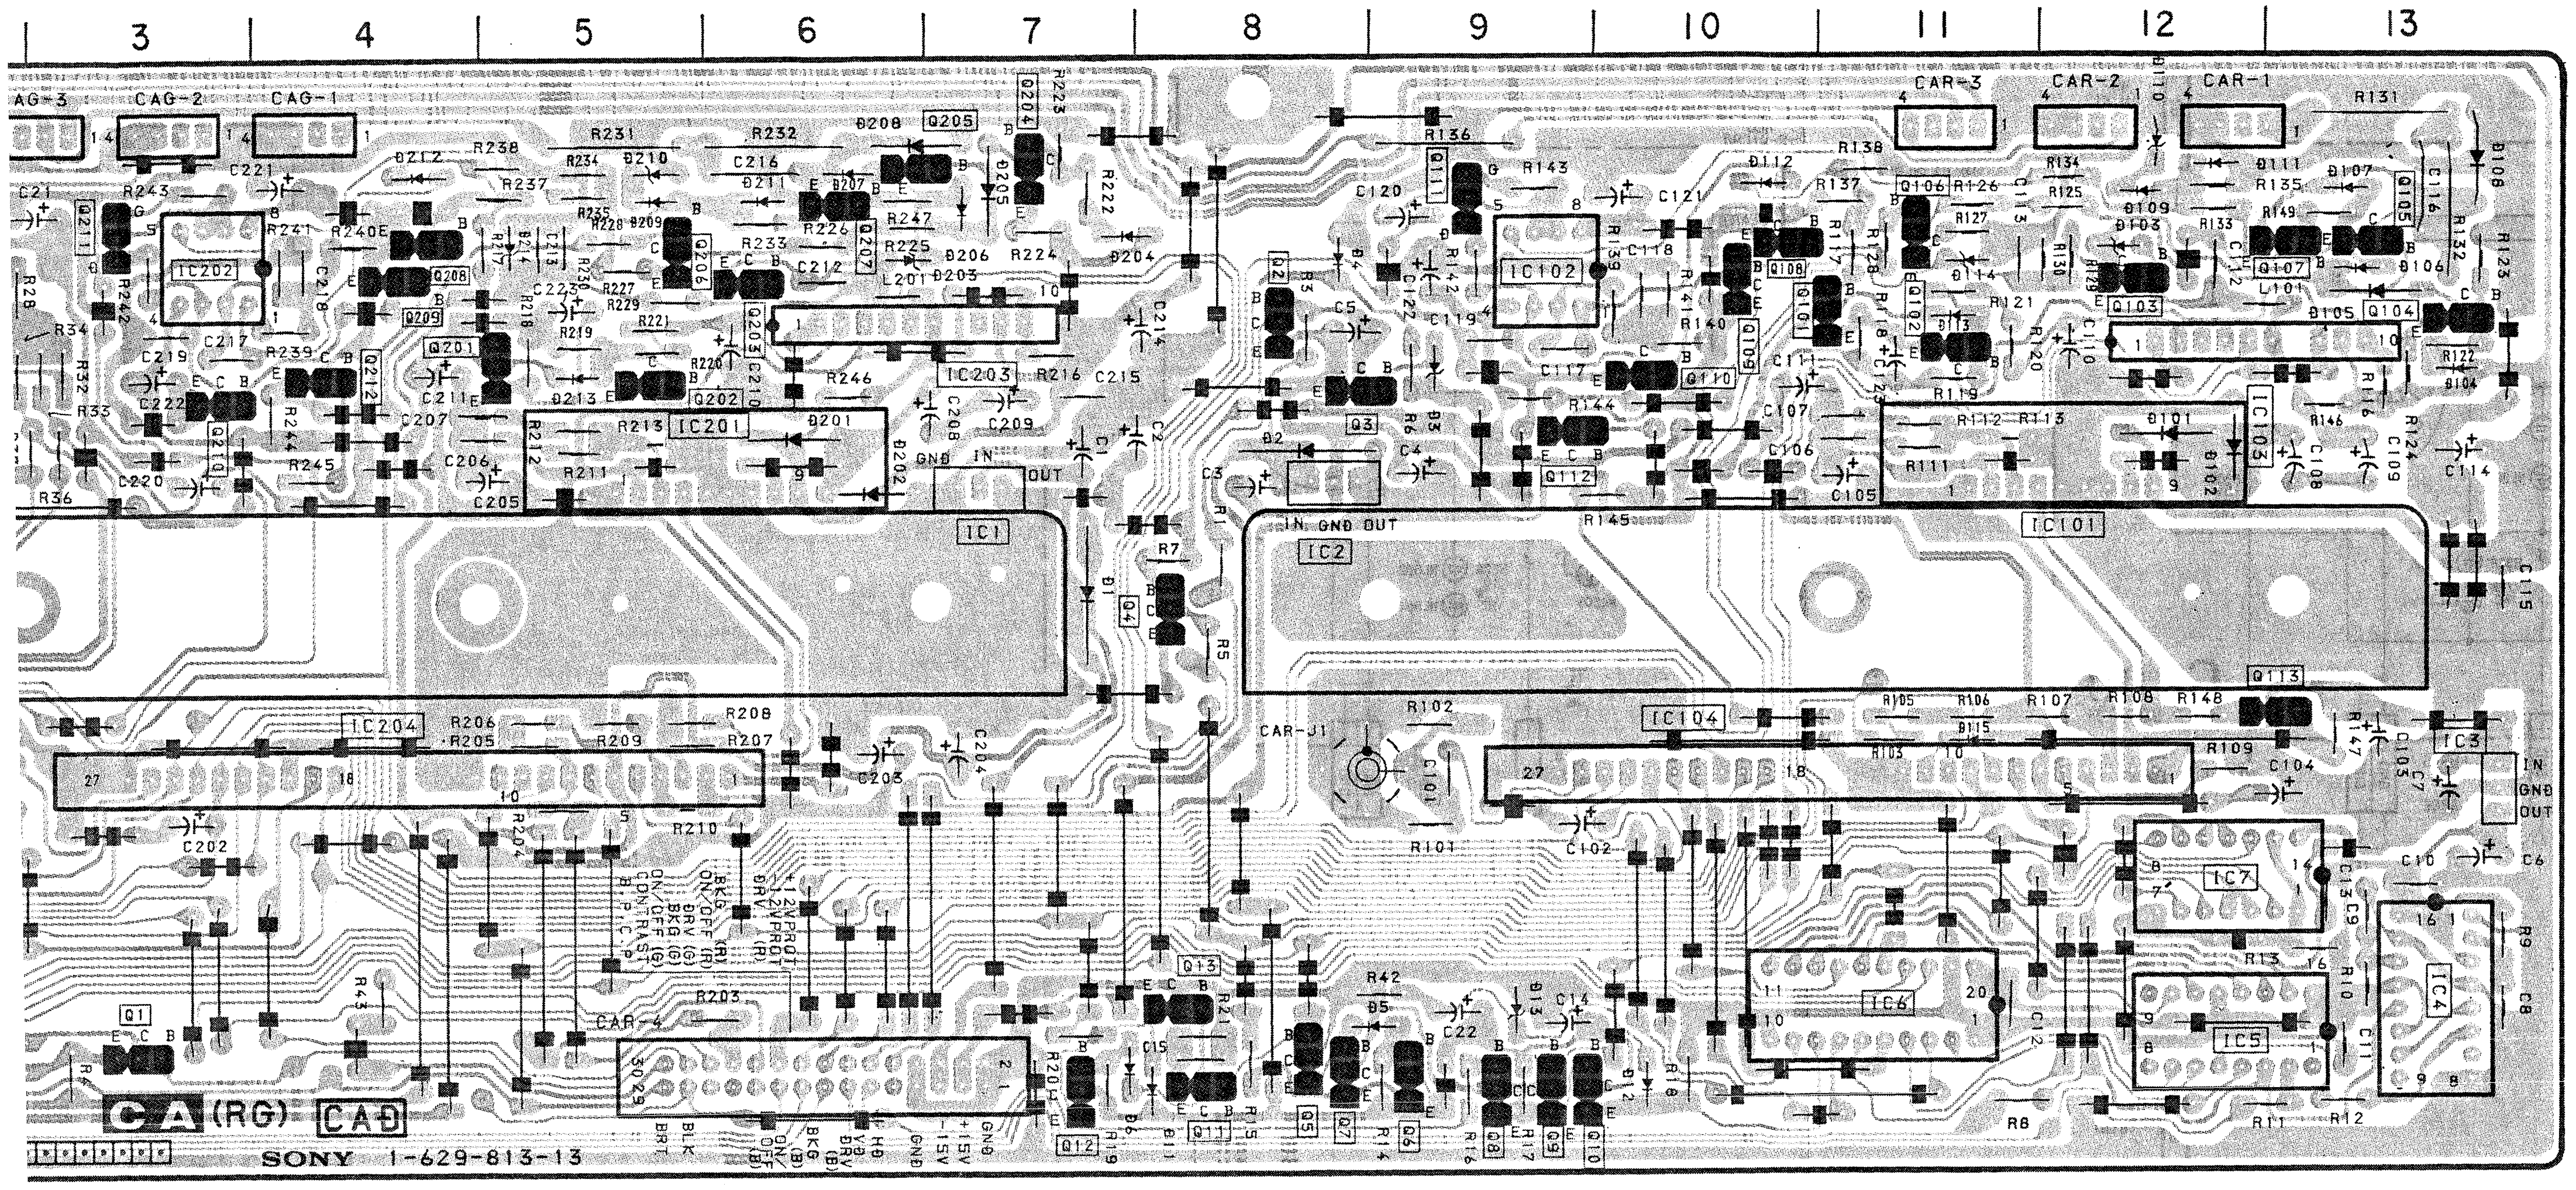
3
4
5
6
7
8
9
10
11
12
13
CAG-3
CAG-2
CAG-1
CAR-3
CAR-2
CAR-1
IC1
IC2
IC101
IC201
IC202
IC203
IC204
IC102
IC103
IC104
IC3
IC4
IC5
IC6
IC7
CAR-4
CAR-J1
IN GND OUT
CA (RG) CAD
SONY 1-629-813-13

CA(RG)BOARD

IC	
IC1	B - 7
IC2	B - 8
IC3	D - 13
IC4	E - 13
IC5	E - 12
IC6	E - 11
IC7	D - 12
IC8	A - 2
IC101	B - 11
IC102	A - 9
IC103	B - 12
IC104	D - 10
IC201	B - 5
IC202	A - 3
IC203	B - 7
IC204	D - 4

TRANSISTOR	
Q1	E - 3
Q2	B - 8
Q3	B - 8
Q4	C - 8
Q5	E - 8
Q6	E - 9
Q7	E - 8
Q8	E - 9
Q9	E - 9
Q10	E - 9
Q11	E - 8
Q12	E - 7
Q13	E - 8
Q14	B - 2
Q15	A - 2
Q16	C - 1
Q17	C - 1
Q18	C - 1
Q19	C - 1
Q101	B - 10
Q102	B - 11
Q103	A - 12
Q104	B - 13
Q105	A - 13
Q106	A - 11
Q107	A - 13
Q108	A - 10
Q109	B - 10
Q110	B - 10
Q111	A - 9
Q112	B - 9
Q113	C - 13
Q201	B - 5
Q202	B - 5
Q203	A - 6
Q204	A - 7
Q205	A - 6
Q206	A - 5
Q207	A - 6
Q208	A - 4
Q209	A - 4
Q210	B - 3
Q211	A - 3
Q212	B - 4

DIODE	
D1	C - 7
D2	B - 8
D3	B - 9
D4	A - 8
D5	E - 7
D6	E - 7
D7	B - 2
D8	B - 1
D9	E - 2
D11	E - 8
D12	E - 10
D13	E - 9
D101	B - 12
D103	A - 12
D104	B - 13
D105	B - 13
D106	A - 13
D107	A - 13
D108	A - 13
D109	A - 12
D110	A - 12
D111	A - 12
D112	A - 10
D113	B - 11
D114	A - 11
D115	D - 11
D201	B - 6
D203	A - 6
D204	A - 7
D205	A - 7
D206	A - 7
D207	A - 6
D208	A - 6
D209	A - 5
D210	A - 5
D211	A - 6
D212	A - 4
D213	B - 5
D214	A - 5

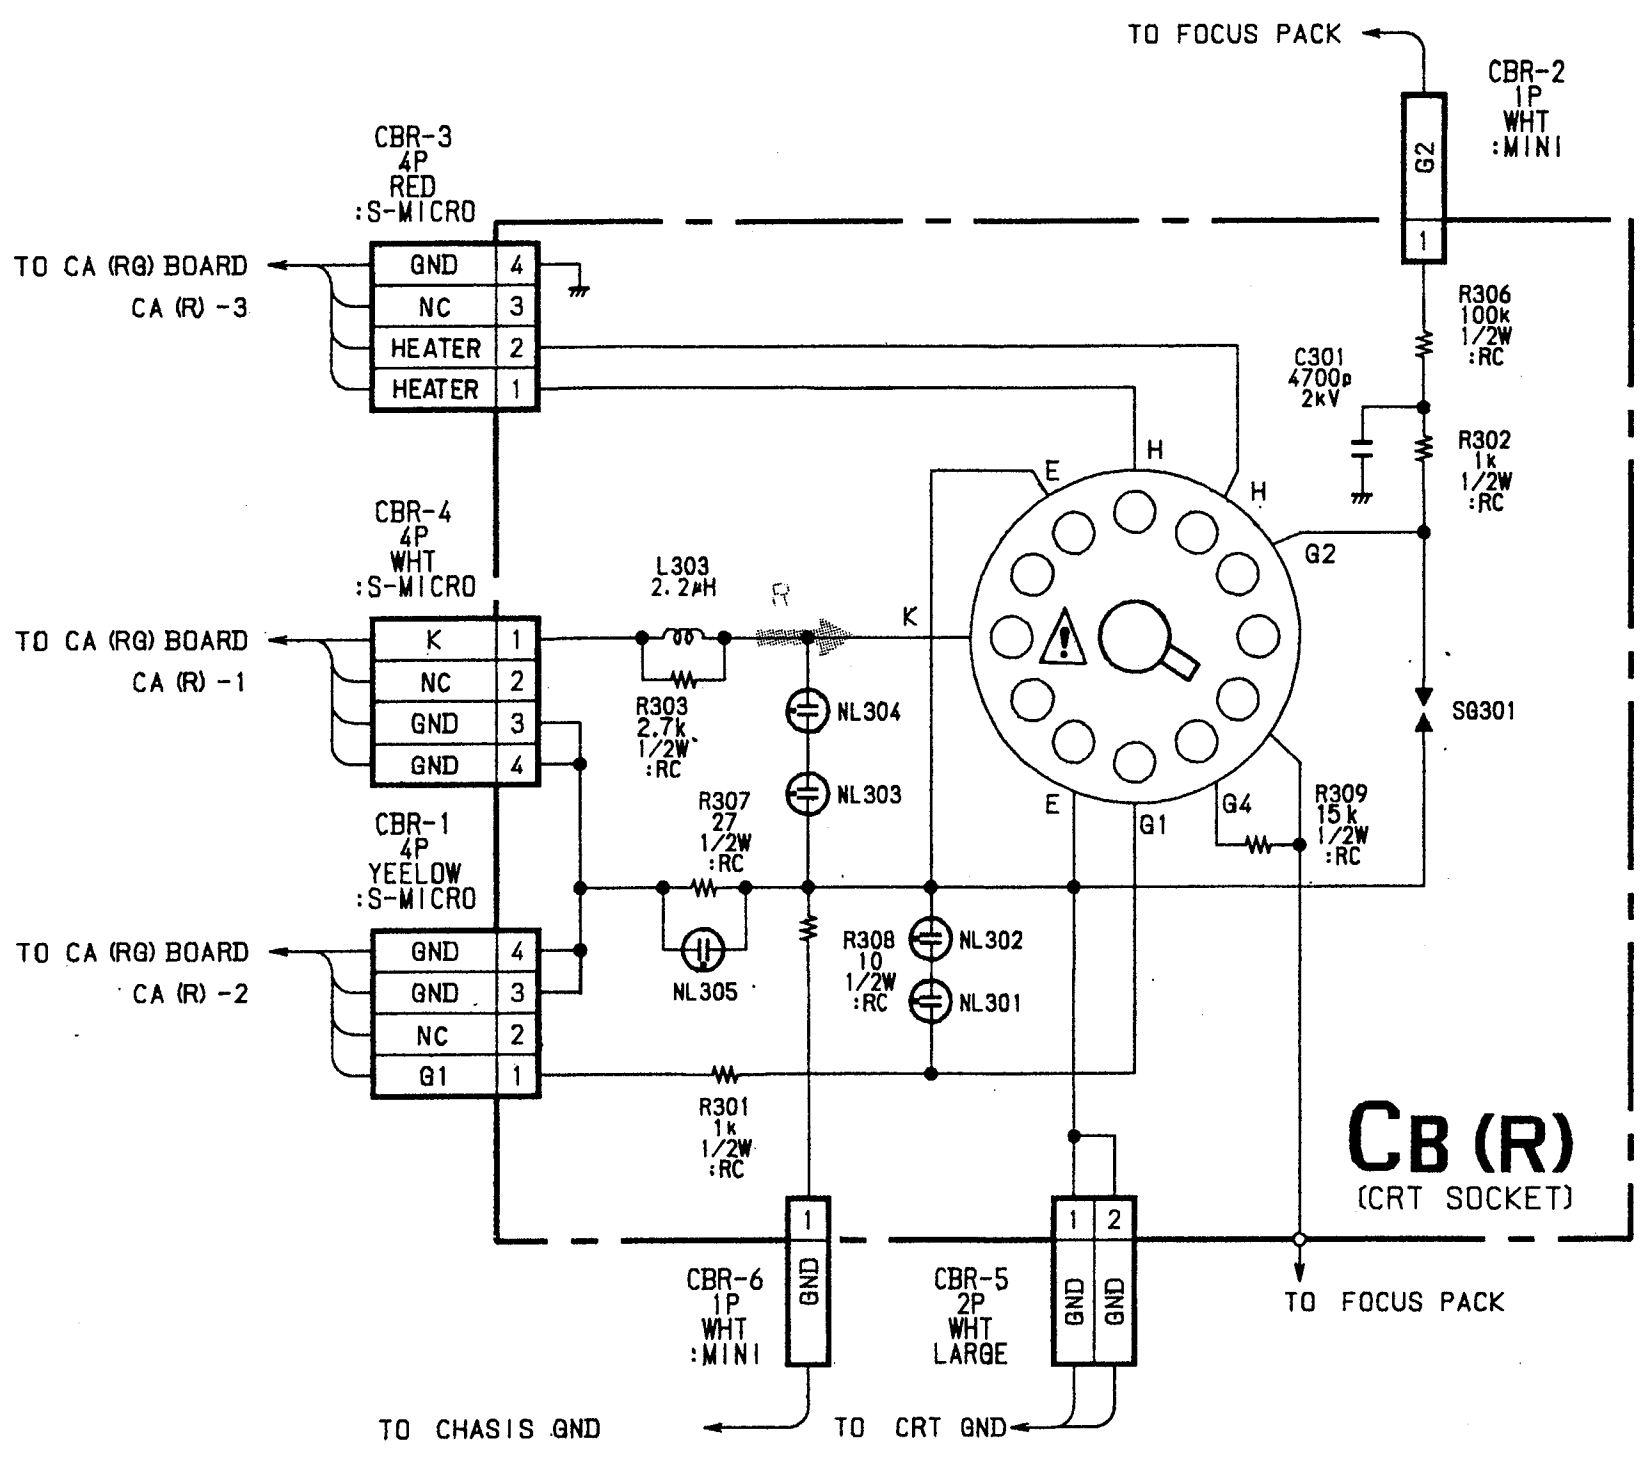
TO FOCUS PACK
CBR-2 1P WHT :MINI
G2
CBR-3 4P RED :S-MICRO
TO CA (RG) BOARD CA (R) -3
GND 4
NC 3
HEATER 2
HEATER 1
R306 100k 1/2W :RC
C301 4700p 2kV
R302 1k 1/2W :RC
CBR-4 4P WHT :S-MICRO
TO CA (RG) BOARD CA (R) -1
K 1
NC 2
GND 3
GND 4
L303 2.2μH
R
R303 2.7k 1/2W :RC
NL304
NL303
R307 27 1/2W :RC
K E H G2 G1 G4
SG301
R309 15k 1/2W :RC
CBR-1 4P YEELOW :S-MICRO
TO CA (RG) BOARD CA (R) -2
GND 4
GND 3
NC 2
G1 1
NL305
R308 10 1/2W :RC
NL302
NL301
R301 1k 1/2W :RC
CB (R)
(CRT SOCKET)
CBR-6 1P WHT :MINI
CBR-5 2P WHT LARGE
GND
TO FOCUS PACK
TO CHASIS GND
TO CRT GND

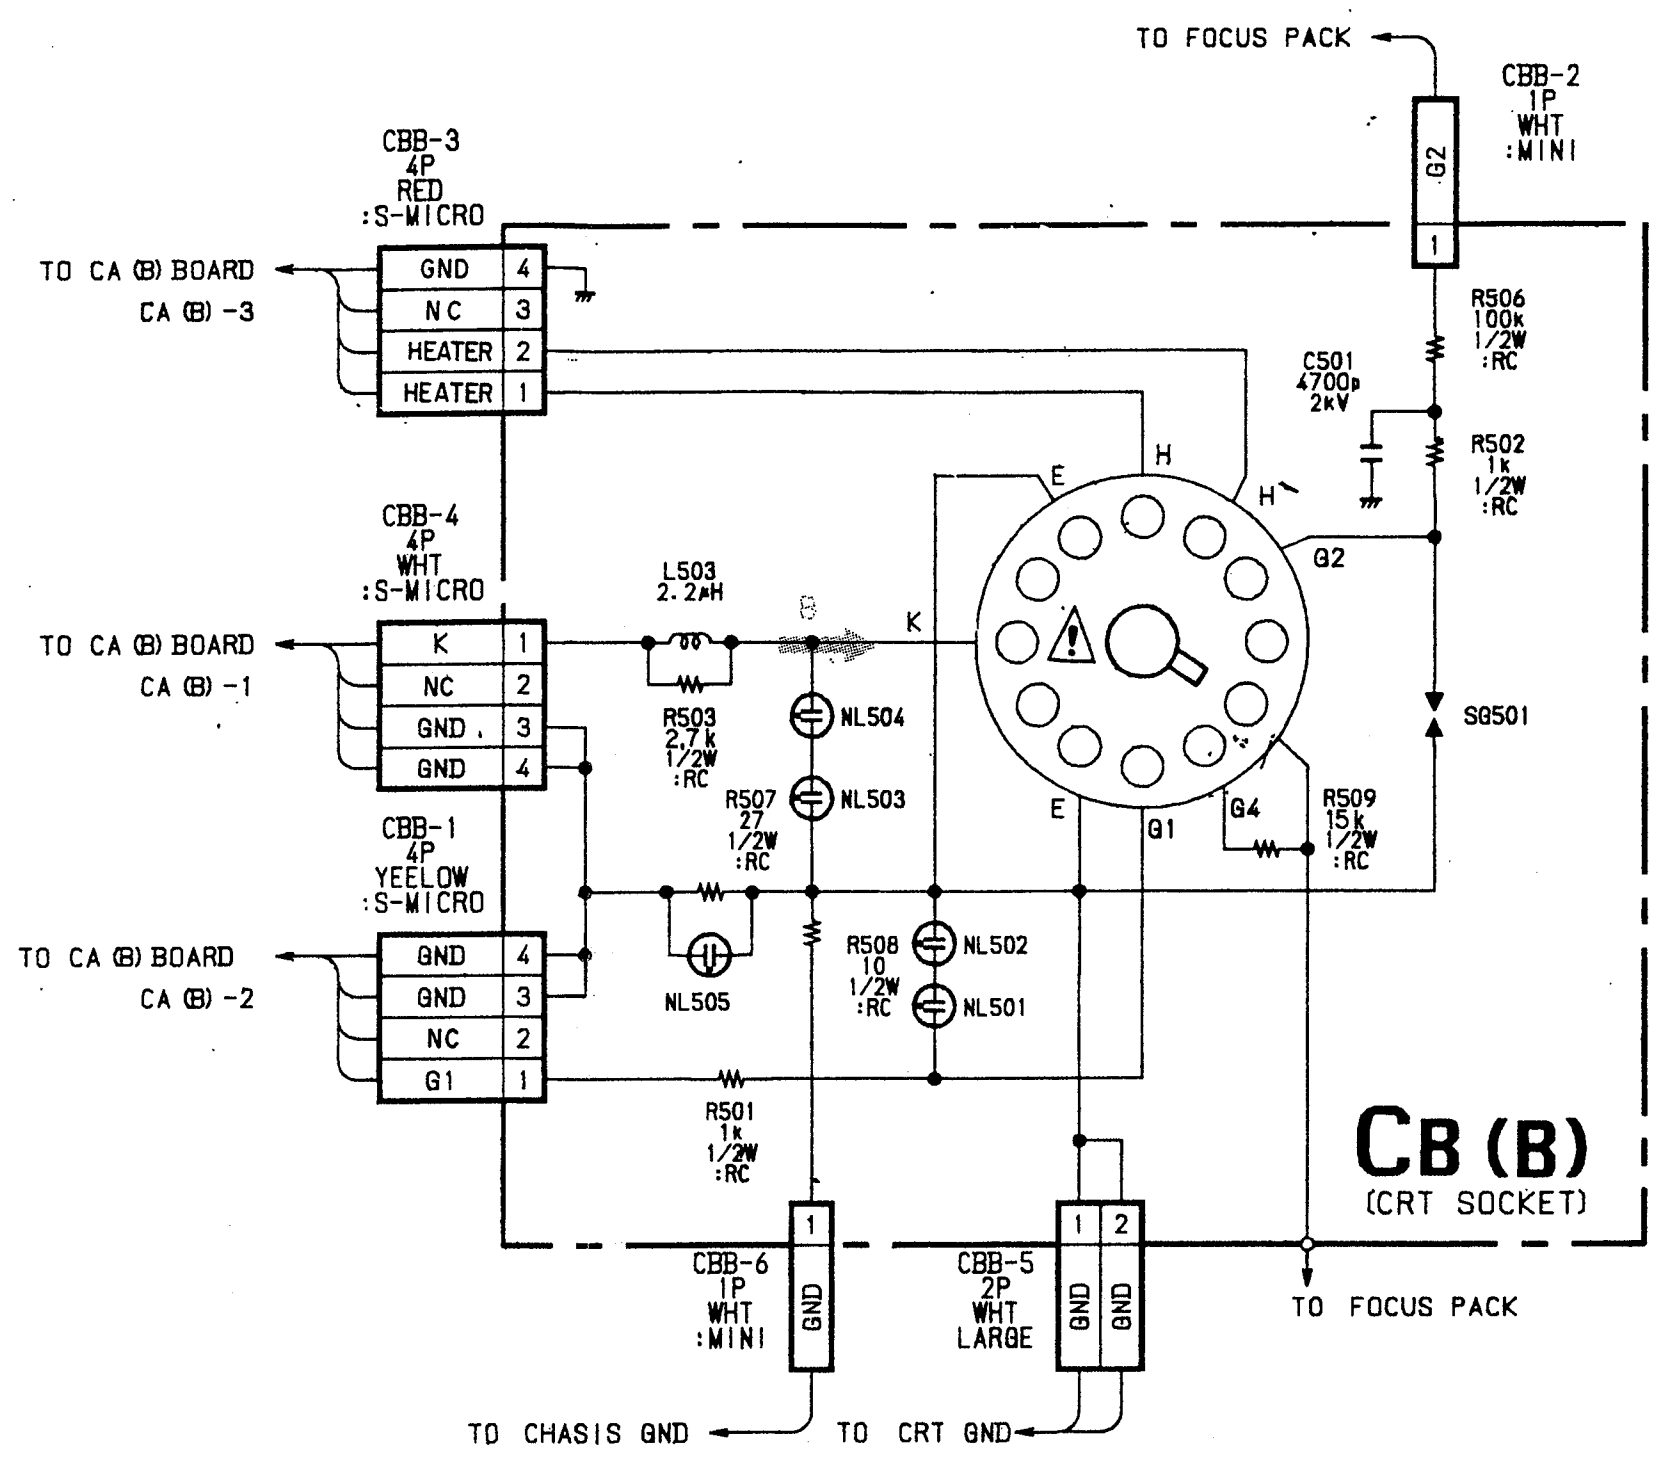
TO FOCUS PACK
CBB-2 1P WHT :MINI
G2
CBB-3 4P RED :S-MICRO
TO CA (B) BOARD CA (B) -3
GND 4
NC 3
HEATER 2
HEATER 1
R506 100k 1/2W :RC
C501 4700p 2kV
R502 1k 1/2W :RC
CBB-4 4P WHT :S-MICRO
TO CA (B) BOARD CA (B) -1
K 1
NC 2
GND 3
GND 4
L503 2.2μH
B
R503 2.7k 1/2W :RC
NL504
NL503
R507 27 1/2W :RC
K E H G2 G1 G4
SG501
R509 15k 1/2W :RC
CBB-1 4P YEELOW :S-MICRO
TO CA (B) BOARD CA (B) -2
GND 4
GND 3
NC 2
G1 1
NL505
R508 10 1/2W :RC
NL502
NL501
R501 1k 1/2W :RC
CB (B)
(CRT SOCKET)
CBB-6 1P WHT :MINI
CBB-5 2P WHT LARGE
GND
TO FOCUS PACK
TO CHASIS GND
TO CRT GND

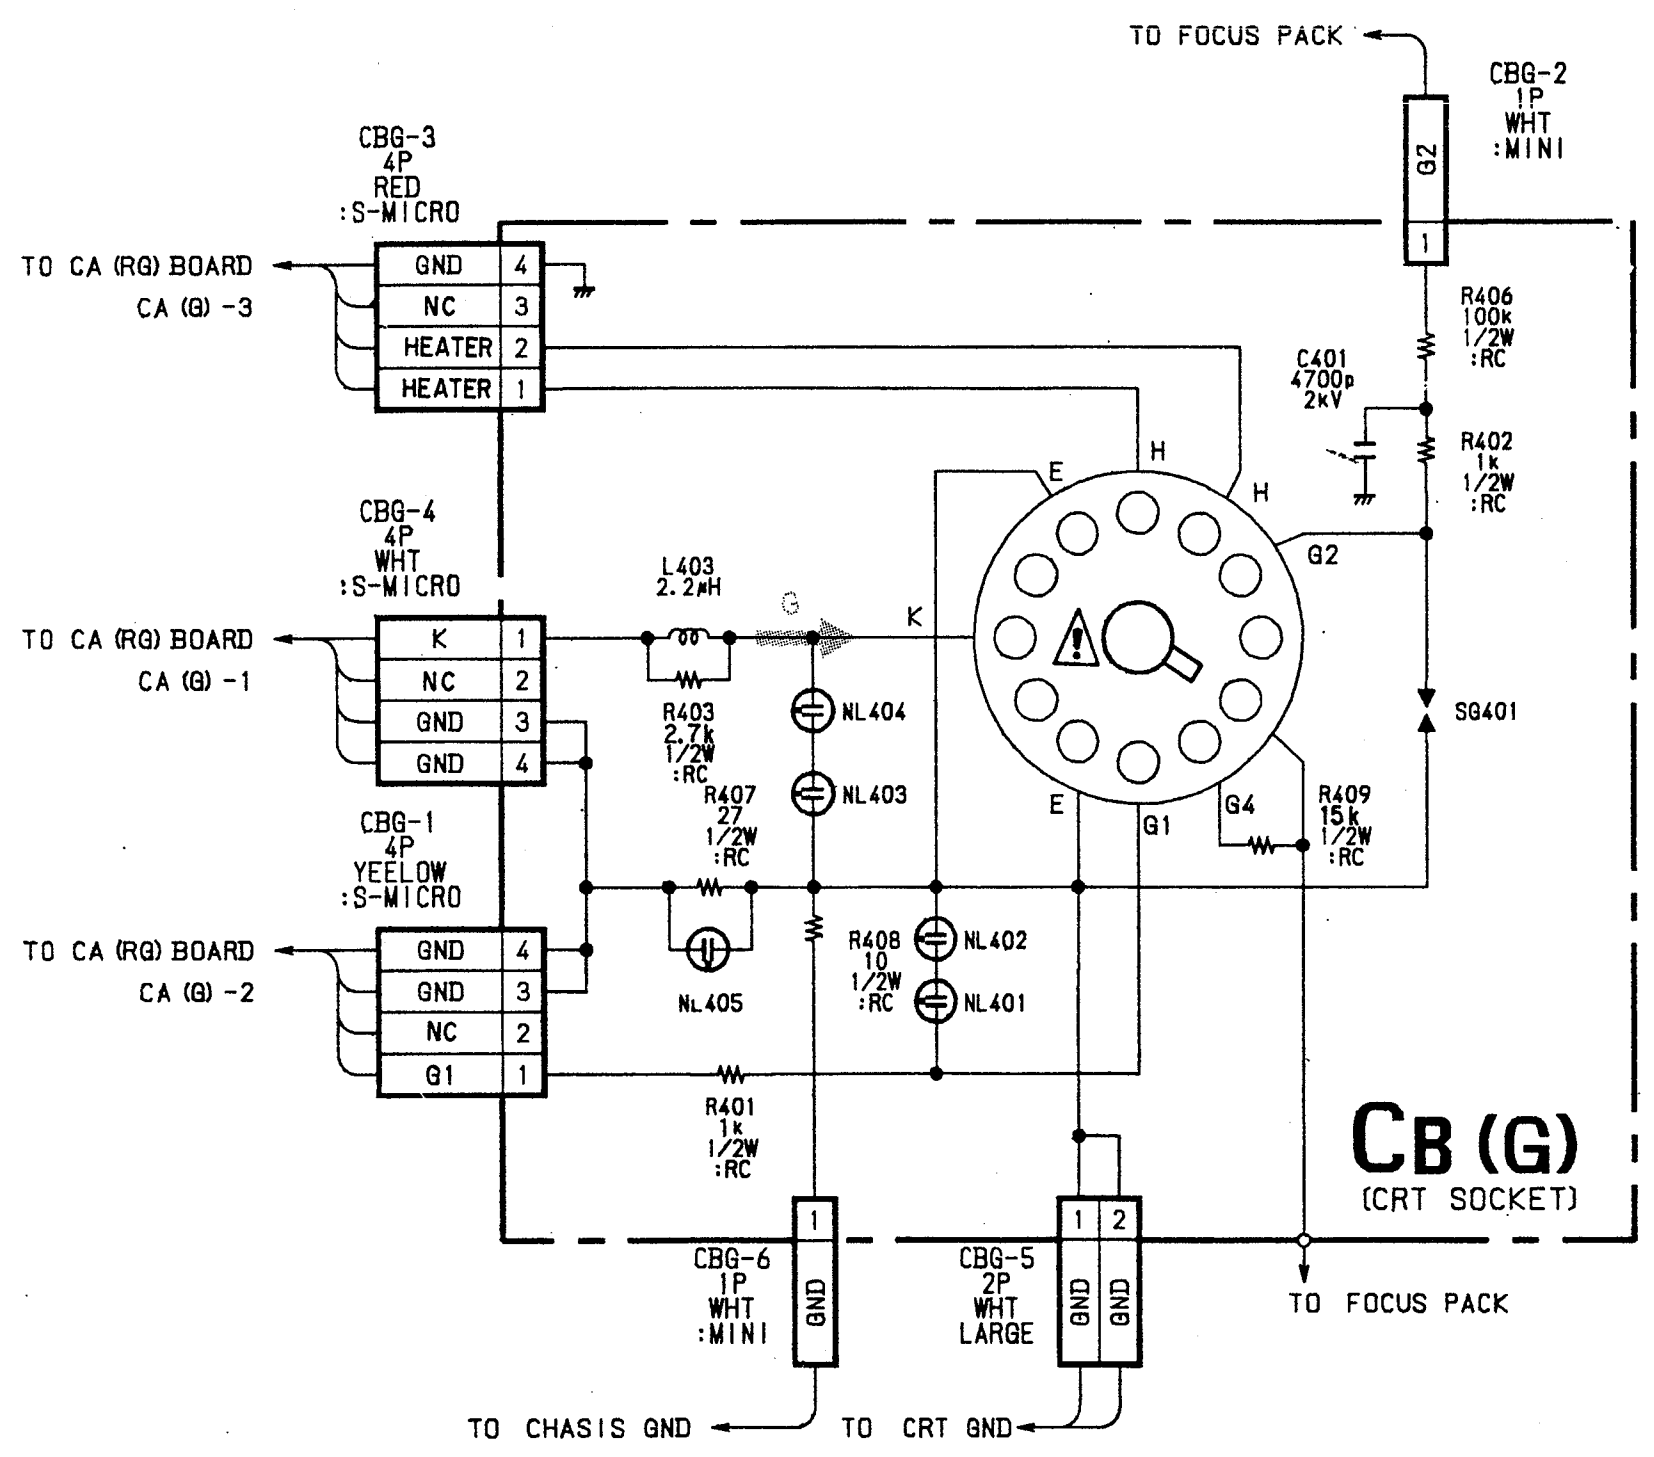
TO FOCUS PACK
CBG-2 1P WHT :MINI
G2
CBG-3 4P RED :S-MICRO
TO CA (RG) BOARD CA (G) -3
GND 4
NC 3
HEATER 2
HEATER 1
R406 100k 1/2W :RC
C401 4700p 2kV
R402 1k 1/2W :RC
CBG-4 4P WHT :S-MICRO
TO CA (RG) BOARD CA (G) -1
K 1
NC 2
GND 3
GND 4
L403 2.2μH
G
R403 2.7k 1/2W :RC
NL404
NL403
R407 27 1/2W :RC
K E H G2 G1 G4
SG401
R409 15k 1/2W :RC
CBG-1 4P YEELOW :S-MICRO
TO CA (RG) BOARD CA (G) -2
GND 4
GND 3
NC 2
G1 1
NL405
R408 10 1/2W :RC
NL402
NL401
R401 1k 1/2W :RC
CB (G)
(CRT SOCKET)
CBG-6 1P WHT :MINI
CBG-5 2P WHT LARGE
GND
TO FOCUS PACK
TO CHASIS GND
TO CRT GND

– CB (R) BOARD –

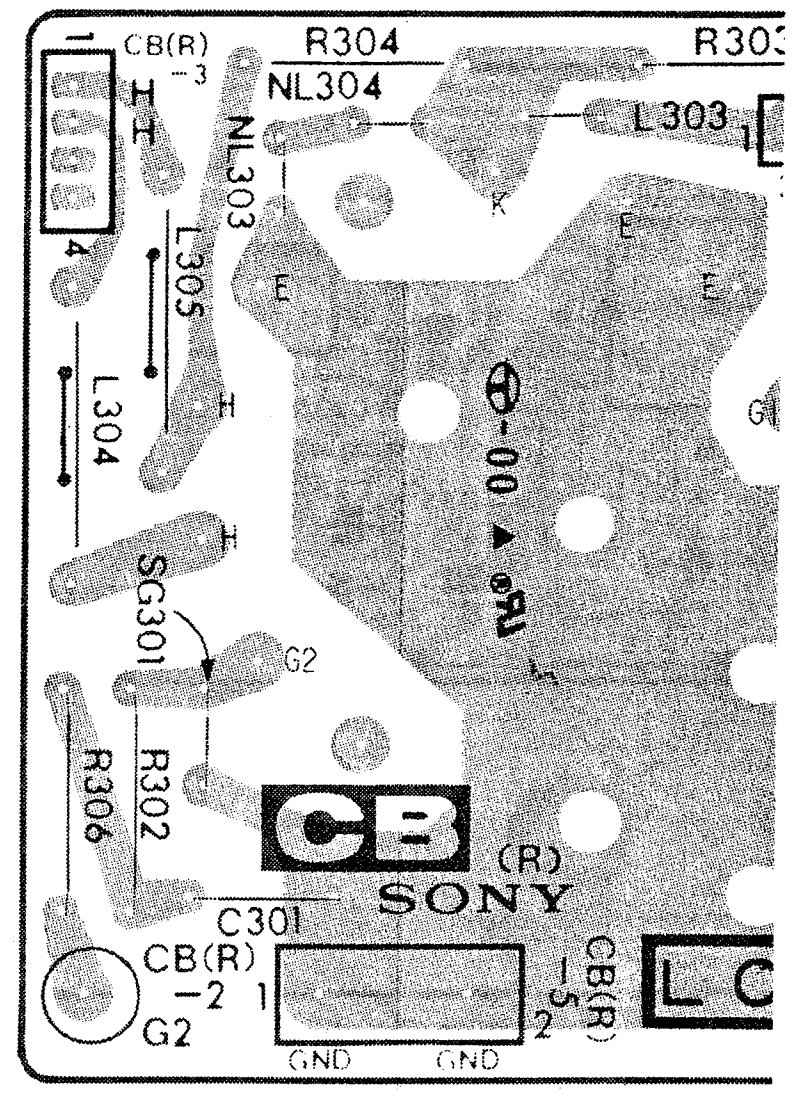
CB(R) -3
R304
R303
NL304
NL303
L303
L305
L304
SG301
R302
R306
C301
CB (R)
SONY
CB(R) -2
G2
CB(R) -5
GND
GND

– CB (G) BOARD –

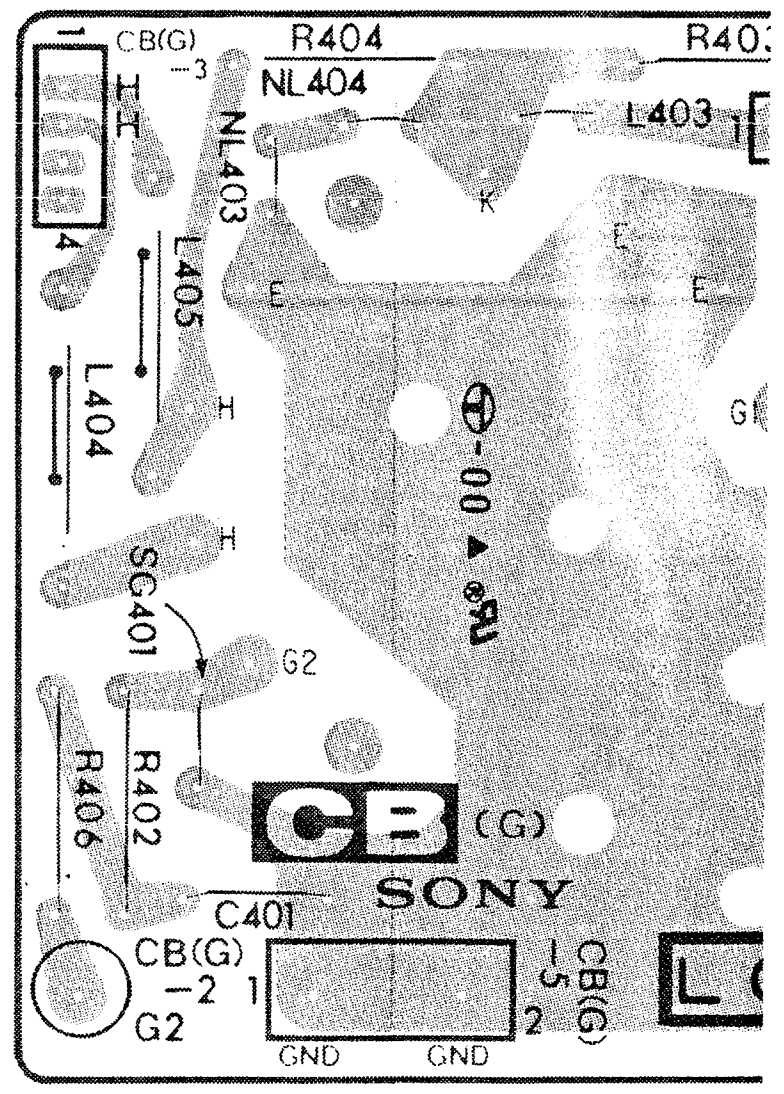
CB(G) -3
R404
R403
NL404
NL403
L403
L405
L404
SG401
R402
R406
C401
CB (G)
SONY
CB(G) -2
G2
CB(G) -5
GND
GND

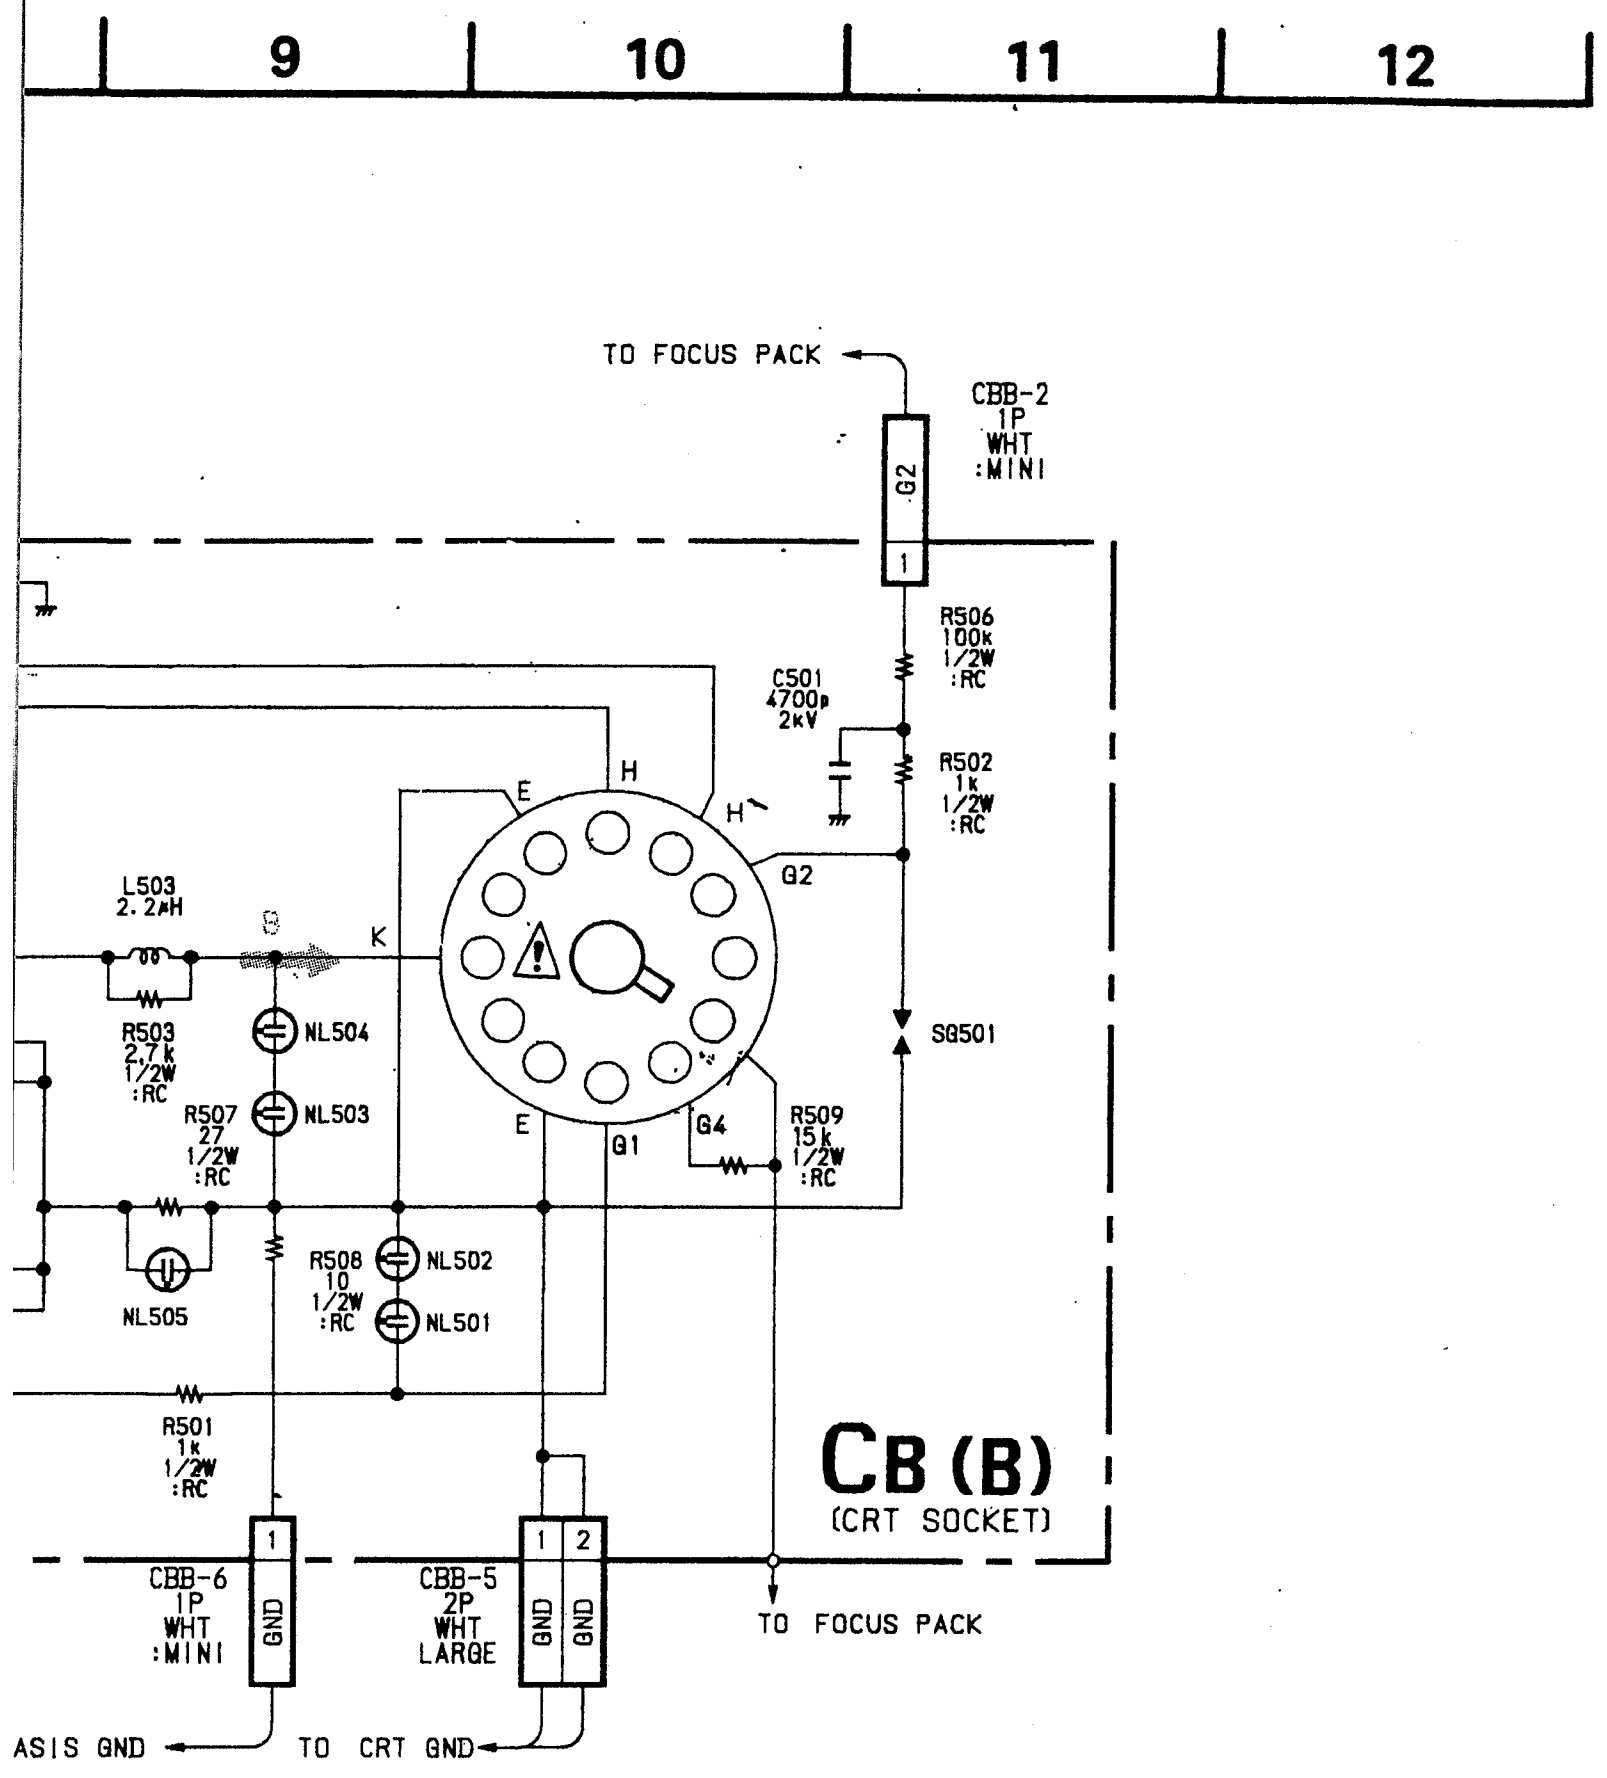
9
10
11
12
TO FOCUS PACK
CBB-2 1P WHT :MINI
G2
R506 100k 1/2W :RC
C501 4700p 2kV
R502 1k 1/2W :RC
L503 2.2μH
K
H
E
G2
SG501
R503 2.7k 1/2W :RC
NL504
R507 27 1/2W :RC
NL503
G4
R509 15k 1/2W :RC
G1
R508 10 1/2W :RC
NL502
NL501
NL505
R501 1k 1/2W :RC
CB (B)
(CRT SOCKET)
CBB-6 1P WHT :MINI
GND
CBB-5 2P WHT LARGE
TO FOCUS PACK
ASIS GND
TO CRT GND

– CB (R) BOARD –

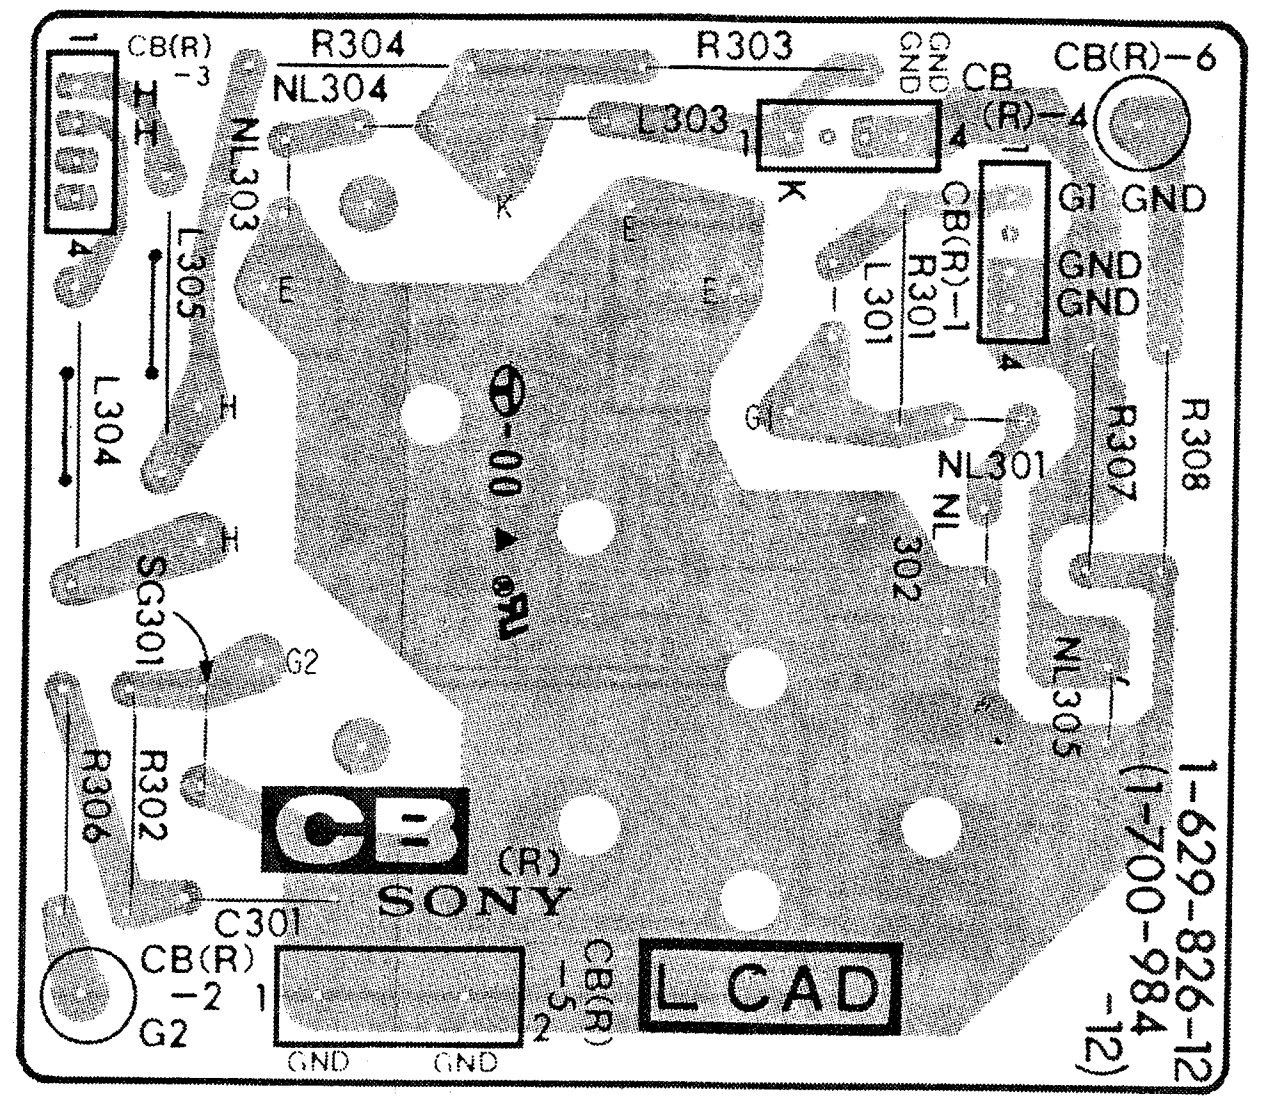
CB(R) -3
R304
NL304
R303
CB(R)-6
CB (R)-4
L303
NL303
L305
L304
CB(R)-1
R301
L301
G1 GND
GND
GND
R308
R307
NL301
NL 302
NL305
SG301
G2
R306
R302
CB (R)
SONY
C301
CB(R) -2
CB(R) -5
L CAD
GND
G2
1-629-826-12
(1-700-984 -12)

– CB (B) BOARD –

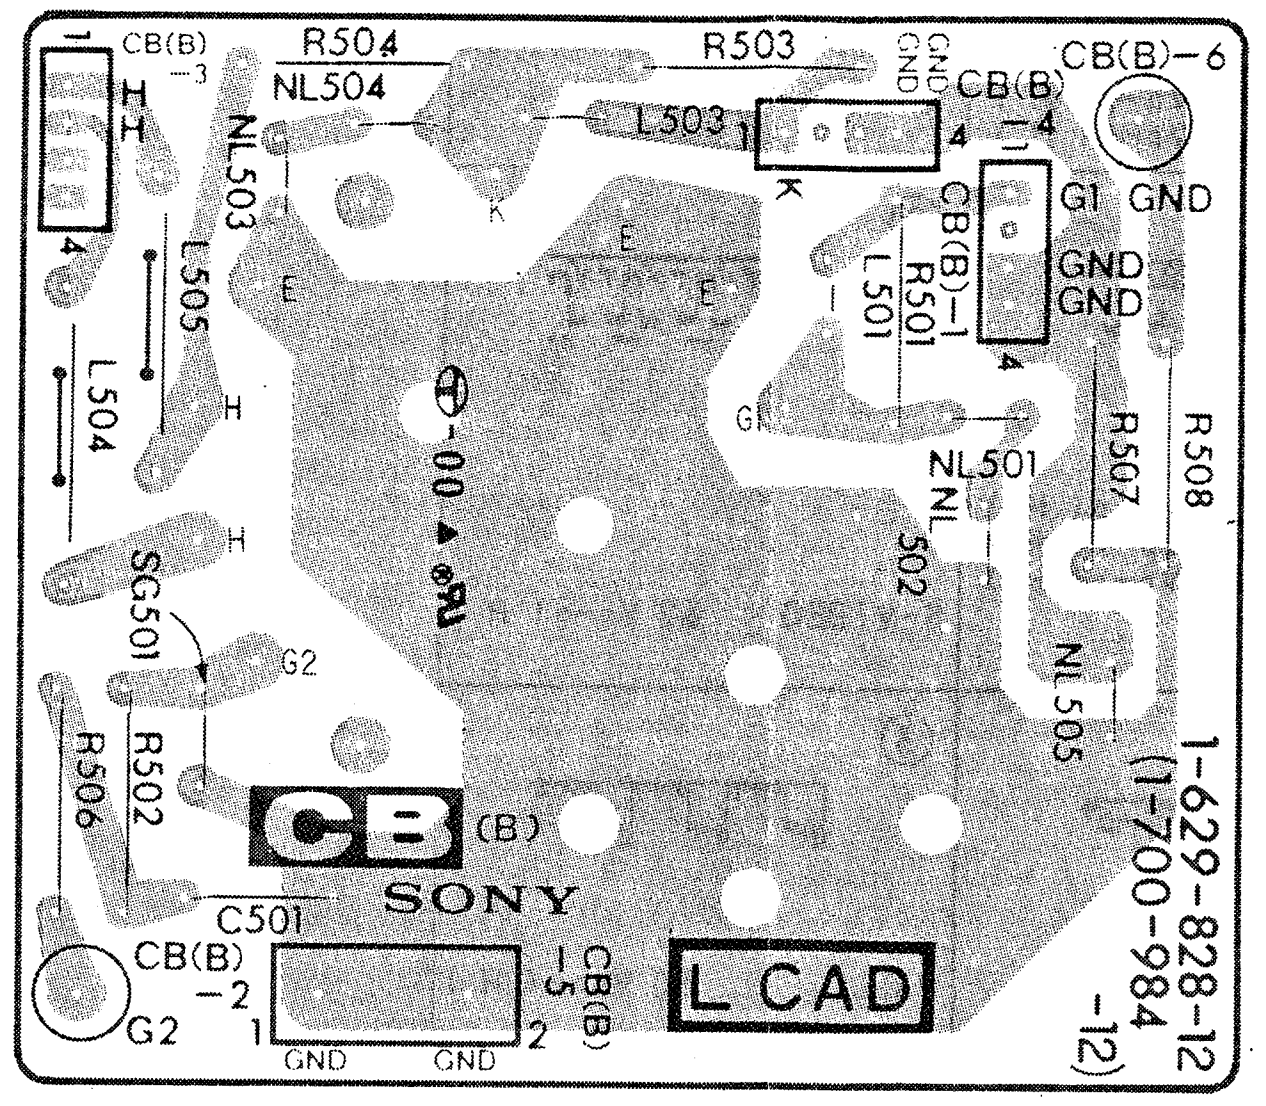
CB(B) -3
R504
NL504
R503
CB(B)-6
CB(B) -4
L503
NL503
L505
L504
CB(B)-1
R501
L501
G1 GND
GND
GND
R508
R507
NL501
NL 502
NL505
SG501
G2
R506
R502
CB (B)
SONY
C501
CB(B) -2
CB(B) -5
L CAD
GND
G2
1-629-828-12
(1-700-984 -12)

– CB (G) BOARD –

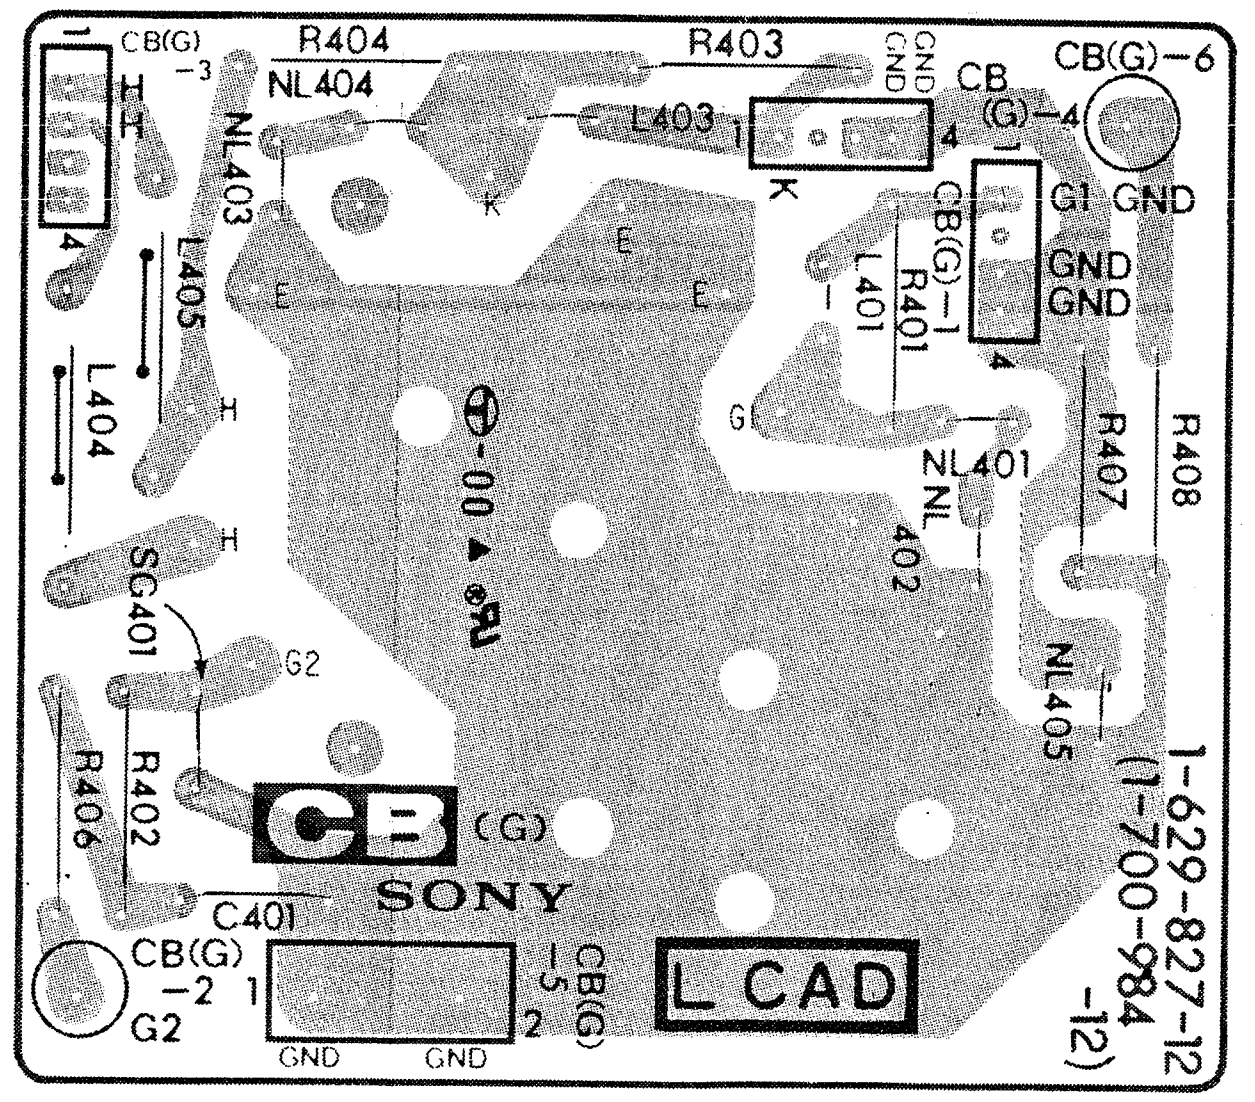
CB(G) -3
R404
NL404
R403
CB(G)-6
CB (G)-4
L403
NL403
L405
L404
CB(G)-1
R401
L401
G1 GND
GND
GND
R408
R407
NL401
NL 402
NL405
SG401
G2
R406
R402
CB (G)
SONY
C401
CB(G) -2
CB(G) -5
L CAD
GND
G2
1-629-827-12
(1-700-984 -12)

CF-1 [FILTER] **CF-2** [FILTER]

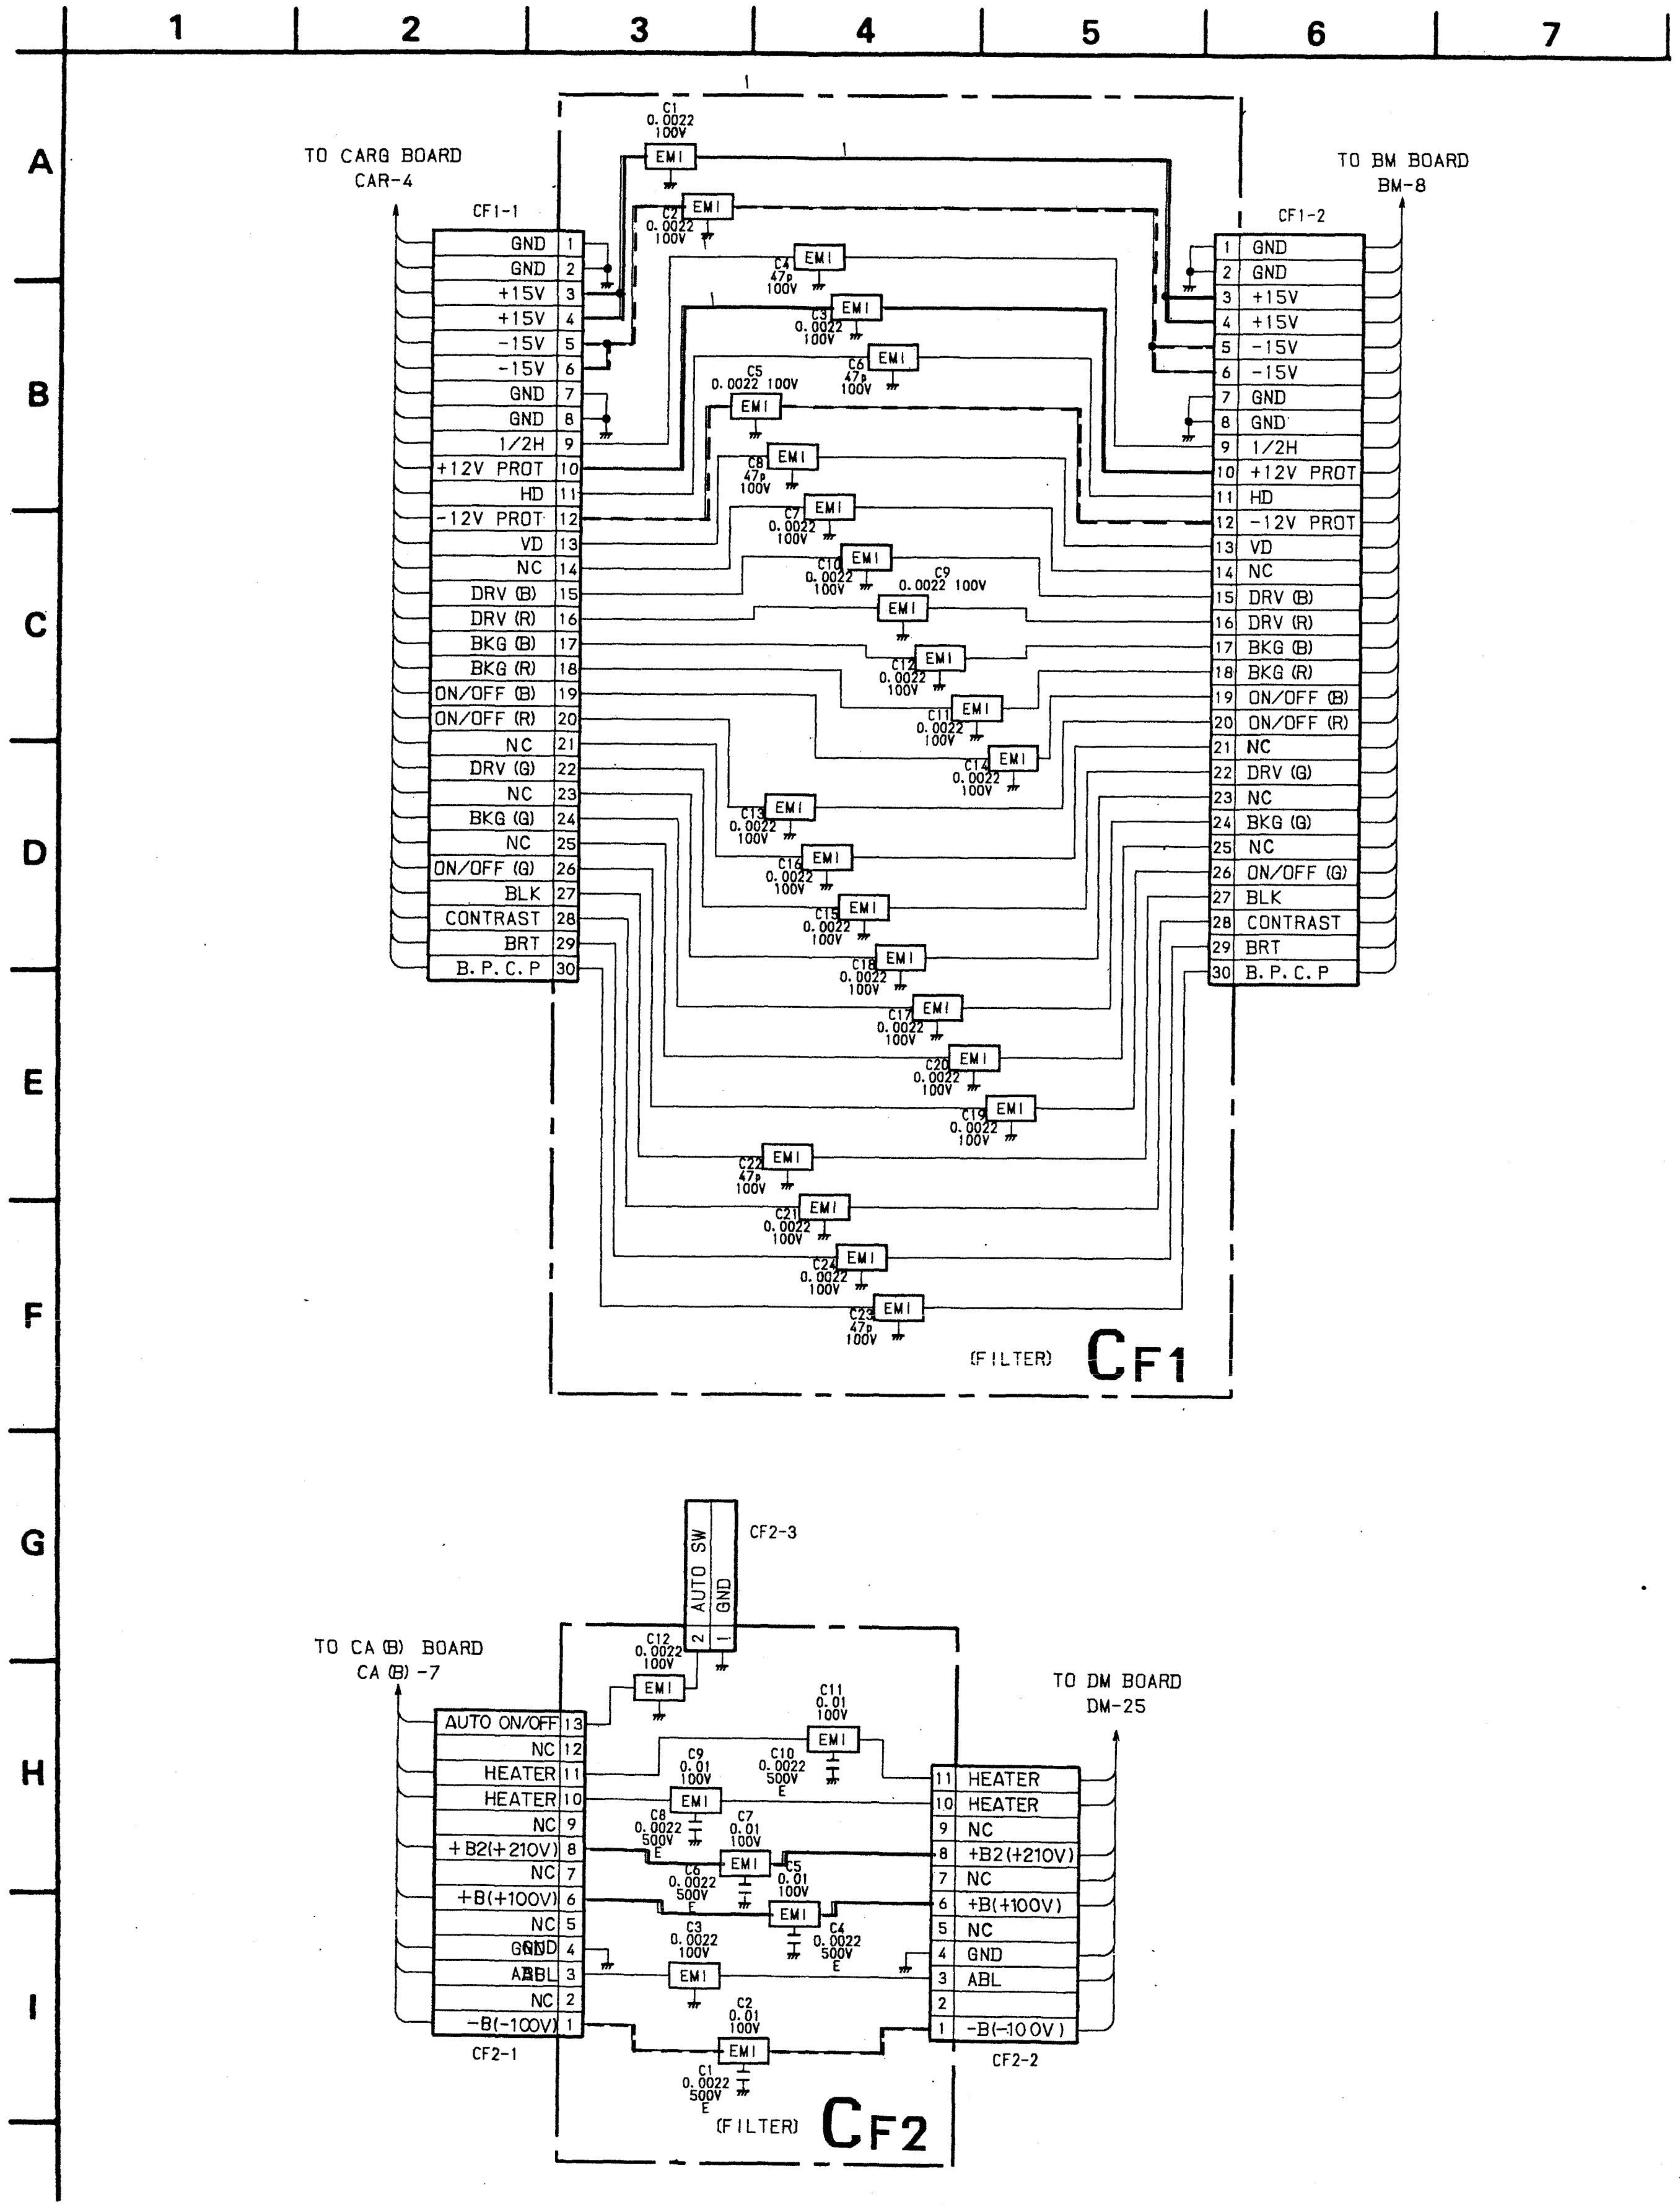
1
2
3
4
5
6
7
A
B
C
D
E
F
G
H
I
TO CARG BOARD CAR-4
CF1-1
TO BM BOARD BM-8
CF1-2
GND 1
GND 2
+15V 3
+15V 4
-15V 5
-15V 6
GND 7
GND 8
1/2H 9
+12V PROT 10
HD 11
-12V PROT 12
VD 13
NC 14
DRV (B) 15
DRV (R) 16
BKG (B) 17
BKG (R) 18
ON/OFF (B) 19
ON/OFF (R) 20
NC 21
DRV (G) 22
NC 23
BKG (G) 24
NC 25
ON/OFF (G) 26
BLK 27
CONTRAST 28
BRT 29
B.P.C.P 30
EMI
C1 0.0022 100V
C2 0.0022 100V
C4 47p 100V
C3 0.0022 100V
C6 47p 100V
C5 0.0022 100V
C8 47p 100V
C7 0.0022 100V
C10 0.0022 100V
C9 0.0022 100V
C12 0.0022 100V
C11 0.0022 100V
C14 0.0022 100V
C13 0.0022 100V
C16 0.0022 100V
C15 0.0022 100V
C18 0.0022 100V
C17 0.0022 100V
C20 0.0022 100V
C19 0.0022 100V
C22 47p 100V
C21 0.0022 100V
C24 0.0022 100V
C23 47p 100V
(FILTER) CF1
CF2-3
AUTO SW 1
GND 2
TO CA (B) BOARD CA (B) -7
TO DM BOARD DM-25
AUTO ON/OFF 13
NC 12
HEATER 11
HEATER 10
NC 9
+B2(+210V) 8
NC 7
+B(+100V) 6
NC 5
GND 4
ABL 3
NC 2
-B(-100V) 1
CF2-1
11 HEATER
10 HEATER
9 NC
8 +B2(+210V)
7 NC
6 +B(+100V)
5 NC
4 GND
3 ABL
2
1 -B(-100V)
CF2-2
C12 0.0022 100V
C11 0.01 100V
C9 0.01 100V
C10 0.0022 500V E
C8 0.0022 500V E
C7 0.01 100V
C6 0.0022 500V
C5 0.01 100V
C3 0.0022 100V
C4 0.0022 500V E
C2 0.01 100V
C1 0.0022 500V E
(FILTER) CF2

– CF-1 BOARD –

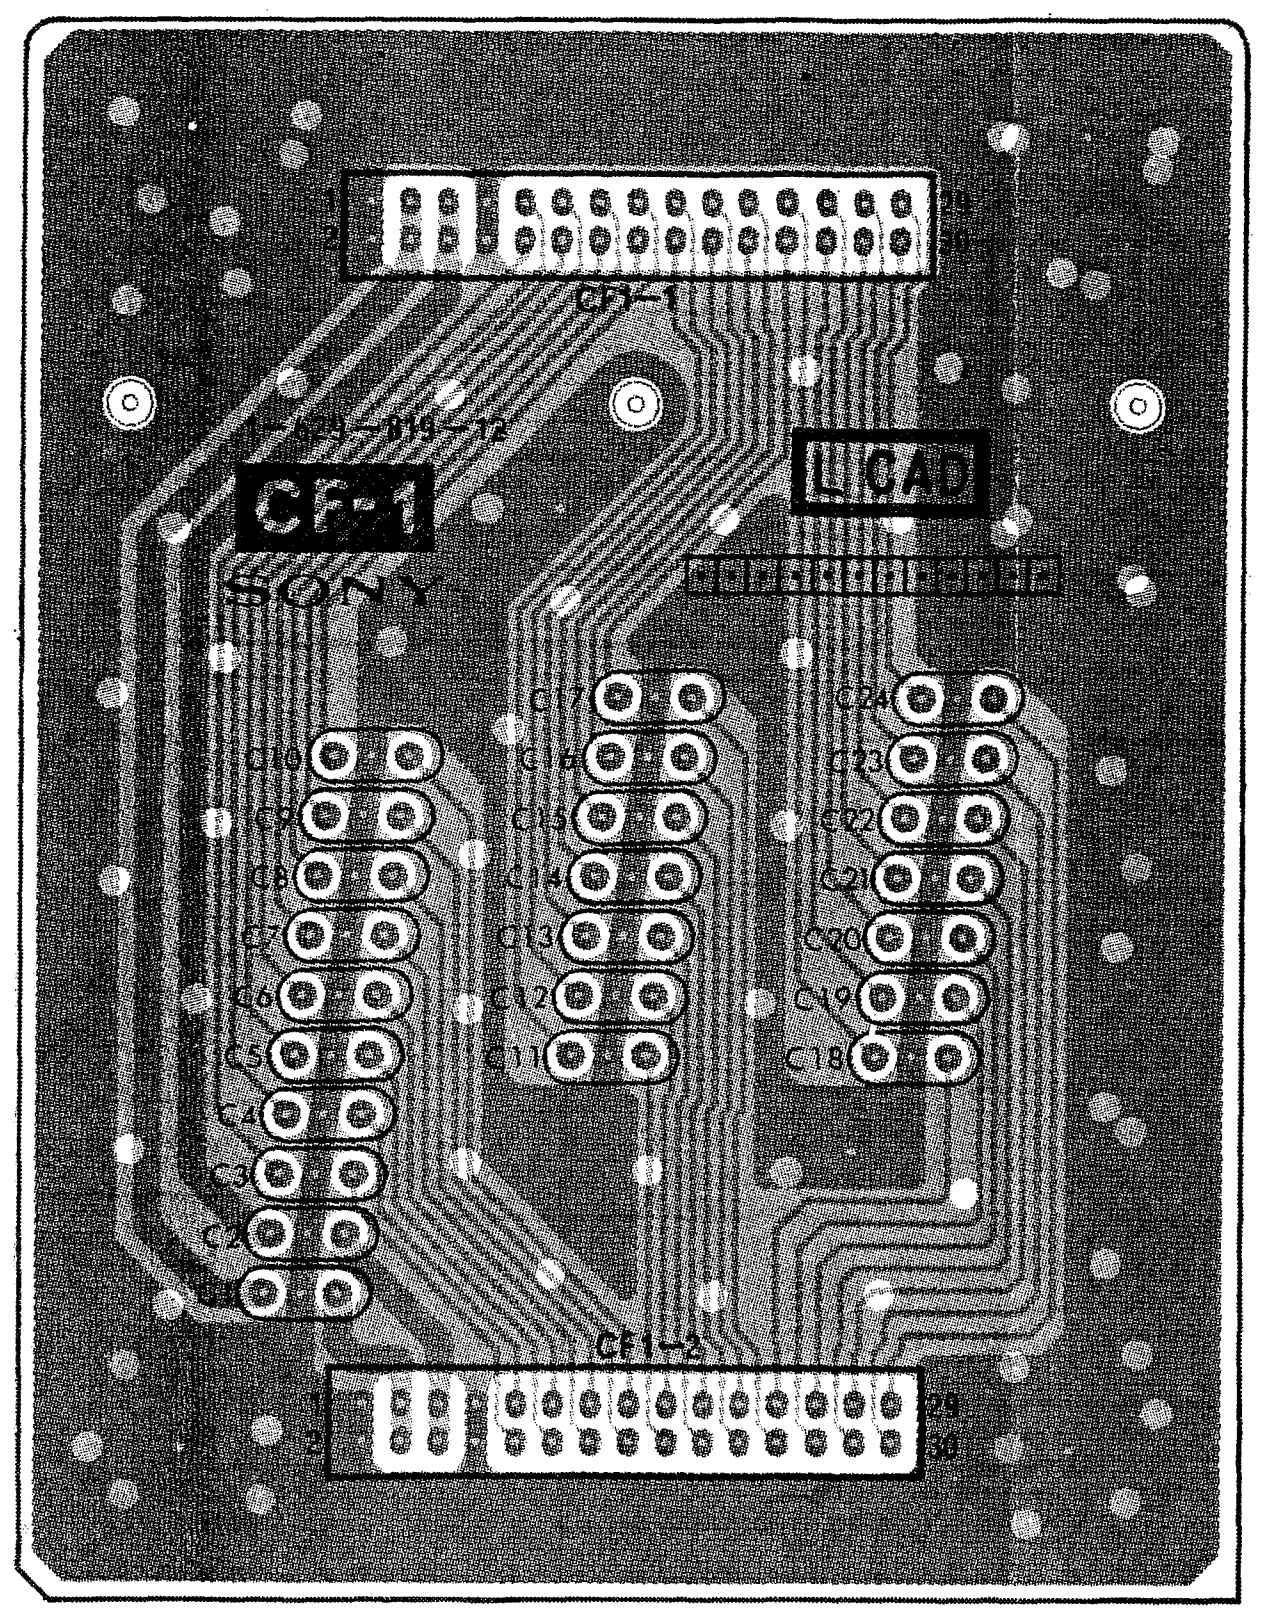
CF1-1
CF-1
SONY
L CAD
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
CF1-2
29
30

– CF-2 BOARD –

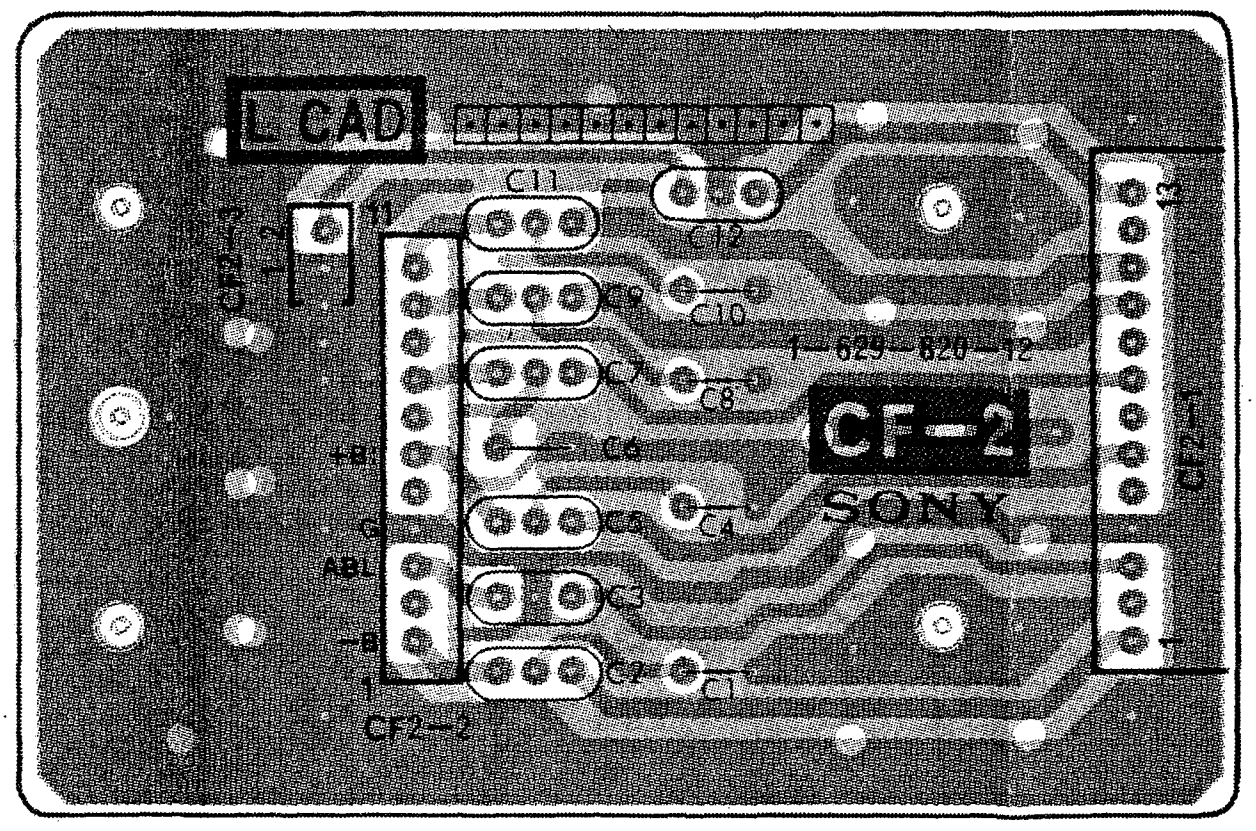
L CAD
CF2-3
CF2-1
CF2-2
CF-2
SONY
1-629-820-12
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
+B
G
ABL
-B
1
13

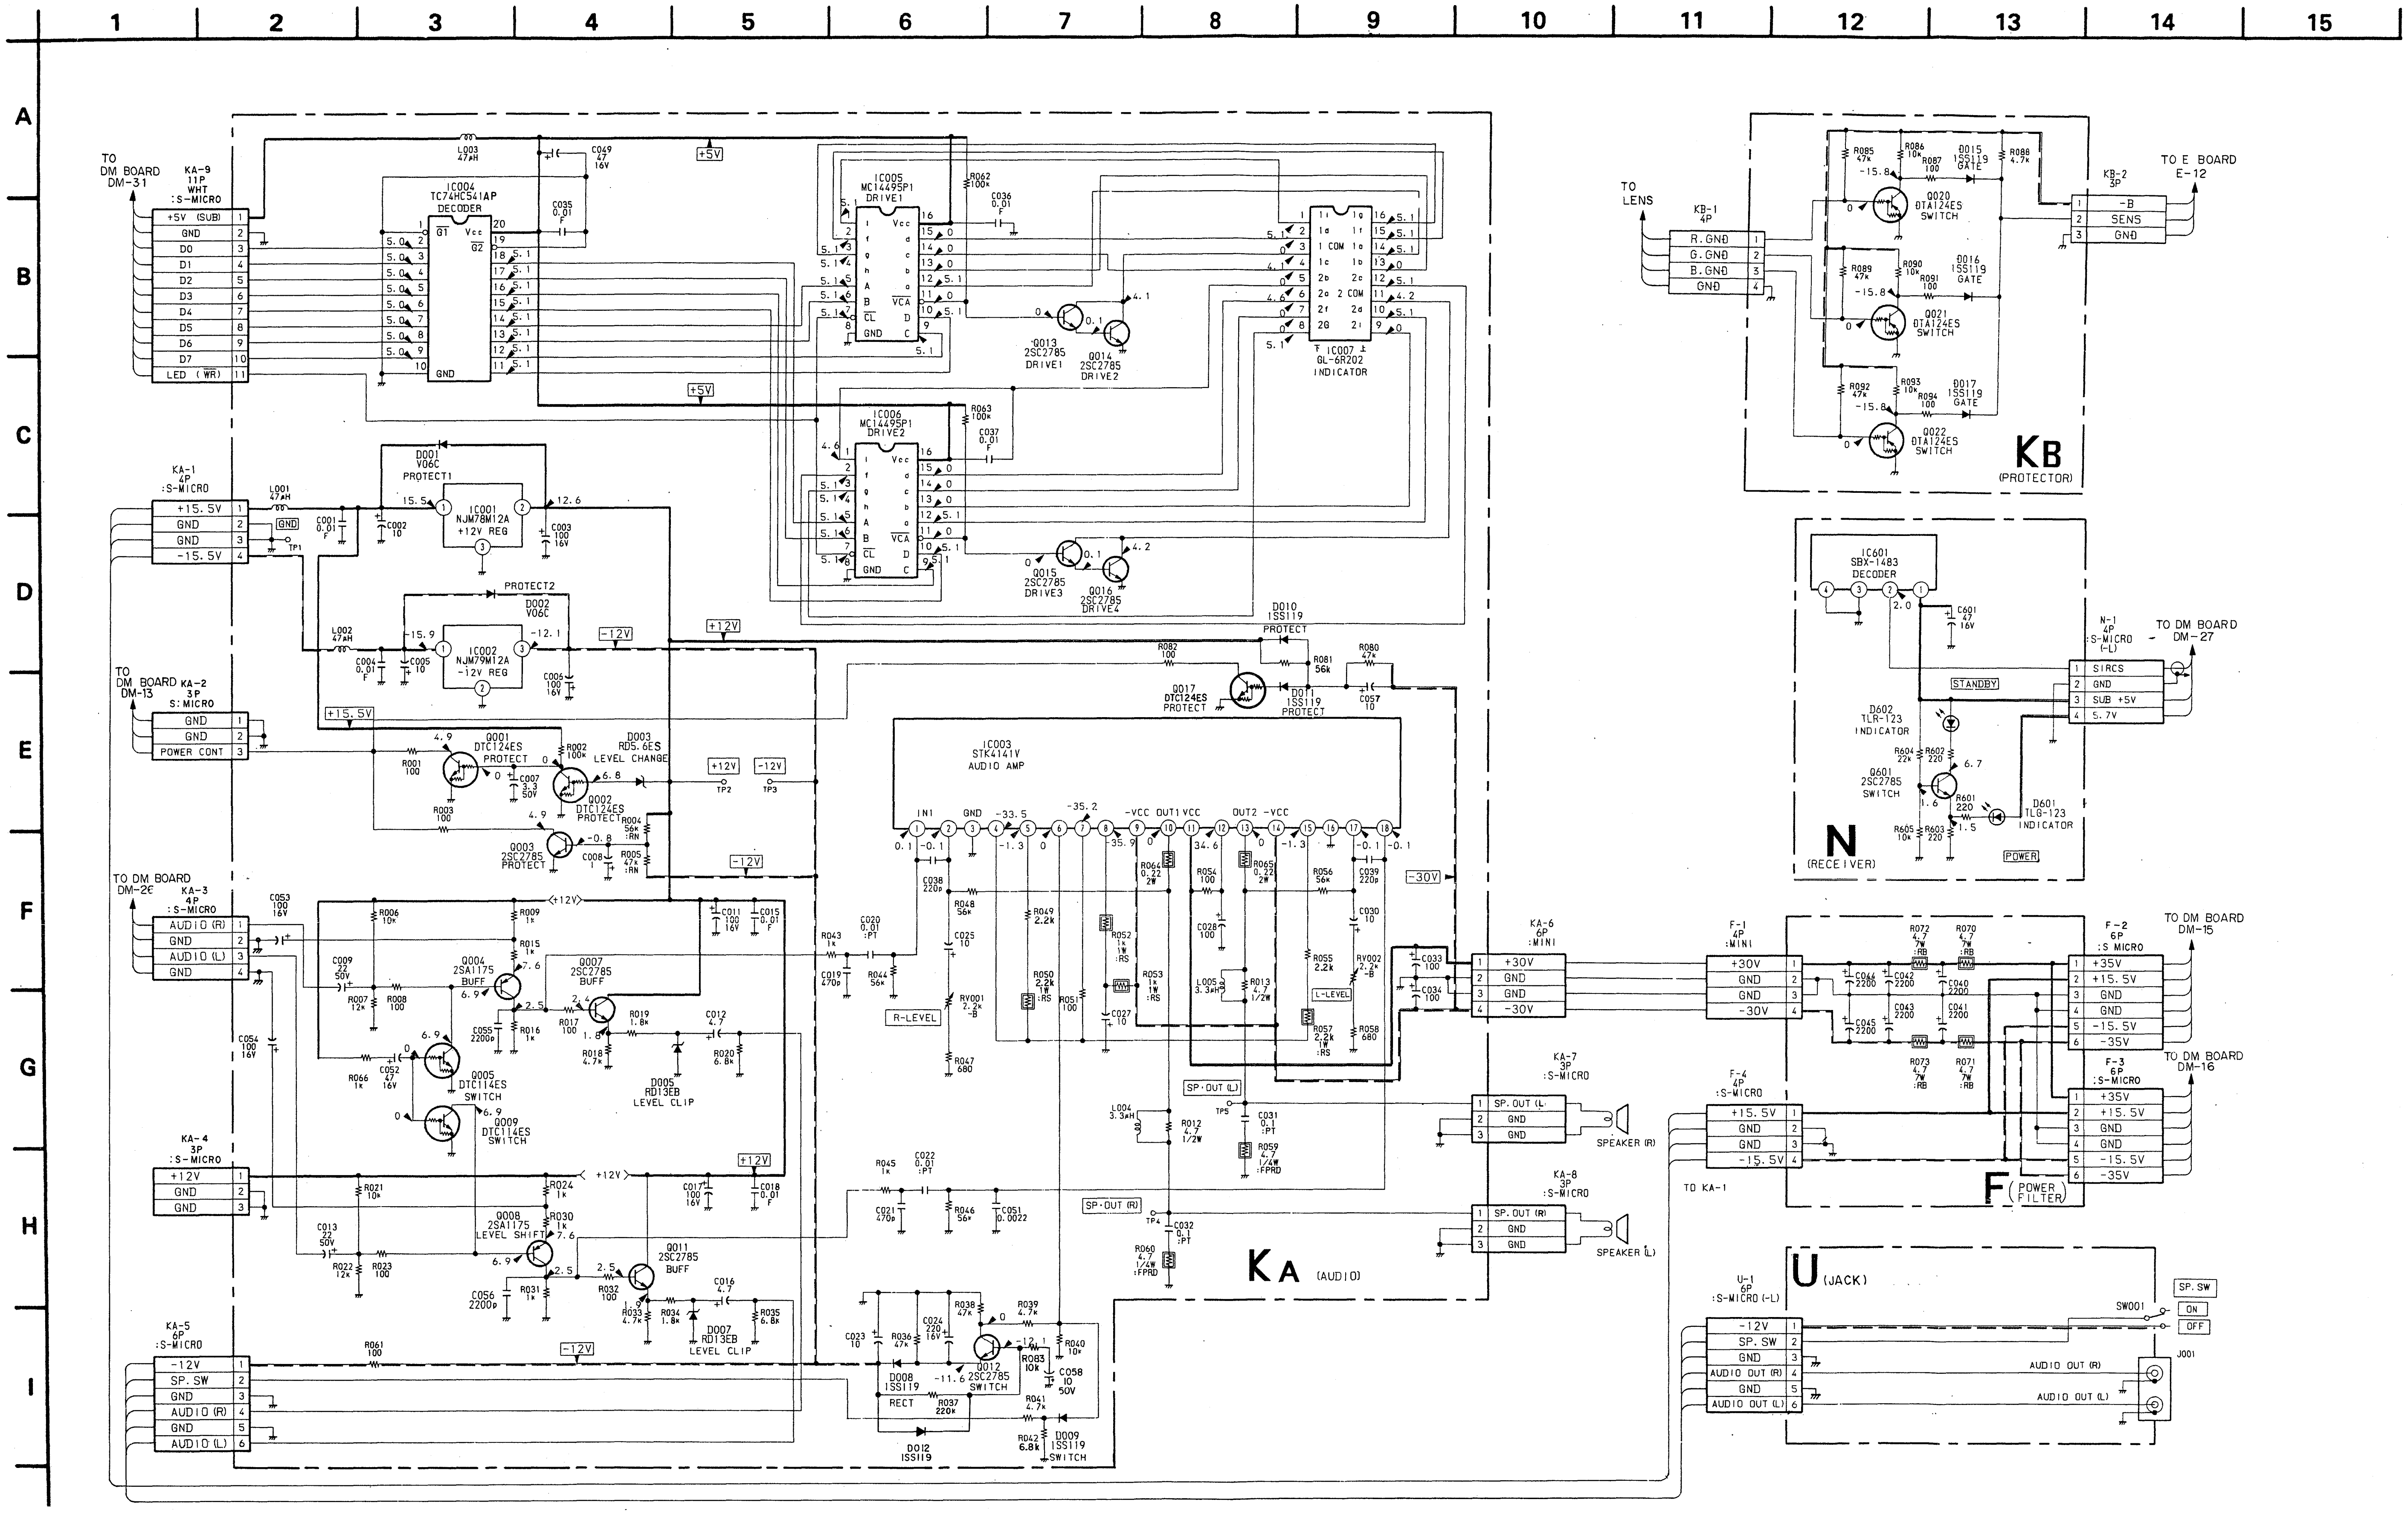
KA (AUDIO)
KB (PROTECTOR)
N (RECEIVER)
F (POWER FILTER)
U (JACK)
TO DM BOARD DM-31
KA-9 11P WHT :S-MICRO
+5V (SUB)
GND
D0
D1
D2
D3
D4
D5
D6
D7
LED (WR)
IC004 TC74HC541AP DECODER
IC005 MC14495P1 DRIVE1
IC006 MC14495P1 DRIVE2
IC007 GL-6R202 INDICATOR
Q013 2SC2785 DRIVE1
Q014 2SC2785 DRIVE2
Q015 2SC2785 DRIVE3
Q016 2SC2785 DRIVE4
KA-1 4P :S-MICRO
+15.5V
GND
-15.5V
IC001 NJM78M12A +12V REG
IC002 NJM79M12A -12V REG
D001 V06C PROTECT1
D002 V06C PROTECT2
TO DM BOARD DM-13
KA-2 3P S:MICRO
POWER CONT
Q001 DTC124ES PROTECT
Q002 DTC124ES PROTECT
Q003 2SC2785 PROTECT
D003 RD5.6ES LEVEL CHANGE
TO DM BOARD DM-26
KA-3 4P :S-MICRO
AUDIO (R)
AUDIO (L)
Q004 2SA1175 BUFF
Q007 2SC2785 BUFF
Q005 DTC114ES SWITCH
Q009 DTC114ES SWITCH
D005 RD13EB LEVEL CLIP
KA-4 3P :S-MICRO
+12V
Q008 2SA1175 LEVEL SHIFT
Q011 2SC2785 BUFF
D007 RD13EB LEVEL CLIP
KA-5 6P :S-MICRO
-12V
SP. SW
AUDIO (R)
AUDIO (L)
IC003 STK4141V AUDIO AMP
R-LEVEL
L-LEVEL
Q017 DTC124ES PROTECT
D010 1SS119 PROTECT
D011 1SS119 PROTECT
Q012 2SC2785 SWITCH
D008 1SS119 RECT
D012 1SS119
D009 1SS119 SWITCH
KA-6 6P :MINI
+30V
-30V
KA-7 3P :S-MICRO
SP. OUT (L)
SPEAKER (R)
KA-8 3P :S-MICRO
SP. OUT (R)
SPEAKER (L)
TO LENS
KB-1 4P
R. GND
G. GND
B. GND
KB-2 3P
TO E BOARD E-12
-B
SENS
Q020 DTA124ES SWITCH
Q021 DTA124ES SWITCH
Q022 DTA124ES SWITCH
D015 1SS119 GATE
D016 1SS119 GATE
D017 1SS119 GATE
IC601 SBX-1483 DECODER
N-1 4P :S-MICRO (-L)
TO DM BOARD DM-27
SIRCS
SUB +5V
STANDBY
D602 TLR-123 INDICATOR
Q601 2SC2785 SWITCH
D601 TLG-123 INDICATOR
POWER
F-1 4P :MINI
F-2 6P :S MICRO
TO DM BOARD DM-15
+35V
-35V
F-3 6P :S-MICRO
TO DM BOARD DM-16
F-4 4P :S-MICRO
TO KA-1
U-1 6P :S-MICRO (-L)
AUDIO OUT (R)
AUDIO OUT (L)
SP. SW
S W001
ON
OFF
J001

F [POWER FILTER] **U** [JACK] **KA** [AUDIO] **N** [RECEIVER]

– F BOARD –

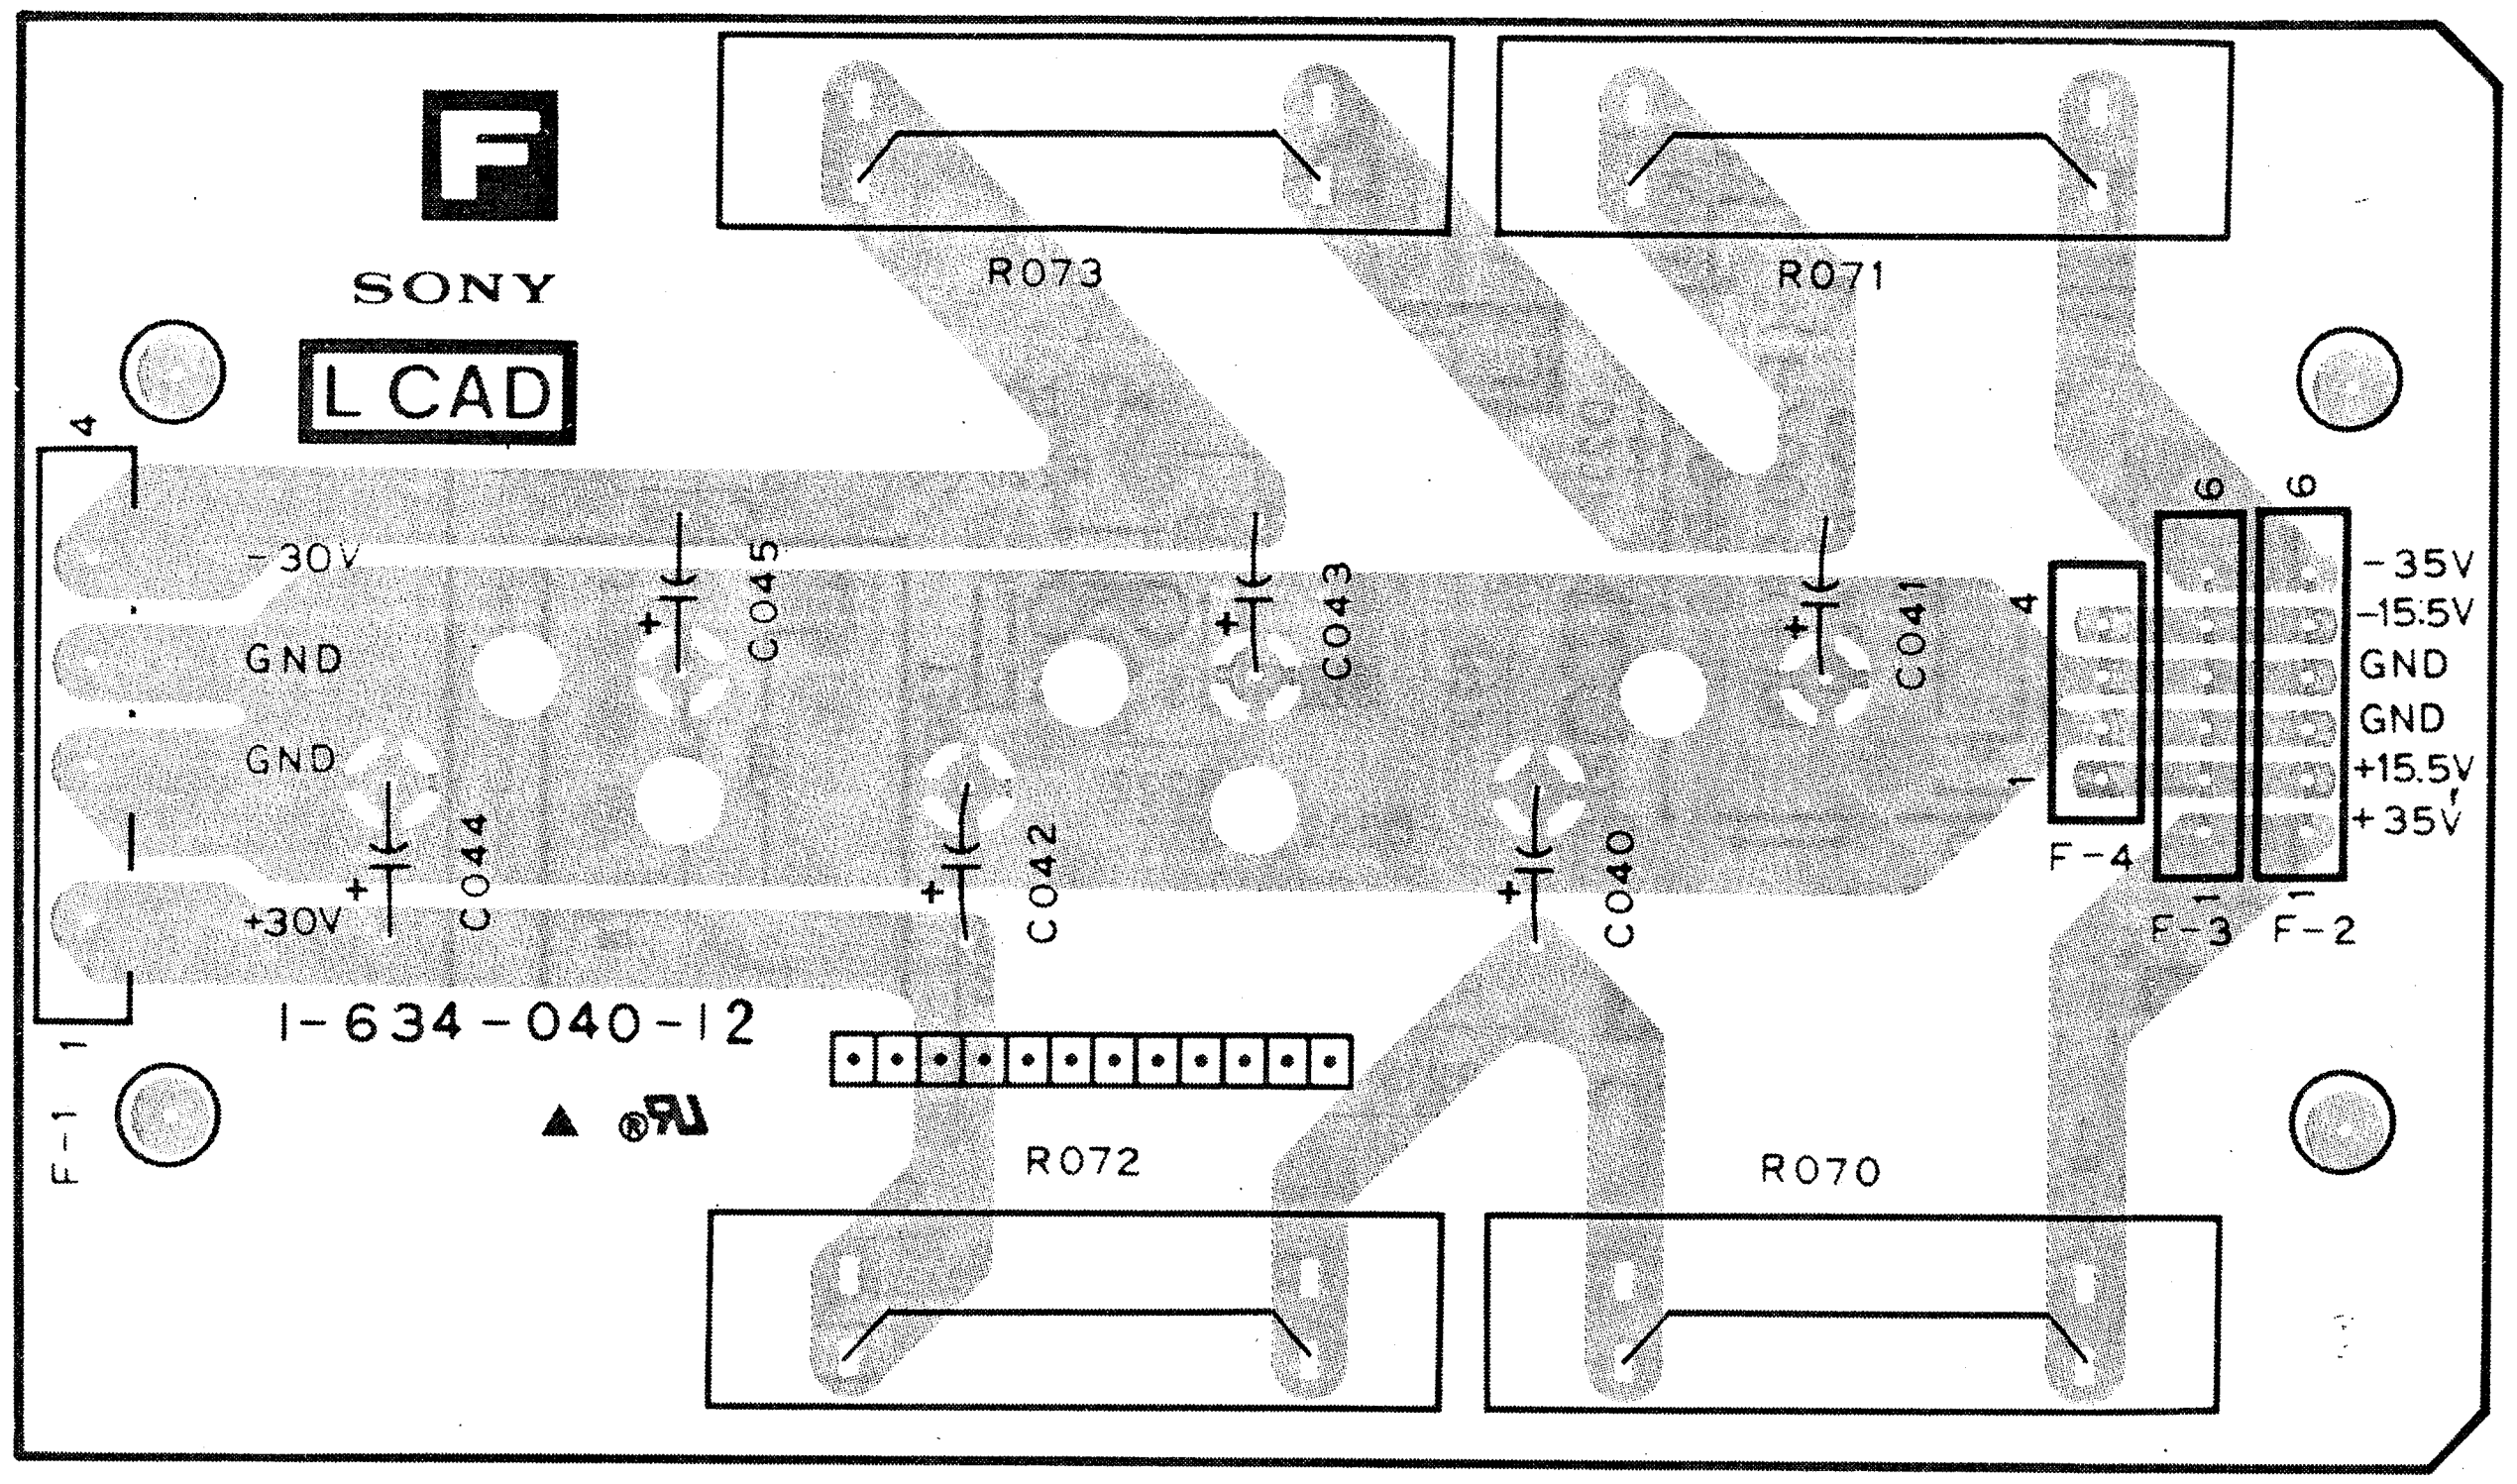
F
SONY
L CAD
R073
R071
R072
R070
C045
C043
C041
C044
C042
C040
-30V
GND
GND
+30V
1-634-040-12
F-1
F-4
F-3
F-2
-35V
-15.5V
GND
GND
+15.5V
+35V

– U BOARD –

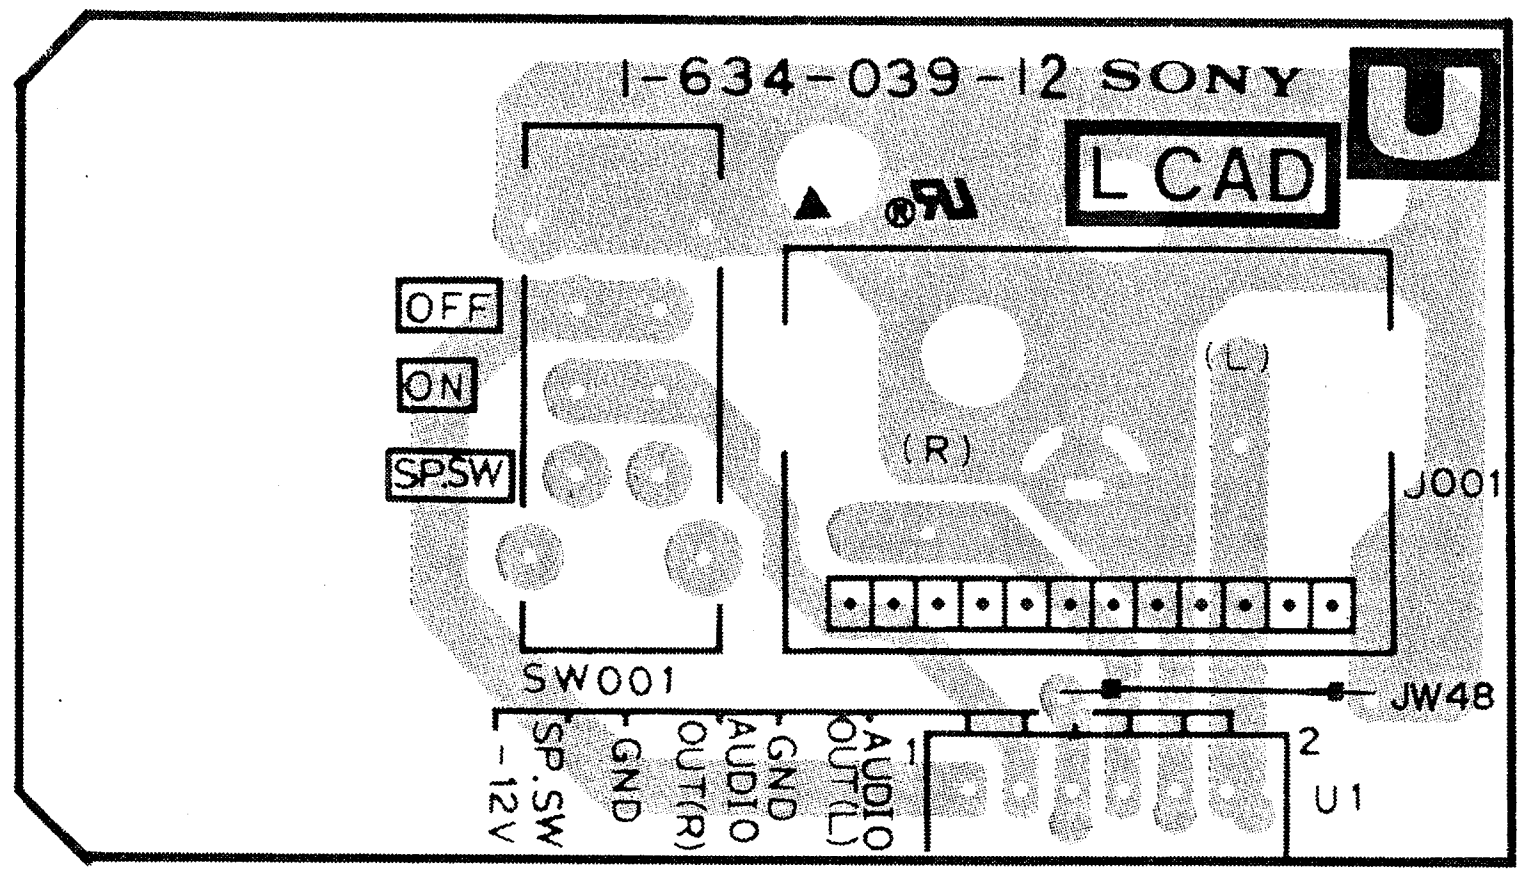
1-634-039-12 SONY
U
L CAD
OFF
ON
SP.SW
(R)
(L)
J001
SW001
JW48
U1
-12V
SP.SW
GND
AUDIO OUT(R)
GND
AUDIO OUT(L)

– KA BOARD –

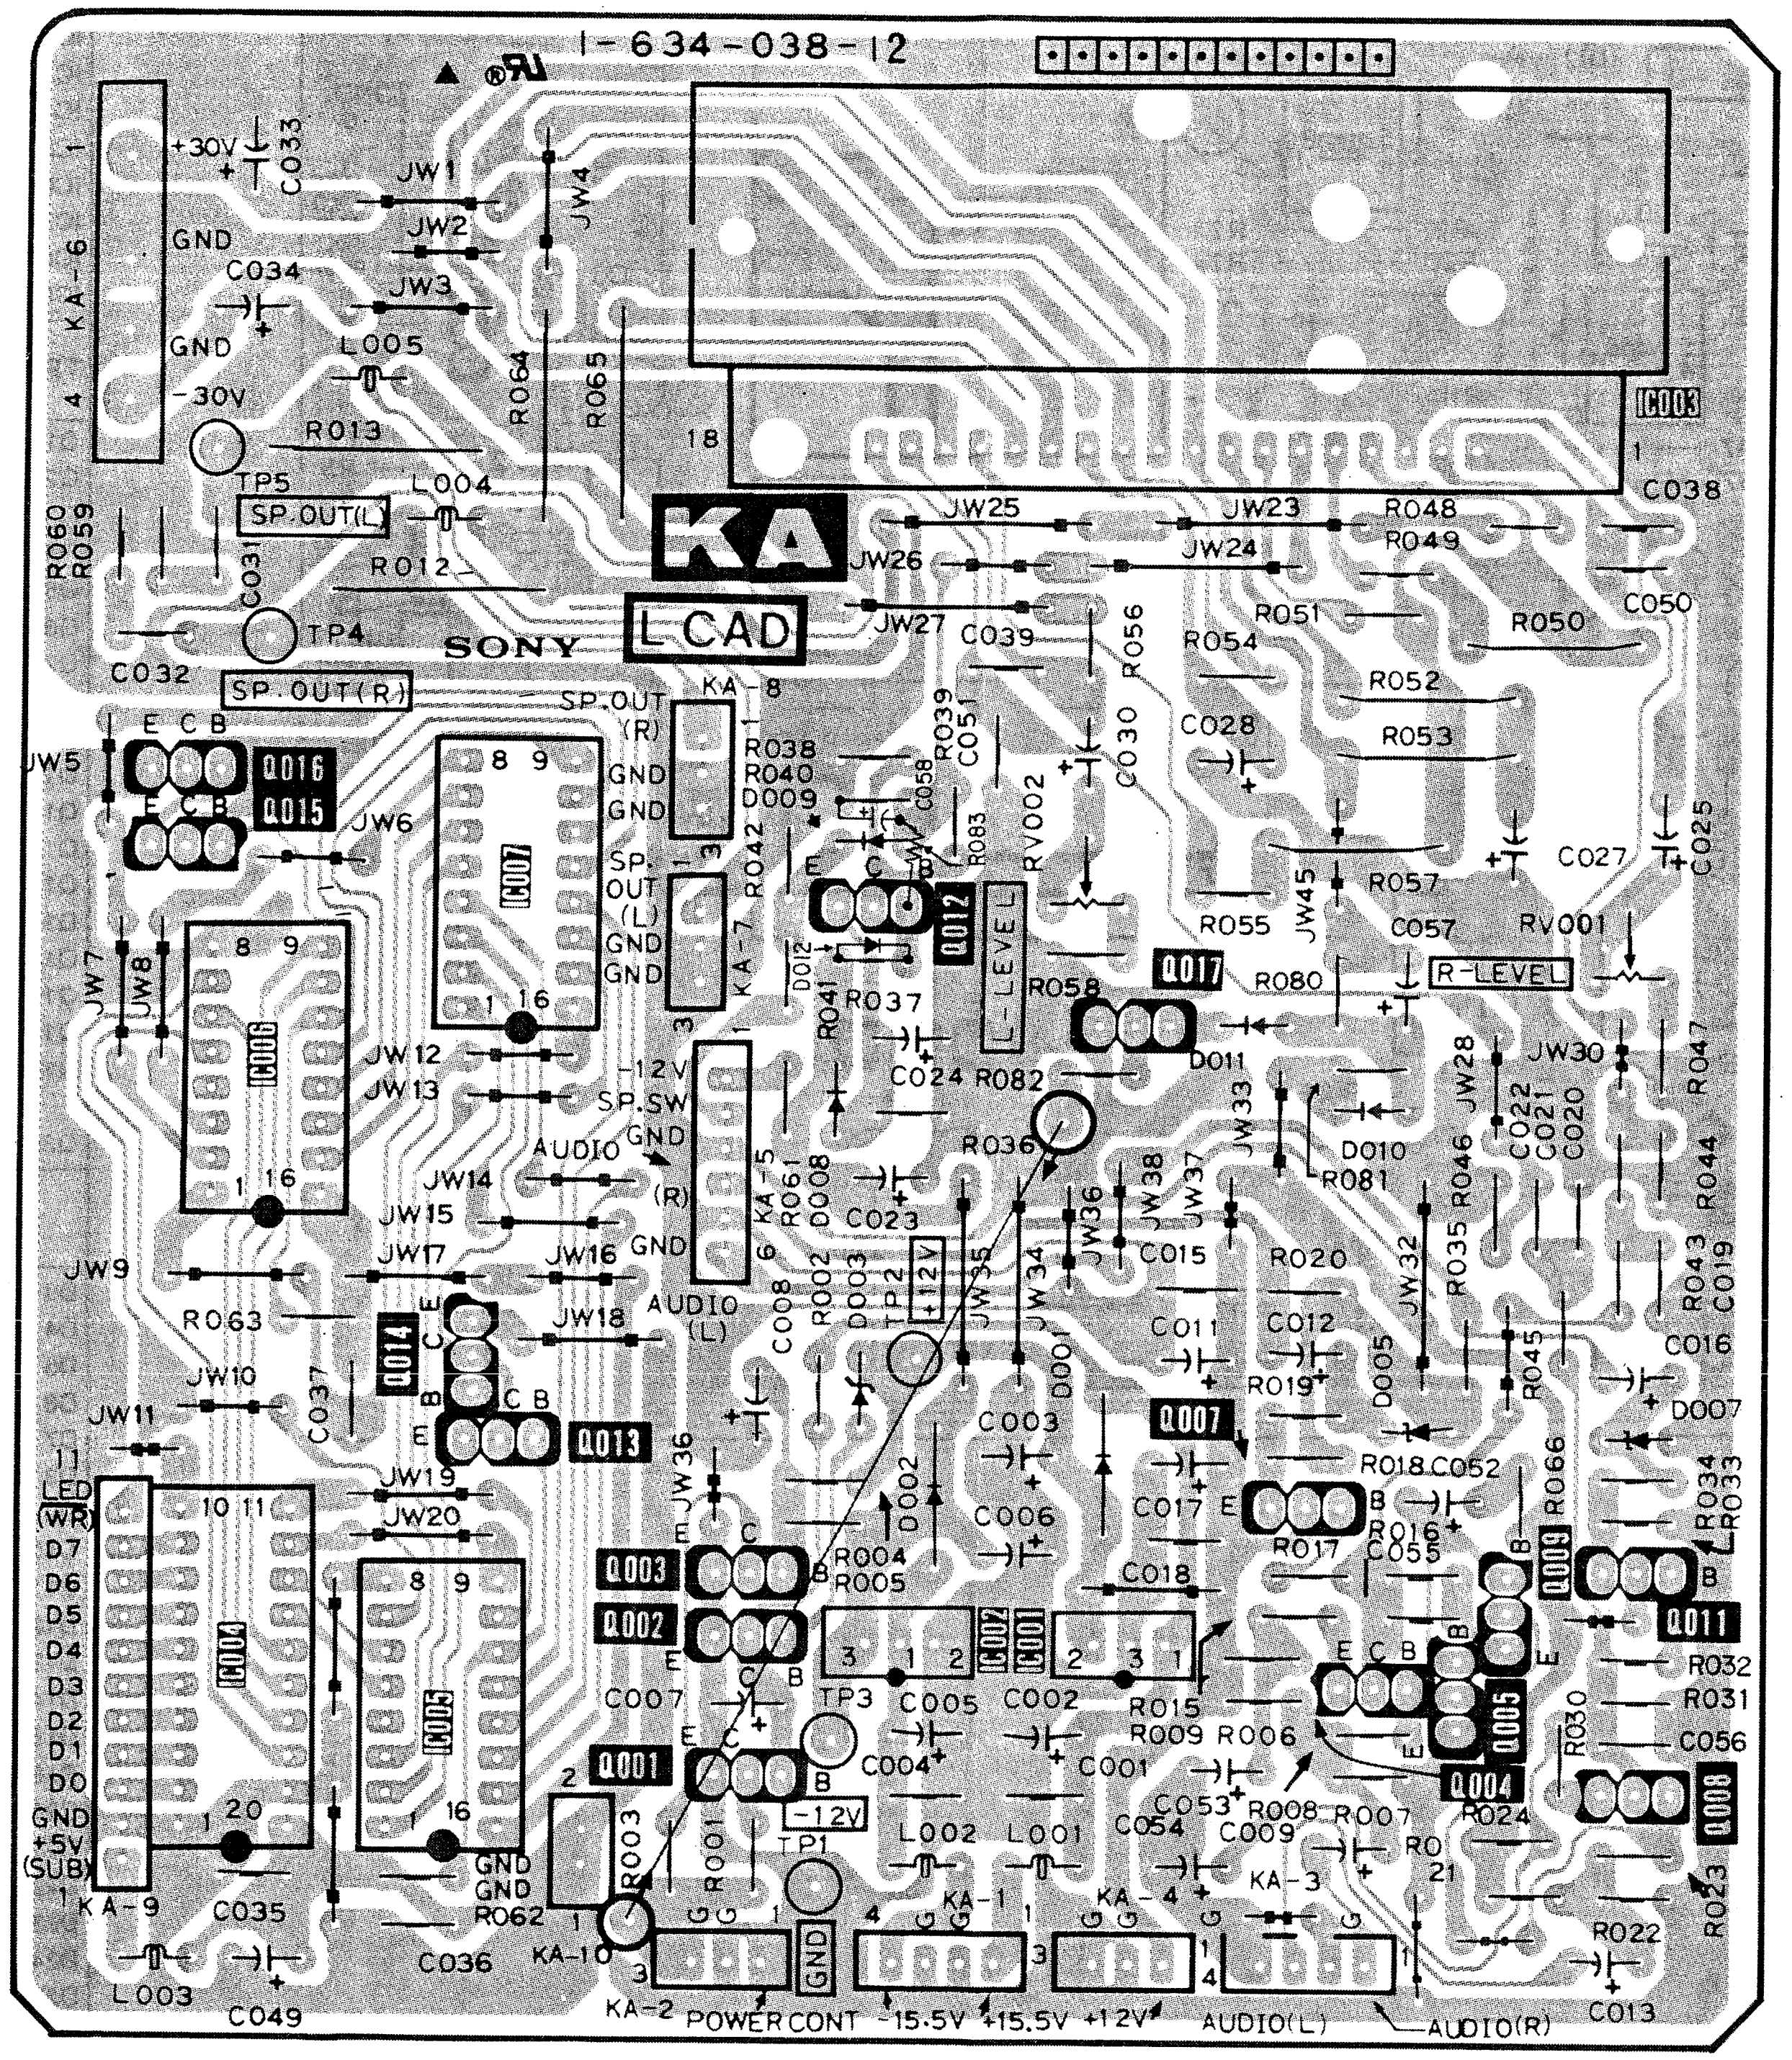
1-634-038-12
KA
SONY
L CAD
KA-6
+30V
GND
GND
-30V
C033
C034
JW1
JW2
JW3
JW4
L005
L004
R013
R012
R064
R065
IC003
TP5
SP.OUT(L)
TP4
SP.OUT(R)
C031
C032
R060
R059
JW25
JW23
JW24
JW26
JW27
R048
R049
C038
C050
R051
R050
R054
C039
R056
R052
R053
KA-8
SP.OUT (R)
GND
GND
SP.OUT (L)
GND
GND
KA-7
Q016
Q015
JW5
JW6
IC007
IC006
R038
R040
D009
R039
C051
C058
R083
RV002
C030
C028
C027
C025
R042
Q012
L-LEVEL
R057
JW45
R055
C057
RV001
R-LEVEL
Q017
R058
R080
R041
R037
D012
D011
C024
R082
JW28
JW30
R047
JW7
JW8
JW12
JW13
-12V
SP.SW
GND
AUDIO
(R)
GND
AUDIO (L)
KA-5
R061
D008
R036
C023
JW38
JW37
JW36
JW33
D010
R081
R046
C022
C021
C020
R044
JW14
JW15
JW17
JW16
JW9
R063
JW18
Q014
Q013
C015
R020
JW32
R035
R043
C019
JW10
C037
JW11
C008
R002
D003
TP2
+12V
JW35
JW34
D001
C011
C012
R019
D005
R045
C016
D007
JW36
C003
Q007
R018
C052
R066
R034
R033
LED (WR)
D7
D6
D5
D4
D3
D2
D1
D0
GND
+5V (SUB)
IC004
IC005
JW19
JW20
Q003
Q002
Q001
D002
R004
R005
C006
C017
C018
R017
R016
C055
Q009
Q011
IC002
IC001
Q006
Q005
R032
R031
C056
C007
TP3
C005
C002
R015
R009
R006
R030
C004
C001
C053
R008
R007
Q004
R024
Q008
-12V
TP1
L002
L001
C054
C009
R021
R003
R001
KA-1
KA-4
KA-3
R022
R023
KA-9
L003
C035
C036
C049
R062
KA-10
KA-2
POWER CONT
-15.5V
+15.5V
+12V
AUDIO(L)
AUDIO(R)
C013

KA [AUDIO] **N** [RECEIVER]

– KA BOARD –

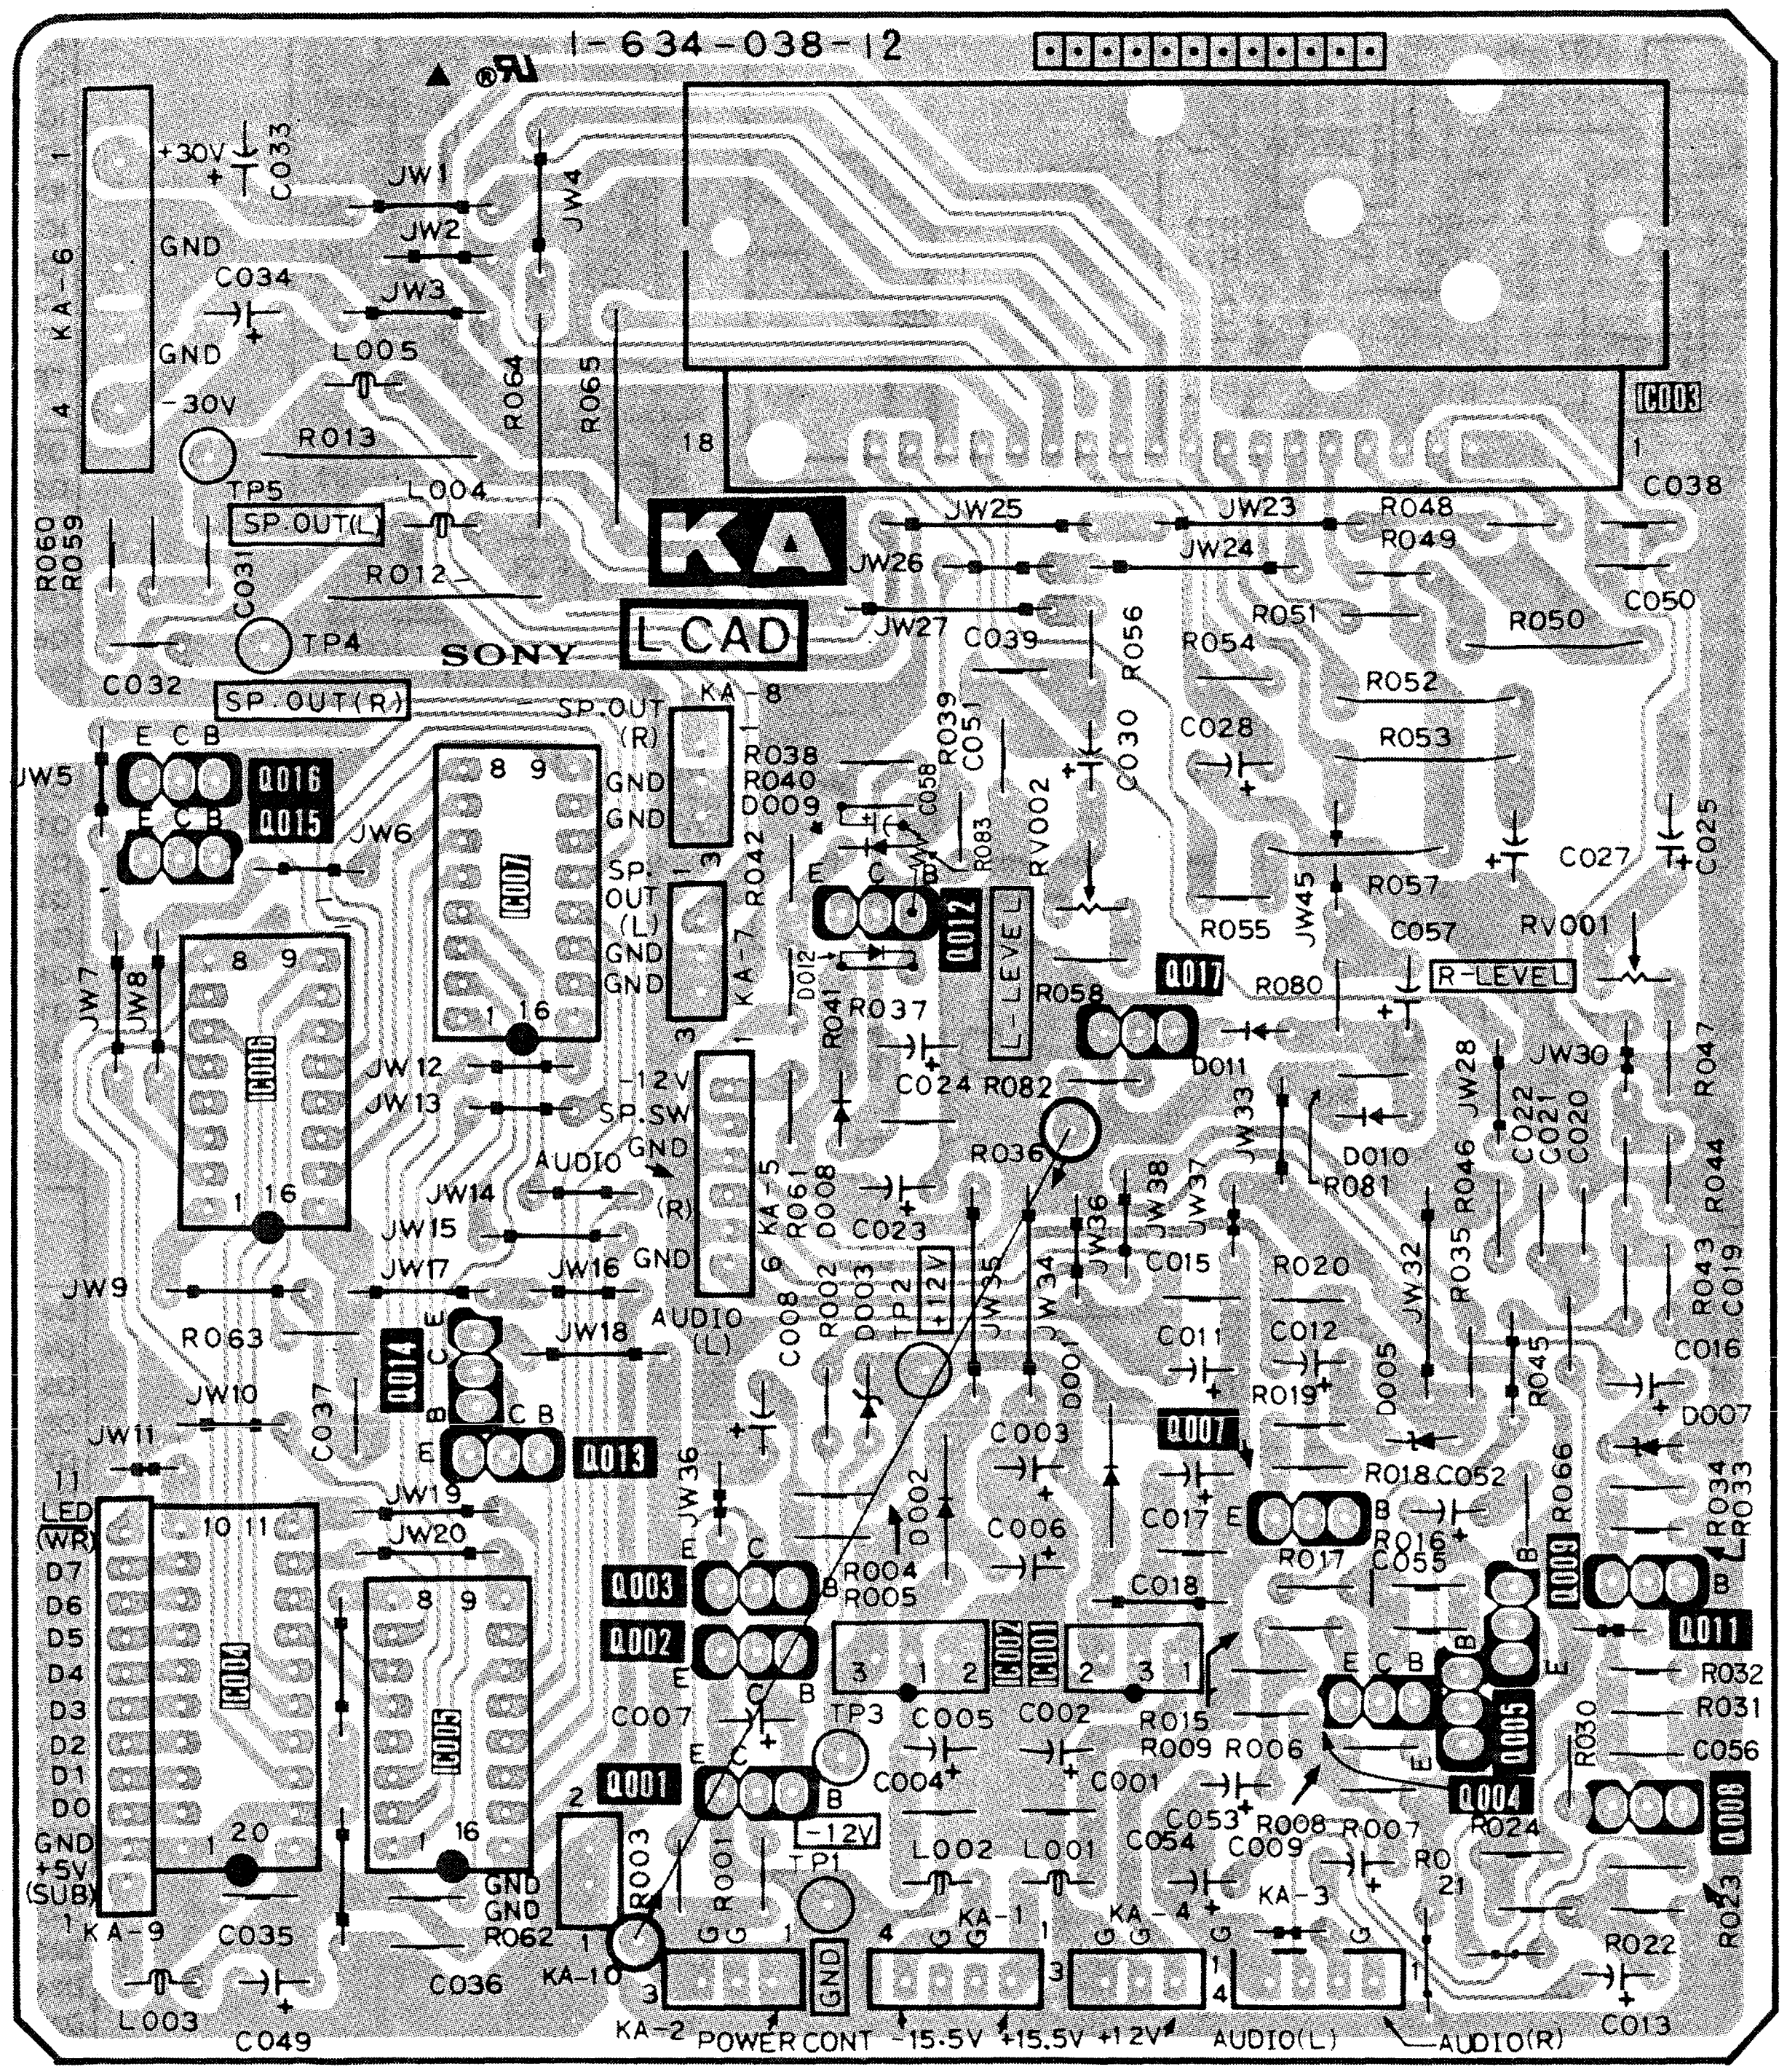
1-634-038-12
KA
LCAD
SONY
IC003
IC004
IC005
IC006
IC007
IC001
IC002
Q001
Q002
Q003
Q004
Q005
Q007
Q008
Q009
Q011
Q012
Q013
Q014
Q015
Q016
Q017
KA-1
KA-2
KA-3
KA-4
KA-5
KA-6
KA-7
KA-8
KA-9
KA-10
+30V
GND
-30V
TP1
TP3
TP4
TP5
SP-OUT(L)
SP-OUT(R)
L-LEVEL
R-LEVEL
RV001
RV002
+12V
-12V
LED (WR)
D7
D6
D5
D4
D3
D2
D1
D0
GND
+5V (SUB)
POWER CONT
-15.5V
+15.5V
+12V
AUDIO(L)
AUDIO(R)

KB [PROTECT]

– KB BOARD –

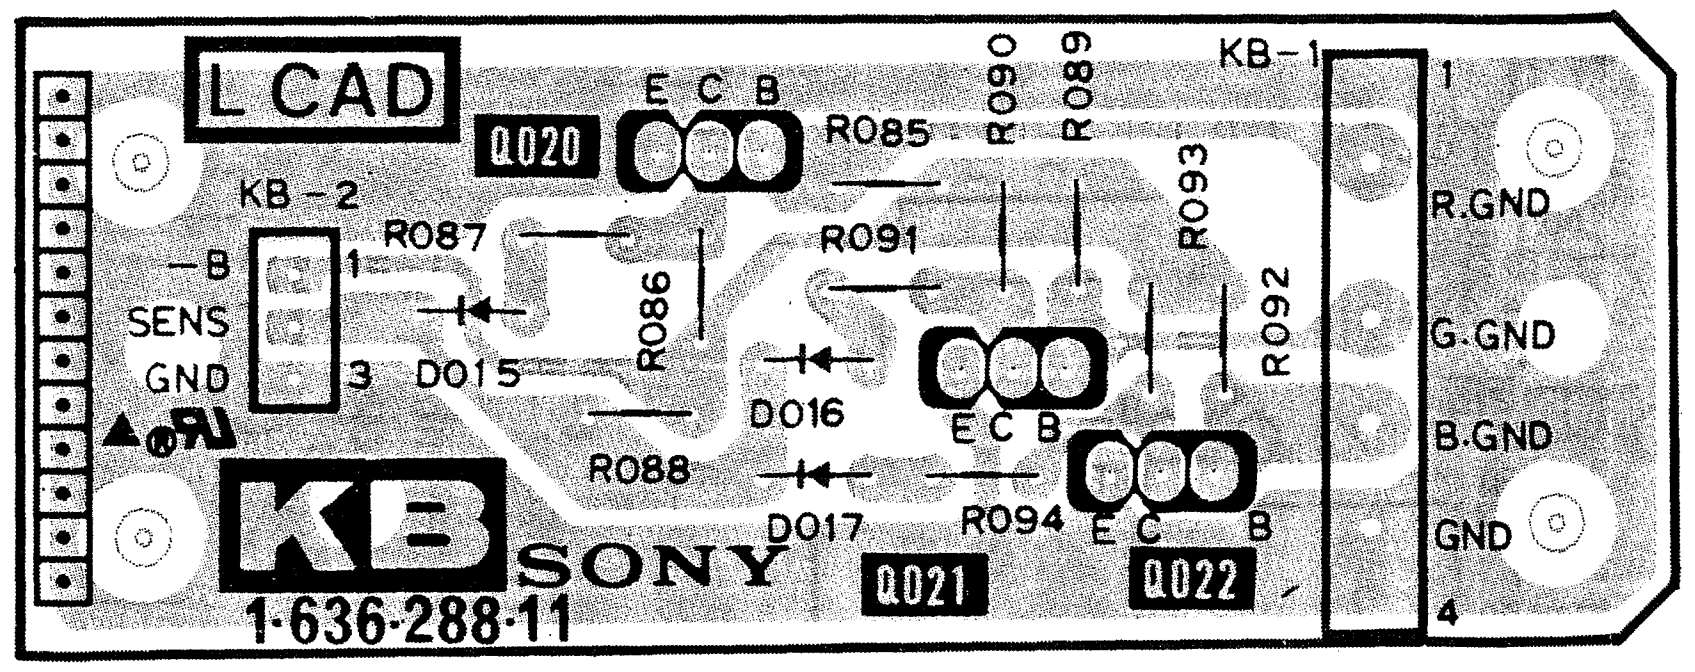
LCAD
KB
SONY
1-636-288-11
KB-1
KB-2
-B
SENS
GND
Q020
Q021
Q022
R085
R086
R087
R088
R089
R090
R091
R092
R093
R094
D015
D016
D017
E C B
R.GND
G.GND
B.GND
GND

– N BOARD –

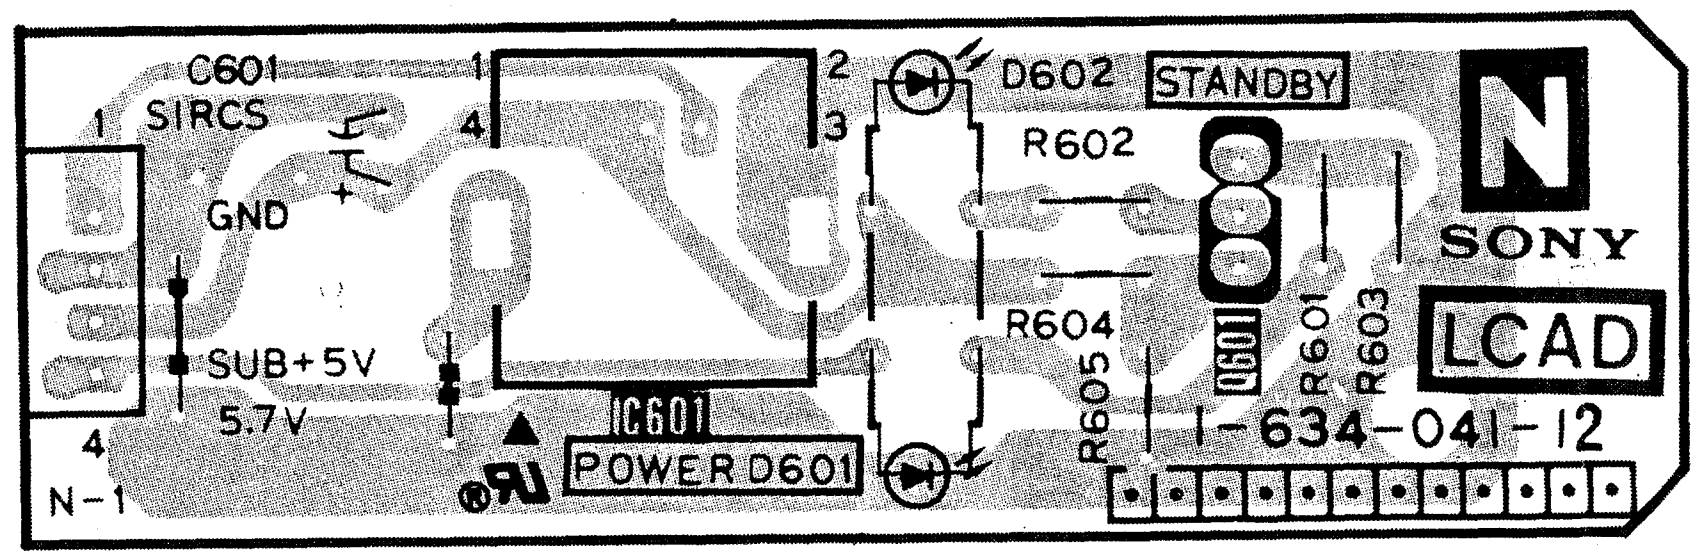
N
SONY
LCAD
1-634-041-12
N-1
C601
SIRCS
GND
SUB+5V
5.7V
IC601
POWER D601
D602
STANDBY
Q601
R601
R602
R603
R604
R605

PA [HIGH VOLTAGE REG.]

PB [FBT]

- PA BOARD -

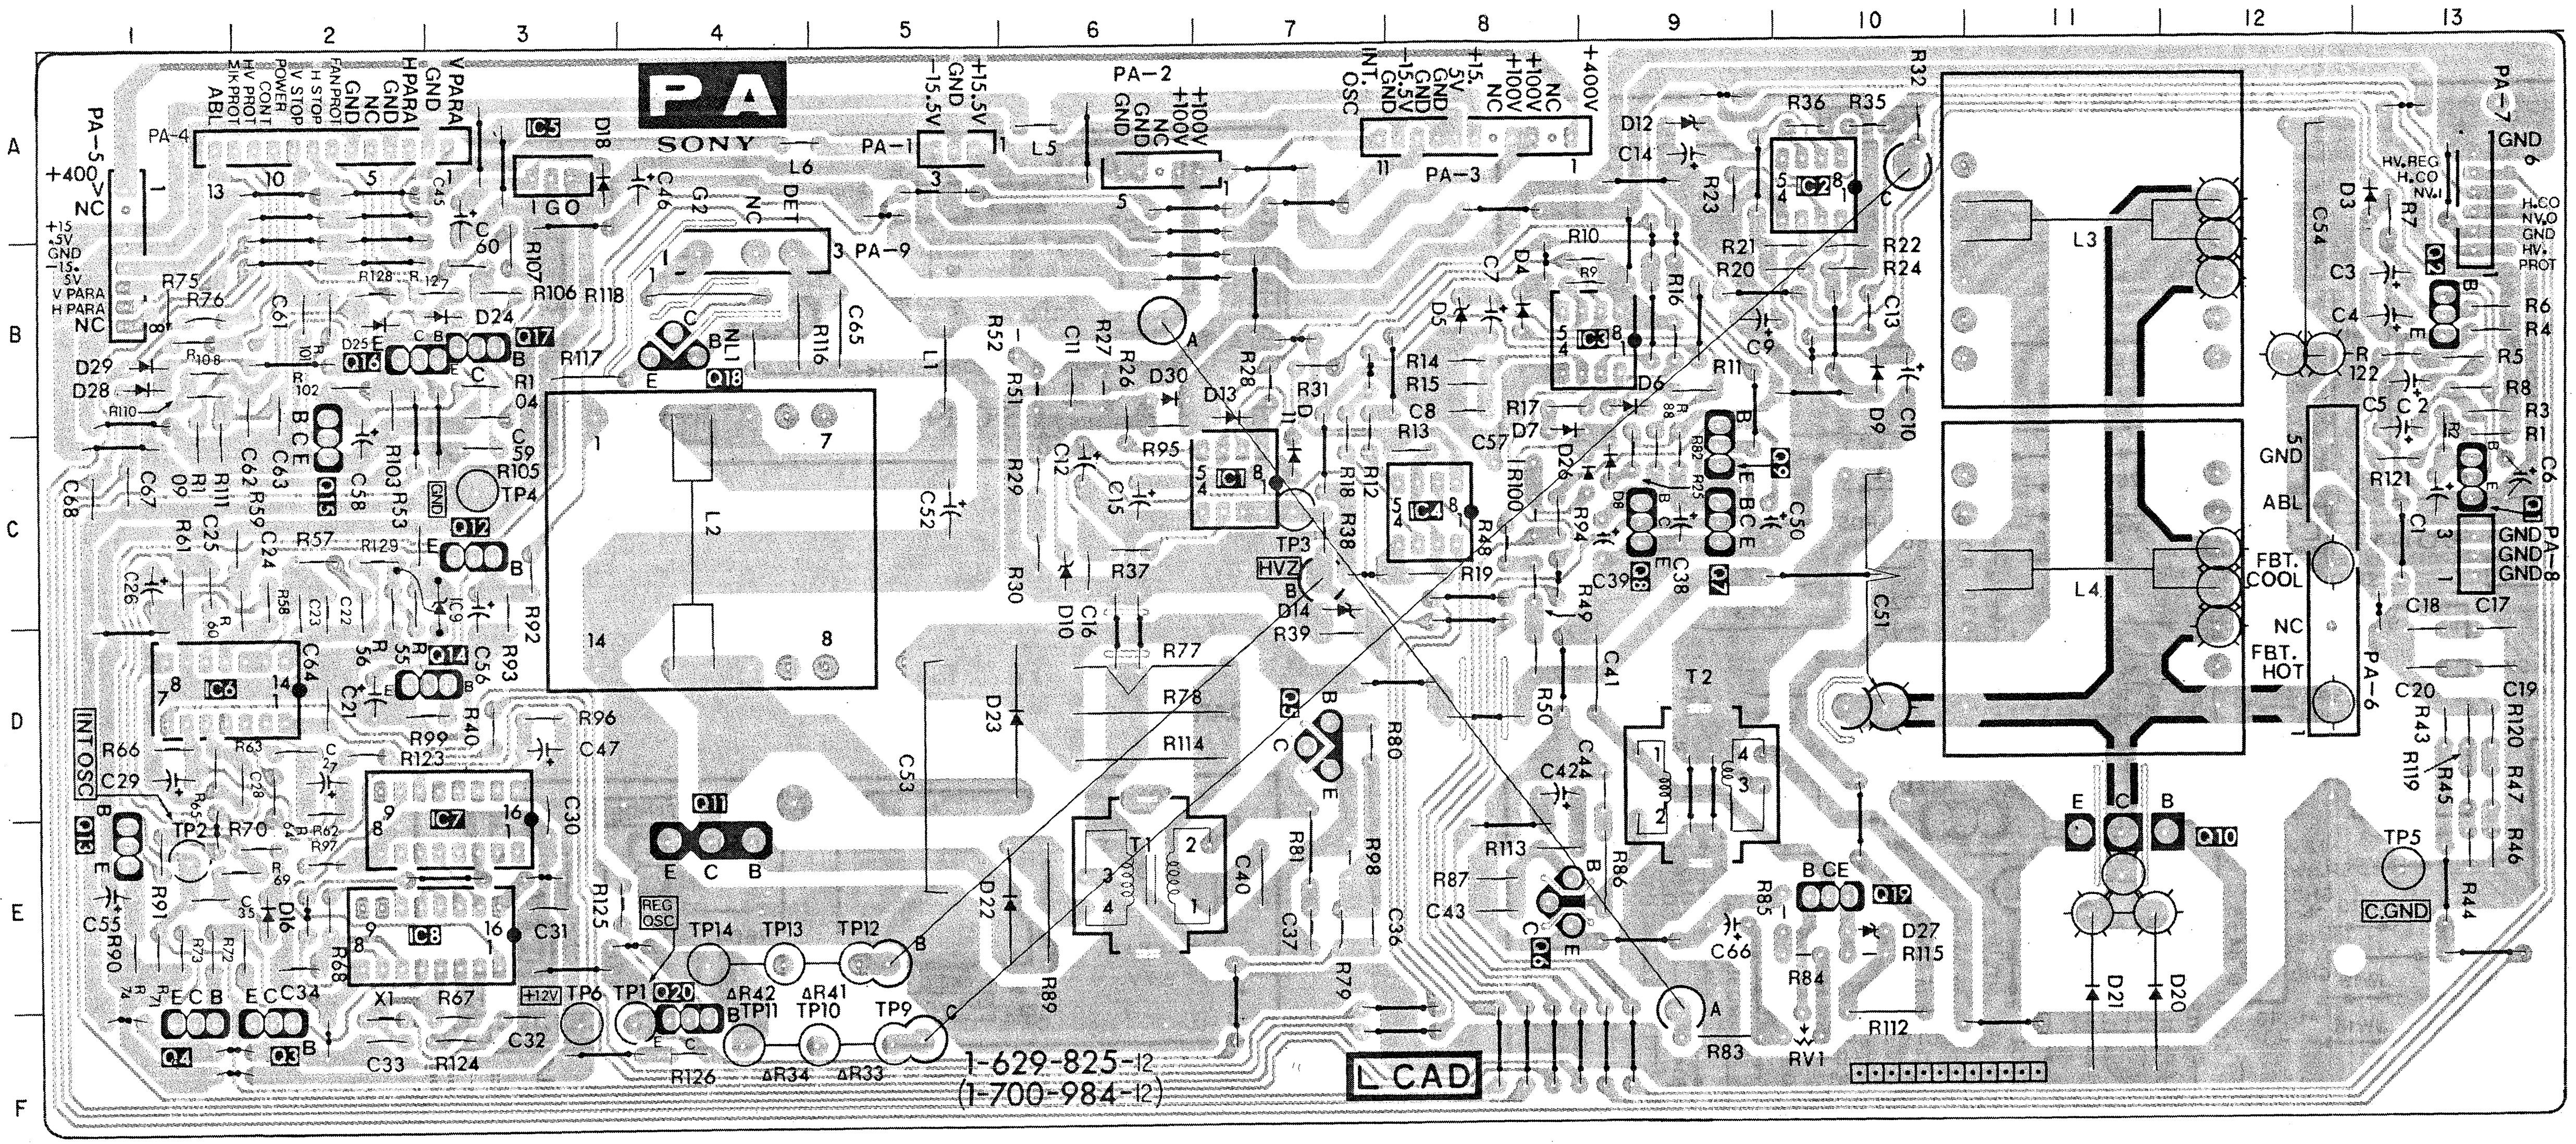
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
PA
SONY
PA-1
PA-2
PA-3
PA-4
PA-5
PA-6
PA-7
PA-8
PA-9
IC1
IC2
IC3
IC4
IC5
IC6
IC7
IC8
IC9
L1
L2
L3
L4
L5
L6
T1
T2
HVZ
INT OSC
REG OSC
C.GND
FBT. COOL
FBT. HOT
ABL
GND
NC
+400V
+12V
TP1
TP2
TP3
TP4
TP5
TP6
TP9
TP10
TP11
TP12
TP13
TP14
RV1
X1
1-629-825-12
(1-700-984-12)
CAD

- PB BOARD -

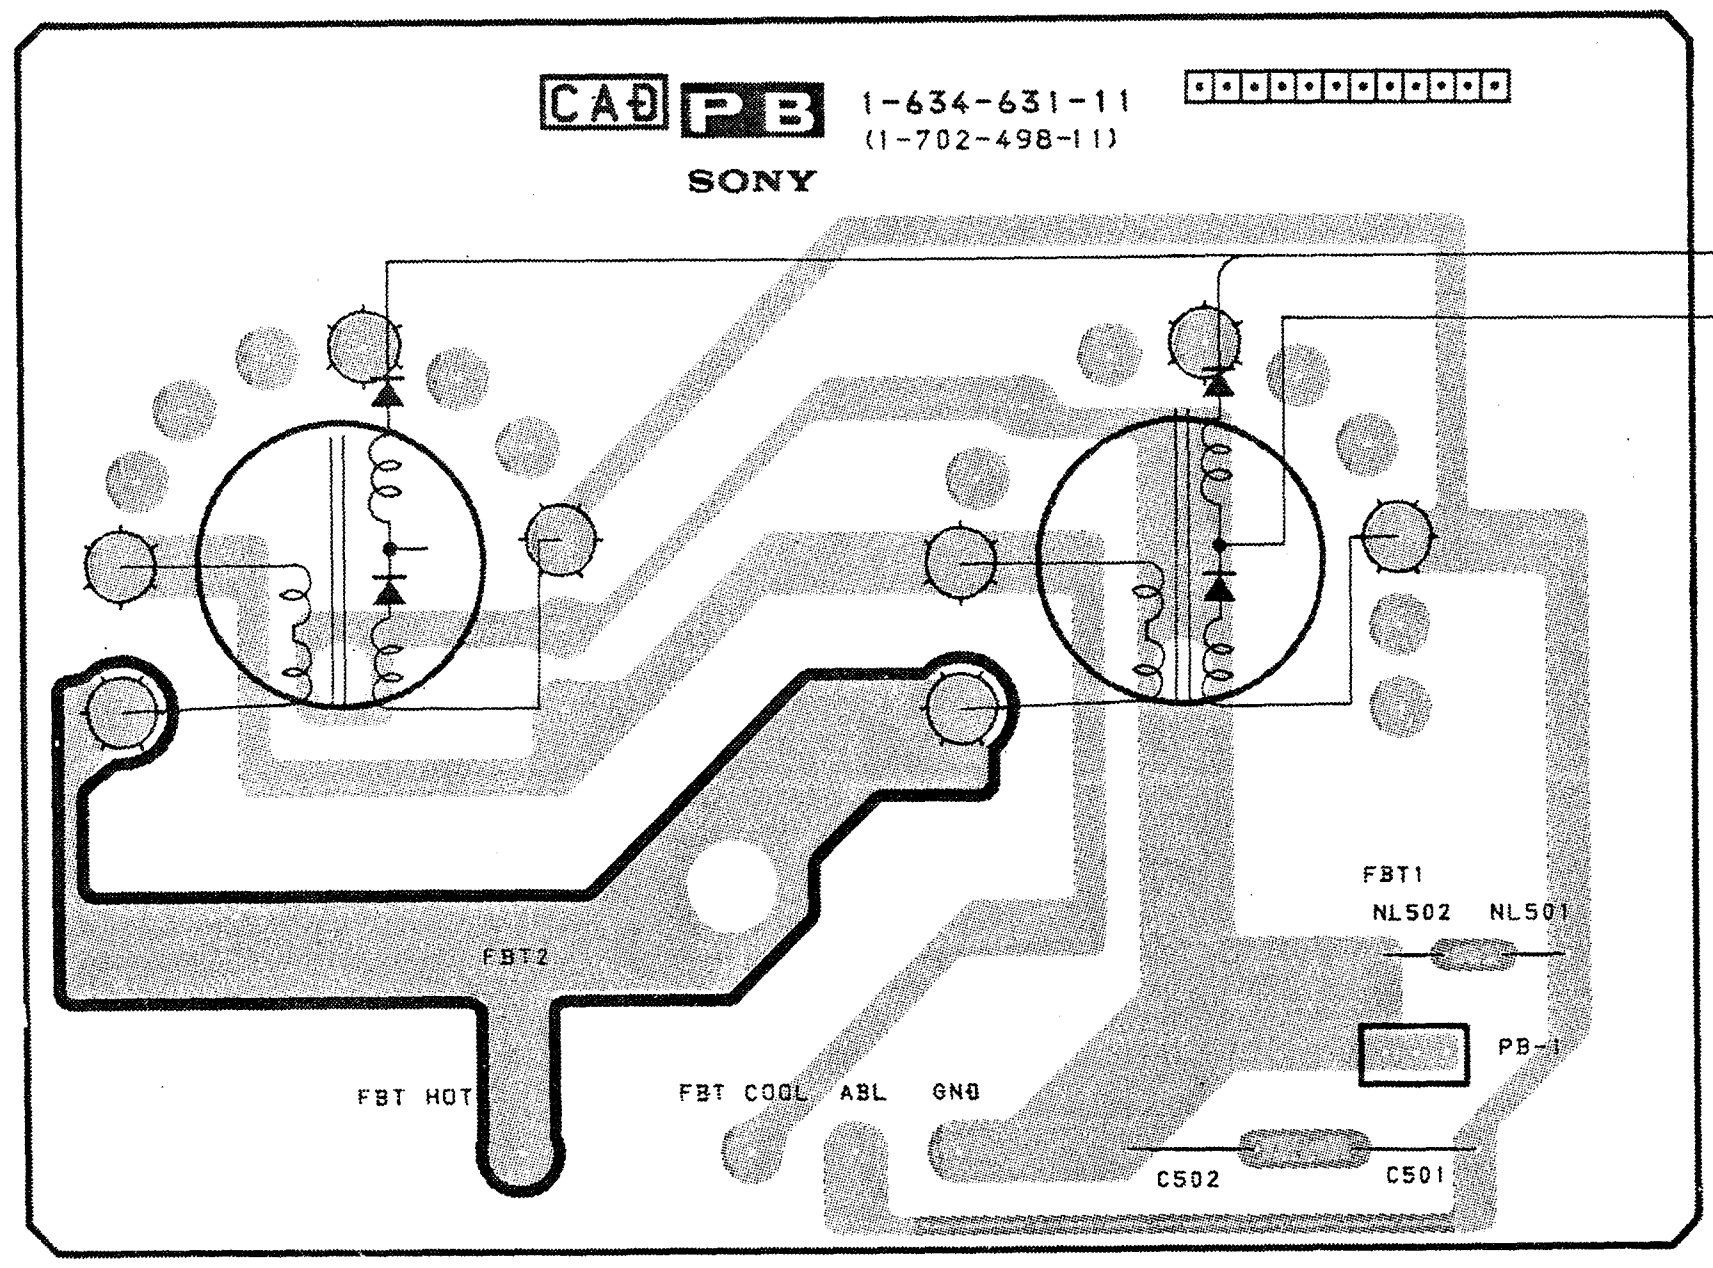
CAD PB 1-634-631-11
(1-702-498-11)
SONY
TO HV BLOCK
TO FOCUS PACK
FBT1
NL502
NL501
FBT2
PB-1
FBT HOT
FBT COOL
ABL
GND
C502
C501

PA BOARD

IC	
IC1	C - 7
IC2	A - 10
IC3	B - 9
IC4	C - 8
IC5	A - 3
IC6	D - 1
IC7	D - 3
IC8	E - 3
IC9	C - 3
TRANSISTOR	
Q1	C - 13
Q2	B - 13
Q3	F - 2
Q4	F - 1
Q5	D - 7
Q6	E - 8
Q7	C - 9
Q8	C - 9
Q9	C - 9
Q10	E - 11
Q11	E - 4
Q12	C - 3
Q13	E - 1
Q14	D - 3
Q15	C - 2
Q16	B - 2
Q17	B - 3
Q18	B - 4
Q20	F - 4
DIODE	
D3	A - 13
D4	B - 8
D5	B - 8
D6	B - 9
D7	C - 8
D8	C - 9
D9	B - 10
D10	C - 6
D11	C - 7
D12	A - 9
D13	B - 7
D14	C - 7
D16	E - 2
D18	A - 3
D20	E - 11
D21	E - 11
D22	E - 6
D23	D - 6
D24	B - 3
D25	B - 2
D26	C - 9
D28	B - 1
D29	B - 1

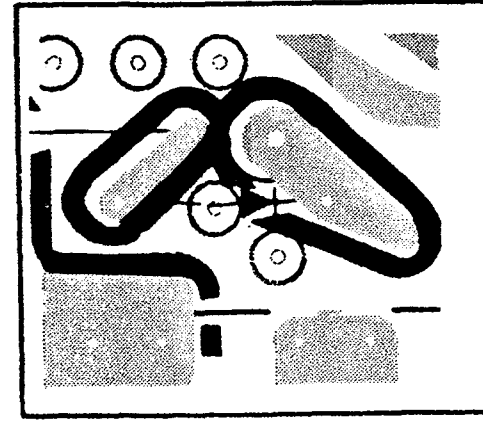

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

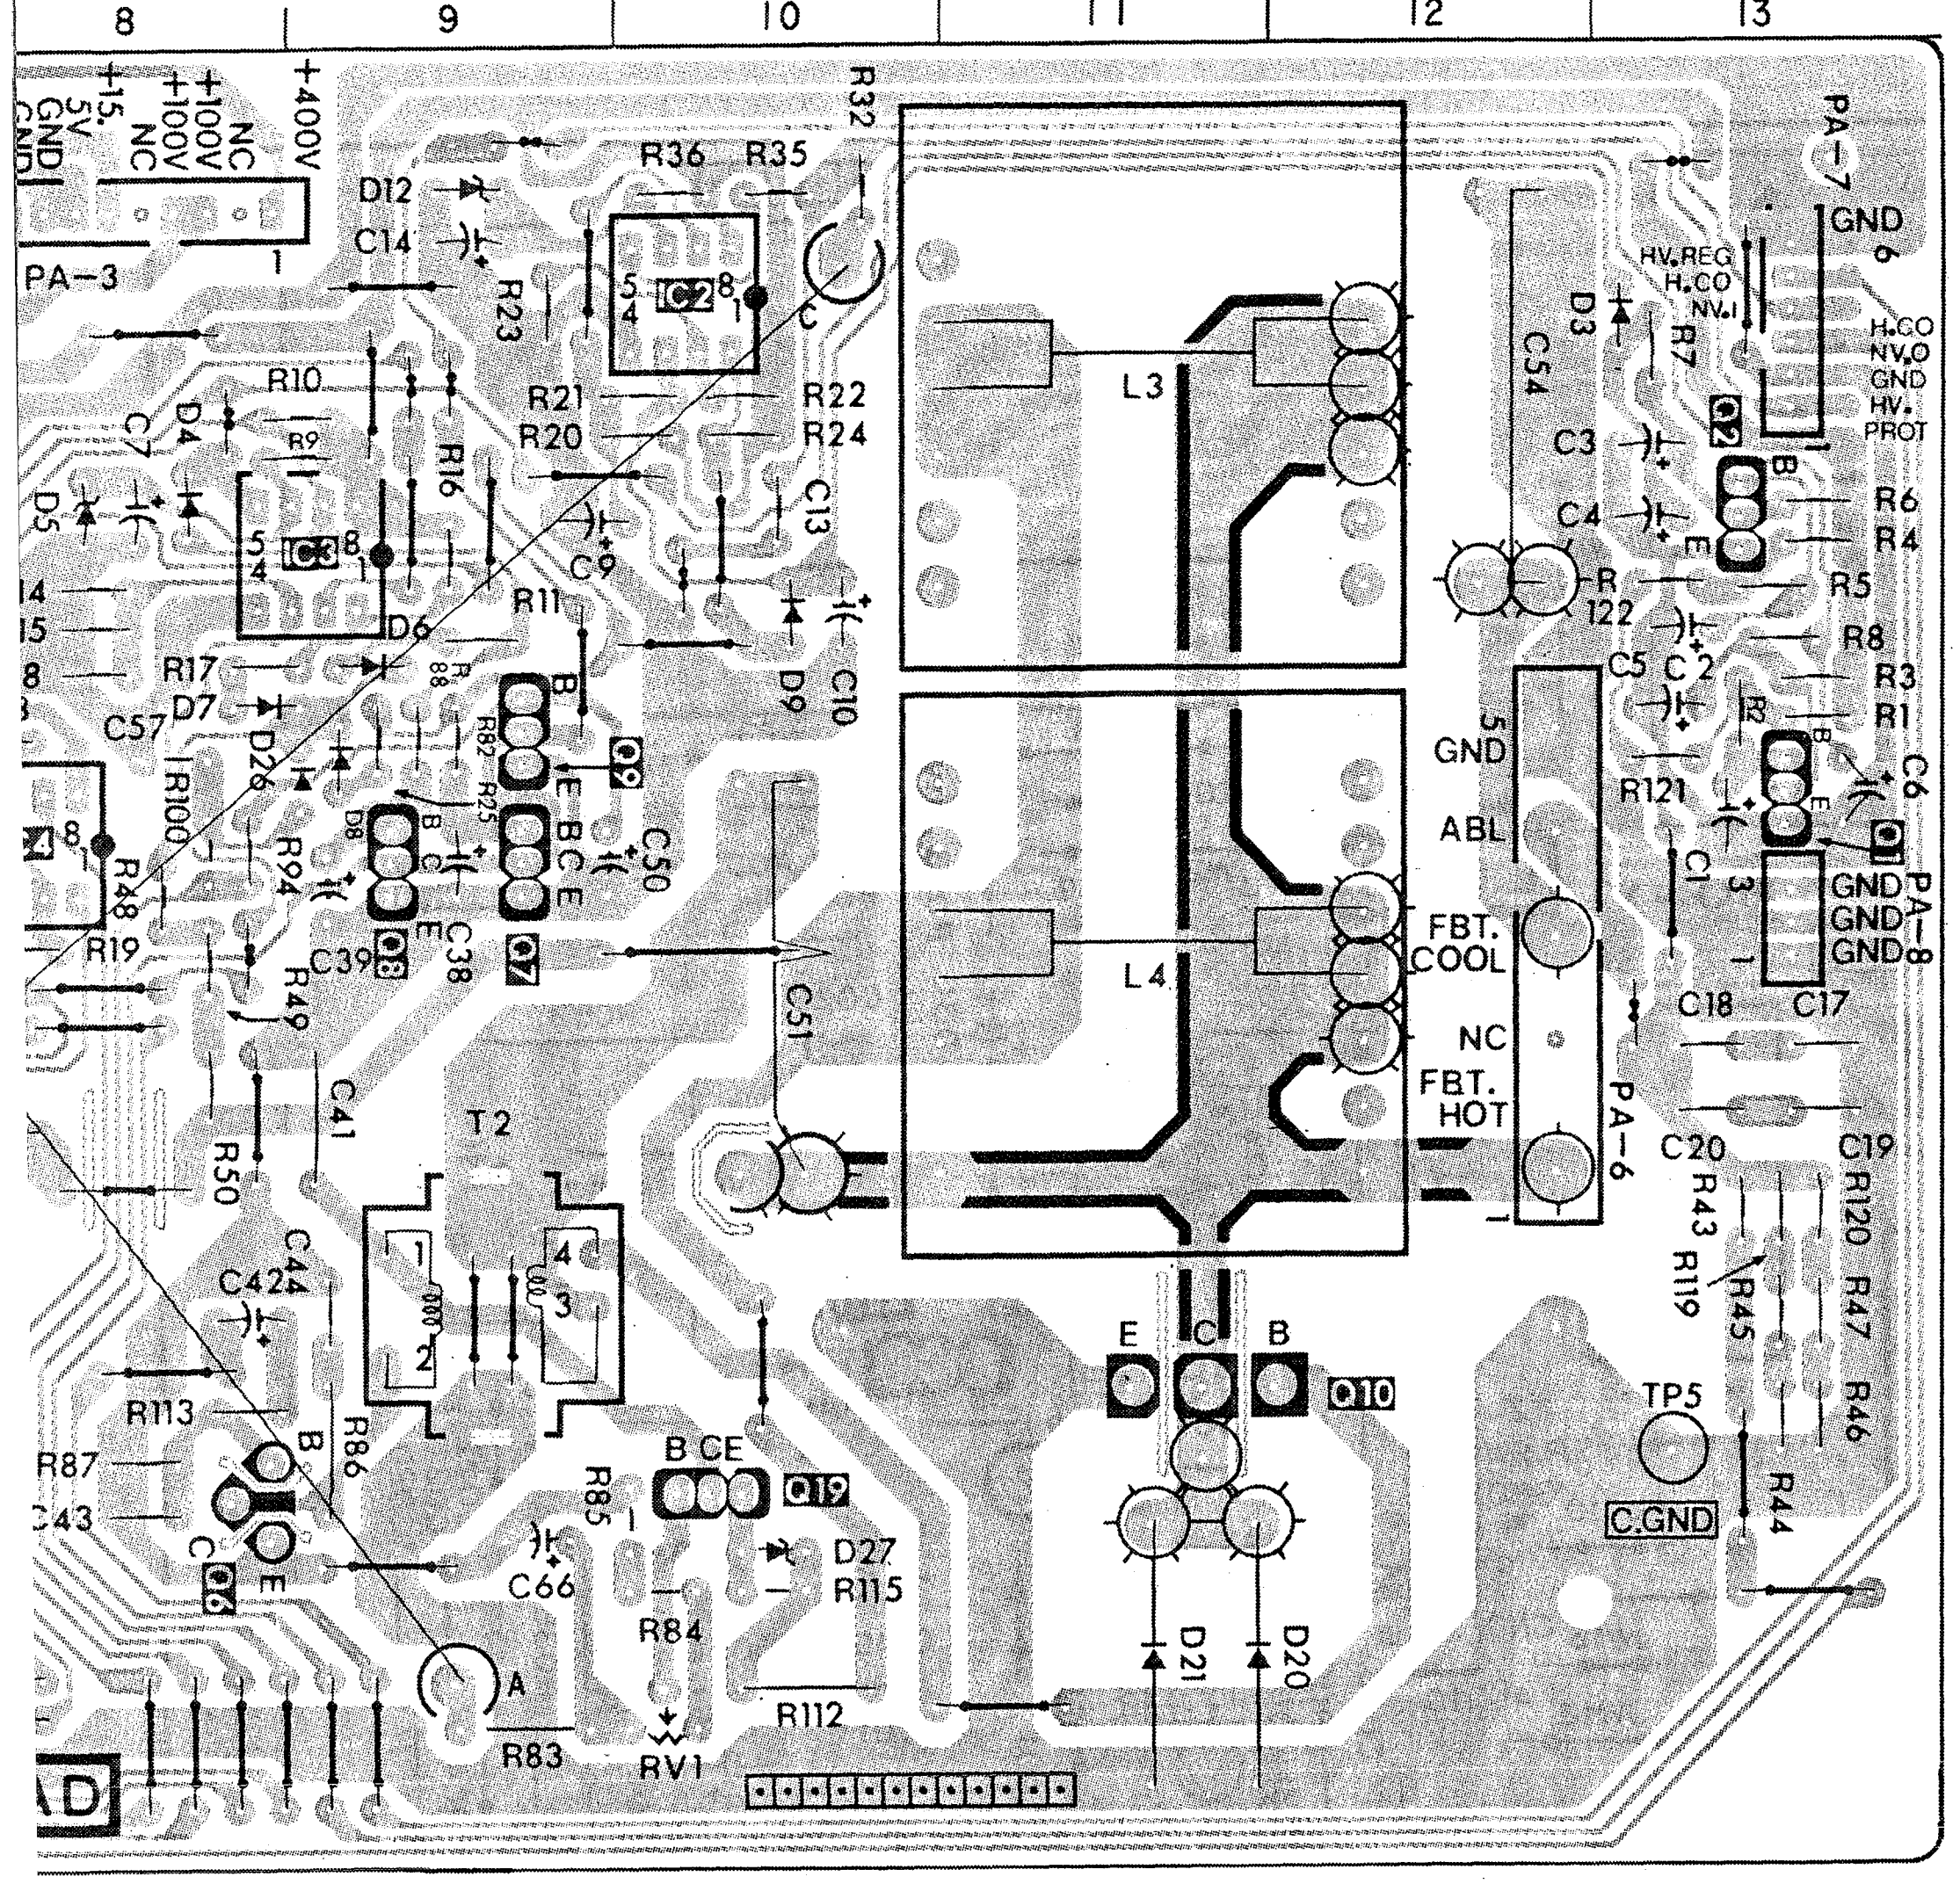
8
9
10
11
12
13
+400V
NC
+100V
+100V
NC
+15.
5V
GND
PA-3
PA-7
GND
PA-6
PA-8
D12
C14
R36
R35
R32
IC2
R23
R22
R24
R21
R20
R10
R9
C7
D4
D5
IC3
R16
C9
C13
R11
D6
D9
C10
R17
D7
C57
D26
R100
R48
R19
R94
C39
C50
C38
Q7
Q8
Q9
R49
C41
R50
T2
C42
C44
R113
R87
R86
C43
Q6
B CE
Q19
R85
C66
D27
R115
R84
R83
RV1
R112
L3
L4
C51
E
C
B
Q10
D21
D20
C54
D3
HV.REG
H.CO
NV.I
R7
Q2
C3
C4
R122
C5
C2
R6
R4
R5
R8
R3
R1
C6
Q1
GND
ABL
R121
C1
FBT.
COOL
NC
FBT.
HOT
GND
C18
C17
C20
R43
R119
R45
C19
R120
R47
R46
TP5
R44
C.GND
H.CO
NV.O
GND
HV.
PROT

PA BOARD

IC	
IC1	C - 7
IC2	A - 10
IC3	B - 9
IC4	C - 8
IC5	A - 3
IC6	D - 1
IC7	D - 3
IC8	E - 3
IC9	C - 3
TRANSISTOR	
Q1	C - 13
Q2	B - 13
Q3	F - 2
Q4	F - 1
Q5	D - 7
Q6	E - 8
Q7	C - 9
Q8	C - 9
Q9	C - 9
Q10	E - 11
Q11	E - 4
Q12	C - 3
Q13	E - 1
Q14	D - 3
Q15	C - 2
Q16	B - 2
Q17	B - 3
Q18	B - 4
Q20	F - 4
DIODE	
D3	A - 13
D4	B - 8
D5	B - 8
D6	B - 9
D7	C - 8
D8	C - 9
D9	B - 10
D10	C - 6
D11	C - 7
D12	A - 9
D13	B - 7
D14	C - 7
D16	E - 2
D18	A - 3
D20	E - 11
D21	E - 11
D22	E - 6
D23	D - 6
D24	B - 3
D25	B - 2
D26	C - 9
D28	B - 1
D29	B - 1

K [AUDIO DYNAMIC FOCUS]

- K BOARD -

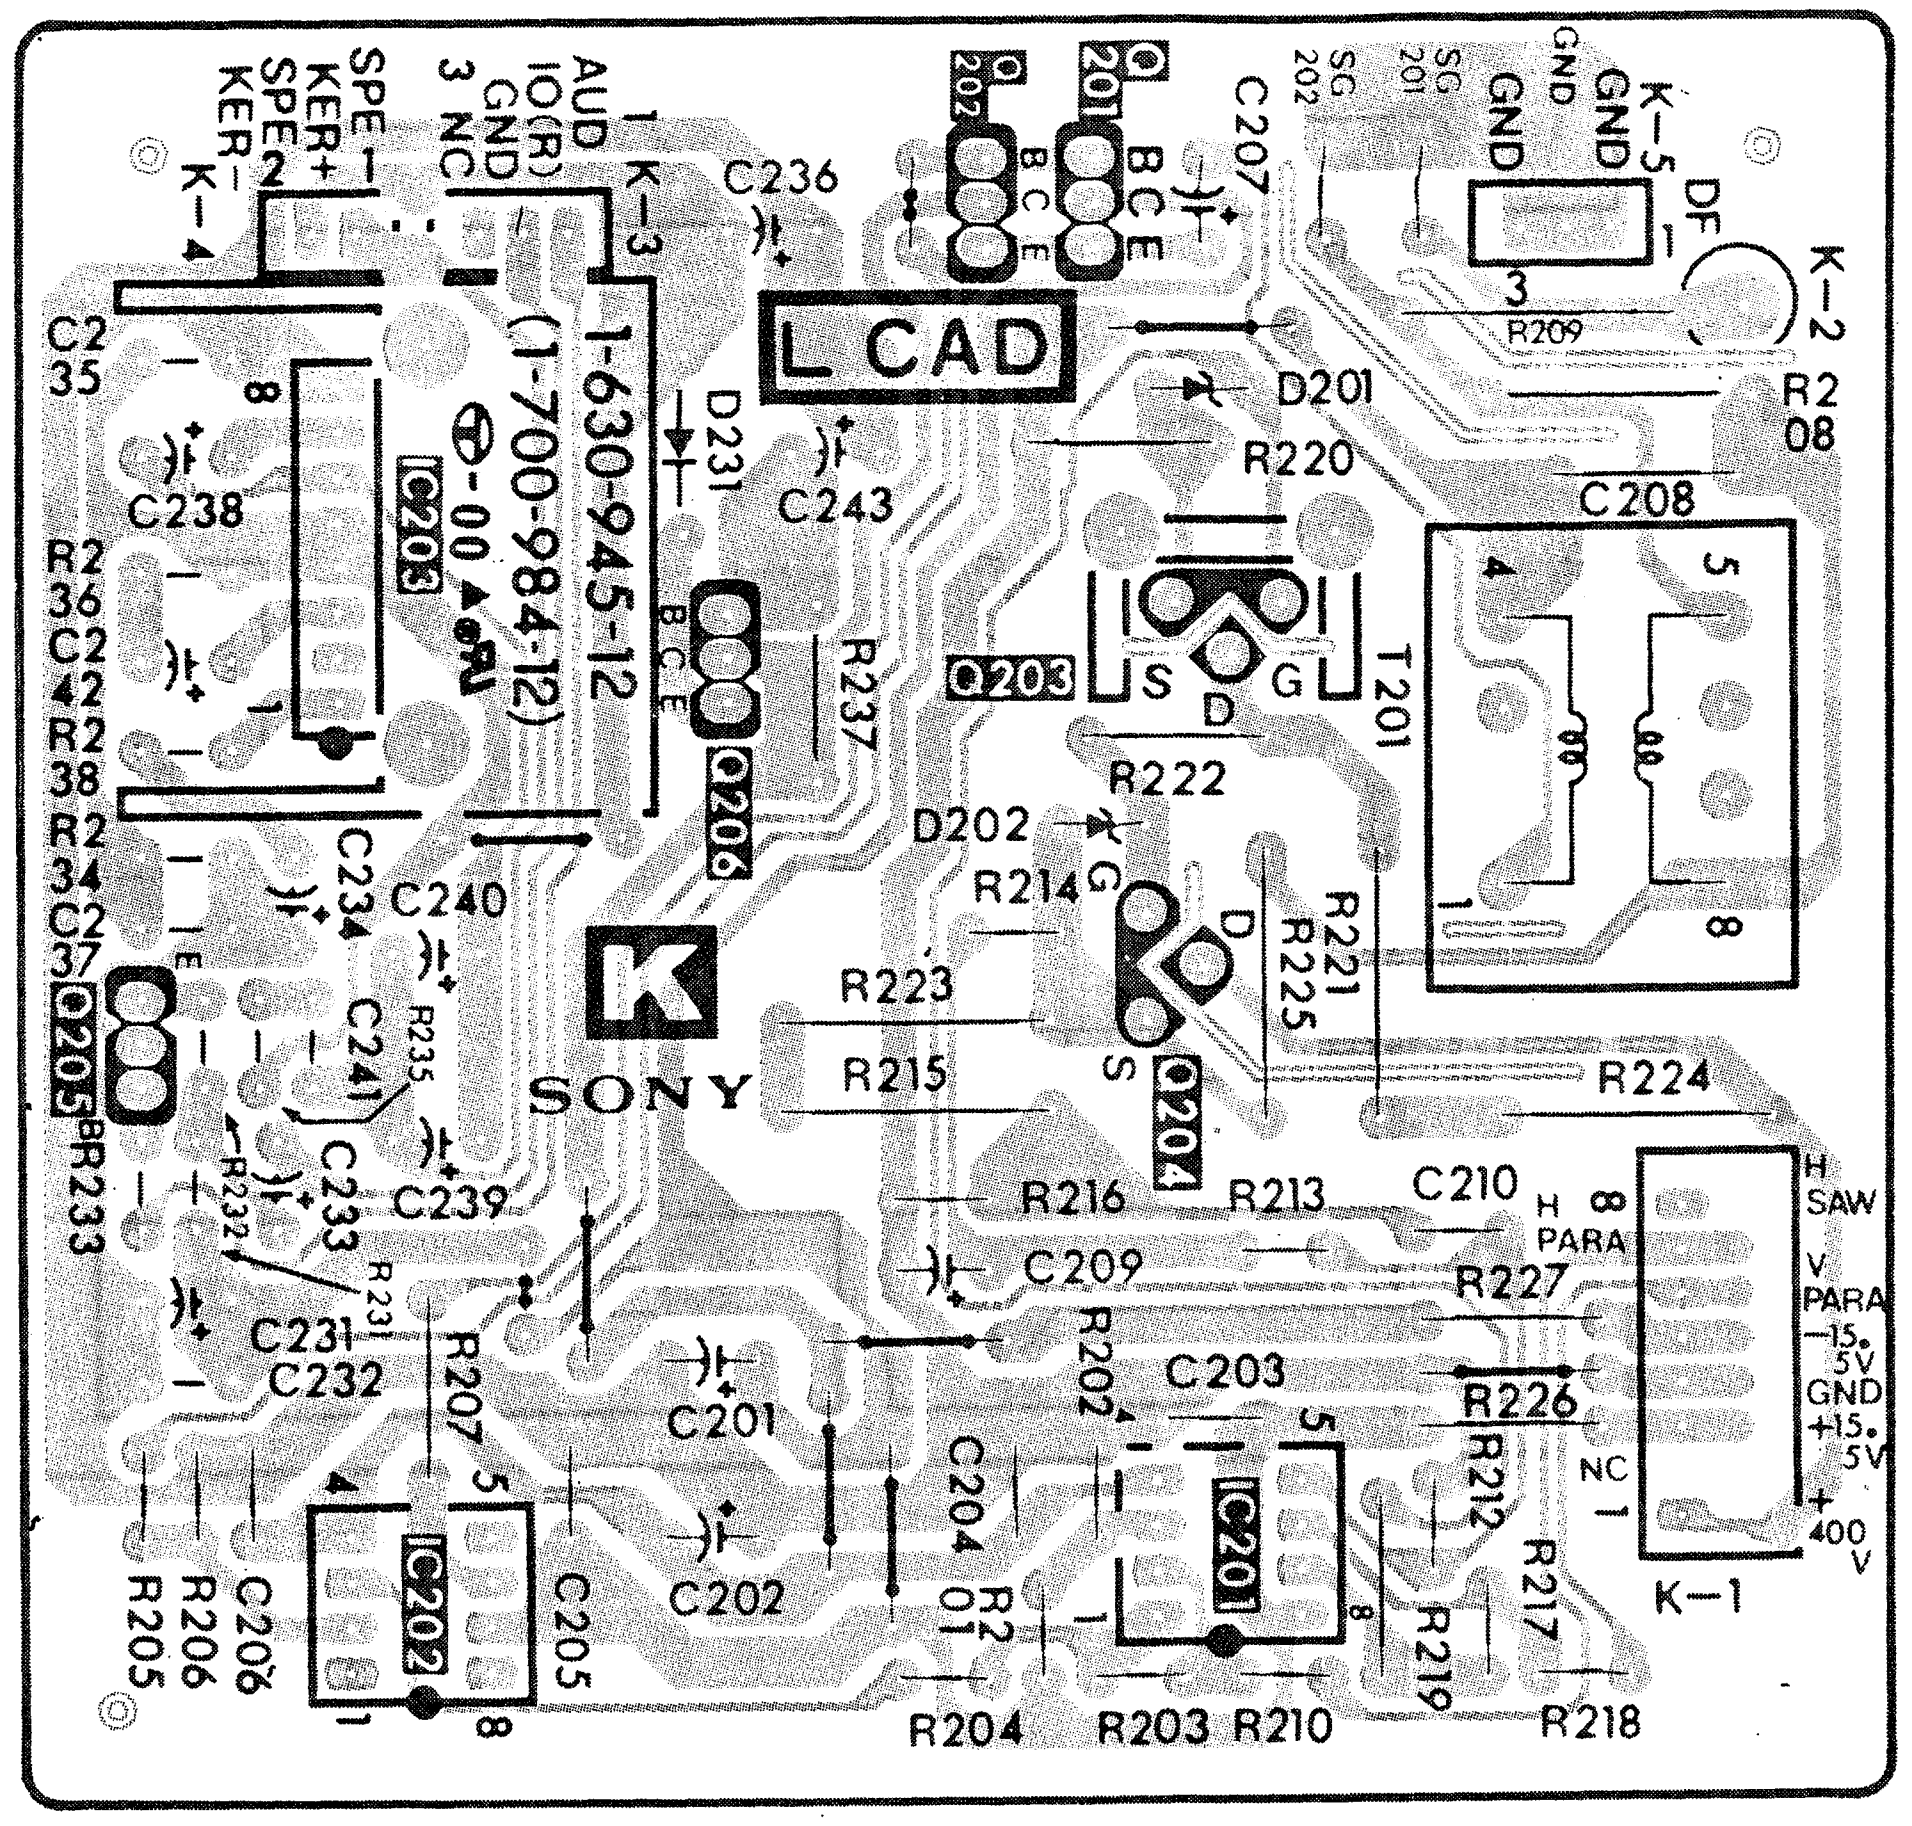
SPE-
KER+
SPE-
KER-
2
K-4
AUD
IO(R)
GND
3 NC
1
K-3
1-630-945-12
(1-700-984-12)
C236
Q
202
Q
201
B C E
C207
SG
202
SG
201
GND
GND
K-5
DF
K-2
R209
L CAD
C235
C238
D231
C243
D201
R220
R208
C208
R236
C242
R238
R234
C237
IC203
Q206
R237
Q203
S
G
D
T201
R222
D202
R214
C234
C240
R235
C241
K
SONY
Q205
R233
R223
R215
Q204
R221
R225
R224
C239
C233
R232
R231
C231
C232
R216
R213
C210
C209
R227
H
PARA
H
SAW
V
PARA
-15.
5V
GND
+15.
5V
+
400
V
NC
K-1
R207
R202
C201
C203
R226
R212
C204
R201
IC201
R217
R219
R218
C202
IC202
C205
C206
R206
R205
R204
R203
R210

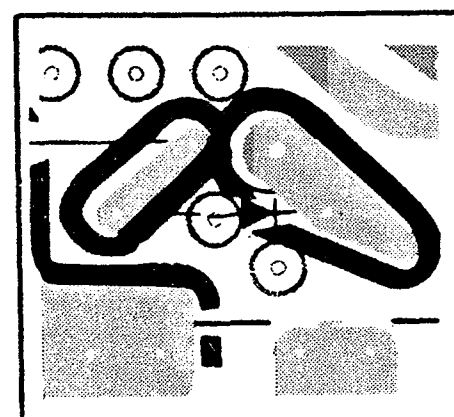

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

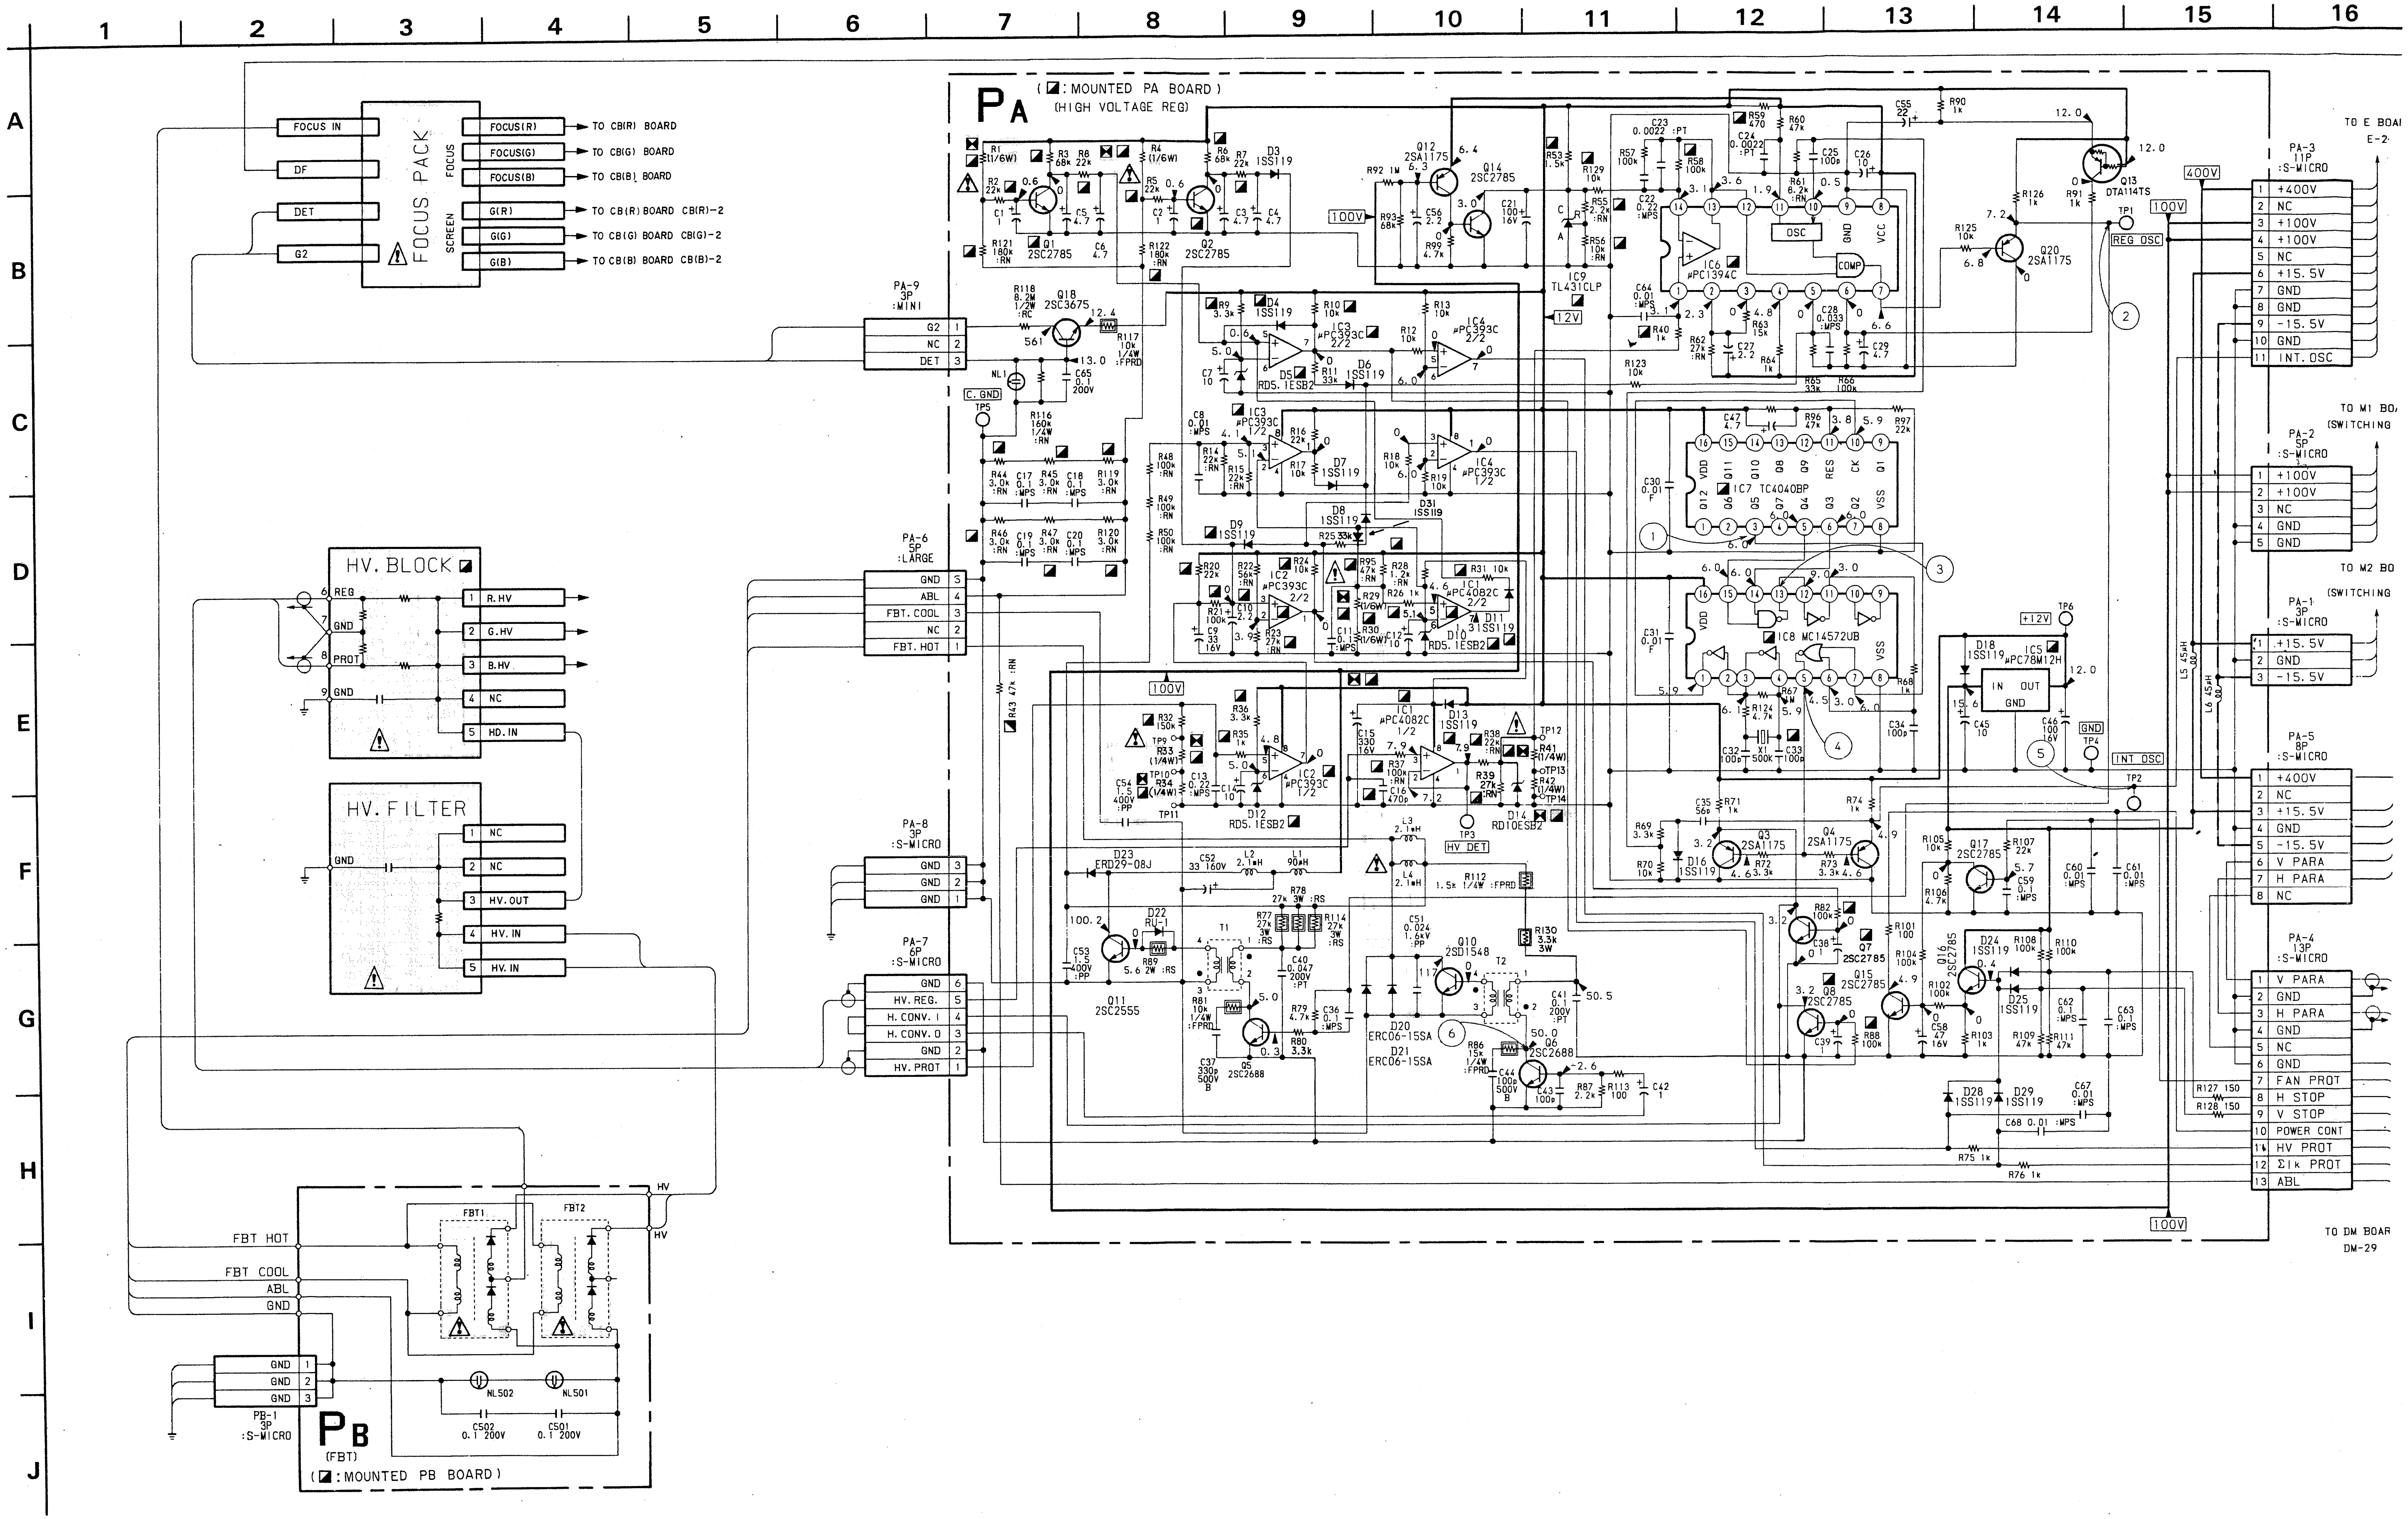
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
FOCUS IN
DF
DET
G2
FOCUS PACK
FOCUS
SCREEN
FOCUS(R)
FOCUS(G)
FOCUS(B)
G(R)
G(G)
G(B)
TO CB(R) BOARD
TO CB(G) BOARD
TO CB(B) BOARD
TO CB(R) BOARD CB(R)-2
TO CB(G) BOARD CB(G)-2
TO CB(B) BOARD CB(B)-2
PA
(◪ : MOUNTED PA BOARD)
(HIGH VOLTAGE REG)
PA-9 3P :MINI
G2
NC
DET
PA-6 5P :LARGE
GND
ABL
FBT. COOL
NC
FBT. HOT
PA-8 3P :S-MICRO
GND
PA-7 6P :S-MICRO
GND
HV. REG.
H. CONV. I
H. CONV. 0
GND
HV. PROT
HV. BLOCK ◪
REG
GND
PROT
GND
R. HV
G. HV
B. HV
NC
HD. IN
HV. FILTER
GND
NC
NC
HV. OUT
HV. IN
HV. IN
Q1 2SC2785
Q2 2SC2785
D3 1SS119
Q12 2SA1175
Q14 2SC2785
IC9 TL431CLP
IC6 μPC1394C
OSC
COMP
Q13 DTA114TS
Q20 2SA1175
TP1
REG OSC
Q18 2SC3675
NL1
C. GND
TP5
IC3 μPC393C 2/2
IC4 μPC393C 2/2
IC3 μPC393C 1/2
IC4 μPC393C 1/2
D4 1SS119
D5 RD5.1ESB2
D6 1SS119
D7 1SS119
D8 1SS119
D9 1SS119
D31 1SS119
IC7 TC4040BP
IC8 MC14572UB
IC2 μPC393C 2/2
IC1 μPC4082C 2/2
D10 RD5.1ESB2
D11 1SS119
IC1 μPC4082C 1/2
D13 1SS119
IC2 μPC393C 1/2
D12 RD5.1ESB2
D14 RD10ESB2
TP9
TP10
TP11
TP12
TP13
TP14
TP3
HV DET
D18 1SS119
IC5 μPC78M12H
IN OUT GND
TP6
+12V
GND
TP4
INT. OSC
TP2
L5 45μH
L6 45μH
Q3 2SA1175
Q4 2SA1175
D16 1SS119
Q17 2SC2785
D23 ERD29-08J
L1 90μH
L2 2.1mH
L3 2.1mH
L4 2.1mH
D22 RU-1
T1
T2
Q11 2SC2555
Q5 2SC2688
Q10 2SD1548
D20 ERC06-15SA
D21 ERC06-15SA
Q6 2SC2688
Q7 2SC2785
Q8 2SC2785
Q15 2SC2785
Q16 2SC2785
D24 1SS119
D25 1SS119
D28 1SS119
D29 1SS119
100V
400V
12V
PA-3 11P :S-MICRO
+400V
NC
+100V
+100V
NC
+15.5V
GND
GND
-15.5V
GND
INT. OSC
TO E BOARD E-2
TO M1 BOARD (SWITCHING)
PA-2 5P :S-MICRO
+100V
+100V
NC
GND
GND
TO M2 BOARD (SWITCHING)
PA-1 3P :S-MICRO
+15.5V
GND
-15.5V
PA-5 8P :S-MICRO
+400V
NC
+15.5V
GND
-15.5V
V PARA
H PARA
NC
PA-4 13P :S-MICRO
V PARA
GND
H PARA
GND
NC
GND
FAN PROT
H STOP
V STOP
POWER CONT
HV PROT
ΣIk PROT
ABL
TO DM BOARD DM-29
HV
FBT HOT
FBT COOL
ABL
GND
FBT1
FBT2
PB-1 3P :S-MICRO
GND
GND
GND
NL502
NL501
C502 0.1 200V
C501 0.1 200V
PB (FBT)
(◪ : MOUNTED PB BOARD)
①
②
③
④
⑤
⑥

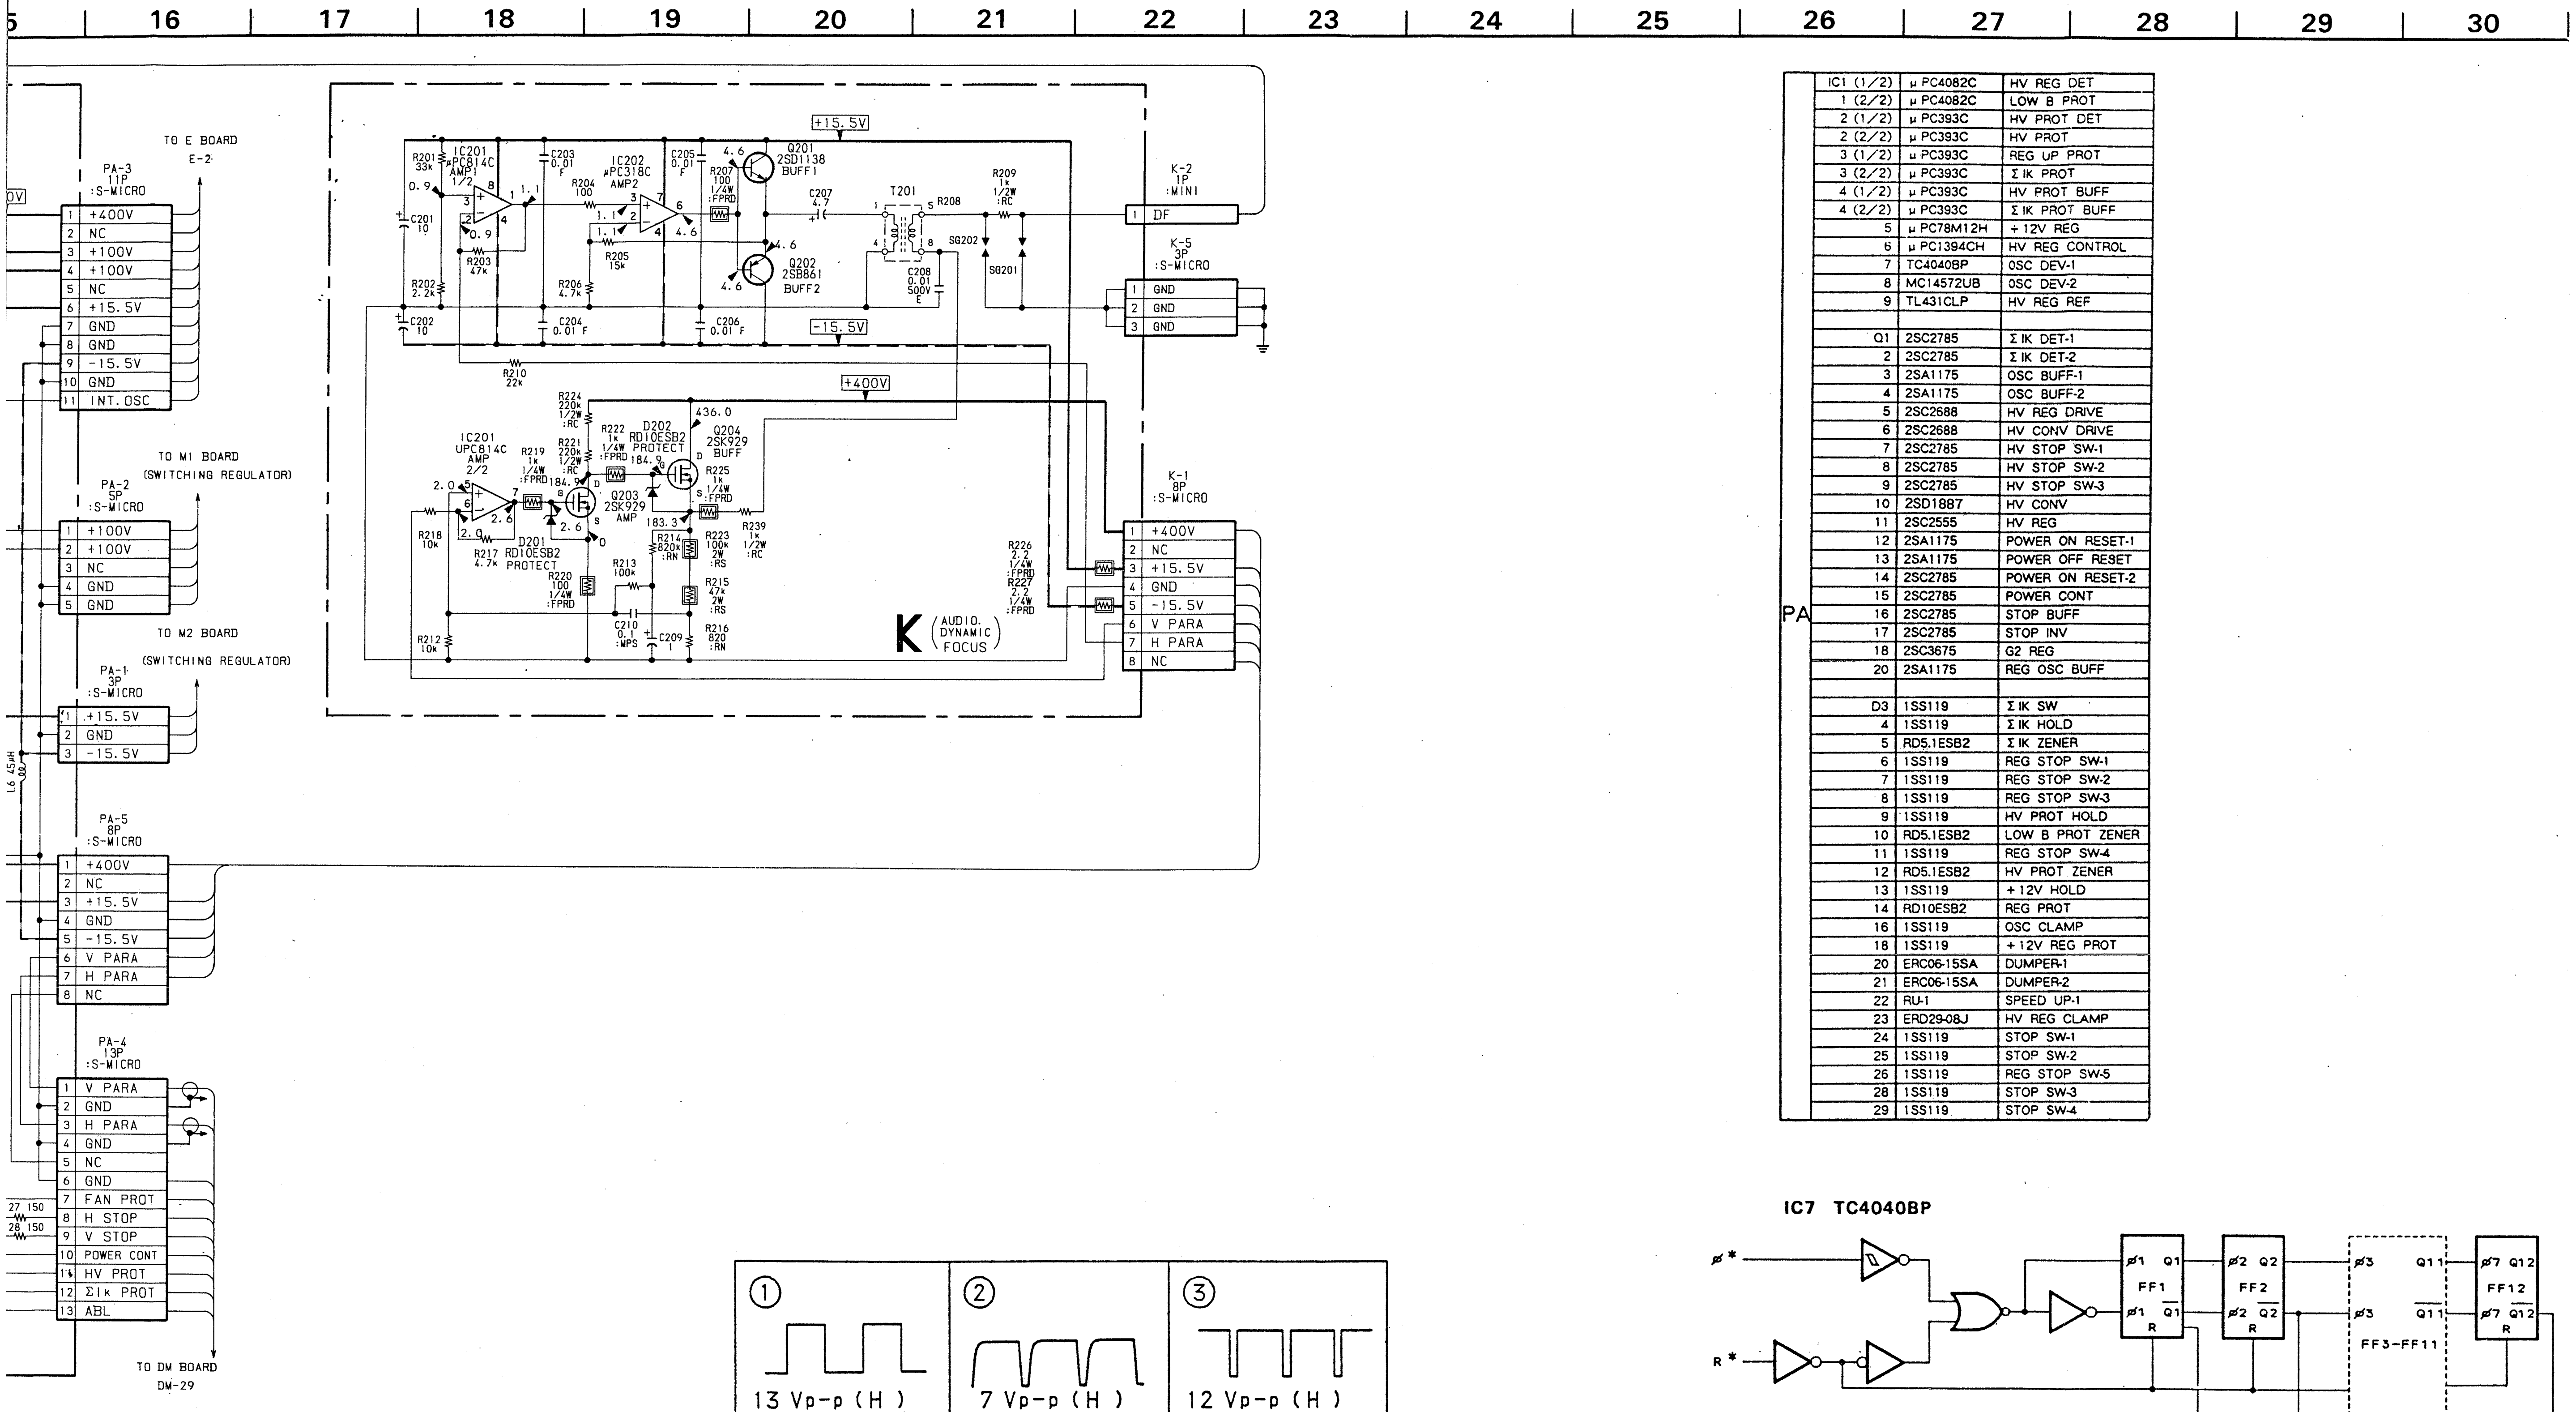
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
TO E BOARD E-2
PA-3 11P :S-MICRO
1 +400V
2 NC
3 +100V
4 +100V
5 NC
6 +15.5V
7 GND
8 GND
9 -15.5V
10 GND
11 INT.OSC
TO M1 BOARD (SWITCHING REGULATOR)
PA-2 5P :S-MICRO
1 +100V
2 +100V
3 NC
4 GND
5 GND
TO M2 BOARD (SWITCHING REGULATOR)
PA-1 3P :S-MICRO
1 +15.5V
2 GND
3 -15.5V
L6 45μH
PA-5 8P :S-MICRO
1 +400V
2 NC
3 +15.5V
4 GND
5 -15.5V
6 V PARA
7 H PARA
8 NC
PA-4 13P :S-MICRO
1 V PARA
2 GND
3 H PARA
4 GND
5 NC
6 GND
7 FAN PROT
8 H STOP
9 V STOP
10 POWER CONT
11 HV PROT
12 ΣIk PROT
13 ABL
R27 150
R28 150
TO DM BOARD DM-29
+15.5V
-15.5V
+400V
IC201 μPC814C AMP1 1/2
IC202 μPC318C AMP2
Q201 2SD1138 BUFF1
Q202 2SB861 BUFF2
T201
R201 33k
R202 2.2k
R203 47k
R204 100
R205 15k
R206 4.7k
C201 10
C202 10
C203 0.01 F
C204 0.01 F
C205 0.01 F
C206 0.01 F
C207 4.7
C208 0.01 500V E
R207 100 1/4W :FPRD
R208
R209 1k 1/2W :RC
SG201
SG202
R210 22k
K-2 1P :MINI
1 DF
K-5 3P :S-MICRO
1 GND
2 GND
3 GND
IC201 UPC814C AMP 2/2
R224 220k 1/2W :RC
R222 1k 1/4W :FPRD
D202 RD10ESB2 PROTECT
Q204 2SK929 BUFF
Q203 2SK929 AMP
R219 1k 1/4W :FPRD
R221 220k 1/2W :RC
R225 1k 1/4W :FPRD
D201 RD10ESB2 PROTECT
R217 4.7k
R218 10k
R212 10k
R220 100 1/4W :FPRD
R213 100k
R214 820k :RN
R223 100k 2W :RS
R239 1k 1/2W :RC
R215 47k 2W :RS
R216 820 :RN
C210 0.1 :MPS
C209 1
R226 2.2 1/4W :FPRD
R227 2.2 1/4W :FPRD
436.0
184.9
183.3
2.0
2.6
K-1 8P :S-MICRO
1 +400V
2 NC
3 +15.5V
4 GND
5 -15.5V
6 V PARA
7 H PARA
8 NC
K (AUDIO. DYNAMIC FOCUS)

PA	IC1 (1/2)	μPC4082C	HV REG DET
	1 (2/2)	μPC4082C	LOW B PROT
	2 (1/2)	μPC393C	HV PROT DET
	2 (2/2)	μPC393C	HV PROT
	3 (1/2)	μPC393C	REG UP PROT
	3 (2/2)	μPC393C	Σ IK PROT
	4 (1/2)	μPC393C	HV PROT BUFF
	4 (2/2)	μPC393C	Σ IK PROT BUFF
	5	μPC78M12H	+12V REG
	6	μPC1394CH	HV REG CONTROL
	7	TC4040BP	OSC DEV-1
	8	MC14572UB	OSC DEV-2
	9	TL431CLP	HV REG REF
	Q1	2SC2785	Σ IK DET-1
	2	2SC2785	Σ IK DET-2
	3	2SA1175	OSC BUFF-1
	4	2SA1175	OSC BUFF-2
	5	2SC2688	HV REG DRIVE
	6	2SC2688	HV CONV DRIVE
	7	2SC2785	HV STOP SW-1
	8	2SC2785	HV STOP SW-2
	9	2SC2785	HV STOP SW-3
	10	2SD1887	HV CONV
	11	2SC2555	HV REG
	12	2SA1175	POWER ON RESET-1
	13	2SA1175	POWER OFF RESET
	14	2SC2785	POWER ON RESET-2
	15	2SC2785	POWER CONT
	16	2SC2785	STOP BUFF
	17	2SC2785	STOP INV
	18	2SC3675	G2 REG
	20	2SA1175	REG OSC BUFF
	D3	1SS119	Σ IK SW
	4	1SS119	Σ IK HOLD
	5	RD5.1ESB2	Σ IK ZENER
	6	1SS119	REG STOP SW-1
	7	1SS119	REG STOP SW-2
	8	1SS119	REG STOP SW-3
	9	1SS119	HV PROT HOLD
	10	RD5.1ESB2	LOW B PROT ZENER
	11	1SS119	REG STOP SW-4
	12	RD5.1ESB2	HV PROT ZENER
	13	1SS119	+12V HOLD
	14	RD10ESB2	REG PROT
	16	1SS119	OSC CLAMP
	18	1SS119	+12V REG PROT
	20	ERC06-15SA	DUMPER-1
	21	ERC06-15SA	DUMPER-2
	22	RU-1	SPEED UP-1
	23	ERD29-08J	HV REG CLAMP
	24	1SS119	STOP SW-1
	25	1SS119	STOP SW-2
	26	1SS119	REG STOP SW-5
	28	1SS119	STOP SW-3
	29	1SS119	STOP SW-4

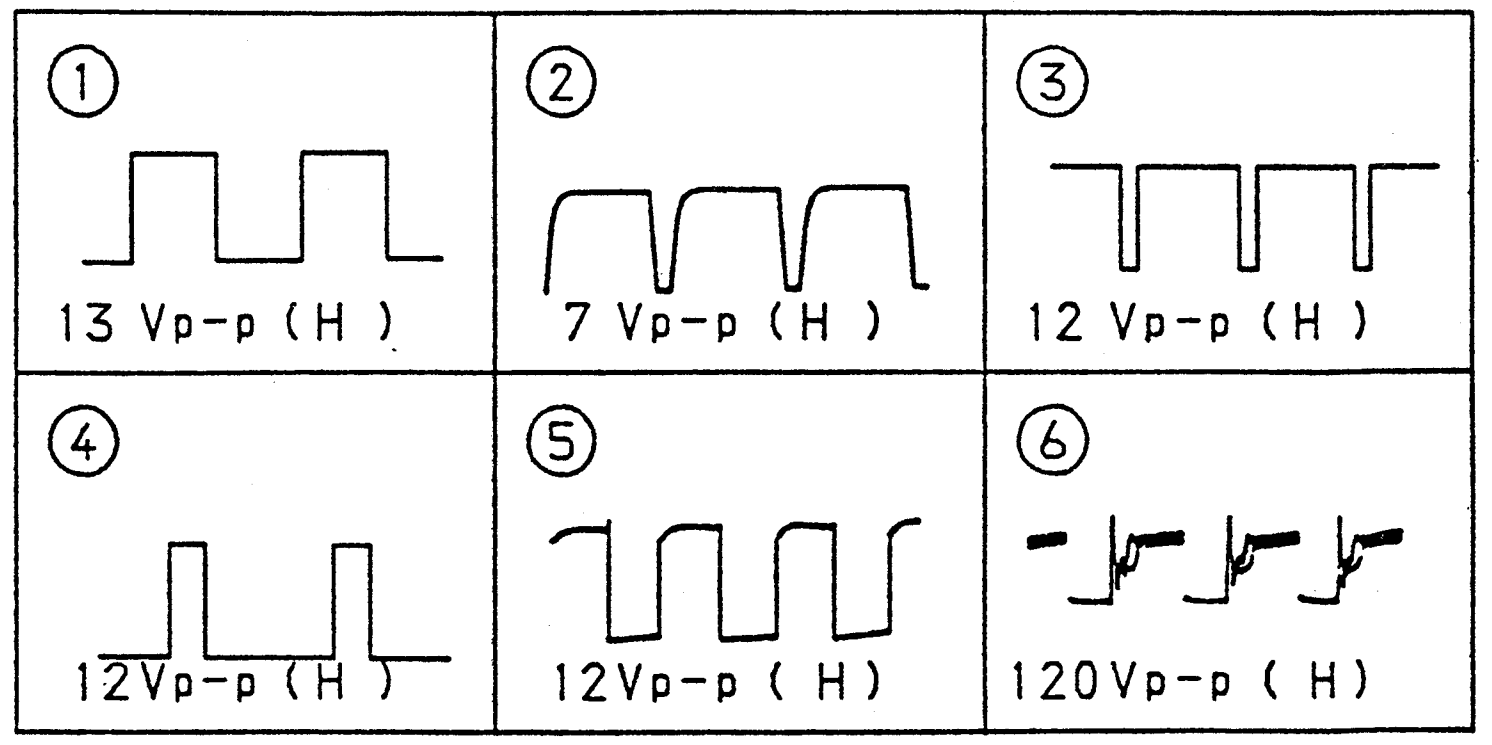
①
13 Vp-p (H)
②
7 Vp-p (H)
③
12 Vp-p (H)
④
12Vp-p (H)
⑤
12Vp-p (H)
⑥
120Vp-p (H)

IC7 TC4040BP

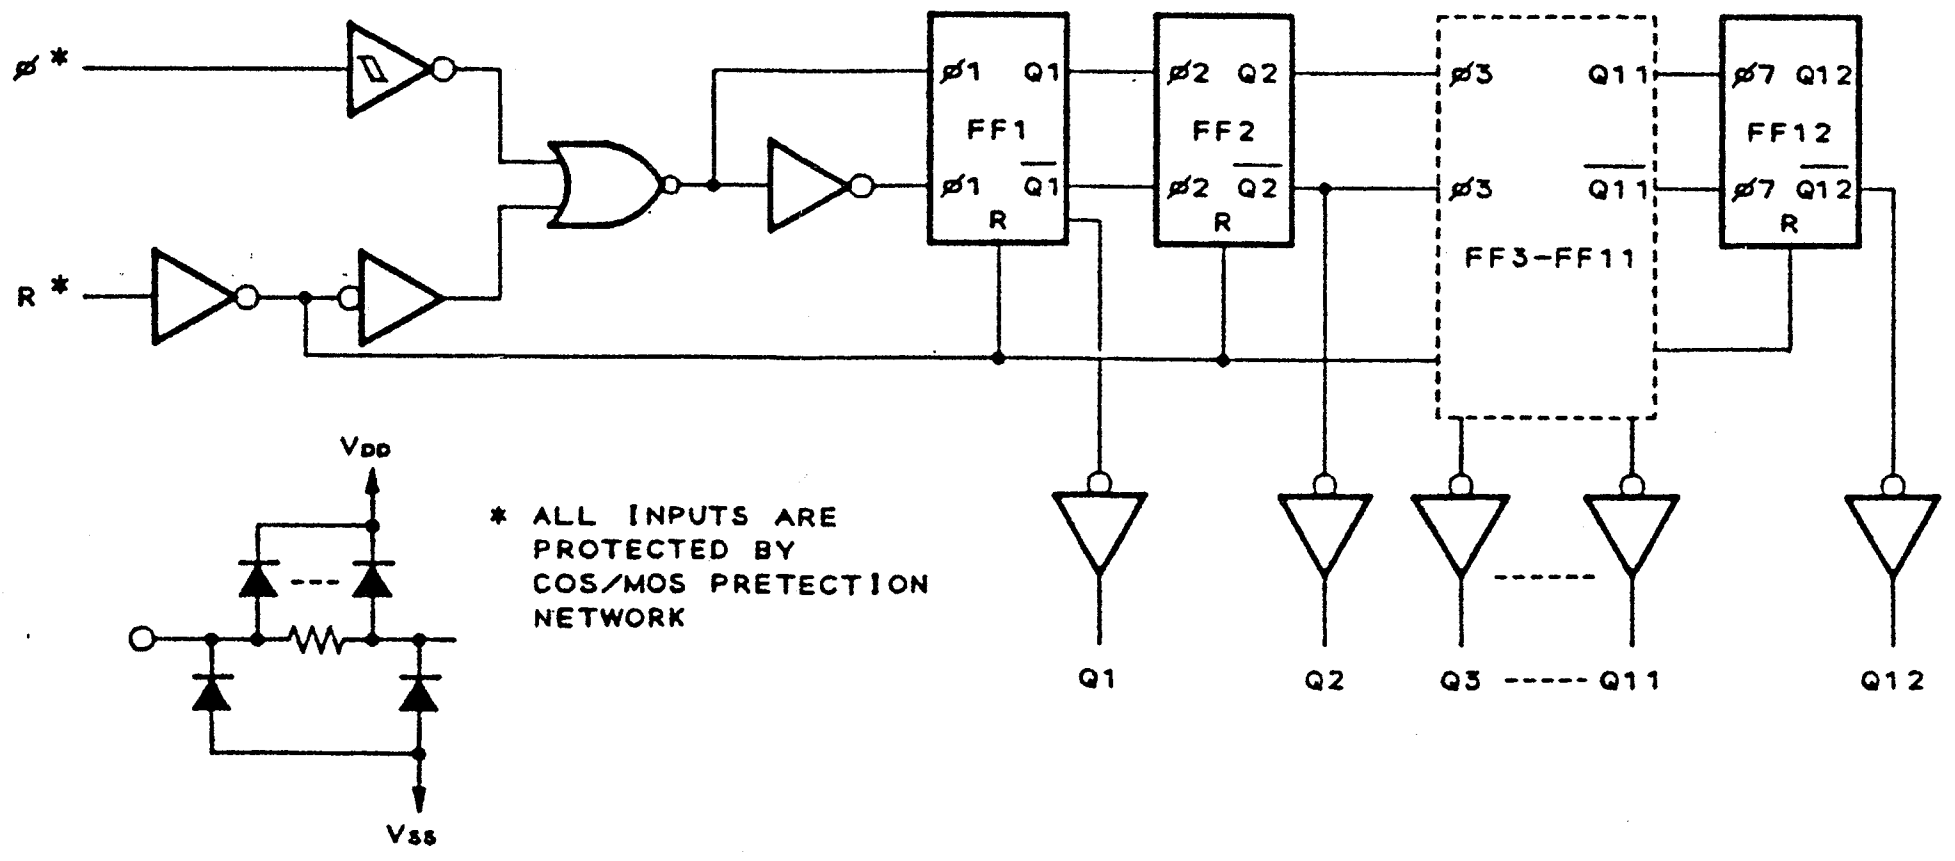
ø*
R*
ø1 Q1
FF1
ø1 Q̄1
R
ø2 Q2
FF2
ø2 Q̄2
R
ø3 Q11
ø3 Q̄11
FF3–FF11
ø7 Q12
FF12
ø7 Q̄12
R
Q1
Q2
Q3 ----- Q11
Q12
VDD
VSS

* ALL INPUTS ARE PROTECTED BY COS/MOS PRETECTION NETWORK

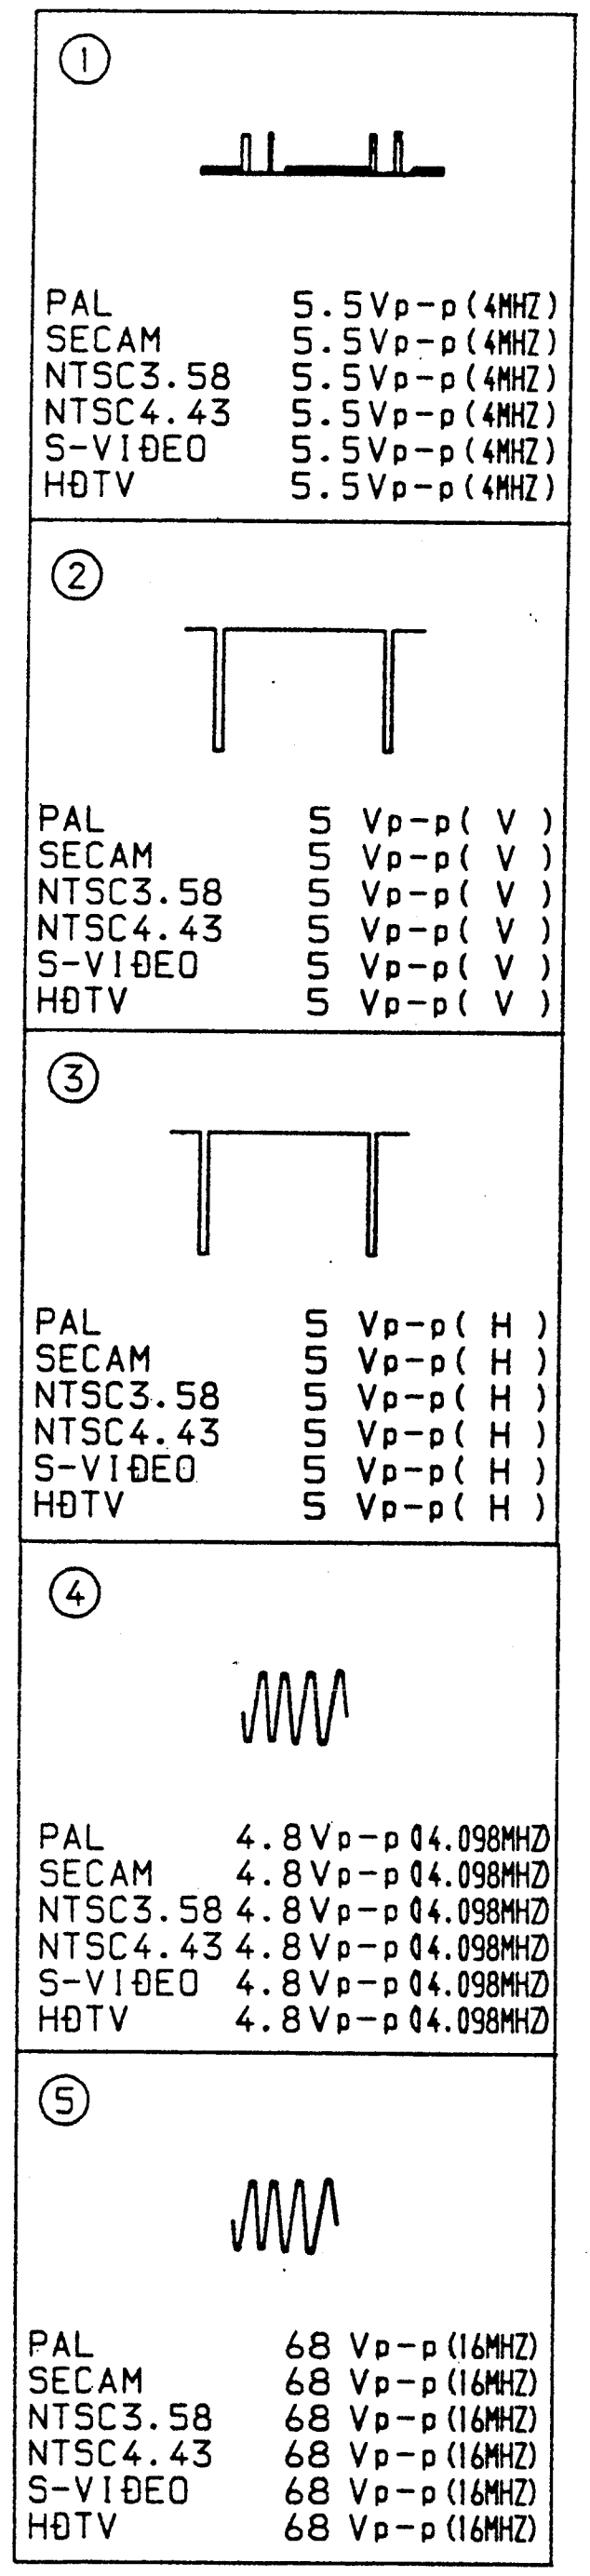
①
PAL 5.5Vp-p(4MHZ)
SECAM 5.5Vp-p(4MHZ)
NTSC3.58 5.5Vp-p(4MHZ)
NTSC4.43 5.5Vp-p(4MHZ)
S-VIDEO 5.5Vp-p(4MHZ)
HDTV 5.5Vp-p(4MHZ)
②
PAL 5 Vp-p(V)
SECAM 5 Vp-p(V)
NTSC3.58 5 Vp-p(V)
NTSC4.43 5 Vp-p(V)
S-VIDEO 5 Vp-p(V)
HDTV 5 Vp-p(V)
③
PAL 5 Vp-p(H)
SECAM 5 Vp-p(H)
NTSC3.58 5 Vp-p(H)
NTSC4.43 5 Vp-p(H)
S-VIDEO 5 Vp-p(H)
HDTV 5 Vp-p(H)
④
PAL 4.8Vp-p(4.098MHZ)
SECAM 4.8Vp-p(4.098MHZ)
NTSC3.58 4.8Vp-p(4.098MHZ)
NTSC4.43 4.8Vp-p(4.098MHZ)
S-VIDEO 4.8Vp-p(4.098MHZ)
HDTV 4.8Vp-p(4.098MHZ)
⑤
PAL 68 Vp-p(16MHZ)
SECAM 68 Vp-p(16MHZ)
NTSC3.58 68 Vp-p(16MHZ)
NTSC4.43 68 Vp-p(16MHZ)
S-VIDEO 68 Vp-p(16MHZ)
HDTV 68 Vp-p(16MHZ)

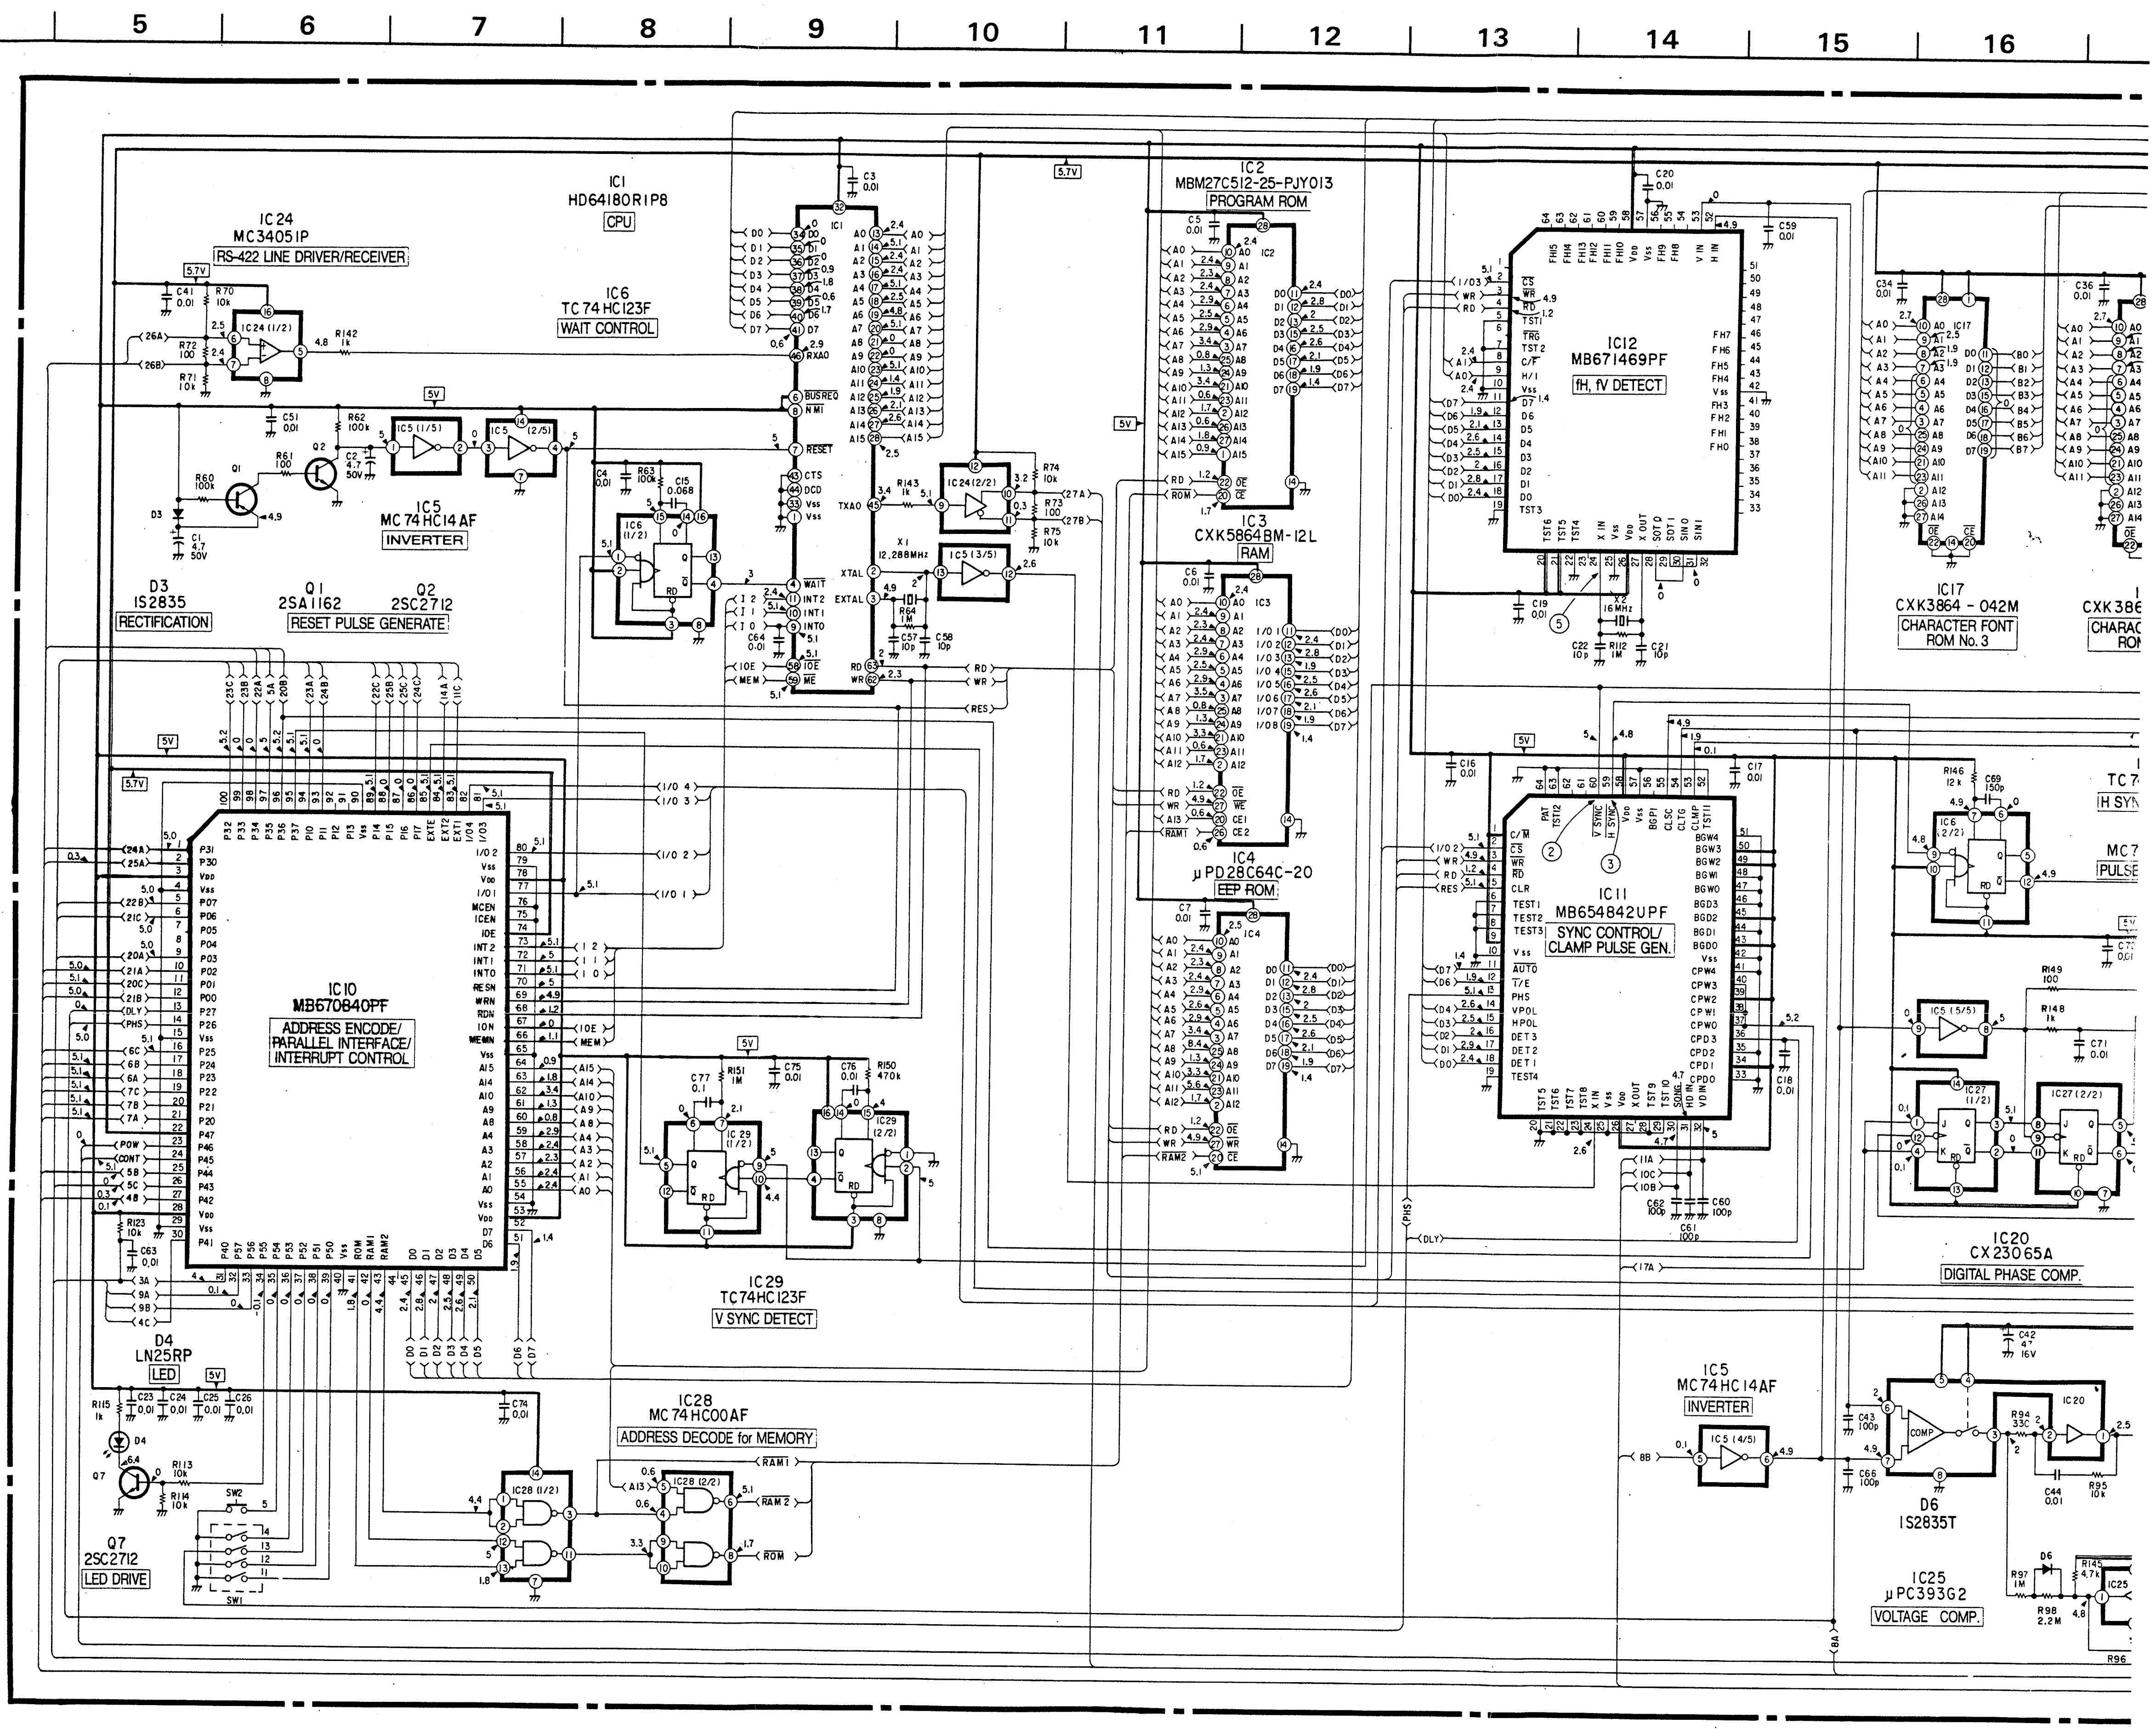
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
IC24 MC34051P RS-422 LINE DRIVER/RECEIVER
IC1 HD64180R1P8 CPU
IC6 TC74HC123F WAIT CONTROL
IC5 MC74HC14AF INVERTER
D3 1S2835 RECTIFICATION
Q1 2SA1162 Q2 2SC2712 RESET PULSE GENERATE
IC2 MBM27C512-25-PJY013 PROGRAM ROM
IC3 CXK5864BM-12L RAM
IC4 μPD28C64C-20 EEP ROM
IC12 MB671469PF fH, fV DETECT
IC17 CXK3864-042M CHARACTER FONT ROM No.3
IC10 MB670840PF ADDRESS ENCODE/ PARALLEL INTERFACE/ INTERRUPT CONTROL
IC29 TC74HC123F V SYNC DETECT
IC11 MB654842UPF SYNC CONTROL/ CLAMP PULSE GEN.
IC20 CX23065A DIGITAL PHASE COMP.
IC5 MC74HC14AF INVERTER
D6 1S2835T
IC25 μPC393G2 VOLTAGE COMP.
D4 LN25RP LED
Q7 2SC2712 LED DRIVE
IC28 MC74HC00AF ADDRESS DECODE for MEMORY
X1 12.288MHz
SW1 SW2
5V 5.7V

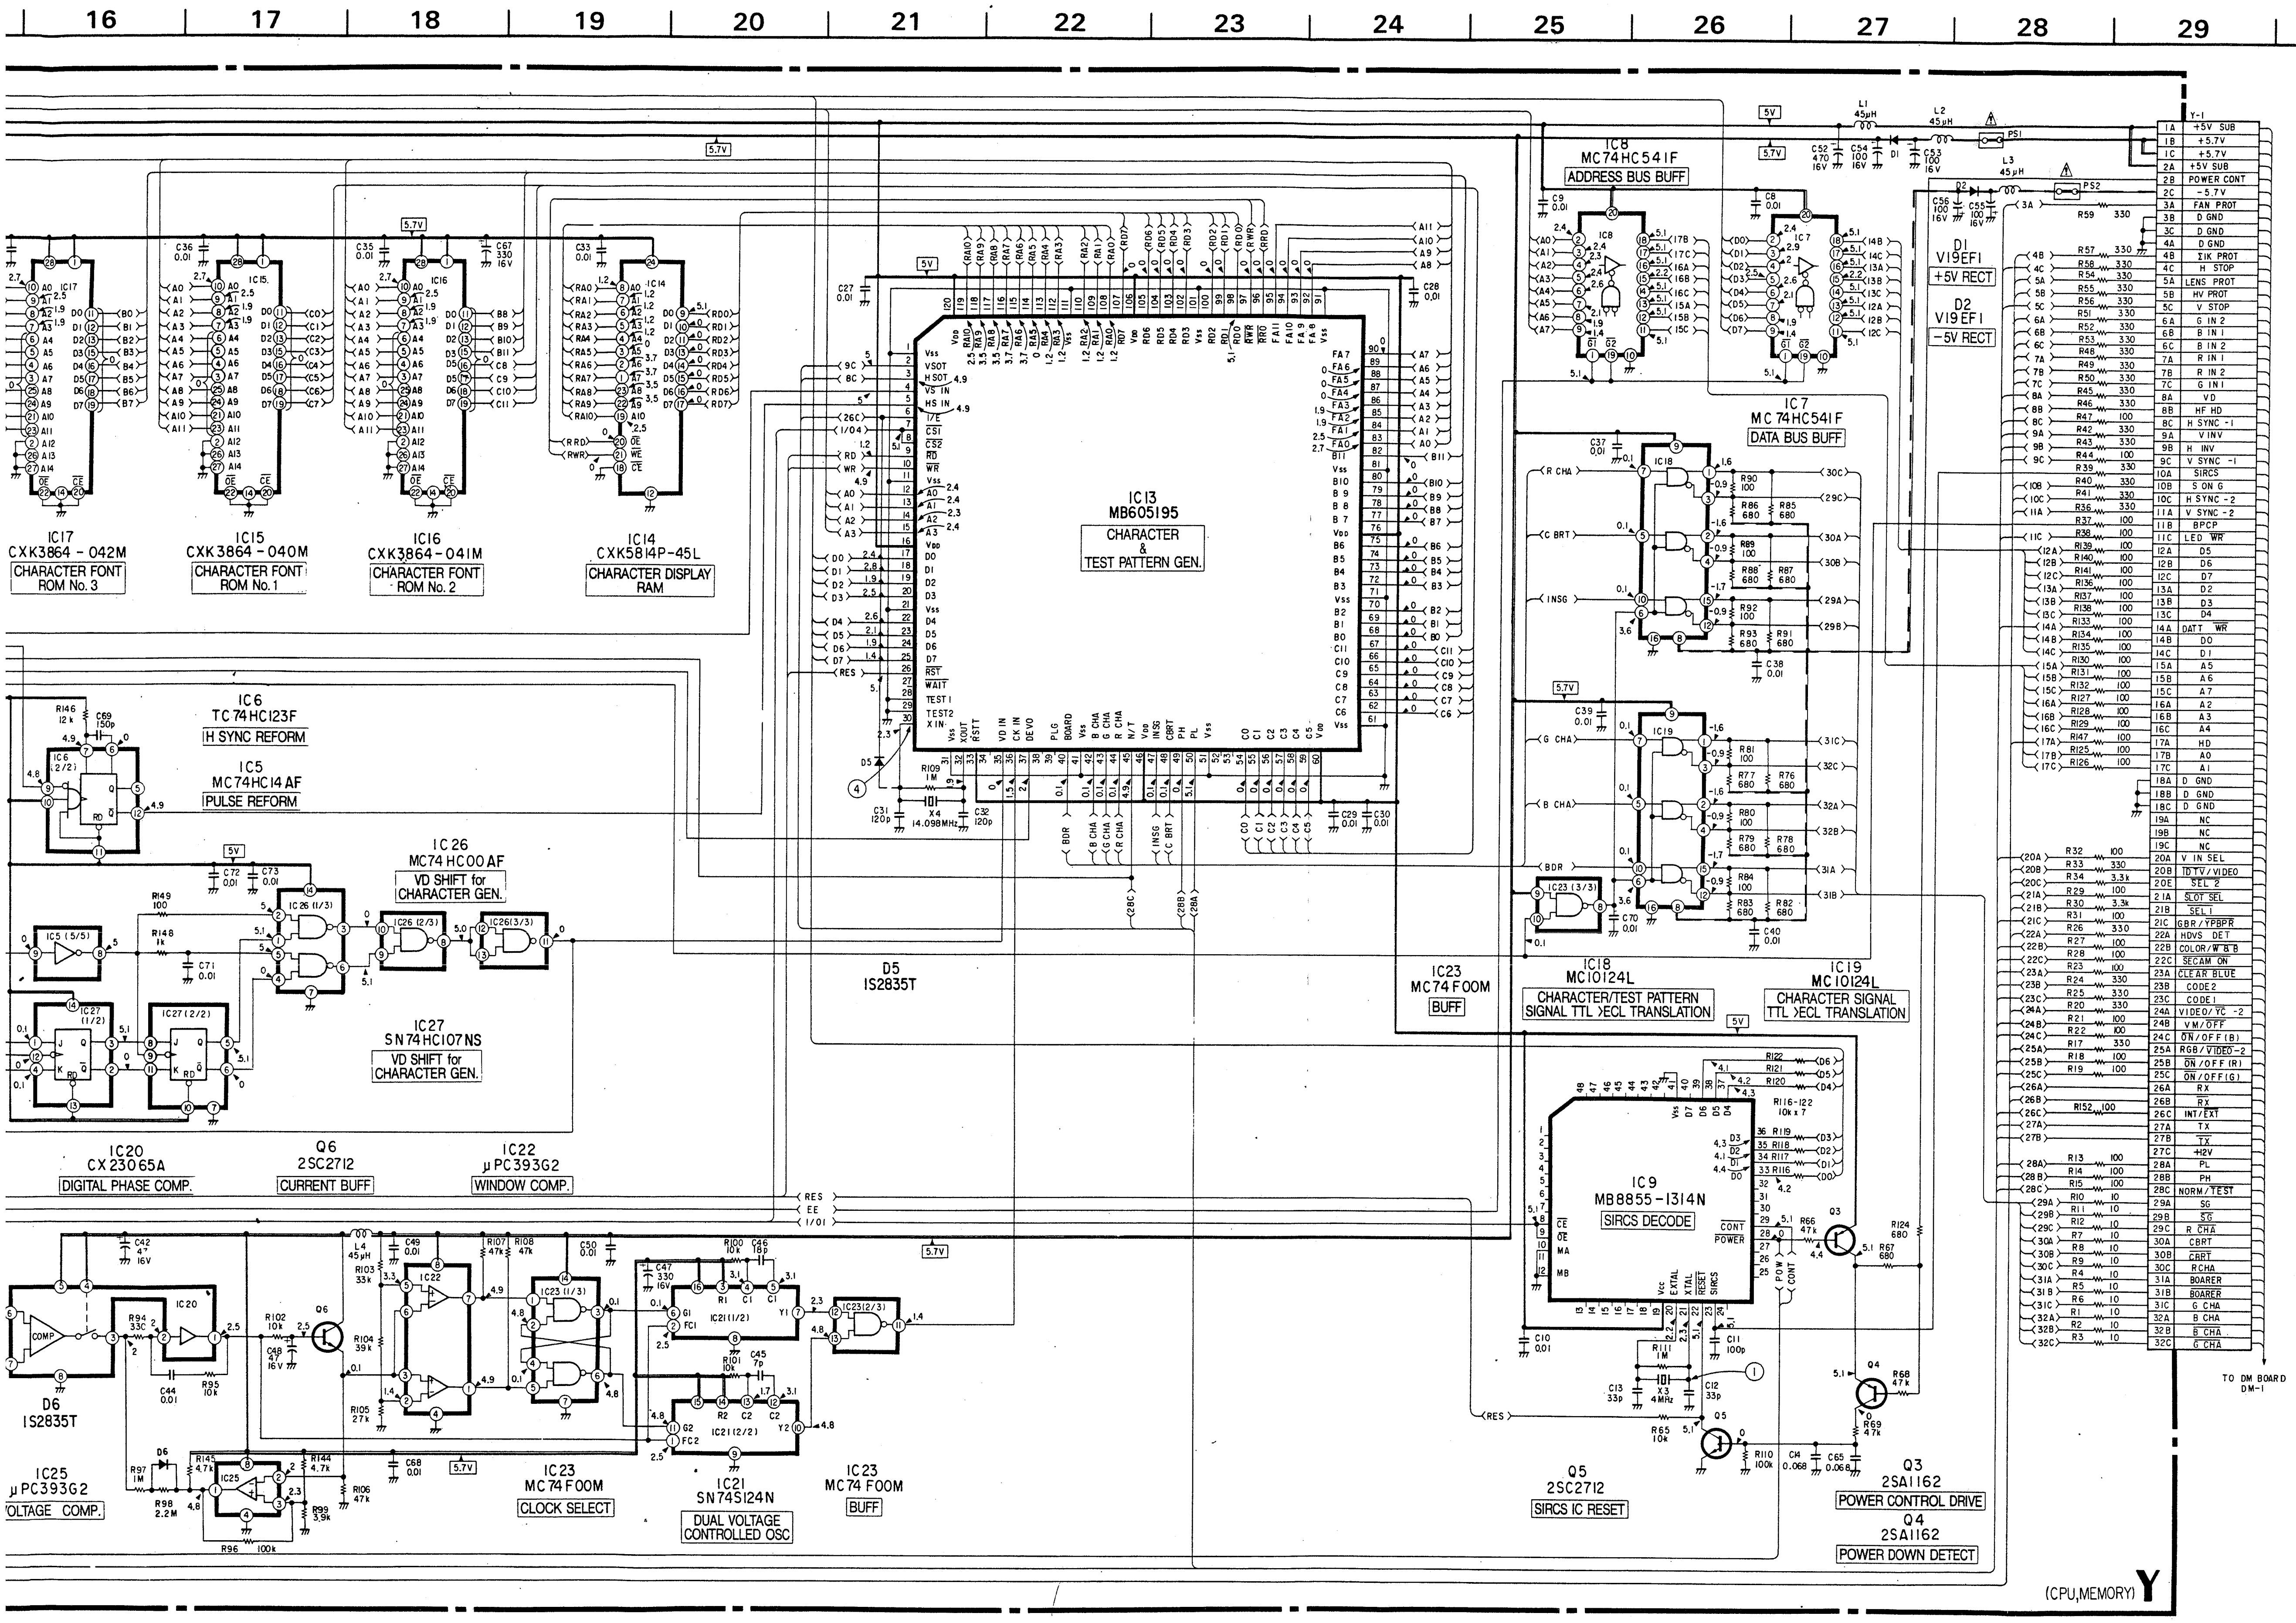
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
IC17
CXK3864-042M
CHARACTER FONT ROM No. 3
IC15
CXK3864-040M
CHARACTER FONT ROM No. 1
IC16
CXK3864-041M
CHARACTER FONT ROM No. 2
IC14
CXK5814P-45L
CHARACTER DISPLAY RAM
IC13
MB605195
CHARACTER & TEST PATTERN GEN.
IC8
MC74HC541F
ADDRESS BUS BUFF
IC7
MC74HC541F
DATA BUS BUFF
D1
V19EF1
+5V RECT
D2
V19EF1
-5V RECT
IC6
TC74HC123F
H SYNC REFORM
IC5
MC74HC14AF
PULSE REFORM
IC26
MC74HC00AF
VD SHIFT for CHARACTER GEN.
IC27
SN74HC107NS
VD SHIFT for CHARACTER GEN.
D5
1S2835T
IC23
MC74F00M
BUFF
IC18
MC10124L
CHARACTER/TEST PATTERN SIGNAL TTL>ECL TRANSLATION
IC19
MC10124L
CHARACTER SIGNAL TTL>ECL TRANSLATION
IC20
CX23065A
DIGITAL PHASE COMP.
Q6
2SC2712
CURRENT BUFF
IC22
μPC393G2
WINDOW COMP.
IC9
MB8855-1314N
SIRCS DECODE
D6
1S2835T
IC25
μPC393G2
VOLTAGE COMP.
IC23
MC74F00M
CLOCK SELECT
IC21
SN74S124N
DUAL VOLTAGE CONTROLLED OSC
IC23
MC74F00M
BUFF
Q5
2SC2712
SIRCS IC RESET
Q3
2SA1162
POWER CONTROL DRIVE
Q4
2SA1162
POWER DOWN DETECT
X4 14.098MHz
X3 4MHz
5V
5.7V
PS1
PS2
L1 45μH
L2 45μH
L3 45μH
Y-1
1A +5V SUB
1B +5.7V
1C +5.7V
2A +5V SUB
2B POWER CONT
2C -5.7V
3A FAN PROT
3B D GND
3C D GND
4A D GND
4B ΣK PROT
4C H STOP
5A LENS PROT
5B HV PROT
5C V STOP
6A G IN 2
6B B IN 1
6C B IN 2
7A R IN 1
7B R IN 2
7C G IN 1
8A VD
8B HF HD
8C H SYNC -1
9A V INV
9B H INV
9C V SYNC -1
10A SIRCS
10B S ON G
10C H SYNC -2
11A V SYNC -2
11B BPCP
11C LED WR
12A D5
12B D6
12C D7
13A D2
13B D3
13C D4
14A DATT WR
14B D0
14C D1
15A A5
15B A6
15C A7
16A A2
16B A3
16C A4
17A HD
17B A0
17C A1
18A D GND
18B D GND
18C D GND
19A NC
19B NC
19C NC
20A V IN SEL
20B ID TV/VIDEO
20C SEL 2
21A SLOT SEL
21B SEL 1
21C GBR/YPBPR
22A HDVS DET
22B COLOR/W & B
22C SECAM ON
23A CLEAR BLUE
23B CODE 2
23C CODE 1
24A VIDEO/YC -2
24B VM/OFF
24C ON/OFF (B)
25A RGB/VIDEO-2
25B ON/OFF (R)
25C ON/OFF (G)
26A RX
26B RX
26C INT/EXT
27A TX
27B TX
27C +12V
28A PL
28B PH
28C NORM/TEST
29A SG
29B SG
29C R CHA
30A CBRT
30B CBRT
30C RCHA
31A BOARER
31B BOARER
31C G CHA
32A B CHA
32B B CHA
32C G CHA
TO DM BOARD DM-1
(CPU,MEMORY) Y

Y [CPU, MEMORY]

- Y BOARD - (COMPONENT SIDE)

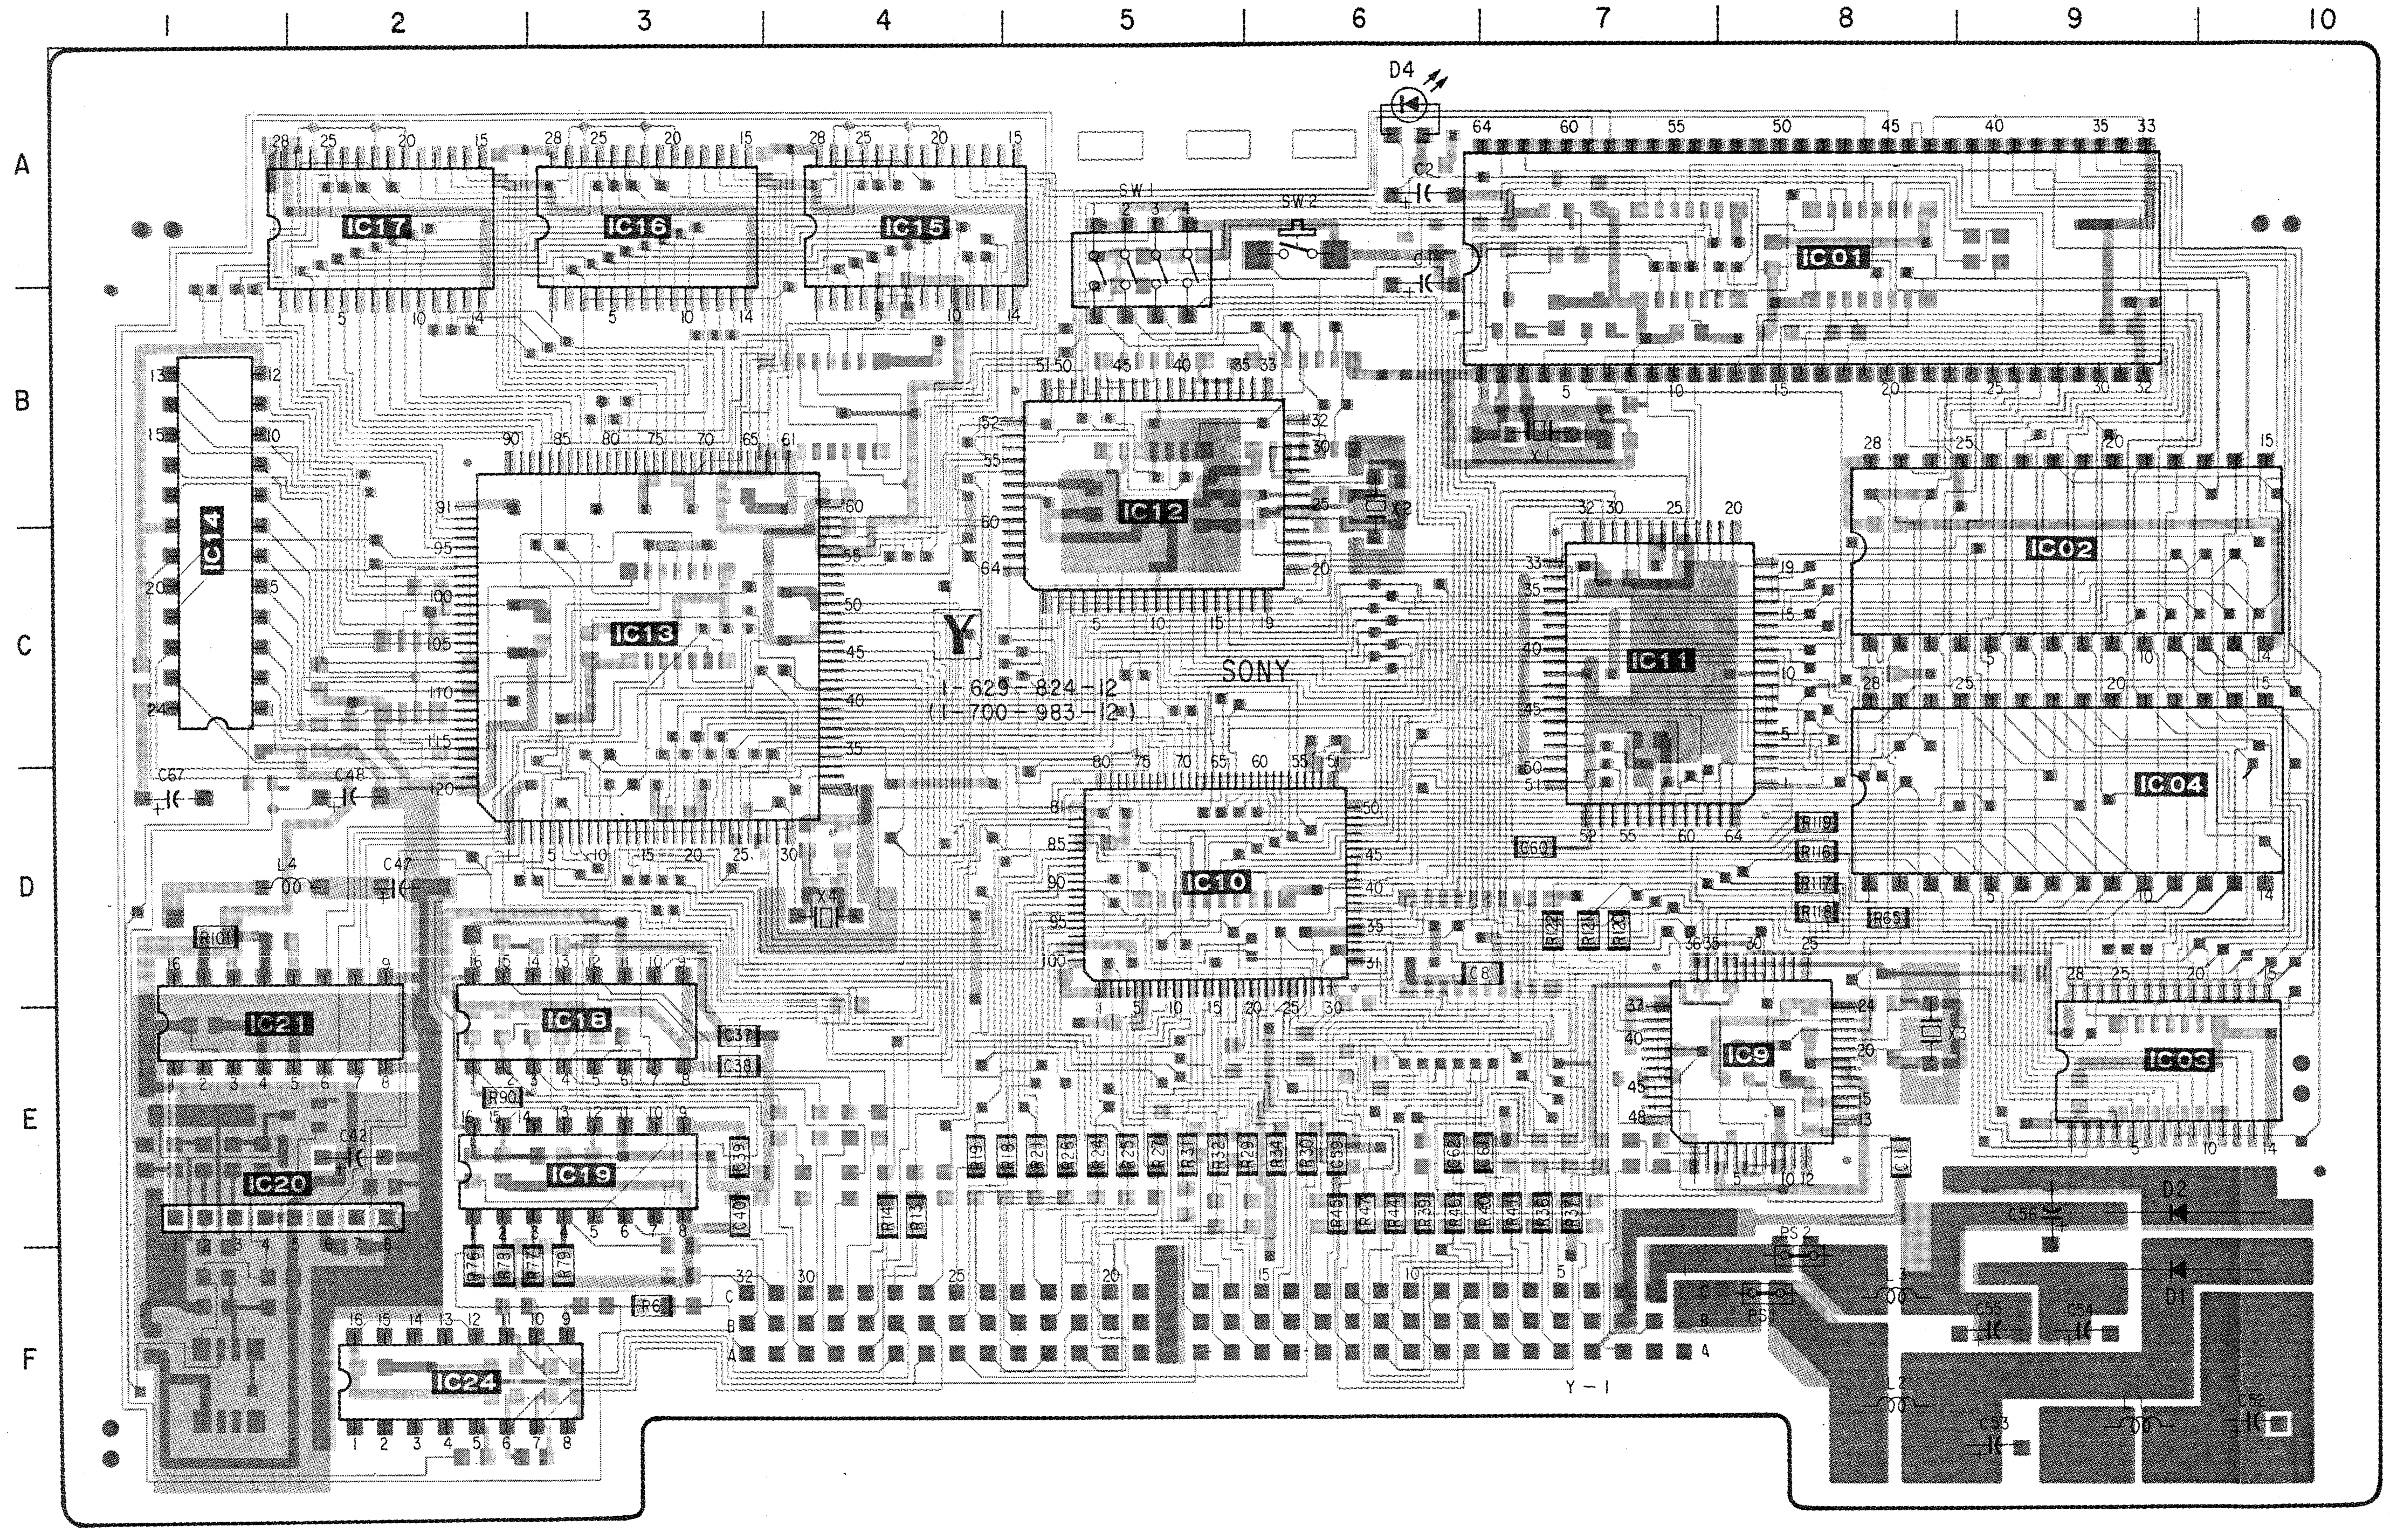
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
IC17
IC16
IC15
IC01
IC14
IC13
IC12
IC11
IC02
IC04
IC10
IC21
IC18
IC19
IC20
IC24
IC9
IC03
D4
D2
D1
SW1
SW2
C2
X1
X2
X3
X4
C67
C48
L4
C47
C42
R101
R90
C37
C38
C39
C40
C60
C8
C11
C56
C55
C54
C53
C52
PS1
PS2
L2
R65
R60
Y
1-625-824-12
(1-700-983-12)
SONY
Y-1

Y BOARD

IC

	CON-DUCTOR SIDE	COM-PONENT SIDE
IC1		A - 8
IC2		C - 9
IC3		E - 9
IC4		D - 9
IC5	A - 3	
IC6	A - 3	
IC7	D - 4	
IC8	D - 5	
IC9		E - 5
IC10		D - 8
IC11		C - 7
IC12		B - 5
IC13		C - 3
IC14		B - 1
IC15		A - 4
IC16		A - 3
IC17		A - 2
IC18		E - 3
IC19		E - 3
IC20		E - 1
IC21		E - 1
IC22	C - 9	
IC23	C - 8	
IC24		F - 2
IC25	F - 10	
IC26	B - 5	
IC27	B - 6	
IC28	E - 1	
IC29	B - 7	

TRANSISTOR

	CON-DUCTOR SIDE	COM-PONENT SIDE
Q1	B - 4	
Q2	A - 4	
Q3	E - 3	
Q4	E - 4	
Q5	E - 3	
Q6	C - 9	
Q7	A - 4	

DIODE

	CON-DUCTOR SIDE	COM-PONENT SIDE
D1		F - 9
D2		E - 9
D3	B - 4	
D4	A - 7	
D5	D - 7	
D6	E - 9	

IC

N- TOR)E	COM- PONENT SIDE
	A - 8
	C - 9
	E - 9
	D - 9
- 3	
- 3	
- 4	
- 5	
	E - 5
	D - 8
	C - 7
	B - 5
	C - 3
	B - 1
	A - 4
	A - 3
	A - 2
	E - 3
	E - 3
	E - 1
	E - 1
- 9	
\8	
	F - 2
- 10	
- 5	
- 6	
- 1	
- 7	

SISTOR

I- OR E	COM- PONENT SIDE
- 4	
- 4	
- 3	
- 4	
- 3	
- 9	
- 4	

ODE

I- OR E	COM- PONENT SIDE
	F - 9
	E - 9
- 4	
- 7	
- 7	
- 9	

(CONDUCTOR SIDE)

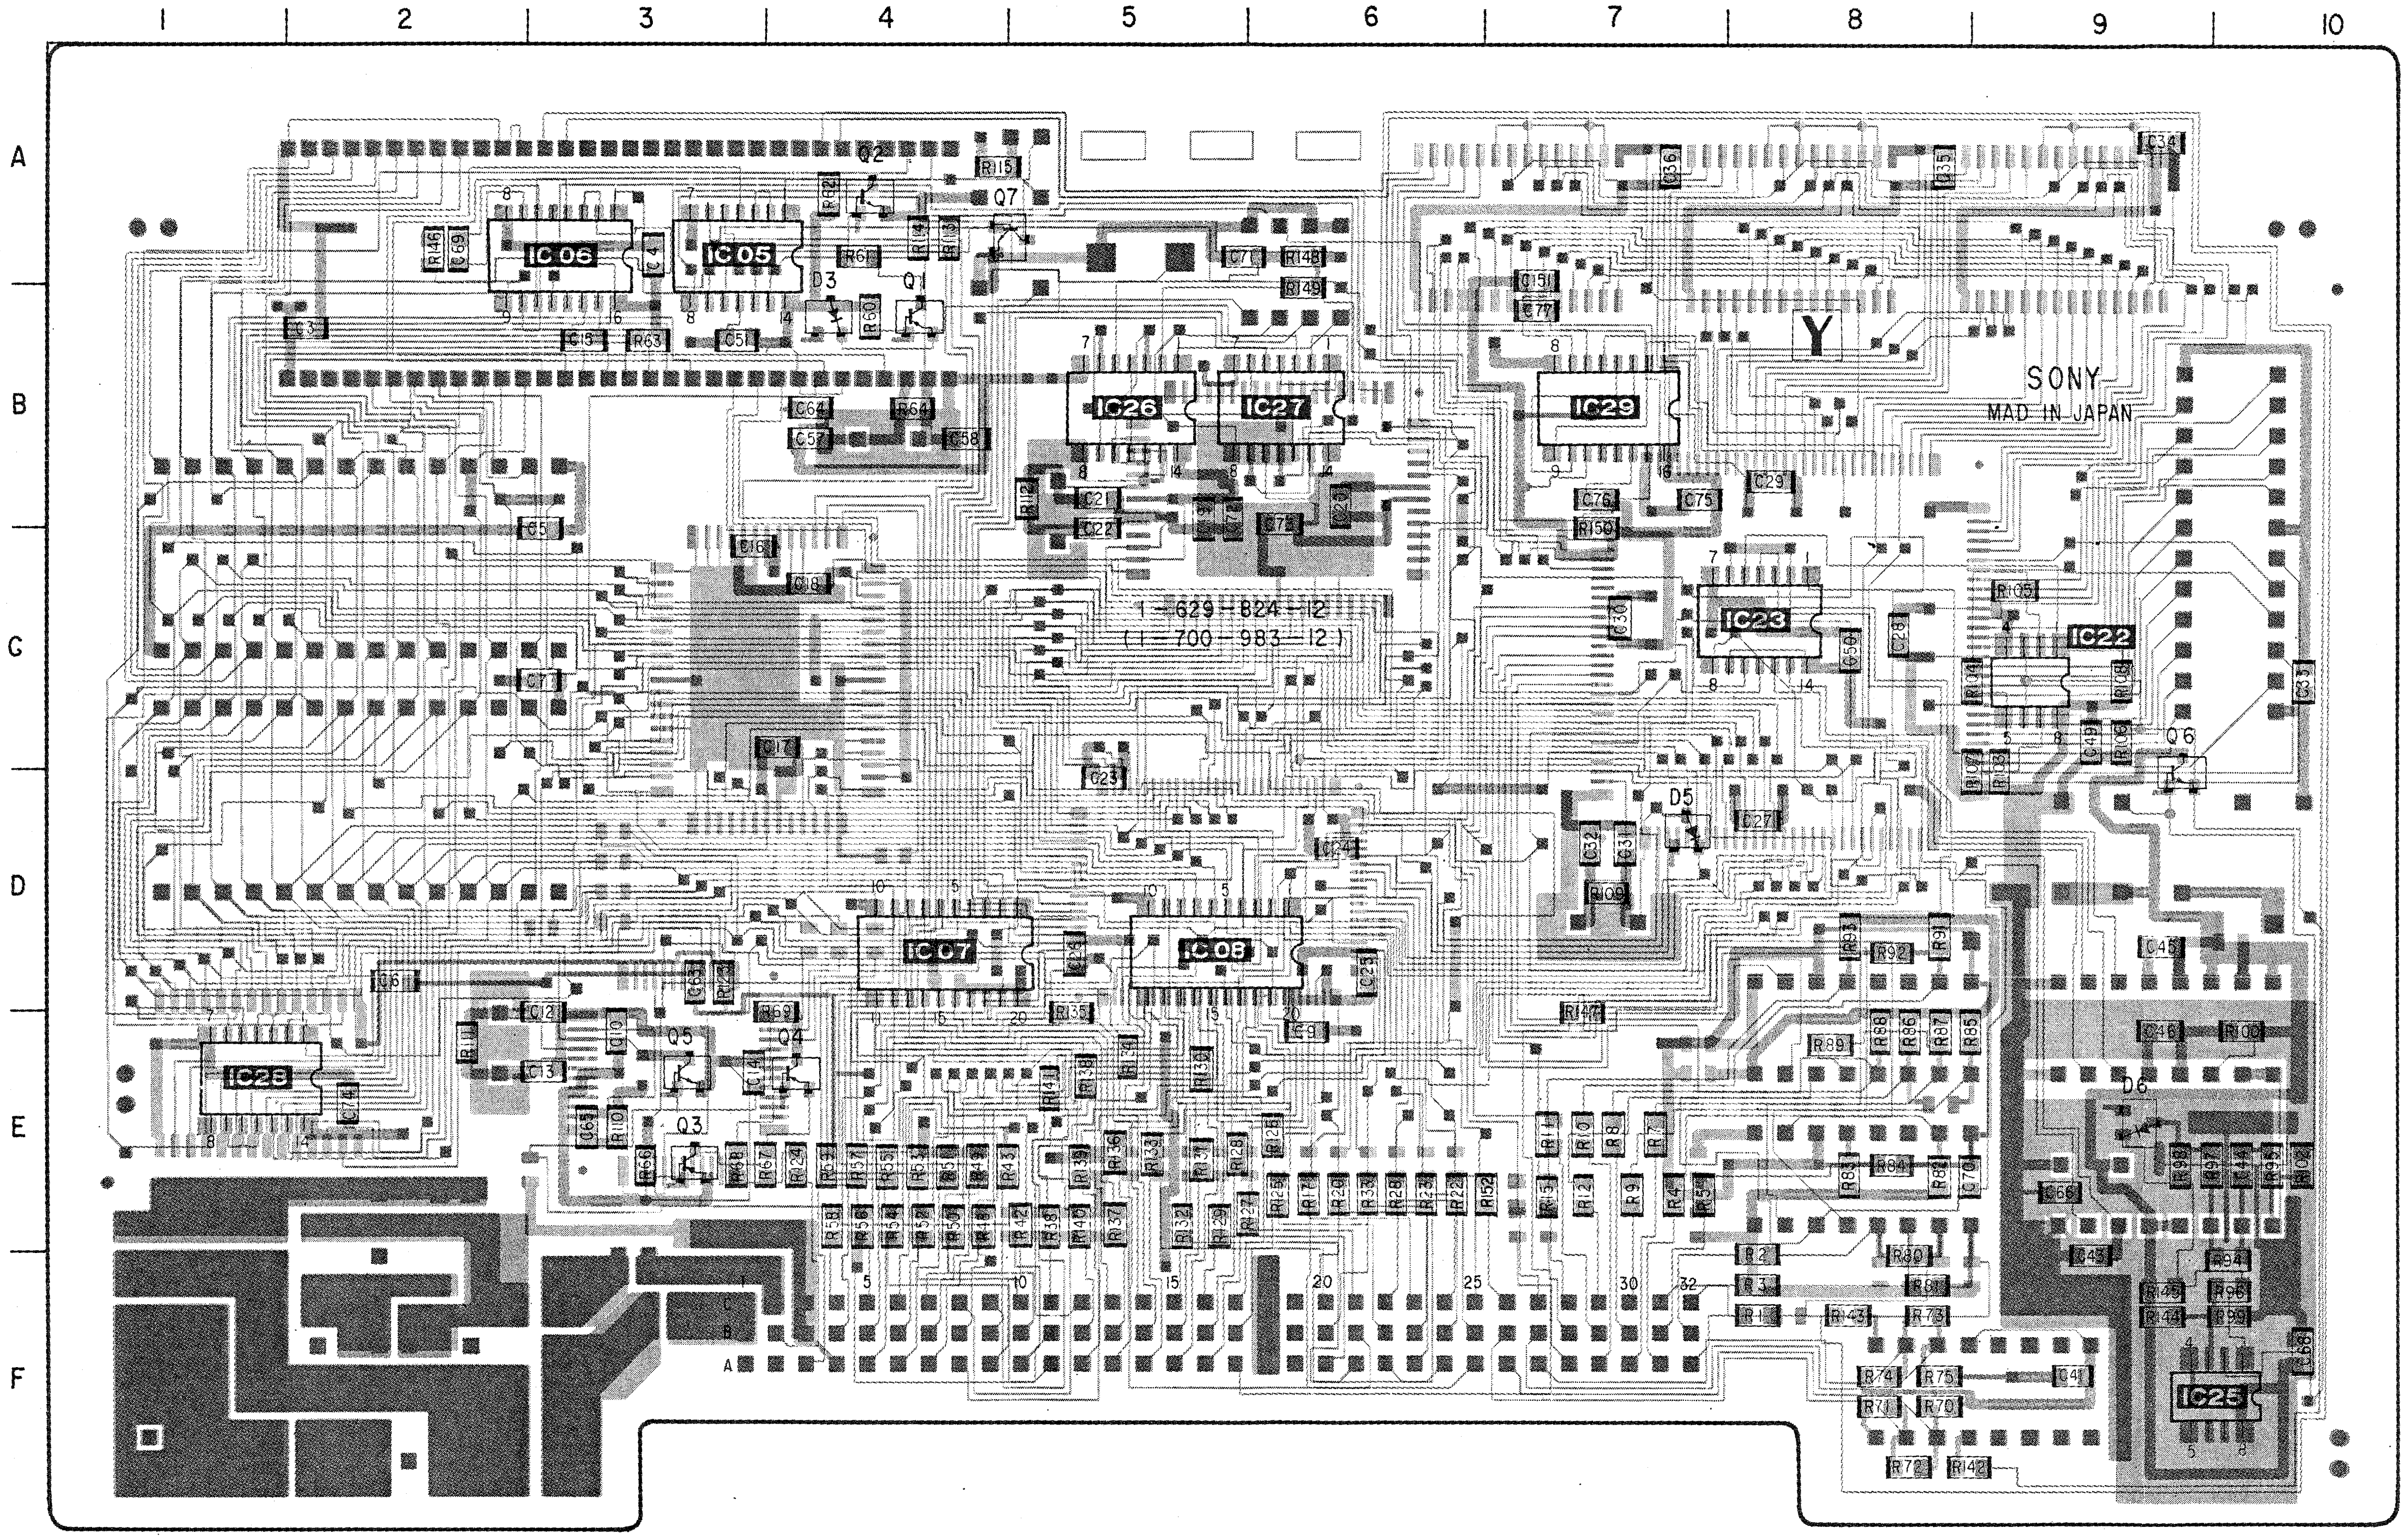
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
IC06
IC05
Q2
Q7
Q1
D3
IC26
IC27
IC29
Y
SONY
MAD IN JAPAN
1-629-824-12
(1-700-983-12)
IC23
IC22
Q6
D5
IC07
IC08
IC28
Q5
Q4
Q3
D6
IC25

- ▒ : Pattern from the side which enables seeing.
- ░ : Pattern of the rear side.

RC

– RC



RCA **RCB** **RCC** **RCD** **RC** [CONTROL PANEL]

– RC BOARD –

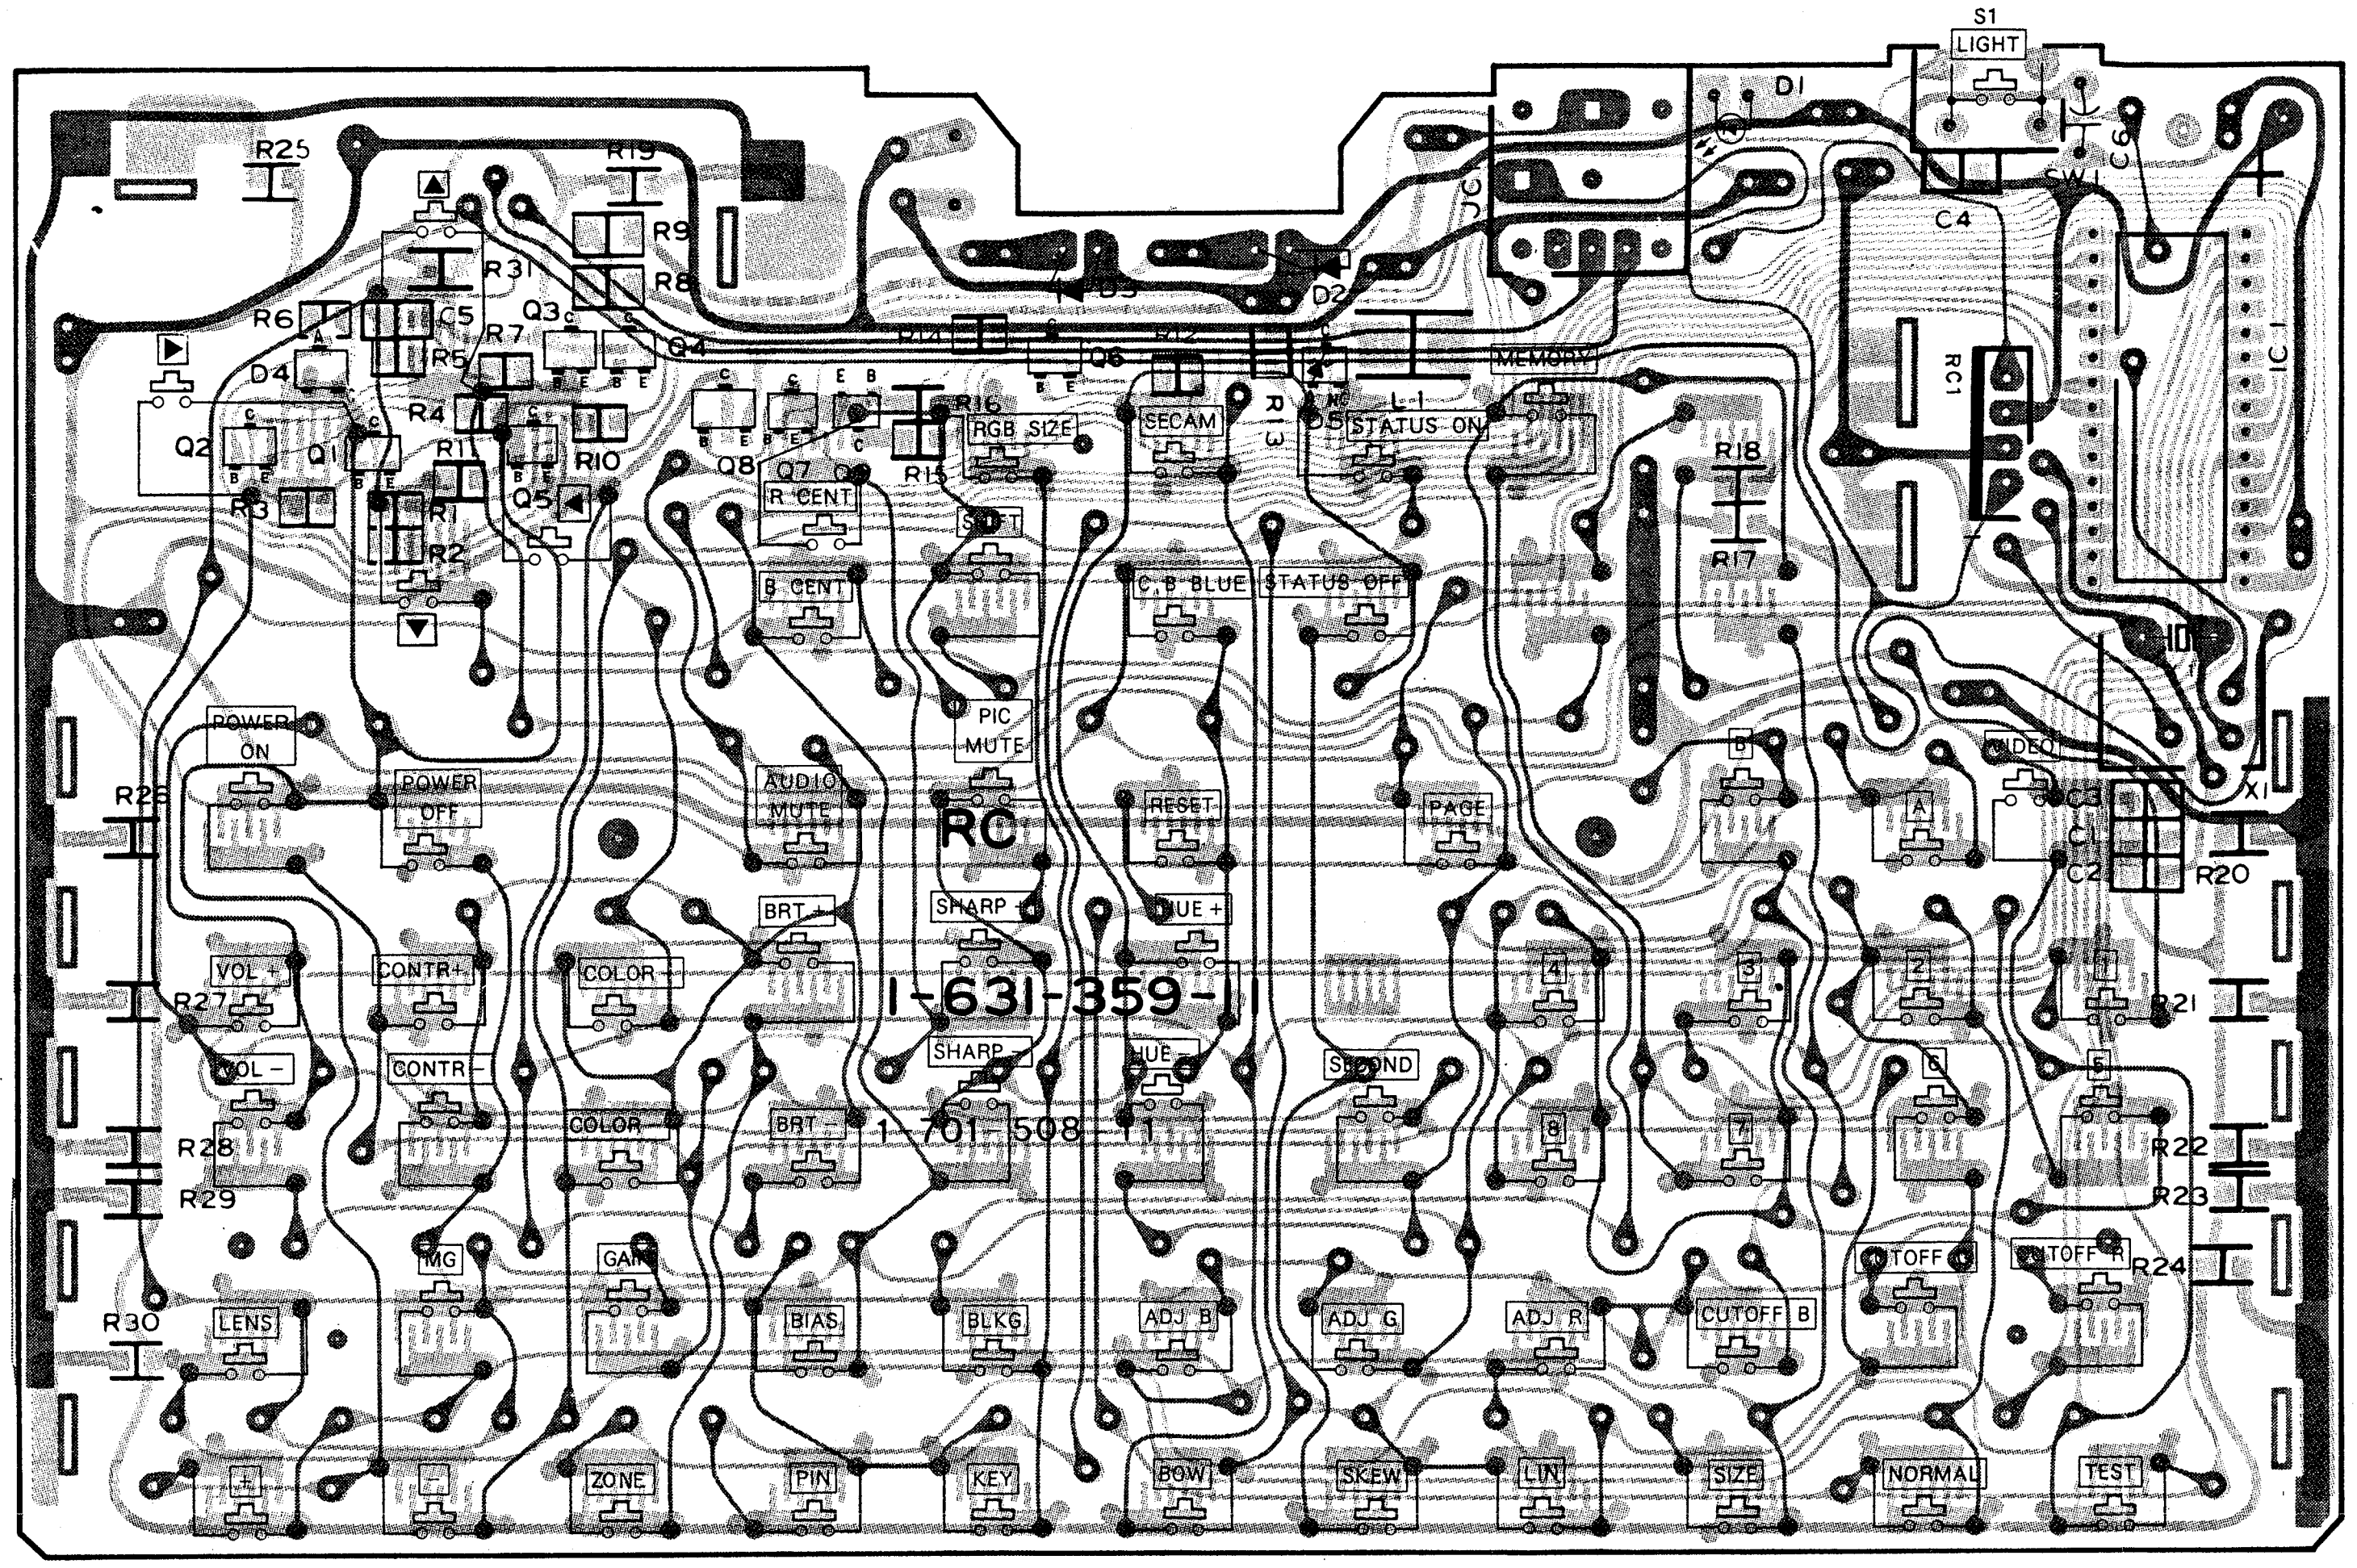
RC
1-631-359-11
1-701-508-11
S1
LIGHT
D1
D2
D3
D4
D5
C4
C5
C6
RC1
IC1
X1
R25
R15
R9
R8
R31
Q3
Q4
R6
R7
R5
R4
R1
R2
R3
R10
Q1
Q2
Q5
Q6
Q7
Q8
R16
RGB SIZE
R13
SECAM
L1
STATUS ON
MEMORY
R18
R17
R CENT
SUB
B CENT
C.B BLUE
STATUS OFF
VIDEO
POWER ON
POWER OFF
AUDIO MUTE
PIC MUTE
RESET
PAGE
C3
C1
C2
R20
R26
VOL +
CONTR+
COLOR
BRT +
SHARP
HUE +
R21
R27
VOL –
CONTR–
COLOR
BRT –
SHARP
HUE –
SECOND
R22
R23
R28
R29
MG
GAIN
CUTOFF G
CUTOFF R
R24
R30
LENS
BIAS
BLKG
ADJ B
ADJ G
ADJ R
CUTOFF B
ZONE
PIN
KEY
BOW
SKEW
LIN
SIZE
NORMAL
TEST

– RCA BOARD –


RC A
1-631-356-11
D5
D6
D7
D8
D9

– RCB BOARD –


RC B
1-631-357-11
D10
D11
D12
D13
D14

– RCC BOARD –


1-631-358-11
D15
D16

– RCD BOARD –


RC D
1-631-493-11
D17
RC D
1-631-493-11
D18

- ▨ : Pattern from the side which enables seeing.
- ▩ : Pattern of the rear side.

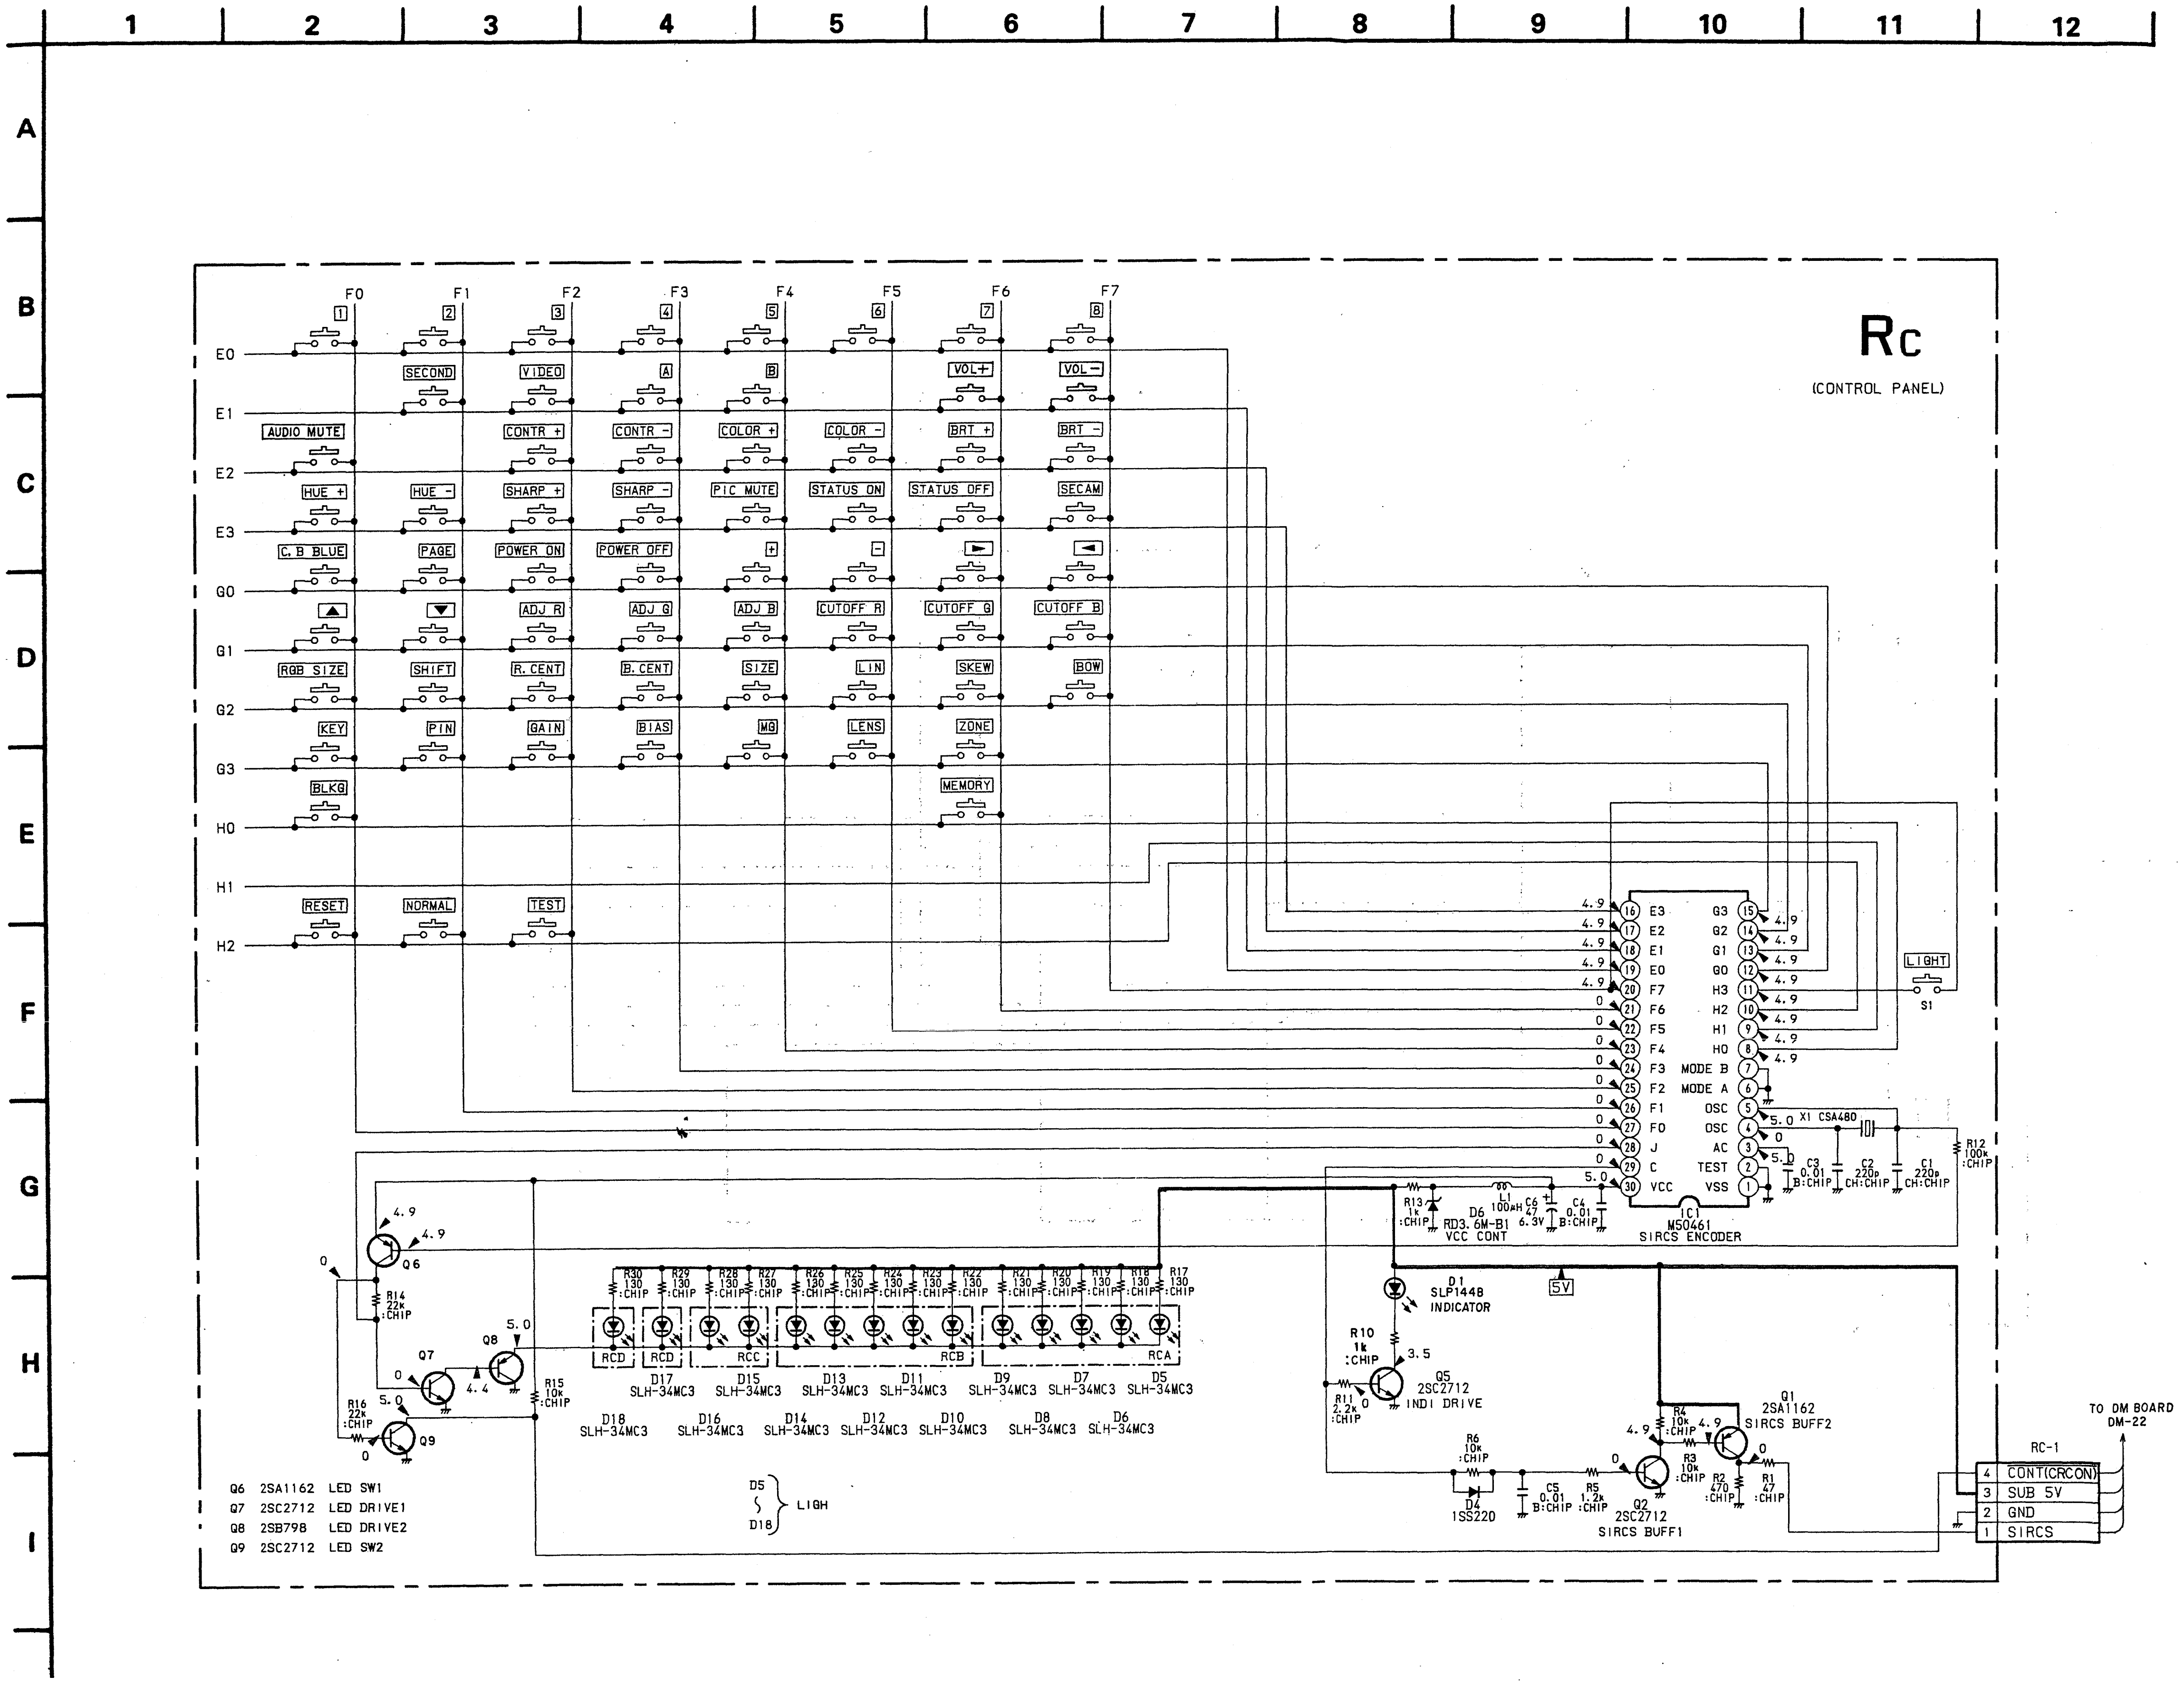
1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
H
I
Rc
(CONTROL PANEL)
F0
F1
F2
F3
F4
F5
F6
F7
E0
E1
E2
E3
G0
G1
G2
G3
H0
H1
H2
1
2
3
4
5
6
7
8
SECOND
VIDEO
A
B
VOL+
VOL−
AUDIO MUTE
CONTR +
CONTR −
COLOR +
COLOR −
BRT +
BRT −
HUE +
HUE −
SHARP +
SHARP −
PIC MUTE
STATUS ON
STATUS OFF
SECAM
C.B BLUE
PAGE
POWER ON
POWER OFF
+
−
ADJ R
ADJ G
ADJ B
CUTOFF R
CUTOFF G
CUTOFF B
RGB SIZE
SHIFT
R.CENT
B.CENT
SIZE
LIN
SKEW
BOW
KEY
PIN
GAIN
BIAS
MB
LENS
ZONE
BLKG
MEMORY
RESET
NORMAL
TEST
LIGHT
S1
IC1
M50461
SIRCS ENCODER
E3
E2
E1
E0
F7
F6
F5
F4
F3
F2
F1
F0
J
C
VCC
G3
G2
G1
G0
H3
H2
H1
H0
MODE B
MODE A
OSC
OSC
AC
TEST
VSS
X1 CSA480
C3 0.01 B:CHIP
C2 220p CH:CHIP
C1 220p CH:CHIP
R12 100k :CHIP
R13 1k :CHIP
D6 RD3.6M-B1 VCC CONT
L1 100μH
C6 47 6.3V
C4 0.01 B:CHIP
D1 SLP1448 INDICATOR
5V
R10 1k :CHIP
Q5 2SC2712 INDI DRIVE
R11 2.2k :CHIP
R6 10k :CHIP
D4 1SS220
C5 0.01 B:CHIP
R5 1.2k :CHIP
Q2 2SC2712 SIRCS BUFF1
R4 10k :CHIP
Q1 2SA1162 SIRCS BUFF2
R3 10k :CHIP
R2 470 :CHIP
R1 47 :CHIP
TO DM BOARD DM-22
RC-1
4 CONT(CRCON)
3 SUB 5V
2 GND
1 SIRCS
Q6
Q7
Q8
Q9
R14 22k :CHIP
R15 10k :CHIP
R16 22k :CHIP
R17–R30 130 :CHIP
RCD
RCC
RCB
RCA
D17 SLH-34MC3
D15 SLH-34MC3
D13 SLH-34MC3
D11 SLH-34MC3
D9 SLH-34MC3
D7 SLH-34MC3
D5 SLH-34MC3
D18 SLH-34MC3
D16 SLH-34MC3
D14 SLH-34MC3
D12 SLH-34MC3
D10 SLH-34MC3
D8 SLH-34MC3
D6 SLH-34MC3
D5 } LIGH
D18
Q6 2SA1162 LED SW1
Q7 2SC2712 LED DRIVE1
Q8 2SB798 LED DRIVE2
Q9 2SC2712 LED SW2

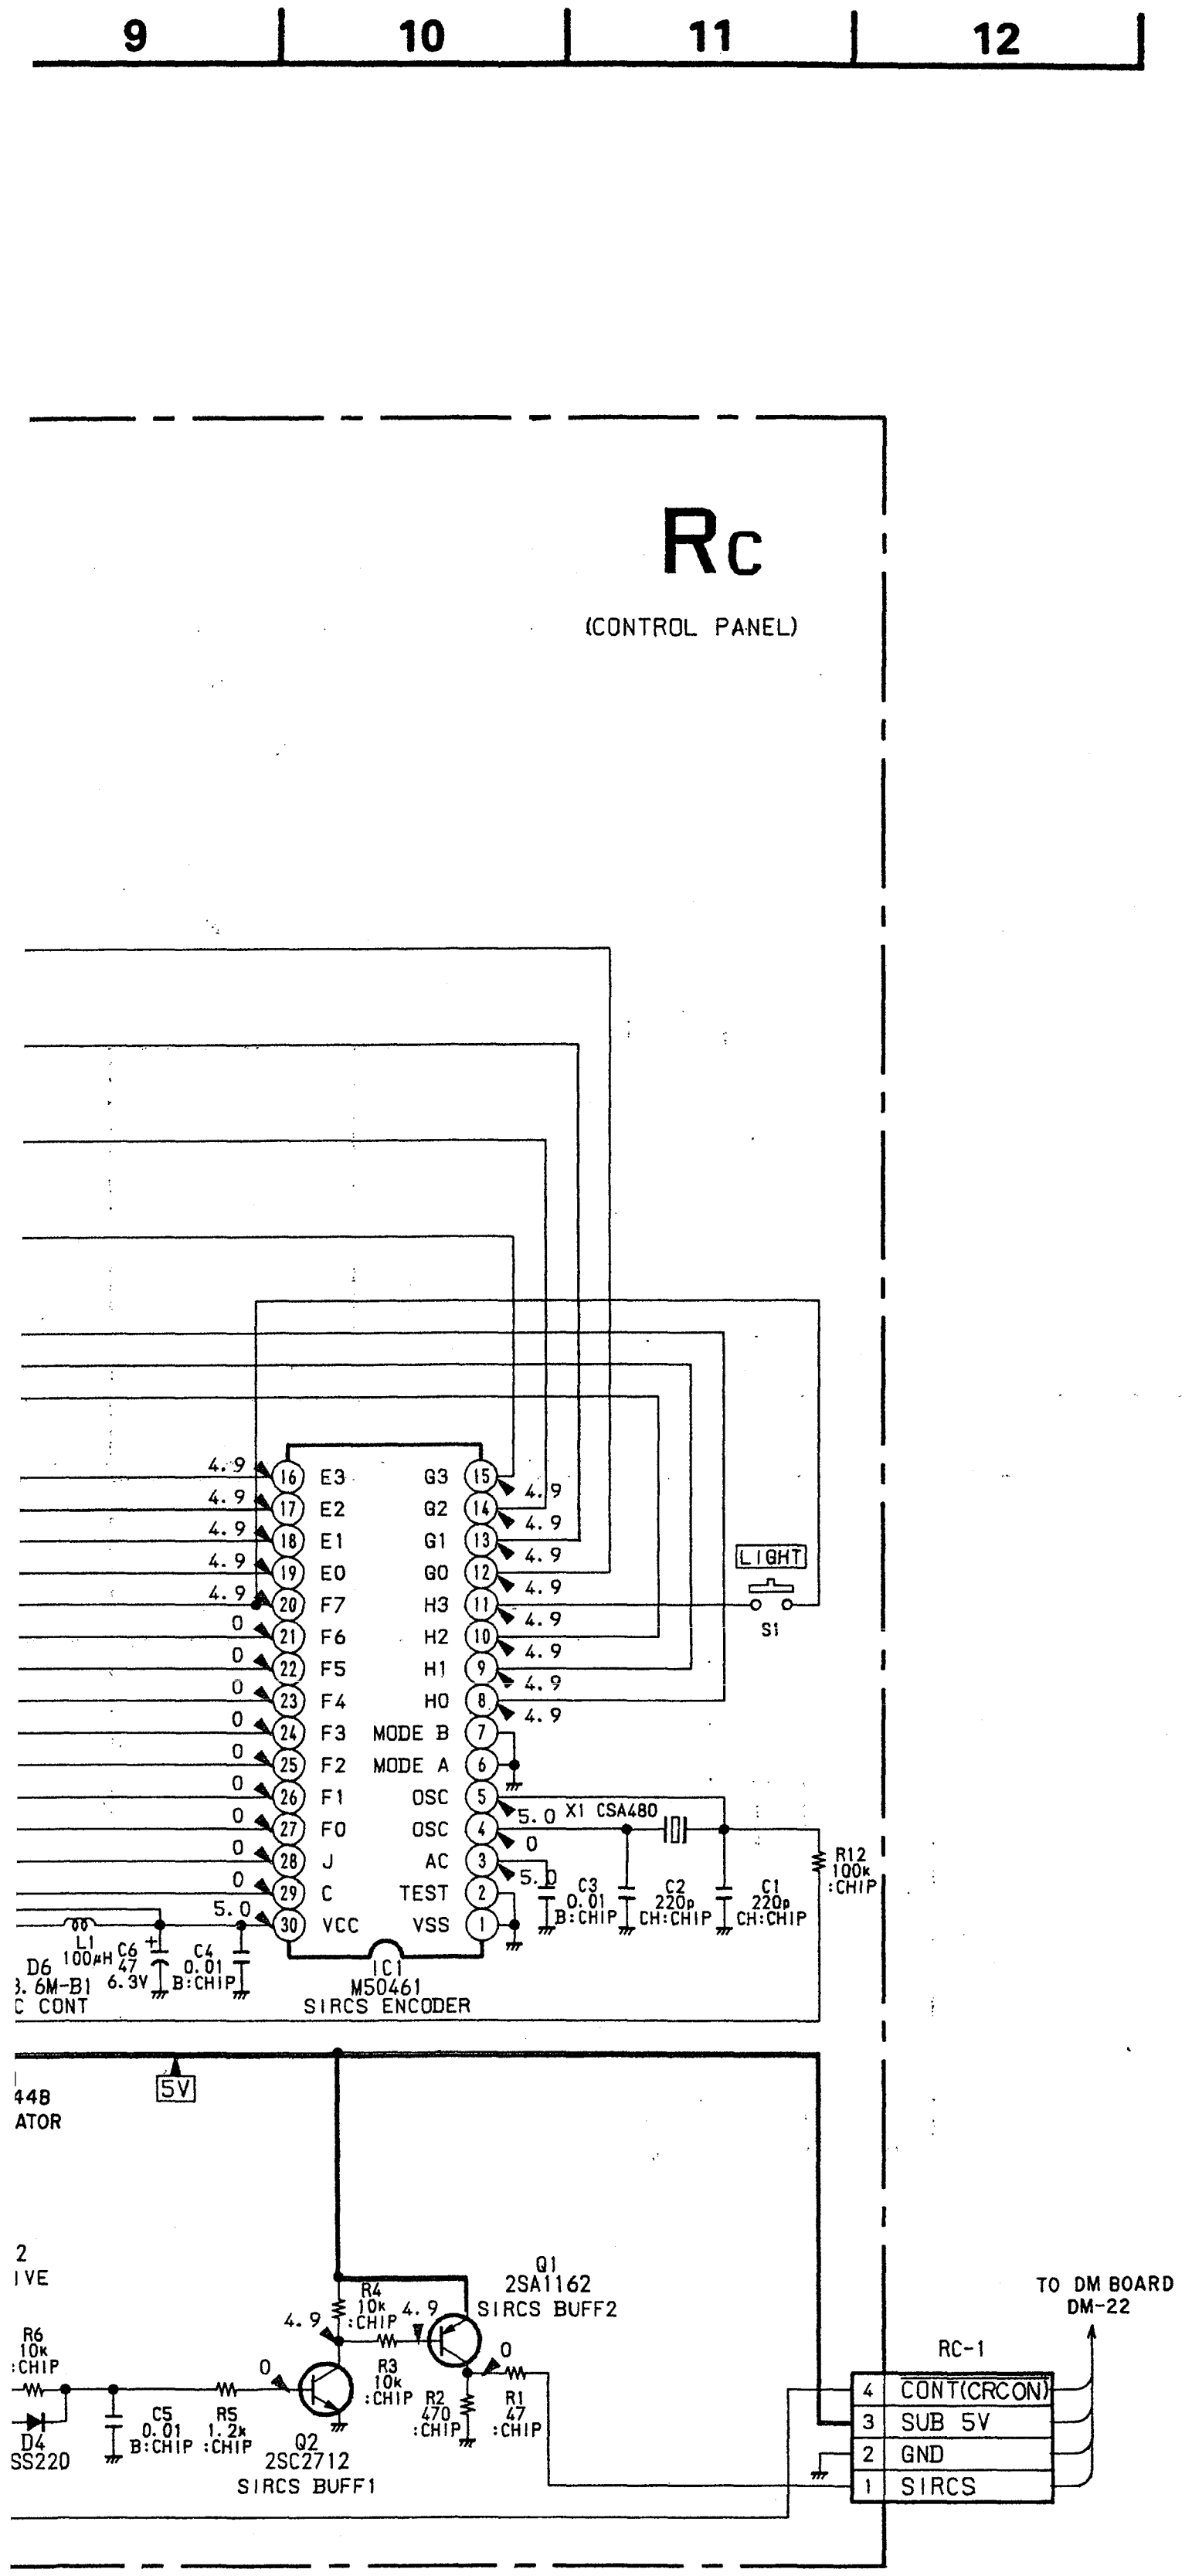
9
10
11
12
Rc
(CONTROL PANEL)
4.9
0
5.0
16 E3
17 E2
18 E1
19 E0
20 F7
21 F6
22 F5
23 F4
24 F3
25 F2
26 F1
27 F0
28 J
29 C
30 VCC
15 G3
14 G2
13 G1
12 G0
11 H3
10 H2
9 H1
8 H0
7 MODE B
6 MODE A
5 OSC
4 OSC
3 AC
2 TEST
1 VSS
LIGHT
S1
X1 CSA480
C3 0.01 B:CHIP
C2 220p CH:CHIP
C1 220p CH:CHIP
R12 100k :CHIP
IC1 M50461
SIRCS ENCODER
L1 100μH
C6 47 6.3V
C4 0.01 B:CHIP
D6
3.6M-B1
C CONT
5V
44B
ATOR
2
IVE
R6 10k :CHIP
D4
SS220
C5 0.01 B:CHIP
R5 1.2k :CHIP
Q2
2SC2712
SIRCS BUFF1
R4 10k :CHIP
R3 10k :CHIP
Q1
2SA1162
SIRCS BUFF2
R2 470 :CHIP
R1 47 :CHIP
RC-1
4 CONT(CRCON)
3 SUB 5V
2 GND
1 SIRCS
TO DM BOARD
DM-22

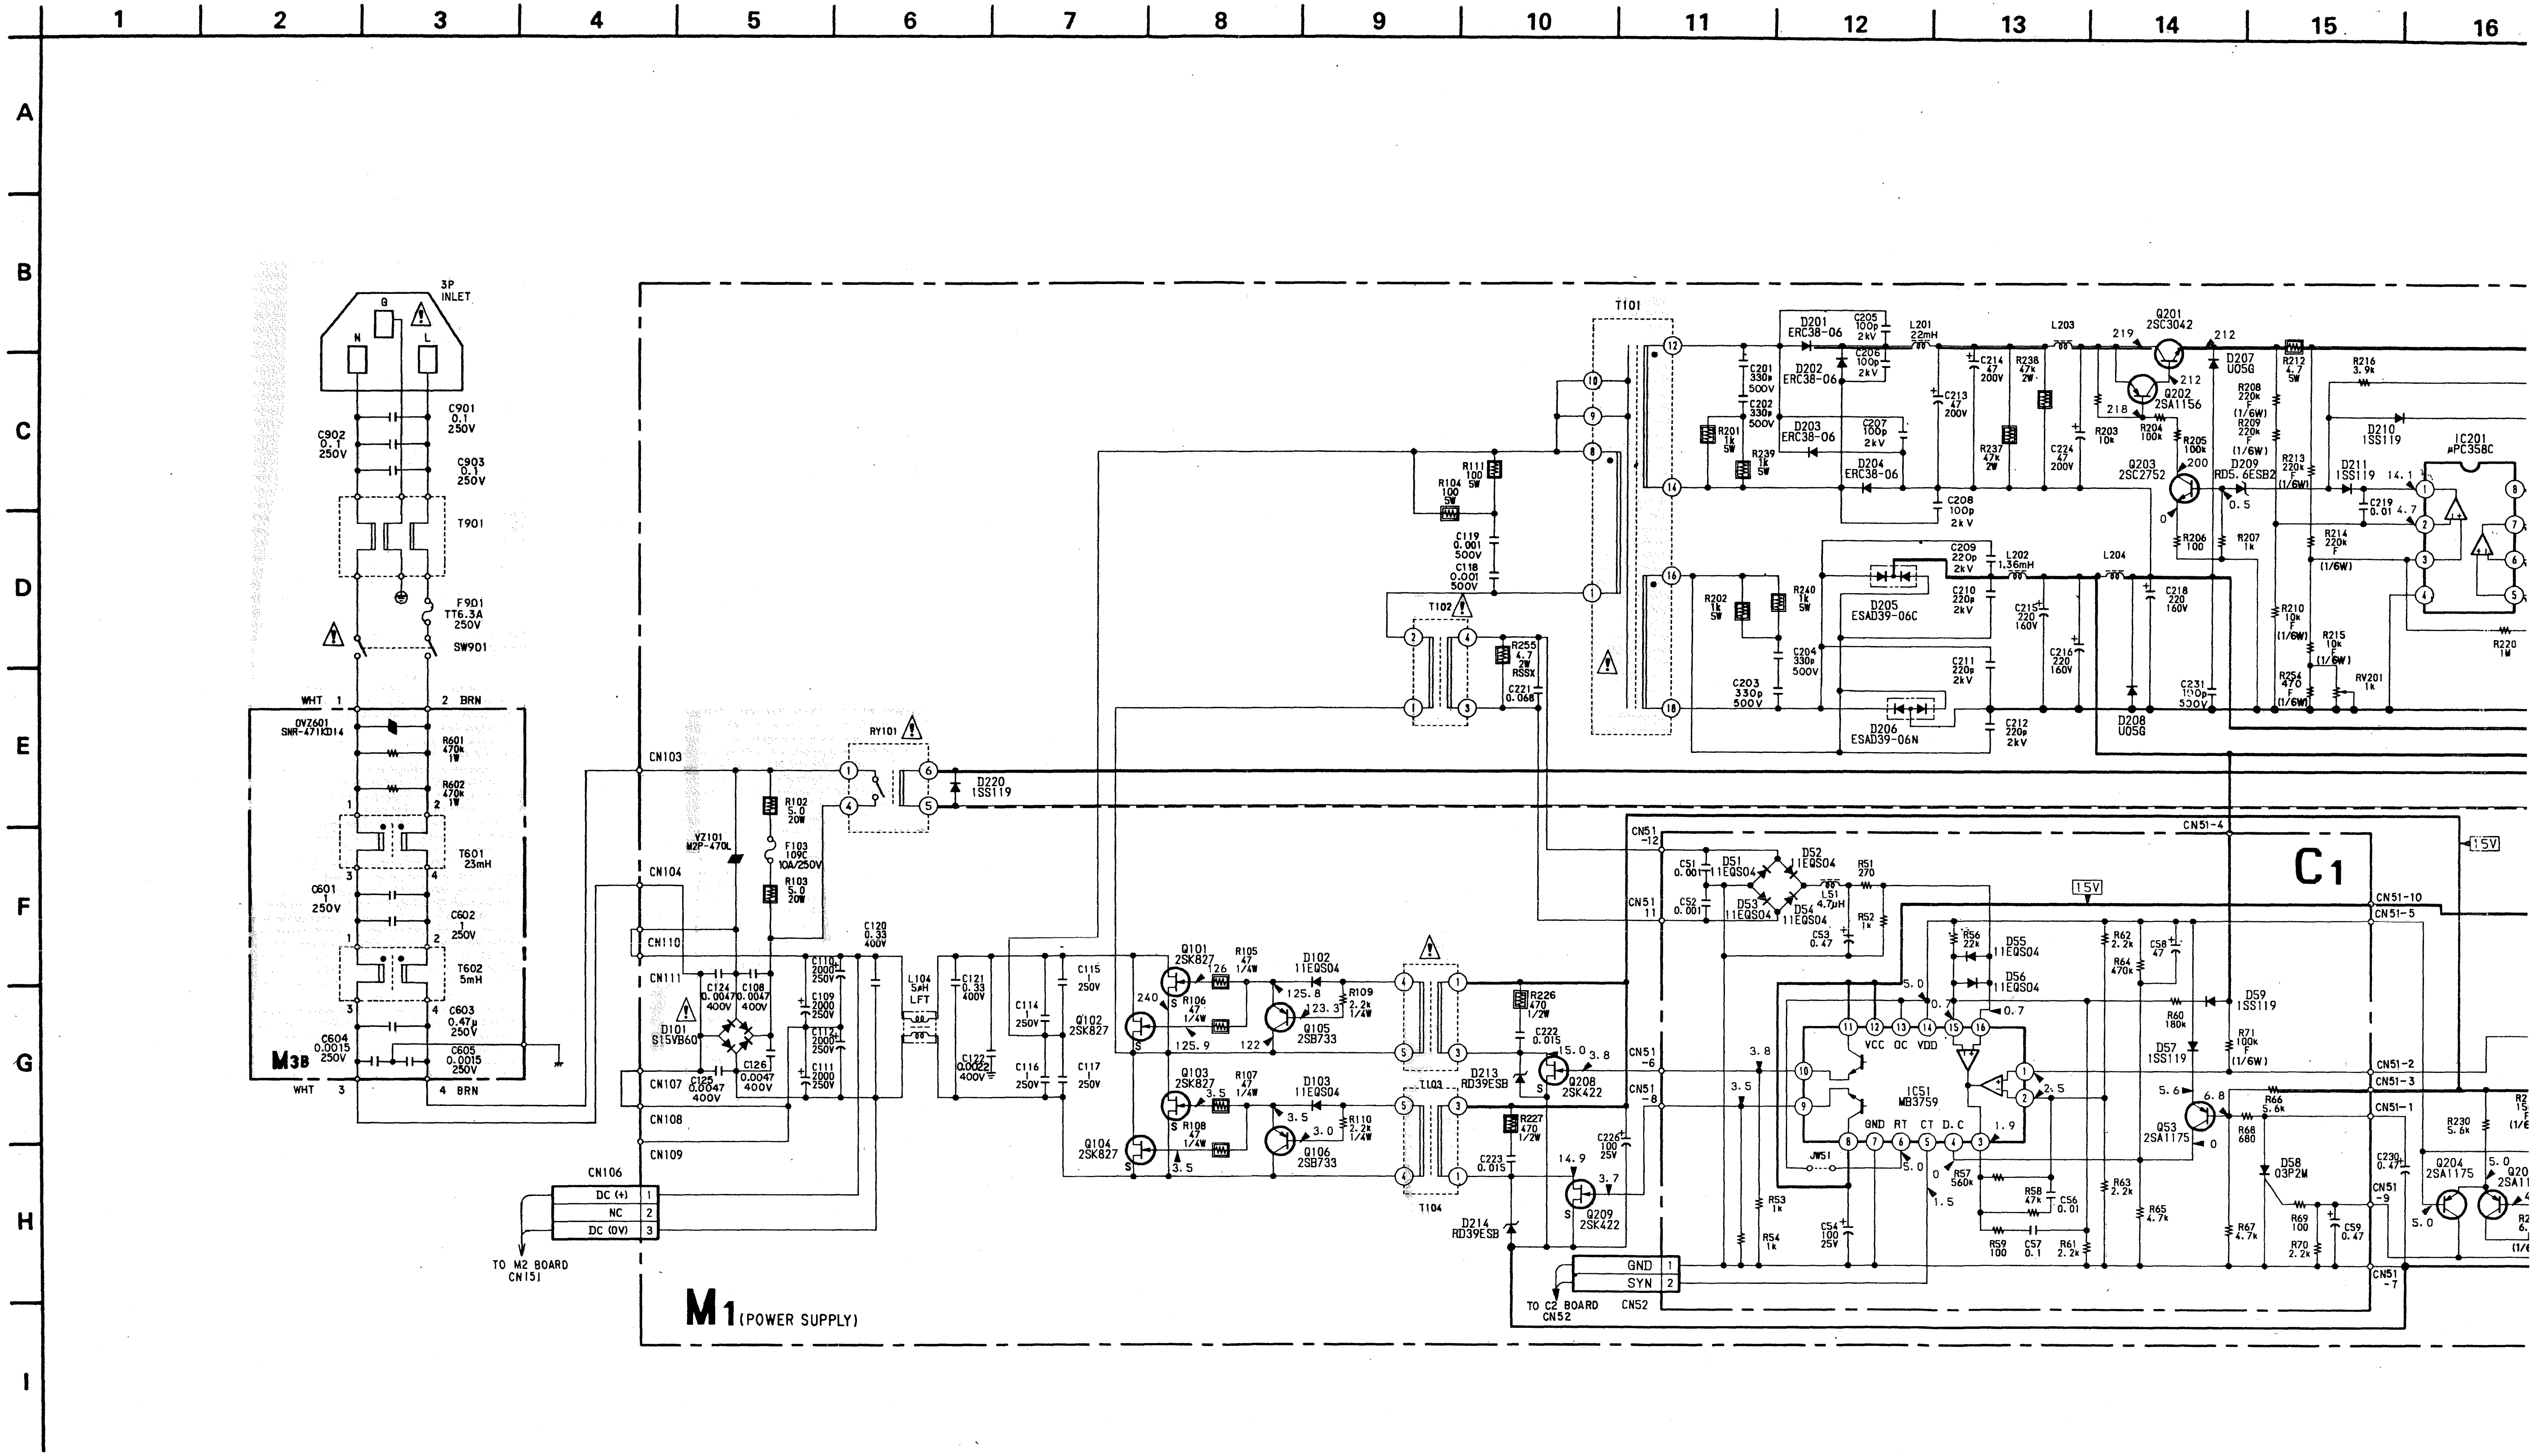
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
3P INLET
G
N
L
C901 0.1 250V
C902 0.1 250V
C903 0.1 250V
T901
F901 T6.3A 250V
SW901
WHT 1
2 BRN
DVZ601 SNR-471KD14
R601 470k 1W
R602 470k 1W
T601 23mH
C601 1 250V
C602 1 250V
T602 5mH
C603 0.47μ 250V
C604 0.0015 250V
C605 0.0015 250V
M3B
WHT 3
4 BRN
CN103
CN104
CN110
CN111
CN107
CN108
CN109
CN106
DC (+) 1
NC 2
DC (0V) 3
TO M2 BOARD CN151
RY101
D220 1SS119
R102 5.0 20W
VZ101 M2P-470L
F103 109C 10A/250V
R103 5.0 20W
D101 S15VB60
C124 0.0047 400V
C108 0.0047 400V
C125 0.0047 400V
C126 0.0047 400V
C110 2000 250V
C109 2000 250V
C112 2000 250V
C111 2000 250V
C120 0.33 400V
L104 5mH LFT
C121 0.33 400V
C122 0.0022 400V
C114 1 250V
C115 1 250V
C116 1 250V
C117 1 250V
Q101 2SK827
Q102 2SK827
Q103 2SK827
Q104 2SK827
R105 47 1/4W
R106 47 1/4W
R107 47 1/4W
R108 47 1/4W
D102 11EQS04
D103 11EQS04
Q105 2SB733
Q106 2SB733
R109 2.2k 1/4W
R110 2.2k 1/4W
240
126
125.8
125.9
123.3
122
3.5
3.0
T103
T104
R226 470 1/2W
C222 0.015
R227 470 1/2W
C223 0.015
D213 RD39ESB
D214 RD39ESB
Q208 2SK422
Q209 2SK422
15.0
3.8
14.9
3.7
C226 100 25V
M1 (POWER SUPPLY)
T102
R255 4.7 2W RSSX
C221 0.068
R111 100 5W
R104 100 5W
C119 0.001 500V
C118 0.001 500V
T101
D201 ERC38-06
D202 ERC38-06
D203 ERC38-06
D204 ERC38-06
C201 330p 500V
C202 330p 500V
C203 330p 500V
C204 330p 500V
C205 100p 2kV
C206 100p 2kV
C207 100p 2kV
C208 100p 2kV
R201 1k 5W
R239 1k 5W
R202 1k 5W
R240 1k 5W
L201 22mH
L202 1.36mH
L203
L204
C213 47 200V
C214 47 200V
C224 47 200V
R237 47k 2W
R238 47k 2W
C209 220p 2kV
C210 220p 2kV
C211 220p 2kV
C212 220p 2kV
D205 ESAD39-06C
D206 ESAD39-06N
C215 220 160V
C216 220 160V
C218 220 160V
D208 U05G
C231 150p 530V
Q201 2SC3042
Q202 2SA1156
Q203 2SC2752
219
212
218
200
0.5
R203 10k
R204 100k
R205 100k
R206 100
R207 1k
D207 U05G
D209 RD5.6ESB2
R208 220k F (1/6W)
R209 220k F (1/6W)
R212 4.7 5W
R213 220k F (1/6W)
R214 220k F (1/6W)
R210 10k F (1/6W)
R215 10k F (1/6W)
R254 470 (1/6W)
RV201 1k
R216 3.9k
D210 1SS119
D211 1SS119
C219 0.01
14.1
4.7
IC201 μPC358C
R220 1M
CN51-4
15V
C1
CN51 -12
CN51 11
C51 0.001
C52 0.001
D51 11EQS04
D52 11EQS04
D53 11EQS04
D54 11EQS04
L51 4.7μH
R51 270
R52 1k
C53 0.47
R56 22k
D55 11EQS04
D56 11EQS04
R62 2.2k
R64 470k
C58 47
CN51-10
CN51-5
IC51 MB3759
VCC
OC
VDD
GND
RT
CT
D.C
JW51
5.0
0.7
1.9
2.5
1.5
R57 560k
R58 47k
C56 0.01
R53 1k
R54 1k
C54 100 25V
R59 100
C57 0.1
R61 2.2k
R63 2.2k
R65 4.7k
D59 1SS119
D57 1SS119
R60 180k
R71 100k F (1/6W)
Q53 2SA1175
5.6
6.8
R66 5.6k
R68 680
D58 03P2M
R67 4.7k
R69 100
R70 2.2k
C59 0.47
CN51-2
CN51-3
CN51-1
CN51 -9
CN51 -7
CN51 -6
CN51 -8
C230 0.47
Q204 2SA1175
R230 5.6k
GND 1
SYN 2
TO C2 BOARD CN52
CN52

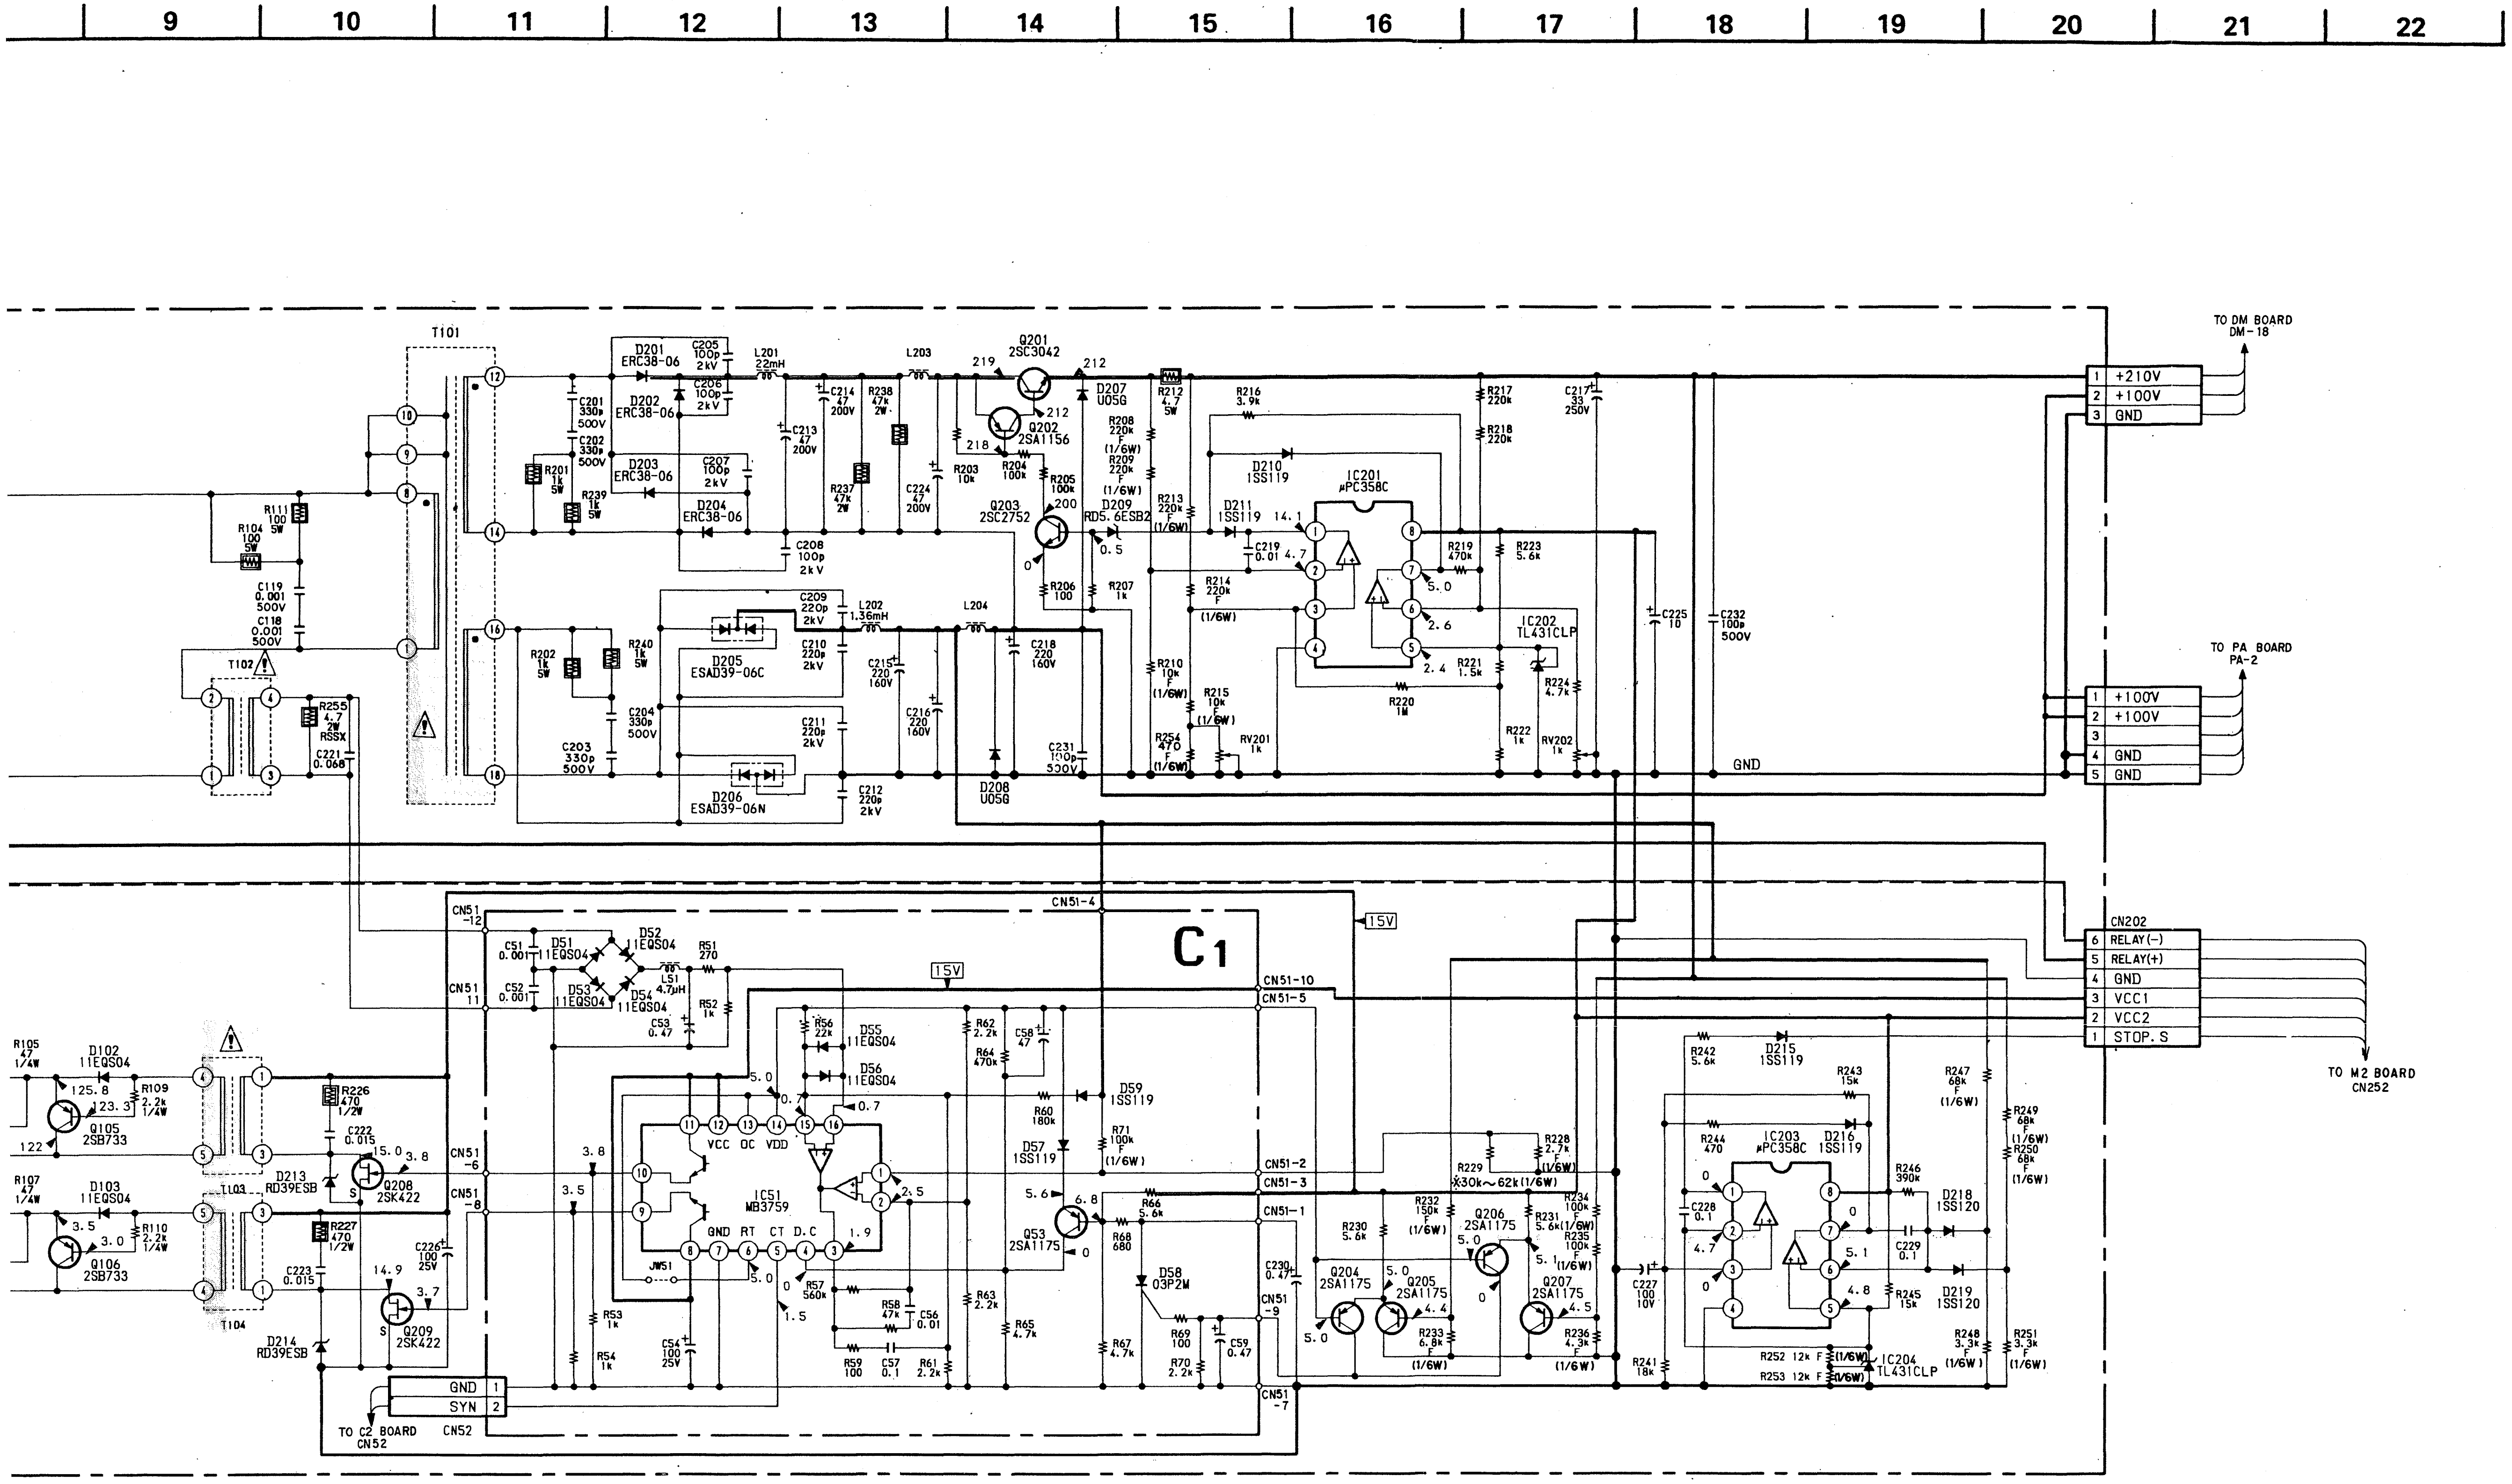
9
10
11
12
13
14
15
16
17
18
19
20
21
22
T101
T102
T103
T104
D201 ERC38-06
D202 ERC38-06
D203 ERC38-06
D204 ERC38-06
D205 ESAD39-06C
D206 ESAD39-06N
L201 22mH
L202 1.36mH
L203
L204
Q201 2SC3042
Q202 2SA1156
Q203 2SC2752
D207 U05G
D208 U05G
D209 RD5.6ESB2
D210 1SS119
D211 1SS119
IC201 μPC358C
IC202 TL431CLP
RV201 1k
RV202 1k
R220 1M
GND
TO DM BOARD DM-18
+210V
+100V
GND
TO PA BOARD PA-2
+100V
+100V
GND
GND
C1
CN51
CN202
RELAY(-)
RELAY(+)
GND
VCC1
VCC2
STOP.S
TO M2 BOARD CN252
IC51 MB3759
VCC
OC
VDD
GND
RT
CT
D.C
D51 11EQS04
D52 11EQS04
D53 11EQS04
D54 11EQS04
D55 11EQS04
D56 11EQS04
D57 1SS119
D58 03P2M
D59 1SS119
Q53 2SA1175
Q105 2SB733
Q106 2SB733
D102 11EQS04
D103 11EQS04
D213 RD39ESB
D214 RD39ESB
Q208 2SK422
Q209 2SK422
Q204 2SA1175
Q205 2SA1175
Q206 2SA1175
Q207 2SA1175
R229 30k~62k (1/6W)
IC203 μPC358C
IC204 TL431CLP
D215 1SS119
D216 1SS119
D218 1SS120
D219 1SS120
15V
JW51
GND
SYN
TO C2 BOARD CN52
CN52

M1	IC201	µ PC358	CMP
	202	TL431C	2.5V REF VOLT
	203	µ PC358C	AMP
	204	TL431C	5.0V REF VOLT
	Q101	2SK827	CONV
	102	2SK827	CONV
	103	2SK827	CONV
	104	2SK827	CONV
	105	2SB733	SPEED UP
	106	2SB733	SPEED UP
	201	2SC3042	210V REG
	202	2SA1156	210V REG
	203	2SC2752	210V REG
	204	2SA1175	0V
	205	2SA1175	0V
	206	2SA1175	0V
	207	2SA1175	0V
	208	2SK422	DRIVE
	209	2SK422	DRIVE
	D101	S15VB60	AC RECT
	102	11EQS04	RECT
	103	11EQS04	RECT
	201	ERC33-06	210V RECT
	202	ERC33-06	210V RECT
	203	ERC33-06	210V RECT
	204	ERC33-06	210V RECT
	205	ESAD39-06C	100V RECT
	206	ESAD39-06N	100V RECT
	207	U05G	CLAMP
	208	U05G	CLAMP
	209	RD5.6ESB2	CORRECT
	210	1SS119	DC SHIFT
	211	1SS119	DC SHIFT
	213	RD39ESB	CLAMP
	214	RD39ESB	CLAMP
	215	1SS119	DC SHIFT
	216	1SS119	DC SHIFT
	218	1SS119	PROT
	219	1SS119	PROT
	220	1SS119	PROT

C1	IC051	MB3759	CONTROL
	Q053	2SA1175	AMP
	D051	11EQS04	RECT
	052	11EQS04	RECT
	053	11EQS04	RECT
	054	11EQS04	RECT
	055	11EQS04	CLAMP
	056	11EQS04	CLAMP
	057	1SS119	PROT
	058	03P2M	OFF
	059	1SS119	PROT

- M1 BOARD -

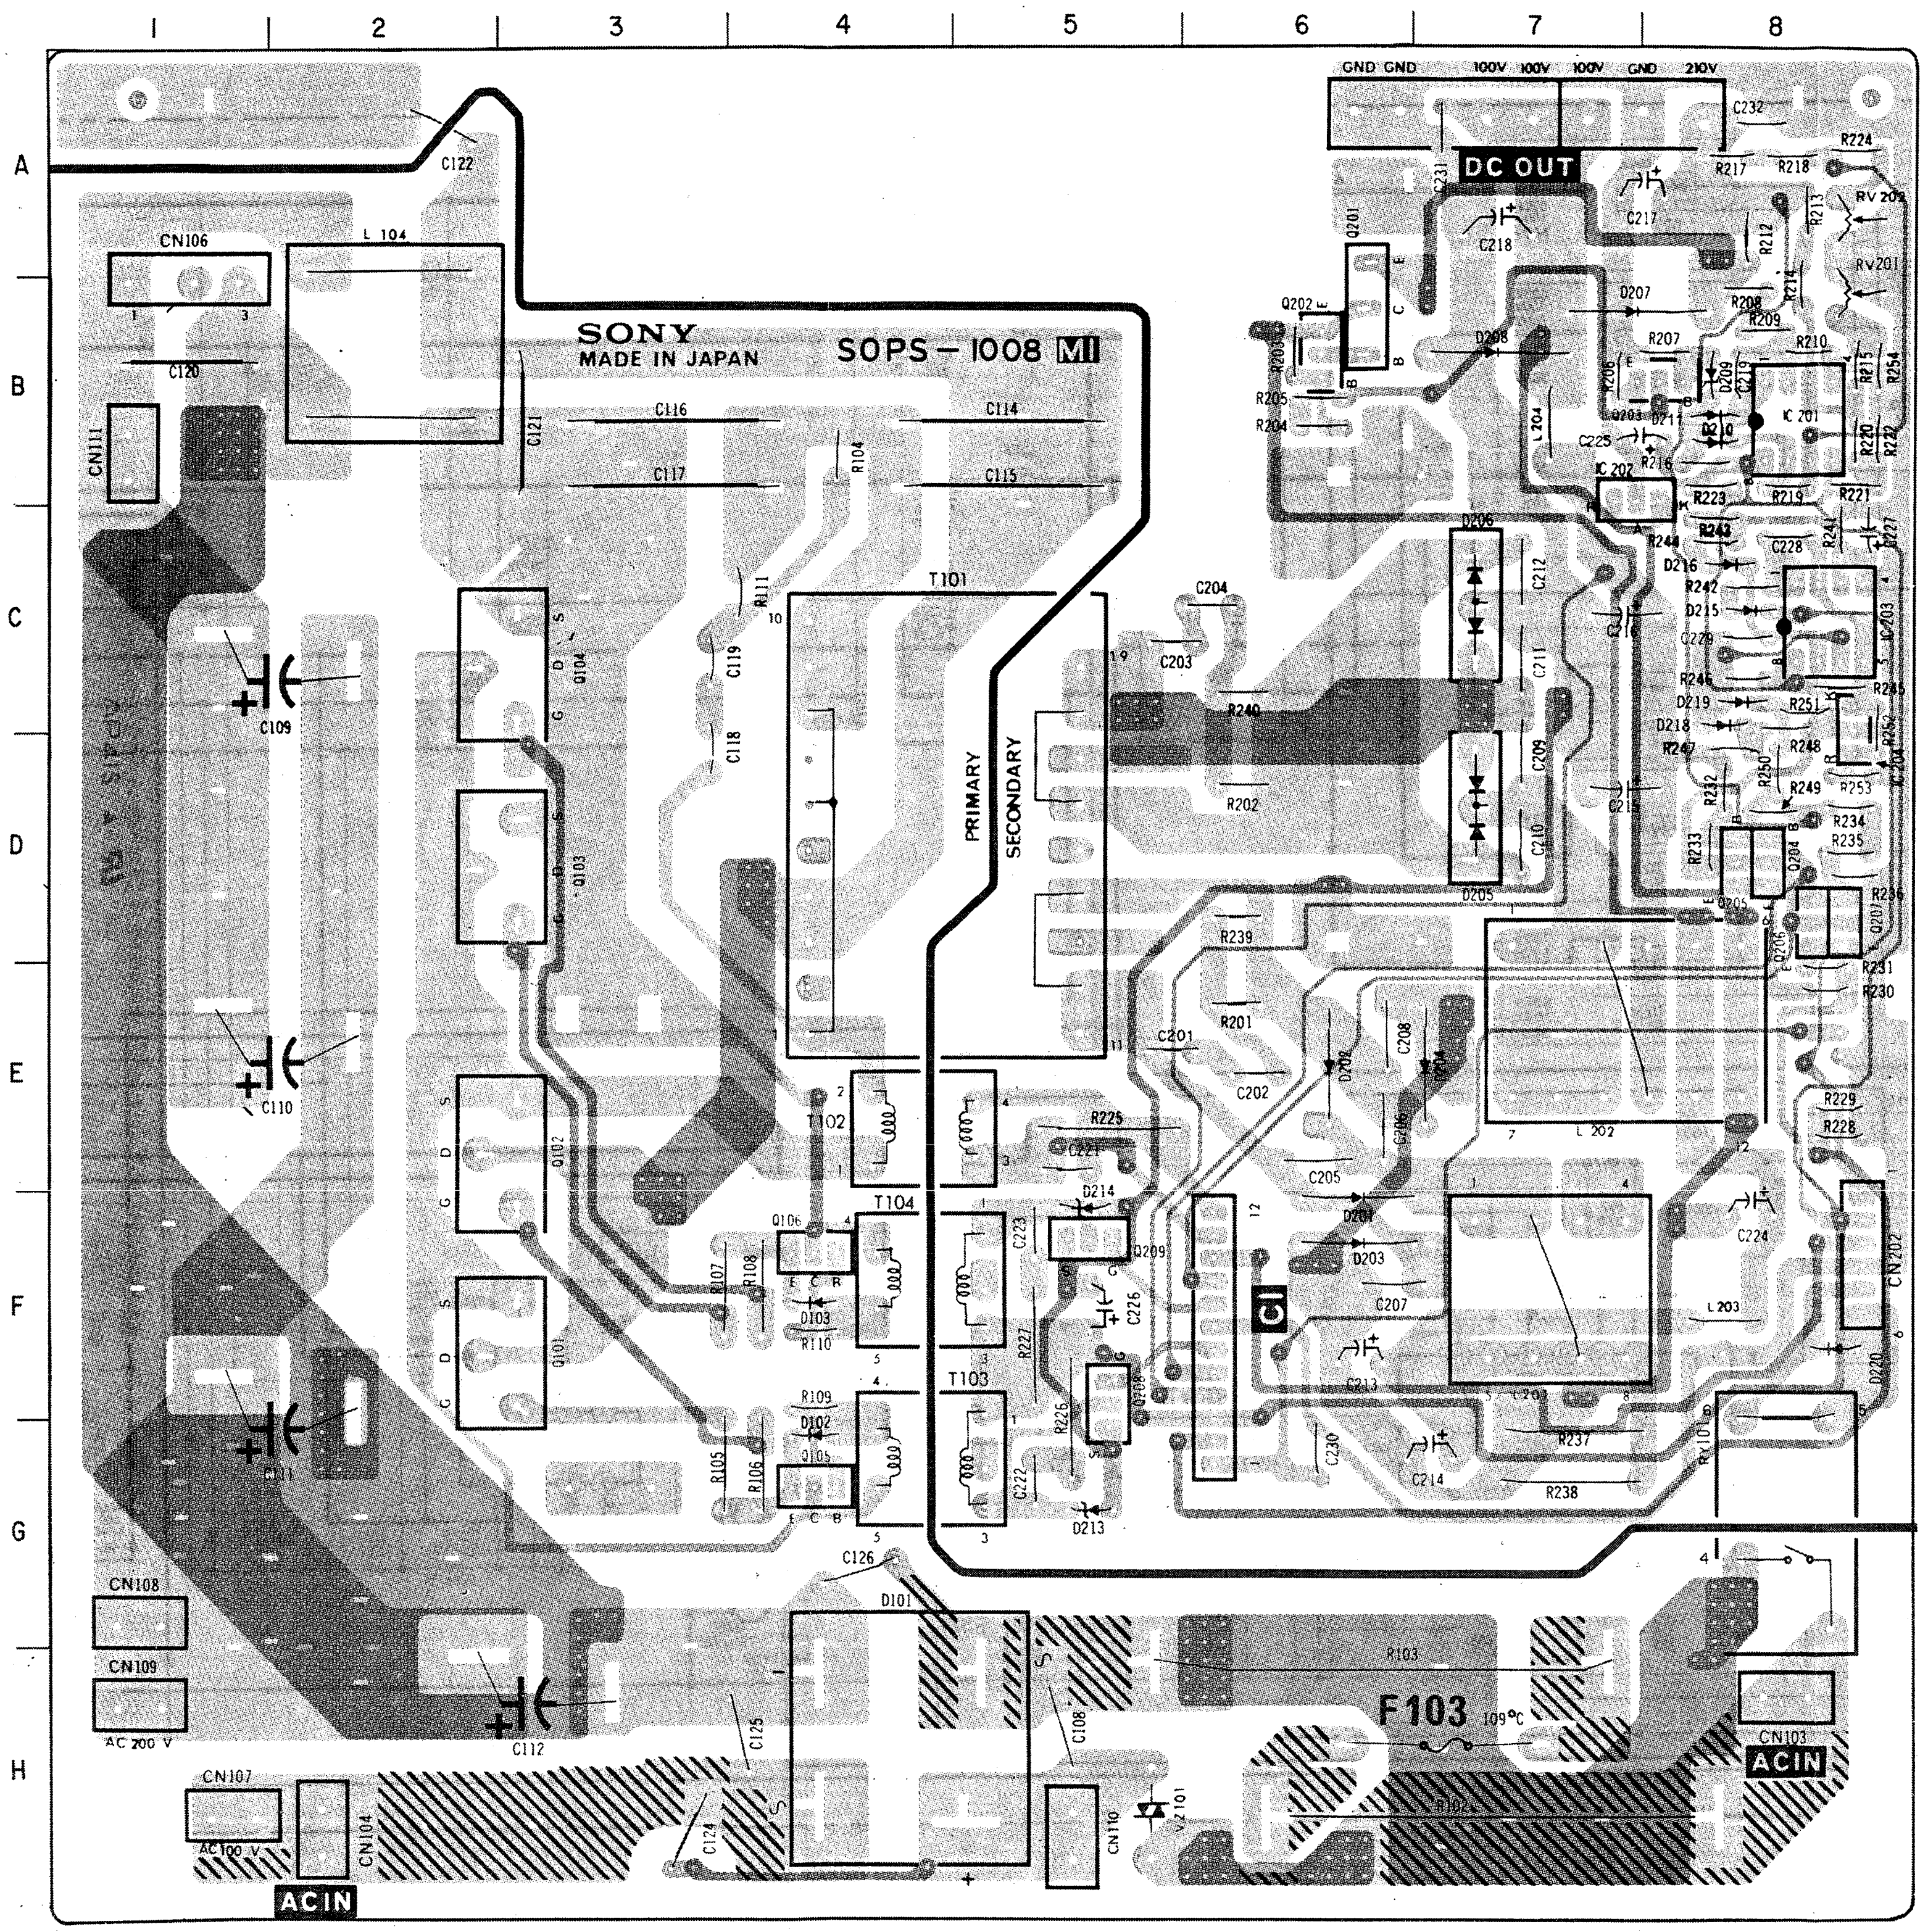
1
2
3
4
5
6
7
8
A
B
C
D
E
F
G
H
GND GND 100V 100V 100V GND 210V
DC OUT
SONY
MADE IN JAPAN
SOPS - 1008 MI
PRIMARY
SECONDARY
CN106
L 104
C120
C121
C122
CN111
C116
C117
C114
C115
C109
C110
C111
C112
C118
C119
Q104
Q103
Q102
Q101
R104
R111
T101
T102
T103
T104
Q106
Q105
R105
R106
R107
R108
R109
R110
D102
D103
C126
D101
C124
C125
C108
CN108
CN109
AC 200 V
CN107
AC100 V
CN104
ACIN
CN110
VZ101
F103
109°C
R103
R102
CN103
ACIN
Q201
Q202
Q203
C217
C218
C232
R224
R217
R218
RV202
RV201
R212
R213
R214
D207
D208
R207
R208
R209
R210
IC 201
IC 202
R203
R204
R205
R215
R216
R219
R220
R221
R223
R241
R242
R243
R244
D206
D205
D209
D210
D211
D215
D216
D218
D219
C204
C203
C212
C209
C210
C211
C215
C216
C225
C228
C229
IC203
R240
R202
R239
R201
C201
C202
D202
D204
C208
C206
R225
C221
D214
C223
Q209
C226
C205
D201
D203
C207
L 202
L 203
C224
R229
R228
R230
R231
R232
R233
R234
R235
R236
R245
R246
R247
R248
R249
R250
R251
R252
R253
Q204
Q205
Q206
Q207
IC 204
CN202
D220
R227
R226
Q208
C222
D213
C213
C214
C230
C220
R237
R238
RY101
C1

M1 BOARD

IC	
IC201	B - 8
IC202	B - 7
IC203	C - 8
IC204	D - 8

TRANSISTOR	
Q101	F - 3
Q102	E - 3
Q103	D - 3
Q104	C - 3
Q105	G - 4
Q106	F - 4
Q201	B - 6
Q202	B - 6
Q203	B - 8
Q204	D - 8
Q205	D - 8
Q206	D - 8
Q207	D - 8
Q208	F - 5
Q209	F - 5

DIODE	
D101	H - 4
D102	G - 4
D103	F - 4
D201	F - 6
D202	E - 6
D203	F - 6
D204	E - 7
D205	D - 7
D206	C - 7
D207	B - 7
D208	B - 7
D209	B - 8
D210	B - 8
D211	B - 8
D213	G - 5
D214	F - 5
D215	C - 8
D216	C - 8
D218	C - 8
D219	C - 8
D220	F - 8

ADJUSTING ELEMENT	
RV201	B - 8
RV202	A - 8

M1 **M3B** **C1** [POWER SUPPLY]

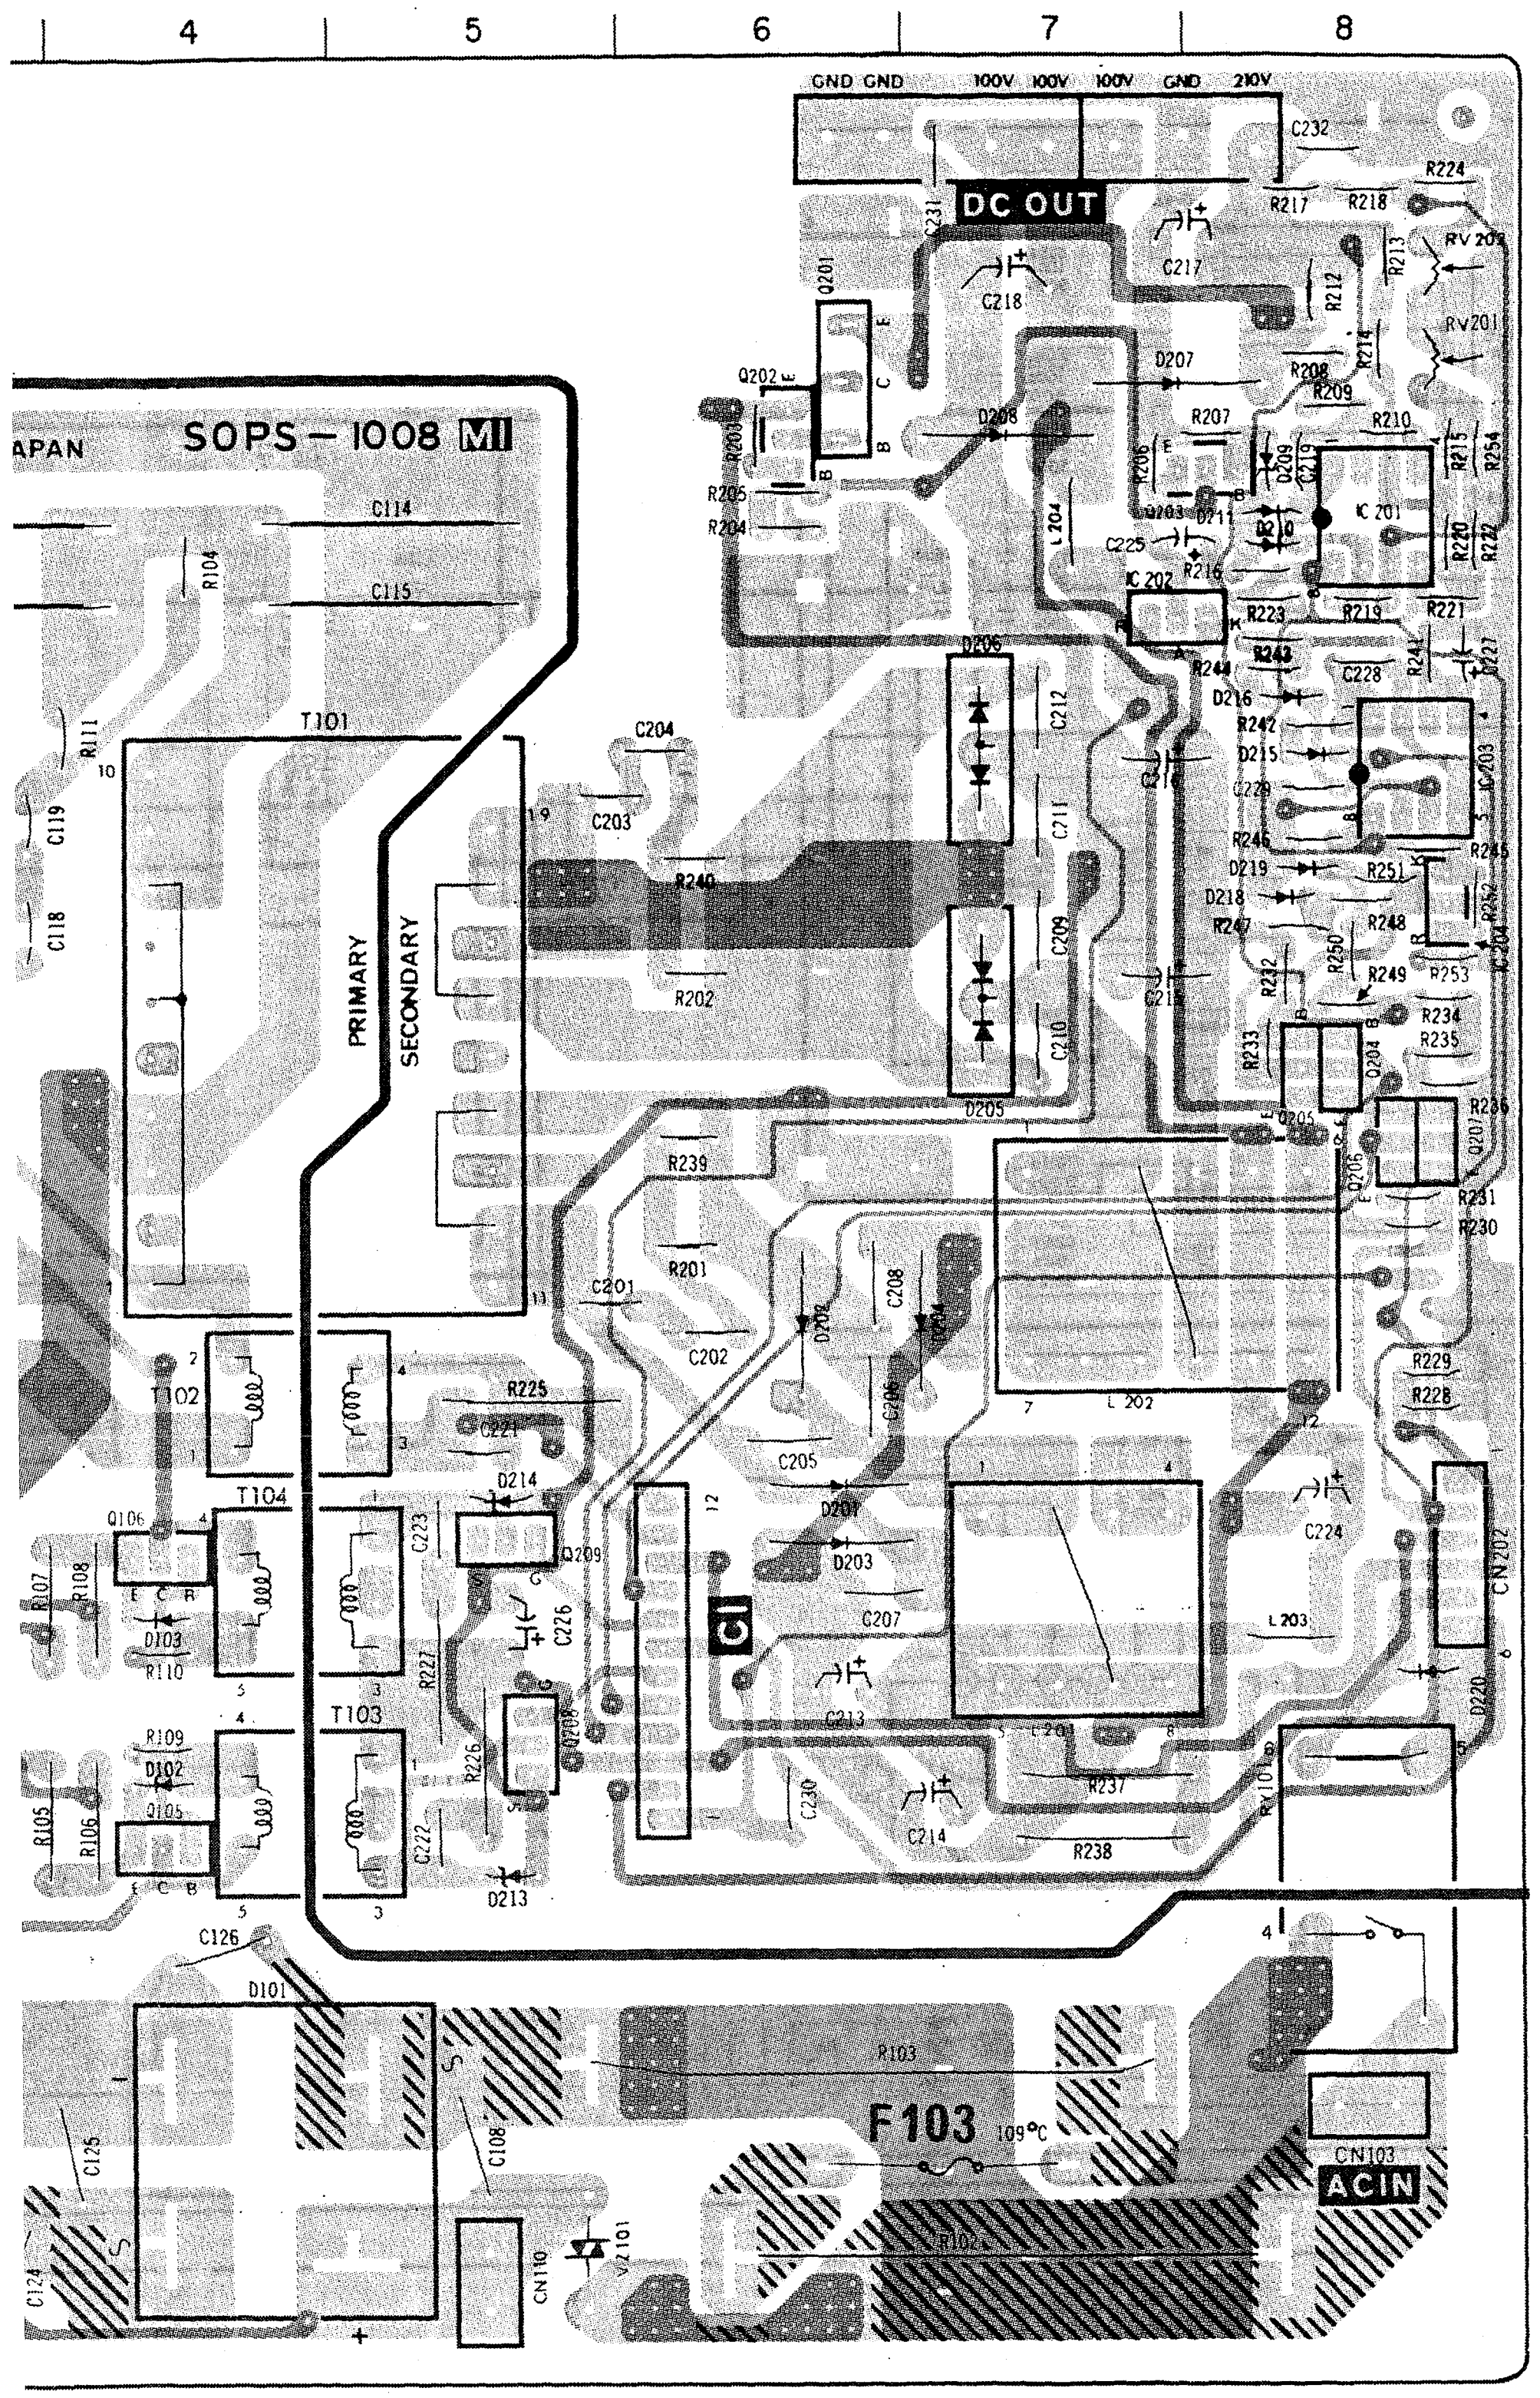
4
5
6
7
8
GND GND 100V 100V 100V GND 210V
DC OUT
SOPS-1008 MI
APAN
PRIMARY
SECONDARY
T101
T102
T103
T104
IC201
IC202
IC203
IC204
RV201
RV202
F103
109°C
CN103
ACIN
CN202
CN110
L202
L203
C1

M1 BOARD

IC	
IC201	B - 8
IC202	B - 7
IC203	C - 8
IC204	D - 8
TRANSISTOR	
Q101	F - 3
Q102	E - 3
Q103	D - 3
Q104	C - 3
Q105	G - 4
Q106	F - 4
Q201	B - 6
Q202	B - 6
Q203	B - 8
Q204	D - 8
Q205	D - 8
Q206	D - 8
Q207	D - 8
Q208	F - 5
Q209	F - 5
DIODE	
D101	H - 4
D102	G - 4
D103	F - 4
D201	F - 6
D202	E - 6
D203	F - 6
D204	E - 7
D205	D - 7
D206	C - 7
D207	B - 7
D208	B - 7
D209	B - 8
D210	B - 8
D211	B - 8
D213	G - 5
D214	F - 5
D215	C - 8
D216	C - 8
D218	C - 8
D219	C - 8
D220	F - 8
ADJUSTING ELEMENT	
RV201	B - 8
RV202	A - 8

- M3B BOARD -

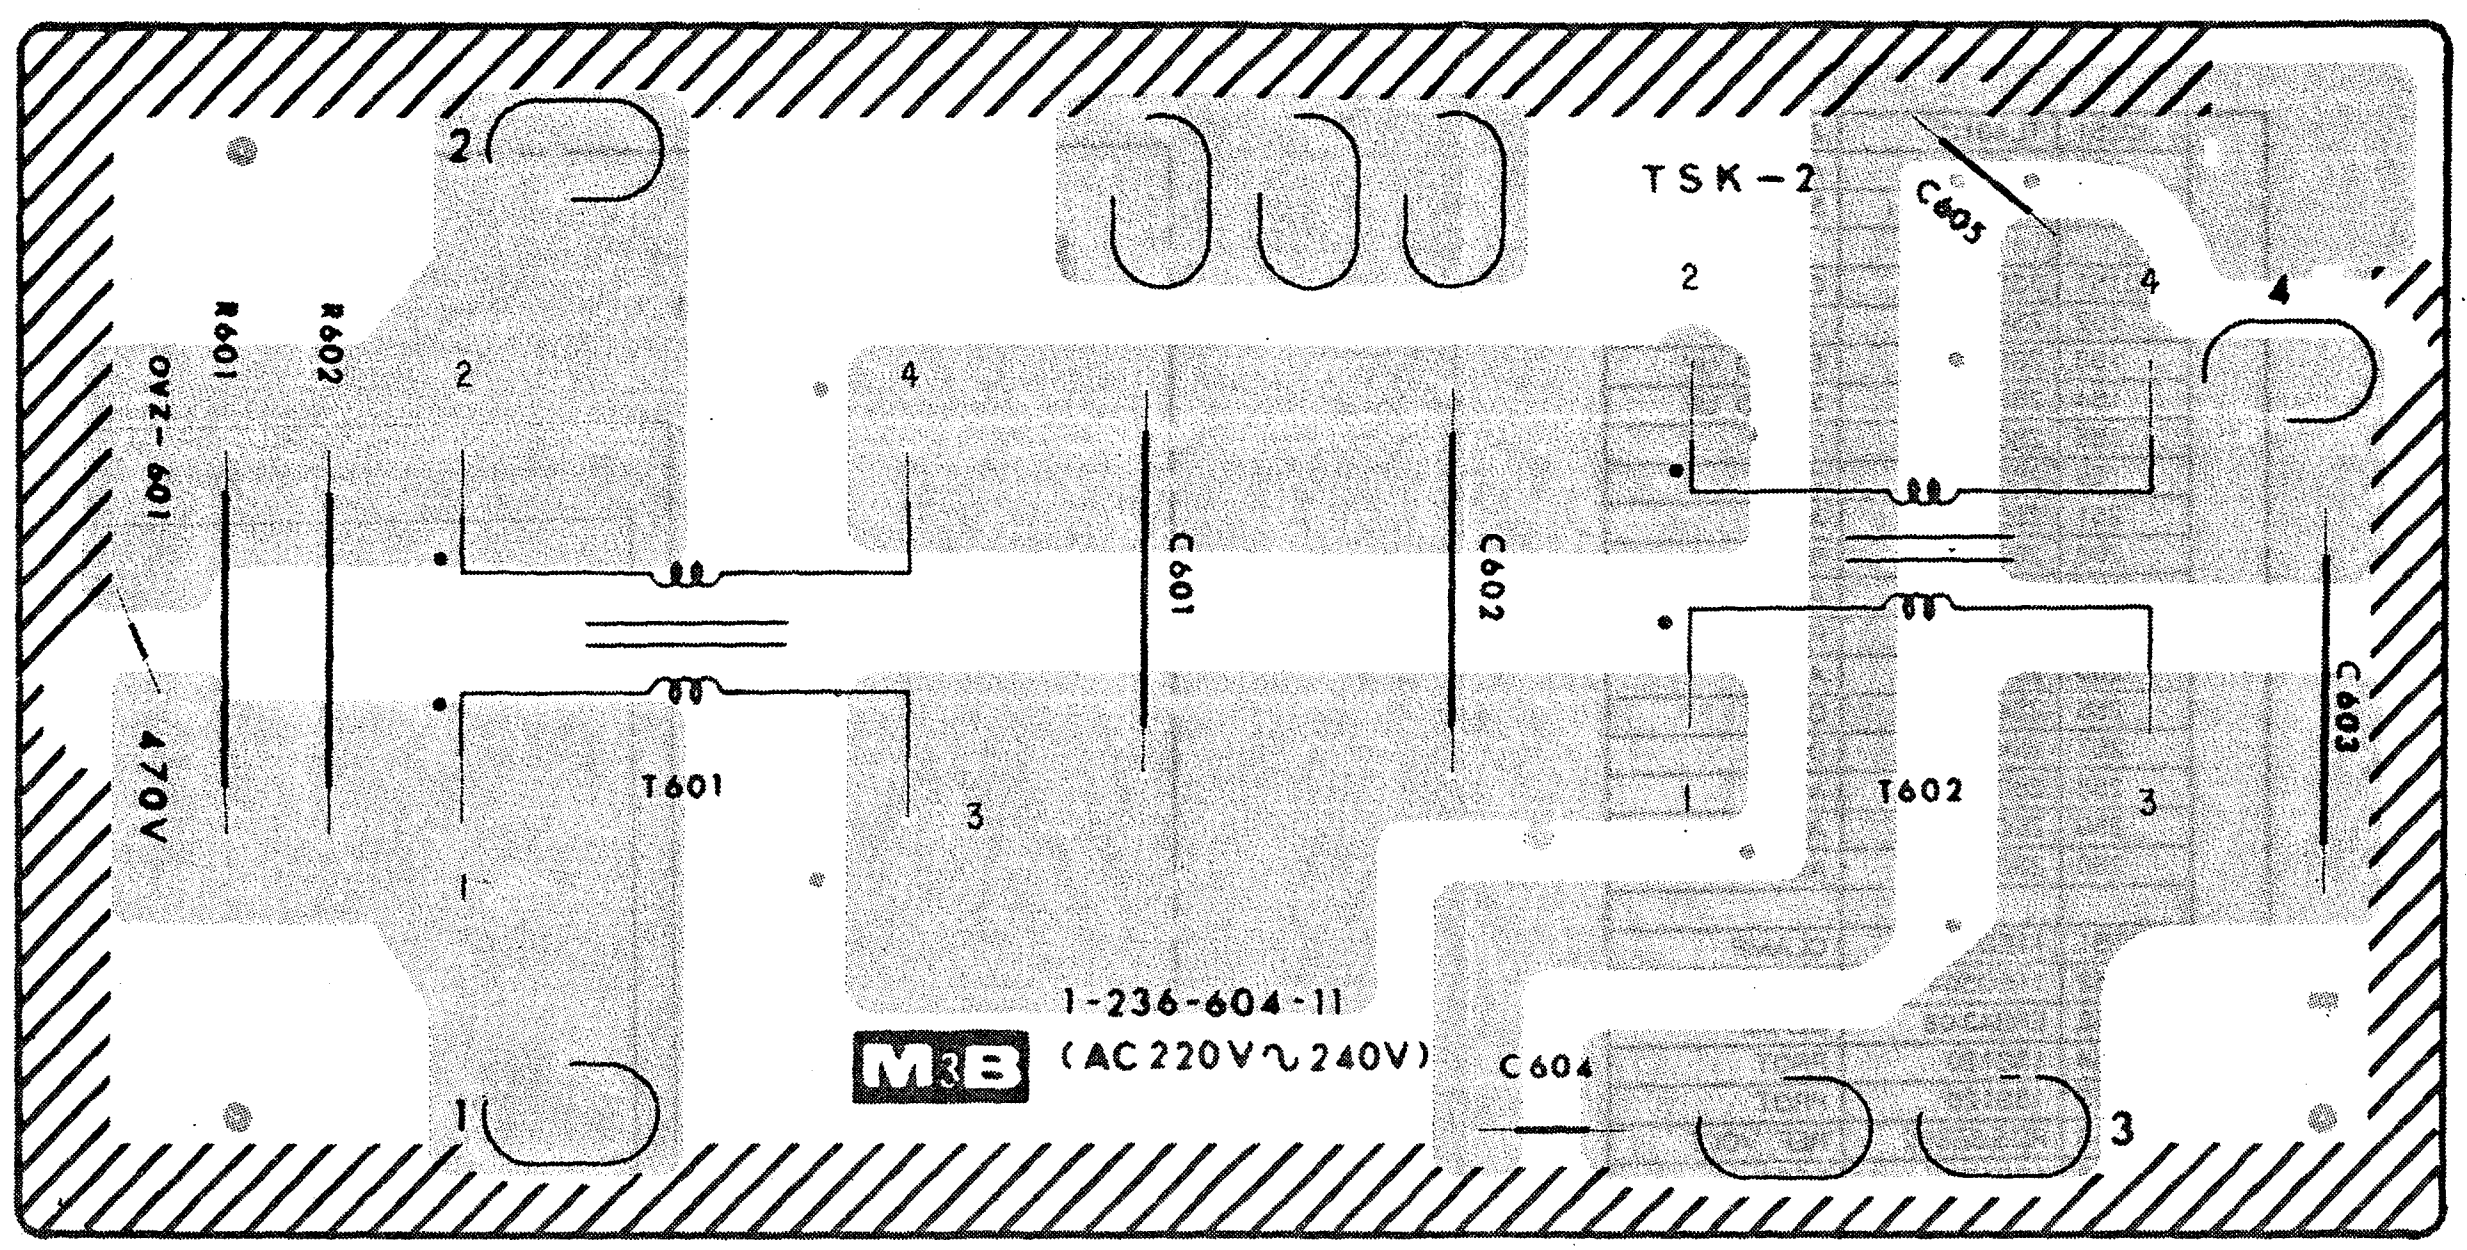
TSK-2
R601
R602
OVZ-601
470V
C601
C602
C603
C604
C605
T601
T602
1-236-604-11
M3B
(AC 220V∿240V)

- C1 BOARD -

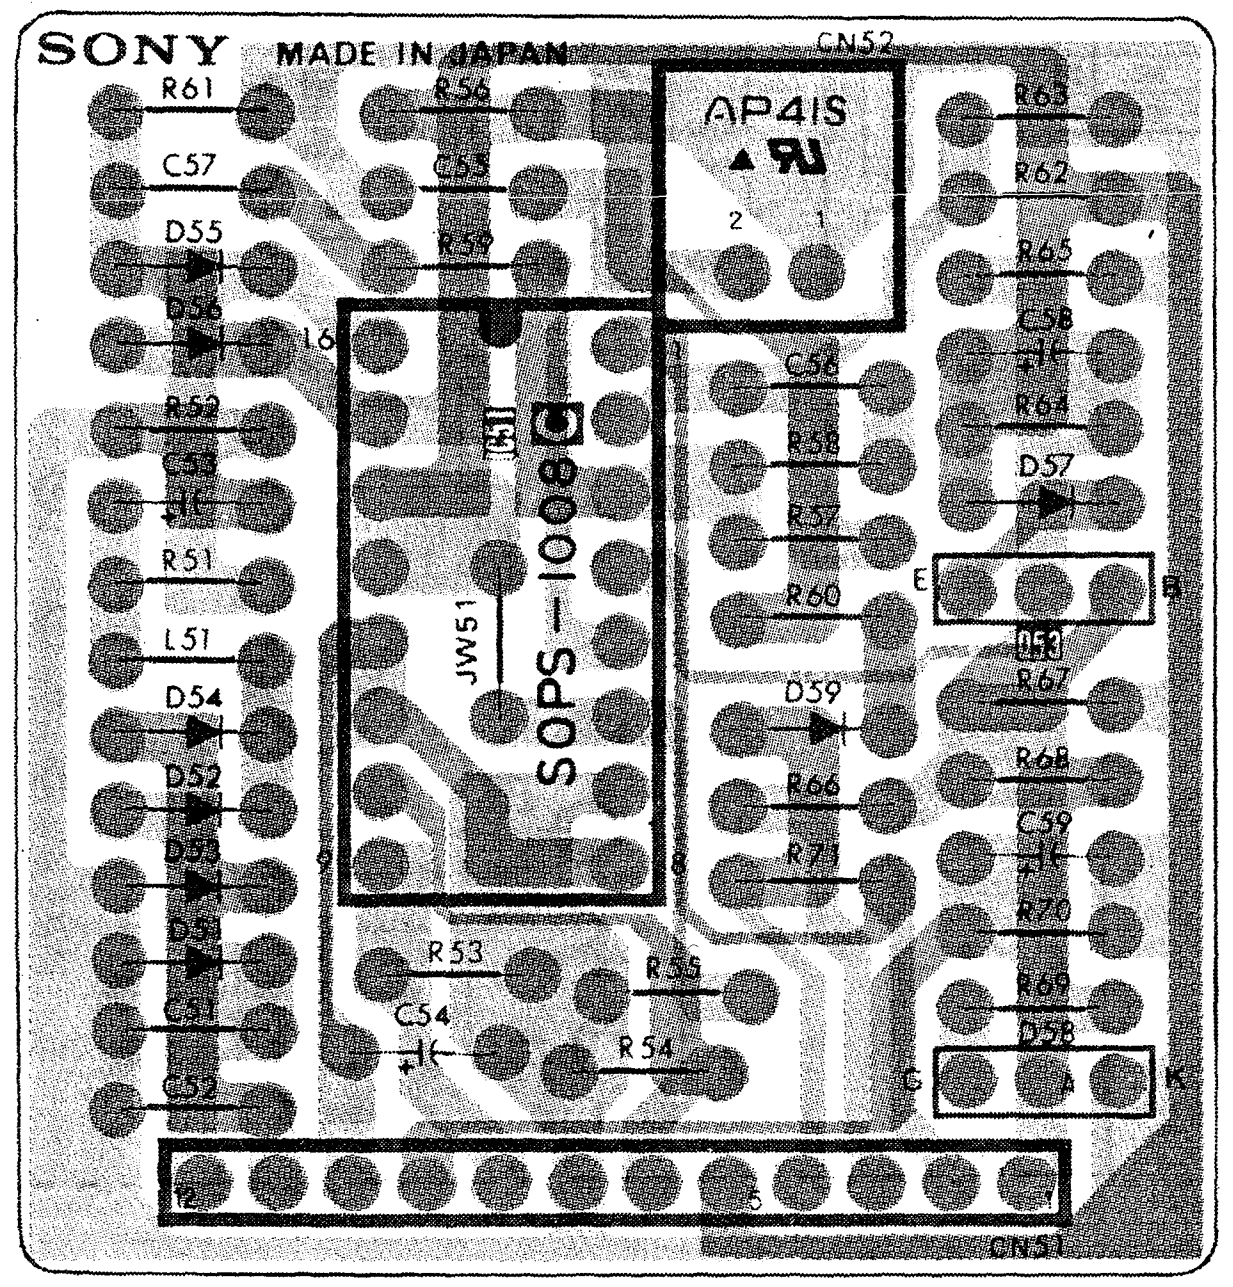
SONY
MADE IN JAPAN
CN52
CN51
AP4IS
SOPS-1008C
JW51

- ░ : Pattern from the side which enables seeing.
- ▓ : Pattern of the rear side.

M2	IC251	TL431C	2.5V REF
	252	μ PC358C	AMP
	253	μ PC78-05H	5V REG
	Q151	2SK827	CONV
	152	2SK827	CONV
	153	2SB733	SPEED UP
	154	2SB733	SPEED UP
	155	2SC3150	CONV
	156	2SC2785	OC
	251	2SC2785	AMP
	252	2SD882	REG
	253	2SC2785	AMP
	254	2SB734	REG
	255	2SC2785	AMP
	256	2SK422	DRIVE
	257	2SK422	DRIVE
	258	2SC2785	AMP
	259	2SC2785	AMP
	260	2SC2785	AMP
	D151	11EQS04	CLAMP
	152	11EQS04	CLAMP
	153	ERB43-08	CLAMP
	154	1SS120	PROT
	155	1SS120	PROT
	156	RD5.6ESB2	REF VOLT
	158	1SS120	RECT
	159	1SS120	RECT
	251	FMG-24S	35V RECT
	252	FML-22S	15.5V RECT
	253	FML-32S	5.7V RECT
	254	FML-22R	− 5.7V RECT
	255	FML-22R	− 15.5V RECT
	256	FMG-24R	− 35V RECT
	265	RD39ESB	CLAMP
	266	RD39ESB	CLAMP
	267	10E-1	PROT
	268	10E-1	PROT
	270	1SS119	DC SHIFT
	271	1SS119	DC SHIFT
	272	1SS119	PROT
	273	1SS119	PROT
	274	1SS119	PROT
	275	1SS119	PROT
	276	RD5.6ESB2	0V
	277	RD15ESB2	0V
	278	RD18ESB1	0V
	279	RD6.8ESB2	0V
	280	RD12ESB2	REF VOLT
	281	AU02A	RECT
	282	11EQS04	PROT
	283	RD5.1ESB1	DC SHIFT
	284	RD6.8ESB2	CLAMP
	285	1SS119	PROT
	286	1SS119	PROT

C2	IC051	MB3759	CONTROL
	Q053	2SA1175	AMP
	D051	11EQS04	RECT
	052	11EQS04	RECT
	053	11EQS04	RECT
	054	11EQS04	RECT
	055	11EQS04	CLAMP
	056	11EQS04	CLAMP
	057	1SS119	PROT
	058	03P2M	OFF
	059	1SS119	PRORT

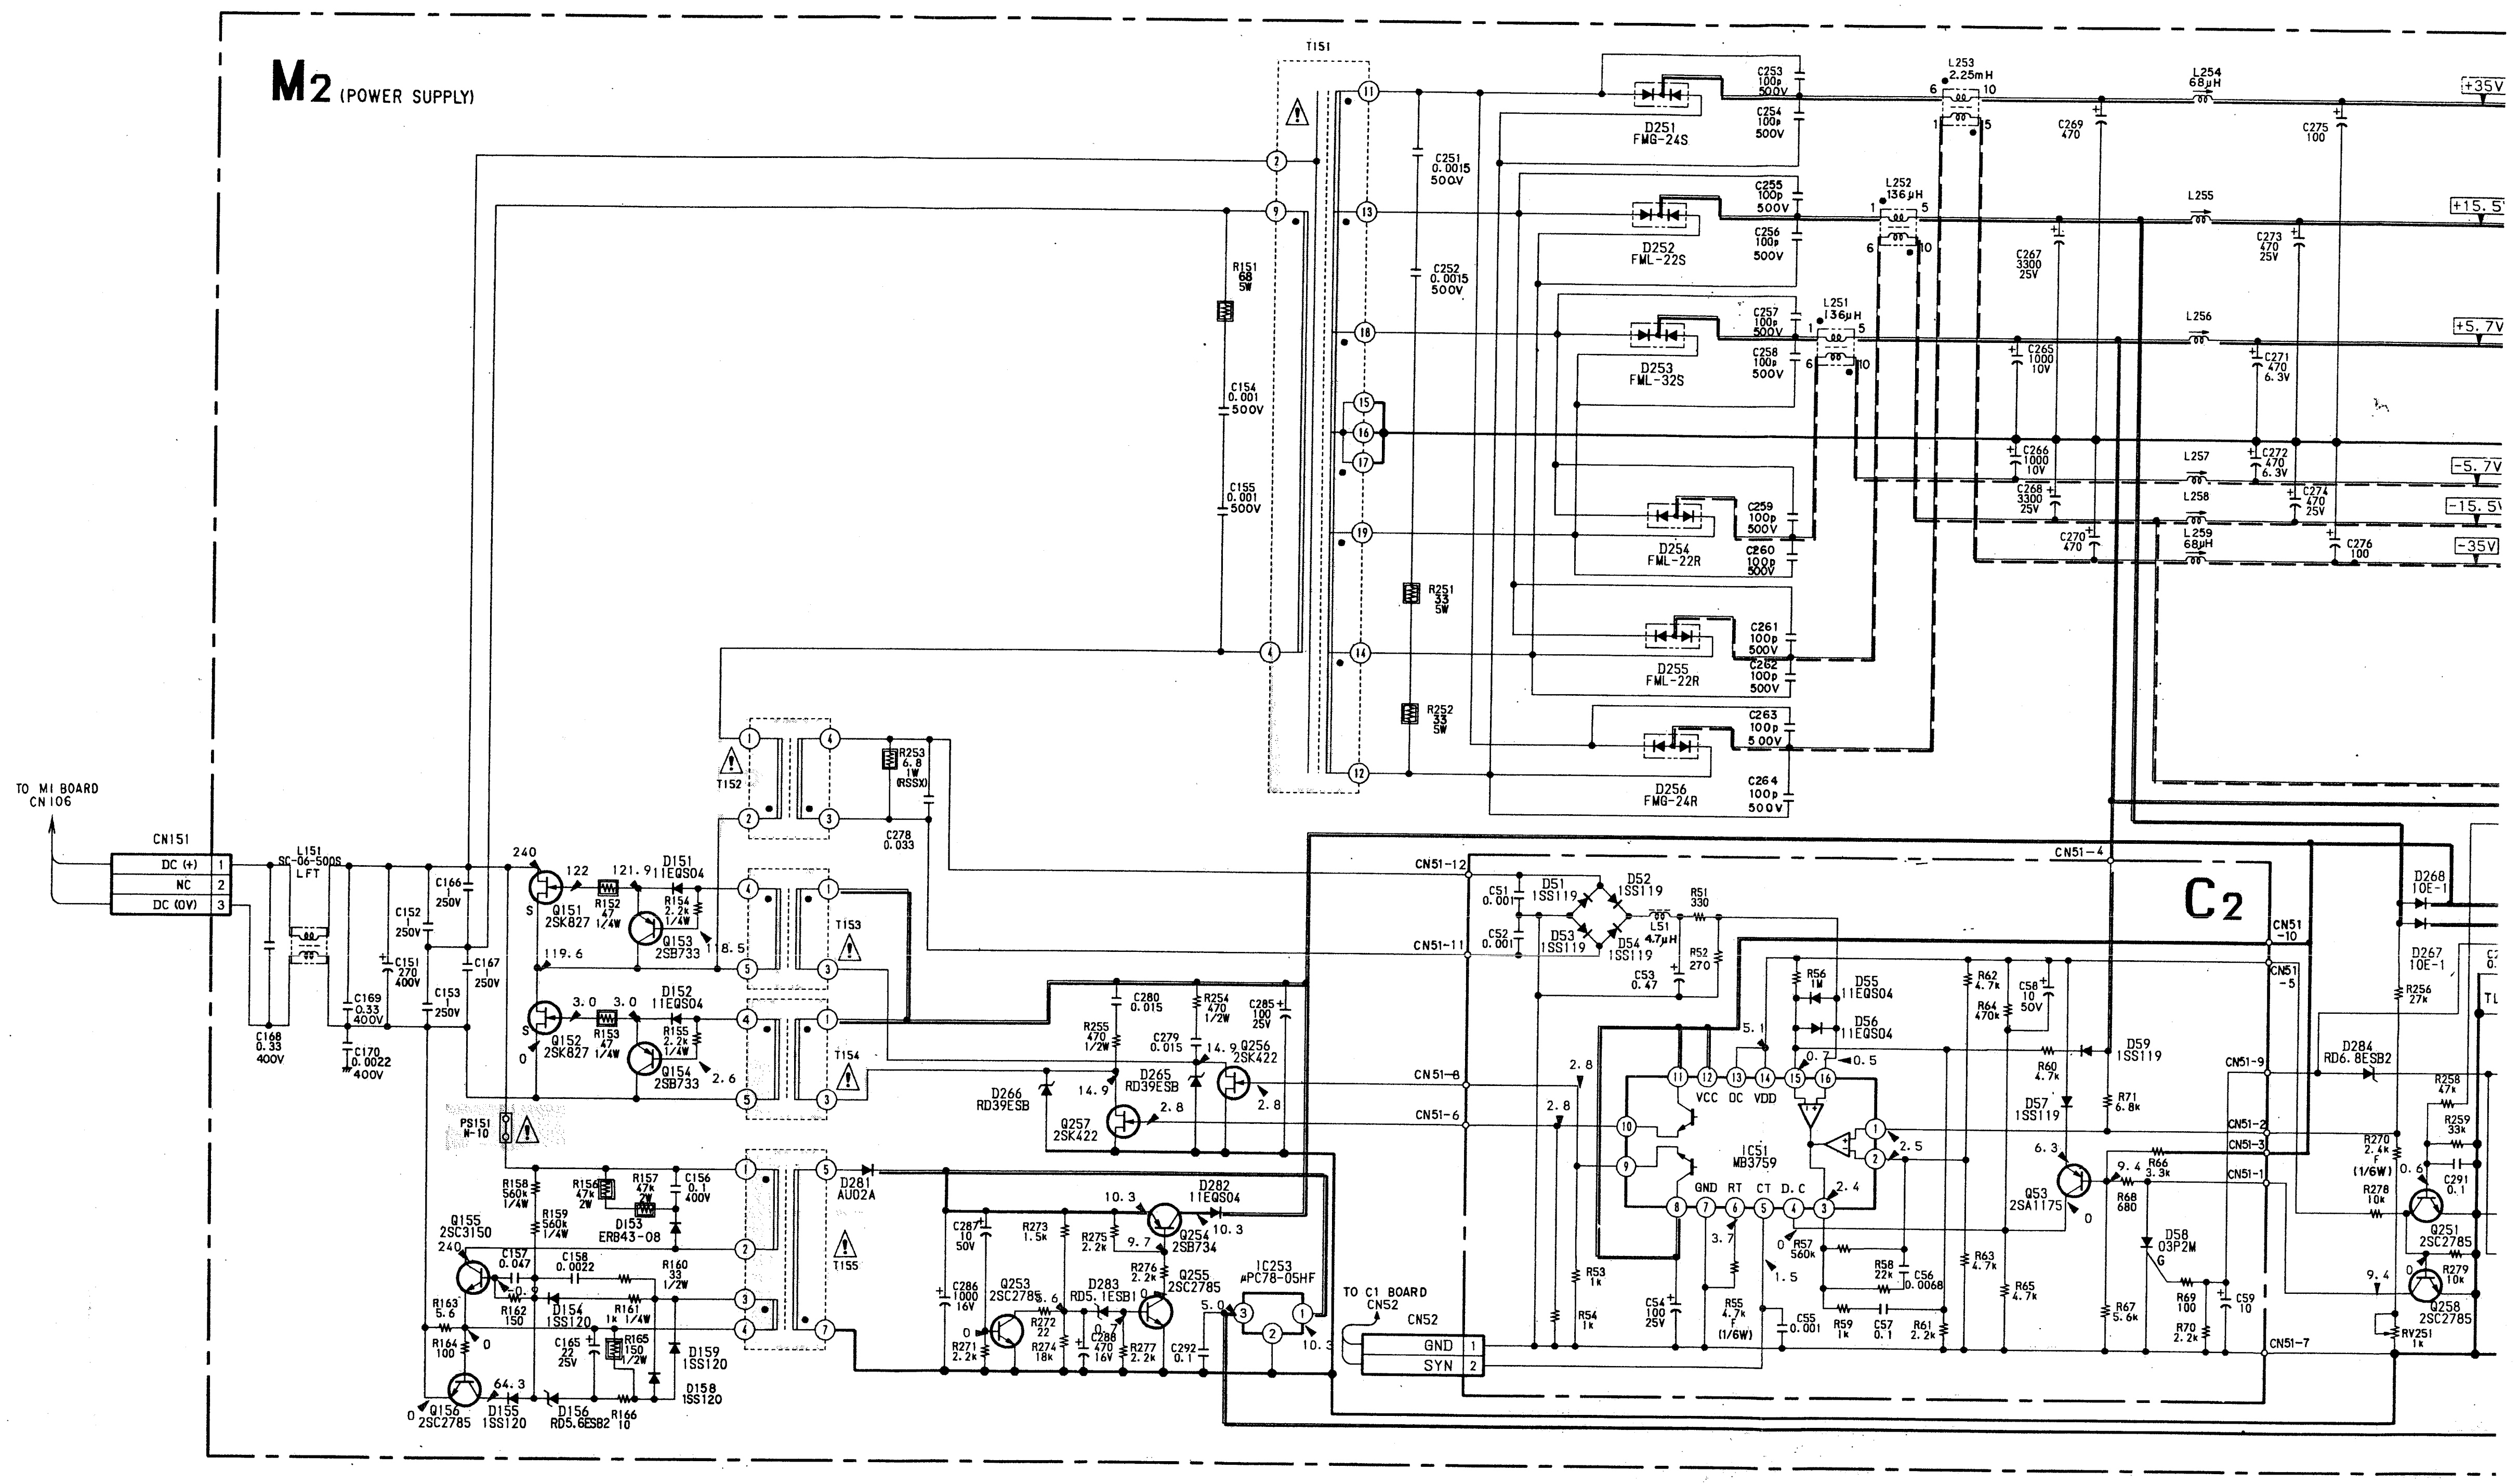
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
A B C D E F G H I
M2 (POWER SUPPLY)
C2
TO M1 BOARD CN106
CN151
DC (+)
NC
DC (0V)
L151 SC-06-500S LFT
T151
T152
T153
T154
T155
PS151 N-10
Q151 2SK827
Q152 2SK827
Q153 2SB733
Q154 2SB733
Q155 2SC3150
Q156 2SC2785
D251 FMG-24S
D252 FML-22S
D253 FML-32S
D254 FML-22R
D255 FML-22R
D256 FMG-24R
L253 2.25mH
L252 136μH
L251 136μH
L254 68μH
L259 68μH
+35V
+15.5
+5.7V
-5.7V
-15.5
-35V
IC253 μPC78-05HF
Q253 2SC2785
Q254 2SB734
Q255 2SC2785
Q256 2SK422
Q257 2SK422
D265 RD39ESB
D266 RD39ESB
D281 AU02A
D282 11EQS04
D283 RD5.1ESB1
TO C1 BOARD CN52
CN52
GND
SYN
IC51 MB3759
VCC DC VDD
GND RT CT D.C
Q53 2SA1175
D58 03P2M
D59 1SS119
D57 1SS119
Q251 2SC2785
Q258 2SC2785
D267 10E-1
D268 10E-1
D284 RD6.8ESB2
RV251 1k

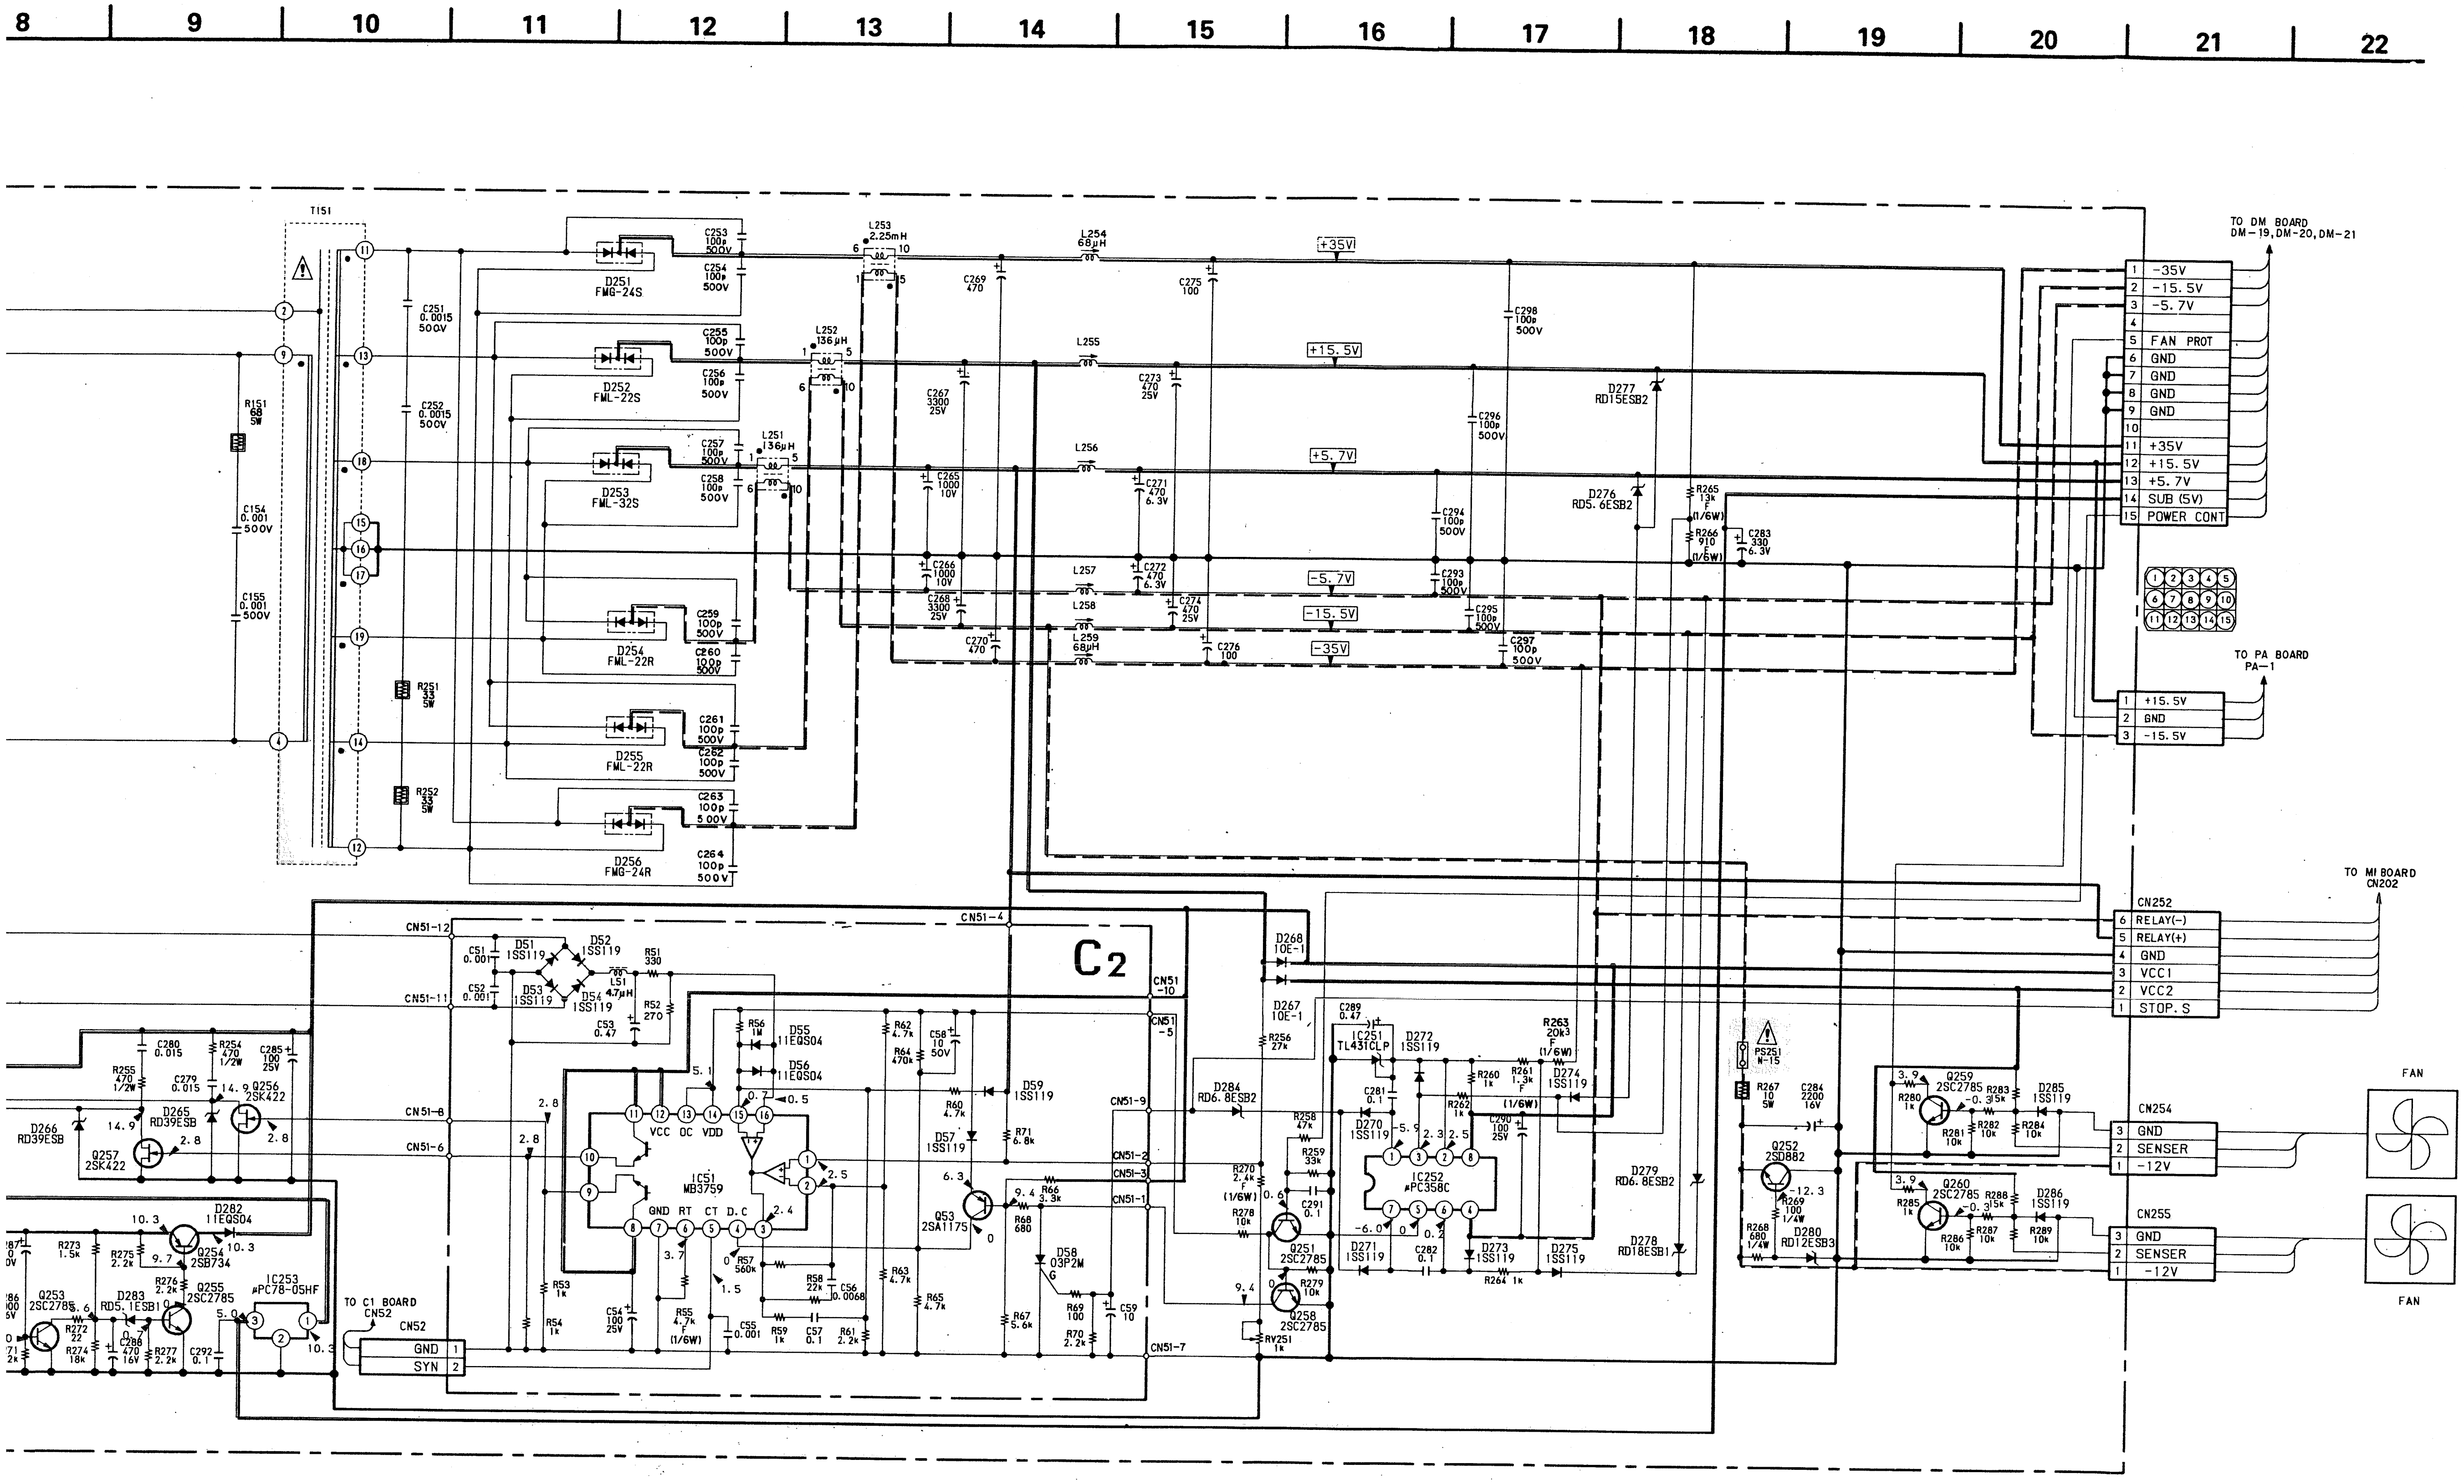
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
T151
R151 68 5W
C154 0.001 500V
C155 0.001 500V
C251 0.0015 500V
C252 0.0015 500V
R251 33 5W
R252 33 5W
D251 FMG-24S
D252 FML-22S
D253 FML-32S
D254 FML-22R
D255 FML-22R
D256 FMG-24R
L253 2.25mH
L252 136μH
L251 136μH
L254 68μH
L255
L256
L257
L258
L259 68μH
+35V
+15.5V
+5.7V
-5.7V
-15.5V
-35V
D277 RD15ESB2
D276 RD5.6ESB2
R265 13k
R266 910
C283 330 6.3V
TO DM BOARD DM-19, DM-20, DM-21
1 -35V
2 -15.5V
3 -5.7V
4
5 FAN PROT
6 GND
7 GND
8 GND
9 GND
10
11 +35V
12 +15.5V
13 +5.7V
14 SUB (5V)
15 POWER CONT
TO PA BOARD PA-1
1 +15.5V
2 GND
3 -15.5V
TO MI BOARD CN202
CN252
6 RELAY(-)
5 RELAY(+)
4 GND
3 VCC1
2 VCC2
1 STOP. S
C2
CN51-12
CN51-11
CN51-4
CN51-10
CN51-5
CN51-9
CN51-8
CN51-6
CN51-2
CN51-3
CN51-1
CN51-7
D51 1SS119
D52 1SS119
D53 1SS119
D54 1SS119
L51 4.7μH
IC51 MB3759
VCC OC VDD
GND RT CT D.C
D55 11EQS04
D56 11EQS04
D57 1SS119
D59 1SS119
Q53 2SA1175
D58 03P2M
TO C1 BOARD CN52
CN52
1 GND
2 SYN
D284 RD6.8ESB2
D268 10E-1
D267 10E-1
IC251 TL431CLP
D272 1SS119
IC252 μPC358C
D270 1SS119
D271 1SS119
D273 1SS119
D274 1SS119
D275 1SS119
D279 RD6.8ESB2
D278 RD18ESB1
Q251 2SC2785
Q258 2SC2785
RV251 1k
PS251 N-15
Q252 2SD882
D280 RD12ESB3
Q259 2SC2785
Q260 2SC2785
D285 1SS119
D286 1SS119
CN254
3 GND
2 SENSER
1 -12V
CN255
3 GND
2 SENSER
1 -12V
FAN
FAN
D266 RD39ESB
D265 RD39ESB
Q256 2SK422
Q257 2SK422
D282 11EQS04
Q254 2SB734
Q253 2SC2785
D283 RD5.1ESB1
Q255 2SC2785
IC253 μPC78-05HF

M2 C2 [POWER SUPPLY]

– M2 BOARD –

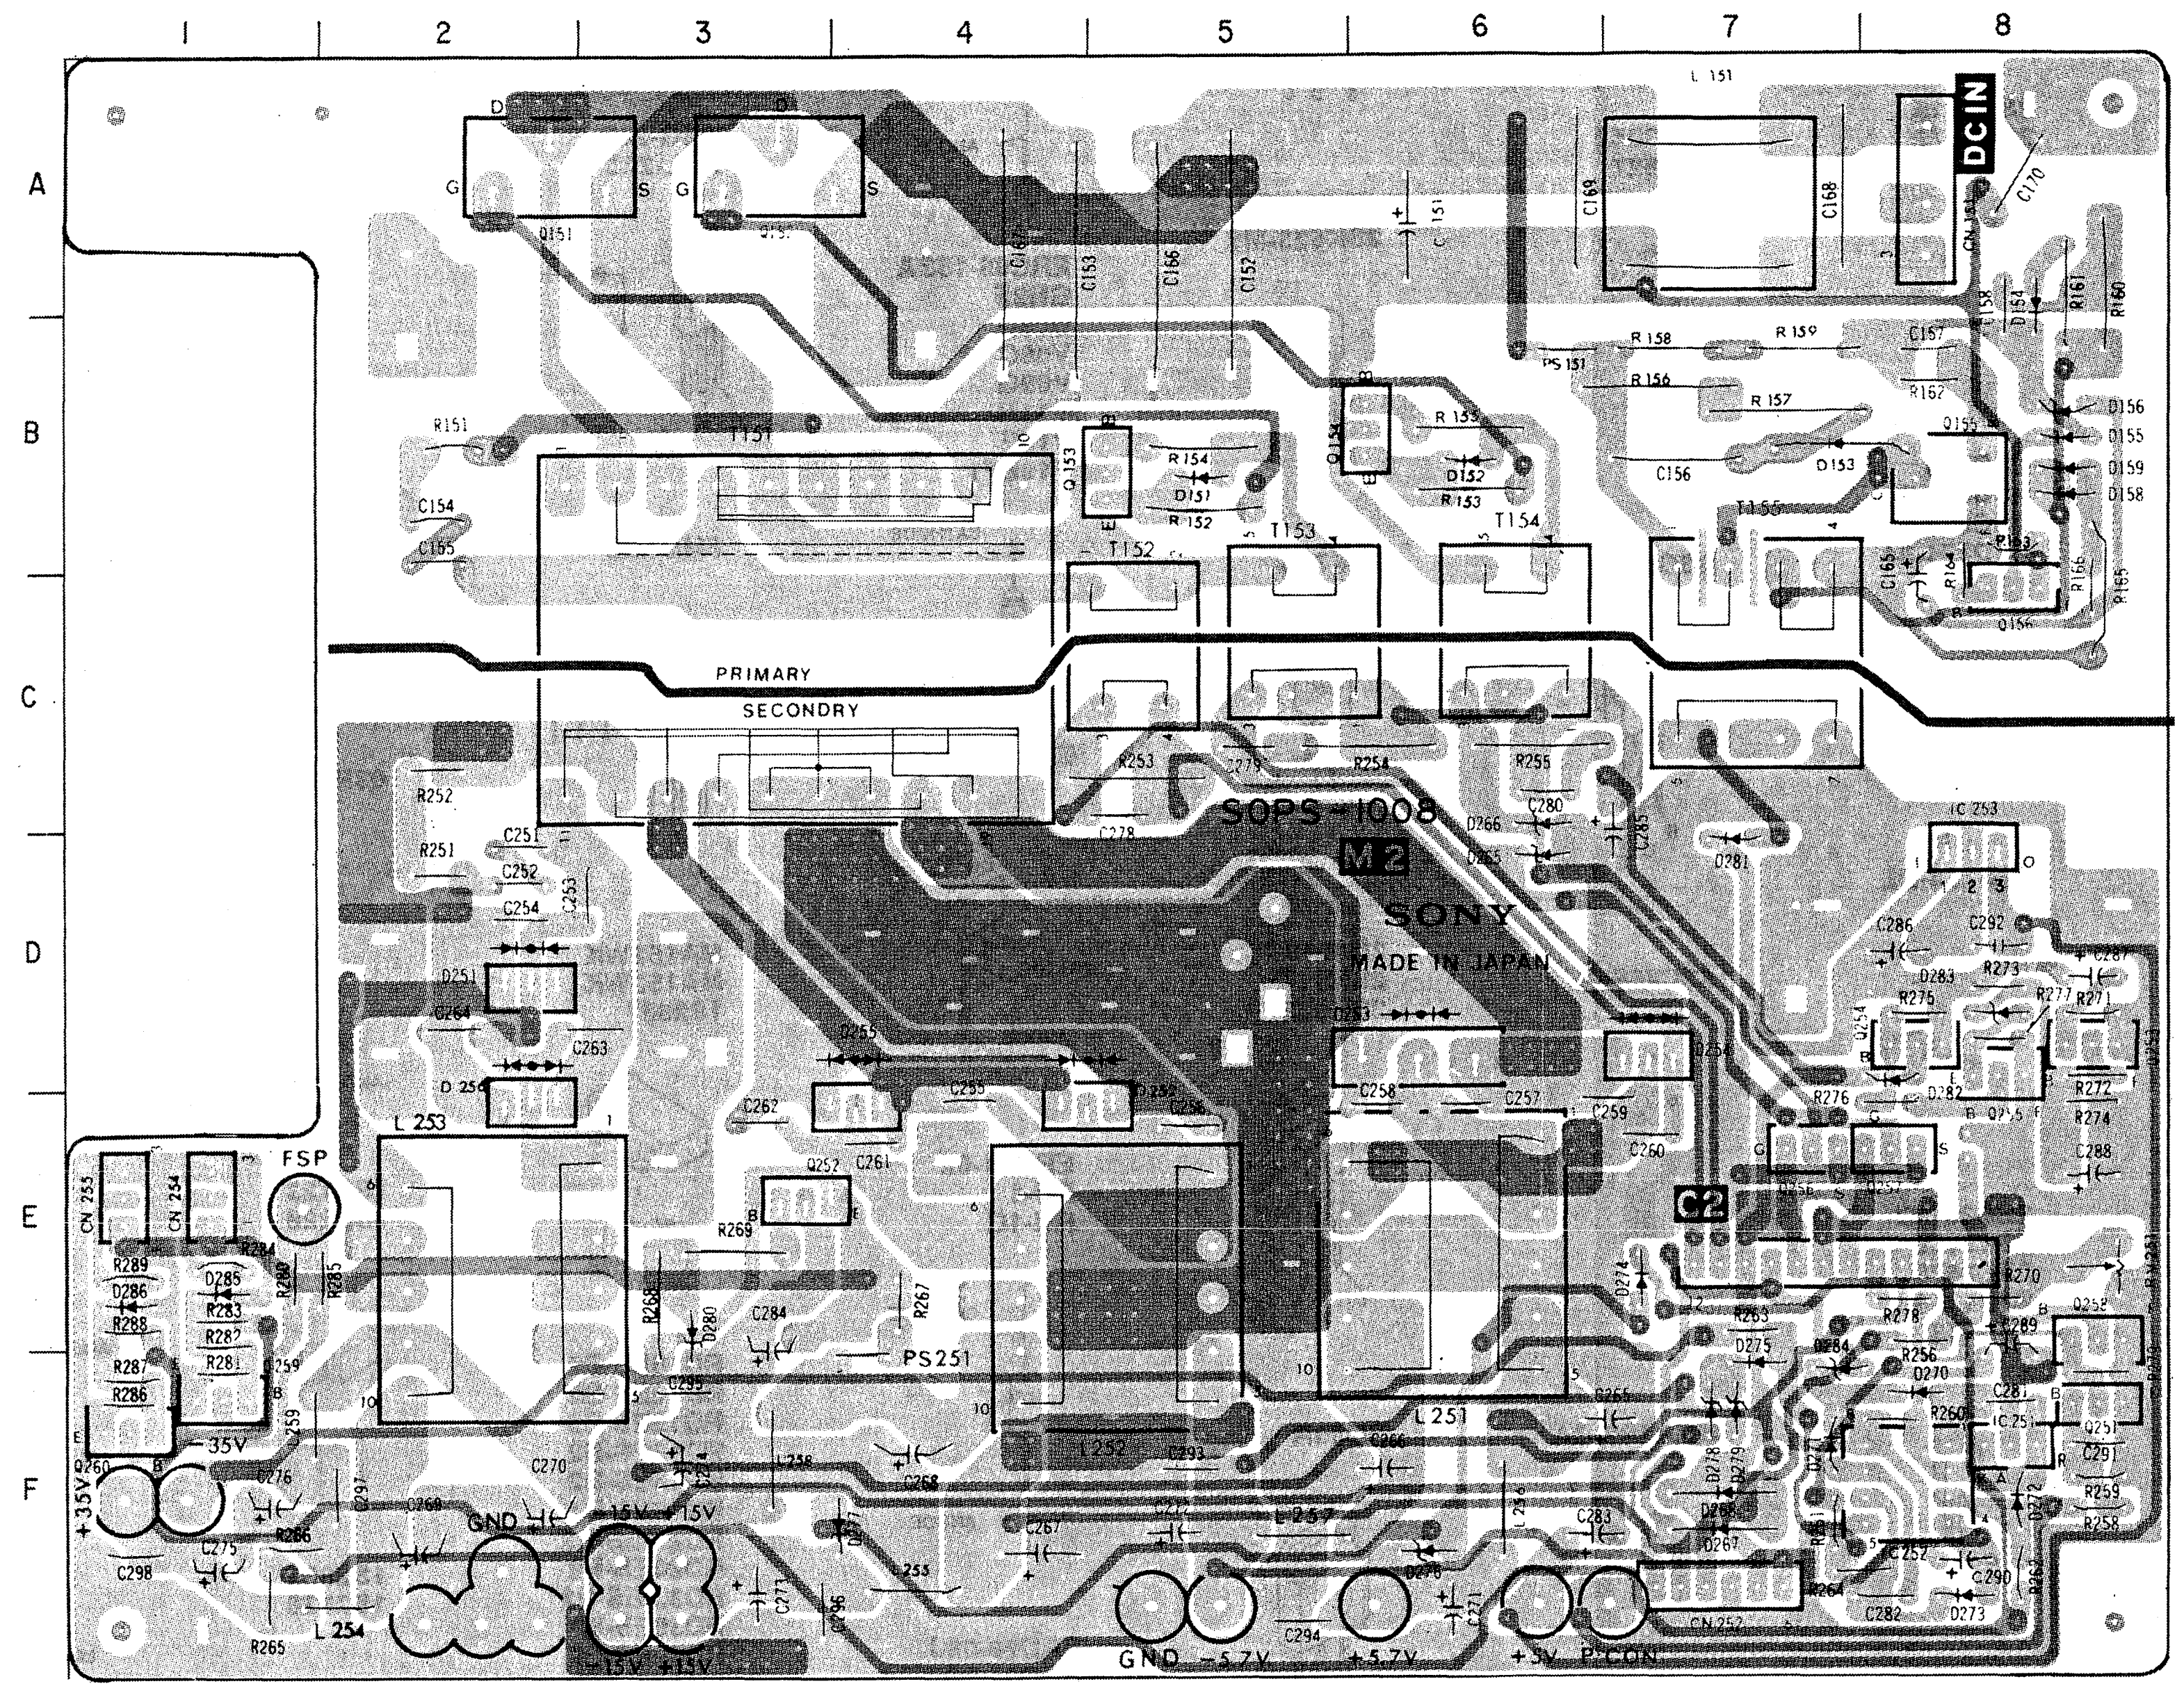
1
2
3
4
5
6
7
8
A
B
C
D
E
F
Q151
T151
T152
T153
T154
T156
L151
DC IN
PS151
PRIMARY
SECONDRY
SOPS-1008
M2
SONY
MADE IN JAPAN
C2
IC253
L253
L251
L252
L254
PS251
FSP
CN253
CN254
CN252
+35V
-35V
GND
-15V
+15V
GND
-5.7V
+5.7V
+5V
P.ON

M2 BOARD

IC	
IC251	F - 8
IC252	F - 8
IC253	D - 8

ADJUSTING ELEMENT	
RV251	E - 8

TRANSISTOR	
Q151	A - 2
Q153	A - 3
Q153	B - 5
Q154	B - 6
Q155	B - 6
Q156	C - 8
Q251	F - 8
Q252	E - 3
Q253	D - 8
Q254	D - 8
Q255	D - 8
Q256	E - 7
Q257	E - 8
Q258	E - 8
Q259	F - 1
Q260	F - 1

DIODE	
D151	B - 5
D152	B - 6
D153	B - 7
D154	A - 8
D155	B - 8
D156	B - 8
D158	B - 8
D159	B - 8
D251	D - 2
D252	E - 5
D253	D - 6
D254	D - 7
D255	D - 4
D256	D - 2
D265	D - 6
D266	C - 6
D267	F - 7
D268	F - 7
D270	F - 8
D271	F - 7
D272	F - 8
D273	F - 8
D274	E - 7
D275	F - 7
D276	F - 6
D277	F - 4
D278	F - 7
D279	F - 7
D280	E - 3
D281	D - 7
D282	D - 8
D283	D - 8
D284	F - 7
D285	E - 1
D286	E - 1

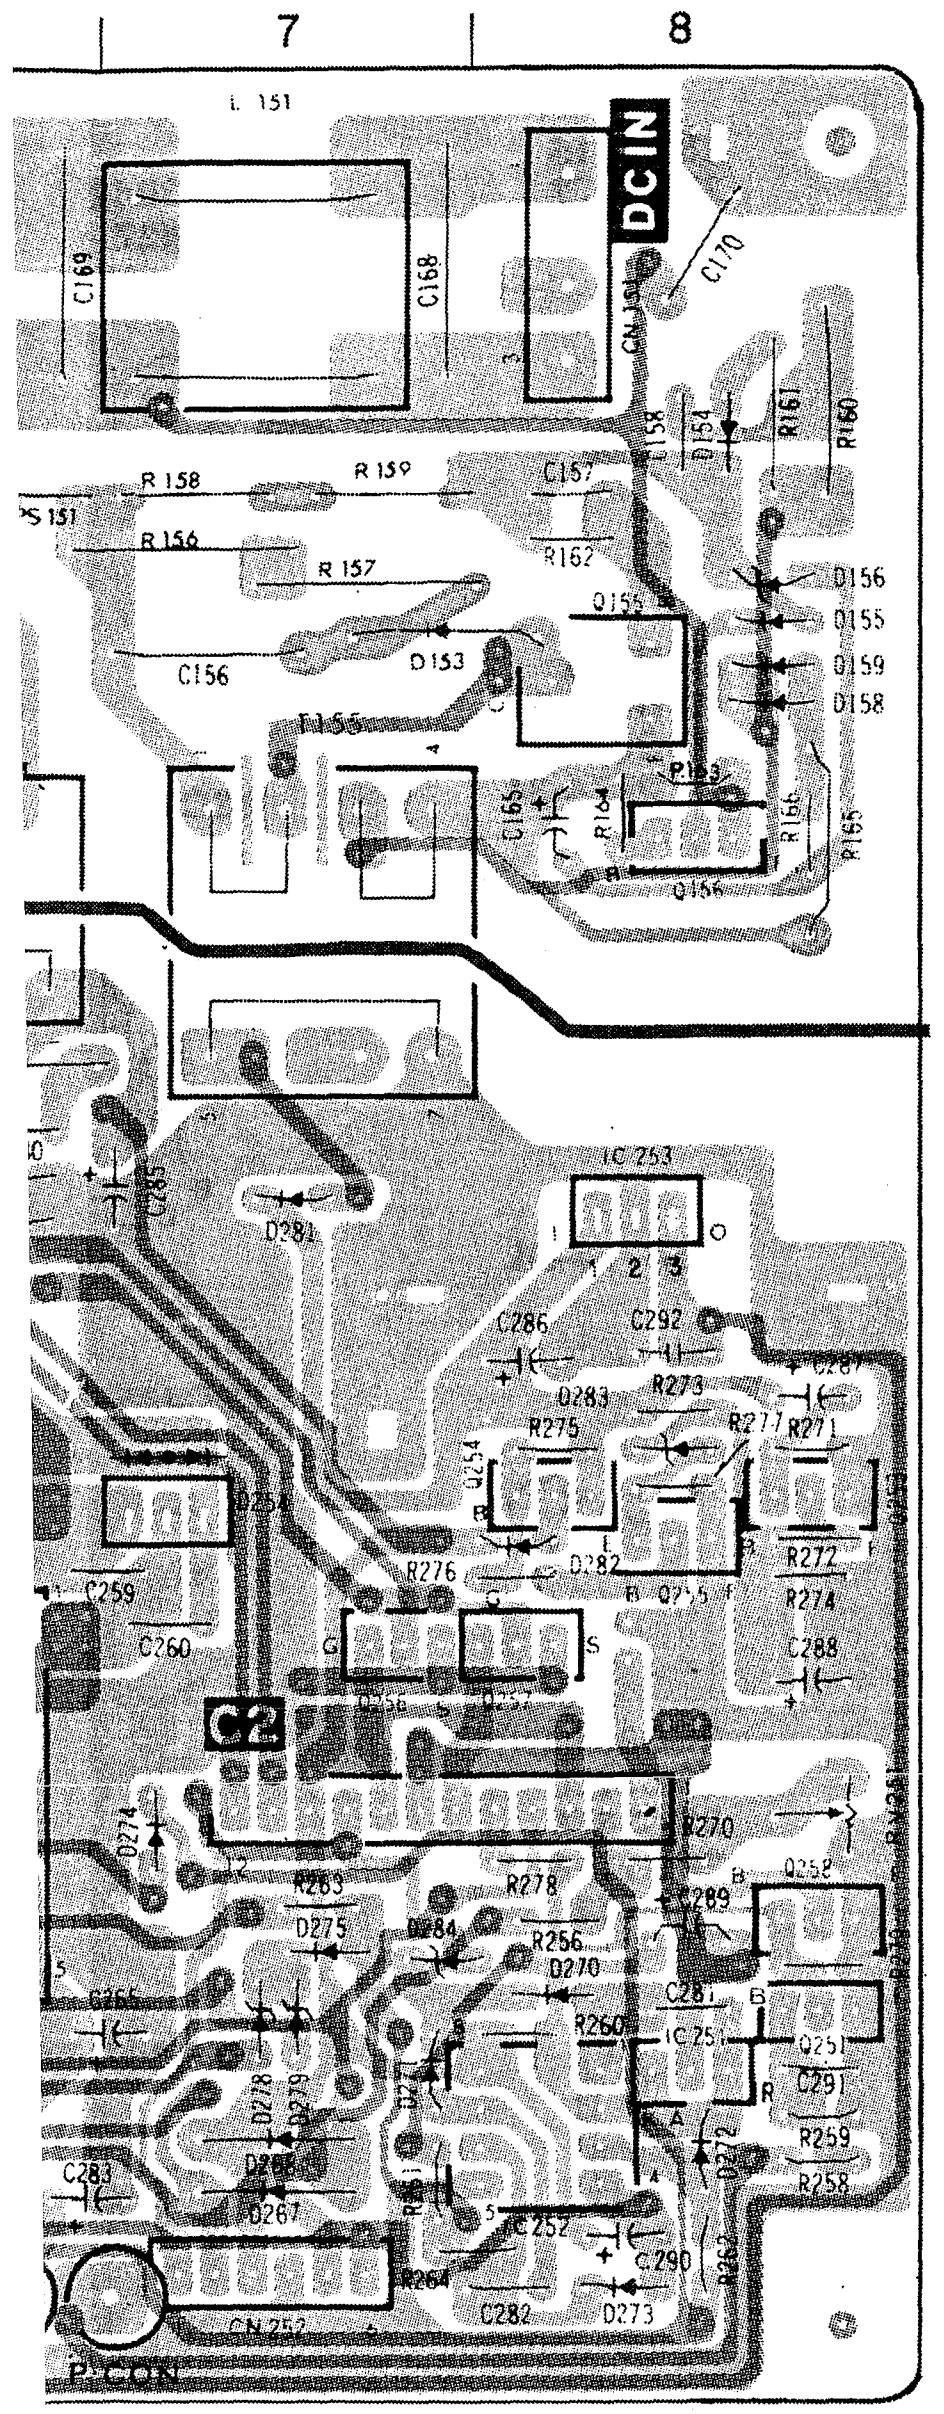
7
8
L 151
DCIN
C169
C168
C170
R158
R159
R156
R157
C157
R161
R160
D156
D155
D159
D158
C156
D153
Q155
T155
Q156
IC 253
D281
C286
C292
D283
R273
R275
R277
R271
R276
R272
R274
C288
C259
C260
C2
D274
R270
R263
R278
D275
R256
D270
C289
D252
Q251
C291
R259
R258
C283
D267
C252
C290
D273
C282
CN 252
P-CON

M2 BOARD

IC	
IC251	F - 8
IC252	F - 8
IC253	D - 8

ADJUSTING ELEMENT	
RV251	E - 8

TRANSISTOR	
Q151	A - 2
Q153	A - 3
Q153	B - 5
Q154	B - 6
Q155	B - 6
Q156	C - 8
Q251	F - 8
Q252	E - 3
Q253	D - 8
Q254	D - 8
Q255	D - 8
Q256	E - 7
Q257	E - 8
Q258	E - 8
Q259	F - 1
Q260	F - 1

DIODE	
D151	B - 5
D152	B - 6
D153	B - 7
D154	A - 8
D155	B - 8
D156	B - 8
D158	B - 8
D159	B - 8
D251	D - 2
D252	E - 5
D253	D - 6
D254	D - 7
D255	D - 4
D256	D - 2
D265	D - 6
D266	C - 6
D267	F - 7
D268	F - 7
D270	F - 8
D271	F - 7
D272	F - 8
D273	F - 8
D274	E - 7
D275	F - 7
D276	F - 6
D277	F - 4
D278	F - 7
D279	F - 7
D280	E - 3
D281	D - 7
D282	D - 8
D283	D - 8
D284	F - 7
D285	E - 1
D286	E - 1

– C2 BOARD –

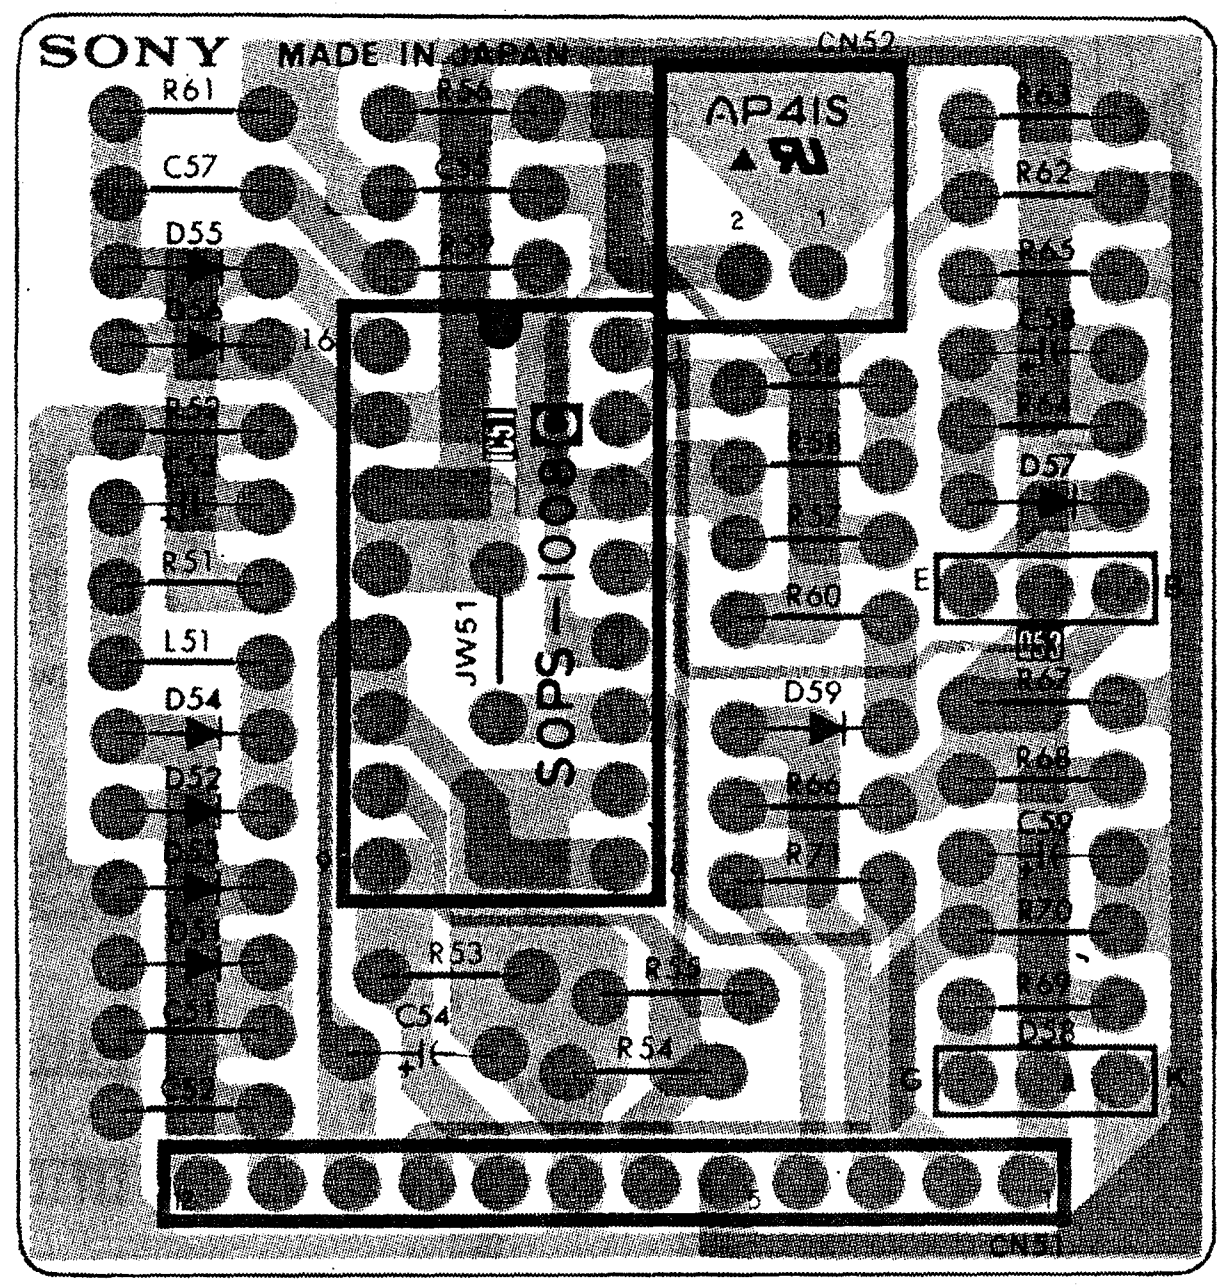
SONY
MADE IN JAPAN
CN52
AP41S
R61
C57
D55
R56
R62
R65
D57
L51
R51
D54
D52
JW51
IC51
SOPS-1009
D59
R60
R66
R68
C59
R70
R69
D58
R53
C54
R54
CN51

- ▨ : Pattern from the side which enables seeing.
- ▨ : Pattern of the rear side.

7-6. SEMICONDUCTORS

CXA1158P



CXA1216P
MBM27C512P-25-PJY013
TDA4555-V8

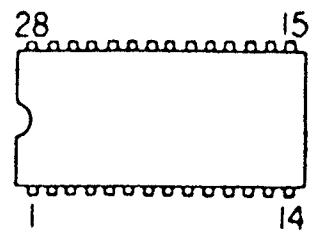

(TOP VIEW)

CXK3864-040M
CXK3864-041M
CXK3864-042M

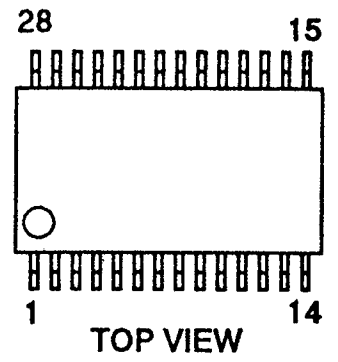

TOP VIEW

CXK5814P-45L



(TOP VIEW)

CXK5864BM-12L

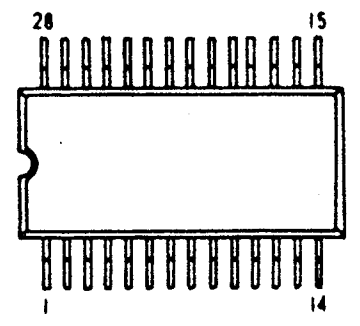

(TOP VIEW)

CX7916
LM6364N
RC4558P
TL082CP
µPC318C
µPC358C
µPC393C
µPC4082C
µPC4558C
µPC814C
µPC814G2-1

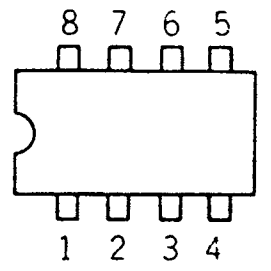

(TOP VIEW)

HD10124
HD14052BP
HD14053BFP
HD14053BP
HD14538BFP
HD14538BP
MB3759
MB3759-SNY
MB675429
MC10124L
MC14053BCP
MC14495P1
MC14572UBCP
MC34051P
MC74HC4538N
SN74S124N
TC4040BP
TC74HC157AP



(TOP VIEW)

HD64180R1P8



(TOP VIEW)

LA7016



LM78L05ACZ
M5F78M12L
NJM78M12A
RC7812FA
µPC7805HF
µPC7812H
µPC78M12H



LM7912CT
NJM79M12A
RC79M12FA
µPC7912H

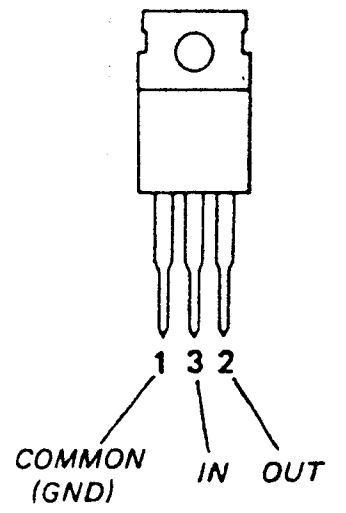
1 3 2
COMMON (GND)
IN
OUT

MB605195

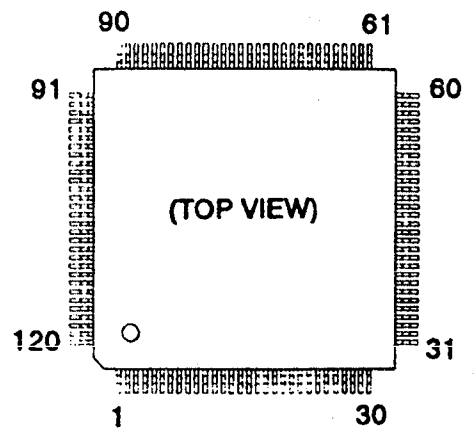
90
61
91
60
(TOP VIEW)
120
31
1
30

MB654842UPF

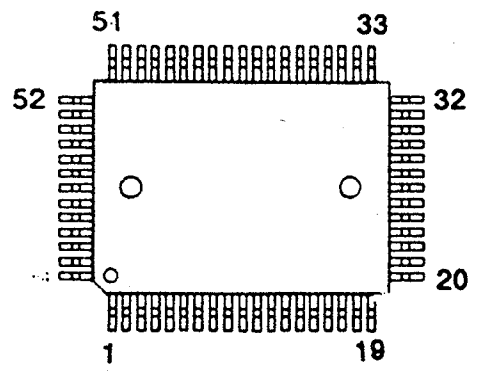
51
33
52
32
1
19
20

(TOP VIEW)

MB670840PF

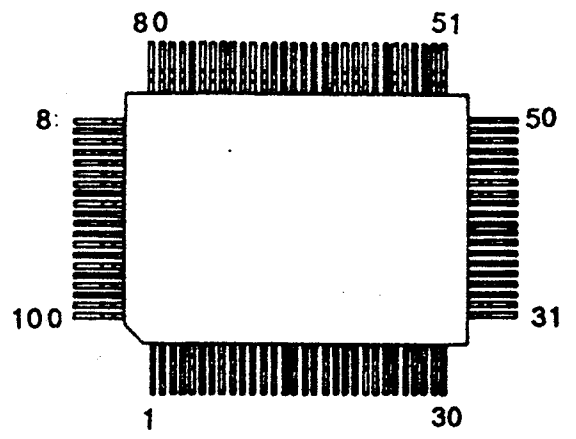
80
51
81
50
100
31
1
30

MB671469PF

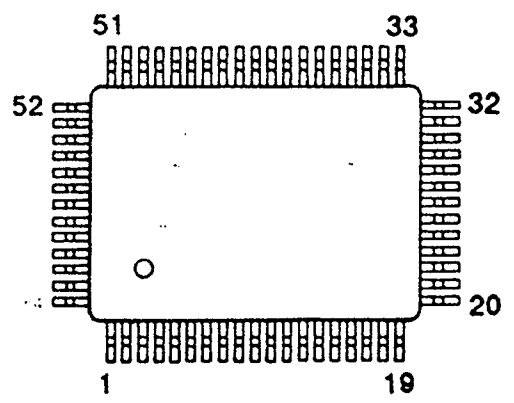
51
33
52
32
20
1
19

(TOP VIEW)

MB86023

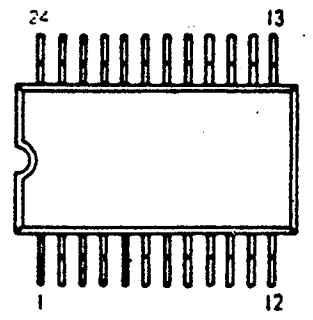

(TOP VIEW)

MB8855-1314N

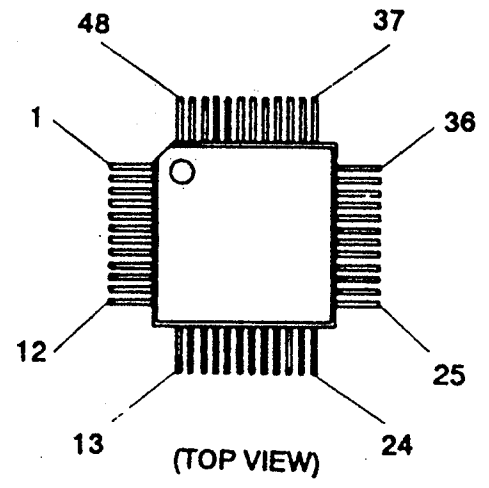
48
37
1
36
12
25
13
(TOP VIEW)
24

MC1495L
MC74HC00N
SN74HC00N
TC74HC27AP
µPC1394C



(TOP VIEW)

MC74F00M
MC74HC00AF
MC74HC14AF
SN74HC00ANS
SN74HC04ANS
SN74HC04NS
SN74HC107NS
SN74HC32ANS



(TOP VIEW)

MC74HC244N
MC74HCT373AN
SN74HC244N
TC74HC541AP

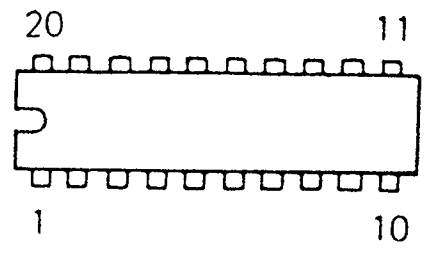

(TOP VIEW)

MC74HC4538F
SN74HC138ANS
SN74HC138NS
TC74HC123F



(TOP VIEW)

MC74HC541F
SN74HC244NS

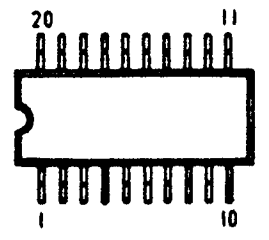

(TOP VIEW)

M50461-152SP
M50461-157SP



TOP VIEW

NJM79L12A
RC79L12A

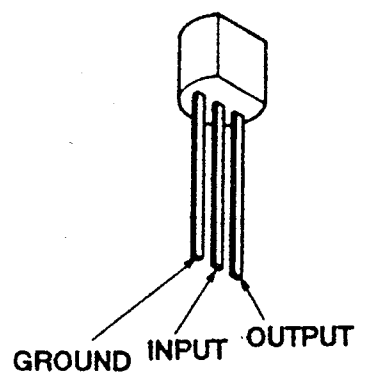
GROUND
INPUT
OUTPUT

RC78L05A



SBX1483-59

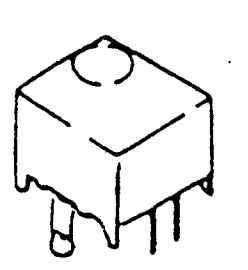

SBX4011-01

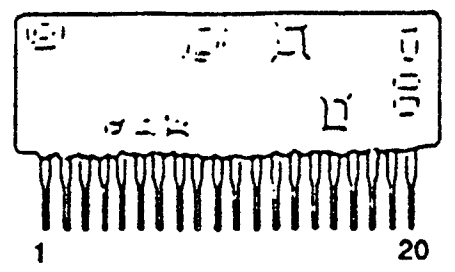

SNY-8C02


1 2 3 4 5 6 7 8 9 10

STK-4141V

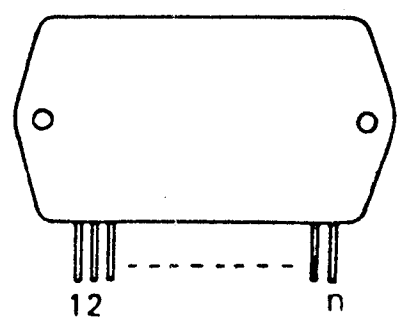

TDA2595-V7

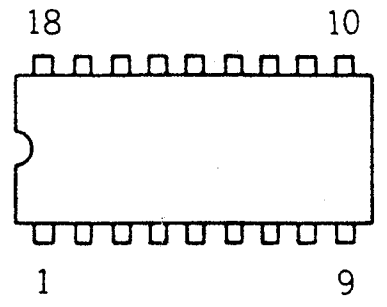

(TOP VIEW)

TL431CLP
TL431CLPB

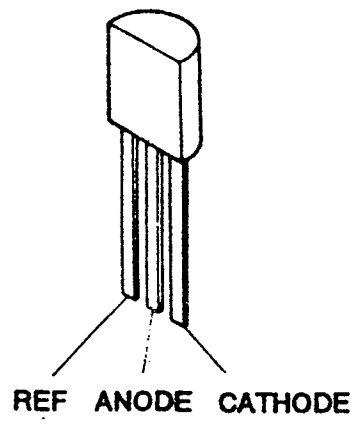
REF
ANODE
CATHODE

TY885002



TY885003A



µPC-1093T



µPC1406HA



µPC1498H

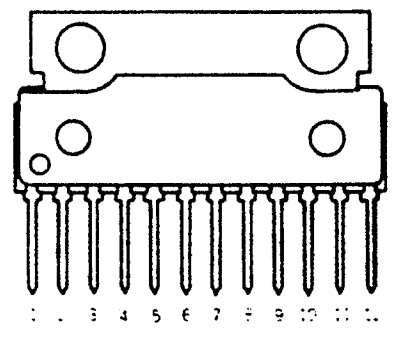

MARKING SIDE VIEW

µPC393G2
µPC4558G2



(TOP VIEW)

µPD28C64C-20
X28C64PI

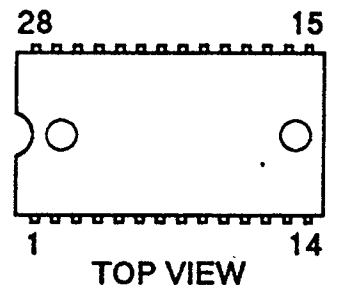

TOP VIEW

VPH05
VPH05A



DTA114TS
DTA124ES
DTC114ES
DTC124ES
DTC144ES



DTC114EK
DTC124EK
DTC144EK
2SA1162-G
2SA1162-YG
2SA1462-Y33
2SC1621-B2
2SC1621-B3
2SC2712
2SC2712-YG
2SC2859-Y
2SC3545



FMS1
FMS2


3
4
5
1
2
5
4
3
1
2

FMW-8
FMW1
FMW2


3
4
5
1
2
5
4
3
1
2

IMX2


6
5
4
NPN
PNP
1
2
3

2SA1142-P
2SA1156
2SA1381-E
2SA1407-D
2SC2688-L
2SC2688-LK
2SC2752
2SD882-Q


letter side
E
C
B

2SA1175
2SA1175-HFE
2SC2785
2SC2785-HFE


LETTER SIDE
E
C
B

2SA1208
2SC2910
2SD789-4



2SA1358-Y
2SC3421-Y



2SA1428-Y
2SC3668-Y



2SB1315
2SD1977



2SB733
2SB734-34
2SC3209LK
2SD774-34



2SB798-DL



2SB861-C
2SC3150
2SC3675
2SD1138-C
2SD982



2SC2551-O



2SC2555-1
2SC2555-2
2SD1403



2SC3042
2SK827



2SC3998



2SC4054N



2SD1887-CA



2SK160-K6



2
2
2
2
2
2
2
D
ANOD
E

3-59

I-01



2

IV



-V7



W)

P
PB

CATHODE

TY885002



TY885003A

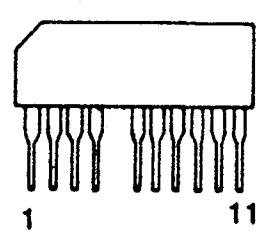

μPC-1093T



μPC1406HA



μPC1498H

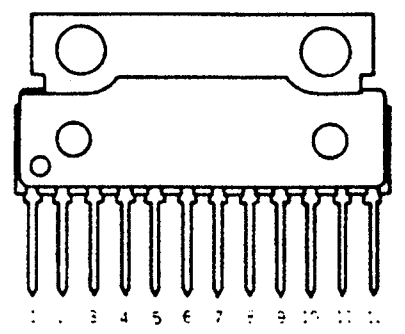

MARKING SIDE VIEW

μPC393G2
μPC4558G2



(TOP VIEW)

μPD28C64C-20
X28C64PI

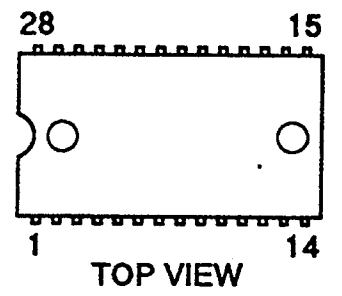

TOP VIEW

VPH05
VPH05A



DTA114TS
DTA124ES
DTC114ES
DTC124ES
DTC144ES



DTC114EK
DTC124EK
DTC144EK
2SA1162-G
2SA1162-YG
2SA1462-Y33
2SC1621-B2
2SC1621-B3
2SC2712
2SC2712-YG
2SC2859-Y
2SC3545



FMS1
FMS2


3
4
5
2
1
5
4
3
1
2

FMW-8
FMW1
FMW2


3
4
5
2
1
5
4
3
1
2

IMX2


NPN
PNP
6
5
4
1
2
3

2SA1142-P
2SA1156
2SA1381-E
2SA1407-D
2SC2688-L
2SC2688-LK
2SC2752
2SD882-Q


letter side
E
C
B

2SA1175
2SA1175-HFE
2SC2785
2SC2785-HFE


LETTER SIDE
E
C
B

2SA1208
2SC2910
2SD789-4



2SA1358-Y
2SC3421-Y



2SA1428-Y
2SC3668-Y



2SB1315
2SD1977



2SB733
2SB734-34
2SC3209LK
2SD774-34



2SB798-DL



2SB861-C
2SC3150
2SC3675
2SD1138-C
2SD982



2SC2551-O



2SC2555-1
2SC2555-2
2SD1403



2SC3042
2SK827



2SC3998



2SC4054N



2SD1887-CA



2SK160-K6



2SK422



2SK523-L1
2SK523-M1



2SK755



2SJ143
2SK817
2SK929



DD50R

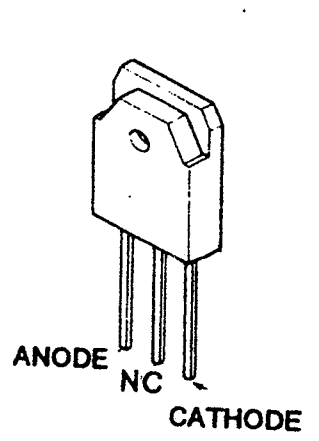
ANODE
NC
CATHODE

ERA22-06

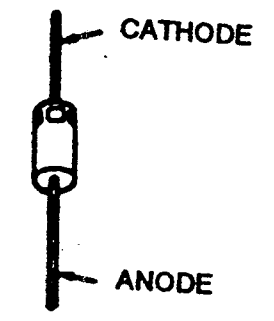
CATHODE
ANODE

ERB43-08
ERC38-06
RD13E-B2
10E1
1SS83

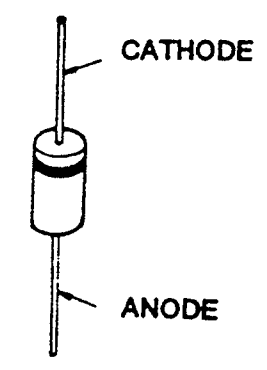
CATHODE
ANODE

ERC06-15SA
GH3F
U05G
V06C
V09G
V11N
V19E
V19EF1

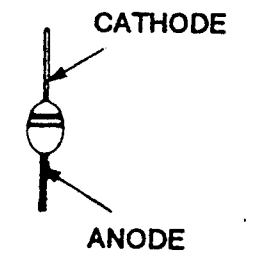
CATHODE
ANODE

ERC88-009

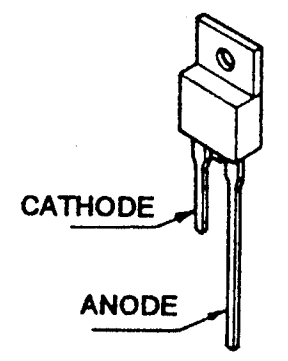
CATHODE
ANODE

ERC91-02
RU-1
RU-1C

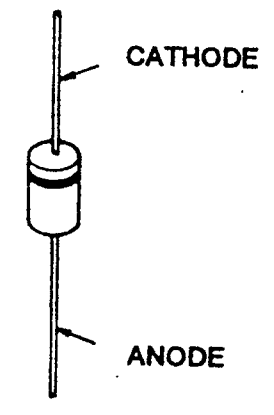
CATHODE
ANODE

ERD29-08J
ERD33-02


CATHODE
ANODE

ESAD39-06C
ESAD39-06N

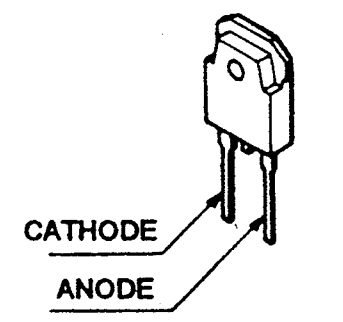
CATHODE
ANODE

FMG-24R
FML-22R

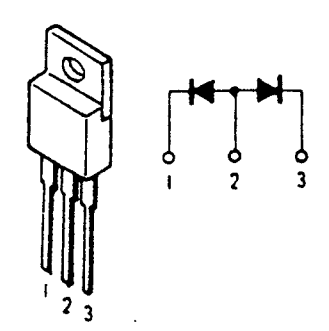

FMG-24S
FML-22S

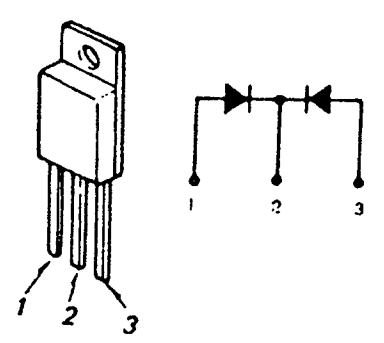

FML-32S

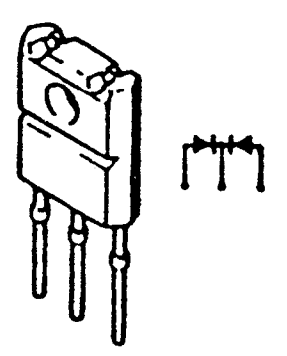

MA152WK
MA153WK
1S2837



RD10ES-B2
RD12ES-B2
RD12ES-B3
RD13ES-B2
RD15ES-B2
RD18ES-B1
RD2.0ES-B2
RD20ES-B2
RD3.3ES-B2
RD39ES-B1
RD39ES-B2
RD5.1ES-B1
RD5.1ES-B2
RD5.6ES-B2
RD5.6ES-B3
RD6.2ES-B2
RD6.8ES-B2
RD8.2ES-B2
11EQS04
1SS119
1SS120

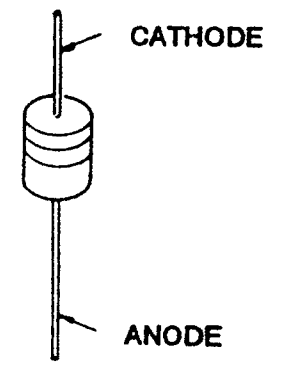
CATHODE
ANODE

RD12M-B2
RD13M-B2
RD2.4M-B
RD3.3M-B1
RD3.6M-B1
RD5.1M-B2
RD6.2M-B1
1SS193
1SS220



S15VB60



03P2M

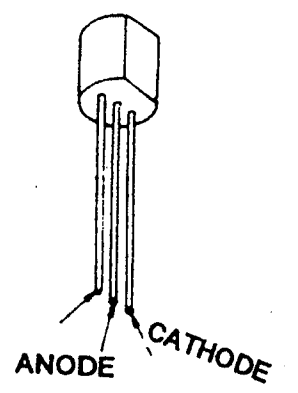
ANODE
CATHODE

1SS123
1SS226



1S2835
1S2836



GL-6R202



BOTTOM VIEW

GL3EG8
SLP281C-50
TLG123A
TLR123

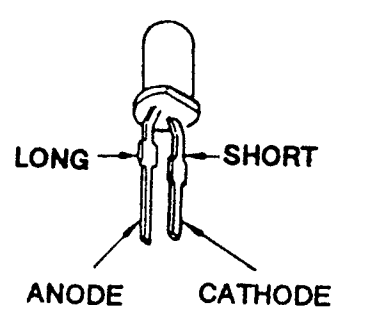
LONG
SHORT
ANODE
CATHODE

LN25RP
TLR214

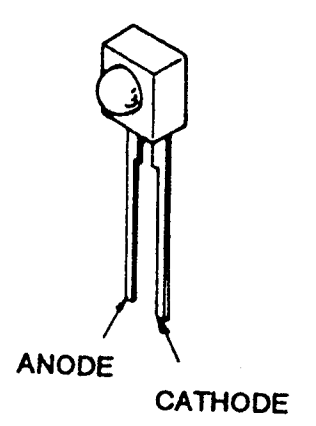
ANODE
CATHODE

SE303AY

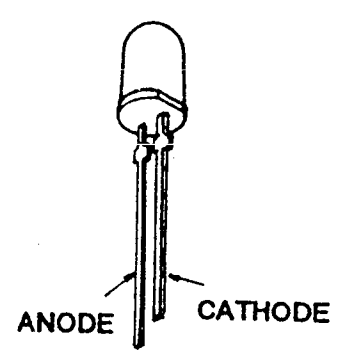
ANODE
CATHODE

SLH-34MC3

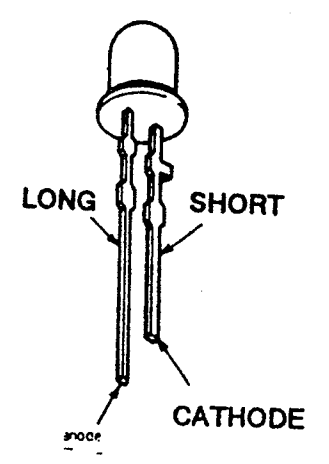
LONG
SHORT
CATHODE

SLP144B


cathode
anode

SECTION 8
EXPLODED VIEWS

NOTE:
- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

8-1. CABINET (L) BLOCK

■: 7-682-565-09 +B4×16
▲: 7-682-570-09 +B4×40
◎: 7-682-550-09 +B3×12
□: 7-682-569-09 +B4×35
△: 7-685-647-79 +BVTP3×10
◆: 7-685-134-19 +P2.6×8
◇: 7-621-775-00 +P2.6×3
▼: 7-621-853-20 SCREW, WOOD +K3.1×10

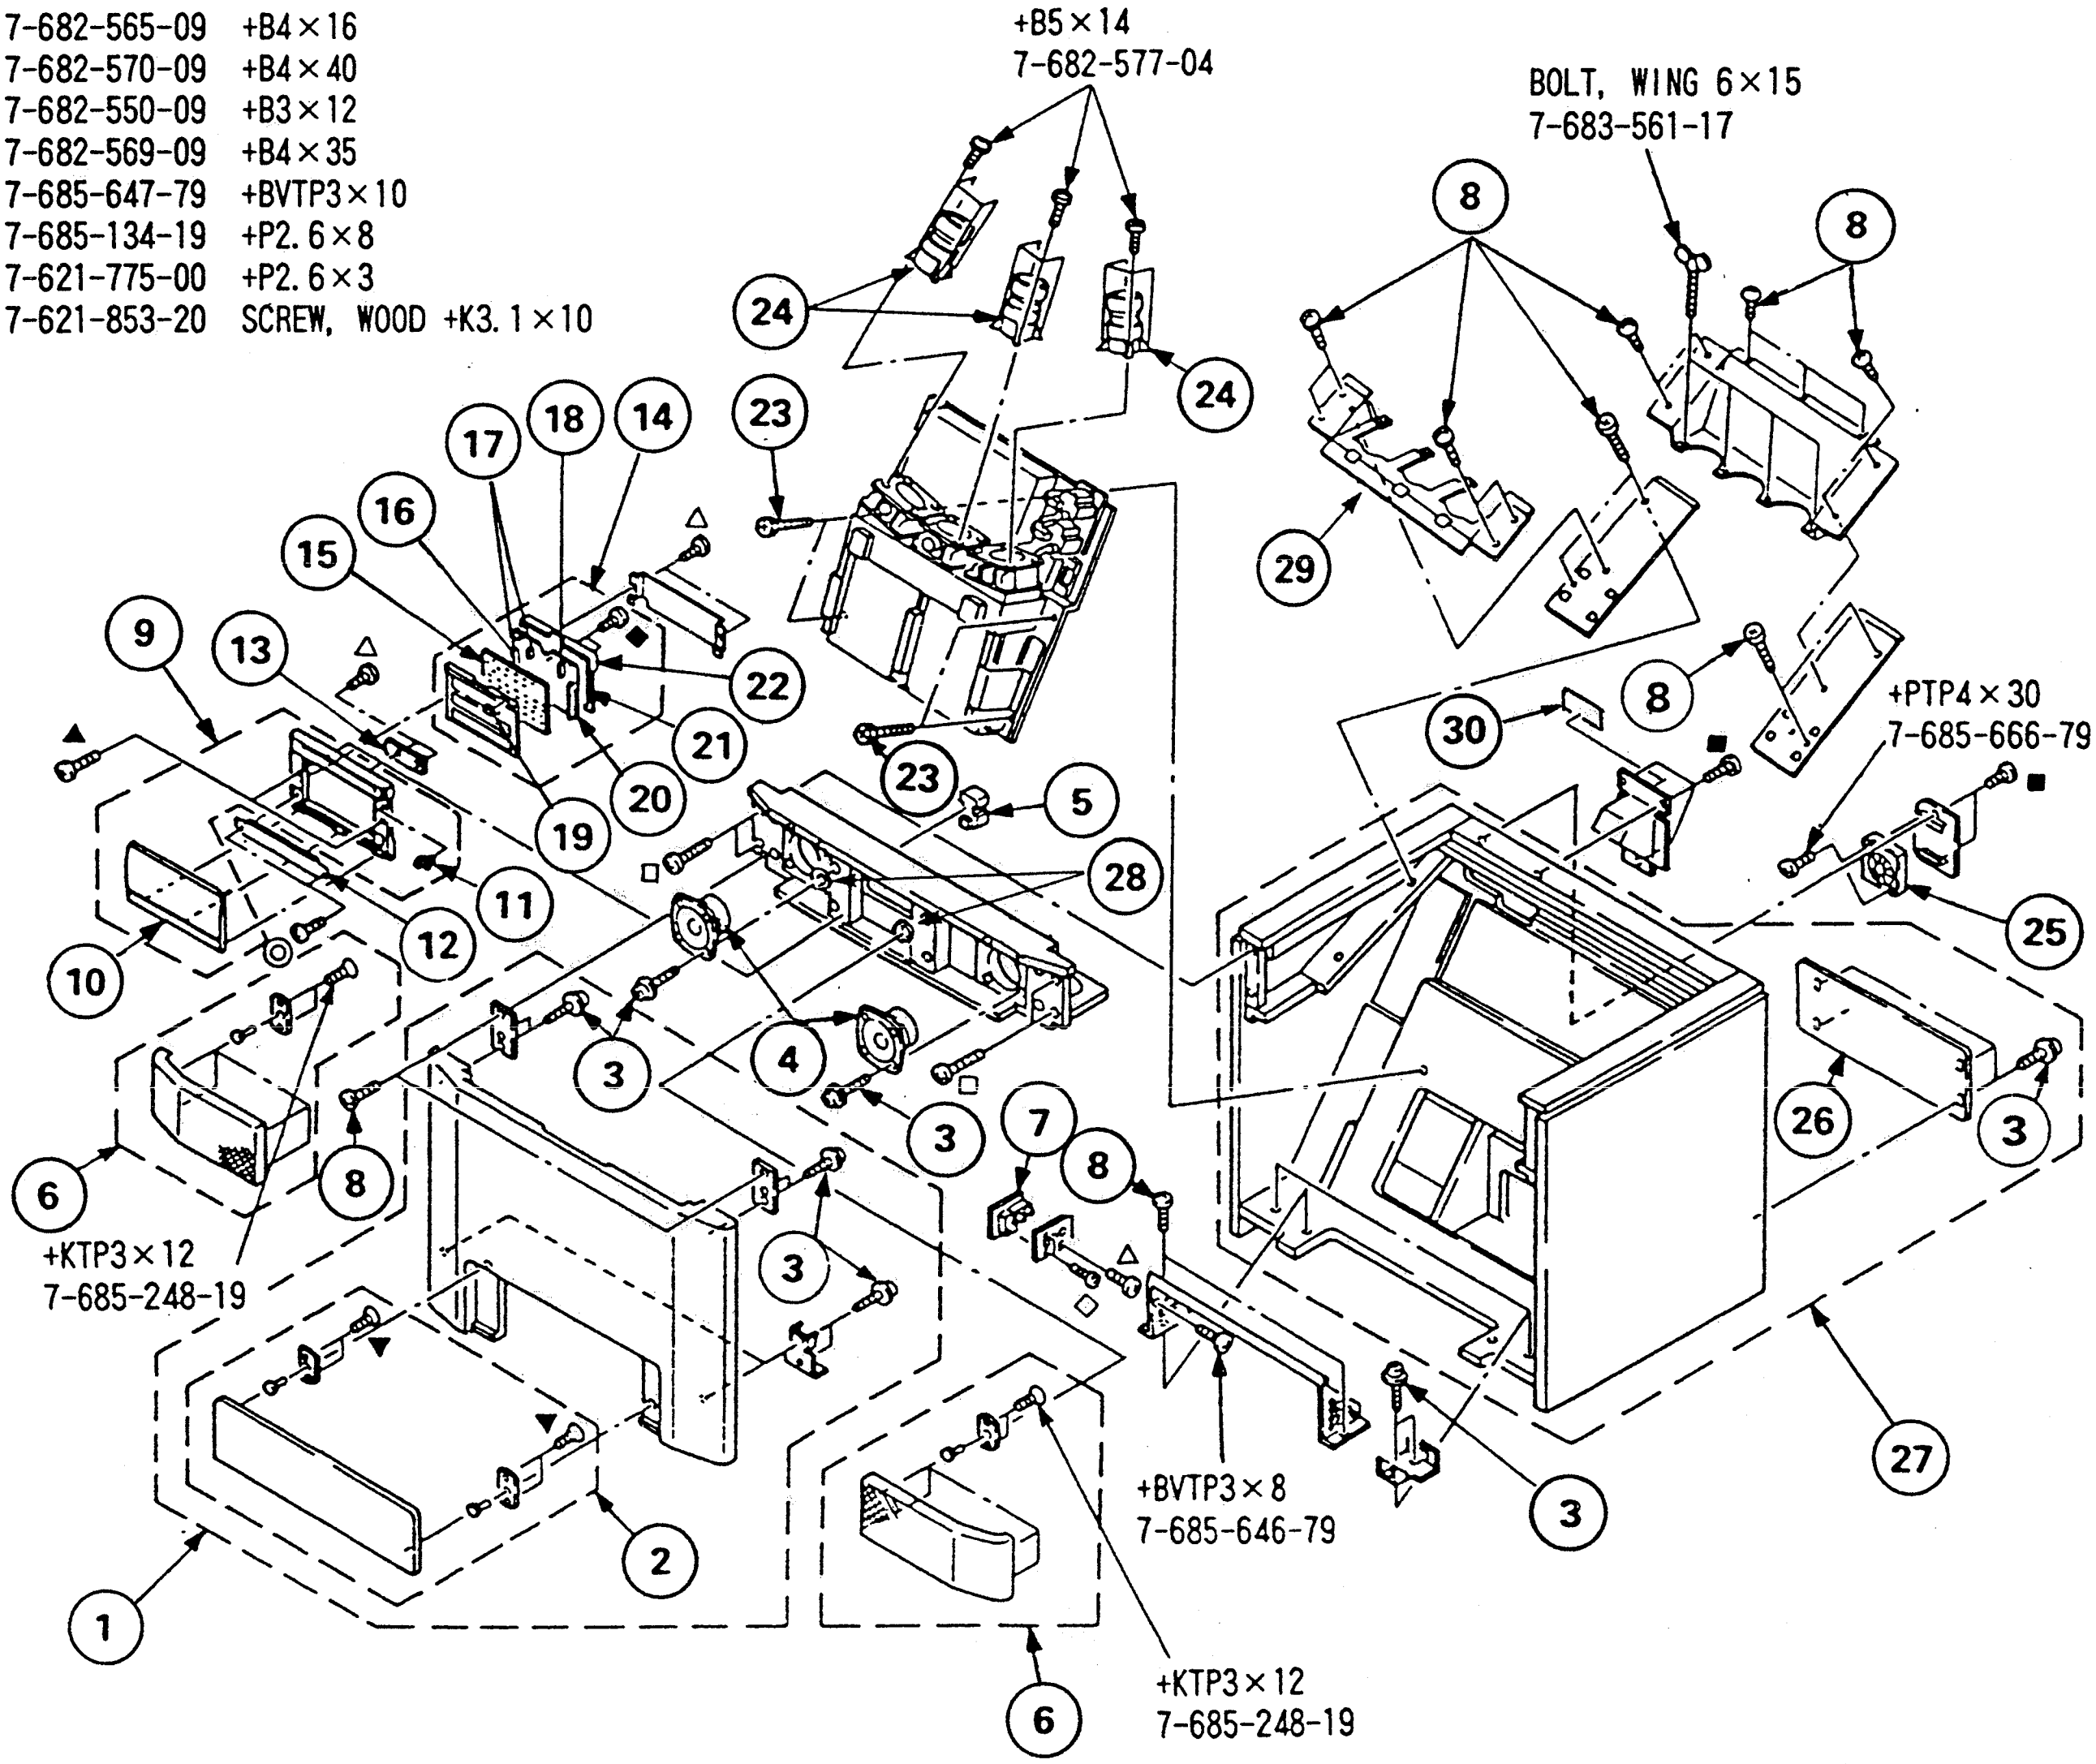
+B5×14
7-682-577-04
BOLT, WING 6×15
7-683-561-17
8
8
24
24
23
17
18
14
16
15
9
13
29
22
21
20
19
30
8
+PTP4×30
7-685-666-79
23
5
28
25
11
12
10
3
4
3
7
8
26
3
6
8
+KTP3×12
7-685-248-19
3
27
+BVTP3×8
7-685-646-79
3
2
1
6
+KTP3×12
7-685-248-19

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	*X-4029-033-1	COVER ASSY, FRONT	2, 3
2	*X-4029-024-1	DOOR ASSY, FRONT	
3	4-378-522-01	SCREW, TAPPING, HEXAGON HEAD	
4	1-503-917-11	SPEAKER	
5	⚠. 3-701-983-02	BUSHING, AC CORD	
6	X-4029-026-1	GRILLE ASSY, SPEAKER	
7	*A-1373-237-A	COMPLETE PCB, U	
8	3-701-810-91	SCREW, TERMINAL	
9	X-4029-073-1	HOLDER (F) ASSY, CONTROL PANEL	10, 11
10	4-396-994-01	DOOR, CONTROL	
11	4-392-036-01	CATCHER, PUSH	
12	*4-396-950-01	COVER, SWITCH	
13	*A-1390-102-A	COMPLETE PCB, N	
14	A-1499-936-A	PANEL ASSY, CONTROL	15-22
15	4-395-509-01	SHEET, RUBBER	
16	*1-631-356-11	RCA BOARD	
17	*1-631-493-11	RCD BOARD	
18	*1-631-358-11	RCC BOARD	
19	4-395-501-01	KEY TOP	
20	*1-631-357-11	RCB BOARD	
21	*1-631-359-11	RC BOARD	
22	4-395-508-01	CASE, LOWER	
23	4-396-260-11	BOLT, SOCKET HEXAGON	
24	4-396-957-01	LENS (HD-116)	
25	1-541-703-11	FAN, DC	
26	*4-398-722-01	COVER, RACK	
27	*X-4029-032-1	CABINET (L) ASS'Y	3, 26
28	3-703-237-00	CUSHION	
29	4-396-989-02	ENCLOSURE (U, F)	
30	*4-603-369-02	LABEL(CLASS A), FCC	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

8-2. POWER BLOCK AND ED BLOCK

▽: 7-685-646-79 +BVTP3×8
★: 7-682-549-04 SCREW, TERMINAL (M3×10)
☆: 7-682-561-04 SCREW, TERMINAL

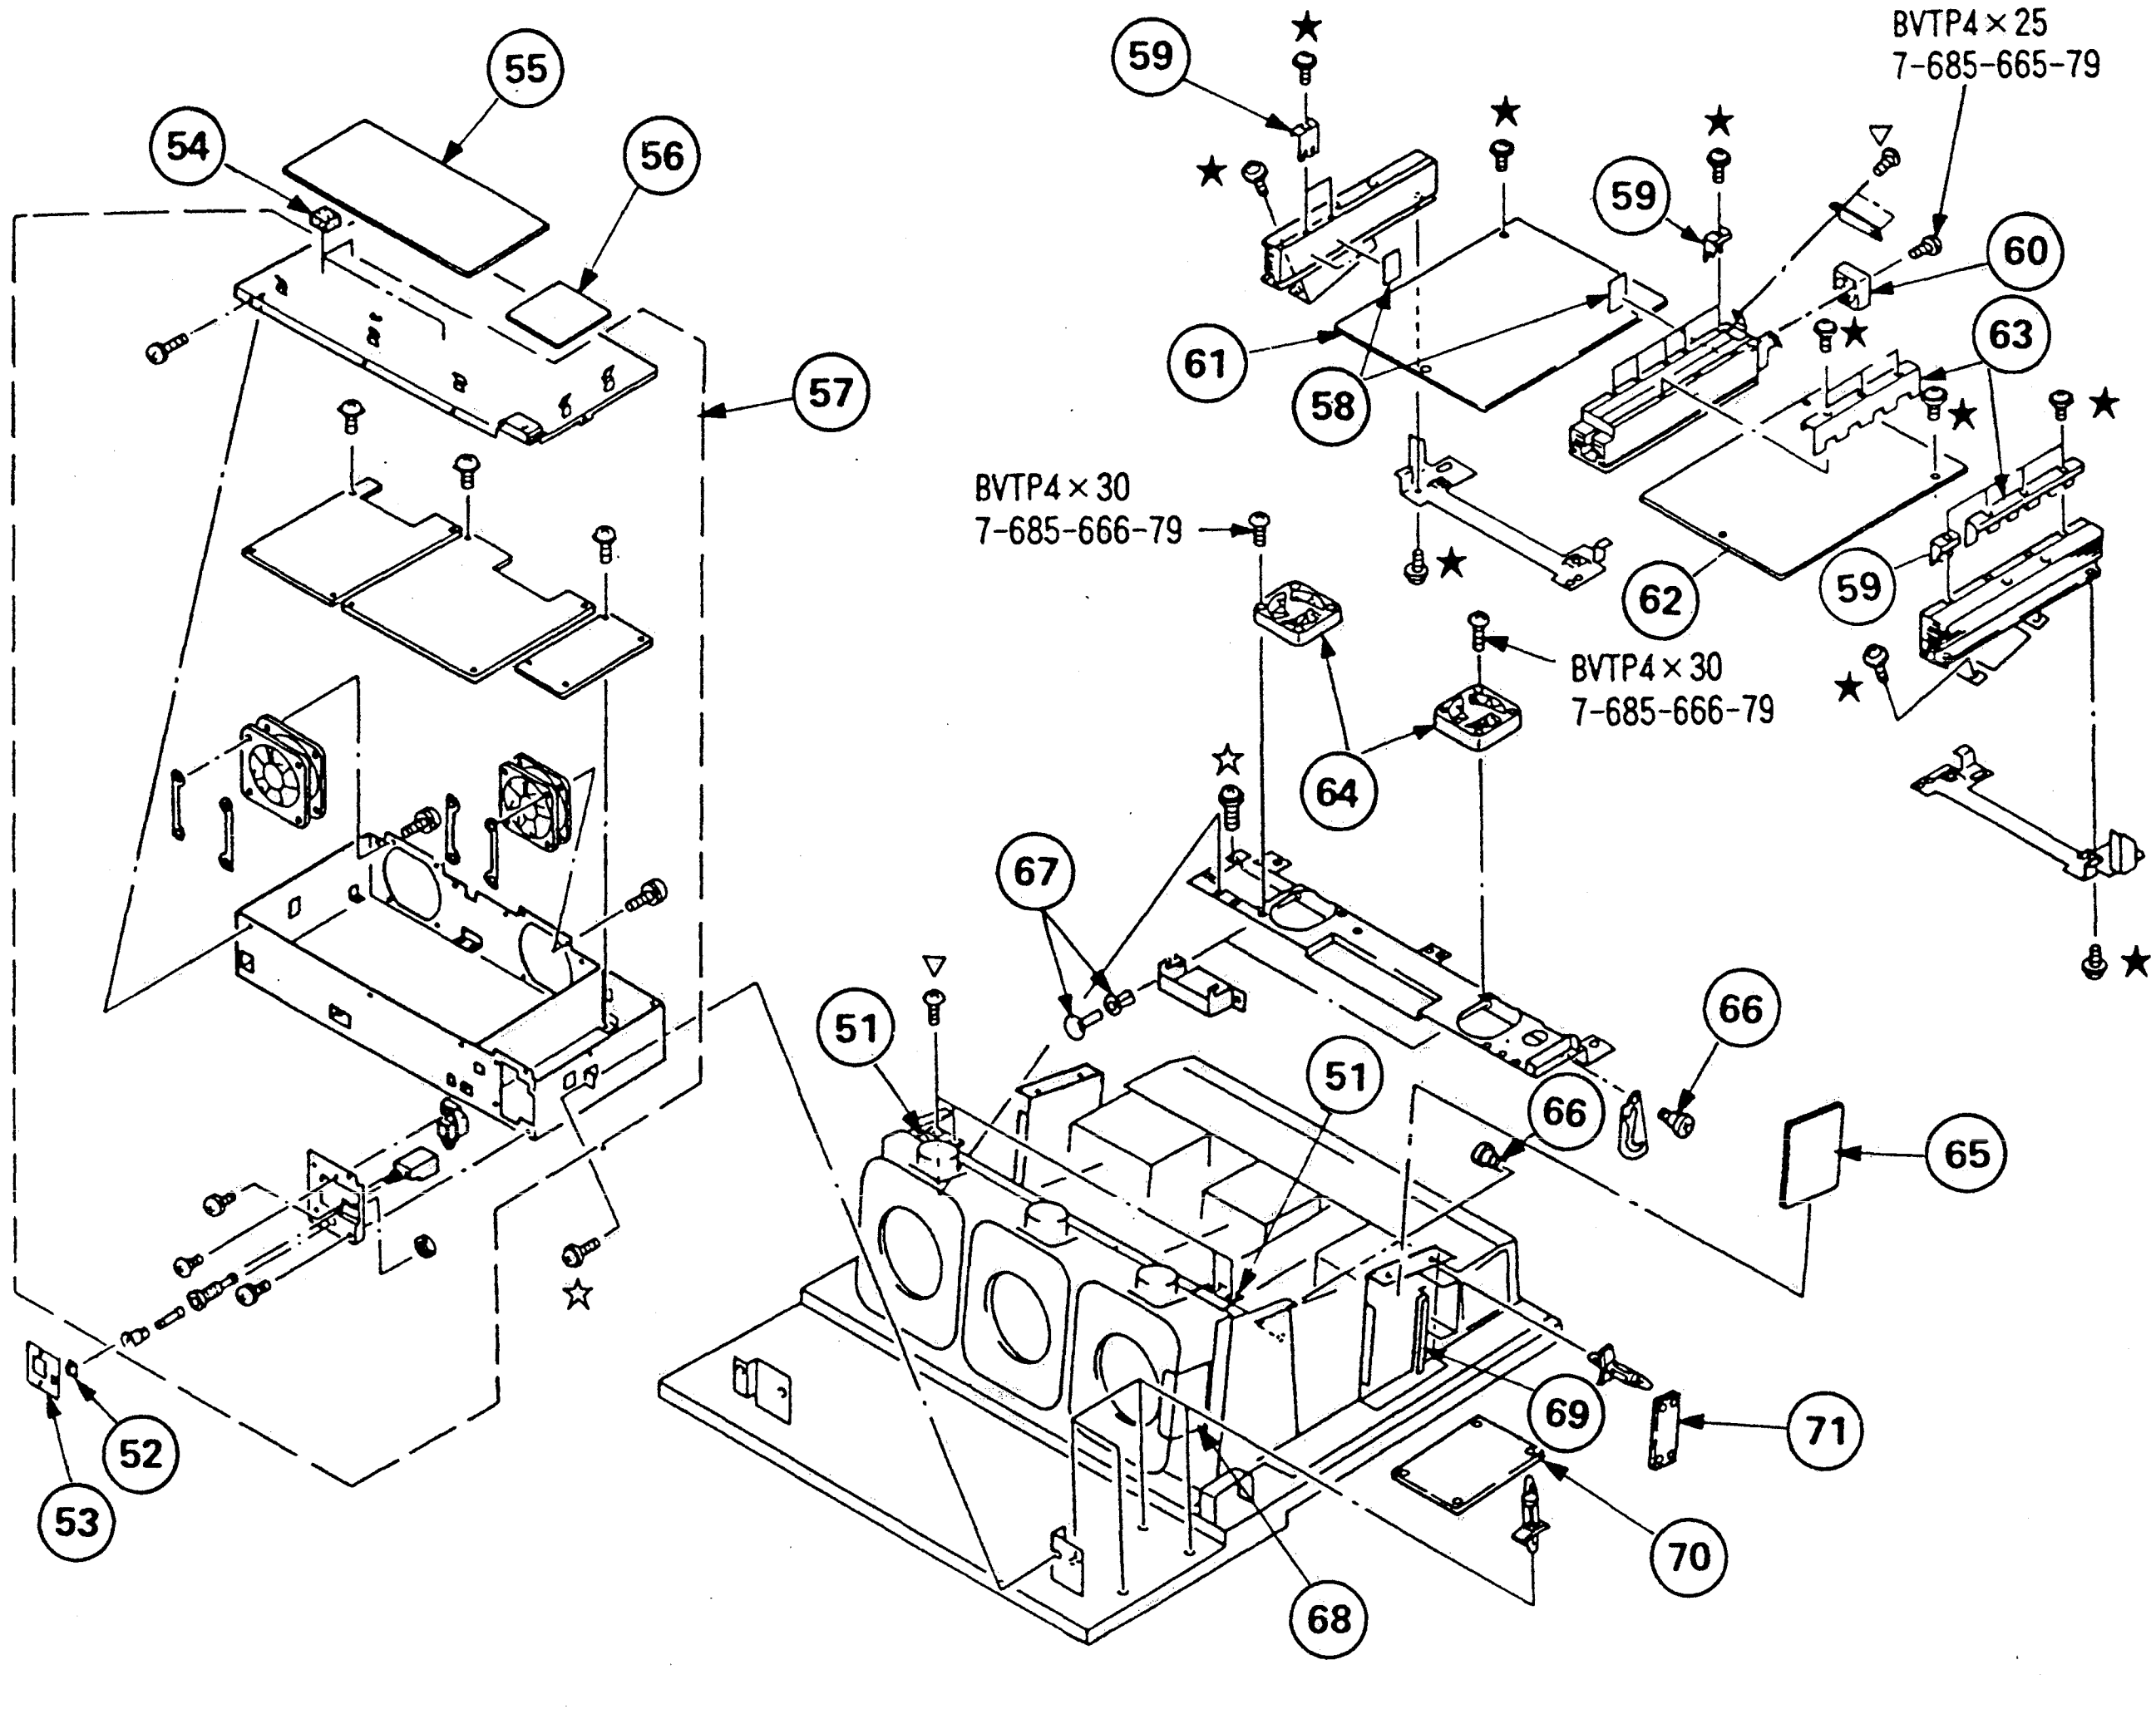
55
54
56
57
52
53
59
★
BVTP4×25
7-685-665-79
▽
60
63
61
58
62
BVTP4×30
7-685-666-79
BVTP4×30
7-685-666-79
64
☆
67
51
66
65
69
71
70
68

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	*3-658-816-00	HINGE, FRONT	
52	4-362-811-00	BUTTON, MAIN POWER	
53	4-396-205-01	PLATE, POWER	
54	*4-398-732-01	CUSHION	
55	*A-1195-033-A	COMPLETE PCB, PA	
56	*A-1380-289-A	MOUNTED PCB, K	
57	⚠ 1-413-483-13	REGULATOR, SWITCHING (SOPS1008B)	
58	4-393-406-01	SHEET (R), RADIATION	
59	*4-395-528-01	HOLDER (C), TR	
60	1-541-702-11	FAN, DC	
61	*A-1345-923-A	COMPLETE PCB, E	
62	*A-1345-922-A	COMPLETE PCB, DC	
63	*4-395-553-01	HOLDER (A), TR	
64	1-541-703-11	FAN, DC	
65	*A-1380-290-A	MOUNTED PCB, KA	
66	3-671-135-00	SCREW, STEP	
67	4-374-303-01	RIVET, NYLON	
68	*X-4395-575-1	PLATE ASSY, SHIELD	
69	*3-703-353-07	SUPPORT, PC BOARD	
70	*A-1240-970-A	COMPLETE PCB, F	
71	*A-1380-316-A	COMPLETE PCB, KB	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

8-3. C SHIELD BLOCK

▽: 7-685-646-79 +BVTP3×8
★: 7-682-549-04 SCREW, TERMINAL (M3×10)
◎: 7-685-660-79 BVTP4×10
□: 7-685-663-79 +ITTP4×16

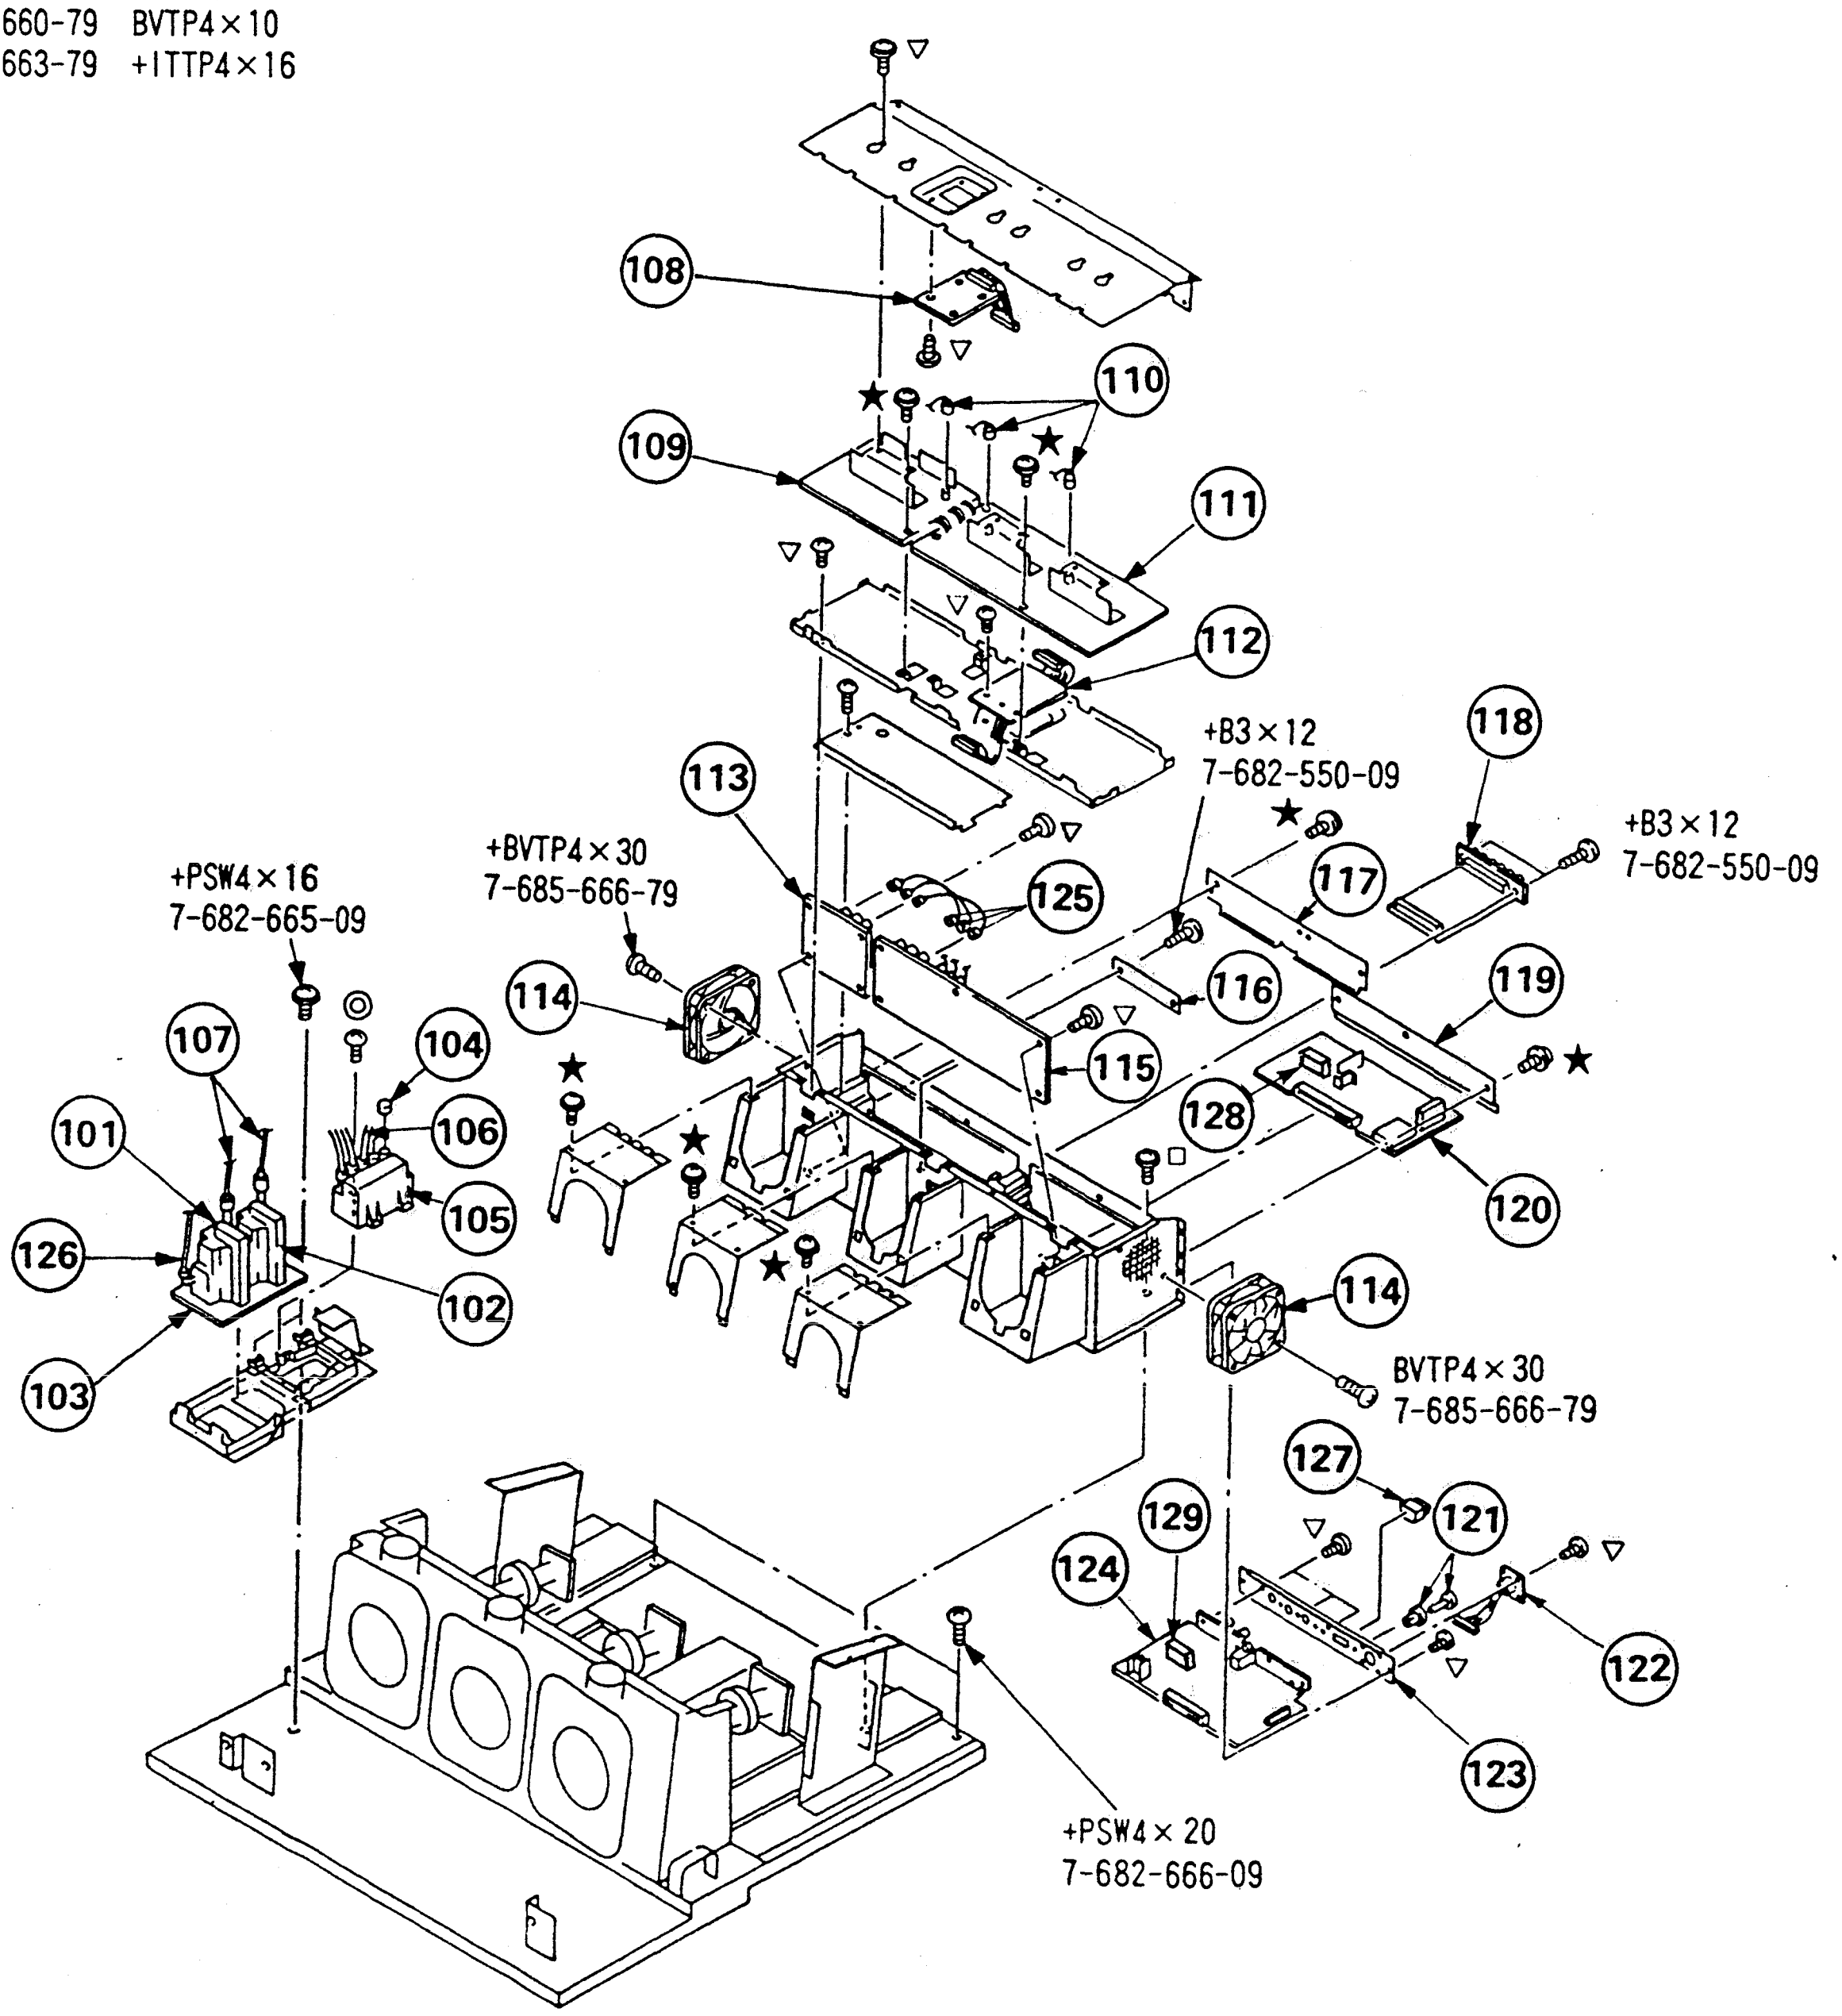
108
109
110
111
112
113
114
115
116
117
118
119
120
125
128
+B3×12
7-682-550-09
+B3×12
7-682-550-09
+BVTP4×30
7-685-666-79
+PSW4×16
7-682-665-09
101
102
103
104
105
106
107
126
114
BVTP4×30
7-685-666-79
127
121
129
124
122
123
+PSW4×20
7-682-666-09

REF.NO.	PART NO.	DESCRIPTION	REMARK
101	⚠.1-439-466-11	TENSFORMER ASSY, FLYBACK (NX-2500)	
102	⚠.1-439-466-21	TENSFORMER ASSY, FLYBACK (NX-2502)	
103	*A-1190-132-A	COMPLETE PCB, PB	
104	4-373-137-01	CAP (Z), RUBBER	
105	⚠.1-453-108-31	DC BLOCK, HIGH-VOLTAGE	
106	⚠.1-559-865-31	LEAD ASSY, HIGH-VOLTAGE	
107	⚠ 1-439-466-11	LEAD ASSY. HIGH-VOLTAGE (50KV)	
108	*A-1331-004-A	COMPLETE PCB, CF-2	
109	*A-1335-013-A	COMPLETE PCB, CA (B)	
110	1-555-110-00	CABLE, P-P	
111	*A-1335-012-A	COMPLETE PCB, CA (RG)	
112	*A-1270-274-A	COMPLETE PCB, QM	
113	*A-1331-003-A	COMPLETE PCB, CF-1	
114	1-541-703-11	FAN, DC	
115	*A-1130-829-A	COMPLETE PCB, BM	
116	*4-395-530-01	PLATE (Q)	
117	*4-395-558-01	PLATE (Z)	
118	1-466-236-11	INPUT UNIT, RGB	
119	*4-395-559-11	PLATE (B)	
120	*A-1135-585-A	COMPLETE PCB, BA	
121	4-374-303-01	RIVET, NYLON	
122	1-575-092-11	CONNECTOR ASSY, MULTI 14P	
123	4-395-583-01	PANEL (B), CONNECTOR	
124	*A-1135-647-A	COMPLETE PCB, BB	
125	*1-575-091-11	CABLE, P-P	
126	⚠ 1-439-466-11	LEAD ASSY, HIGH-VOLTAGE (20KV)	
127	*3-673-948-11	CAP, DUST	
128	*A-1342-153-A	COMPLETE PCB, VT	
129	*A-1301-853-A	COMPLETE PCB, MT	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

8-4. CRT BLOCK

◎: 7-685-660-79 +BVTP4×10
□: 7-685-663-79 +ITTP4×16

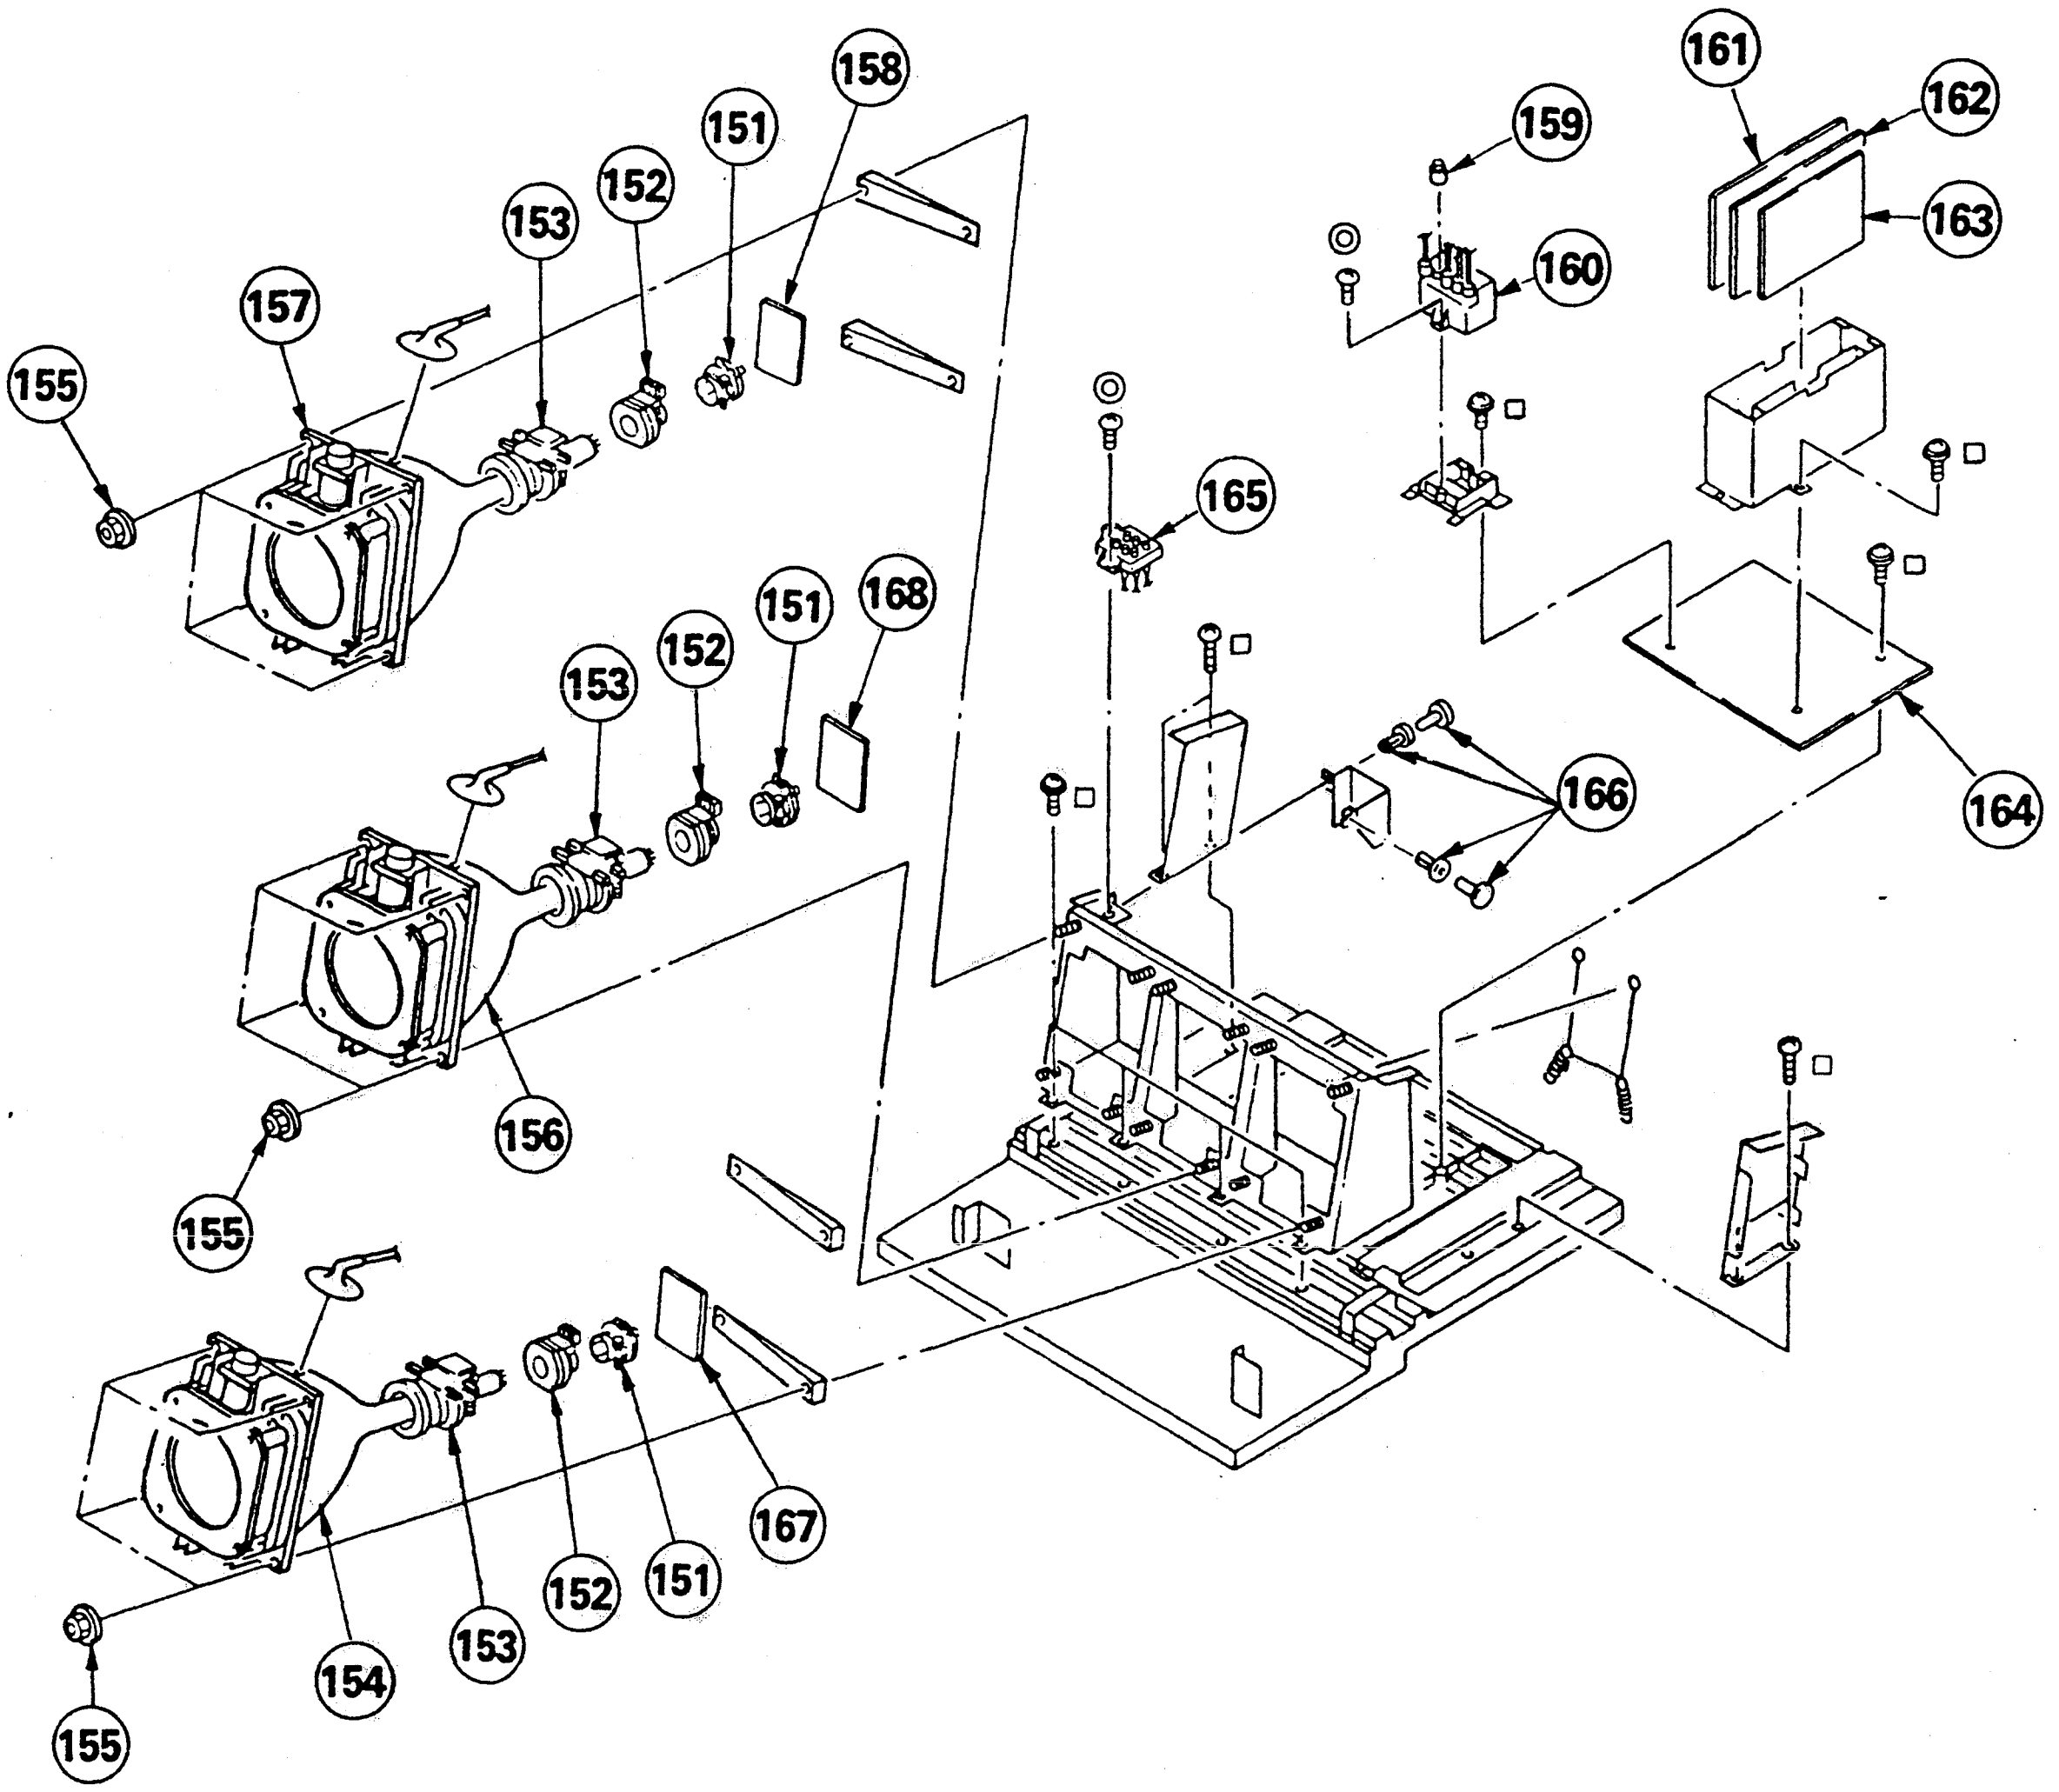
158
151
152
153
157
155
161
162
159
163
160
◎
□
165
166
164
151
168
152
153
156
155
167
152
151
153
154
155

REF.NO.	PART NO.	DESCRIPTION	REMARK
151	⚠.1-452-443-13	NECK ASSY, CRT (NA367)	
152	⚠.1-452-487-31	NECK ASSY, CRT (NA363A)	
153	⚠.1-451-355-12	DEFLECTION YOKE (Y636PJ)	
154	⚠.8-736-626-00	CRT 07MJR	
155	4-304-511-00	NUT, FLANGE	
156	⚠.8-736-624-00	CRT 07MJG	
157	⚠.8-736-625-00	CRT 07MJB	
158	*A-1331-007-A	COMPLETE PCB, CB (B)	
159	4-373-137-01	CAP (Z), RUBBER	
160	⚠.1-453-108-11	DC BLOCK, HIGH-VOLTAGE	
161	*A-1345-901-A	COMPLETE PCB, DB	
162	*A-1345-873-A	COMPLETE PCB, DA	
163	*A-1394-213-A	COMPLETE PCB, Y	
164	*A-1341-288-A	COMPLETE PCB, DM	
165	⚠.1-238-755-11	RESISTOR ASSY, HIGH-VOLTAGE	
166	4-374-303-01	RIVET, NYLON	
167	*A-1331-005-A	COMPLETE PCB, CB (R)	
168	*A-1331-006-A	COMPLETE PCB, CB (G)	

SECTION 9
ELECTRICAL PARTS LIST

BM **BA**

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : mH, UH : μH

- The components identified by ⧓ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- ⋇ : Selected to yield optimum performance.
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*A-1130-829-A	BM BOARD, COMPLETE ******************	
	*1-564-509-11	PLUG, CONNECTOR 6P	
	*1-564-515-11	PLUG, CONNECTOR 12P	
	*1-568-979-11	CONNECTOR 30P	
	*1-568-981-11	CONNECTOR, MALE 64P	
	*1-568-985-11	CONNECTOR, FEMALE 64P	
	*1-629-818-11	BM BOARD	
	<CONNECTOR>		
BM1	*1-568-984-11	CONNECTOR, MALE 96P	
BM3	*1-568-982-11	CONNECTOR, FEMALE 96P	
BM4	*1-568-982-11	CONNECTOR, FEMALE 96P	
	<JACK>		
J1	*1-526-575-00	SOCKET, PLUG 1P	
J2	*1-526-575-00	SOCKET, PLUG 1P	
J3	*1-526-575-00	SOCKET, PLUG 1P	
J4	*1-526-575-00	SOCKET, PLUG 1P	
J5	*1-526-575-00	SOCKET, PLUG 1P	
J6	*1-526-575-00	SOCKET, PLUG 1P	
**			
	*A-1135-585-A	BA BOARD, COMPLETE ******************	
	*1-568-984-11	CONNECTOR, MALE 96P	
	<MODULE>		
BPF001	1-236-366-11	MODULE, TRAP	
BPF002	1-236-365-11	MODULE, TRAP	
BPF003	1-236-063-11	MODULE, B.P.F	

REF.NO.	PART NO.	DESCRIPTION			REMARK
		<CAPACITOR>			
C001	1-124-477-11	ELECT	47MF	20%	16V
C002	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C003	1-126-233-11	ELECT	22MF	20%	50V
C004	1-126-233-11	ELECT	22MF	20%	50V
C005	1-126-233-11	ELECT	22MF	20%	50V
C006	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C007	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C008	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C009	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C010	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C011	1-126-101-11	ELECT	100MF	20%	16V
C012	1-123-875-11	ELECT	10MF	20%	50V
C013	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C014	1-126-233-11	ELECT	22MF	20%	50V
C015	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C016	1-126-233-11	ELECT	22MF	20%	50V
C017	1-126-101-11	ELECT	100MF	20%	16V
C018	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C019	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C020	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C021	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C022	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C023	1-163-088-00	CERAMIC CHIP	5PF	0.25PF	50V
C024	1-163-141-00	CERAMIC CHIP	0.001MF	5%	50V
C027	1-123-875-11	ELECT	10MF	20%	50V
C030	1-163-213-00	CERAMIC CHIP	0.0022MF	10%	50V
C101	1-124-119-00	ELECT	330MF	20%	16V
C102	1-124-119-00	ELECT	330MF	20%	16V
C103	1-163-111-00	CERAMIC CHIP	56PF	5%	50V
C104	1-163-033-00	CERAMIC CHIP	0.022MF		50V
C105	1-136-153-00	FILM	0.01MF	5%	50V
C106	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C107	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C108	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C109	1-163-099-00	CERAMIC CHIP	18PF	5%	50V

BA

REF.NO.	PART NO.	DESCRIPTION			REMARK
C110	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C111	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C112	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C113	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C114	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C115	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C116	1-124-791-11	ELECT	1MF	20%	50V
C117	1-124-791-11	ELECT	1MF	20%	50V
C118	1-136-173-00	FILM	0.47MF	5%	50V
C119	1-136-161-00	FILM	0.047MF	5%	50V
C120	1-136-157-00	FILM	0.022MF	5%	50V
C121	1-136-157-00	FILM	0.022MF	5%	50V
C122	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C123	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C124	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C201	1-124-477-11	ELECT	47MF	20%	16V
C202	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C203	1-126-233-11	ELECT	22MF	20%	50V
C204	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C205	1-126-233-11	ELECT	22MF	20%	50V
C206	1-136-169-00	FILM	0.22MF	5%	50V
C207	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C208	1-124-902-00	ELECT	0.47MF	20%	50V
C209	1-124-902-00	ELECT	0.47MF	20%	50V
C210	1-124-902-00	ELECT	0.47MF	20%	50V
C214	1-126-233-11	ELECT	22MF	20%	50V
C215	1-124-477-11	ELECT	47MF	20%	16V
C216	1-124-464-11	ELECT	0.22MF	20%	50V
C217	1-124-464-11	ELECT	0.22MF	20%	50V
C218	1-124-477-11	ELECT	47MF	20%	16V
C219	1-136-157-00	FILM	0.022MF	5%	50V
C220	1-130-471-00	MYLAR	0.001MF	5%	50V
C221	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C222	1-136-169-00	FILM	0.22MF	5%	50V
C223	1-136-153-00	FILM	0.01MF	5%	50V
C224	1-124-463-00	ELECT	0.1MF	20%	50V
C225	1-130-479-00	MYLAR	0.0047MF	5%	50V
C226	1-124-791-11	ELECT	1MF	20%	50V
C227	1-136-153-00	FILM	0.01MF	5%	50V
C228	1-124-927-11	ELECT	4.7MF	20%	50V
C229	1-124-927-11	ELECT	4.7MF	20%	50V
C230	1-130-477-00	MYLAR	0.0033MF	5%	50V
C231	1-130-481-00	MYLAR	0.0068MF	5%	50V
C232	1-130-476-00	MYLAR	0.0027MF	5%	50V
C233	1-136-161-00	FILM	0.047MF	5%	50V
C235	1-124-925-11	ELECT	2.2MF	20%	50V
C236	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C237	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C238	1-124-925-11	ELECT	2.2MF	20%	50V
C239	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C240	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C241	1-124-925-11	ELECT	2.2MF	20%	50V
C242	1-124-925-11	ELECT	2.2MF	20%	50V
C243	1-124-925-11	ELECT	2.2MF	20%	50V
C244	1-123-875-11	ELECT	10MF	20%	50V
C245	1-123-875-11	ELECT	10MF	20%	50V
C246	1-123-875-11	ELECT	10MF	20%	50V
C247	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C249	1-126-101-11	ELECT	100MF	20%	16V
C250	1-124-120-11	ELECT	220MF	20%	16V
C251	1-126-101-11	ELECT	100MF	20%	16V
C252	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C254	1-126-101-11	ELECT	100MF	20%	16V
C255	1-123-875-11	ELECT	10MF	20%	50V
C257	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C259	1-124-464-11	ELECT	0.22MF	20%	50V
C260	1-124-477-11	ELECT	47MF	20%	16V
C261	1-124-925-11	ELECT	2.2MF	20%	50V
C262	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C265	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C349	1-126-233-11	ELECT	22MF	20%	50V
C350	1-123-875-11	ELECT	10MF	20%	50V
C351	1-136-169-00	FILM	0.22MF	5%	50V
C352	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C353	1-123-875-11	ELECT	10MF	20%	50V
C354	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
		<FILTER>			
CM001	1-466-162-22	BLOCK, COM FILTER (CFB-4)			
		<TRIMMER>			
CT101	1-141-181-11	CAP,TRIMMER			
CT102	1-141-181-11	CAP,TRIMMER			
		<DIODE>			
D004	8-719-400-18	DIODE MA152WK			
D006	8-719-105-82	DIODE RD5.1M-B2			
D010	8-719-105-XX	DIODE RD6.2-B1			
D101	8-719-400-18	DIODE MA152WK			
D102	8-719-400-18	DIODE MA152WK			
D103	8-719-400-18	DIODE MA152WK			
D104	8-719-911-19	DIODE 1SS119			
D201	8-719-900-95	DIODE V09G			
D202	8-719-104-34	DIODE 1S2836			
D204	8-719-400-18	DIODE MA152WK			
D206	8-719-400-18	DIODE MA152WK			
D207	8-719-400-18	DIODE MA152WK			
D208	8-719-105-45	DIODE RD3.3-B1			
D209	8-719-105-45	DIODE RD3.3-B1			
D210	8-719-400-18	DIODE MA152WK			
		<DELAY LINE>			
DL001	1-415-632-11	DELAY LINE, Y			
DL101	1-415-122-31	DELAY LINE, 1H (PAL)			
		<IC>			
IC001	8-759-340-52	IC TC4053BP			
IC002	8-759-947-20	IC TDA4555-V8			
IC003	8-752-034-85	IC CXA1216P			
IC004	8-759-946-99	IC TDA2595-V7			
IC005	8-759-240-53	IC HD14053BP			

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC006	8-759-232-64	IC TC74HC157AP	
IC007	8-759-232-21	IC TC74HC27AP	
IC008	8-759-604-39	IC M5F78M12	
IC009	8-759-979-16	IC CX-7916	
IC010	1-808-891-11	MODULE (SNY-9202)	
IC012	8-759-945-58	IC RC4558PC	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L001	1-410-478-11	INDUCTOR 47UH	
L101	1-404-584-11	COIL	
L102	1-404-554-11	COIL	
L103	1-404-539-11	COIL	
L104	1-404-554-11	COIL	
L105	1-404-554-11	COIL	
L106	1-410-466-41	INDUCTOR 4.7UH	
L107	1-408-406-00	INDUCTOR 5.6UH	
L108	1-410-478-11	INDUCTOR 47UH	
L109	1-410-209-51	INDUCTOR CHIP 27UH	
L201	1-459-155-00	COIL (WITH CORE) 45UH	
L202	1-459-155-00	COIL (WITH CORE) 45UH	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q001	8-729-230-49	TRANSISTOR 2SC2712	
Q002	8-729-216-22	TRANSISTOR 2SA1162	
Q003	8-729-230-49	TRANSISTOR 2SC2712	
Q004	8-729-230-49	TRANSISTOR 2SC2712	
Q005	8-729-230-49	TRANSISTOR 2SC2712	
Q006	8-729-230-49	TRANSISTOR 2SC2712	
Q007	8-729-230-49	TRANSISTOR 2SC2712	
Q008	8-729-230-49	TRANSISTOR 2SC2712	
Q009	8-729-230-49	TRANSISTOR 2SC2712	
Q010	8-729-230-49	TRANSISTOR 2SC2712	
Q012	8-729-901-01	TRANSISTOR DTC144EK	
Q013	8-729-901-01	TRANSISTOR DTC144EK	
Q014	8-729-230-49	TRANSISTOR 2SC2712	
Q015	8-729-230-49	TRANSISTOR 2SC2712	
Q016	8-729-901-01	TRANSISTOR DTC144EK	
Q017	8-729-901-01	TRANSISTOR DTC144EK	
Q018	8-729-900-53	TRANSISTOR DTC114EK	
Q019	8-729-900-53	TRANSISTOR DTC114EK	
Q101	8-729-901-01	TRANSISTOR DTC144EK	
Q102	8-729-230-49	TRANSISTOR 2SC2712	
Q103	8-729-901-01	TRANSISTOR DTC144EK	
Q104	8-729-901-01	TRANSISTOR DTC144EK	
Q106	8-729-901-01	TRANSISTOR DTC144EK	
Q107	8-729-901-01	TRANSISTOR DTC144EK	
Q108	8-729-901-01	TRANSISTOR DTC144EK	
Q201	8-729-140-96	TRANSISTOR 2SD774-34	
Q202	8-729-216-22	TRANSISTOR 2SA1162	
Q203	8-729-216-22	TRANSISTOR 2SA1162	
Q204	8-729-216-22	TRANSISTOR 2SA1162	
Q205	8-729-230-49	TRANSISTOR 2SC2712	
Q206	8-729-230-49	TRANSISTOR 2SC2712	

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q207	8-729-230-49	TRANSISTOR 2SC2712	
Q208	8-729-230-49	TRANSISTOR 2SC2712	
Q209	8-729-230-49	TRANSISTOR 2SC2712	
Q210	8-729-216-22	TRANSISTOR 2SA1162	
Q212	8-729-116-06	TRANSISTOR 2SK160-K6	
Q213	8-729-230-49	TRANSISTOR 2SC2712	
Q214	8-729-116-06	TRANSISTOR 2SK160-K6	
Q215	8-729-230-49	TRANSISTOR 2SC2712	
Q216	8-729-116-06	TRANSISTOR 2SK160-K6	
Q217	8-729-230-49	TRANSISTOR 2SC2712	
Q218	8-729-216-22	TRANSISTOR 2SA1162	
Q219	8-729-216-22	TRANSISTOR 2SA1162	
Q220	8-729-230-49	TRANSISTOR 2SC2712	
Q221	8-729-230-49	TRANSISTOR 2SC2712	
Q222	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q224	8-729-901-01	TRANSISTOR DTC144EK	
Q225	8-729-901-01	TRANSISTOR DTC144EK	
Q226	8-729-901-01	TRANSISTOR DTC144EK	
Q347	8-729-901-01	TRANSISTOR DTC144EK	
Q348	8-729-901-01	TRANSISTOR DTC144EK	
Q349	8-729-901-01	TRANSISTOR DTC144EK	
Q350	8-729-901-01	TRANSISTOR DTC144EK	
Q351	8-729-230-49	TRANSISTOR 2SC2712	
Q352	8-729-230-49	TRANSISTOR 2SC2712	
Q355	8-729-230-49	TRANSISTOR 2SC2712	
Q356	8-729-901-01	TRANSISTOR DTC144EK	
Q357	8-729-901-01	TRANSISTOR DTC144EK	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
R001	1-216-001-00	METAL GLAZE 10 5% 1/10W	
R002	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
R003	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R004	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W	
R005	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R006	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R007	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R008	1-216-001-00	METAL GLAZE 10 5% 1/10W	
R009	1-216-643-11	METAL CHIP 470 0.50% 1/10W	
R010	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R011	1-216-001-00	METAL GLAZE 10 5% 1/10W	
R012	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R013	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R014	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R015	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R016	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R017	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R018	1-216-647-11	METAL CHIP 680 0.50% 1/10W	
R019	1-216-647-11	METAL CHIP 680 0.50% 1/10W	
R020	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R021	1-216-643-11	METAL CHIP 470 0.50% 1/10W	
R022	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R023	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R024	1-216-637-11	METAL CHIP 270 0.50% 1/10W	
R025	1-216-637-11	METAL CHIP 270 0.50% 1/10W	

BA

REF.NO.	PART NO.	DESCRIPTION	REMARK
R026	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R027	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R028	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R029	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R030	1-216-009-00	METAL GLAZE 22 5% 1/10W	
R031	1-216-643-11	METAL CHIP 470 0.50% 1/10W	
R032	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R033	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R034	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R035	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R036	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R037	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R038	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R039	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R040	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R041	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R048	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R049	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R050	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R051	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R052	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R053	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R054	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R055	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R101	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R102	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R103	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R104	1-216-017-00	METAL GLAZE 47 5% 1/10W	
R105	1-216-039-00	METAL GLAZE 390 5% 1/10W	
R106	1-216-031-00	METAL GLAZE 180 5% 1/10W	
R107	1-216-647-11	METAL CHIP 680 0.50% 1/10W	
R108	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R109	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R111	1-216-066-00	METAL GLAZE 5.1K 5% 1/10W	
R112	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R113	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R114	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R115	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R116	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R117	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R118	1-216-665-11	METAL CHIP 3.9K 0.50% 1/10W	
R119	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R120	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
R122	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R123	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R124	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R126	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R127	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R128	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R140	1-216-689-11	METAL CHIP 39K 0.50% 1/10W	
R141	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R142	1-216-681-11	METAL CHIP 18K 0.50% 1/10W	
R143	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R144	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R145	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R146	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R149	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R201	1-216-643-11	METAL CHIP 470 0.50% 1/10W	
R202	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R204	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R205	1-216-119-00	METAL GLAZE 820K 5% 1/10W	
R206	1-216-109-00	METAL GLAZE 330K 5% 1/10W	
R207	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R208	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R209	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R210	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R211	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R212	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R213	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R216	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R217	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R220	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R221	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R222	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R224	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
R225	1-216-099-00	METAL GLAZE 120K 5% 1/10W	
R226	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R227	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R228	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R229	1-216-681-11	METAL CHIP 18K 0.50% 1/10W	
R230	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R231	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R232	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R233	1-216-101-00	METAL GLAZE 150K 5% 1/10W	
R234	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
R235	1-216-099-00	METAL GLAZE 120K 5% 1/10W	
R236	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R237	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R238	1-216-647-11	METAL CHIP 680 0.50% 1/10W	
R239	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R240	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R241	1-216-643-11	METAL CHIP 470 0.50% 1/10W	
R242	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R243	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R244	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
R245	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R246	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R247	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R248	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R249	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R250	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R251	1-216-095-00	METAL GLAZE 82K 5% 1/10W	
R252	1-216-083-00	METAL GLAZE 27K 5% 1/10W	
R253	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R254	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R255	1-216-017-00	METAL GLAZE 47 5% 1/10W	
R256	1-216-017-00	METAL GLAZE 47 5% 1/10W	
R257	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R258	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R259	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R260	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R261	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R262	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R263	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W	
R264	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R265	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R266	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R267	1-216-031-00	METAL GLAZE 180 5% 1/10W	
R268	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R269	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R270	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R271	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R272	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R273	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R274	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R275	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R276	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R277	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R278	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R279	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R280	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R281	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R282	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R283	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R284	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R285	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R286	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R287	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R288	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R289	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R290	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R291	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R293	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R294	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R295	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R296	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R297	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R298	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R299	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R300	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R301	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R303	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R304	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R305	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R306	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R307	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R308	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R309	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R310	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R340	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R341	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R375	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R376	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R377	1-249-393-11	CARBON	10	5%	1/4W	
R379	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R380	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R381	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R382	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R383	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R384	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R385	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R386	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R387	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R388	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R389	1-216-017-00	METAL GLAZE	47	5%	1/10W	

<VARIABLE RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
RV101	1-230-504-11	RES, ADJ, CARBON 220	
RV102	1-228-993-00	RES, ADJ, CARBON 4.7K	
RV201	1-228-995-00	RES, ADJ, CARBON 22K	
RV202	1-228-996-00	RES, ADJ, CARBON 47K	
RV203	1-228-993-00	RES, ADJ, CARBON 4.7K	
RV204	1-226-775-11	RES, ADJ, METAL GLAZE 100K	
RV205	1-226-775-11	RES, ADJ, METAL GLAZE 100K	

<SWITCH>

REF.NO.	PART NO.	DESCRIPTION	REMARK
SW1	1-570-859-11	SWITCH, SLIDE	

<THERMISTER>

REF.NO.	PART NO.	DESCRIPTION	REMARK
TH101	1-800-071-XX	THERMISTER	

<CRYSTAL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
X101	1-567-413-11	VIBRATOR, CRYSTAL	
X102	1-527-789-00	VINRATOR, CRYSTAL	

****

*A-1135-647-A BB BOARD, COMPLETE
****

*1-564-595-11 PLUG, CONNECTOR 14P
*1-568-984-11 CONNECTOR, MALE 96P

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
C402	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C404	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C405	1-126-101-11	ELECT	100MF	20%	16V	
C406	1-124-120-11	ELECT	220MF	20%	16V	
C407	1-126-101-11	ELECT	100MF	20%	16V	
C408	1-123-875-11	ELECT	10MF	20%	50V	
C409	1-126-101-11	ELECT	100MF	20%	16V	
C412	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C413	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C414	1-123-875-11	ELECT	10MF	20%	50V	
C415	1-126-101-11	ELECT	100MF	20%	16V	
C416	1-126-101-11	ELECT	100MF	20%	16V	
C417	1-124-120-11	ELECT	220MF	20%	16V	
C418	1-126-101-11	ELECT	100MF	20%	16V	
C419	1-126-101-11	ELECT	100MF	20%	16V	
C425	1-126-101-11	ELECT	100MF	20%	16V	
C450	1-163-113-00	CERAMIC CHIP	68PF	5%	50V	
C451	1-126-103-11	ELECT	470MF	20%	16V	
C453	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C501	1-124-463-00	ELECT	0.1MF	20%	50V	
C502	1-123-875-11	ELECT	10MF	20%	50V	
C503	1-124-477-11	ELECT	47MF	20%	16V	
C504	1-124-477-11	ELECT	47MF	20%	16V	
C505	1-124-927-11	ELECT	4.7MF	20%	50V	
C506	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	

BB

REF.NO.	PART NO.	DESCRIPTION			REMARK
C507	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C508	1-124-477-11	ELECT	47MF	20%	16V
C509	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C510	1-124-477-11	ELECT	47MF	20%	16V
C511	1-126-103-11	ELECT	470MF	20%	16V
C512	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C513	1-124-477-11	ELECT	47MF	20%	16V
C514	1-124-927-11	ELECT	4.7MF	20%	50V
C515	1-124-927-11	ELECT	4.7MF	20%	50V
C516	1-124-927-11	ELECT	4.7MF	20%	50V
C517	1-124-927-11	ELECT	4.7MF	20%	50V
C518	1-124-927-11	ELECT	4.7MF	20%	50V
C519	1-124-927-11	ELECT	4.7MF	20%	50V
C520	1-124-791-11	ELECT	1MF	20%	50V
C521	1-123-875-11	ELECT	10MF	20%	50V
C523	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C555	1-163-012-00	CERAMIC CHIP	0.0018MF	10%	50V
C650	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C651	1-124-660-11	ELECT	47MF	20%	50V
C652	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C653	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C654	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C655	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C656	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C657	1-136-169-00	FILM	0.22MF	5%	50V
C658	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C659	1-136-169-00	FILM	0.22MF	5%	50V
C660	1-124-660-11	ELECT	47MF	20%	50V
C661	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C662	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C663	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C664	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C665	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C666	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C667	1-136-169-00	FILM	0.22MF	5%	50V
C668	1-124-660-11	ELECT	47MF	20%	50V
C669	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C670	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C671	1-126-101-11	ELECT	100MF	20%	16V
C672	1-126-101-11	ELECT	100MF	20%	16V
C673	1-126-101-11	ELECT	100MF	20%	16V
C674	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C675	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C676	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C677	1-124-910-11	ELECT	47MF	20%	50V
C678	1-123-875-11	ELECT	10MF	20%	50V
C679	1-124-122-11	ELECT	100MF	20%	50V
C680	1-126-103-11	ELECT	470MF	20%	16V
C681	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C682	1-124-910-11	ELECT	47MF	20%	50V
C683	1-123-875-11	ELECT	10MF	20%	50V
C684	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C685	1-126-103-11	ELECT	470MF	20%	16V
C686	1-124-122-11	ELECT	100MF	20%	50V
C687	1-124-910-11	ELECT	47MF	20%	50V
C688	1-123-875-11	ELECT	10MF	20%	50V
C689	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C690	1-126-103-11	ELECT	470MF	20%	16V
C691	1-124-122-11	ELECT	100MF	20%	50V
C692	1-124-122-11	ELECT	100MF	20%	50V
C693	1-124-122-11	ELECT	100MF	20%	50V
C694	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C695	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C696	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C697	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C901	1-123-875-11	ELECT	10MF	20%	50V
C902	1-124-791-11	ELECT	1MF	20%	50V
C903	1-126-233-11	ELECT	22MF	20%	50V
C904	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C905	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C906	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C907	1-124-791-11	ELECT	1MF	20%	50V
C908	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C909	1-124-927-11	ELECT	4.7MF	20%	50V
C910	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C911	1-124-791-11	ELECT	1MF	20%	50V
C912	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C913	1-163-111-00	CERAMIC CHIP	56PF	5%	50V
C914	1-126-101-11	ELECT	100MF	20%	16V

<DIODE>

REF.NO.	PART NO.	DESCRIPTION
D401	8-719-900-95	DIODE V09G
D402	8-719-900-95	DIODE V09G
D450	8-719-400-18	DIODE MA152WK
D451	8-719-400-18	DIODE MA152WK
D452	8-719-105-28	DIODE RD2.4M-B
D501	8-719-400-18	DIODE MA152WK
D502	8-719-400-18	DIODE MA152WK
D503	8-719-400-18	DIODE MA152WK
D504	8-719-105-82	DIODE RD5.1M-B2
D505	8-719-105-82	DIODE RD5.1M-B2
D506	8-719-105-82	DIODE RD5.1M-B2
D507	8-719-105-82	DIODE RD5.1M-B2
D508	8-719-105-82	DIODE RD5.1M-B2
D509	8-719-105-82	DIODE RD5.1M-B2
D510	8-719-105-82	DIODE RD5.1M-B2
D511	8-719-105-82	DIODE RD5.1M-B2
D512	8-719-105-82	DIODE RD5.1M-B2
D513	8-719-105-82	DIODE RD5.1M-B2
D514	8-719-105-82	DIODE RD5.1M-B2
D515	8-719-105-82	DIODE RD5.1M-B2
D516	8-719-106-80	DIODE RD13M-B2
D518	8-719-106-80	DIODE RD13M-B2
D520	8-719-105-82	DIODE RD5.1M-B2
D521	8-719-105-82	DIODE RD5.1M-B2
D522	8-719-106-80	DIODE RD13M-B2
D523	8-719-106-80	DIODE RD13M-B2
D650	8-719-400-18	DIODE MA152WK
D652	8-719-400-18	DIODE MA152WK
D653	8-719-400-18	DIODE MA152WK
D654	8-719-800-76	DIODE 1SS226
D655	8-719-800-76	DIODE 1SS226
D656	8-719-800-76	DIODE 1SS226
D901	8-719-400-18	DIODE MA152WK
D902	8-719-400-18	DIODE MA152WK
D903	8-719-104-34	DIODE 1S2836

REF.NO.	PART NO.	DESCRIPTION	REMARK
D904	8-719-400-18	DIODE MA152WK	
D905	8-719-105-XX	DIODE RD6.2-B1	
D906	8-719-104-34	DIODE 1S2836	
		<IC>	
IC401	8-759-800-81	IC LA7016	
IC402	8-759-604-39	IC M5F78M12	
IC403	8-759-982-55	IC RC79M12FA	
IC404	8-759-240-53	IC HD14053BP	
IC405	8-759-232-64	IC TC74HC157AP	
IC407	8-759-232-64	IC TC74HC157AP	
IC408	8-759-240-53	IC HD14053BP	
IC409	8-759-240-53	IC HD14053BP	
IC410	8-759-945-58	IC RC4558PC	
IC411	8-759-945-58	IC RC4558PC	
IC412	8-759-145-27	IC UPC1406HA	
IC413	8-759-038-14	IC MC74HC4538N	
		<JACK>	
J101	1-566-980-21	CONNECTOR, ROUND TYPE 4P	
J102	1-537-257-11	TERMINAL BOARD, INPUT/OUTPUT	
J103	1-537-255-11	TERMINAL BOARD, INPUT/OUTPUT	
		<COIL>	
L401	1-459-155-00	COIL (WITH CORE) 45UH	
L402	1-459-155-00	COIL (WITH CORE) 45UH	
L403	1-459-155-00	COIL (WITH CORE) 45UH	
L404	1-459-155-00	COIL (WITH CORE) 45UH	
L405	1-410-671-31	INDUCTOR 47UH	
L650	1-410-482-31	INDUCTOR 100UH	
L651	1-410-482-31	INDUCTOR 100UH	
		<TRANSISTOR>	
Q401	8-729-140-96	TRANSISTOR 2SD774-34	
Q402	8-729-140-97	TRANSISTOR 2SB734-34	
Q450	8-729-230-49	TRANSISTOR 2SC2712	
Q451	8-729-230-49	TRANSISTOR 2SC2712	
Q452	8-729-230-49	TRANSISTOR 2SC2712	
Q453	8-729-901-00	TRANSISTOR DTC124EK	
Q454	8-729-901-00	TRANSISTOR DTC124EK	
Q456	8-729-230-49	TRANSISTOR 2SC2712	
Q457	8-729-216-22	TRANSISTOR 2SA1162	
Q501	8-729-230-49	TRANSISTOR 2SC2712	
Q502	8-729-230-49	TRANSISTOR 2SC2712	
Q503	8-729-230-49	TRANSISTOR 2SC2712	
Q504	8-729-230-49	TRANSISTOR 2SC2712	
Q505	8-729-901-01	TRANSISTOR DTC144EK	
Q506	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q507	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q508	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q509	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q510	8-729-901-01	TRANSISTOR DTC144EK	
Q511	8-729-901-01	TRANSISTOR DTC144EK	

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q512	8-729-230-49	TRANSISTOR 2SC2712	
Q513	8-729-230-49	TRANSISTOR 2SC2712	
Q514	8-729-230-49	TRANSISTOR 2SC2712	
Q515	8-729-230-49	TRANSISTOR 2SC2712	
Q516	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q517	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q518	8-729-230-49	TRANSISTOR 2SC2712	
Q519	8-729-230-49	TRANSISTOR 2SC2712	
Q520	8-729-901-00	TRANSISTOR DTC124EK	
Q521	8-729-230-49	TRANSISTOR 2SC2712	
Q522	8-729-901-01	TRANSISTOR DTC144EK	
Q523	8-729-230-49	TRANSISTOR 2SC2712	
Q524	8-729-901-01	TRANSISTOR DTC144EK	
Q525	8-729-901-01	TRANSISTOR DTC144EK	
Q526	8-729-901-01	TRANSISTOR DTC144EK	
Q527	8-729-901-01	TRANSISTOR DTC144EK	
Q528	8-729-901-01	TRANSISTOR DTC144EK	
Q529	8-729-901-01	TRANSISTOR DTC144EK	
Q530	8-729-901-01	TRANSISTOR DTC144EK	
Q531	8-729-901-01	TRANSISTOR DTC144EK	
Q537	8-729-901-01	TRANSISTOR DTC144EK	
Q538	8-729-901-01	TRANSISTOR DTC144EK	
Q539	8-729-901-01	TRANSISTOR DTC144EK	
Q540	8-729-901-01	TRANSISTOR DTC144EK	
Q541	8-729-320-62	TRANSISTOR 2SD789-34	
Q542	8-729-901-01	TRANSISTOR DTC144EK	
Q545	8-729-216-22	TRANSISTOR 2SA1162	
Q650	8-729-902-96	TRANSISTOR FMS1	
Q651	8-729-902-96	TRANSISTOR FMS1	
Q652	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q653	8-729-901-00	TRANSISTOR DTC124EK	
Q654	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q655	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q656	8-729-901-00	TRANSISTOR DTC124EK	
Q657	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q658	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q659	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q660	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q661	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q662	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q663	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q664	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q665	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q666	8-729-116-06	TRANSISTOR 2SK160-K6	
Q667	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q668	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q669	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q670	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q671	8-729-901-00	TRANSISTOR DTC124EK	
Q672	8-729-901-00	TRANSISTOR DTC124EK	
Q673	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q674	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q675	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q676	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q677	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q678	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q679	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q680	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q681	8-729-107-31	TRANSISTOR 2SC3545-T43	

BB

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q682	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q683	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q684	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q685	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q686	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q687	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q688	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q689	8-729-901-00	TRANSISTOR DTC124EK	
Q690	8-729-901-00	TRANSISTOR DTC124EK	
Q691	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q692	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q693	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q694	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q695	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q696	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q697	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q698	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q699	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q701	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q702	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q703	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q704	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q705	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q706	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q707	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q708	8-729-901-00	TRANSISTOR DTC124EK	
Q709	8-729-901-00	TRANSISTOR DTC124EK	
Q710	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q711	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q712	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q713	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q714	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q715	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q716	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q717	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q718	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q719	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q720	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q721	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q722	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q723	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q724	8-729-116-06	TRANSISTOR 2SK160-K6	
Q725	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q726	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q727	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q728	8-729-923-06	TRANSISTOR FMW-8	
Q729	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q730	8-729-923-06	TRANSISTOR FMW-8	
Q731	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q732	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q733	8-729-901-00	TRANSISTOR DTC124EK	
Q734	8-729-230-49	TRANSISTOR 2SC2712	
Q735	8-729-230-49	TRANSISTOR 2SC2712	
Q736	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q737	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q738	8-729-116-06	TRANSISTOR 2SK160-K6	
Q739	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q740	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q901	8-729-903-10	TRANSISTOR FMW1	
Q902	8-729-903-10	TRANSISTOR FMW1	
Q903	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q904	8-729-901-00	TRANSISTOR DTC124EK	
Q905	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q906	8-729-162-13	TRANSISTOR 2SC1621	
Q907	8-729-902-96	TRANSISTOR FMS1	
Q908	8-729-230-49	TRANSISTOR 2SC2712	
Q909	8-729-216-22	TRANSISTOR 2SA1162	
Q910	8-729-902-96	TRANSISTOR FMS1	
Q911	8-729-162-13	TRANSISTOR 2SC1621	
Q912	8-729-230-49	TRANSISTOR 2SC2712	
Q913	8-729-216-22	TRANSISTOR 2SA1162	
Q914	8-729-216-22	TRANSISTOR 2SA1162	
Q915	8-729-902-96	TRANSISTOR FMS1	
Q916	8-729-216-22	TRANSISTOR 2SA1162	
Q917	8-729-216-22	TRANSISTOR 2SA1162	
Q918	8-729-230-49	TRANSISTOR 2SC2712	
Q919	8-729-230-49	TRANSISTOR 2SC2712	
Q920	8-729-230-49	TRANSISTOR 2SC2712	
Q921	8-729-230-49	TRANSISTOR 2SC2712	
Q922	8-729-216-22	TRANSISTOR 2SA1162	
Q923	8-729-216-22	TRANSISTOR 2SA1162	
Q924	8-729-230-49	TRANSISTOR 2SC2712	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R401	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R403	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R450	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R451	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R452	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R453	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R454	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R455	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R456	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R459	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R460	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R461	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R462	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R463	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R464	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R466	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R467	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R468	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R469	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R470	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R471	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R472	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R473	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R474	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R501	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R502	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R503	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R504	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R505	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R506	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R507	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R508	1-216-025-00	METAL GLAZE	100	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R509	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R510	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R511	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R512	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R513	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R514	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R515	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R516	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R517	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R518	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R519	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R520	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R521	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R522	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R523	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R524	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R525	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R526	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R527	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R528	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R529	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R530	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R531	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R532	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R533	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R534	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R535	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R536	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R537	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R538	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R539	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R540	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R541	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R542	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R543	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R544	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R545	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R546	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R547	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R548	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R549	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R550	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R551	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R552	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R553	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R554	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R555	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R556	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R557	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R558	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R559	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R560	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R561	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R562	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R563	1-216-637-11	METAL CHIP	270	0.50%	1/10W	
R564	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R565	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R566	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R567	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R568	1-216-643-11	METAL CHIP	470	0.50%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R569	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R570	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R571	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R572	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R573	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R574	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R575	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R576	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R577	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R578	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R579	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R580	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R581	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R584	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R585	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R586	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R587	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R588	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R589	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R590	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R591	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R592	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R593	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R594	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R595	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R596	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R597	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R598	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R599	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R600	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R601	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R602	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R603	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R604	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R605	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R606	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R607	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R608	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R609	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R610	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R611	1-249-377-11	CARBON	0.47	5%	1/4W	F
R650	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R651	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R652	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R653	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R654	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R655	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R656	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R657	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R658	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R659	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R660	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R661	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R662	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R663	1-216-629-11	METAL CHIP	120	0.50%	1/10W	
R664	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R665	1-216-013-00	METAL GLAZE	33	5%	1/10W	
R666	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R667	1-216-645-11	METAL CHIP	560	0.50%	1/10W	

BB

REF.NO.	PART NO.	DESCRIPTION				REMARK
R668	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R669	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R670	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R671	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R672	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R673	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R674	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R675	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R676	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R677	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R678	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R679	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R680	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R681	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R682	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R683	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R684	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R685	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R686	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R687	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R688	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R689	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R690	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R691	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R692	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R693	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R694	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R695	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R696	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R697	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R698	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R699	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R701	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R702	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R703	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R704	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R705	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R706	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R707	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R708	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R709	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R710	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R711	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R712	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R713	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R714	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R715	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R716	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R717	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R718	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R719	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R720	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R721	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R722	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R723	1-216-021-00	METAL GLAZE	68	5%	1/10W	
R724	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R725	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R726	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R727	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R728	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R729	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R730	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R731	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R732	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R733	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R734	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R735	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R736	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R737	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R738	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R739	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R740	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R741	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R742	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R743	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R744	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R745	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R746	1-216-625-11	METAL CHIP	82	0.50%	1/10W	
R747	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R748	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R749	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R750	1-216-629-11	METAL CHIP	120	0.50%	1/10W	
R751	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R752	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R753	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R754	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R755	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R756	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R757	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R758	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R759	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R760	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R761	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R762	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R763	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R764	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R765	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R766	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R767	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R768	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R769	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R770	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R771	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R772	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R773	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R774	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R775	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R776	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R777	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R778	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R779	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R780	1-216-021-00	METAL GLAZE	68	5%	1/10W	
R781	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R782	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R783	1-216-624-11	METAL CHIP	75	0.50%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R784	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R785	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R786	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R787	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R788	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R789	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R790	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R791	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R792	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R793	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R794	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R795	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R796	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R797	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R798	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R799	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R801	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R802	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R803	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R804	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R805	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R806	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R807	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R808	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R809	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R810	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R811	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R812	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R813	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R814	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R815	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R816	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R817	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R818	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R819	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R820	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R821	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R822	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	
R823	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R824	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R825	1-216-021-00	METAL GLAZE	68	5%	1/10W	
R826	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R827	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R828	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R829	1-216-624-11	METAL CHIP	75	0.50%	1/10W	
R830	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R831	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R832	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R833	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R834	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R835	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R836	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R837	1-216-631-11	METAL CHIP	150	0.50%	1/10W	
R901	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R902	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R903	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R904	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R905	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R906	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R907	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R908	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R909	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R910	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R911	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R912	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R913	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R914	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R915	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R917	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R918	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R919	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R920	1-216-105-00	METAL GLAZE	220K	5%	1/10W	
R921	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R922	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R923	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R924	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R925	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R926	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R927	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R928	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R929	1-216-105-00	METAL GLAZE	220K	5%	1/10W	
R931	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R932	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R933	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R934	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R935	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R936	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R937	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R938	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R939	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R940	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R941	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R942	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R943	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R944	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W	
R945	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R961	1-216-025-00	METAL GLAZE	100	5%	1/10W	

<RELAY>

RL401	1-515-757-11	RELAY
RL402	1-515-757-11	RELAY
RL403	1-515-757-11	RELAY

<VARIABLE RESISTOR>

RV901	1-228-994-00	RES, ADJ, CARBON 10K

<SWITCH>

SW1	1-570-859-11	SWITCH, SLIDE

****

*A-1190-132-A PB BOARD, COMPLETE
****

*1-564-506-11	PLUG, CONNECTOR 3P
*1-634-631-11	PB BOARD
*4-341-752-01	EYELET

<CAPACITOR>

C501	1-136-103-00	FILM	0.1MF	5%	200V
C502	1-136-103-00	FILM	0.1MF	5%	200V

<FLYBACK>

PB **PA**

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
FBT1	⚠.1-439-466-11	TRANSFORMER ASSY, FLYBACK (NX-2500)	
FBT2	⚠.1-439-466-21	TRANSFORMER ASSY, FLYBACK (NX-2502)	

<NEON LAMP>

REF.NO.	PART NO.	DESCRIPTION
NL501	1-519-108-99	LAMP, NEON
NL502	1-519-108-99	LAMP, NEON

****

PART NO.	DESCRIPTION
*A-1195-033-A	PA BOARD, COMPLETE ******************
*1-506-348-99	PIN, CONNECOTR 5P
*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P
*1-564-518-11	PLUG, CONNECTOR 3P
*1-564-520-11	PLUG, CONNECTOR 5P
*1-564-521-11	PLUG, CONNECTOR 6P
*1-564-523-11	PLUG, CONNECTOR 8P
*1-564-526-11	PLUG, CONNECTOR 11P
*1-564-528-11	PLUG, CONNECTOR 13P
*4-341-751-01	EYELET
4-382-854-11	SCREW (M3X10), P, SW (+)
*4-391-515-11	SHEET (A), INSULATOR

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1	1-124-791-11	ELECT	1MF	20%	50V
C2	1-124-791-11	ELECT	1MF	20%	50V
C3	1-124-927-11	ELECT	4.7MF	20%	50V
C4	1-124-927-11	ELECT	4.7MF	20%	50V
C5	1-124-927-11	ELECT	4.7MF	20%	50V
C6	1-124-927-11	ELECT	4.7MF	20%	50V
C7	1-123-875-11	ELECT	10MF	20%	50V
C8	1-136-153-00	FILM	0.01MF	5%	50V
C9	1-124-963-11	ELECT	33MF	20%	16V
C10	1-124-925-11	ELECT	2.2MF	20%	50V
C11	1-136-165-00	FILM	0.1MF	5%	50V
C12	1-123-875-11	ELECT	10MF	20%	50V
C13	1-136-169-00	FILM	0.22MF	5%	50V
C14	1-123-875-11	ELECT	10MF	20%	50V
C15	1-124-119-00	ELECT	330MF	20%	16V
C16	1-102-824-00	CERAMIC	470PF	5%	50V
C17	1-136-165-00	FILM	0.1MF	5%	50V
C18	1-136-165-00	FILM	0.1MF	5%	50V
C19	1-136-165-00	FILM	0.1MF	5%	50V
C20	1-136-165-00	FILM	0.1MF	5%	50V
C21	1-126-101-11	ELECT	100MF	20%	16V
C22	1-136-169-00	FILM	0.22MF	5%	50V
C23	1-130-475-00	MYLAR	0.0022MF	5%	50V
C24	1-130-475-00	MYLAR	0.0022MF	5%	50V
C25	1-102-973-00	CERAMIC	100PF	5%	50V
C26	1-123-875-11	ELECT	10MF	20%	50V
C27	1-124-925-11	ELECT	2.2MF	20%	50V
C28	1-136-159-00	FILM	0.033MF	5%	50V
C29	1-124-927-11	ELECT	4.7MF	20%	50V
C30	1-101-004-00	CERAMIC	0.01MF		50V
C31	1-101-004-00	CERAMIC	0.01MF		50V
C32	1-102-973-00	CERAMIC	100PF	5%	50V
C33	1-102-973-00	CERAMIC	100PF	5%	50V
C34	1-102-973-00	CERAMIC	100PF	5%	50V
C35	1-101-884-00	CERAMIC	56PF	5%	50V
C36	1-136-165-00	FILM	0.1MF	5%	50V
C37	1-102-030-00	CERAMIC	330PF	10%	500V
C38	1-124-791-11	ELECT	1MF	20%	50V
C39	1-124-791-11	ELECT	1MF	20%	50V
C40	1-108-700-11	MYLAR	0.047MF	10%	200V
C41	1-108-704-11	MYLAR	0.1MF	10%	200V
C42	1-124-791-11	ELECT	1MF	20%	50V
C43	1-102-973-00	CERAMIC	100PF	5%	50V
C44	1-162-117-00	CERAMIC	100PF	10%	500V
C45	1-123-875-11	ELECT	10MF	20%	50V
C46	1-126-101-11	ELECT	100MF	20%	16V
C47	1-124-927-11	ELECT	4.7MF	20%	50V
C51	⚠.1-136-948-11	FILM	24000MF	3%	1.6KV
C52	1-123-024-21	ELECT	33MF		160V
C53	1-136-134-00	FILM	1.5MF	5%	400V
C54	⚠.1-136-134-11	FILM	1.5MF	5%	400V
C55	1-126-233-11	ELECT	22MF	20%	50V
C56	1-124-925-11	ELECT	2.2MF	20%	50V
C58	1-124-477-11	ELECT	47MF	20%	16V
C59	1-136-165-00	FILM	0.1MF	5%	50V
C60	1-136-153-00	FILM	0.01MF	5%	50V
C61	1-136-153-00	FILM	0.01MF	5%	50V
C62	1-136-165-00	FILM	0.1MF	5%	50V
C63	1-136-165-00	FILM	0.1MF	5%	50V
C64	1-136-153-00	FILM	0.01MF	5%	50V
C65	1-136-103-00	FILM	0.1MF	5%	200V
C67	1-136-153-00	FILM	0.01MF	5%	50V
C68	1-136-153-00	FILM	0.01MF	5%	50V

<DIODE>

REF.NO.	PART NO.	DESCRIPTION
D3	8-719-911-19	DIODE 1SS119
D4	8-719-911-19	DIODE 1SS119
D5	8-719-109-85	DIODE RD5.1ES-B2
D6	8-719-911-19	DIODE 1SS119
D7	8-719-911-19	DIODE 1SS119
D8	8-719-911-19	DIODE 1SS119
D9	8-719-911-19	DIODE 1SS119
D10	8-719-109-85	DIODE RD5.1ES-B2
D11	8-719-911-19	DIODE 1SS119
D12	8-719-109-85	DIODE RD5.1ES-B2
D13	8-719-911-19	DIODE 1SS119
D14	8-719-110-17	DIODE RD10ES-B2
D16	8-719-911-19	DIODE 1SS119
D18	8-719-911-19	DIODE 1SS119
D20	8-719-945-81	DIODE ERC06-15SA
D21	8-719-945-81	DIODE ERC06-15SA
D22	8-719-300-80	DIODE RU-1C
D23	8-719-900-26	DIODE ERD29-08J
D24	8-719-911-19	DIODE 1SS119
D25	8-719-911-19	DIODE 1SS119
D28	8-719-911-19	DIODE 1SS119
D29	8-719-911-19	DIODE 1SS119
D31	8-719-911-19	DIODE 1SS119

<IC>

REF.NO.	PART NO.	DESCRIPTION
IC1	8-759-990-82	IC TL082CP
IC2	8-759-103-93	IC UPC393C
IC3	8-759-103-93	IC UPC393C
IC4	8-759-103-93	IC UPC393C
IC5	8-759-604-39	IC M5F78M12
IC6	8-759-100-75	IC UPC1394C
IC7	8-759-240-40	IC TC4040BP
IC8	8-759-045-72	IC MC14572UBCP
IC9	8-759-908-15	IC TL431CLP

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

- The components identified by ☒ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L1	1-459-614-11	COIL, CHOKE 90UH	
L2	1-459-863-11	COIL, CHOKE 2.1MMH	
L3	⚠. 1-459-863-11	COIL, CHOKE 2.1MMH	
L4	⚠. 1-459-863-11	COIL, CHOKE 2.1MMH	
L5	1-459-155-00	COIL (WITH CORE) 45UH	
L6	1-459-155-00	COIL (WITH CORE) 45UH	

<NEON LAMP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
NL1	1-519-108-99	LAMP, NEON	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q2	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q3	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q4	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q5	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q6	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q7	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q8	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q10	8-729-805-07	TRANSISTOR 2SD1887-CA	
Q11	8-729-201-62	TRANSISTOR 2SC2555	
Q12	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q13	8-729-904-34	TRANSISTOR DTA114TS	
Q14	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q15	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q16	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q17	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q18	8-729-804-48	TRANSISTOR 2SC3675	
Q20	8-729-119-76	TRANSISTOR 2SA1175-HFE	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
☒R1	⚠.	METAL			1/6W	
R2	1-249-433-11	CARBON	22K	5%	1/4W	
R3	1-249-439-11	CARBON	68K	5%	1/4W	
☒R4	⚠.	METAL			1/6W	
R5	1-249-433-11	CARBON	22K	5%	1/4W	
R6	1-249-439-11	CARBON	68K	5%	1/4W	
R7	1-249-433-11	CARBON	22K	5%	1/4W	
R8	1-249-433-11	CARBON	22K	5%	1/4W	
R9	1-249-423-11	CARBON	3.3K	5%	1/4W	
R10	1-249-429-11	CARBON	10K	5%	1/4W	
R11	1-249-435-11	CARBON	33K	5%	1/4W	
R12	1-249-429-11	CARBON	10K	5%	1/4W	
R13	1-249-429-11	CARBON	10K	5%	1/4W	
R14	1-215-453-00	METAL	22K	1%	1/6W	
R15	1-215-453-00	METAL	22K	1%	1/6W	
R16	1-249-433-11	CARBON	22K	5%	1/4W	
R17	1-249-429-11	CARBON	10K	5%	1/4W	
R18	1-249-429-11	CARBON	10K	5%	1/4W	
R19	1-249-429-11	CARBON	10K	5%	1/4W	
R20	1-249-433-11	CARBON	22K	5%	1/4W	
R21	1-249-441-11	CARBON	100K	5%	1/4W	
R22	1-215-463-00	METAL	56K	1%	1/6W	
R23	1-215-455-00	METAL	27K	1%	1/6W	
R24	1-249-429-11	CARBON	10K	5%	1/4W	
R25	1-249-435-11	CARBON	33K	5%	1/4W	
R26	1-249-417-11	CARBON	1K	5%	1/4W	
R28	1-215-423-00	METAL	1.2K	1%	1/6W	
☒R29	⚠.	METAL			1/6W	
☒R30	⚠.	METAL			1/6W	
R31	1-249-429-11	CARBON	10K	5%	1/4W	
R32	1-215-473-00	METAL	150K	1%	1/6W	
☒R33	⚠.	CARBON			1/4W	
☒R34	⚠.	CARBON			1/4W	
R35	1-249-417-11	CARBON	1K	5%	1/4W	
R36	1-249-423-11	CARBON	3.3K	5%	1/4W	
R37	1-215-469-00	METAL	100K	1%	1/6W	
R38	1-215-453-00	METAL	22K	1%	1/6W	
R39	1-215-455-00	METAL	27K	1%	1/6W	
R40	1-249-417-11	CARBON	1K	5%	1/4W	
☒R41	⚠.	CARBON			1/4W	
☒R42	⚠.	CARBON			1/4W	
R43	1-215-461-00	METAL	47K	1%	1/6W	
R44	1-215-432-00	METAL	3K	1%	1/6W	
R45	1-215-432-00	METAL	3K	1%	1/6W	
R46	1-215-432-00	METAL	3K	1%	1/6W	
R47	1-215-432-00	METAL	3K	1%	1/6W	
R48	1-215-469-00	METAL	100K	1%	1/6W	
R49	1-215-469-00	METAL	100K	1%	1/6W	
R50	1-215-469-00	METAL	100K	1%	1/6W	
R53	1-249-419-11	CARBON	1.5K	5%	1/4W	
R55	1-215-429-00	METAL	2.2K	1%	1/6W	
R56	1-215-445-00	METAL	10K	1%	1/6W	
R57	1-249-441-11	CARBON	100K	5%	1/4W	
R58	1-249-441-11	CARBON	100K	5%	1/4W	
R59	1-249-413-11	CARBON	470	5%	1/4W	
R60	1-249-437-11	CARBON	47K	5%	1/4W	
R61	1-215-443-00	METAL	8.2K	1%	1/6W	
R62	1-215-455-00	METAL	27K	1%	1/6W	
R63	1-249-431-11	CARBON	15K	5%	1/4W	
R64	1-249-417-11	CARBON	1K	5%	1/4W	
R65	1-249-435-11	CARBON	33K	5%	1/4W	
R66	1-249-441-11	CARBON	100K	5%	1/4W	
R67	1-247-903-00	CARBON	1M	5%	1/4W	
R68	1-249-417-11	CARBON	1K	5%	1/4W	
R69	1-249-423-11	CARBON	3.3K	5%	1/4W	
R70	1-249-429-11	CARBON	10K	5%	1/4W	
R71	1-249-417-11	CARBON	1K	5%	1/4W	
R72	1-249-423-11	CARBON	3.3K	5%	1/4W	
R73	1-249-423-11	CARBON	3.3K	5%	1/4W	
R74	1-249-417-11	CARBON	1K	5%	1/4W	
R75	1-249-417-11	CARBON	1K	5%	1/4W	
R76	1-249-417-11	CARBON	1K	5%	1/4W	
R77	1-216-489-11	METAL OXIDE	27K	5%	3W	F
R78	1-216-489-11	METAL OXIDE	27K	5%	3W	F
R79	1-249-425-11	CARBON	4.7K	5%	1/4W	
R80	1-249-423-11	CARBON	3.3K	5%	1/4W	
R81	1-247-725-11	CARBON	10K	5%	1/4W	F
R82	1-249-441-11	CARBON	100K	5%	1/4W	
R86	1-249-460-11	CARBON	15K	5%	1/4W	F
R87	1-249-421-11	CARBON	2.2K	5%	1/4W	
R88	1-249-441-11	CARBON	100K	5%	1/4W	
R89	1-216-378-11	METAL OXIDE	5.6	5%	2W	F
R90	1-249-417-11	CARBON	1K	5%	1/4W	
R91	1-249-417-11	CARBON	1K	5%	1/4W	
R92	1-247-903-00	CARBON	1M	5%	1/4W	
R93	1-249-439-11	CARBON	68K	5%	1/4W	
R95	1-215-461-00	METAL	47K	1%	1/6W	
R96	1-249-437-11	CARBON	47K	5%	1/4W	
R97	1-249-433-11	CARBON	22K	5%	1/4W	
R99	1-249-425-11	CARBON	4.7K	5%	1/4W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R101	1-249-405-11	CARBON	100	5%	1/4W	
R102	1-249-441-11	CARBON	100K	5%	1/4W	
R103	1-249-417-11	CARBON	1K	5%	1/4W	
R104	1-249-441-11	CARBON	100K	5%	1/4W	
R105	1-249-429-11	CARBON	10K	5%	1/4W	
R106	1-249-425-11	CARBON	4.7K	5%	1/4W	
R107	1-249-433-11	CARBON	22K	5%	1/4W	
R108	1-249-441-11	CARBON	100K	5%	1/4W	
R109	1-249-437-11	CARBON	47K	5%	1/4W	
R110	1-249-441-11	CARBON	100K	5%	1/4W	
R111	1-249-437-11	CARBON	47K	5%	1/4W	
R112	1-247-715-11	CARBON	1.5K	5%	1/4W	F
R113	1-249-405-11	CARBON	100	5%	1/4W	
R114	1-216-489-11	METAL OXIDE	27K	5%	3W	F
R116	1-214-782-00	METAL	160K	1%	1/4W	
R117	1-247-725-11	CARBON	10K	5%	1/4W	F
R118	1-202-730-00	SOLID	8.2M	10%	1/2W	
R119	1-215-432-00	METAL	3K	1%	1/6W	
R120	1-215-432-00	METAL	3K	1%	1/6W	
R121	1-215-475-00	METAL	180K	1%	1/6W	
R122	1-215-475-00	METAL	180K	1%	1/6W	
R123	1-249-429-11	CARBON	10K	5%	1/4W	
R124	1-249-425-11	CARBON	4.7K	5%	1/4W	
R125	1-249-429-11	CARBON	10K	5%	1/4W	
R126	1-249-417-11	CARBON	1K	5%	1/4W	
R127	1-249-405-11	CARBON	100	5%	1/4W	
R128	1-249-405-11	CARBON	100	5%	1/4W	
R129	1-249-429-11	CARBON	10K	5%	1/4W	
R130	1-215-920-11	METAL OXIDE	3.3K	5%	3W	F
		<TRANSFORMER>				
T1	1-437-078-00	TRANSFORMER, HORIZONTAL DRIVE				
T2	1-437-131-00	TRANSFORMER, DRIVE				
		<CRYSTAL>				
X1	1-578-768-11	VIBLATOR, CERAMIC				
**						
	*A-1240-970-A	F BOARD, COMPLETE *****************				
	*1-564-507-11	PLUG, CONNECTOR 4P				
	*1-564-509-11	PLUG, CONNECTOR 6P				
	*1-634-040-11	F BOARD				
		<CAPACITOR>				
C040	1-124-607-11	ELECT	2200MF	20%	50V	
C041	1-124-607-11	ELECT	2200MF	20%	50V	
C042	1-124-607-11	ELECT	2200MF	20%	50V	
C043	1-124-607-11	ELECT	2200MF	20%	50V	
C044	1-124-607-11	ELECT	2200MF	20%	50V	
C045	1-124-607-11	ELECT	2200MF	20%	50V	
		<RESISTOR>				
R070	1-205-742-11	WIREWOUND	4.7	5%	7W	
R071	1-205-742-11	WIREWOUND	4.7	5%	7W	
R072	1-205-742-11	WIREWOUND	4.7	5%	7W	
R073	1-205-742-11	WIREWOUND	4.7	5%	7W	
**						
	*A-1270-274-A	QM BOARD, COMPLETE ******************				

REF.NO.	PART NO.	DESCRIPTION				REMARK
	*1-564-509-11	PLUG, CONNECTOR 6P				
	*1-564-515-11	PLUG, CONNECTOR 12P				
	*1-568-985-11	CONNECTOR, FEMALE 64P				
	*1-629-829-11	QM BOARD				
		<JACK>				
J7	*1-526-575-00	SOCKET, PLUG 1P				
J8	*1-526-575-00	SOCKET, PLUG 1P				
J9	*1-526-575-00	SOCKET, PLUG 1P				
**						
	*1-631-359-11	RC BOARD ********				
	*1-564-519-11	PLUG, CONNECTOR 4P				
		<CAPACITOR>				
C1	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	
C2	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	
C3	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C4	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C5	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	
C6	1-123-306-00	ELECT	47MF	20%	6.3V	
		<DIODE>				
D1	8-719-901-44	DIODE SLP144B				
D4	8-719-801-48	DIODE 1SS193				
D5	8-719-801-48	DIODE 1SS193				
D6	8-719-105-51	DIODE RD3.6M-B1				
		<IC>				
IC1	8-759-634-91	IC M50461-152SP				
		<COIL>				
L1	1-408-789-21	INDUCTOR CHIP 100UH				
		<TRANSISTOR>				
Q1	8-729-216-22	TRANSISTOR 2SA1162				
Q2	8-729-230-49	TRANSISTOR 2SC2712				
Q3	8-729-231-80	TRANSISTOR 2SC2859-Y				
Q4	8-729-231-80	TRANSISTOR 2SC2859-Y				
Q5	8-729-230-49	TRANSISTOR 2SC2712				
Q6	8-729-216-22	TRANSISTOR 2SA1162				
Q7	8-729-230-49	TRANSISTOR 2SC2712				
Q8	8-729-101-07	TRANSISTOR 2SB798-DL				
Q9	8-729-230-49	TRANSISTOR 2SC2712				
		<RESISTOR>				
R1	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R2	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R3	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R4	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R5	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R6	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R10	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R11	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R12	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R13	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R14	1-216-081-00	METAL GLAZE	22K	5%	1/10W	

RC

RCA RCB RCC RCD CF-1 CF-2 CB(R)

REF.NO.	PART NO.	DESCRIPTION	REMARK
R16	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R17	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R18	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R19	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R20	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R21	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R22	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R23	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R24	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R25	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R26	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R27	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R28	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R29	1-216-028-00	METAL GLAZE 130 5% 1/10W	
R30	1-216-028-00	METAL GLAZE 130 5% 1/10W	

<SWITCH>

REF.NO.	PART NO.	DESCRIPTION	REMARK
S1	1-553-856-00	SWITCH, KEY BOARD	

<CRYSTAL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
X1	1-527-476-00	OSCILLATOR, CERAMIC	

* * *

*1-631-356-11 RCA BOARD
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
D5	8-719-938-67	DIODE GL-3EG8	
D6	8-719-938-67	DIODE GL-3EG8	
D7	8-719-938-67	DIODE GL-3EG8	
D8	8-719-938-67	DIODE GL-3EG8	
D9	8-719-938-67	DIODE GL-3EG8	

* * *

*1-631-357-11 RCB BOARD
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
D10	8-719-938-67	DIODE GL-3EG8	
D11	8-719-938-67	DIODE GL-3EG8	
D12	8-719-938-67	DIODE GL-3EG8	
D13	8-719-938-67	DIODE GL-3EG8	
D14	8-719-938-67	DIODE GL-3EG8	

* * *

*1-631-358-11 RCC BOARD
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
D15	8-719-938-67	DIODE GL-3EG8	
D16	8-719-938-67	DIODE GL-3EG8	

* * *

*1-631-493-11 RCD BOARD
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1	8-719-938-67	DIODE GL-3EG8	

* * *

*A-1331-003-A CF-1 BOARD, COMPLETE
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-575-136-11	CONNECTOR ASSY, FLAT CABLE	
	*1-629-819-11	CF-1 BOARD	

<FILTER>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C1	1-236-164-11	ENCAPSULATED COMPONENT	
C2	1-236-164-11	ENCAPSULATED COMPONENT	
C3	1-236-164-11	ENCAPSULATED COMPONENT	
C4	1-236-101-11	ENCAPSULATED COMPONENT	
C5	1-236-164-11	ENCAPSULATED COMPONENT	
C6	1-236-101-11	ENCAPSULATED COMPONENT	
C7	1-236-164-11	ENCAPSULATED COMPONENT	
C8	1-236-101-11	ENCAPSULATED COMPONENT	
C9	1-236-164-11	ENCAPSULATED COMPONENT	
C10	1-236-164-11	ENCAPSULATED COMPONENT	
C11	1-236-164-11	ENCAPSULATED COMPONENT	
C12	1-236-164-11	ENCAPSULATED COMPONENT	
C13	1-236-164-11	ENCAPSULATED COMPONENT	
C14	1-236-164-11	ENCAPSULATED COMPONENT	
C15	1-236-164-11	ENCAPSULATED COMPONENT	
C16	1-236-164-11	ENCAPSULATED COMPONENT	
C17	1-236-164-11	ENCAPSULATED COMPONENT	
C18	1-236-164-11	ENCAPSULATED COMPONENT	
C19	1-236-164-11	ENCAPSULATED COMPONENT	
C20	1-236-164-11	ENCAPSULATED COMPONENT	
C21	1-236-164-11	ENCAPSULATED COMPONENT	
C22	1-236-101-11	ENCAPSULATED COMPONENT	
C23	1-236-101-11	ENCAPSULATED COMPONENT	
C24	1-236-164-11	ENCAPSULATED COMPONENT	

* * *

*A-1331-004-A CF-2 BOARD, COMPLETE
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-564-505-11	PLUG, CONNECTOR 2P	
	*1-564-514-11	PLUG, CONNECTOR 11P	
	*1-564-528-11	PLUG, CONNECTOR 13P	
	*1-629-820-11	CF-2 BOARD	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C1	1-101-821-00	CERAMIC 0.0022MF 500V	
C4	1-101-821-00	CERAMIC 0.0022MF 500V	
C6	1-101-821-00	CERAMIC 0.0022MF 500V	
C8	1-101-821-00	CERAMIC 0.0022MF 500V	
C10	1-101-821-00	CERAMIC 0.0022MF 500V	

<FILTER>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C2	1-236-071-11	ENCAPSULATED COMPONENT	
C3	1-236-164-11	ENCAPSULATED COMPONENT	
C5	1-236-071-11	ENCAPSULATED COMPONENT	
C7	1-236-071-11	ENCAPSULATED COMPONENT	
C9	1-236-071-11	ENCAPSULATED COMPONENT	
C11	1-236-071-11	ENCAPSULATED COMPONENT	
C12	1-236-164-11	ENCAPSULATED COMPONENT	

* * *

*A-1331-005-A CB (R) BOARD, COMPLETE
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-506-371-00	PIN, CONNECTOR 2P	
	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
	1-526-812-11	SOCKET, CRT	
	*1-564-507-11	PLUG, CONNECTOR 4P	
	1-575-098-11	LEAD ASSY, SIELD HIGH VOLTAGE	
	*1-629-826-11	CB (R) BOARD	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C301	1-162-114-00	CERAMIC 0.0047MF 2KV	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L303	1-408-401-00	INDUCTOR 2.2UH	

<NEON LAMP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
NL301	1-519-423-11	LAMP, NEON	
NL302	1-519-423-11	LAMP, NEON	
NL303	1-519-368-21	LAMP, NEON	
NL304	1-519-368-21	LAMP, NEON	
NL305	1-519-423-11	LAMP, NEON	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
R301	1-202-818-00	SOLID 1K 10% 1/2W	
R302	1-202-818-00	SOLID 1K 10% 1/2W	
R303	1-202-823-11	SOLID 2.7K 10% 1/2W	
R306	1-202-838-00	SOLID 100K 10% 1/2W	
R307	1-202-535-00	SOLID 27 10% 1/2W	
R308	1-202-525-00	SOLID 10 10% 1/2W	
R309	1-202-832-00	SOLID 15K 10% 1/2W	

<DISCHARGING GAP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
SG301	1-519-063-99	DISCHARGING GAP	

****

***A-1331-006-A CB (G) BOARD, COMPLETE**
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-506-371-00	PIN, CONNECTOR 2P	
	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
	1-526-812-11	SOCKET, CRT	
	*1-564-507-11	PLUG, CONNECTOR 4P	
	1-575-097-11	LEAD ASSY, SIELD HIGH VOLTAGE	
	*1-629-827-11	CB (G) BOARD	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C401	1-162-114-00	CERAMIC 0.0047MF	2KV

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L403	1-408-401-00	INDUCTOR 2.2UH	

<NEON LAMP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
NL401	1-519-423-11	LAMP, NEON	
NL402	1-519-423-11	LAMP, NEON	
NL403	1-519-368-21	LAMP, NEON	
NL404	1-519-368-21	LAMP, NEON	
NL405	1-519-423-11	LAMP, NEON	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
R401	1-202-818-00	SOLID 1K 10% 1/2W	
R402	1-202-818-00	SOLID 1K 10% 1/2W	
R403	1-202-823-11	SOLID 2.7K 10% 1/2W	
R406	1-202-838-00	SOLID 100K 10% 1/2W	
R407	1-202-535-00	SOLID 27 10% 1/2W	
R408	1-202-525-00	SOLID 10 10% 1/2W	
R409	1-202-832-00	SOLID 15K 10% 1/2W	

<DISCHARGING GAP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
SG401	1-519-063-XX	DISCHARGING GAP	

****

***A-1331-007-A CB (B) BOARD, COMPLETE**
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-506-371-00	PIN, CONNECTOR 2P	
	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
	1-526-812-11	SOCKET, CRT	
	*1-564-507-11	PLUG, CONNECTOR 4P	
	1-575-096-11	LEAD ASSY, SIELD HIGH VOLTAGE	
	*1-629-828-11	CB (B) BOARD	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C501	1-162-114-00	CERAMIC 0.0047MF	2KV

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L503	1-408-401-00	INDUCTOR 2.2UH	

<NEON LAMP>

REF.NO.	PART NO.	DESCRIPTION	REMARK
NL501	1-519-423-11	LAMP, NEON	
NL502	1-519-423-11	LAMP, NEON	
NL503	1-519-368-21	LAMP, NEON	
NL504	1-519-368-21	LAMP, NEON	
NL505	1-519-423-11	LAMP, NEON	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
R501	1-202-818-00	SOLID 1K 10% 1/2W	
R502	1-202-818-00	SOLID 1K 10% 1/2W	
R503	1-202-823-11	SOLID 2.7K 10% 1/2W	
R506	1-202-838-00	SOLID 100K 10% 1/2W	
R507	1-202-535-00	SOLID 27 10% 1/2W	
R508	1-202-525-00	SOLID 10 10% 1/2W	
R509	1-202-832-00	SOLID 15K 10% 1/2W	

<DISCFARGIONG>

REF.NO.	PART NO.	DESCRIPTION	REMARK
SG501	1-519-063-99	DISCHARGING GAP	

****

***A-1335-012-A CA (RG) BOARD, COMPLETE**
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-526-575-00	SOCKET, PLUG 1P	
	*1-564-507-11	PLUG, CONNECTOR 4P	
	*1-564-514-11	PLUG, CONNECTOR 11P	
	*1-564-515-11	PLUG, CONNECTOR 12P	
	*1-564-516-11	PLUG, CONNECTOR 13P	
	*1-568-979-11	CONNECTOR 30P	
	*4-363-404-00	HOLDER, IC	
	4-391-519-01	SHEET (E), INSULATOR	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
C1	1-123-875-11	ELECT 10MF 20% 50V	
C2	1-126-101-11	ELECT 100MF 20% 16V	
C3	1-123-875-11	ELECT 10MF 20% 50V	
C4	1-126-101-11	ELECT 100MF 20% 16V	
C5	1-126-233-11	ELECT 22MF 20% 50V	
C6	1-126-101-11	ELECT 100MF 20% 16V	
C7	1-126-233-11	ELECT 22MF 20% 50V	
C8	1-102-820-00	CERAMIC 330PF 5% 50V	
C9	1-101-880-00	CERAMIC 47PF 5% 50V	
C10	1-101-004-00	CERAMIC 0.01MF 50V	
C11	1-101-004-00	CERAMIC 0.01MF 50V	
C12	1-101-004-00	CERAMIC 0.01MF 50V	
C13	1-101-004-00	CERAMIC 0.01MF 50V	
C14	1-126-233-11	ELECT 22MF 20% 50V	

REF.NO.	PART NO.	DESCRIPTION			REMARK
C15	1-102-963-00	CERAMIC	33PF	5%	50V
C16	1-126-233-11	ELECT	22MF	20%	50V
C17	1-136-165-00	FILM	0.1MF	5%	50V
C18	1-136-165-00	FILM	0.1MF	5%	50V
C19	1-136-165-00	FILM	0.1MF	5%	50V
C20	1-136-165-00	FILM	0.1MF	5%	50V
C21	1-126-233-11	ELECT	22MF	20%	50V
C22	1-126-103-11	ELECT	470MF	20%	16V
C23	1-136-171-00	FILM	0.33MF	5%	50V
C101	1-124-282-00	ELECT	22MF	20%	16V
C102	1-124-477-11	ELECT	47MF	20%	16V
C103	1-126-101-11	ELECT	100MF	20%	16V
C104	1-126-101-11	ELECT	100MF	20%	16V
C105	1-126-233-11	ELECT	22MF	20%	50V
C106	1-102-973-00	CERAMIC	100PF	5%	50V
C107	1-102-976-00	CERAMIC	180PF	5%	50V
C108	1-124-799-11	ELECT	2.2MF	20%	160V
C109	1-124-799-11	ELECT	2.2MF	20%	160V
C110	1-124-634-11	ELECT	1MF	20%	250V
C111	1-126-233-11	ELECT	22MF	20%	50V
C112	1-136-165-00	CERAMIC	0.1MF	10%	50V
C113	1-136-165-00	FILM	0.1MF	5%	50V
C114	1-126-174-51	ELECT	10MF	20%	350V
C115	1-102-038-00	CERAMIC	0.001MF		500V
C116	1-102-050-00	CERAMIC	0.01MF	99%	500V
C117	1-124-768-11	ELECT	4.7MF	20%	50V
C118	1-101-004-00	CERAMIC	0.01MF		50V
C119	1-136-165-00	FILM	0.1MF	5%	50V
C120	1-124-791-11	ELECT	1MF	20%	50V
C121	1-126-233-11	ELECT	22MF	20%	50V
C122	1-126-233-11	ELECT	22MF	20%	50V
C123	1-126-233-11	ELECT	22MF	20%	50V
C201	1-124-282-00	ELECT	22MF	20%	16V
C202	1-126-233-11	ELECT	22MF	20%	50V
C203	1-126-101-11	ELECT	100MF	20%	16V
C204	1-126-101-11	ELECT	100MF	20%	16V
C205	1-126-233-11	ELECT	22MF	20%	50V
C206	1-102-973-00	CERAMIC	100PF	5%	50V
C207	1-102-976-00	CERAMIC	180PF	5%	50V
C208	1-124-799-11	ELECT	2.2MF	20%	160V
C209	1-124-799-11	ELECT	2.2MF	20%	160V
C210	1-124-634-11	ELECT	1MF	20%	250V
C211	1-126-233-11	ELECT	22MF	20%	50V
C212	1-136-165-00	FILM	0.1MF	10%	50V
C213	1-136-165-00	FILM	0.1MF	5%	50V
C214	1-126-174-51	ELECT	10MF	20%	350V
C215	1-102-038-00	CERAMIC	0.001MF		500V
C216	1-102-050-00	CERAMIC	0.01MF	99%	500V
C217	1-124-768-11	ELECT	4.7MF	20%	50V
C218	1-101-004-00	CERAMIC	0.01MF		50V
C219	1-136-165-00	FILM	0.1MF	5%	50V
C220	1-124-791-11	ELECT	1MF	20%	50V
C221	1-126-233-11	ELECT	22MF	20%	50V
C222	1-126-233-11	ELECT	22MF	20%	50V
C223	1-126-233-11	ELECT	22MF	20%	50V

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1	8-719-900-95	DIODE V09G	
D2	8-719-900-95	DIODE V09G	
D3	8-719-109-89	DIODE RD5.6-B2	
D4	8-719-911-19	DIODE 1SS119	
D5	8-719-911-19	DIODE 1SS119	
D6	8-719-911-19	DIODE 1SS119	
D7	8-719-911-19	DIODE 1SS119	
D8	8-719-911-19	DIODE 1SS119	
D9	8-719-109-93	DIODE RD6.2ES-B2	
D11	8-719-938-28	DIODE ERA22-06	
D12	8-719-911-19	DIODE 1SS119	
D13	8-719-109-85	DIODE RD5.1ES-B2	
D101	8-719-901-83	DIODE 1SS83	
D103	8-719-110-93	DIODE RD2.0ES-B2	
D104	8-719-911-19	DIODE 1SS119	
D105	8-719-901-83	DIODE 1SS83	
D106	8-719-911-19	DIODE 1SS119	
D107	8-719-911-19	DIODE 1SS119	
D108	8-719-901-83	DIODE 1SS83	
D109	8-719-911-19	DIODE 1SS119	
D110	8-719-110-93	DIODE RD2.0ES-B2	
D111	8-719-911-19	DIODE 1SS119	
D112	8-719-911-19	DIODE 1SS119	
D113	8-719-911-19	DIODE 1SS119	
D114	8-719-110-36	DIODE RD13ES-B2	
D115	8-719-911-19	DIODE 1SS119	
D201	8-719-901-83	DIODE 1SS83	
D203	8-719-110-93	DIODE RD2.0ES-B2	
D204	8-719-911-19	DIODE 1SS119	
D205	8-719-901-83	DIODE 1SS83	
D206	8-719-911-19	DIODE 1SS119	
D207	8-719-911-19	DIODE 1SS119	
D208	8-719-901-83	DIODE 1SS83	
D209	8-719-911-19	DIODE 1SS119	
D210	8-719-110-93	DIODE RD2.0ES-B2	
D211	8-719-911-19	DIODE 1SS119	
D212	8-719-911-19	DIODE 1SS119	
D213	8-719-911-19	DIODE 1SS119	
D214	8-719-110-36	DIODE RD13ES-B2	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC1	8-759-929-65	IC UPC7912H	
IC2	8-759-982-13	IC RC78L05A	
IC3	8-759-982-21	IC RC78L05A	
IC4	8-759-038-14	IC MC74HC4538N	
IC5	8-759-984-55	IC MB675429	
IC6	8-759-916-71	IC SN74HC244N	
IC7	8-759-916-12	IC TC74HC00P	
IC8	8-759-990-82	IC TL082CP	
IC101	8-749-922-43	IC VPH05A	
IC102	8-759-990-82	IC TL082CP	
IC103	8-749-920-88	IC SNY-8C02	
IC104	8-749-920-87	IC TY885002	
IC201	8-749-922-43	IC VPH05A	
IC202	8-759-990-82	IC TL082CP	
IC203	8-749-920-88	IC SNY-8C02	
IC204	8-749-920-87	IC TY885002	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L101	1-408-880-00	INDUCTOR 0.68UH	
L201	1-408-880-00	INDUCTOR 0.68UH	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q2	8-729-900-36	TRANSISTOR DTC124ES	
Q3	8-729-900-36	TRANSISTOR DTC124ES	

CA(RG)

REF.NO.	PART NO.	DESCRIPTION				REMARK
Q4	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q5	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q6	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q7	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q8	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q9	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q10	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q11	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q12	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q13	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q14	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q15	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q16	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q17	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q18	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q19	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q101	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q102	8-729-140-50	TRANSISTOR 2SC3209LK				
Q103	8-729-801-88	TRANSISTOR 2SA1381				
Q104	8-729-801-88	TRANSISTOR 2SA1381				
Q105	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q106	8-729-140-50	TRANSISTOR 2SC3209LK				
Q107	8-729-801-88	TRANSISTOR 2SA1381				
Q108	8-729-900-63	TRANSISTOR DTA124ES				
Q109	8-729-900-63	TRANSISTOR DTA124ES				
Q110	8-729-900-36	TRANSISTOR DTC124ES				
Q111	8-729-105-74	TRANSISTOR 2SK523-M1				
Q112	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q113	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q201	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q202	8-729-140-50	TRANSISTOR 2SC3209LK				
Q203	8-729-801-88	TRANSISTOR 2SA1381				
Q204	8-729-801-88	TRANSISTOR 2SA1381				
Q205	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q206	8-729-140-50	TRANSISTOR 2SC3209LK				
Q207	8-729-801-88	TRANSISTOR 2SA1381				
Q208	8-729-900-63	TRANSISTOR DTA124ES				
Q209	8-729-900-63	TRANSISTOR DTA124ES				
Q210	8-729-900-36	TRANSISTOR DTC124ES				
Q211	8-729-105-74	TRANSISTOR 2SK523-M1				
Q212	8-729-119-78	TRANSISTOR 2SC2785-HFE				
		<RESISTOR>				
R1	1-249-405-11	CARBON	100	5%	1/4W	
R2	1-215-437-00	METAL	4.7K	1%	1/6W	
R3	1-249-441-11	CARBON	100K	5%	1/4W	
R4	1-215-449-00	METAL	15K	1%	1/6W	
R5	1-249-405-11	CARBON	100	5%	1/4W	
R6	1-249-438-11	CARBON	56K	5%	1/4W	
R7	1-249-437-11	CARBON	47K	5%	1/4W	
R8	1-249-405-11	CARBON	100	5%	1/4W	
R9	1-215-449-00	METAL	15K	1%	1/6W	
R10	1-215-447-00	METAL	12K	1%	1/6W	
R11	1-249-405-11	CARBON	100	5%	1/4W	
R12	1-249-405-11	CARBON	100	5%	1/4W	
R13	1-249-441-11	CARBON	100K	5%	1/4W	
R14	1-249-423-11	CARBON	3.3K	5%	1/4W	
R15	1-249-397-11	CARBON	22	5%	1/4W	F
R16	1-249-405-11	CARBON	100	5%	1/4W	
R17	1-249-423-11	CARBON	3.3K	5%	1/4W	
R18	1-249-426-11	CARBON	5.6K	5%	1/4W	
R19	1-249-415-11	CARBON	680	5%	1/4W	
R20	1-249-397-11	CARBON	22	5%	1/4W	F
R21	1-249-413-11	CARBON	470	5%	1/4W	
R22	1-215-443-00	METAL	8.2K	1%	1/6W	
R23	1-215-447-00	METAL	12K	1%	1/6W	
R24	1-215-453-00	METAL	22K	1%	1/6W	
R25	1-215-457-00	METAL	33K	1%	1/6W	
R26	1-249-405-11	CARBON	100	5%	1/4W	
R27	1-249-405-11	CARBON	100	5%	1/4W	
R28	1-215-431-00	METAL	2.7K	1%	1/6W	
R29	1-249-429-11	CARBON	10K	5%	1/4W	
R30	1-215-469-00	METAL	100K	1%	1/6W	
R31	1-249-429-11	CARBON	10K	5%	1/4W	
R32	1-215-443-00	METAL	8.2K	1%	1/6W	
R33	1-215-443-00	METAL	8.2K	1%	1/6W	
R34	1-215-443-00	METAL	8.2K	1%	1/6W	
R35	1-247-887-00	CARBON	220K	5%	1/4W	
R36	1-247-887-00	CARBON	220K	5%	1/4W	
R37	1-247-887-00	CARBON	220K	5%	1/4W	
R38	1-249-441-11	CARBON	100K	5%	1/4W	
R39	1-215-469-00	METAL	100K	1%	1/6W	
R40	1-249-433-11	CARBON	22K	5%	1/4W	
R42	1-249-433-11	CARBON	22K	5%	1/4W	
R43	1-249-405-11	CARBON	100	5%	1/4W	
R44	1-249-429-11	CARBON	10K	5%	1/4W	
R101	1-215-401-11	METAL	150	1%	1/6W	
R102	1-215-401-11	METAL	150	1%	1/6W	
R103	1-215-473-00	METAL	150K	1%	1/6W	
R105	1-215-469-00	METAL	100K	1%	1/6W	
R106	1-215-465-00	METAL	68K	1%	1/6W	
R107	1-249-421-11	CARBON	2.2K	5%	1/4W	
R108	1-249-403-11	CARBON	68	5%	1/4W	F
R109	1-215-429-00	METAL	2.2K	1%	1/6W	
R111	1-249-421-11	CARBON	2.2K	5%	1/4W	
R112	1-215-383-00	METAL	27	1%	1/6W	
R116	1-215-473-00	METAL	150K	1%	1/6W	
R117	1-249-421-11	CARBON	2.2K	5%	1/4W	
R118	1-249-427-11	CARBON	6.8K	5%	1/4W	
R119	1-215-453-00	METAL	22K	1%	1/6W	
R120	1-215-469-00	METAL	100K	1%	1/6W	
R121	1-215-471-00	METAL	120K	1%	1/6W	
R122	1-215-441-00	METAL	6.8K	1%	1/6W	
R123	1-215-481-00	METAL	330K	1%	1/6W	
R124	1-215-433-00	METAL	3.3K	1%	1/6W	
R125	1-249-431-11	CARBON	15K	5%	1/4W	
R126	1-249-431-11	CARBON	15K	5%	1/4W	
R127	1-249-415-11	CARBON	680	5%	1/4W	
R128	1-249-405-11	CARBON	100	5%	1/4W	
R129	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R130	1-215-431-00	METAL	2.7K	1%	1/6W	
R131	1-202-549-00	SOLID	100	5%	1/2W	
R132	1-202-818-00	SOLID	1K	10%	1/2W	
R133	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R134	1-249-429-11	CARBON	10K	5%	1/4W	
R135	1-215-469-00	METAL	100K	1%	1/6W	
R136	1-202-549-00	SOLID	100	5%	1/2W	
R137	1-215-443-00	METAL	8.2K	1%	1/6W	
R138	1-215-435-00	METAL	3.9K	1%	1/6W	
R139	1-249-421-11	CARBON	2.2K	5%	1/4W	
R140	1-215-453-00	METAL	22K	1%	1/6W	
R141	1-215-421-00	METAL	1K	1%	1/6W	
R142	1-249-417-11	CARBON	1K	5%	1/4W	
R143	1-247-903-00	CARBON	1M	5%	1/4W	
R144	1-249-427-11	CARBON	6.8K	5%	1/4W	
R145	1-249-405-11	CARBON	100	5%	1/4W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R146	1-247-895-00	CARBON	470K	5%	1/4W	
R147	1-215-457-00	METAL	33K	1%	1/6W	
R148	1-249-410-11	CARBON	270	5%	1/4W	F
R149	1-249-405-11	CARBON	100	5%	1/4W	
R201	1-215-401-11	METAL	150	1%	1/6W	
R202	1-215-401-11	METAL	150	1%	1/6W	
R203	1-215-461-00	METAL	47K	1%	1/6W	
R204	1-215-469-00	METAL	100K	1%	1/6W	
R205	1-215-469-00	METAL	100K	1%	1/6W	
R206	1-215-471-00	METAL	120K	1%	1/6W	
R207	1-249-421-11	CARBON	2.2K	5%	1/4W	
R208	1-249-403-11	CARBON	68	5%	1/4W	F
R209	1-215-429-00	METAL	2.2K	1%	1/6W	
R211	1-249-421-11	CARBON	2.2K	5%	1/4W	
R212	1-215-383-00	METAL	27	1%	1/6W	
R216	1-215-473-00	METAL	150K	1%	1/6W	
R217	1-249-421-11	CARBON	2.2K	5%	1/4W	
R218	1-249-427-11	CARBON	6.8K	5%	1/4W	
R219	1-215-453-00	METAL	22K	1%	1/6W	
R220	1-215-469-00	METAL	100K	1%	1/6W	
R221	1-215-471-00	METAL	120K	1%	1/6W	
R222	1-215-441-00	METAL	6.8K	1%	1/6W	
R223	1-215-481-00	METAL	330K	1%	1/6W	
R224	1-215-433-00	METAL	3.3K	1%	1/6W	
R225	1-249-431-11	CARBON	15K	5%	1/4W	
R226	1-249-431-11	CARBON	15K	5%	1/4W	
R227	1-249-415-11	CARBON	680	5%	1/4W	
R228	1-249-405-11	CARBON	100	5%	1/4W	
R229	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R230	1-215-431-00	METAL	2.7K	1%	1/6W	
R231	1-202-549-00	SOLID	100	5%	1/2W	
R232	1-202-818-00	SOLID	1K	10%	1/2W	
R233	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R234	1-215-469-00	METAL	100K	1%	1/6W	
R235	1-249-429-11	CARBON	10K	5%	1/4W	
R236	1-202-549-00	SOLID	100	5%	1/2W	
R237	1-215-443-00	METAL	8.2K	1%	1/6W	
R238	1-215-435-00	METAL	3.9K	1%	1/6W	
R239	1-249-421-11	CARBON	2.2K	5%	1/4W	
R240	1-215-453-00	METAL	22K	1%	1/6W	
R241	1-215-421-00	METAL	1K	1%	1/6W	
R242	1-249-417-11	CARBON	1K	5%	1/4W	
R243	1-247-903-00	CARBON	1M	5%	1/4W	
R244	1-249-427-11	CARBON	6.8K	5%	1/4W	
R245	1-249-405-11	CARBON	100	5%	1/4W	
R246	1-247-895-00	CARBON	470K	5%	1/4W	
R247	1-249-405-11	CARBON	100	5%	1/4W	

****

*A-1335-013-A CA (B) BOARD, COMPLETE
****

*1-526-575-00 SOCKET, PLUG 1P
*1-564-507-11 PLUG, CONNECTOR 4P
*1-564-516-11 PLUG, CONNECTOR 13P

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
C30	1-126-101-11	ELECT	100MF	20%	16V	
C31	1-126-101-11	ELECT	100MF	20%	16V	
C32	1-126-233-11	ELECT	22MF	20%	50V	
C33	1-126-233-11	ELECT	22MF	20%	50V	
C34	1-101-004-00	CERAMIC	0.01MF		50V	
C35	1-124-927-11	ELECT	4.7MF	20%	50V	
C36	1-126-101-11	ELECT	100MF	20%	16V	
C37	1-126-233-11	ELECT	22MF	20%	50V	
C38	1-101-004-00	CERAMIC	0.01MF		50V	
C39	1-102-978-00	CERAMIC	220PF	5%	50V	
C40	1-102-978-00	CERAMIC	220PF	5%	50V	
C41	1-102-973-00	CERAMIC	100PF	5%	50V	
C42	1-162-117-00	CERAMIC	100PF	10%	500V	
C43	1-101-004-00	CERAMIC	0.01MF		50V	
C44	1-126-233-11	ELECT	22MF	20%	50V	
C45	1-101-004-00	CERAMIC	0.01MF		50V	
C46	1-126-233-11	ELECT	22MF	20%	50V	
C47	1-126-134-11	ELECT	4.7MF	20%	350V	
C48	1-123-932-00	ELECT	4.7MF	20%	160V	
C49	1-124-798-11	ELECT	1MF	20%	160V	
C50	1-124-798-11	ELECT	1MF	20%	160V	
C51	1-102-050-00	CERAMIC	0.01MF	99%	500V	
C52	1-102-050-00	CERAMIC	0.01MF	99%	500V	
C53	1-124-791-11	ELECT	1MF	20%	50V	
C301	1-124-282-00	ELECT	22MF	20%	16V	
C302	1-124-910-11	ELECT	47MF	20%	50V	
C303	1-126-101-11	ELECT	100MF	20%	16V	
C304	1-126-101-11	ELECT	100MF	20%	16V	
C305	1-126-233-11	ELECT	22MF	20%	50V	
C306	1-102-973-00	CERAMIC	100PF	5%	50V	
C307	1-102-976-00	CERAMIC	180PF	5%	50V	
C308	1-124-799-11	ELECT	2.2MF	20%	160V	
C309	1-124-799-11	ELECT	2.2MF	20%	160V	
C310	1-124-634-11	ELECT	1MF	20%	250V	
C311	1-126-233-11	ELECT	22MF	20%	50V	
C312	1-136-165-00	FILM	0.1MF	10%	50V	
C313	1-136-165-00	FILM	0.1MF	5%	50V	
C314	1-126-174-51	ELECT	10MF	20%	350V	
C315	1-102-038-00	CERAMIC	0.001MF		500V	
C316	1-102-050-00	CERAMIC	0.01MF	99%	500V	
C317	1-124-768-11	ELECT	4.7MF	20%	50V	
C318	1-101-004-00	CERAMIC	0.01MF		50V	
C319	1-136-165-00	FILM	0.1MF	5%	50V	
C320	1-124-791-11	ELECT	1MF	20%	50V	
C321	1-126-233-11	ELECT	22MF	20%	50V	
C322	1-126-233-11	ELECT	22MF	20%	50V	
C323	1-126-233-11	ELECT	22MF	20%	50V	
C324	1-102-973-00	CERAMIC	100PF	5%	50V	
C350	1-126-101-11	ELECT	100MF	20%	16V	
C351	1-126-101-11	ELECT	100MF	20%	16V	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION
D30	8-719-911-19	DIODE 1SS119
D31	8-719-901-83	DIODE 1SS83
D32	8-719-901-83	DIODE 1SS83
D33	8-719-911-19	DIODE 1SS119
D34	8-719-911-19	DIODE 1SS119
D35	8-719-900-95	DIODE V09G
D36	8-719-900-95	DIODE V09G
D37	8-719-971-20	DIODE ERC38-06
D38	8-719-110-31	DIODE RD12ES-B2
D39	8-719-901-83	DIODE 1SS83
D301	8-719-901-83	DIODE 1SS83
D303	8-719-110-93	DIODE RD2.0ES-B2
D304	8-719-911-19	DIODE 1SS119
D305	8-719-901-83	DIODE 1SS83
D306	8-719-911-19	DIODE 1SS119
D307	8-719-911-19	DIODE 1SS119
D308	8-719-901-83	DIODE 1SS83

CA(B)

REF.NO.	PART NO.	DESCRIPTION	REMARK
D309	8-719-911-19	DIODE 1SS119	
D310	8-719-110-93	DIODE RD2.0ES-B2	
D311	8-719-911-19	DIODE 1SS119	
D312	8-719-911-19	DIODE 1SS119	
D313	8-719-911-19	DIODE 1SS119	
D314	8-719-110-36	DIODE RD13ES-B2	
D315	8-719-109-66	DIODE RD3.3ES-B2	
D316	8-719-911-19	DIODE 1SS119	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC301	8-759-821-61	IC VPH05	
IC302	8-759-990-82	IC TL082CP	
IC303	8-749-920-88	IC SNY-8C02	
IC304	8-749-920-87	IC TY885002	
IC305	8-749-921-91	IC TY885003A	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L301	1-408-880-00	INDUCTOR 0.68UH	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q30	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q31	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q32	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q33	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q34	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q35	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q36	8-729-820-82	TRANSISTOR 2SA1208-S	
Q37	8-729-820-82	TRANSISTOR 2SA1208-S	
Q38	8-729-255-12	TRANSISTOR 2SC2910-S	
Q39	8-729-255-12	TRANSISTOR 2SC2910-S	
Q40	8-729-820-82	TRANSISTOR 2SA1208-S	
Q41	8-729-903-68	TRANSISTOR 2SD982	
Q42	8-729-801-88	TRANSISTOR 2SA1381	
Q43	8-729-900-36	TRANSISTOR DTC124ES	
Q301	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q302	8-729-140-50	TRANSISTOR 2SC3209LK	
Q303	8-729-801-88	TRANSISTOR 2SA1381	
Q304	8-729-801-88	TRANSISTOR 2SA1381	
Q305	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q306	8-729-140-50	TRANSISTOR 2SC3209LK	
Q307	8-729-801-88	TRANSISTOR 2SA1381	
Q308	8-729-900-63	TRANSISTOR DTA124ES	
Q309	8-729-900-63	TRANSISTOR DTA124ES	
Q310	8-729-900-36	TRANSISTOR DTC124ES	
Q311	8-729-105-74	TRANSISTOR 2SK523-M1	
Q312	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q313	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q314	8-729-900-36	TRANSISTOR DTC124ES	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R50	1-249-421-11	CARBON	2.2K	5%	1/4W	
R51	1-249-427-11	CARBON	6.8K	5%	1/4W	
R52	1-249-393-11	CARBON	10	5%	1/4W	
R53	1-249-427-11	CARBON	6.8K	5%	1/4W	
R54	1-215-437-00	METAL	4.7K	1%	1/6W	
R55	1-215-439-00	METAL	5.6K	1%	1/6W	
R56	1-215-467-00	METAL	82K	1%	1/6W	
R57	1-249-405-11	CARBON	100	5%	1/4W	
R58	1-249-441-11	CARBON	100K	5%	1/4W	
R59	1-249-429-11	CARBON	10K	5%	1/4W	
R60	1-249-425-11	CARBON	4.7K	5%	1/4W	
R61	1-249-429-11	CARBON	10K	5%	1/4W	
R62	1-249-429-11	CARBON	10K	5%	1/4W	
R63	1-249-421-11	CARBON	2.2K	5%	1/4W	
R64	1-249-425-11	CARBON	4.7K	5%	1/4W	
R65	1-249-425-11	CARBON	4.7K	5%	1/4W	
R66	1-249-417-11	CARBON	1K	5%	1/4W	F
R67	1-249-397-11	CARBON	22	5%	1/4W	
R68	1-249-397-11	CARBON	22	5%	1/4W	F
R69	1-249-397-11	CARBON	22	5%	1/4W	F
R70	1-249-399-11	CARBON	33	5%	1/4W	
R71	1-249-399-11	CARBON	33	5%	1/4W	
R72	1-249-397-11	CARBON	22	5%	1/4W	F
R73	1-249-403-11	CARBON	68	5%	1/4W	
R74	1-249-429-11	CARBON	10K	5%	1/4W	F
R75	1-249-429-11	CARBON	10K	5%	1/4W	F
R76	1-202-719-00	SOLID	1M	10%	1/2W	
R77	1-247-903-00	CARBON	1M	5%	1/4W	
R78	1-249-441-11	CARBON	100K	5%	1/4W	
R301	1-215-401-11	METAL	150	1%	1/6W	
R302	1-215-401-11	METAL	150	1%	1/6W	
R303	1-215-461-00	METAL	47K	1%	1/6W	
R304	1-215-469-00	METAL	100K	1%	1/6W	
R305	1-215-469-00	METAL	100K	1%	1/6W	
R306	1-215-473-00	METAL	150K	1%	1/6W	
R307	1-249-421-11	CARBON	2.2K	5%	1/4W	
R308	1-249-403-11	CARBON	68	5%	1/4W	
R309	1-215-429-00	METAL	2.2K	1%	1/6W	
R311	1-249-421-11	CARBON	2.2K	5%	1/4W	
R312	1-215-383-00	METAL	27	1%	1/6W	
R316	1-215-473-00	METAL	150K	1%	1/6W	
R317	1-249-421-11	CARBON	2.2K	5%	1/4W	
R318	1-249-427-11	CARBON	6.8K	5%	1/4W	
R319	1-215-453-00	METAL	22K	1%	1/6W	
R320	1-215-469-00	METAL	100K	1%	1/6W	
R321	1-215-471-00	METAL	120K	1%	1/6W	
R322	1-215-441-00	METAL	6.8K	1%	1/6W	
R323	1-215-481-00	METAL	330K	1%	1/6W	
R324	1-215-433-00	METAL	3.3K	1%	1/6W	
R325	1-249-431-11	CARBON	15K	5%	1/4W	
R326	1-249-431-11	CARBON	15K	5%	1/4W	
R327	1-249-415-11	CARBON	680	5%	1/4W	
R328	1-249-405-11	CARBON	100	5%	1/4W	
R329	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R330	1-215-431-00	METAL	2.7K	1%	1/6W	
R331	1-202-549-00	SOLID	100	5%	1/2W	
R332	1-202-818-00	SOLID	1K	10%	1/2W	
R333	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R334	1-215-469-00	METAL	100K	1%	1/6W	
R335	1-249-429-11	CARBON	10K	5%	1/4W	
R336	1-202-549-00	SOLID	100	5%	1/2W	
R337	1-215-443-00	METAL	8.2K	1%	1/6W	
R338	1-215-435-00	METAL	3.9K	1%	1/6W	
R339	1-249-421-11	CARBON	2.2K	5%	1/4W	
R340	1-215-453-00	METAL	22K	1%	1/6W	
R341	1-215-421-00	METAL	1K	1%	1/6W	
R342	1-249-417-11	CARBON	1K	5%	1/4W	
R343	1-247-903-00	CARBON	1M	5%	1/4W	
R344	1-249-427-11	CARBON	6.8K	5%	1/4W	
R345	1-249-405-11	CARBON	100	5%	1/4W	
R346	1-247-895-00	CARBON	470K	5%	1/4W	
R347	1-249-405-11	CARBON	100	5%	1/4W	
R348	1-247-903-00	CARBON	1M	5%	1/4W	
R349	1-249-423-11	CARBON	3.3K	5%	1/4W	

F.NO.	PART NO.	DESCRIPTION				REMARK
R351	1-215-447-00	METAL	12K	1%	1/6W	
R352	1-249-421-11	CARBON	2.2K	5%	1/4W	
R353	1-249-403-11	CARBON	68	5%	1/4W	F
R356	1-215-461-00	METAL	47K	1%	1/6W	

****

*A-1341-288-A DM BOARD, COMPLETE
****

	PART NO.	DESCRIPTION
	*1-506-348-99	PIN, CONNECTOR 4P
	1-506-348-31	PIN, CONNECTOR 6P
	*1-506-348-99	PIN, CONNECTOR 3P
	*1-506-348-99	PIN, CONNECOTR 5P
	*1-508-742-00	PIN, CONNECTOR 3P
	*1-564-506-11	PLUG, CONNECTOR 3P
	*1-564-507-11	PLUG, CONNECTOR 4P
	*1-564-509-11	PLUG, CONNECTOR 6P
	*1-564-509-11	PLUG, CONNECTOR 6P
	*1-564-514-11	PLUG, CONNECTOR 11P
	*1-564-515-11	PLUG, CONNECTOR 12P
	*1-564-516-11	PLUG, CONNECTOR 13P
	*1-564-516-11	PLUG, CONNECTOR 13P
	*1-568-982-11	CONNECTOR, FEMALE 96P
	*1-568-985-11	CONNECTOR, FEMALE 64P
	*1-629-830-11	DM BOARD

<CAPACITOR>

C1	1-124-556-11	ELECT	2200MF	20%	16V
C2	1-124-556-11	ELECT	2200MF	20%	16V

<RESISTOR>

R1	1-215-908-00	METAL OXIDE	33	5%	3W	F
R2	1-215-908-00	METAL OXIDE	33	5%	3W	F
R3	1-216-483-11	METAL OXIDE	2.7K	5%	3W	F
R4	1-216-483-11	METAL OXIDE	2.7K	5%	3W	F
R5	1-216-475-11	METAL OXIDE	120	5%	3W	F

****

*A-1345-873-A DA BOARD, COMPLETE
****

*1-568-984-11 CONNECTOR, MALE 96P

<CAPACITOR>

C1	1-123-875-11	ELECT	10MF	20%	50V
C2	1-126-101-11	ELECT	100MF	20%	16V
C3	1-123-875-11	ELECT	10MF	20%	50V
C4	1-126-101-11	ELECT	100MF	20%	16V
C5	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C6	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C7	1-124-791-11	ELECT	1MF	20%	50V
C8	1-136-153-00	FILM	0.01MF	5%	50V
C9	1-124-791-11	ELECT	1MF	20%	50V
C10	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C11	1-123-875-11	ELECT	10MF	20%	50V
C12	1-124-791-11	ELECT	1MF	20%	50V
C13	1-136-153-00	FILM	0.01MF	5%	50V
C14	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C15	1-123-875-11	ELECT	10MF	20%	50V
C16	1-124-791-11	ELECT	1MF	20%	50V
C17	1-136-153-00	FILM	0.01MF	5%	50V
C18	1-124-925-11	ELECT	2.2MF	20%	50V
C19	1-124-791-11	ELECT	1MF	20%	50V
C20	1-163-109-00	CERAMIC CHIP	47PF	5%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C21	1-123-875-11	ELECT	10MF	20%	50V
C22	1-124-791-11	ELECT	1MF	20%	50V
C23	1-136-153-00	FILM	0.01MF	5%	50V
C24	1-124-925-11	ELECT	2.2MF	20%	50V
C25	1-124-791-11	ELECT	1MF	20%	50V
C26	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C28	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C29	1-123-875-11	ELECT	10MF	20%	50V
C30	1-124-791-11	ELECT	1MF	20%	50V
C31	1-123-875-11	ELECT	10MF	20%	50V
C32	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C33	1-123-875-11	ELECT	10MF	20%	50V
C34	1-124-791-11	ELECT	1MF	20%	50V
C35	1-124-477-11	ELECT	47MF	20%	16V
C36	1-124-791-11	ELECT	1MF	20%	50V
C37	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C38	1-123-875-11	ELECT	10MF	20%	50V
C39	1-124-791-11	ELECT	1MF	20%	50V
C40	1-124-791-11	ELECT	1MF	20%	50V
C41	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C42	1-124-927-11	ELECT	4.7MF	20%	50V
C43	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C44	1-130-471-00	MYLAR	0.001MF	5%	50V
C45	1-123-875-11	ELECT	10MF	20%	50V
C46	1-124-925-11	ELECT	2.2MF	20%	50V
C47	1-123-875-11	ELECT	10MF	20%	50V
C48	1-124-925-11	ELECT	2.2MF	20%	50V
C49	1-136-153-00	FILM	0.01MF	5%	50V
C50	1-123-875-11	ELECT	10MF	20%	50V
C53	1-123-875-11	ELECT	10MF	20%	50V
C54	1-124-927-11	ELECT	4.7MF	20%	50V
C55	1-130-471-00	MYLAR	0.001MF	5%	50V
C56	1-130-471-00	FILM	0.001MF	5%	50V
C57	1-136-165-00	FILM	0.1MF	5%	50V
C58	1-124-119-00	ELECT	330MF	20%	16V
C59	1-124-120-11	ELECT	220MF	20%	16V
C60	1-124-925-11	ELECT	2.2MF	20%	50V
C61	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C62	1-124-925-11	ELECT	2.2MF	20%	50V
C63	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C71	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C73	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C74	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C75	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C76	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C79	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C81	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C82	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C83	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C84	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C85	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C86	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C87	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C88	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C89	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C90	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C91	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C92	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C93	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C94	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C95	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C96	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C97	1-163-109-00	CERAMIC CHIP	47PF	5%	50V

DA

REF.NO.	PART NO.	DESCRIPTION			REMARK
C98	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
C99	1-136-165-00	FILM	0.1MF	5%	50V
C100	1-136-153-00	FILM	0.01MF	5%	50V
C101	1-136-153-00	FILM	0.01MF	5%	50V
C102	1-124-963-11	ELECT	33MF	20%	16V
C103	1-124-556-11	ELECT	2200MF	20%	16V
C104	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C105	1-123-875-11	ELECT	10MF	20%	50V
C156	1-123-875-11	ELECT	10MF	20%	50V
C158	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C201	1-123-875-11	ELECT	10MF	20%	50V
C202	1-136-153-00	FILM	0.01MF	5%	50V
C203	1-136-165-00	FILM	0.1MF	5%	50V
C204	1-124-927-11	ELECT	4.7MF	20%	50V
C205	1-124-791-11	ELECT	1MF	20%	50V
C206	1-124-791-11	ELECT	1MF	20%	50V
C207	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C208	1-124-791-11	ELECT	1MF	20%	50V
C209	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C210	1-123-875-11	ELECT	10MF	20%	50V
C211	1-124-477-11	ELECT	47MF	20%	16V
C212	1-126-233-11	ELECT	22MF	20%	50V
C213	1-124-925-11	ELECT	2.2MF	20%	50V
C214	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C215	1-124-925-11	ELECT	2.2MF	20%	50V
C216	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C217	1-123-875-11	ELECT	10MF	20%	50V
C218	1-124-927-11	ELECT	4.7MF	20%	50V
C219	1-124-925-11	ELECT	2.2MF	20%	50V
C220	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C221	1-124-925-11	ELECT	2.2MF	20%	50V
C222	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C223	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C224	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C231	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C232	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C233	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C234	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C235	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C236	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C237	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C238	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C239	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C240	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C241	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C242	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C243	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C244	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C245	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C248	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C249	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C252	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C253	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C254	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C255	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C256	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C257	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C258	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C259	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C260	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C261	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C262	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C263	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C264	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C265	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C266	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C300	1-124-925-11	ELECT	2.2MF	20%	50V
C301	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C302	1-124-925-11	ELECT	2.2MF	20%	50V
C303	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C401	1-126-101-11	ELECT	100MF	20%	16V
C402	1-126-101-11	ELECT	100MF	20%	16V
C403	1-123-875-11	ELECT	10MF	20%	50V
C405	1-123-875-11	ELECT	10MF	20%	50V
		<DIODE>			
D1	8-719-900-95	DIODE V09G			
D2	8-719-900-95	DIODE V09G			
D3	8-719-400-18	DIODE MA152WK			
D4	8-719-400-18	DIODE MA152WK			
D5	8-719-938-28	DIODE ERA22-06			
D6	8-719-106-71	DIODE RD12M-B2			
D8	8-719-400-18	DIODE MA152WK			
D9	8-719-400-18	DIODE MA152WK			
D10	8-719-400-18	DIODE MA152WK			
D11	8-719-400-18	DIODE MA152WK			
D12	8-719-400-18	DIODE MA152WK			
D13	8-719-104-34	DIODE 1S2836			
D14	8-719-911-19	DIODE 1SS119			
D201	8-719-800-76	DIODE 1SS226			
D202	8-719-400-18	DIODE MA152WK			
D203	8-719-400-18	DIODE MA152WK			
D204	8-719-400-18	DIODE MA152WK			
D205	8-719-800-76	DIODE 1SS226			
D206	8-719-400-18	DIODE MA152WK			
D207	8-719-400-18	DIODE MA152WK			
D208	8-719-400-18	DIODE MA152WK			
D209	8-719-400-18	DIODE MA152WK			
		<IC>			
IC1	8-759-604-39	IC M5F78M12			
IC2	8-759-982-48	IC RC79L12A			
IC3	8-759-300-78	IC HD14538BFP			
IC4	8-759-100-96	IC RC4558PG2			
IC5	8-759-300-78	IC HD14538BFP			
IC6	8-759-100-96	IC RC4558PG2			
IC8	8-759-100-93	IC UPC393G2			
IC9	8-759-300-78	IC HD14538BFP			
IC10	8-759-114-06	IC UPC814G2			
IC11	8-759-300-78	IC HD14538BFP			
IC12	8-759-114-06	IC UPC814G2			
IC13	8-759-300-78	IC HD14538BFP			
IC14	8-749-920-80	IC SBX4011-01			
IC15	8-759-100-96	IC RC4558PG2			
IC16	8-759-114-06	IC UPC814G2			
IC17	8-759-009-07	IC MC14053BF			
IC18	8-759-300-78	IC HD14538BFP			
IC19	8-759-300-71	IC HD-14053BFP			
IC201	8-752-033-65	IC CXA1158P			
IC202	8-759-925-74	IC SN74HC04NS			
IC203	8-759-114-06	IC UPC814G2			
IC204	8-759-114-06	IC UPC814G2			
IC205	8-759-114-06	IC UPC814G2			
IC206	8-759-114-06	IC UPC814G2			
IC207	8-759-114-06	IC UPC814G2			
IC208	8-759-100-96	IC RC4558PG2			

F.NO.	PART NO.	DESCRIPTION	REMARK
IC209	8-759-100-96	IC RC4558PG2	
IC211	8-759-100-96	IC RC4558PG2	
IC213	8-759-114-06	IC UPC814G2	
IC214	8-759-114-06	IC UPC814G2	
IC215	8-759-114-06	IC UPC814G2	
IC217	8-759-114-06	IC UPC814G2	
IC218	8-759-300-71	IC HD-14053BFP	
IC219	8-759-114-06	IC UPC814G2	
IC220	8-759-114-06	IC UPC814G2	
IC221	8-759-926-11	IC SN74HC138NS	
IC401	8-759-100-93	IC UPC393G2	

<COIL>

L1	1-459-155-00	COIL (WITH CORE) 45UH	
L2	1-459-155-00	COIL (WITH CORE) 45UH	
L3	1-459-155-00	COIL (WITH CORE) 45UH	
L401	1-459-155-00	COIL (WITH CORE) 45UH	
L402	1-459-155-00	COIL (WITH CORE) 45UH	

<TRANSISTOR>

Q1	8-729-230-49	TRANSISTOR 2SC2712	
Q2	8-729-216-22	TRANSISTOR 2SA1162	
Q3	8-729-230-49	TRANSISTOR 2SC2712	
Q4	8-729-216-22	TRANSISTOR 2SA1162	
Q5	8-729-216-22	TRANSISTOR 2SA1162	
Q6	8-729-216-22	TRANSISTOR 2SA1162	
Q7	8-729-216-22	TRANSISTOR 2SA1162	
Q8	8-729-216-22	TRANSISTOR 2SA1162	
Q9	8-729-230-49	TRANSISTOR 2SC2712	
Q10	8-729-230-49	TRANSISTOR 2SC2712	
Q11	8-729-105-72	TRANSISTOR 2SK523-L1	
Q12	8-729-216-22	TRANSISTOR 2SA1162	
Q13	8-729-216-22	TRANSISTOR 2SA1162	
Q14	8-729-230-49	TRANSISTOR 2SC2712	
Q15	8-729-230-49	TRANSISTOR 2SC2712	
Q16	8-729-230-49	TRANSISTOR 2SC2712	
Q17	8-729-903-82	TRANSISTOR FMW2	
Q18	8-729-920-60	TRANSISTOR IMX2	
Q19	8-729-904-04	TRANSISTOR FMS2	
Q20	8-729-903-10	TRANSISTOR FMW1	
Q21	8-729-903-10	TRANSISTOR FMW1	
Q22	8-729-920-60	TRANSISTOR IMX2	
Q23	8-729-230-49	TRANSISTOR 2SC2712	
Q24	8-729-216-22	TRANSISTOR 2SA1162	
Q25	8-729-901-01	TRANSISTOR DTC144EK	
Q26	8-729-901-01	TRANSISTOR DTC144EK	
Q27	8-729-901-01	TRANSISTOR DTC144EK	
Q29	8-729-901-01	TRANSISTOR DTC144EK	
Q30	8-729-901-01	TRANSISTOR DTC144EK	
Q31	8-729-903-10	TRANSISTOR FMW1	
Q32	8-729-230-49	TRANSISTOR 2SC2712	
Q33	8-729-230-49	TRANSISTOR 2SC2712	
Q34	8-729-216-22	TRANSISTOR 2SA1162	
Q201	8-729-230-49	TRANSISTOR 2SC2712	
Q202	8-729-230-49	TRANSISTOR 2SC2712	
Q203	8-729-230-49	TRANSISTOR 2SC2712	
Q204	8-729-230-49	TRANSISTOR 2SC2712	
Q205	8-729-903-82	TRANSISTOR FMW2	
Q206	8-729-920-60	TRANSISTOR IMX2	
Q207	8-729-904-04	TRANSISTOR FMS2	
Q208	8-729-903-10	TRANSISTOR FMW1	
Q209	8-729-903-10	TRANSISTOR FMW1	

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q210	8-729-920-60	TRANSISTOR IMX2	
Q211	8-729-230-49	TRANSISTOR 2SC2712	
Q212	8-729-216-22	TRANSISTOR 2SA1162	
Q213	8-729-903-82	TRANSISTOR FMW2	
Q214	8-729-920-60	TRANSISTOR IMX2	
Q215	8-729-904-04	TRANSISTOR FMS2	
Q216	8-729-903-10	TRANSISTOR FMW1	
Q217	8-729-903-10	TRANSISTOR FMW1	
Q218	8-729-920-60	TRANSISTOR IMX2	
Q219	8-729-230-49	TRANSISTOR 2SC2712	
Q220	8-729-216-22	TRANSISTOR 2SA1162	
Q221	8-729-230-49	TRANSISTOR 2SC2712	
Q222	8-729-902-96	TRANSISTOR FMS1	
Q223	8-729-230-49	TRANSISTOR 2SC2712	
Q224	8-729-902-96	TRANSISTOR FMS1	
Q225	8-729-230-49	TRANSISTOR 2SC2712	
Q226	8-729-903-10	TRANSISTOR FMW1	
Q227	8-729-216-22	TRANSISTOR 2SA1162	
Q228	8-729-903-10	TRANSISTOR FMW1	
Q229	8-729-216-22	TRANSISTOR 2SA1162	
Q230	8-729-216-22	TRANSISTOR 2SA1162	
Q231	8-729-216-22	TRANSISTOR 2SA1162	
Q232	8-729-903-82	TRANSISTOR FMW2	
Q233	8-729-920-60	TRANSISTOR IMX2	
Q234	8-729-904-04	TRANSISTOR FMS2	
Q235	8-729-903-10	TRANSISTOR FMW1	
Q236	8-729-903-10	TRANSISTOR FMW1	
Q237	8-729-920-60	TRANSISTOR IMX2	
Q238	8-729-230-49	TRANSISTOR 2SC2712	
Q239	8-729-216-22	TRANSISTOR 2SA1162	
Q240	8-729-903-10	TRANSISTOR FMW1	
Q241	8-729-216-22	TRANSISTOR 2SA1162	
Q401	8-729-205-97	TRANSISTOR 2SC3668-Y	
Q402	8-729-205-95	TRANSISTOR 2SA1428Y	

<RESISTOR>

R1	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R2	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W
R3	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R4	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R5	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R6	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R7	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R8	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R9	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R10	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R11	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R12	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R13	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R14	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R15	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R16	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R17	1-216-025-00	METAL GLAZE	100	5%	1/10W
R18	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R19	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R20	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R21	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R22	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R23	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R24	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R25	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R26	1-216-073-00	METAL GLAZE	10K	5%	1/10W

DA

REF.NO.	PART NO.	DESCRIPTION				REMARK
R29	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R30	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R31	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R32	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R33	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R34	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R35	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R36	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R39	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R41	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R42	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R43	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R46	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R47	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R49	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R50	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R51	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R52	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R53	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R54	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R55	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R56	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R57	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R58	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R59	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R60	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R61	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R62	1-216-669-11	METAL CHIP	5.6K	0.50%	1/10W	
R63	1-216-099-00	METAL GLAZE	120K	5%	1/10W	
R64	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R65	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R66	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R67	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R68	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R69	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R70	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R71	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R72	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R73	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R74	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R75	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R76	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R77	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R78	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R79	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R80	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R81	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R82	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R83	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R84	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R85	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R86	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R87	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R88	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R89	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R90	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R91	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R92	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R93	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R94	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R95	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R96	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R97	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R99	1-216-073-00	METAL GLAZE	10K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMA
R100	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R101	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R102	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R103	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R104	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R105	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R106	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R107	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R108	1-216-679-11	METAL CHIP	15K	0.50%	1/10W	
R109	1-216-669-11	METAL CHIP	5.6K	0.50%	1/10W	
R110	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R111	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R112	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R113	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R114	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R115	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R116	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R117	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R118	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R119	1-216-669-11	METAL CHIP	5.6K	0.50%	1/10W	
R120	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R121	1-216-748-11	METAL GLAZE	39K	5%	1/10W	
R122	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R123	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R124	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R125	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R126	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R127	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R128	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R129	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R130	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R131	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R132	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R133	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R134	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R135	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R136	1-216-748-11	METAL GLAZE	39K	5%	1/10W	
R137	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R138	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R139	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R140	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R141	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R142	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R143	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R144	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W	
R145	1-216-039-00	METAL GLAZE	390	5%	1/10W	
R146	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R147	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R148	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R150	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R151	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R152	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R153	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R154	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R155	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R156	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R157	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R158	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R159	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R160	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R161	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R163	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R164	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R165	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R168	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R169	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R170	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R171	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R172	1-216-093-00	METAL GLAZE	68K	5%	1/10W	
R173	1-216-109-00	METAL GLAZE	330K	5%	1/10W	
R174	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R175	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R176	1-247-881-00	CARBON	120K	5%	1/4W	
R177	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R178	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R179	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R180	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R181	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R182	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R183	1-216-099-00	METAL GLAZE	120K	5%	1/10W	
R184	1-216-105-00	METAL GLAZE	220K	5%	1/10W	
R185	1-216-689-11	METAL CHIP	39K	0.50%	1/10W	
R186	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R187	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R188	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R189	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R190	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R191	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R192	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R195	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R196	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R199	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R201	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R203	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R204	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R205	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R206	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R207	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R208	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R209	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R210	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R211	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R212	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R213	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R214	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R215	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R216	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R217	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R218	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R219	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R220	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R221	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R222	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R223	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R224	1-216-093-00	METAL GLAZE	68K	5%	1/10W	
R225	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R226	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R227	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R228	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R229	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R230	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R231	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R232	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R233	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R234	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R235	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R236	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R237	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R238	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R239	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R240	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R241	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R242	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R243	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R244	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R245	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R246	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R247	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R248	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R249	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R250	1-216-641-11	METAL CHIP	390	0.50%	1/10W	
R251	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R252	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R253	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R254	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R255	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R256	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R257	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R258	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R259	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R260	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R261	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R262	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R263	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R265	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R266	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R267	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R268	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R269	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R270	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R271	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R272	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R273	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R274	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R275	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R276	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R277	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R278	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R279	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R280	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R281	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R282	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R283	1-216-661-11	METAL CHIP	2.7K	0.50%	1/10W	
R284	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R286	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R287	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R288	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R289	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R290	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R291	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R295	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R296	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R297	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R298	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R299	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R300	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R301	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R302	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R303	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R304	1-216-025-00	METAL GLAZE	100	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R305	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R306	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R307	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R308	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R309	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R310	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R311	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R312	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R313	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R314	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R315	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R316	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R317	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R318	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R319	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R320	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R321	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R322	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R323	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R324	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R325	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R326	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R327	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R328	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R329	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R330	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R331	1-216-661-11	METAL CHIP	2.7K	0.50%	1/10W	
R332	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R333	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R334	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R335	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R336	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R337	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R338	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R339	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R340	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R341	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R342	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R343	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R344	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R345	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R346	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R347	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R348	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R349	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R350	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R351	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R352	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R353	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R354	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R356	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R357	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R358	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R359	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R360	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R361	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R362	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R363	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R364	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R365	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R366	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R367	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R368	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R369	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R370	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R371	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R372	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R373	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R374	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R375	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R376	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R377	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R378	1-216-615-11	METAL CHIP	33	0.50%	1/10W	
R379	1-216-627-11	METAL CHIP	100	0.50%	1/10W	
R380	1-216-639-11	METAL CHIP	330	0.50%	1/10W	
R381	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R382	1-216-643-11	METAL CHIP	470	0.50%	1/10W	
R383	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R384	1-216-661-11	METAL CHIP	2.7K	0.50%	1/10W	
R385	1-216-647-11	METAL CHIP	680	0.50%	1/10W	
R386	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R401	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R402	1-216-017-00	METAL GLAZE	47	5%	1/10W	
R403	1-216-685-11	METAL CHIP	27K	0.50%	1/10W	
R404	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R405	1-216-677-11	METAL CHIP	12K	0.50%	1/10W	
R406	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R407	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R408	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R409	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R410	1-216-679-11	METAL CHIP	15K	0.50%	1/10W	
R411	1-216-693-11	METAL CHIP	56K	0.50%	1/10W	
R412	1-216-677-11	METAL CHIP	12K	0.50%	1/10W	
R413	1-216-675-11	METAL CHIP	10K	0.50%	1/10W	
R414	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R415	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R416	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R417	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R418	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R419	1-216-651-11	METAL CHIP	1K	0.50%	1/10W	
R420	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R421	1-216-049-00	METAL GLAZE	1K	5%	1/10W	

<VARIABLE RESISTOR>

RV1	1-237-502-21	RES, ADJ, CERMET	5K
RV2	1-237-503-21	RES, ADJ, CERMET	10K
RV3	1-237-502-21	RES, ADJ, CERMET	5K
RV4	1-237-503-21	RES, ADJ, CERMET	10K

<SWITCH>

S1	1-570-204-21	SWITCH, KEY BOARD
S2	1-570-204-21	SWITCH, KEY BOARD

****

*A-1345-901-A DB BOARD, COMPLETE
****

*1-568-984-11 CONNECTOR, MALE 96P

<CAPACITOR>

C501	1-123-356-00	ELECT	10MF	20%	16V
C502	1-123-356-00	ELECT	10MF	20%	16V
C503	1-123-356-00	ELECT	10MF	20%	16V
C504	1-123-356-00	ELECT	10MF	20%	16V
C505	1-123-356-00	ELECT	10MF	20%	16V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C506	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C507	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C508	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C509	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C510	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C511	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C512	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C513	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C514	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C515	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C516	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C517	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C518	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C519	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C520	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C521	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C522	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C523	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C524	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C525	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C526	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C527	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C528	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C529	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C530	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C531	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C532	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C533	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C534	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C535	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C536	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C537	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C538	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C539	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C540	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C541	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C542	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C543	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C544	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C545	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C546	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C547	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C548	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C549	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C550	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C551	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C552	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C553	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C554	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C555	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C556	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C557	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C558	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C559	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C560	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C561	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C562	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C563	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C564	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C565	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C566	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C567	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C568	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C569	1-164-232-11	CERAMIC CHIP 0.01MF	50V

REF.NO.	PART NO.	DESCRIPTION		REMARK
C570	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C571	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C572	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C573	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C574	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C575	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C577	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C578	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C580	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C581	1-164-232-11	CERAMIC CHIP 0.01MF		50V
C582	1-164-161-11	CERAMIC CHIP 0.0022MF	5%	50V
C583	1-164-161-11	CERAMIC CHIP 0.0022MF	5%	50V
C584	1-164-161-11	CERAMIC CHIP 0.0022MF	5%	50V

<DIODE>

REF.NO.	PART NO.	DESCRIPTION
D501	8-719-900-95	DIODE V09G
D502	8-719-900-95	DIODE V09G
D503	8-719-800-76	DIODE 1SS226
D504	8-719-800-76	DIODE 1SS226
D505	8-719-800-76	DIODE 1SS226
D506	8-719-800-76	DIODE 1SS226
D507	8-719-800-76	DIODE 1SS226
D508	8-719-800-76	DIODE 1SS226

<IC>

REF.NO.	PART NO.	DESCRIPTION
IC501	8-759-926-48	SN74HC244NS
IC502	8-759-926-48	SN74HC244NS
IC503	8-759-926-48	SN74HC244NS
IC504	8-759-926-48	SN74HC244NS
IC505	8-759-926-11	IC SN74HC138NS
IC506	8-759-926-11	IC SN74HC138NS
IC507	8-759-926-11	IC SN74HC138NS
IC508	8-759-926-11	IC SN74HC138NS
IC509	8-759-926-11	IC SN74HC138NS
IC510	8-759-926-11	IC SN74HC138NS
IC511	8-759-995-64	IC MB86023
IC512	8-759-995-64	IC MB86023
IC513	8-759-995-64	IC MB86023
IC514	8-759-995-64	IC MB86023
IC515	8-759-995-64	IC MB86023
IC516	8-759-995-64	IC MB86023
IC517	8-759-995-64	IC MB86023
IC518	8-759-995-64	IC MB86023
IC519	8-759-995-64	IC MB86023
IC520	8-759-995-64	IC MB86023
IC521	8-759-995-64	IC MB86023
IC522	8-759-995-64	IC MB86023
IC523	8-759-995-64	IC MB86023
IC524	8-759-995-64	IC MB86023
IC525	8-759-995-64	IC MB86023
IC526	8-759-995-64	IC MB86023
IC527	8-759-995-64	IC MB86023
IC528	8-759-995-64	IC MB86023
IC529	8-759-995-64	IC MB86023
IC530	8-759-995-64	IC MB86023
IC531	8-759-995-64	IC MB86023
IC532	8-759-995-64	IC MB86023
IC533	8-759-995-64	IC MB86023
IC534	8-759-995-64	IC MB86023
IC535	8-759-995-64	IC MB86023
IC536	8-759-995-64	IC MB86023

DB

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC537	8-759-995-64	IC MB86023	
IC538	8-759-995-64	IC MB86023	
IC539	8-759-995-64	IC MB86023	
IC540	8-759-995-64	IC MB86023	
IC541	8-759-995-64	IC MB86023	
IC542	8-759-995-64	IC MB86023	
IC543	8-759-995-64	IC MB86023	
IC544	8-759-995-64	IC MB86023	
IC545	8-759-995-64	IC MB86023	
IC546	8-759-995-64	IC MB86023	
IC547	8-759-100-96	IC RC4558PG2	
IC548	8-759-100-96	IC RC4558PG2	
IC549	8-759-114-06	IC UPC814G2	
IC550	8-759-114-06	IC UPC814G2	
IC551	8-759-114-06	IC UPC814G2	
IC552	8-759-147-47	IC UPC-1093T	
		<COIL>	
L501	1-459-155-00	COIL (WITH CORE) 45UH	
L502	1-459-155-00	COIL (WITH CORE) 45UH	
		<RESISTOR>	
R501	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R502	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R503	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R504	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R505	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R506	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R507	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R508	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R509	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R510	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R511	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R512	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R513	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R514	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R515	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R516	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R517	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R518	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R519	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R520	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R521	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R522	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R523	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R524	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R525	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R526	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R527	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R528	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R529	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R530	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R531	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R532	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R533	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R534	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R535	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R536	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R537	1-216-653-11	METAL CHIP 1.2K 0.50% 1/10W	
R538	1-216-653-11	METAL CHIP 1.2K 0.50% 1/10W	
R539	1-216-653-11	METAL CHIP 1.2K 0.50% 1/10W	
R540	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R541	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R542	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R543	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R544	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R545	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R546	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R547	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R548	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R549	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R550	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R551	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R552	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R553	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R554	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R555	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R556	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R557	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R558	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R559	1-216-661-11	METAL CHIP 2.7K 0.50% 1/10W	
R560	1-216-645-11	METAL CHIP 560 0.50% 1/10W	
R561	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R562	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R563	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R564	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R565	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R566	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R567	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R568	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R569	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R570	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R571	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R572	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R573	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R574	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R575	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R576	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R577	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R578	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R579	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R580	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R581	1-216-676-11	METAL CHIP 11K 0.50% 1/10W	
R582	1-216-676-11	METAL CHIP 11K 0.50% 1/10W	
R583	1-216-676-11	METAL CHIP 11K 0.50% 1/10W	
R584	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R585	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R586	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R587	1-216-697-11	METAL CHIP 82K 0.50% 1/10W	
R588	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R589	1-216-105-00	METAL GLAZE 220K 5% 1/10W	
R590	1-216-105-00	METAL GLAZE 220K 5% 1/10W	
R591	1-216-105-00	METAL GLAZE 220K 5% 1/10W	
R592	1-216-101-00	METAL GLAZE 150K 5% 1/10W	
R593	1-216-101-00	METAL GLAZE 150K 5% 1/10W	
R594	1-216-101-00	METAL GLAZE 150K 5% 1/10W	
R595	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R596	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R597	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R598	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R599	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R601	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R602	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R603	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R604	1-216-627-11	METAL CHIP 100 0.50% 1/10W	

REF.NO.	PART NO.	DESCRIPTION	REMARK
R605	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R606	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R607	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R608	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R609	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R610	1-216-659-11	METAL CHIP 2.2K 0.50% 1/10W	
R611	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R612	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R613	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R614	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R615	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R616	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R617	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R618	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R619	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R620	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R621	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R622	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R623	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R624	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R625	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R626	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R627	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R628	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R629	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R630	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R631	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R632	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R633	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R634	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R635	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R636	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R637	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R638	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R639	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R640	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R641	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R642	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R643	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R644	1-216-675-11	METAL CHIP 10K 0.50% 1/10W	
R645	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R646	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R647	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R648	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R649	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R650	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R651	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R652	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R653	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R654	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R655	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R656	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R657	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R658	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R659	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R660	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R661	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R662	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R663	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R664	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R665	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R666	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R667	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R668	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R669	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R670	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R671	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R672	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R673	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R674	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R675	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R676	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R677	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R678	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R679	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R680	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R681	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R682	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R683	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R684	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R685	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R686	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R687	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R688	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R689	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R690	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R691	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R692	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R693	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R694	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R695	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R696	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R697	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R698	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R699	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R700	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R701	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R702	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R703	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R704	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R705	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R706	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R707	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R708	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R709	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R710	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R711	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R712	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R713	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W	
R714	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R715	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R716	1-216-679-11	METAL CHIP 15K 0.50% 1/10W	
R717	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R718	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R719	1-216-679-11	METAL CHIP 15K 0.50% 1/10W	
R720	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R721	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R722	1-216-679-11	METAL CHIP 15K 0.50% 1/10W	
R723	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R724	1-216-651-11	METAL CHIP 1K 0.50% 1/10W	
R725	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R726	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R727	1-216-627-11	METAL CHIP 100 0.50% 1/10W	
R728	1-216-661-11	METAL CHIP 2.7K 0.50% 1/10W	
R729	1-216-661-11	METAL CHIP 2.7K 0.50% 1/10W	
R801	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R802	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	

DB **DC**

REF.NO.	PART NO.	DESCRIPTION				REMARK
R803	1-216-691-11	METAL CHIP	47K	0.50%	1/10W	
R804	1-216-671-11	METAL CHIP	6.8K	0.50%	1/10W	
R805	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R806	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R807	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R808	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R809	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R810	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R811	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R812	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R813	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R814	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R815	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R816	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R817	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R818	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R819	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R820	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	
R821	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	

****

*A-1345-922-A DC BOARD, COMPLETE

****

*1-508-742-00	PIN, CONNECTOR 3P
*1-564-507-11	PLUG, CONNECTOR 4P
*1-564-508-11	PLUG, CONNECTOR 5P
*1-564-509-11	PLUG, CONNECTOR 6P
*1-564-514-11	PLUG, CONNECTOR 11P
*1-564-515-11	PLUG, CONNECTOR 12P
*4-395-525-01	HOLDER (D), TR
*4-395-527-01	HOLDER (B), TR
4-874-042-00	SHEET, INSULATING

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1	1-124-122-11	ELECT	100MF	20%	50V
C2	1-126-101-11	ELECT	100MF	20%	16V
C3	1-124-122-11	ELECT	100MF	20%	50V
C4	1-126-101-11	ELECT	100MF	20%	16V
C5	1-124-122-11	ELECT	100MF	20%	50V
C6	1-102-963-00	CERAMIC	33PF	5%	50V
C7	1-102-963-00	CERAMIC	33PF	5%	50V
C8	1-136-157-00	FILM	0.022MF	5%	50V
C9	1-124-791-11	ELECT	1MF	20%	50V
C10	1-124-122-11	ELECT	100MF	20%	50V
C11	1-102-963-00	CERAMIC	33PF	5%	50V
C12	1-102-963-00	CERAMIC	33PF	5%	50V
C13	1-136-157-00	FILM	0.022MF	5%	50V
C14	1-124-791-11	ELECT	1MF	20%	50V
C15	1-124-122-11	ELECT	100MF	20%	50V
C16	1-102-963-00	CERAMIC	33PF	5%	50V
C17	1-102-963-00	CERAMIC	33PF	5%	50V
C18	1-136-157-00	FILM	0.022MF	5%	50V
C19	1-124-791-11	ELECT	1MF	20%	50V
C20	1-136-173-00	FILM	0.47MF	5%	50V
C21	1-124-556-11	ELECT	2200MF	20%	16V
C22	1-124-556-11	ELECT	2200MF	20%	16V
C23	1-124-556-11	ELECT	2200MF	20%	16V
C24	1-136-165-00	FILM	0.1MF	5%	50V
C25	1-136-165-00	FILM	0.1MF	5%	50V
C26	1-136-165-00	FILM	0.1MF	5%	50V
C27	1-136-165-00	FILM	0.1MF	5%	50V
C28	1-136-165-00	FILM	0.1MF	5%	50V
C29	1-136-165-00	FILM	0.1MF	5%	50V
C30	1-136-165-00	FILM	0.1MF	5%	50V
C31	1-136-165-00	FILM	0.1MF	5%	50V
C32	1-136-165-00	FILM	0.1MF	5%	50V
C33	1-124-477-11	ELECT	47MF	20%	16V
C34	1-124-791-11	ELECT	1MF	20%	50V
C35	1-126-101-11	ELECT	100MF	20%	16V
C101	1-102-824-00	CERAMIC	470PF	5%	50V
C102	1-124-791-11	ELECT	1MF	20%	50V
C103	1-101-004-00	CERAMIC	0.01MF		50V
C104	1-124-122-11	ELECT	100MF	20%	50V
C105	1-124-637-11	ELECT	1000MF	20%	50V
C106	1-124-791-11	ELECT	1MF	20%	50V
C107	1-101-004-00	CERAMIC	0.01MF		50V
C108	1-124-122-11	ELECT	100MF	20%	50V
C109	1-124-637-11	ELECT	1000MF	20%	50V
C110	1-136-159-00	FILM	0.033MF	5%	50V
C111	1-136-159-00	FILM	0.033MF	5%	50V
C201	1-130-473-00	MYLAR	0.0015MF	5%	50V
C202	1-102-973-00	CERAMIC	100PF	5%	50V
C203	1-102-973-00	CERAMIC	100PF	5%	50V
C204	1-136-153-00	FILM	0.01MF	5%	50V
C205	1-124-477-11	ELECT	47MF	20%	16V
C206	1-124-122-11	ELECT	100MF	20%	50V
C207	1-101-004-00	CERAMIC	0.01MF		50V
C208	1-124-122-11	ELECT	100MF	20%	50V
C209	1-101-004-00	CERAMIC	0.01MF		50V
C210	1-130-473-00	MYLAR	0.0015MF	5%	50V
C211	1-102-973-00	CERAMIC	100PF	5%	50V
C212	1-102-973-00	CERAMIC	100PF	5%	50V
C213	1-136-153-00	FILM	0.01MF	5%	50V
C214	1-124-477-11	ELECT	47MF	20%	16V
C215	1-124-122-11	ELECT	100MF	20%	50V
C216	1-101-004-00	CERAMIC	0.01MF		50V
C217	1-124-122-11	ELECT	100MF	20%	50V
C218	1-101-004-00	CERAMIC	0.01MF		50V
C219	1-130-473-00	MYLAR	0.0015MF	5%	50V
C220	1-102-973-00	CERAMIC	100PF	5%	50V
C221	1-102-973-00	CERAMIC	100PF	5%	50V
C222	1-136-153-00	FILM	0.01MF	5%	50V
C223	1-124-477-11	ELECT	47MF	20%	16V
C224	1-124-122-11	ELECT	100MF	20%	50V
C225	1-101-004-00	CERAMIC	0.01MF		50V
C226	1-124-122-11	ELECT	100MF	20%	50V
C227	1-101-004-00	CERAMIC	0.01MF		50V
C228	1-123-875-11	ELECT	10MF	20%	50V
C229	1-101-004-00	CERAMIC	0.01MF		50V
C230	1-123-875-11	ELECT	10MF	20%	50V
C231	1-101-004-00	CERAMIC	0.01MF		50V
C232	1-123-875-11	ELECT	10MF	20%	50V
C233	1-101-004-00	CERAMIC	0.01MF		50V
C234	1-123-875-11	ELECT	10MF	20%	50V
C235	1-101-004-00	CERAMIC	0.01MF		50V
C236	1-123-875-11	ELECT	10MF	20%	50V
C237	1-101-004-00	CERAMIC	0.01MF		50V
C238	1-123-875-11	ELECT	10MF	20%	50V
C239	1-101-004-00	CERAMIC	0.01MF		50V
C243	1-102-978-00	CERAMIC	220PF	5%	50V
C244	1-102-978-00	CERAMIC	220PF	5%	50V
C245	1-102-978-00	CERAMIC	220PF	5%	50V
C246	1-102-947-00	CERAMIC	10PF	0.5PF	50V
C247	1-130-471-00	MYLAR	0.001MF	5%	50V
C248	1-102-947-00	CERAMIC	10PF	0.5PF	50V
C249	1-130-471-00	MYLAR	0.001MF	5%	50V
C250	1-102-947-00	CERAMIC	10PF	0.5PF	50V
C251	1-130-471-00	MYLAR	0.001MF	5%	50V
C301	1-130-473-00	MYLAR	0.0015MF	5%	50V

REF.NO.	PART NO.	DESCRIPTION				REMARK
C302	1-102-973-00	CERAMIC	100PF	5%	50V	
C303	1-102-973-00	CERAMIC	100PF	5%	50V	
C304	1-136-153-00	FILM	0.01MF	5%	50V	
C305	1-124-477-11	ELECT	47MF	20%	16V	
C306	1-124-122-11	ELECT	100MF	20%	50V	
C307	1-101-004-00	CERAMIC	0.01MF		50V	
C308	1-124-122-11	ELECT	100MF	20%	50V	
C309	1-101-004-00	CERAMIC	0.01MF		50V	
C310	1-130-473-00	MYLAR	0.0015MF	5%	50V	
C311	1-102-973-00	CERAMIC	100PF	5%	50V	
C312	1-102-973-00	CERAMIC	100PF	5%	50V	
C313	1-136-153-00	FILM	0.01MF	5%	50V	
C314	1-124-477-11	ELECT	47MF	20%	16V	
C315	1-124-122-11	ELECT	100MF	20%	50V	
C316	1-101-004-00	CERAMIC	0.01MF		50V	
C317	1-124-122-11	ELECT	100MF	20%	50V	
C318	1-101-004-00	CERAMIC	0.01MF		50V	
C319	1-130-473-00	MYLAR	0.0015MF	5%	50V	
C320	1-102-973-00	CERAMIC	100PF	5%	50V	
C321	1-102-973-00	CERAMIC	100PF	5%	50V	
C322	1-136-153-00	FILM	0.01MF	5%	50V	
C323	1-124-477-11	ELECT	47MF	20%	16V	
C324	1-124-477-11	ELECT	47MF	20%	16V	
C325	1-101-004-00	CERAMIC	0.01MF		50V	
C326	1-124-477-11	ELECT	47MF	20%	16V	
C327	1-101-004-00	CERAMIC	0.01MF		50V	
C328	1-123-875-11	ELECT	10MF	20%	50V	
C329	1-101-004-00	CERAMIC	0.01MF		50V	
C330	1-123-875-11	ELECT	10MF	20%	50V	
C331	1-101-004-00	CERAMIC	0.01MF		50V	
C332	1-123-875-11	ELECT	10MF	20%	50V	
C333	1-101-004-00	CERAMIC	0.01MF		50V	
C334	1-123-875-11	ELECT	10MF	20%	50V	
C335	1-101-004-00	CERAMIC	0.01MF		50V	
C336	1-123-875-11	ELECT	10MF	20%	50V	
C337	1-101-004-00	CERAMIC	0.01MF		50V	
C338	1-123-875-11	ELECT	10MF	20%	50V	
C339	1-101-004-00	CERAMIC	0.01MF		50V	
C343	1-102-824-00	CERAMIC	470PF	5%	50V	
C344	1-102-824-00	CERAMIC	470PF	5%	50V	
C345	1-102-824-00	CERAMIC	470PF	5%	50V	
C346	1-102-947-00	CERAMIC	10PF	0.5PF	50V	
C347	1-130-471-00	MYLAR	0.001MF	5%	50V	
C348	1-102-947-00	CERAMIC	10PF	0.5PF	50V	
C349	1-130-471-00	MYLAR	0.001MF	5%	50V	
C350	1-102-947-00	CERAMIC	10PF	0.5PF	50V	
C351	1-130-471-00	MYLAR	0.001MF	5%	50V	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1	8-719-900-95	DIODE V09G	
D2	8-719-900-95	DIODE V09G	
D3	8-719-900-95	DIODE V09G	
D4	8-719-911-19	DIODE 1SS119	
D5	8-719-900-95	DIODE V09G	
D6	8-719-911-19	DIODE 1SS119	
D7	8-719-900-95	DIODE V09G	
D8	8-719-911-19	DIODE 1SS119	
D9	8-719-911-19	DIODE 1SS119	
D10	8-719-911-19	DIODE 1SS119	
D11	8-719-911-19	DIODE 1SS119	
D12	8-719-911-19	DIODE 1SS119	
D13	8-719-911-19	DIODE 1SS119	
D14	8-719-911-19	DIODE 1SS119	
D15	8-719-911-19	DIODE 1SS119	
D16	8-719-911-19	DIODE 1SS119	
D101	8-719-911-19	DIODE 1SS119	
D102	8-719-908-20	DIODE ERC88-009	
D103	8-719-908-20	DIODE ERC88-009	
D104	8-719-911-19	DIODE 1SS119	
D105	8-719-908-20	DIODE ERC88-009	
D106	8-719-908-20	DIODE ERC88-009	
D201	8-719-110-41	DIODE RD15ES-B2	
D202	8-719-109-66	DIODE RD3.3ES-B2	
D203	8-719-911-19	DIODE 1SS119	
D204	8-719-911-19	DIODE 1SS119	
D205	8-719-110-41	DIODE RD15ES-B2	
D206	8-719-109-66	DIODE RD3.3ES-B2	
D207	8-719-911-19	DIODE 1SS119	
D208	8-719-911-19	DIODE 1SS119	
D209	8-719-110-41	DIODE RD15ES-B2	
D210	8-719-109-66	DIODE RD3.3ES-B2	
D211	8-719-911-19	DIODE 1SS119	
D212	8-719-911-19	DIODE 1SS119	
D301	8-719-110-41	DIODE RD15ES-B2	
D302	8-719-109-66	DIODE RD3.3ES-B2	
D303	8-719-911-19	DIODE 1SS119	
D304	8-719-911-19	DIODE 1SS119	
D305	8-719-110-41	DIODE RD15ES-B2	
D306	8-719-109-66	DIODE RD3.3ES-B2	
D307	8-719-911-19	DIODE 1SS119	
D308	8-719-911-19	DIODE 1SS119	
D309	8-719-110-41	DIODE RD15ES-B2	
D310	8-719-109-66	DIODE RD3.3ES-B2	
D311	8-719-911-19	DIODE 1SS119	
D312	8-719-911-19	DIODE 1SS119	

<FERRITE BEAD INDUCTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
FB1	1-410-396-41	FERRITE BEAD INDUCTOR	
FB2	1-410-396-41	FERRITE BEAD INDUCTOR	
FB3	1-410-396-41	FERRITE BEAD INDUCTOR	
FB4	1-410-396-41	FERRITE BEAD INDUCTOR	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC1	8-759-982-13	IC RC7812FA	
IC2	8-759-929-65	IC UPC7912H	
IC3	8-759-945-58	IC RC4558PC	
IC4	8-759-113-13	IC UPC1498H	
IC5	8-759-945-58	IC RC4558PC	
IC6	8-759-113-13	IC UPC1498H	
IC7	8-759-945-58	IC RC4558PC	
IC8	8-759-113-13	IC UPC1498H	
IC9	8-759-945-58	IC RC4558PC	
IC101	8-759-109-82	IC UPC814C	
IC102	8-759-109-82	IC UPC814C	
IC103	8-759-109-82	IC UPC814C	
IC201	8-759-973-02	IC LM6364N	
IC202	8-759-973-02	IC LM6364N	
IC203	8-759-973-02	IC LM6364N	
IC301	8-759-973-02	IC LM6364N	
IC302	8-759-973-02	IC LM6364N	
IC303	8-759-973-02	IC LM6364N	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L101	1-459-155-00	COIL (WITH CORE) 45UH	
L102	1-459-155-00	COIL (WITH CORE) 45UH	
L103	1-459-155-00	COIL (WITH CORE) 45UH	
L104	1-459-155-00	COIL (WITH CORE) 45UH	

DC

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q2	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q3	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q4	8-729-900-89	TRANSISTOR DTC144ES	
Q5	8-729-900-89	TRANSISTOR DTC144ES	
Q6	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q7	8-729-900-89	TRANSISTOR DTC144ES	
Q8	8-729-900-89	TRANSISTOR DTC144ES	
Q9	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q10	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q11	8-729-900-89	TRANSISTOR DTC144ES	
Q12	8-729-900-89	TRANSISTOR DTC144ES	
Q13	8-729-900-89	TRANSISTOR DTC144ES	
Q14	8-729-900-89	TRANSISTOR DTC144ES	
Q101	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q102	8-729-105-72	TRANSISTOR 2SK523TP-L1	
Q103	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q104	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q105	8-729-142-68	TRANSISTOR 2SJ143	
Q106	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q107	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q108	8-729-142-69	TRANSISTOR 2SK817	
Q201	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q202	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q203	8-729-142-74	TRANSISTOR 2SD1977	
Q204	8-729-142-70	TRANSISTOR 2SB1315	
Q205	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q206	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q207	8-729-142-74	TRANSISTOR 2SD1977	
Q208	8-729-142-70	TRANSISTOR 2SB1315	
Q209	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q210	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q211	8-729-142-74	TRANSISTOR 2SD1977	
Q212	8-729-142-70	TRANSISTOR 2SB1315	
Q301	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q302	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q303	8-729-142-74	TRANSISTOR 2SD1977	
Q304	8-729-142-70	TRANSISTOR 2SB1315	
Q305	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q306	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q307	8-729-142-74	TRANSISTOR 2SD1977	
Q308	8-729-142-70	TRANSISTOR 2SB1315	
Q309	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q310	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q311	8-729-142-74	TRANSISTOR 2SD1977	
Q312	8-729-142-70	TRANSISTOR 2SB1315	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-215-463-00	METAL	56K	1%	1/6W	
R2	1-215-445-00	METAL	10K	1%	1/6W	
R3	1-215-445-00	METAL	10K	1%	1/6W	
R4	1-214-800-11	METAL	2.2	1%	1/2W	
R5	1-214-800-11	METAL	2.2	1%	1/2W	
R6	1-215-429-00	METAL	2.2K	1%	1/6W	
R7	1-215-421-00	METAL	1K	1%	1/6W	
R8	1-215-898-11	METAL OXIDE	10K	5%	2W	F
R9	1-249-433-11	CARBON	22K	5%	1/4W	
R10	1-249-417-11	CARBON	1K	5%	1/4W	
R11	1-249-441-11	CARBON	100K	5%	1/4W	
R12	1-249-429-11	CARBON	10K	5%	1/4W	
R13	1-249-429-11	CARBON	10K	5%	1/4W	
R14	1-249-429-11	CARBON	10K	5%	1/4W	
R15	1-215-463-00	METAL	56K	1%	1/6W	
R16	1-215-445-00	METAL	10K	1%	1/6W	
R17	1-215-445-00	METAL	10K	1%	1/6W	
R18	1-214-800-11	METAL	2.2	1%	1/2W	
R19	1-214-800-11	METAL	2.2	1%	1/2W	
R20	1-215-429-00	METAL	2.2K	1%	1/6W	
R21	1-215-421-00	METAL	1K	1%	1/6W	
R22	1-215-898-11	METAL OXIDE	10K	5%	2W	F
R23	1-249-433-11	CARBON	22K	5%	1/4W	
R24	1-249-417-11	CARBON	1K	5%	1/4W	
R25	1-249-441-11	CARBON	100K	5%	1/4W	
R26	1-249-429-11	CARBON	10K	5%	1/4W	
R27	1-249-429-11	CARBON	10K	5%	1/4W	
R28	1-249-429-11	CARBON	10K	5%	1/4W	
R29	1-215-463-00	METAL	56K	1%	1/6W	
R30	1-215-445-00	METAL	10K	1%	1/6W	
R31	1-215-445-00	METAL	10K	1%	1/6W	
R32	1-214-800-11	METAL	2.2	1%	1/2W	
R33	1-214-800-11	METAL	2.2	1%	1/2W	
R34	1-215-429-00	METAL	2.2K	1%	1/6W	
R35	1-215-421-00	METAL	1K	1%	1/6W	
R36	1-215-898-11	METAL OXIDE	10K	5%	2W	F
R37	1-249-433-11	CARBON	22K	5%	1/4W	
R38	1-249-417-11	CARBON	1K	5%	1/4W	
R39	1-249-441-11	CARBON	100K	5%	1/4W	
R40	1-249-429-11	CARBON	10K	5%	1/4W	
R41	1-249-429-11	CARBON	10K	5%	1/4W	
R42	1-249-429-11	CARBON	10K	5%	1/4W	
R43	1-249-429-11	CARBON	10K	5%	1/4W	
R44	1-249-429-11	CARBON	10K	5%	1/4W	
R45	1-249-417-11	CARBON	1K	5%	1/4W	
R46	1-249-433-11	CARBON	22K	5%	1/4W	
R47	1-249-433-11	CARBON	22K	5%	1/4W	
R48	1-249-429-11	CARBON	10K	5%	1/4W	
R49	1-249-429-11	CARBON	10K	5%	1/4W	
R50	1-249-437-11	CARBON	47K	5%	1/4W	
R51	1-249-417-11	CARBON	1K	5%	1/4W	
R52	1-249-417-11	CARBON	1K	5%	1/4W	
R53	1-249-437-11	CARBON	47K	5%	1/4W	
R54	1-249-417-11	CARBON	1K	5%	1/4W	
R55	1-215-883-11	METAL OXIDE	33	5%	2W	F
R56	1-249-433-11	CARBON	22K	5%	1/4W	
R57	1-249-429-11	CARBON	10K	5%	1/4W	
R58	1-249-417-11	CARBON	1K	5%	1/4W	
R59	1-215-883-11	METAL OXIDE	33	5%	2W	F
R60	1-215-883-11	METAL OXIDE	33	5%	2W	F
R61	1-215-463-00	METAL	56K	1%	1/6W	
R62	1-215-463-00	METAL	56K	1%	1/6W	
R63	1-215-463-00	METAL	56K	1%	1/6W	
R64	1-216-363-00	METAL OXIDE	0.33	5%	2W	F
R65	1-216-363-00	METAL OXIDE	0.33	5%	2W	F
R66	1-249-425-11	CARBON	4.7K	5%	1/4W	
R67	1-249-429-11	CARBON	10K	5%	1/4W	
R68	1-249-433-11	CARBON	22K	5%	1/4W	
R69	1-249-429-11	CARBON	10K	5%	1/4W	
R70	1-249-429-11	CARBON	10K	5%	1/4W	
R71	1-249-433-11	CARBON	22K	5%	1/4W	
R72	1-249-429-11	CARBON	10K	5%	1/4W	
R73	1-249-441-11	CARBON	100K	5%	1/4W	
R74	1-249-425-11	CARBON	4.7K	5%	1/4W	
R75	1-216-363-00	METAL OXIDE	0.33	5%	2W	F

REF.NO.	PART NO.	DESCRIPTION				REMARK
R76	1-216-363-00	METAL OXIDE	0.33	5%	2W	F
R77	1-249-417-11	CARBON	1K	5%	1/4W	
R78	1-249-417-11	CARBON	1K	5%	1/4W	
R101	1-249-417-11	CARBON	1K	5%	1/4W	
R102	1-249-417-11	CARBON	1K	5%	1/4W	
R103	1-249-419-11	CARBON	1.5K	5%	1/4W	
R104	1-249-429-11	CARBON	10K	5%	1/4W	
R105	1-249-425-11	CARBON	4.7K	5%	1/4W	
R106	1-249-417-11	CARBON	1K	5%	1/4W	
R107	1-249-393-11	CARBON	10	5%	1/4W	F
R108	1-249-393-11	CARBON	10	5%	1/4W	F
R109	1-249-405-11	CARBON	100	5%	1/4W	
R110	1-249-393-11	CARBON	10	5%	1/4W	
R111	1-249-417-11	CARBON	1K	5%	1/4W	
R112	1-249-393-11	CARBON	10	5%	1/4W	F
R113	1-249-393-11	CARBON	10	5%	1/4W	F
R114	1-249-405-11	CARBON	100	5%	1/4W	
R115	1-249-393-11	CARBON	10	5%	1/4W	
R201	1-215-425-00	METAL	1.5K	1%	1/6W	
R202	1-215-445-00	METAL	10K	1%	1/6W	
R203	1-215-421-00	METAL	1K	1%	1/6W	
R204	1-215-417-00	METAL	680	1%	1/6W	
R205	1-215-435-00	METAL	3.9K	1%	1/6W	
R206	1-215-421-00	METAL	1K	1%	1/6W	
R207	1-215-421-00	METAL	1K	1%	1/6W	
R208	1-214-814-11	METAL	8.2	1%	1/2W	
R209	1-214-814-11	METAL	8.2	1%	1/2W	
R210	1-214-814-11	METAL	8.2	1%	1/2W	
R211	1-214-814-11	METAL	8.2	1%	1/2W	
R212	1-214-814-11	METAL	8.2	1%	1/2W	
R213	1-214-814-11	METAL	8.2	1%	1/2W	
R214	1-249-435-11	CARBON	33K	5%	1/4W	
R215	1-249-426-11	CARBON	5.6K	5%	1/4W	
R216	1-249-415-11	CARBON	680	5%	1/4W	F
R217	1-249-427-11	CARBON	6.8K	5%	1/4W	
R218	1-249-407-11	CARBON	150	5%	1/4W	
R219	1-249-403-11	CARBON	68	5%	1/4W	F
R221	1-216-369-00	METAL OXIDE	1	5%	2W	F
R222	1-216-369-00	METAL OXIDE	1	5%	2W	F
R223	1-215-888-00	METAL OXIDE	220	5%	2W	F
R224	1-215-425-00	METAL	1.5K	1%	1/6W	
R225	1-215-445-00	METAL	10K	1%	1/6W	
R226	1-215-421-00	METAL	1K	1%	1/6W	
R227	1-215-417-00	METAL	680	1%	1/6W	
R228	1-215-435-00	METAL	3.9K	1%	1/6W	
R229	1-215-421-00	METAL	1K	1%	1/6W	
R230	1-215-421-00	METAL	1K	1%	1/6W	
R231	1-214-814-11	METAL	8.2	1%	1/2W	
R232	1-214-814-11	METAL	8.2	1%	1/2W	
R233	1-214-814-11	METAL	8.2	1%	1/2W	
R234	1-214-814-11	METAL	8.2	1%	1/2W	
R235	1-214-814-11	METAL	8.2	1%	1/2W	
R236	1-214-814-11	METAL	8.2	1%	1/2W	
R237	1-249-435-11	CARBON	33K	5%	1/4W	
R238	1-249-426-11	CARBON	5.6K	5%	1/4W	
R239	1-249-415-11	CARBON	680	5%	1/4W	F
R240	1-249-427-11	CARBON	6.8K	5%	1/4W	
R241	1-249-407-11	CARBON	150	5%	1/4W	
R242	1-249-403-11	CARBON	68	5%	1/4W	F
R244	1-216-369-00	METAL OXIDE	1	5%	2W	F
R245	1-216-369-00	METAL OXIDE	1	5%	2W	F
R246	1-215-888-00	METAL OXIDE	220	5%	2W	F
R247	1-215-425-00	METAL	1.5K	1%	1/6W	
R248	1-215-445-00	METAL	10K	1%	1/6W	
R249	1-215-421-00	METAL	1K	1%	1/6W	
R250	1-215-417-00	METAL	680	1%	1/6W	
R251	1-215-435-00	METAL	3.9K	1%	1/6W	
R252	1-215-421-00	METAL	1K	1%	1/6W	
R253	1-215-421-00	METAL	1K	1%	1/6W	
R254	1-214-814-11	METAL	8.2	1%	1/2W	
R255	1-214-814-11	METAL	8.2	1%	1/2W	
R256	1-214-814-11	METAL	8.2	1%	1/2W	
R257	1-214-814-11	METAL	8.2	1%	1/2W	
R258	1-214-814-11	METAL	8.2	1%	1/2W	
R259	1-214-814-11	METAL	8.2	1%	1/2W	
R260	1-249-435-11	CARBON	33K	5%	1/4W	
R261	1-249-426-11	CARBON	5.6K	5%	1/4W	
R262	1-249-415-11	CARBON	680	5%	1/4W	F
R263	1-249-427-11	CARBON	6.8K	5%	1/4W	
R264	1-249-407-11	CARBON	150	5%	1/4W	
R265	1-249-403-11	CARBON	68	5%	1/4W	F
R267	1-216-369-00	METAL OXIDE	1	5%	2W	F
R268	1-216-369-00	METAL OXIDE	1	5%	2W	F
R269	1-215-888-00	METAL OXIDE	220	5%	2W	F
R270	1-249-405-11	CARBON	100	5%	1/4W	
R271	1-249-405-11	CARBON	100	5%	1/4W	
R272	1-249-405-11	CARBON	100	5%	1/4W	
R273	1-249-405-11	CARBON	100	5%	1/4W	
R274	1-249-405-11	CARBON	100	5%	1/4W	
R275	1-249-405-11	CARBON	100	5%	1/4W	
R301	1-215-427-00	METAL	1.8K	1%	1/6W	
R302	1-215-445-00	METAL	10K	1%	1/6W	
R303	1-215-421-00	METAL	1K	1%	1/6W	
R304	1-215-411-00	METAL	390	1%	1/6W	
R305	1-215-435-00	METAL	3.9K	1%	1/6W	
R306	1-215-421-00	METAL	1K	1%	1/6W	
R307	1-215-421-00	METAL	1K	1%	1/6W	
R308	1-214-814-11	METAL	8.2	1%	1/2W	
R309	1-214-814-11	METAL	8.2	1%	1/2W	
R310	1-214-814-11	METAL	8.2	1%	1/2W	
R311	1-214-814-11	METAL	8.2	1%	1/2W	
R312	1-214-814-11	METAL	8.2	1%	1/2W	
R313	1-214-814-11	METAL	8.2	1%	1/2W	
R314	1-249-435-11	CARBON	33K	5%	1/4W	
R315	1-249-426-11	CARBON	5.6K	5%	1/4W	
R316	1-249-415-11	CARBON	680	5%	1/4W	F
R317	1-249-427-11	CARBON	6.8K	5%	1/4W	
R318	1-249-407-11	CARBON	150	5%	1/4W	
R319	1-249-403-11	CARBON	68	5%	1/4W	F
R321	1-216-369-00	METAL OXIDE	1	5%	2W	F
R322	1-216-369-00	METAL OXIDE	1	5%	2W	F
R323	1-215-888-00	METAL OXIDE	220	5%	2W	F
R324	1-215-427-00	METAL	1.8K	1%	1/6W	
R325	1-215-445-00	METAL	10K	1%	1/6W	
R326	1-215-421-00	METAL	1K	1%	1/6W	
R327	1-215-411-00	METAL	390	1%	1/6W	
R328	1-215-435-00	METAL	3.9K	1%	1/6W	
R329	1-215-421-00	METAL	1K	1%	1/6W	
R330	1-215-421-00	METAL	1K	1%	1/6W	
R331	1-214-814-11	METAL	8.2	1%	1/2W	
R332	1-214-814-11	METAL	8.2	1%	1/2W	
R333	1-214-814-11	METAL	8.2	1%	1/2W	
R334	1-214-814-11	METAL	8.2	1%	1/2W	
R335	1-214-814-11	METAL	8.2	1%	1/2W	
R336	1-214-814-11	METAL	8.2	1%	1/2W	
R337	1-249-435-11	CARBON	33K	5%	1/4W	
R338	1-249-426-11	CARBON	5.6K	5%	1/4W	

DC **E**

REF.NO.	PART NO.	DESCRIPTION				REMARK
R339	1-249-415-11	CARBON	680	5%	1/4W	F
R340	1-249-427-11	CARBON	6.8K	5%	1/4W	
R341	1-249-407-11	CARBON	150	5%	1/4W	
R342	1-249-403-11	CARBON	68	5%	1/4W	F
R344	1-216-369-00	METAL OXIDE	1	5%	2W	F
R345	1-216-369-00	METAL OXIDE	1	5%	2W	F
R346	1-215-888-00	METAL OXIDE	220	5%	2W	F
R347	1-215-427-00	METAL	1.8K	1%	1/6W	
R348	1-215-445-00	METAL	10K	1%	1/6W	
R349	1-215-421-00	METAL	1K	1%	1/6W	
R350	1-215-411-00	METAL	390	1%	1/6W	
R351	1-215-435-00	METAL	3.9K	1%	1/6W	
R352	1-215-421-00	METAL	1K	1%	1/6W	
R353	1-215-421-00	METAL	1K	1%	1/6W	
R354	1-214-814-11	METAL	8.2	1%	1/2W	
R355	1-214-814-11	METAL	8.2	1%	1/2W	
R356	1-214-814-11	METAL	8.2	1%	1/2W	
R357	1-214-814-11	METAL	8.2	1%	1/2W	
R358	1-214-814-11	METAL	8.2	1%	1/2W	
R359	1-214-814-11	METAL	8.2	1%	1/2W	
R360	1-249-435-11	CARBON	33K	5%	1/4W	
R361	1-249-426-11	CARBON	5.6K	5%	1/4W	
R362	1-249-415-11	CARBON	680	5%	1/4W	F
R363	1-249-427-11	CARBON	6.8K	5%	1/4W	
R364	1-249-404-00	CARBON	82	5%	1/4W	
R365	1-249-400-11	CARBON	39	5%	1/4W	F
R367	1-216-369-00	METAL OXIDE	1	5%	2W	F
R368	1-216-369-00	METAL OXIDE	1	5%	2W	F
R369	1-215-888-00	METAL OXIDE	220	5%	2W	F
R370	1-249-405-11	CARBON	100	5%	1/4W	
R371	1-249-405-11	CARBON	100	5%	1/4W	
R372	1-249-405-11	CARBON	100	5%	1/4W	
R373	1-249-405-11	CARBON	100	5%	1/4W	
R374	1-249-405-11	CARBON	100	5%	1/4W	
R375	1-249-405-11	CARBON	100	5%	1/4W	

****

*A-1345-923-A	E BOARD, COMPLETE *****************
*1-508-742-00	PIN, CONNECTOR 3P
*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P
*1-564-509-11	PLUG, CONNECTOR 6P
*1-564-514-11	PLUG, CONNECTOR 11P
*1-564-516-11	PLUG, CONNECTOR 13P
*1-568-536-11	PLUG (MINIATURE DY) 6P
*4-341-751-01	EYELET
*4-341-752-01	EYELET

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1	1-126-899-11	ELECT	3900MF	20%	16V
C2	1-126-899-11	ELECT	3900MF	20%	16V
C3	1-126-899-11	ELECT	3900MF	20%	16V
C4	1-102-824-00	CERAMIC	470PF	5%	50V
C5	1-136-153-00	FILM	0.01MF	5%	50V
C6	1-102-824-00	CERAMIC	470PF	5%	50V
C7	1-102-824-00	CERAMIC	470PF	5%	50V
C8	1-136-153-00	FILM	0.01MF	5%	50V
C9	1-102-824-00	CERAMIC	470PF	5%	50V
C10	1-136-153-00	FILM	0.01MF	5%	50V
C11	1-102-824-00	CERAMIC	470PF	5%	50V
C12	1-102-824-00	CERAMIC	470PF	5%	50V
C13	1-130-908-00	FILM	0.0039MF	3%	1.6KV
C14	1-130-908-00	FILM	0.0039MF	3%	1.6KV
C15	1-124-585-11	ELECT	3300MF	20%	10V
C16	1-124-585-11	ELECT	3300MF	20%	10V
C17	1-123-935-00	ELECT	33MF	20%	160V
C18	1-129-996-00	FILM	0.22MF	20%	630V
C19	1-124-585-11	ELECT	3300MF	20%	10V
C21	1-136-945-11	FILM	8.2MF	5%	200V
C22	1-136-945-11	FILM	8.2MF	5%	200V
C23	1-136-945-11	FILM	8.2MF	5%	200V
C24	1-136-945-11	FILM	8.2MF	5%	200V
C30	1-136-613-11	FILM	0.0068MF	3%	2KV
C31	1-106-391-12	MYLAR	0.1MF	10%	200V
C32	1-123-875-11	ELECT	10MF	20%	50V
C35	1-102-244-00	CERAMIC	220PF	10%	500V
C36	1-162-115-00	CERAMIC	330PF	15%	1.5KV
C37	1-162-115-00	CERAMIC	330PF	15%	1.5KV
C38	1-162-115-00	CERAMIC	330PF	15%	1.5KV
C101	1-102-973-00	CERAMIC	100PF	5%	50V
C102	1-136-159-00	FILM	0.033MF	5%	50V
C104	1-136-165-00	FILM	0.1MF	5%	50V
C105	1-136-165-00	FILM	0.1MF	5%	50V
C106	1-126-101-11	ELECT	100MF	20%	16V
C108	1-124-360-00	ELECT	1000MF	20%	16V
C109	1-124-791-11	ELECT	1MF	20%	50V
C110	1-126-101-11	ELECT	100MF	20%	16V
C111	1-126-101-11	ELECT	100MF	20%	16V
C112	1-126-101-11	ELECT	100MF	20%	16V
C113	1-126-233-11	ELECT	22MF	20%	50V
C114	1-124-499-11	ELECT	1MF	20%	50V
C115	1-136-153-00	FILM	0.01MF	5%	50V
C116	1-130-475-00	MYLAR	0.0022MF	5%	50V
C117	1-102-973-00	CERAMIC	100PF	5%	50V
C118	1-136-165-00	FILM	0.1MF	5%	50V
C119	1-126-101-11	ELECT	100MF	20%	16V
C120	1-123-939-00	ELECT	10MF	20%	200V
C121	1-136-159-00	FILM	0.033MF	5%	50V
C122	1-123-024-21	ELECT	33MF		160V
C123	1-123-024-21	ELECT	33MF		160V
C124	1-125-499-11	ELECT(BLOCK)	220MF	20%	200V
C125	1-136-153-00	FILM	0.01MF	5%	50V
C126	1-130-471-00	MYLAR	0.001MF	5%	50V
C127	1-124-360-00	ELECT	1000MF	20%	16V
C128	1-123-939-00	ELECT	10MF	20%	200V
C129	1-123-939-00	ELECT	10MF	20%	200V
C130	1-124-120-11	ELECT	220MF	20%	16V
C131	1-124-120-11	ELECT	220MF	20%	16V
C132	1-123-024-21	ELECT	33MF		160V
C133	1-124-499-11	ELECT	1MF	20%	50V
C134	1-124-478-11	ELECT	100MF	20%	25V
C135	1-124-478-11	ELECT	100MF	20%	25V
C136	1-126-233-11	ELECT	22MF	20%	50V
C137	1-102-973-00	CERAMIC	100PF	5%	50V
C138	1-123-875-11	ELECT	10MF	20%	50V
C139	1-124-360-00	ELECT	1000MF	20%	16V
C140	1-136-169-00	FILM	0.22MF	5%	50V
C141	1-130-471-00	MYLAR	0.001MF	5%	50V
C142	1-125-499-11	ELECT(BLOCK)	220MF	20%	200V
C143	1-102-824-00	CERAMIC	470PF	5%	50V
C144	1-136-165-00	FILM	0.1MF	5%	50V
C145	1-136-153-00	FILM	0.01MF	5%	50V
C146	1-136-173-00	FILM	0.47MF	5%	50V
C147	1-136-173-00	FILM	0.47MF	5%	50V
C148	1-126-101-11	ELECT	100MF	20%	16V
C149	1-123-875-11	ELECT	10MF	20%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C150	1-130-471-00	MYLAR	0.001MF	5%	50V
C151	1-124-791-11	ELECT	1MF	20%	50V
C152	1-136-165-00	FILM	0.1MF	5%	50V
C153	1-124-963-11	ELECT	33MF	20%	16V
C154	1-136-165-00	FILM	0.1MF	5%	50V
C155	1-136-153-00	FILM	0.01MF	5%	50V
C156	1-136-165-00	FILM	0.1MF	5%	50V
C157	1-136-157-00	FILM	0.022MF	5%	50V
C158	1-124-046-00	ELECT	10MF		160V
C159	1-136-111-00	FILM	1MF	5%	200V
C160	1-136-111-00	FILM	1MF	5%	200V
C161	1-124-791-11	ELECT	1MF	20%	50V
C162	1-136-111-00	FILM	1MF	5%	200V
C163	1-123-875-11	ELECT	10MF	20%	50V
C164	1-123-875-11	ELECT	10MF	20%	50V
C165	1-123-875-11	ELECT	10MF	20%	50V
C166	1-123-875-11	ELECT	10MF	20%	50V
C167	1-102-824-00	CERAMIC	470PF	5%	50V
C168	1-136-153-00	FILM	0.01MF	5%	50V
C169	1-124-768-11	ELECT	4.7MF	20%	50V
C170	1-124-963-11	ELECT	33MF	20%	16V
C171	1-136-165-00	FILM	0.1MF	5%	50V
C172	1-123-875-11	ELECT	10MF	20%	50V
C173	1-124-963-11	ELECT	33MF	20%	16V
C174	1-124-963-11	ELECT	33MF	20%	16V
C175	1-130-706-00	FILM	0.008MF	3%	1.6KV
C176	1-106-391-12	MYLAR	0.1MF	10%	200V
C178	1-101-004-00	CERAMIC	0.01MF		50V

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1	8-719-970-89	DIODE, DD50R	
D7	8-719-908-20	DIODE ERC88-009	
D8	8-719-908-20	DIODE ERC88-009	
D9	8-719-971-20	DIODE ERC38-06	
D10	8-719-971-20	DIODE ERC38-06	
D11	8-719-901-19	DIODE V11N	
D12	8-719-971-20	DIODE ERC38-06	
D13	8-719-305-15	DIODE GH-3F	
D14	8-719-900-95	DIODE V09G	
D15	8-719-933-02	DIODE ERD33-02	
D103	8-719-911-19	DIODE 1SS119	
D104	8-719-911-19	DIODE 1SS119	
D105	8-719-938-28	DIODE ERA22-06	
D106	8-719-938-28	DIODE ERA22-06	
D107	8-719-911-19	DIODE 1SS119	
D108	8-719-911-19	DIODE 1SS119	
D109	8-719-938-28	DIODE ERA22-06	
D110	8-719-911-19	DIODE 1SS119	
D111	8-719-911-19	DIODE 1SS119	
D112	8-719-900-26	DIODE ERD29-08J	
D113	8-719-911-19	DIODE 1SS119	
D114	8-719-110-53	DIODE RD20ES-B2	
D115	8-719-110-53	DIODE RD20ES-B2	
D116	8-719-920-67	DIODE ERC91-02	
D117	8-719-911-19	DIODE 1SS119	
D118	8-719-938-28	DIODE ERA22-06	
D119	8-719-911-19	DIODE 1SS119	
D120	8-719-911-19	DIODE 1SS119	
D121	8-719-911-19	DIODE 1SS119	
D122	8-719-911-19	DIODE 1SS119	
D123	8-719-911-19	DIODE 1SS119	
D124	8-719-938-28	DIODE ERA22-06	
D125	8-719-911-19	DIODE 1SS119	
D126	8-719-110-88	DIODE RD39ES-B2	
D127	8-719-110-41	DIODE RD15ES-B2	
D128	8-719-110-41	DIODE RD15ES-B2	
D129	8-719-110-41	DIODE RD15ES-B2	
D130	8-719-110-41	DIODE RD15ES-B2	
D131	8-719-911-19	DIODE 1SS119	
D132	8-719-911-19	DIODE 1SS119	
D133	8-719-911-19	DIODE 1SS119	
D134	8-719-300-80	DIODE RU-1C	
D135	8-719-300-80	DIODE RU-1C	
D136	8-719-300-80	DIODE RU-1C	
D137	8-719-300-80	DIODE RU-1C	
D138	8-719-911-19	DIODE 1SS119	
D139	8-719-911-19	DIODE 1SS119	
D140	8-719-911-19	DIODE 1SS119	
D141	8-719-911-19	DIODE 1SS119	
D142	8-719-911-19	DIODE 1SS119	
D143	8-719-911-19	DIODE 1SS119	
D144	8-719-901-19	DIODE V11N	
D145	8-719-911-19	DIODE 1SS119	
D146	8-719-938-28	DIODE ERA22-06	
D147	8-719-110-08	DIODE RD8.2ES-B2	
D148	8-719-110-41	DIODE RD15ES-B2	

<CONNECTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
E12	*1-564-506-11	PLUG, CONNECTOR 3P	

<FERRITE BEAD INDUCTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
FB1	1-410-396-41	FERRITE BEAD INDUCTOR	
FB2	1-410-396-41	FERRITE BEAD INDUCTOR	
FB3	1-410-396-41	FERRITE BEAD INDUCTOR	
FB4	1-410-396-41	FERRITE BEAD INDUCTOR	
FB5	1-410-396-41	FERRITE BEAD INDUCTOR	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC1	8-759-945-58	IC RC4558PC	
IC2	8-759-945-58	IC RC4558PC	
IC3	8-759-945-58	IC RC4558PC	
IC101	8-759-345-38	IC HD14538BP	
IC102	8-759-109-82	IC UPC814C	
IC103	8-759-109-82	IC UPC814C	
IC104	8-759-945-58	IC RC4558PC	
IC105	8-759-945-58	IC RC4558PC	
IC106	8-759-945-58	IC RC4558PC	
IC107	8-759-014-95	IC MC1495L	
IC108	8-759-945-58	IC RC4558PC	
IC109	8-759-982-13	IC RC7812FA	
IC110	8-759-929-65	IC UPC7912H	
IC111	8-759-100-75	IC UPC1394C	
IC112	8-759-945-58	IC RC4558PC	
IC113	8-759-103-93	IC UPC393C	
IC114	8-759-103-93	IC UPC393C	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L100	1-459-155-00	COIL (WITH CORE) 45UH	
L102	1-459-155-00	COIL (WITH CORE) 45UH	
L103	1-459-155-00	COIL (WITH CORE) 45UH	
L104	1-459-155-00	COIL (WITH CORE) 45UH	
L106	1-459-483-00	COIL (WITH CORE)	

E

REF.NO.	PART NO.	DESCRIPTION		REMARK
L107	1-410-093-11	INDUCTOR	33MMH	
L108	1-410-093-11	INDUCTOR	33MMH	
L109	1-459-104-00	COIL, DUST CORE		
L110	1-459-104-00	COIL, DUST CORE		
L111	1-410-093-11	INDUCTOR	33MMH	
L112	1-460-022-11	COIL, CHOKE 1.3MMH		
L113	1-410-680-31	INDUCTOR	330UH	
L114	1-410-686-11	INDUCTOR	1MMH	
L115	1-407-500-00	INDUCTOR	4.7MMH	
LV1	1-460-019-11	COIL, HORIZONTAL ADJUSTMENT		
LV2	1-460-019-11	COIL, HORIZONTAL ADJUSTMENT		
LV3	1-460-019-11	COIL, HORIZONTAL ADJUSTMENT		

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-142-69	TRANSISTOR 2SK817	
Q2	8-729-142-68	TRANSISTOR 2SJ143	
Q3	8-729-142-69	TRANSISTOR 2SK817	
Q4	8-729-142-68	TRANSISTOR 2SJ143	
Q5	8-729-142-69	TRANSISTOR 2SK817	
Q6	8-729-142-68	TRANSISTOR 2SJ143	
Q7	8-729-822-01	TRANSISTOR 2SC3998	
Q21	8-729-801-75	TRANSISTOR 2SD1403	
Q22	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q101	8-729-105-74	TRANSISTOR 2SK523-M1	
Q102	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q103	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q104	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q106	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q107	8-729-140-96	TRANSISTOR 2SD774-34	
Q108	8-729-140-97	TRANSISTOR 2SB734-34	
Q109	8-729-105-74	TRANSISTOR 2SK523-M1	
Q110	8-729-143-42	TRANSISTOR 2SK929	
Q111	8-729-143-42	TRANSISTOR 2SK929	
Q112	8-729-142-68	TRANSISTOR 2SJ143	
Q113	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q115	8-729-900-80	TRANSISTOR DTC114ES	
Q116	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q117	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q118	8-729-105-74	TRANSISTOR 2SK523-M1	
Q119	8-729-900-80	TRANSISTOR DTC114ES	
Q120	8-729-802-71	TRANSISTOR 2SA1407	
Q121	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q122	8-729-900-80	TRANSISTOR DTC114ES	
Q127	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q128	8-729-900-80	TRANSISTOR DTC114ES	
Q129	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q130	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q131	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q132	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q133	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q134	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q135	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q136	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q137	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q138	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q139	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q140	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q141	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q142	8-729-143-42	TRANSISTOR 2SK929	
Q143	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q144	8-729-905-86	TRANSISTOR 2SC4054N	
Q145	8-729-402-03	TRANSISTOR 2SK755	
Q146	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q147	8-729-905-86	TRANSISTOR 2SC4054N	
Q148	8-729-802-71	TRANSISTOR 2SA1407	
Q149	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q150	8-729-402-03	TRANSISTOR 2SK755	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-393-00	METAL OXIDE	2.2	5%	3W	F
R2	1-216-393-00	METAL OXIDE	2.2	5%	3W	F
R3	1-216-393-00	METAL OXIDE	2.2	5%	3W	F
R4	1-249-417-11	CARBON	1K	5%	1/4W	
R5	1-215-445-00	METAL	10K	1%	1/6W	
R7	1-215-445-00	METAL	10K	1%	1/6W	
R8	1-215-445-00	METAL	10K	1%	1/6W	
R9	1-215-445-00	METAL	10K	1%	1/6W	
R10	1-249-417-11	CARBON	1K	5%	1/4W	
R11	1-214-824-11	METAL	22	1%	1/2W	
R12	1-214-824-11	METAL	22	1%	1/2W	
R13	1-214-824-11	METAL	22	1%	1/2W	
R14	1-249-417-11	CARBON	1K	5%	1/4W	
R15	1-215-445-00	METAL	10K	1%	1/6W	
R17	1-215-445-00	METAL	10K	1%	1/6W	
R18	1-215-445-00	METAL	10K	1%	1/6W	
R19	1-215-445-00	METAL	10K	1%	1/6W	
R20	1-249-417-11	CARBON	1K	5%	1/4W	
R21	1-214-832-00	METAL	47	1%	1/2W	
R22	1-214-832-00	METAL	47	1%	1/2W	
R23	1-214-832-00	METAL	47	1%	1/2W	
R24	1-249-417-11	CARBON	1K	5%	1/4W	
R25	1-215-445-00	METAL	10K	1%	1/6W	
R27	1-215-445-00	METAL	10K	1%	1/6W	
R28	1-215-445-00	METAL	10K	1%	1/6W	
R29	1-215-445-00	METAL	10K	1%	1/6W	
R30	1-249-417-11	CARBON	1K	5%	1/4W	
R31	1-214-824-11	METAL	22	1%	1/2W	
R32	1-214-824-11	METAL	22	1%	1/2W	
R33	1-214-824-11	METAL	22	1%	1/2W	
R34	1-214-824-11	METAL	22	1%	1/2W	
R35	1-214-824-11	METAL	22	1%	1/2W	
R36	1-214-824-11	METAL	22	1%	1/2W	
R37	1-214-832-00	METAL	47	1%	1/2W	
R38	1-214-832-00	METAL	47	1%	1/2W	
R39	1-214-832-00	METAL	47	1%	1/2W	
R40	1-214-824-11	METAL	22	1%	1/2W	
R41	1-214-824-11	METAL	22	1%	1/2W	
R42	1-214-824-11	METAL	22	1%	1/2W	
R51	1-249-479-11	CARBON	2.7	5%	1/2W	F
R52	1-249-479-11	CARBON	2.7	5%	1/2W	F
R53	1-249-479-11	CARBON	2.7	5%	1/2W	F
R54	1-215-857-11	METAL OXIDE	10	5%	1W	F
R55	1-215-924-00	METAL OXIDE	15K	5%	3W	F
R56	1-247-716-11	CARBON	1.8K	5%	1/4W	F
R57	1-249-405-11	CARBON	100	5%	1/4W	
R58	1-249-405-11	CARBON	100	5%	1/4W	
R59	1-249-405-11	CARBON	100	5%	1/4W	
R60	1-249-405-11	CARBON	100	5%	1/4W	
R61	1-249-405-11	CARBON	100	5%	1/4W	
R62	1-249-405-11	CARBON	100	5%	1/4W	
R63	1-247-700-11	CARBON	100	5%	1/4W	F
R64	1-247-700-11	CARBON	100	5%	1/4W	F
R65	1-247-700-11	CARBON	100	5%	1/4W	F
R66	1-215-905-11	METAL OXIDE	10	5%	3W	F
R67	1-216-397-11	METAL OXIDE	4.7	5%	3W	F

REF.NO.	PART NO.	DESCRIPTION				REMARK
R68	1-216-397-11	METAL OXIDE	4.7	5%	3W	F
R69	1-216-397-11	METAL OXIDE	4.7	5%	3W	F
R101	1-215-457-00	METAL	33K	1%	1/6W	
R102	1-249-429-11	CARBON	10K	5%	1/4W	
R103	1-249-429-11	CARBON	10K	5%	1/4W	
R105	1-249-425-11	CARBON	4.7K	5%	1/4W	
R106	1-215-445-00	METAL	10K	1%	1/6W	
R107	1-249-429-11	CARBON	10K	5%	1/4W	
R109	1-249-429-11	CARBON	10K	5%	1/4W	
R110	1-249-417-11	CARBON	1K	5%	1/4W	
R111	1-249-429-11	CARBON	10K	5%	1/4W	
R112	1-249-425-11	CARBON	4.7K	5%	1/4W	
R113	1-249-405-11	CARBON	100	5%	1/4W	
R114	1-249-417-11	CARBON	1K	5%	1/4W	
R115	1-215-445-00	METAL	10K	1%	1/6W	
R116	1-215-445-00	METAL	10K	1%	1/6W	
R117	1-215-433-00	METAL	3.3K	1%	1/6W	
R118	1-249-423-11	CARBON	3.3K	5%	1/4W	
R119	1-215-457-00	METAL	33K	1%	1/6W	
R120	1-215-457-00	METAL	33K	1%	1/6W	
R121	1-215-445-00	METAL	10K	1%	1/6W	
R122	1-249-425-11	CARBON	4.7K	5%	1/4W	
R123	1-215-445-00	METAL	10K	1%	1/6W	
R124	1-215-445-00	METAL	10K	1%	1/6W	
R125	1-215-457-00	METAL	33K	1%	1/6W	
R126	1-215-457-00	METAL	33K	1%	1/6W	
R127	1-215-447-00	METAL	12K	1%	1/6W	
R128	1-215-445-00	METAL	10K	1%	1/6W	
R129	1-215-447-00	METAL	12K	1%	1/6W	
R130	1-249-425-11	CARBON	4.7K	5%	1/4W	
R131	1-215-445-00	METAL	10K	1%	1/6W	
R132	1-215-449-00	METAL	15K	1%	1/6W	
R133	1-249-425-11	CARBON	4.7K	5%	1/4W	
R134	1-215-453-00	METAL	22K	1%	1/6W	
R135	1-249-429-11	CARBON	10K	5%	1/4W	
R136	1-249-423-11	CARBON	3.3K	5%	1/4W	
R137	1-249-423-11	CARBON	3.3K	5%	1/4W	
R138	1-249-423-11	CARBON	3.3K	5%	1/4W	
R139	1-249-425-11	CARBON	4.7K	5%	1/4W	
R140	1-249-417-11	CARBON	1K	5%	1/4W	
R141	1-249-421-11	CARBON	2.2K	5%	1/4W	
R142	1-249-421-11	CARBON	2.2K	5%	1/4W	
R143	1-249-417-11	CARBON	1K	5%	1/4W	
R144	1-249-421-11	CARBON	2.2K	5%	1/4W	
R145	1-249-423-11	CARBON	3.3K	5%	1/4W	
R146	1-249-437-11	CARBON	47K	5%	1/4W	
R147	1-249-421-11	CARBON	2.2K	5%	1/4W	
R148	1-249-437-11	CARBON	47K	5%	1/4W	
R149	1-249-417-11	CARBON	1K	5%	1/4W	
R150	1-215-461-00	METAL	47K	1%	1/6W	
R151	1-249-425-11	CARBON	4.7K	5%	1/4W	
R152	1-215-445-00	METAL	10K	1%	1/6W	
R153	1-215-445-00	METAL	10K	1%	1/6W	
R154	1-247-895-00	CARBON	470K	5%	1/4W	
R155	1-249-420-11	CARBON	1.8K	5%	1/4W	
R156	1-249-437-11	CARBON	47K	5%	1/4W	
R157	1-249-413-11	CARBON	470	5%	1/4W	
R158	1-249-405-11	CARBON	100	5%	1/4W	
R159	1-249-405-11	CARBON	100	5%	1/4W	
R160	1-249-417-11	CARBON	1K	5%	1/4W	
R161	1-215-467-00	METAL	82K	1%	1/6W	
R162	1-215-866-11	METAL OXIDE	330	5%	1W	F
R163	1-215-461-00	METAL	47K	1%	1/6W	
R164	1-249-421-11	CARBON	2.2K	5%	1/4W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R165	1-215-445-00	METAL	10K	1%	1/6W	
R166	1-249-429-11	CARBON	10K	5%	1/4W	
R167	1-249-437-11	CARBON	47K	5%	1/4W	
R168	1-249-429-11	CARBON	10K	5%	1/4W	
R169	1-247-725-11	CARBON	10K	5%	1/4W	F
R170	1-249-425-11	CARBON	4.7K	5%	1/4W	
R171	1-249-417-11	CARBON	1K	5%	1/4W	
R172	1-249-417-11	CARBON	1K	5%	1/4W	
R173	1-216-389-11	METAL OXIDE	1	5%	3W	F
R174	1-216-388-11	METAL OXIDE	0.82	5%	3W	F
R176	1-247-713-11	CARBON	1K	5%	1/4W	F
R177	1-215-445-00	METAL	10K	1%	1/6W	
R178	1-249-417-11	CARBON	1K	5%	1/4W	
R179	1-249-429-11	CARBON	10K	5%	1/4W	
R180	1-215-433-00	METAL	3.3K	1%	1/6W	
R181	1-249-441-11	CARBON	100K	5%	1/4W	
R182	1-249-421-11	CARBON	2.2K	5%	1/4W	
R183	1-249-405-11	CARBON	100	5%	1/4W	
R184	1-249-425-11	CARBON	4.7K	5%	1/4W	
R185	1-249-417-11	CARBON	1K	5%	1/4W	
R186	1-249-437-11	CARBON	47K	5%	1/4W	
R187	1-215-461-00	METAL	47K	1%	1/6W	
R188	1-249-431-11	CARBON	15K	5%	1/4W	
R189	1-249-429-11	CARBON	10K	5%	1/4W	
R190	1-215-883-11	METAL OXIDE	33	5%	2W	F
R191	1-249-423-11	CARBON	3.3K	5%	1/4W	
R192	1-249-433-11	CARBON	22K	5%	1/4W	
R193	1-247-903-00	CARBON	1M	5%	1/4W	
R194	1-249-423-11	CARBON	3.3K	5%	1/4W	
R195	1-249-423-11	CARBON	3.3K	5%	1/4W	
R196	1-247-883-00	CARBON	150K	5%	1/4W	
R197	1-249-405-11	CARBON	100	5%	1/4W	
R198	1-215-447-00	METAL	12K	1%	1/6W	
R199	1-249-423-11	CARBON	3.3K	5%	1/4W	
R201	1-249-417-11	CARBON	1K	5%	1/4W	
R202	1-249-417-11	CARBON	1K	5%	1/4W	
R203	1-249-453-11	CARBON	3.3	5%	1/4W	F
R204	1-249-429-11	CARBON	10K	5%	1/4W	
R205	1-249-427-11	CARBON	6.8K	5%	1/4W	
R206	1-249-429-11	CARBON	10K	5%	1/4W	
R207	1-249-441-11	CARBON	100K	5%	1/4W	
R208	1-216-341-11	METAL OXIDE	0.22	5%	1W	F
R209	1-249-417-11	CARBON	1K	5%	1/4W	
R210	1-215-451-00	METAL	18K	1%	1/6W	
R212	1-249-431-11	CARBON	15K	5%	1/4W	
R213	1-249-429-11	CARBON	10K	5%	1/4W	
R214	1-215-883-11	METAL OXIDE	33	5%	2W	F
R215	1-249-417-11	CARBON	1K	5%	1/4W	
R216	1-249-423-11	CARBON	3.3K	5%	1/4W	
R217	1-249-399-11	CARBON	33	5%	1/4W	
R218	1-249-417-11	CARBON	1K	5%	1/4W	F
R219	1-215-445-00	METAL	10K	1%	1/6W	
R220	1-215-445-00	METAL	10K	1%	1/6W	
R221	1-249-476-11	CARBON	1.5	5%	1/2W	F
R222	1-249-441-11	CARBON	100K	5%	1/4W	
R223	1-249-429-11	CARBON	10K	5%	1/4W	
R224	1-249-429-11	CARBON	10K	5%	1/4W	
R225	1-249-421-11	CARBON	2.2K	5%	1/4W	
R226	1-215-445-00	METAL	10K	1%	1/6W	
R227	1-249-429-11	CARBON	10K	5%	1/4W	
R228	1-249-429-11	CARBON	10K	5%	1/4W	
R229	1-249-429-11	CARBON	10K	5%	1/4W	
R230	1-249-443-11	CARBON	0.47	5%	1/4W	F

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
R231	1-249-443-11	CARBON	0.47	5%	1/4W	F
R232	1-249-437-11	CARBON	47K	5%	1/4W	
R233	1-249-417-11	CARBON	1K	5%	1/4W	
R234	1-249-417-11	CARBON	1K	5%	1/4W	
R235	1-249-437-11	CARBON	47K	5%	1/4W	
R236	1-249-437-11	CARBON	47K	5%	1/4W	
R237	1-249-441-11	CARBON	100K	5%	1/4W	
R238	1-249-399-11	CARBON	33	5%	1/4W	
R239	1-249-423-11	CARBON	3.3K	5%	1/4W	
R240	1-249-441-11	CARBON	100K	5%	1/4W	
R241	1-249-437-11	CARBON	47K	5%	1/4W	
R242	1-215-461-00	METAL	47K	1%	1/6W	
R243	1-215-469-00	METAL	100K	1%	1/6W	
R244	1-249-423-11	CARBON	3.3K	5%	1/4W	
R245	1-216-441-00	METAL OXIDE	27K	5%	1W	F
R246	1-215-435-00	METAL	3.9K	1%	1/6W	
R247	1-249-421-11	CARBON	2.2K	5%	1/4W	
R248	1-249-425-11	CARBON	4.7K	5%	1/4W	
R249	1-215-421-00	METAL	1K	1%	1/6W	
R250	1-215-445-00	METAL	10K	1%	1/6W	
R251	1-247-887-00	CARBON	220K	5%	1/4W	
R252	1-249-429-11	CARBON	10K	5%	1/4W	
R254	1-249-405-11	CARBON	100	5%	1/4W	
R255	1-249-417-11	CARBON	1K	5%	1/4W	
R256	1-249-441-11	CARBON	100K	5%	1/4W	
R257	1-249-437-11	CARBON	47K	5%	1/4W	
R258	1-215-435-00	METAL	3.9K	1%	1/6W	
R259	1-215-439-00	METAL	5.6K	1%	1/6W	
R260	1-215-445-00	METAL	10K	1%	1/6W	
R261	1-249-429-11	CARBON	10K	5%	1/4W	
R262	1-249-405-11	CARBON	100	5%	1/4W	
R263	1-215-878-00	METAL OXIDE	33K	5%	1W	F
R264	1-249-429-11	CARBON	10K	5%	1/4W	
R265	1-249-405-11	CARBON	100	5%	1/4W	
R266	1-249-441-11	CARBON	100K	5%	1/4W	
R267	1-215-379-00	METAL	18	1%	1/6W	
R268	1-215-379-00	METAL	18	1%	1/6W	
R269	1-215-421-00	METAL	1K	1%	1/6W	
R270	1-215-421-00	METAL	1K	1%	1/6W	
R271	1-215-924-00	METAL OXIDE	15K	5%	3W	F
R272	1-249-453-11	CARBON	3.3	5%	1/4W	F
R273	1-249-429-11	CARBON	10K	5%	1/4W	
R274	1-249-429-11	CARBON	10K	5%	1/4W	
R275	1-249-429-11	CARBON	10K	5%	1/4W	
R276	1-249-429-11	CARBON	10K	5%	1/4W	
R277	1-249-431-11	CARBON	15K	5%	1/4W	
R278	1-249-429-11	CARBON	10K	5%	1/4W	
R279	1-249-417-11	CARBON	1K	5%	1/4W	
R280	1-215-883-11	METAL OXIDE	33	5%	2W	F
R281	1-249-451-11	CARBON	2.2	5%	1/4W	F
R282	1-249-451-11	CARBON	2.2	5%	1/4W	F
R283	1-249-425-11	CARBON	4.7K	5%	1/4W	
R284	1-215-467-00	METAL	82K	1%	1/6W	
R285	1-215-445-00	METAL	10K	1%	1/6W	
R286	1-215-911-11	METAL OXIDE	100	5%	3W	F
R287	1-202-846-00	SOLID	470K	10%	1/2W	
R288	1-202-846-00	SOLID	470K	10%	1/2W	
R289	1-202-846-00	SOLID	470K	10%	1/2W	
R290	1-202-846-00	SOLID	470K	10%	1/2W	
R291	1-249-421-11	CARBON	2.2K	5%	1/4W	
R292	1-249-421-11	CARBON	2.2K	5%	1/4W	
R293	1-249-437-11	CARBON	47K	5%	1/4W	
R294	1-249-437-11	CARBON	47K	5%	1/4W	
R295	1-249-453-11	CARBON	3.3	5%	1/4W	F

REF.NO.	PART NO.	DESCRIPTION				REMARK
R296	1-249-429-11	CARBON	10K	5%	1/4W	

<VARIABLE RESISTOR>

RV104	1-228-997-00	RES, ADJ, CARBON 100K

<TRANSFORMER>

T2	⚠.1-439-479-11	TRANSFORMER, LINE OUTPUT
T3	1-437-078-00	TRANSFORMER, HORIZONTAL DRIVE
T102	1-439-480-11	TRANSFORMER, HORIZONTAL OUTPUT
T103	1-437-144-11	TRANSFORMER, FERRITE (HDT)
T104	1-437-144-11	TRANSFORMER, FERRITE (HDT)
T105	1-424-290-11	TRANSFORMER, DRIVE

****

***A-1373-237-A U BOARD, COMPLETE**
****

*1-564-521-11	PLUG, CONNECTOR 6P
*1-634-039-11	U BOARD

<JACK>

J001	1-563-302-11	JACK BLOCK, PIN 2P

<SWITCH>

SW001	1-572-082-11	SWITCH, SLIDE

****

*A-1380-289-A K BOARD, COMPLETE
****

*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P
*1-564-506-11	PLUG, CONNECTOR 3P
*1-564-523-11	PLUG, CONNECTOR 8P

<CAPACITOR>

C201	1-123-875-11	ELECT	10MF	20%	50V
C202	1-123-875-11	ELECT	10MF	20%	50V
C203	1-101-004-00	CERAMIC	0.01MF		50V
C204	1-101-004-00	CERAMIC	0.01MF		50V
C205	1-101-004-00	CERAMIC	0.01MF		50V
C206	1-101-004-00	CERAMIC	0.01MF		50V
C207	1-124-927-11	ELECT	4.7MF	20%	50V
C208	1-102-050-00	CERAMIC	0.01MF	99%	500V
C209	1-124-791-11	ELECT	1MF	20%	50V
C210	1-136-165-00	FILM	0.1MF	5%	50V

<DIODE>

D201	8-719-110-17	DIODE RD10ES-B2
D202	8-719-110-17	DIODE RD10ES-B2

<IC>

IC201	8-759-109-82	IC UPC814C
IC202	8-759-103-92	IC UPC318C

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q201	8-729-313-82	TRANSISTOR 2SD1138	
Q202	8-729-386-12	TRANSISTOR 2SB861	
Q203	8-729-143-42	TRANSISTOR 2SK929	
Q204	8-729-143-42	TRANSISTOR 2SK929	

<RESISTOR>

R201	1-249-435-11	CARBON	33K	5%	1/4W	
R202	1-249-421-11	CARBON	2.2K	5%	1/4W	
R203	1-249-437-11	CARBON	47K	5%	1/4W	
R204	1-249-405-11	CARBON	100	5%	1/4W	
R205	1-249-431-11	CARBON	15K	5%	1/4W	
R206	1-249-425-11	CARBON	4.7K	5%	1/4W	
R207	1-247-700-11	CARBON	100	5%	1/4W	F
R209	1-202-818-00	SOLID	1K	10%	1/2W	
R210	1-249-433-11	CARBON	22K	5%	1/4W	
R212	1-249-429-11	CARBON	10K	5%	1/4W	
R213	1-249-441-11	CARBON	100K	5%	1/4W	
R214	1-215-491-00	METAL	820K	1%	1/6W	
R215	1-215-902-11	METAL OXIDE	47K	5%	2W	F
R216	1-215-419-00	METAL	820	1%	1/6W	
R217	1-249-425-11	CARBON	4.7K	5%	1/4W	
R218	1-249-429-11	CARBON	10K	5%	1/4W	
R219	1-247-713-11	CARBON	1K	5%	1/4W	F
R220	1-247-700-11	CARBON	100	5%	1/4W	F
R221	1-202-842-11	SOLID	220K	10%	1/2W	
R222	1-247-713-11	CARBON	1K	5%	1/4W	F
R223	1-215-904-11	METAL OXIDE	100K	5%	2W	F
R224	1-202-842-11	SOLID	220K	10%	1/2W	
R225	1-247-713-11	CARBON	1K	5%	1/4W	F
R226	1-249-451-11	CARBON	2.2	5%	1/4W	F
R227	1-249-451-11	CARBON	2.2	5%	1/4W	F
R239	1-202-818-00	SOLID	1K	10%	1/2W	

<DISCHATGING GAP>

SG201	1-519-063-XX	DISCHARGING GAP
SG202	1-519-063-XX	DISCHARGING GAP

<TRANSFORMER>

T201	1-424-287-11	TRANSFORMER, DYNAMIC FOCUS

****

*A-1380-290-A KA BOARD, COMPLETE
****

*1-564-506-11	PLUG, CONNECTOR 3P
*1-564-507-11	PLUG, CONNECTOR 4P
*1-564-509-11	PLUG, CONNECTOR 6P
*1-564-514-11	PLUG, CONNECTOR 11P
*2-261-207-00	HEAT SINK, AF OUT

<CAPACITOR>

C001	1-101-004-00	CERAMIC	0.01MF		50V
C002	1-123-875-11	ELECT	10MF	20%	50V
C003	1-126-101-11	ELECT	100MF	20%	16V
C004	1-101-004-00	CERAMIC	0.01MF		50V
C005	1-123-875-11	ELECT	10MF	20%	50V
C006	1-126-101-11	ELECT	100MF	20%	16V
C007	1-123-382-00	ELECT	3.3MF	20%	50V
C008	1-124-791-11	ELECT	1MF	20%	50V
C009	1-126-233-11	ELECT	22MF	20%	50V
C011	1-126-101-11	ELECT	100MF	20%	16V
C012	1-124-927-11	ELECT	4.7MF	20%	50V
C013	1-126-233-11	ELECT	22MF	20%	50V
C015	1-101-004-00	CERAMIC	0.01MF		50V
C016	1-124-927-11	ELECT	4.7MF	20%	50V
C017	1-126-101-11	ELECT	100MF	20%	16V
C018	1-101-004-00	CERAMIC	0.01MF		50V
C019	1-102-824-00	CERAMIC	470PF	10%	50V
C020	1-136-153-00	FILM	0.01MF	5%	50V
C021	1-102-824-00	CERAMIC	470PF	10%	50V
C022	1-136-153-00	FILM	0.01MF	5%	50V
C023	1-123-875-11	ELECT	10MF	20%	50V
C024	1-124-120-11	ELECT	220MF	20%	16V
C025	1-123-875-11	ELECT	10MF	20%	50V
C027	1-123-875-11	ELECT	10MF	20%	50V
C028	1-124-122-11	ELECT	100MF	20%	50V
C030	1-124-122-11	ELECT	100MF	20%	50V
C031	1-136-165-00	FILM	0.1MF	5%	50V
C032	1-136-165-00	FILM	0.1MF	5%	50V
C033	1-124-122-11	ELECT	100MF	20%	50V
C034	1-124-122-11	ELECT	100MF	20%	50V
C035	1-101-004-00	CERAMIC	0.01MF		50V
C036	1-101-004-00	CERAMIC	0.01MF		50V
C037	1-101-004-00	CERAMIC	0.01MF		50V
C038	1-102-978-00	CERAMIC	220PF	10%	50V
C039	1-102-978-00	CERAMIC	220PF	10%	50V
C049	1-124-477-11	ELECT	47MF	20%	16V
C050	1-102-121-00	CERAMIC	0.0022MF	10%	50V
C051	1-102-121-00	CERAMIC	0.0022MF	10%	50V
C052	1-124-477-11	ELECT	47MF	20%	16V
C053	1-126-101-11	ELECT	100MF	20%	16V
C054	1-126-101-11	ELECT	100MF	20%	16V
C055	1-102-121-00	CERAMIC	0.0022MF	10%	50V
C056	1-102-121-00	CERAMIC	0.0022MF	10%	50V
C057	1-123-875-11	ELECT	10MF	20%	50V
C058	1-123-875-11	ELECT	10MF	20%	50V

<DIODE>

D001	8-719-900-95	DIODE V09G
D002	8-719-900-95	DIODE V09G
D003	8-719-109-90	DIODE RD5.6ES-B3
D005	8-719-150-59	DIODE RD13ES-B2
D007	8-719-150-59	DIODE RD13ES-B2
D008	8-719-911-19	DIODE 1SS119
D009	8-719-911-19	DIODE 1SS119
D010	8-719-911-19	DIODE 1SS119
D011	8-719-911-19	DIODE 1SS119
D012	8-719-911-19	DIODE 1SS119

<IC>

IC001	8-759-604-39	IC M5F78M12
IC002	8-759-982-55	IC RC79M12FA
IC003	8-749-941-40	IC STK4141V
IC004	8-759-233-33	IC MC74HC541N
IC005	8-759-044-95	IC MC14495P1
IC006	8-759-044-95	IC MC14495P1
IC007	8-719-901-68	DIODE GL-6R202

<COIL>

L001	1-410-671-31	INDUCTOR	47UH
L002	1-410-671-31	INDUCTOR	47UH
L003	1-410-671-31	INDUCTOR	47UH
L004	1-410-464-11	INDUCTOR	3.3UH
L005	1-410-464-11	INDUCTOR	3.3UH

KA **KB** **N**

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q001	8-729-900-36	TRANSISTOR DTC124ES	
Q002	8-729-900-36	TRANSISTOR DTC124ES	
Q003	8-729-119-78	TRANSISTOR 2SC2785-F	
Q004	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q005	8-729-900-80	TRANSISTOR DTC114ES	
Q007	8-729-119-78	TRANSISTOR 2SC2785-F	
Q008	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q009	8-729-900-80	TRANSISTOR DTC114ES	
Q011	8-729-119-78	TRANSISTOR 2SC2785-F	
Q012	8-729-119-78	TRANSISTOR 2SC2785-F	
Q013	8-729-119-78	TRANSISTOR 2SC2785-F	
Q014	8-729-119-78	TRANSISTOR 2SC2785-F	
Q015	8-729-119-78	TRANSISTOR 2SC2785-F	
Q016	8-729-119-78	TRANSISTOR 2SC2785-F	
Q017	8-729-900-36	TRANSISTOR DTC124ES	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R001	1-249-405-11	CARBON	100	5%	1/4W	
R002	1-249-441-11	CARBON	100K	5%	1/4W	
R003	1-249-405-11	CARBON	100	5%	1/4W	
R004	1-215-463-00	METAL	56K	1%	1/6W	
R005	1-215-461-00	METAL	47K	1%	1/6W	
R006	1-249-429-11	CARBON	10K	5%	1/4W	
R007	1-249-430-11	CARBON	12K	5%	1/4W	
R008	1-249-405-11	CARBON	100	5%	1/4W	
R009	1-249-417-11	CARBON	1K	5%	1/4W	
R012	1-249-482-11	CARBON	4.7	5%	1/2W	
R013	1-249-482-11	CARBON	4.7	5%	1/2W	
R015	1-249-417-11	CARBON	1K	5%	1/4W	
R016	1-249-417-11	CARBON	1K	5%	1/4W	
R017	1-249-405-11	CARBON	100	5%	1/4W	
R018	1-249-425-11	CARBON	4.7K	5%	1/4W	
R019	1-249-420-11	CARBON	1.8K	5%	1/4W	
R020	1-249-427-11	CARBON	6.8K	5%	1/4W	
R021	1-249-429-11	CARBON	10K	5%	1/4W	
R022	1-249-430-11	CARBON	12K	5%	1/4W	
R023	1-249-405-11	CARBON	100	5%	1/4W	
R024	1-249-417-11	CARBON	1K	5%	1/4W	
R030	1-249-417-11	CARBON	1K	5%	1/4W	
R031	1-249-417-11	CARBON	1K	5%	1/4W	
R032	1-249-405-11	CARBON	100	5%	1/4W	
R033	1-249-425-11	CARBON	4.7K	5%	1/4W	
R034	1-249-420-11	CARBON	1.8K	5%	1/4W	
R035	1-249-427-11	CARBON	6.8K	5%	1/4W	
R036	1-249-437-11	CARBON	47K	5%	1/4W	
R037	1-249-437-11	CARBON	47K	5%	1/4W	
R038	1-249-437-11	CARBON	47K	5%	1/4W	
R039	1-249-425-11	CARBON	4.7K	5%	1/4W	
R040	1-249-429-11	CARBON	10K	5%	1/4W	
R041	1-249-425-11	CARBON	4.7K	5%	1/4W	
R042	1-249-427-11	CARBON	6.8K	5%	1/4W	
R043	1-249-417-11	CARBON	1K	5%	1/4W	
R044	1-249-438-11	CARBON	56K	5%	1/4W	
R045	1-249-417-11	CARBON	1K	5%	1/4W	
R046	1-249-438-11	CARBON	56K	5%	1/4W	
R047	1-249-415-11	CARBON	680	5%	1/4W	
R048	1-249-438-11	CARBON	56K	5%	1/4W	
R049	1-249-421-11	CARBON	2.2K	5%	1/4W	
R050	1-215-871-11	METAL OXIDE	2.2K	5%	1W	F
R051	1-249-405-11	CARBON	100	5%	1/4W	
R052	1-215-869-11	METAL OXIDE	1K	5%	1W	F
R053	1-215-869-11	METAL OXIDE	1K	5%	1W	F
R054	1-249-405-11	CARBON	100	5%	1/4W	
R055	1-249-421-11	CARBON	2.2K	5%	1/4W	
R056	1-249-438-11	CARBON	56K	5%	1/4W	
R057	1-215-871-11	METAL OXIDE	2.2K	5%	1W	F
R058	1-249-415-11	CARBON	680	5%	1/4W	
R059	1-249-389-11	CARBON	4.7	5%	1/4W	F
R060	1-249-389-11	CARBON	4.7	5%	1/4W	F
R061	1-249-405-11	CARBON	100	5%	1/4W	
R062	1-249-441-11	CARBON	100K	5%	1/4W	
R063	1-249-441-11	CARBON	100K	5%	1/4W	
R064	1-216-361-00	METAL OXIDE	0.22	5%	2W	F
R065	1-216-361-00	METAL OXIDE	0.22	5%	2W	F
R066	1-249-417-11	CARBON	1K	5%	1/4W	
R080	1-249-437-11	CARBON	47K	5%	1/4W	
R081	1-249-438-11	CARBON	56K	5%	1/4W	
R082	1-249-405-11	CARBON	100	5%	1/4W	
R083	1-249-429-11	CARBON	10K	5%	1/4W	

<VARIABLE RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
RV001	1-228-991-00	RES, ADJ, CARBON 2.2K	
RV002	1-228-991-00	RES, ADJ, CARBON 2.2K	

****

***A-1380-316-A KB BOARD, COMPLETE**
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-564-506-11	PLUG, CONNECTOR 3P	
	*1-636-288-11	KB BOARD	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D015	8-719-911-19	DIODE 1SS119	
D016	8-719-911-19	DIODE 1SS119	
D017	8-719-911-19	DIODE 1SS119	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q020	8-729-900-63	TRANSISTOR DTA124ES	
Q021	8-729-900-63	TRANSISTOR DTA124ES	
Q022	8-729-900-63	TRANSISTOR DTA124ES	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R085	1-249-437-11	CARBON	47K	5%	1/4W	
R086	1-249-429-11	CARBON	10K	5%	1/4W	
R087	1-249-405-11	CARBON	100	5%	1/4W	
R088	1-249-425-11	CARBON	4.7K	5%	1/4W	
R089	1-249-437-11	CARBON	47K	5%	1/4W	
R090	1-249-429-11	CARBON	10K	5%	1/4W	
R091	1-249-405-11	CARBON	100	5%	1/4W	
R092	1-249-437-11	CARBON	47K	5%	1/4W	
R093	1-249-429-11	CARBON	10K	5%	1/4W	
R094	1-249-405-11	CARBON	100	5%	1/4W	

****

***A-1390-102-A N BOARD, COMPLETE**
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-564-519-11	PLUG, CONNECTOR 4P	
	*1-634-041-11	N BOARD	
	*4-337-475-00	HOLDER (D), LED	

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C601	1-124-589-11	ELECT	47MF	20%	16V
		<DIODE>			
D601	8-719-920-05	DIODE TLG123A			
D602	8-719-812-31	DIODE TLR123			
		<IC>			
IC601	8-741-148-33	IC SBX1483-59			
		<TRANSISTOR>			
Q601	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		<RESISTOR>			
R601	1-249-409-11	CARBON	220	5%	1/4W
R602	1-249-409-11	CARBON	220	5%	1/4W
R603	1-249-409-11	CARBON	220	5%	1/4W
R604	1-249-433-11	CARBON	22K	5%	1/4W
R605	1-249-429-11	CARBON	10K	5%	1/4W

****

*A-1394-213-A Y BOARD, COMPLETE
****

	***1-526-659-00**	**SOKET, IC (DP) 28P**			
	*1-526-950-11	SOCKET, IC 64P			
	*1-568-984-11	CONNECTOR, MALE 96P			
		<CAPACITOR>			
C1	1-124-927-11	ELECT	4.7MF	20%	50V
C2	1-124-927-11	ELECT	4.7MF	20%	50V
C3	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C4	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C5	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C7	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C8	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C9	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C10	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C11	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C12	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C13	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C14	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C15	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C16	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C17	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C18	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C19	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C20	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C21	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C22	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C23	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C24	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C25	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C26	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C27	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C28	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C29	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C30	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C31	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C32	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C33	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C34	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C35	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C36	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C37	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C38	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C39	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C40	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C41	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C42	1-124-477-11	ELECT	47MF	20%	16V
C43	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C44	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C45	1-163-090-00	CERAMIC CHIP	7PF	0.25PF	50V
C46	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C47	1-124-119-00	ELECT	330MF	20%	16V
C48	1-124-477-11	ELECT	47MF	20%	16V
C49	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C50	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C51	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C52	1-126-103-11	ELECT	470MF	20%	16V
C53	1-126-101-11	ELECT	100MF	20%	16V
C54	1-126-101-11	ELECT	100MF	20%	16V
C55	1-126-101-11	ELECT	100MF	20%	16V
C56	1-126-101-11	ELECT	100MF	20%	16V
C57	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C58	1-163-093-00	CERAMIC CHIP	10PF	5%	50V
C59	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C60	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C61	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C62	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C63	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C64	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C65	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C66	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C67	1-124-119-00	ELECT	330MF	20%	16V
C68	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C69	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C70	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C71	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C72	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C73	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C74	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C75	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C76	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C77	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
		<DIODE>			
D1	8-719-971-20	DIODE ERC38-06			
D2	8-719-971-20	DIODE ERC38-06			
D3	8-719-104-34	DIODE 1S2836			
D4	8-719-800-60	DIODE TLR214			
D5	8-719-104-34	DIODE 1S2836			
D6	8-719-104-34	DIODE 1S2836			
		<IC>			
IC1	8-759-320-49	IC HD64180R1P8			
IC2	**8-759-510-91**	IC **MBM27C512P-25-PJY013**			
IC3	8-752-331-00	IC CXK5864BM-12L			
IC4	8-759-748-05	IC UPD28C64C-20			
IC5	8-759-925-80	IC SN74HC14NS			

Y

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC6	8-759-206-28	IC TC74HC123F	
IC7	8-759-008-21	IC MC74HC541F	
IC8	8-759-008-21	IC MC74HC541F	
IC9	8-759-995-97	IC MB8855-1314N	
IC10	8-759-984-56	IC MB670840PF	
IC11	8-759-984-59	IC MB654842UPF	
IC12	8-759-984-58	IC MB671469PF	
IC13	8-759-984-57	IC MB605195	
IC14	8-752-322-10	IC CXK5814P-45L	
IC15	8-752-333-84	IC CXK3864-040M	
IC16	8-752-333-85	IC CXK3864-041M	
IC17	8-752-333-86	IC CXK3864-042M	
IC18	8-759-301-24	IC HD10124	
IC19	8-759-301-24	IC HD10124	
IC20	*1-563-949-11	SOCKET, SIL 8P	
IC21	8-759-911-24	IC SN74S124N	
IC22	8-759-100-93	IC UPC393G2	
IC23	8-759-031-50	IC MC74F00M	
IC24	8-759-008-57	IC MC34051P	
IC25	8-759-100-93	IC UPC393G2	
IC26	8-759-032-01	IC MC74HC00AF	
IC27	8-759-925-98	IC SN74HC107NS	
IC28	8-759-032-01	IC MC74HC00AF	
IC29	8-759-206-28	IC TC74HC123	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L1	1-459-155-00	COIL (WITH CORE) 45UH	
L2	1-459-155-00	COIL (WITH CORE) 45UH	
L3	1-459-155-00	COIL (WITH CORE) 45UH	
L4	1-459-155-00	COIL (WITH CORE) 45UH	

<IC LINK>

REF.NO.	PART NO.	DESCRIPTION	REMARK
PS1	⚠.1-532-679-91	LINK, IC (ICP-N15)	
PS2	⚠.1-532-679-91	LINK, IC (ICP-N15)	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1	8-729-216-22	TRANSISTOR 2SA1162	
Q2	8-729-230-49	TRANSISTOR 2SC2712	
Q3	8-729-216-22	TRANSISTOR 2SA1162	
Q4	8-729-216-22	TRANSISTOR 2SA1162	
Q5	8-729-230-49	TRANSISTOR 2SC2712	
Q6	8-729-230-49	TRANSISTOR 2SC2712	
Q7	8-729-230-49	TRANSISTOR 2SC2712	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R2	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R3	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R4	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R5	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R6	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R7	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R8	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R9	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R10	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R11	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R12	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R13	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R14	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R15	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R17	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R18	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R19	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R20	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R21	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R22	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R23	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R24	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R25	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R26	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R27	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R28	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R29	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R30	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R31	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R32	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R33	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R34	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R36	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R37	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R38	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R39	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R40	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R41	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R42	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R43	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R44	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R45	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R46	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R47	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R48	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R49	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R50	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R51	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R52	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R53	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R54	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R55	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R56	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R57	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R58	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R59	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R60	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R61	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R62	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R63	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R64	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R65	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R66	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R67	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R68	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R69	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R70	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R71	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R72	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R73	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R74	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R75	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R76	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R77	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R78	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R79	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R80	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R81	1-216-025-00	METAL GLAZE	100	5%	1/10W	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
R82	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R83	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R84	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R85	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R86	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R87	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R88	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R89	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R90	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R91	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R92	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R93	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R94	1-216-037-00	METAL GLAZE	330	5%	1/10W	
R95	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R96	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R97	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R98	1-216-129-00	METAL GLAZE	2.2M	5%	1/10W	
R99	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W	
R100	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R101	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R102	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R103	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R104	1-216-748-11	METAL GLAZE	39K	5%	1/10W	
R105	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R106	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R107	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R108	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R109	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R110	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R111	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R112	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R113	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R114	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R115	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R116	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R117	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R118	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R119	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R120	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R121	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R122	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R123	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R124	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R125	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R126	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R127	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R128	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R129	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R130	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R131	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R132	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R133	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R134	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R135	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R136	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R137	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R138	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R139	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R140	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R141	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R142	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R143	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R144	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R145	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R146	1-216-677-11	METAL CHIP	12K	0.50%	1/10W	
R147	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R148	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R149	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R150	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R151	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R152	1-216-025-00	METAL GLAZE	100	5%	1/10W	

<SWITCH>

SW1	1-570-204-21	SWITCH, KEY BOARD
SW2	1-570-598-11	SWITCH, DIP

<CRYSTAL>

X1	1-578-687-11	VIBRATOR, CRYSTAL
X2	1-567-252-11	VIBRATOR, CRYSTAL
X3	1-567-192-11	OSCILLATOR, CERAMIC
X4	1-577-353-11	VIBRATOR, CERAMIC

****

M1 BOARD (SOPS1008B)

****

1-543-060-00	CORE
9-983-709-01	RUBBER (STB-CR07), RADIATION
*2-643-841-01	SHEET, INSULATING
*4-873-829-02	HEAT SINK

<CAPACITOR>

C108 ⚠.	1-161-743-12	CERAMIC	0.0047MF		400V
C109	1-125-593-11	ELECT(BLOCK)	2000MF	20%	250V
C110	1-125-593-11	ELECT(BLOCK)	2000MF	20%	250V
C111	1-125-593-11	ELECT(BLOCK)	2000MF	20%	250V
C112	1-125-593-11	ELECT(BLOCK)	2000MF	20%	250V
C114	1-136-626-11	FILM	1MF	10%	250V
C115	1-136-626-11	FILM	1MF	10%	250V
C116	1-136-626-11	FILM	1MF	10%	250V
C117	1-136-626-11	FILM	1MF	10%	250V
C118	1-161-915-00	CERAMIC	0.001MF	10%	500V
C119	1-161-915-00	CERAMIC	0.001MF	10%	500V
C120	1-136-202-11	FILM	0.33MF	5%	400V
C121	1-136-202-11	FILM	0.33MF	5%	400V
C122	1-161-742-00	CERAMIC	0.0022MF	20%	400V
C124 ⚠.	1-161-743-12	CERAMIC	0.0047MF		400V
C125 ⚠.	1-161-743-12	CERAMIC	0.0047MF		400V
C126 ⚠.	1-161-743-12	CERAMIC	0.0047MF		400V
C201	1-102-030-00	CERAMIC	330PF	10%	500V
C202	1-102-030-00	CERAMIC	330PF	10%	500V
C203	1-102-030-00	CERAMIC	330PF	10%	500V
C204	1-102-030-00	CERAMIC	330PF	10%	500V
C205	1-162-558-11	CERAMIC	100PF	10%	2KV
C206	1-162-558-11	CERAMIC	100PF	10%	2KV
C207	1-162-558-11	CERAMIC	100PF	10%	2KV
C208	1-162-558-11	CERAMIC	100PF	10%	2KV
C209	1-162-131-11	CERAMIC	220PF	10%	2KV
C210	1-162-131-11	CERAMIC	220PF	10%	2KV
C211	1-162-131-11	CERAMIC	220PF	10%	2KV
C212	1-162-131-11	CERAMIC	220PF	10%	2KV

M1

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
C213	1-126-911-11	ELECT	47MF	0	200V	
C214	1-126-911-11	ELECT	47MF	0	200V	
C215	1-126-913-11	ELECT	220MF	0	160V	
C216	1-126-913-11	ELECT	220MF	0	160V	
C217	1-126-912-11	ELECT	33MF	0	250V	
C218	1-126-913-11	ELECT	220MF	0	160V	
C219	1-130-483-00	MYLAR	0.01MF	5%	50V	
C221	1-130-493-00	MYLAR	0.068MF	5%	50V	
C222	1-130-485-00	MYLAR	0.015MF	5%	50V	
C223	1-130-485-00	MYLAR	0.015MF	5%	50V	
C224	1-126-911-11	ELECT	47MF	0	200V	
C225	1-123-875-11	ELECT	10MF	20%	50V	
C226	1-124-478-11	ELECT	100MF	20%	25V	
C227	1-124-443-00	ELECT	100MF	20%	10V	
C228	1-130-495-00	MYLAR	0.1MF	5%	50V	
C229	1-130-495-00	MYLAR	0.1MF	5%	50V	
C230	1-124-902-00	ELECT	0.47MF	20%	50V	
C231	1-161-925-00	CERAMIC	100PF	10%	500V	
C232	1-161-925-00	CERAMIC	100PF	10%	500V	

<CONNECTOR>

REF.NO.	PART NO.	DESCRIPTION
CN103	*1-535-419-00	TAB, FASTEN (PCB)
CN104	*1-535-419-00	TAB, FASTEN (PCB)
CN106	*1-560-549-00	PIN (WITH V CONNECTOR BASE) 3P
CN107	*1-535-419-00	TAB, FASTEN (PCB)
CN108	*1-535-419-00	TAB, FASTEN (PCB)
CN109	*1-535-419-00	TAB, FASTEN (PCB)
CN110	*1-535-419-00	TAB, FASTEN (PCB)
CN111	*1-535-419-00	TAB, FASTEN (PCB)
CN202	*1-560-894-00	PIN, CONNECTOR 6P

<DIODE>

REF.NO.	PART NO.	DESCRIPTION
D101 ⚠	8-719-500-27	DIODE S15VB60
D102	8-807-913-21	DIODE 11EQS04
D103	8-807-913-21	DIODE 11EQS04
D201	8-719-971-20	DIODE ERC38-06
D202	8-719-971-20	DIODE ERC38-06
D203	8-719-971-20	DIODE ERC38-06
D204	8-719-971-20	DIODE ERC38-06
D205	8-719-979-28	DIODE ESAD39-06C
D206	8-719-979-29	DIODE ESAD39-06N
D207	8-719-911-55	DIODE U05G
D208	8-719-911-55	DIODE U05G
D209	8-719-109-89	DIODE RD5.6ES-B2
D210	8-719-911-19	DIODE 1SS119
D211	8-719-911-19	DIODE 1SS119
D213	8-719-110-88	DIODE RD39ES-B2
D214	8-719-110-88	DIODE RD39ES-B2
D215	8-719-911-19	DIODE 1SS119
D216	8-719-911-19	DIODE 1SS119
D218	8-719-912-20	DIODE 1SS120
D219	8-719-912-20	DIODE 1SS120
D220	8-719-911-19	DIODE 1SS119

<FUSE>

REF.NO.	PART NO.	DESCRIPTION
F103 ⚠	1-532-496-11	FUSE, THERMO

<IC>

REF.NO.	PART NO.	DESCRIPTION
IC201	8-759-135-80	IC UPC358C
IC202	8-759-908-15	IC TL431CLP

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC202	8-759-908-15	IC TL431CLPB	
IC203	8-759-135-80	IC UPC358C	
IC204	8-759-908-15	IC TL431CLP	

<COIL>

REF.NO.	PART NO.	DESCRIPTION
L104	1-424-058-11	LFT
L201	1-412-263-11	COIL,CHOKE(CCLU160708Z) 22MMH
L202	1-412-264-11	COIL,CHOKE(CCLU270817Z)1.36MMH
L203	1-408-949-11	COIL (WITH CORE) (CHOKE COIL)
L204	1-421-370-00	COIL, CHOKE

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION
Q101	1-807-107-11	TRANSISTOR 2SK827
Q102	1-807-107-11	TRANSISTOR 2SK827
Q103	1-807-107-11	TRANSISTOR 2SK827
Q104	1-807-107-11	TRANSISTOR 2SK827
Q105	8-729-113-34	TRANSISTOR 2SB733-5
Q106	8-729-113-34	TRANSISTOR 2SB733-5
Q201	8-729-821-53	TRANSISTOR 2SC3042-N
Q202	8-729-105-97	TRANSISTOR 2SA1156-2K
Q203	8-729-175-22	TRANSISTOR 2SC2752-L
Q204	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q205	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q206	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q207	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q208	8-729-208-04	TRANSISTOR 2SK422
Q209	8-729-208-04	TRANSISTOR 2SK422

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R102 ⚠	1-205-916-11	WIREWOUND	5	5%	20W	F
R103 ⚠	1-205-916-11	WIREWOUND	5	5%	20W	F
R104	1-205-624-00	WIREWOUND	100	5%	5W	F
R105	1-247-696-11	CARBON	47	5%	1/4W	F
R106	1-247-696-11	CARBON	47	5%	1/4W	F
R107	1-247-696-11	CARBON	47	5%	1/4W	F
R108	1-247-696-11	CARBON	47	5%	1/4W	F
R109	1-249-421-11	CARBON	2.2K	5%	1/4W	
R110	1-249-421-11	CARBON	2.2K	5%	1/4W	
R111	1-205-624-00	WIREWOUND	100	5%	5W	F
R201	1-205-677-00	WIREWOUND	1K	5%	5W	F
R202	1-205-677-00	WIREWOUND	1K	5%	5W	F
R203	1-249-429-11	CARBON	10K	5%	1/4W	
R204	1-249-441-11	CARBON	100K	5%	1/4W	
R205	1-249-441-11	CARBON	100K	5%	1/4W	
R206	1-249-405-11	CARBON	100	5%	1/4W	
R207	1-249-417-11	CARBON	1K	5%	1/4W	
R208	1-215-477-00	METAL	220K	1%	1/6W	
R209	1-215-477-00	METAL	220K	1%	1/6W	
R210	1-215-445-00	METAL	10K	1%	1/6W	
R212	1-205-676-11	WIREWOUND	4.7	5%	5W	F
R213	1-215-477-00	METAL	220K	1%	1/6W	
R214	1-215-477-00	METAL	220K	1%	1/6W	
R215	1-215-445-00	METAL	10K	1%	1/6W	
R216	1-249-424-11	CARBON	3.9K	5%	1/4W	
R217	1-247-887-00	CARBON	220K	5%	1/4W	
R218	1-247-887-00	CARBON	220K	5%	1/4W	
R219	1-247-895-00	CARBON	470K	5%	1/4W	
R220	1-247-903-00	CARBON	1M	5%	1/4W	
R221	1-249-419-11	CARBON	1.5K	5%	1/4W	
R222	1-249-417-11	CARBON	1K	5%	1/4W	
R223	1-249-426-11	CARBON	5.6K	5%	1/4W	
R224	1-249-425-11	CARBON	4.7K	5%	1/4W	

M1 **C1**

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

- ※ : Selected to yield optimum performance.

REF.NO.	PART NO.	DESCRIPTION				REMARK
R226	1-247-747-11	CARBON	470	5%	1/2W	F
R227	1-247-747-11	CARBON	470	5%	1/2W	F
R228	1-215-431-00	METAL	2.7K	1%	1/6W	
※R229	1-215-456-00	METAL	30K	1%	1/6W	
※R229	1-215-457-00	METAL	33K	1%	1/6W	
※R229	1-215-458-00	METAL	36K	1%	1/6W	
※R229	1-215-459-00	METAL	39K	1%	1/6W	
※R229	1-215-460-00	METAL	43K	1%	1/6W	
※R229	1-215-461-00	METAL	47K	1%	1/6W	
※R229	1-215-462-00	METAL	51K	1%	1/6W	
※R229	1-215-463-00	METAL	56K	1%	1/6W	
※R229	1-215-464-00	METAL	62K	1%	1/6W	
R230	1-249-426-11	CARBON	5.6K	5%	1/4W	
R231	1-249-426-11	CARBON	5.6K	5%	1/4W	
R232	1-215-473-00	METAL	150K	1%	1/6W	
R233	1-215-441-00	METAL	6.8K	1%	1/6W	
R234	1-215-469-00	METAL	100K	1%	1/6W	
R235	1-215-469-00	METAL	100K	1%	1/6W	
R236	1-215-436-00	METAL	4.3K	1%	1/6W	
R237	1-215-902-11	METAL OXIDE	47K	5%	2W	F
R238	1-215-902-11	METAL OXIDE	47K	5%	2W	F
R239	1-205-677-00	WIREWOUND	1K	5%	5W	F
R240	1-205-677-00	WIREWOUND	1K	5%	5W	F
R241	1-249-432-11	CARBON	18K	5%	1/4W	
R242	1-249-426-11	CARBON	5.6K	5%	1/4W	
R243	1-249-431-11	CARBON	15K	5%	1/4W	
R244	1-249-413-11	CARBON	470	5%	1/4W	
R245	1-249-431-11	CARBON	15K	5%	1/4W	
R246	1-247-893-11	CARBON	390K	5%	1/4W	
R247	1-215-465-00	METAL	68K	1%	1/6W	
R248	1-215-433-00	METAL	3.3K	1%	1/6W	
R249	1-215-465-00	METAL	68K	1%	1/6W	
R250	1-215-465-00	METAL	68K	1%	1/6W	
R251	1-215-433-00	METAL	3.3K	1%	1/6W	
R252	1-215-447-00	METAL	12K	1%	1/6W	
R253	1-215-447-00	METAL	12K	1%	1/6W	
R254	1-215-413-00	METAL	470	1%	1/6W	
R255	1-216-377-11	METAL OXIDE	4.7	5%	2W	F

<VARIABLE RESISTOR>

RV201	1-228-990-00	RES, ADJ, METAL GLAZE 1K
RV202	1-228-990-00	RES, ADJ, METAL GLAZE 1K

<RELAY>

RY101⚠	1-515-450-12	RELAY, POWER

<TRANSFORMER>

T101 ⚠	1-449-845-11	TRANSFORMER, CONVERTER
T102 ⚠	1-421-819-11	TRANSFORMER, CURRENT
T103 ⚠	1-437-188-11	TRANSFORMER, DRIVE
T104 ⚠	1-437-188-11	TRANSFORMER, DRIVE

<ARRESTER>

VZ101⚠	1-576-084-11	ARRESTER, GUS TUBE (M2P-470L)

****

C1 BOARD (SOPS1008B)
****

REF.NO.	PART NO.	DESCRIPTION			REMARK

<CAPACITOR>

C51	1-130-471-00	MYLAR	0.001MF	5%	50V
C52	1-130-471-00	MYLAR	0.001MF	5%	50V
C53	1-124-902-00	ELECT	0.47MF	20%	50V
C54	1-124-478-11	ELECT	100MF	20%	25V
C56	1-130-483-00	MYLAR	0.01MF	5%	50V
C57	1-130-495-00	MYLAR	0.1MF	5%	50V
C58	1-124-910-11	ELECT	47MF	20%	50V
C59	1-124-902-00	ELECT	0.47MF	20%	50V

<CONNECTOR>

CN51	*1-560-741-00	PIN, CONNECTOR 12P
CN52	*1-564-517-11	PLUG, CONNECTOR 2P

<DIODE>

D51	8-807-913-21	DIODE 11EQS04
D52	8-807-913-21	DIODE 11EQS04
D53	8-807-913-21	DIODE 11EQS04
D54	8-807-913-21	DIODE 11EQS04
D55	8-807-913-21	DIODE 11EQS04
D56	8-807-913-21	DIODE 11EQS04
D57	8-719-911-19	DIODE 1SS119
D58	8-719-107-87	THYRISTOR 03P2M
D59	8-719-911-19	DIODE 1SS119

<IC>

IC51	8-759-906-62	IC MB3759-SNY

<COIL>

L51	1-410-466-41	INDUCTOR	4.7UH

<TRANSISTOR>

Q53	8-729-119-76	TRANSISTOR 2SA1175-HFE

<RESISTOR>

R51	1-249-410-11	CARBON	270	5%	1/4W
R52	1-249-417-11	CARBON	1K	5%	1/4W
R53	1-249-417-11	CARBON	1K	5%	1/4W
R54	1-249-417-11	CARBON	1K	5%	1/4W
R56	1-249-433-11	CARBON	22K	5%	1/4W
R57	1-247-897-11	CARBON	560K	5%	1/4W
R58	1-249-437-11	CARBON	47K	5%	1/4W
R59	1-249-405-11	CARBON	100	5%	1/4W
R60	1-247-885-00	CARBON	180K	5%	1/4W
R61	1-249-421-11	CARBON	2.2K	5%	1/4W
R62	1-249-421-11	CARBON	2.2K	5%	1/4W
R63	1-249-421-11	CARBON	2.2K	5%	1/4W
R64	1-247-895-00	CARBON	470K	5%	1/4W
R65	1-249-425-11	CARBON	4.7K	5%	1/4W
R66	1-249-426-11	CARBON	5.6K	5%	1/4W
R67	1-249-425-11	CARBON	4.7K	5%	1/4W
R68	1-249-415-11	CARBON	680	5%	1/4W
R69	1-249-405-11	CARBON	100	5%	1/4W
R70	1-249-421-11	CARBON	2.2K	5%	1/4W
R71	1-215-469-00	METAL	100K	1%	1/6W

****

M2

M2 BOARD (SOPS1008B)
****

REF.NO.	PART NO.	DESCRIPTION			REMARK
	1-543-060-00	CORE			

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION			REMARK
C151	1-125-592-11	ELECT(BLOCK)	270MF	20%	400V
C152	1-136-626-11	FILM	1MF	10%	250V
C153	1-136-626-11	FILM	1MF	10%	250V
C154	1-161-915-00	CERAMIC	0.001MF	10%	500V
C155	1-161-915-00	CERAMIC	0.001MF	10%	500V
C156	1-136-209-11	FILM	0.1MF	10%	400V
C157	1-130-491-00	MYLAR	0.047MF	5%	50V
C158	1-130-475-00	MYLAR	0.0022MF	5%	50V
C165	1-126-233-11	ELECT	22MF	20%	25V
C166	1-136-626-11	FILM	1MF	10%	250V
C167	1-136-626-11	FILM	1MF	10%	250V
C168	1-136-202-11	FILM	0.33MF	5%	400V
C169	1-136-202-11	FILM	0.33MF	5%	400V
C170	1-161-742-00	CERAMIC	0.0022MF	20%	400V
C251	1-162-659-11	CERAMIC	0.0015MF	10%	500V
C252	1-162-659-11	CERAMIC	0.0015MF	10%	500V
C253	1-161-925-00	CERAMIC	100PF	10%	500V
C254	1-161-925-00	CERAMIC	100PF	10%	500V
C255	1-161-925-00	CERAMIC	100PF	10%	500V
C256	1-161-925-00	CERAMIC	100PF	10%	500V
C257	1-161-925-00	CERAMIC	100PF	10%	500V
C258	1-161-925-00	CERAMIC	100PF	10%	500V
C259	1-161-925-00	CERAMIC	100PF	10%	500V
C260	1-161-925-00	CERAMIC	100PF	10%	500V
C261	1-161-925-00	CERAMIC	100PF	10%	500V
C262	1-161-925-00	CERAMIC	100PF	10%	500V
C263	1-161-925-00	CERAMIC	100PF	10%	500V
C264	1-161-925-00	CERAMIC	100PF	10%	500V
C265	1-124-473-11	ELECT	1000MF	20%	10V
C266	1-124-473-11	ELECT	1000MF	20%	10V
C267	1-124-636-00	ELECT	3300MF	20%	25V
C268	1-124-636-00	ELECT	3300MF	20%	25V
C269	1-124-913-11	ELECT	470MF	20%	50V
C270	1-124-913-11	ELECT	470MF	20%	50V
C271	1-124-472-11	ELECT	470MF	20%	6.3V
C272	1-124-472-11	ELECT	470MF	20%	6.3V
C273	1-124-480-11	ELECT	470MF	20%	25V
C274	1-124-480-11	ELECT	470MF	20%	25V
C275	1-124-122-11	ELECT	100MF	20%	50V
C276	1-124-122-11	ELECT	100MF	20%	50V
C278	1-130-489-00	MYLAR	0.033MF	5%	50V
C279	1-130-485-00	MYLAR	0.015MF	5%	50V
C280	1-130-485-00	MYLAR	0.015MF	5%	50V
C281	1-130-495-00	MYLAR	0.1MF	5%	50V
C282	1-130-495-00	MYLAR	0.1MF	5%	50V
C283	1-124-442-00	ELECT	330MF	20%	6.3V
C284	1-124-556-11	ELECT	2200MF	20%	16V
C285	1-124-478-11	ELECT	100MF	20%	25V
C286	1-124-360-00	ELECT	1000MF	20%	16V
C287	1-123-875-11	ELECT	10MF	20%	50V
C288	1-126-103-11	ELECT	470MF	20%	16V
C289	1-124-902-00	ELECT	0.47MF	20%	50V
C290	1-124-478-11	ELECT	100MF	20%	25V
C291	1-130-495-00	MYLAR	0.1MF	5%	50V
C292	1-130-495-00	MYLAR	0.1MF	5%	50V
C293	1-161-925-00	CERAMIC	100PF	10%	500V
C294	1-161-925-00	CERAMIC	100PF	10%	500V
C295	1-161-925-00	CERAMIC	100PF	10%	500V
C296	1-161-925-00	CERAMIC	100PF	10%	500V
C297	1-161-925-00	CERAMIC	100PF	10%	500V
C298	1-161-925-00	CERAMIC	100PF	10%	500V

<CONNECTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
CN151	*1-560-549-00	PIN (WITH V CONNECTOR BASE) 3P	
CN252	*1-560-894-00	PIN, CONNECTOR 6P	
CN254	*1-560-891-00	PIN, CONNECTOR 3P	
CN255	*1-560-891-00	PIN, CONNECTOR 3P	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D151	8-807-913-21	DIODE 11EQS04	
D152	8-807-913-21	DIODE 11EQS04	
D153	8-719-300-70	DIODE RH-1C	
D154	8-719-912-20	DIODE 1SS120	
D155	8-719-912-20	DIODE 1SS120	
D156	8-719-109-89	DIODE RD5.6ES-B2	
D158	8-719-912-20	DIODE 1SS120	
D159	8-719-912-20	DIODE 1SS120	
D251	8-719-302-81	DIODE FMG-24S	
D252	1-807-793-11	DIODE FML-22S	
D253	8-719-302-60	DIODE FML-32S	
D254	1-807-793-21	DIODE FML-22R	
D255	1-807-793-21	DIODE FML-22R	
D256	8-719-302-82	DIODE FMG-24R	
D265	8-719-110-88	DIODE RD39ES-B2	
D266	8-719-110-88	DIODE RD39ES-B2	
D267	8-719-200-02	DIODE 10E-2	
D268	8-719-200-02	DIODE 10E-2	
D270	8-719-911-19	DIODE 1SS119	
D271	8-719-911-19	DIODE 1SS119	
D272	8-719-911-19	DIODE 1SS119	
D273	8-719-911-19	DIODE 1SS119	
D274	8-719-911-19	DIODE 1SS119	
D275	8-719-911-19	DIODE 1SS119	
D276	8-719-109-89	DIODE RD5.6ES-B2	
D277	8-719-110-41	DIODE RD15ES-B2	
D278	8-719-110-48	DIODE RD18ES-B1	
D279	8-719-109-97	DIODE RD6.8ES-B2	
D280	8-719-110-33	DIODE RD12ES-B3	
D281	1-807-774-11	DIODE AU02A	
D282	8-807-913-21	DIODE 11EQS04	
D283	8-719-109-84	DIODE RD5.1ES-B1	
D284	8-719-109-97	DIODE RD6.8ES-B2	
D285	8-719-911-19	DIODE 1SS119	
D286	8-719-911-19	DIODE 1SS119	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC251	8-759-908-15	IC TL431CLP	
IC252	8-759-135-80	IC UPC358C	
IC253	8-759-143-00	IC UPC7805HF	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L151	1-424-058-11	LFT	
L251	1-412-266-11	COIL,CHOKE (CCL U230914Z)136UH	
L252	1-412-266-11	COIL,CHOKE (CCL U230914Z)136UH	
L253	1-412-265-11	COIL,CHOKE(CCLU230914Z)2.25MMH	
L254	1-421-465-00	COIL, FERRITE CHOKE 68UH	
L255	1-421-370-00	COIL, CHOKE	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
L256	1-421-370-00	COIL, CHOKE	
L257	1-421-370-00	COIL, CHOKE	
L258	1-421-370-00	COIL, CHOKE	
L259	1-421-465-00	COIL, FERRITE CHOKE 68UH	

<IC LINK>

REF.NO.	PART NO.	DESCRIPTION	REMARK
PS151⚠.	1-532-605-11	LINK, IC	
PS152⚠.	1-532-679-11	LINK, IC	

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q151	1-808-107-11	TRANSISTOR 2SK827	
	9-983-709-01	RUBBER (STB-CR07), RADIATION ;Q151	
Q152	1-808-107-11	TRANSISTOR 2SK827	
	9-983-709-01	RUBBER (STB-CR07), RADIATION ;Q152	
Q153	8-729-113-34	TRANSISTOR 2SB733-4	
Q154	8-729-113-34	TRANSISTOR 2SB733-4	
Q155	8-729-802-08	TRANSISTOR 2SC3150	
Q156	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q251	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q252	8-729-188-23	TRANSISTOR 2SD882-P	
	9-983-709-01	RUBBER (STB-CR07), RADIATION ; Q252	
Q253	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q254	8-729-140-97	TRANSISTOR 2SB734-34	
Q255	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q256	8-729-208-04	TRANSISTOR 2SK422	
Q257	8-729-208-04	TRANSISTOR 2SK422	
Q258	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q259	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q260	8-729-119-78	TRANSISTOR 2SC2785-HFE	

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R151	1-205-652-00	WIREWOUND	68	5%	5W	F
R152	1-247-696-11	CARBON	47	5%	1/4W	F
R153	1-247-696-11	CARBON	47	5%	1/4W	F
R154	1-247-717-11	CARBON	2.2K	5%	1/4W	
R155	1-247-717-11	CARBON	2.2K	5%	1/4W	
R156	1-215-902-11	METAL OXIDE	47K	5%	2W	F
R157	1-215-902-11	METAL OXIDE	47K	5%	2W	F
R158	1-246-539-00	CARBON	560K	5%	1/4W	
R159	1-246-539-00	CARBON	560K	5%	1/4W	
R160	1-247-733-11	CARBON	33	5%	1/2W	
R161	1-247-713-11	CARBON	1K	5%	1/4W	
R162	1-249-407-11	CARBON	150	5%	1/4W	
R163	1-249-390-11	CARBON	5.6	5%	1/4W	
R164	1-249-405-11	CARBON	100	5%	1/4W	
R165	1-247-741-11	CARBON	150	5%	1/2W	F
R166	1-249-393-11	CARBON	10	5%	1/4W	
R251	1-205-622-00	WIREWOUND	33	5%	5W	F
R252	1-205-622-00	WIREWOUND	33	5%	5W	F
R253	1-216-359-00	METAL OXIDE	6.8	5%	1W	F
R254	1-247-747-11	CARBON	470	5%	1/2W	
R255	1-247-747-11	CARBON	470	5%	1/2W	
R256	1-249-434-11	CARBON	27K	5%	1/4W	
R258	1-249-437-11	CARBON	47K	5%	1/4W	
R259	1-249-435-11	CARBON	33K	5%	1/4W	
R260	1-249-417-11	CARBON	1K	5%	1/4W	
R261	1-215-424-00	METAL	1.3K	1%	1/6W	
R262	1-249-417-11	CARBON	1K	5%	1/4W	
R263	1-215-452-00	METAL	20K	1%	1/6W	
R264	1-249-417-11	CARBON	1K	5%	1/4W	
R265	1-215-448-00	METAL	13K	1%	1/6W	
R266	1-215-420-00	METAL	910	1%	1/6W	
R267	1-205-911-11	WIREWOUND	10	5%	5W	F
R268	1-247-711-11	CARBON	680	5%	1/4W	
R269	1-247-700-11	CARBON	100	5%	1/4W	
R270	1-215-430-00	METAL	2.4K	1%	1/6W	
R271	1-249-421-11	CARBON	2.2K	5%	1/4W	
R272	1-249-397-11	CARBON	22	5%	1/4W	
R273	1-249-419-11	CARBON	1.5K	5%	1/4W	
R274	1-249-432-11	CARBON	18K	5%	1/4W	
R275	1-249-421-11	CARBON	2.2K	5%	1/4W	
R276	1-249-421-11	CARBON	2.2K	5%	1/4W	
R277	1-249-421-11	CARBON	2.2K	5%	1/4W	
R278	1-249-429-11	CARBON	10K	5%	1/4W	
R279	1-249-429-11	CARBON	10K	5%	1/4W	
R280	1-249-417-11	CARBON	1K	5%	1/4W	
R281	1-249-429-11	CARBON	10K	5%	1/4W	
R282	1-249-429-11	CARBON	10K	5%	1/4W	
R283	1-249-431-11	CARBON	15K	5%	1/4W	
R284	1-249-429-11	CARBON	10K	5%	1/4W	
R285	1-249-417-11	CARBON	1K	5%	1/4W	
R286	1-249-429-11	CARBON	10K	5%	1/4W	
R287	1-249-429-11	CARBON	10K	5%	1/4W	
R288	1-249-431-11	CARBON	15K	5%	1/4W	
R289	1-249-429-11	CARBON	10K	5%	1/4W	

<VARIABLE RESISTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
RV251	1-228-990-00	RES, ADJ, METAL GLAZE 1K	

<TRANSFORMER>

REF.NO.	PART NO.	DESCRIPTION	REMARK
T151 ⚠.	1-449-846-11	TRANSFORMER, CONVERTER	
T152 ⚠.	1-421-819-11	TRANSFORMER, CURRENT	
T153 ⚠.	1-437-188-11	TRANSFORMER, DRIVE	
T154 ⚠.	1-437-188-11	TRANSFORMER, DRIVE	
T155 ⚠.	1-449-847-11	TRANSFORMER, CONVERTER	

****

C2 BOARD (SOPS1008B)
****

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
C51	1-130-471-00	MYLAR	0.001MF	5%	50V	
C52	1-130-471-00	MYLAR	0.001MF	5%	50V	
C53	1-124-902-00	ELECT	0.47MF	20%	50V	
C54	1-124-478-11	ELECT	100MF	20%	25V	
C55	1-130-471-00	FILM	0.001MF	5%	50V	
C56	1-130-481-00	MYLAR	0.0068MF	5%	50V	
C57	1-130-495-00	MYLAR	0.1MF	5%	50V	
C58	1-123-875-11	ELECT	10MF	20%	50V	
C59	1-123-875-11	ELECT	10MF	20%	50V	

<CONNECTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
CN51	*1-560-741-00	PIN, CONNECTOR 12P	
CN52	*1-564-517-11	PLUG, CONNECTOR 2P	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D51	8-719-911-19	DIODE 1SS119	
D52	8-719-911-19	DIODE 1SS119	
D53	8-719-911-19	DIODE 1SS119	
D54	8-719-911-19	DIODE 1SS119	
D55	8-807-913-21	DIODE 11EQS04	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
D56	8-807-913-21	DIODE 11EQS04				
D57	8-719-911-19	DIODE 1SS119				
D58	8-719-107-87	THYRISTOR 03P2M				
D59	8-719-911-19	DIODE 1SS119				

<IC>

REF.NO.	PART NO.	DESCRIPTION				REMARK
IC51	8-759-906-62	IC MB3759-SNY				

<COIL>

REF.NO.	PART NO.	DESCRIPTION				REMARK
L51	1-410-466-41	INDUCTOR	4.7UH			

<TRANSISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
Q53	8-729-119-76	TRANSISTOR 2SA1175-HFE				

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R51	1-249-411-11	CARBON	330	5%	1/4W	
R52	1-249-410-11	CARBON	270	5%	1/4W	
R53	1-249-417-11	CARBON	1K	5%	1/4W	
R54	1-249-417-11	CARBON	1K	5%	1/4W	
R55	1-215-437-00	METAL	4.7K	1%	1/6W	
R56	1-247-903-00	CARBON	1M	5%	1/4W	
R57	1-247-897-11	CARBON	560K	5%	1/4W	
R58	1-249-433-11	CARBON	22K	5%	1/4W	
R59	1-249-417-11	CARBON	1K	5%	1/4W	
R60	1-249-425-11	CARBON	4.7K	5%	1/4W	
R61	1-249-421-11	CARBON	2.2K	5%	1/4W	
R62	1-249-425-11	CARBON	4.7K	5%	1/4W	
R63	1-249-425-11	CARBON	4.7K	5%	1/4W	
R64	1-247-895-00	CARBON	470K	5%	1/4W	
R65	1-249-425-11	CARBON	4.7K	5%	1/4W	
R66	1-249-423-11	CARBON	3.3K	5%	1/4W	
R67	1-249-426-11	CARBON	5.6K	5%	1/4W	
R68	1-249-415-11	CARBON	680	5%	1/4W	
R69	1-249-405-11	CARBON	100	5%	1/4W	
R70	1-249-421-11	CARBON	2.2K	5%	1/4W	
R71	1-249-427-11	CARBON	6.8K	5%	1/4W	

****

*A-1342-153-A VT BOARD, COMPLETE
****

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
C1	1-162-127-00	CERAMIC (CHIP)	270PF	5%	50V	
C2	1-164-232-11	CERAMIC (CHIP)	0.01MF	10%	50V	
C3	1-163-133-00	CERAMIC (CHIP)	470PF	5%	50V	
C4	1-163-037-11	CERAMIC (CHIP)	0.022MF	10%	25V	
C5	1-136-127-00	CERAMIC (CHIP)	270PF	5%	50V	
C6	1-164-232-11	CERAMIC (CHIP)	0.01MF	10%	50V	

<IC>

REF.NO.	PART NO.	DESCRIPTION				REMARK
IC1	8-759-927-46	IC SN74HC00NS-T1				
IC2	8-759-008-45	IC MC74HC4538F-T1				

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-075-00	METAL GLAZE	12K	5%	1/10W	
R2	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R3	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R4	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R5	1-216-103-00	METAL GLAZE	180K	5%	1/10W	
R6	1-216-025-00	METAL GLAZE	100	5%	1/10W	

****

*A-1301-853-A MT BOARD, COMPLETE
****

<CAPACITOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
C1	1-163-113-00	CERAMIC (CHIP)	68PF	5%	50V	
C2	1-164-232-11	CERAMIC (CHIP)	0.01MF	10%	50V	
C3	1-164-232-11	CERAMIC (CHIP)	0.01MF	10%	50V	

<IC>

REF.NO.	PART NO.	DESCRIPTION				REMARK
IC1	8-759-008-45	IC MC74HC4538F-T1				
IC2	8-759-916-25	IC SN74HC32NS-T1				

<RESISTOR>

REF.NO.	PART NO.	DESCRIPTION				REMARK
R1	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	

****

MISCELLANEOUS
****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	⚠.1-236-604-11	FILTER, BLOCK NOISE(M3B BOARD)	
	⚠.1-238-755-11	RESISTOR ASSY, HIGH-VOLTAGE	
	⚠.1-413-483-13	REGULATOR, SWITCHING(SOPS1008B)	
	⚠.1-451-355-12	DEFLECTION YOKE (Y636PJ)	
	⚠.1-452-443-11	NECK ASSY, CRT (NA367)	
	⚠.1-452-487-31	NECK ASSY, CRT (NA363A)	
	⚠.1-453-108-11	DC BLOCK, HIGH-VOLTAGE	
	⚠.1-453-108-31	DC BLOCK, HIGH-VOLTAGE	
	⚠.1-503-917-11	SPEAKER	
	1-541-702-11	FAN, DC	
	1-541-703-11	FAN, DC	
	*1-555-110-00	CABLE, P-P	
	*1-575-091-11	CABLE, P-P	
	⚠.1-559-865-31	LEAD ASSY, HIGH-VOLTAGE	
	⚠.1-574-973-11	LEAD ASSY, HIGH VOLTAGE	
	⚠.1-574-974-11	LEAD ASSY, HIGH VOLTAGE	
	1-575-092-11	CONNECTOR ASSY, MULTI 14P	
	1-575-100-11	CABLE, MINIATURE PLUG	
	⚠.1-560-222-11	3P INLETALIZED	
	1-533-224-11	HOLDER, FUSE (DIA. 5.2)	
C901	1-136-951-11	CAP, METALIZED FILM 0.1MF 20% 25V	
C902	1-136-951-11	CAP, METALIZED FILM 0.1MF 20% 25V	
C903	1-136-951-11	CAP, METALIZED FILM 0.1MF 20% 25V	
F901	⚠.1-532-325-00	FUSE, TIME-LAG 6.3A/250V	
R901	1-202-719-00	RES, SOLID 1.00M 10% 1/2W	
SW901	⚠.1-532-325-00	SWITCH, PUSH (AC POWER) (1 KEY)	
T901	⚠.1-944-506-12	HARNESS (P)	
	⚠.1-575-236-11	CORD, POWER	
V901	⚠.8-736-626-05	CRT 07MJ(R)	
V902	⚠.8-736-624-05	CRT 07MJ(G)	
V903	⚠.8-736-625-05	CRT 07MJ(B)	

****

REF.NO.	PART NO.	DESCRIPTION	REMARK
	ACCESSORIES AND PACKING MATERIALS *********************************		
	*X-4029-259-1	PLATE ASSY, BOTTOM	
	*X-4029-464-1	PANEL ASSY	
	*3-674-673-01	STOPPER (A)	
	3-751-394-11	MANUAL, INSTRUCTION	
	3-751-397-11	MANUAL, INSTRUCTION	
	3-752-649-11	INSTRUCTION (MANUAL)	
	3-752-650-11	INSTRUCTION (FITTING)	
	*4-030- 141-01	LED	
	*4-030- 142-01	CUSHION (UPPER)	
	*4-030-143-01	RAIL	
	*4-356-207-00	BAND, ASSY	
	*4-396-931-01	BAG, POLYETHYLENE	
	*4-398- 727-01	CAP	

RVP-6000QMT
RM-1270

SERVICE MANUAL

AEP Model

RVP-6000QMT

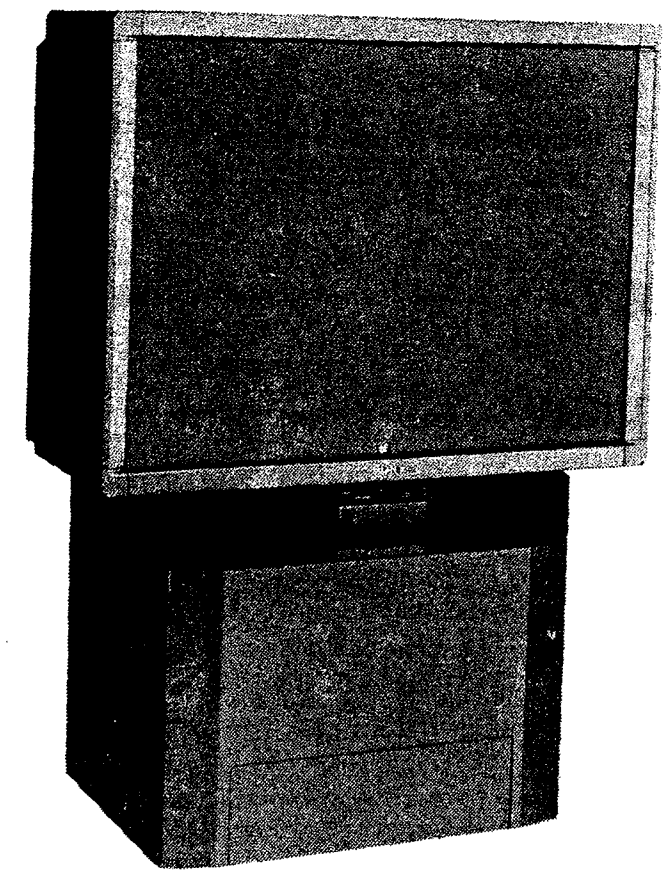

Note: The service manual for RM-1270 has been issued separatly.

MODELS OF THE SAME SERIES	
RVP-6000QMB/QMT	
HDIR-550MB/MT	
VPH-1270QM	

SPECIFICATIONS

Optical

Projected picture size	Factory-adjusted to 60 inches measured diagonally
Luminance	150 ft-L (white peak)

General

Resolution	1280 DOTs (RGB input at 15 kHz) 700 TV lines (VIDEO input)
Accessories supplied	Remote Commander RM-1270 (1) with 3 R6 (AA) batteries Remote Commander cable (1) AC power cord (1)

MICROFILM

COLOR REAR VIDEO PROJECTOR

SONY®

TABLE OF CONTENTS

Section *Title* *Page*

1. GENERAL

1-1. Parts List 306
1-2. Installation 307

2. DISASSEMBLY 310

3. EXPLODED VIEW 311

4. ELECTRICAL PARTS LIST 312

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

NOTE:
Be careful as the following is described in the form including the lower cabinet (RVP-6000QMB, packed separately).

SECTION 1
GENERAL

- Be sure to turn off all equipment before connection.
- Handle the screen and mirrors with care as they may easily be damaged.
- At least two or three persons are required for safe installation of this heavy component.
- Install this projector in a horizontal location. Unstable installation may cause malfunctions and accidents.
- Do not install this projector in a humid place.

Caution

Be careful not to touch portions of the projector other than those indicated in this manual because dangerous high voltages are present.

Illumination

To obtain the best picture, the screen should not be exposed directly to illumination or sunlight from the front.

- Ceiling mounted spot lighting is recommended. Use a cover over fluorescent lamps to avoid lowering contrast ratio.
- Cover any windows that face the screen with opaque draperies.
- It is desirable to install the projector in a room where floor and walls are not of light-reflecting material. If the floor and walls are of reflecting material, it is recommended that the carpet and wall paper be changed to a dark color.

1-1. PARTS LIST

Make sure that all parts are supplied.

Upper cabinet (1)

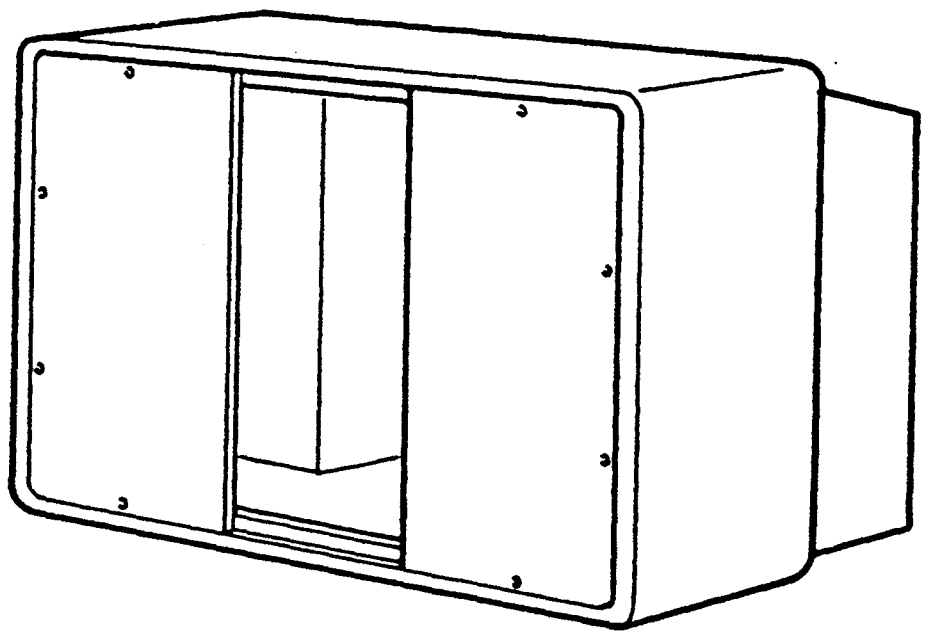

Lower cabinet (1) (RVP-6000QMB, Packed Separately)

The projector is mounted.

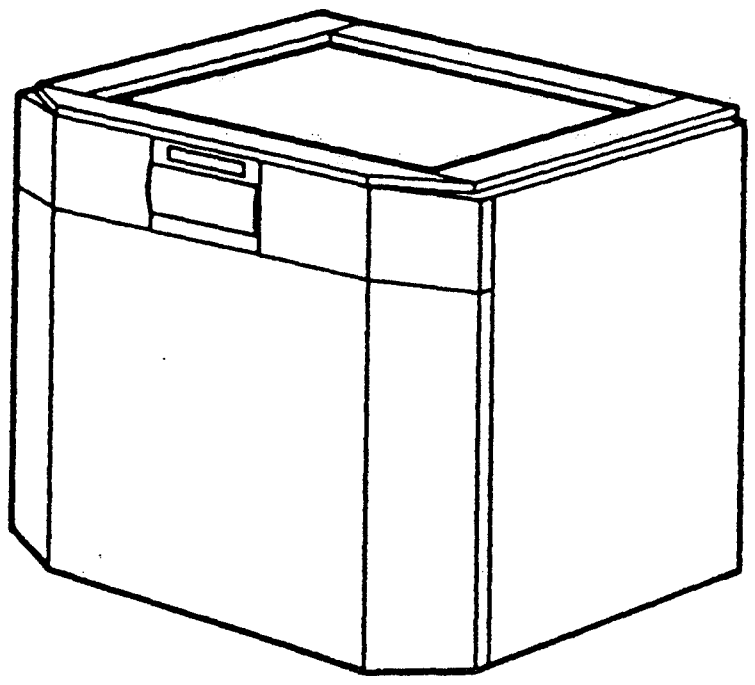

Screen (1)

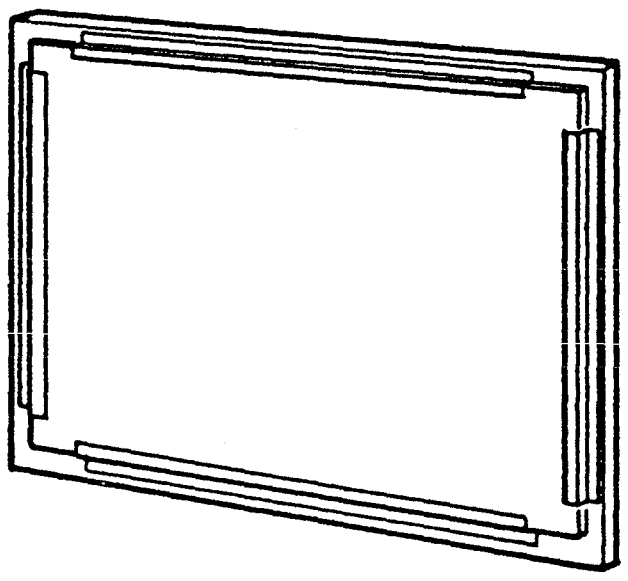

Screen frame (1)

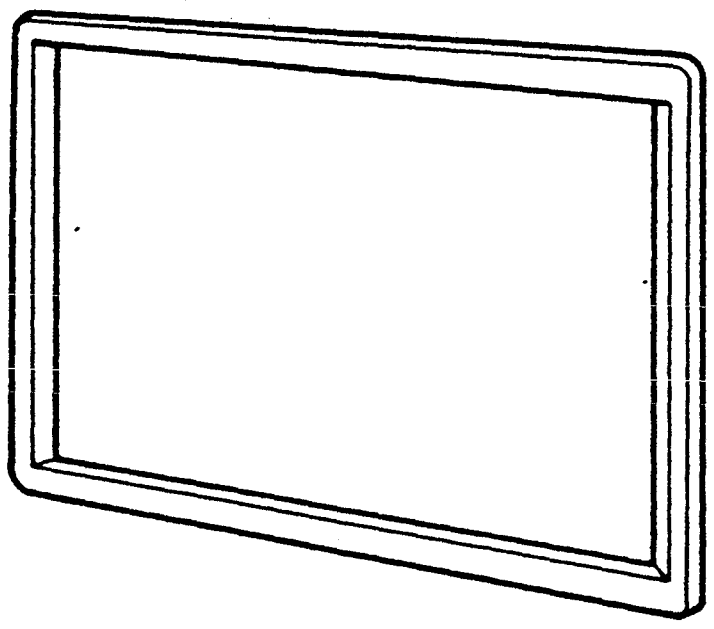

ⓐ **Wing screw** M6 × 40 (6)



ⓑ **Wing screw** M6 × 15 (2)



ⓒ **Screw** M4 × 40 (2)



1-2. INSTALLATION

1 Place the upper cabinet on the lower cabinet.

1 Place the projection at the bottom of the upper cabinet inside the frame of the lower cabinet.

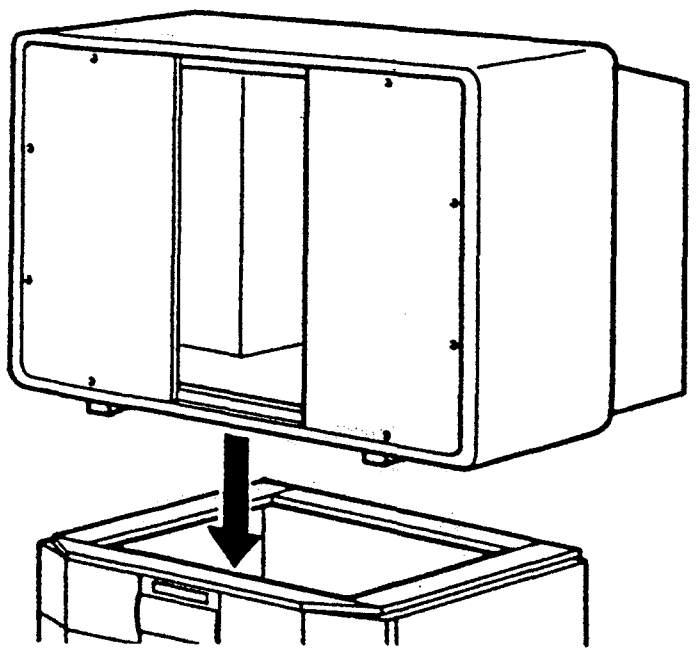

2 Press the upper cabinet backward until it stops so that the back of upper and lower cabinets align.

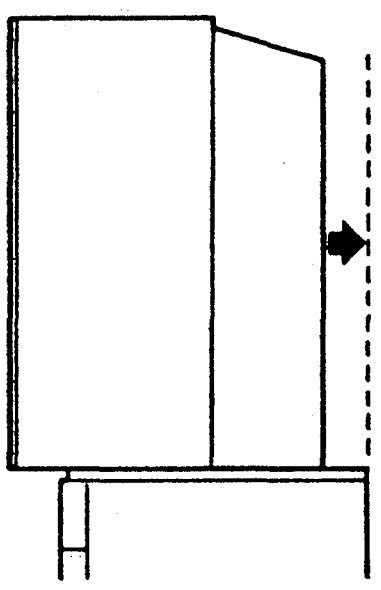

3 Remove the cabinet board.

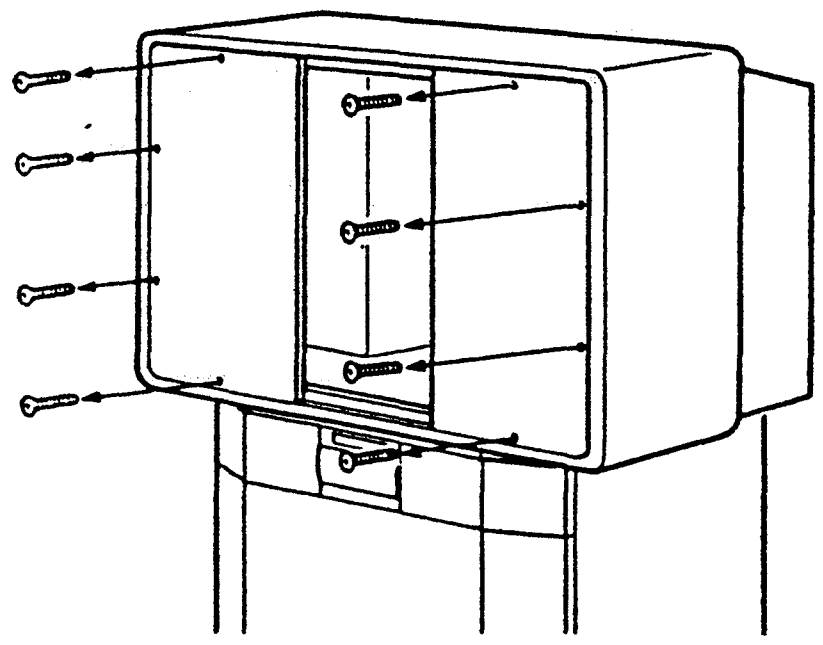

4 Secure with wing screws.

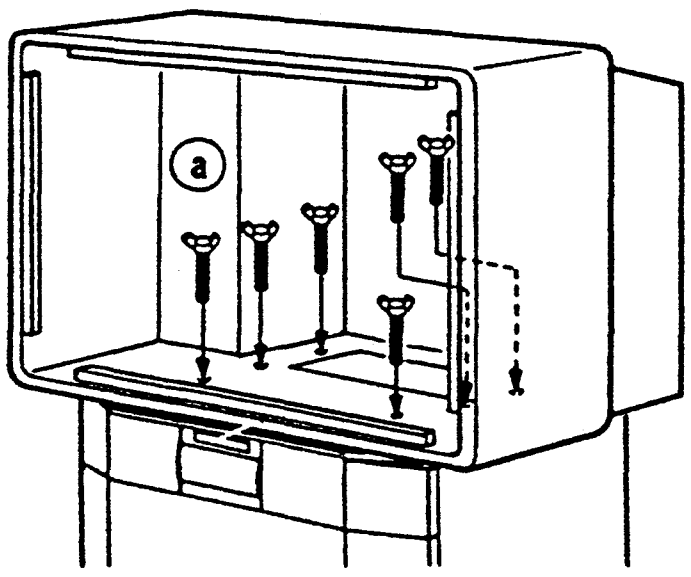

2 Pull out the mirror cover.

1 Remove the screws and metal plates.

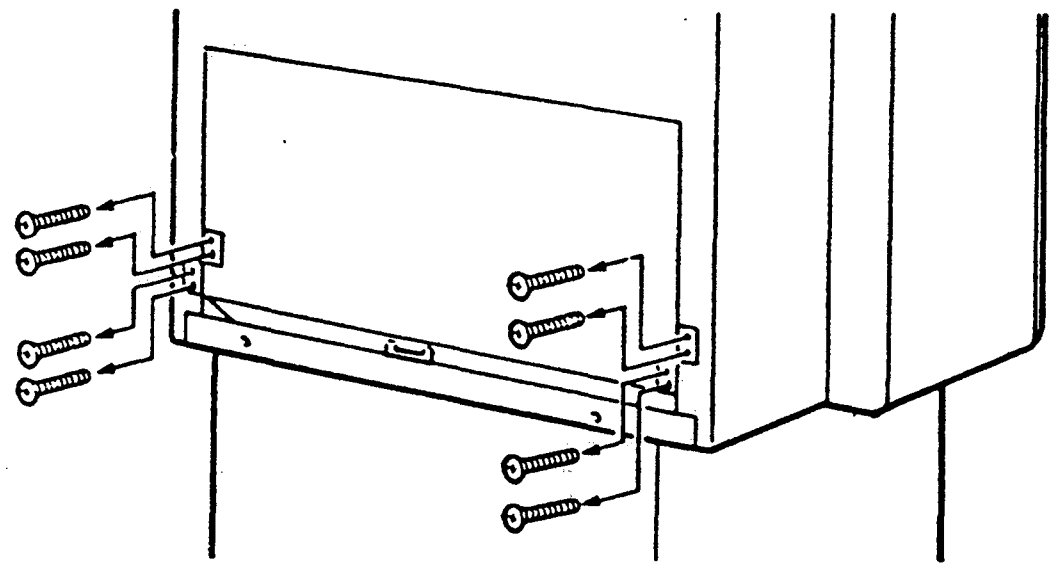

Note

Store the screws and metal plates. Use them to align the mirror cover for transportation.

2 Hold the handle and pull the mirror cover fully out.

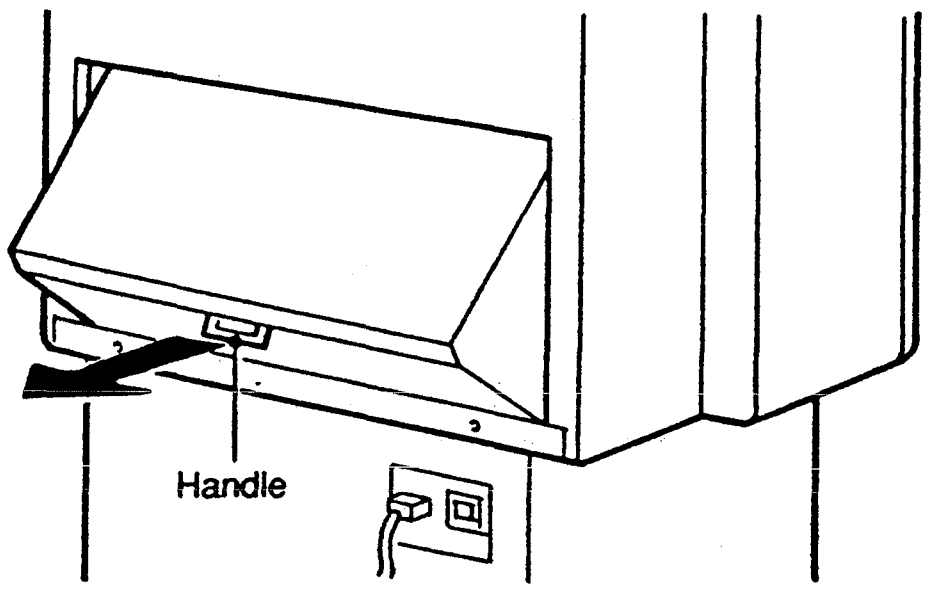

3 Secure the mirror cover.

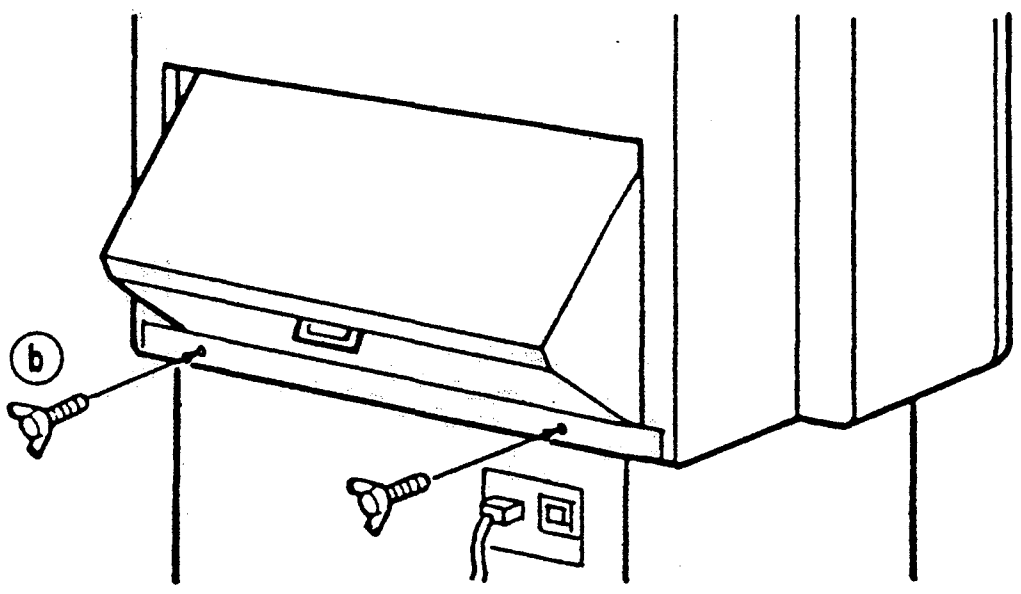

3 Mount the screen.

The mark indicates the top side of the screen.

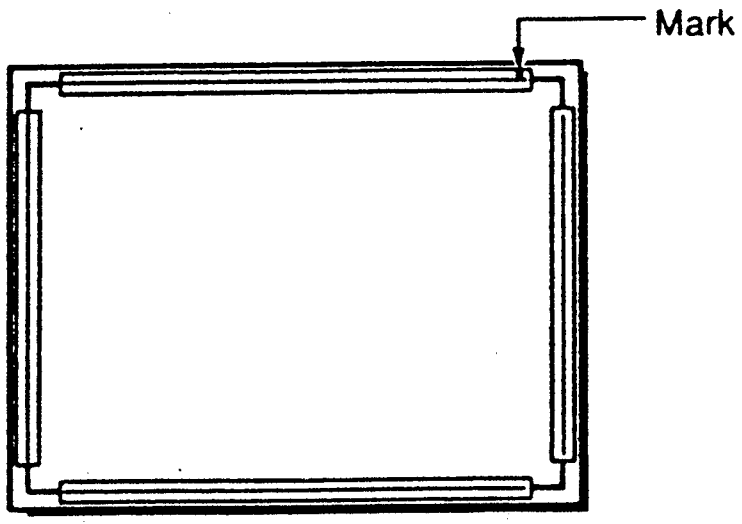

1 **Insert the bottom of the screen in the groove, and then depress the screen in the upper cabinet.**

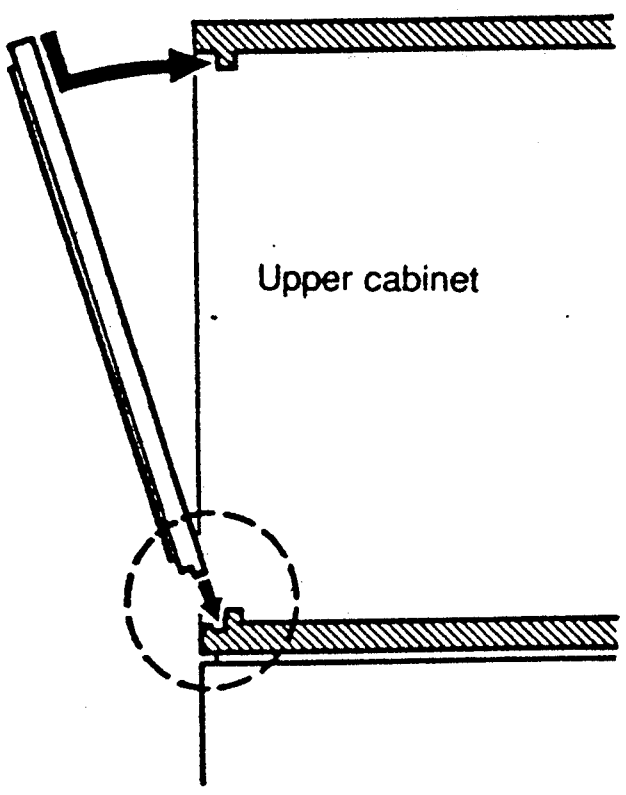

Notes

- Hold the screen by the edges.
- Do not touch the screen.

2 **Secure with the screws.**

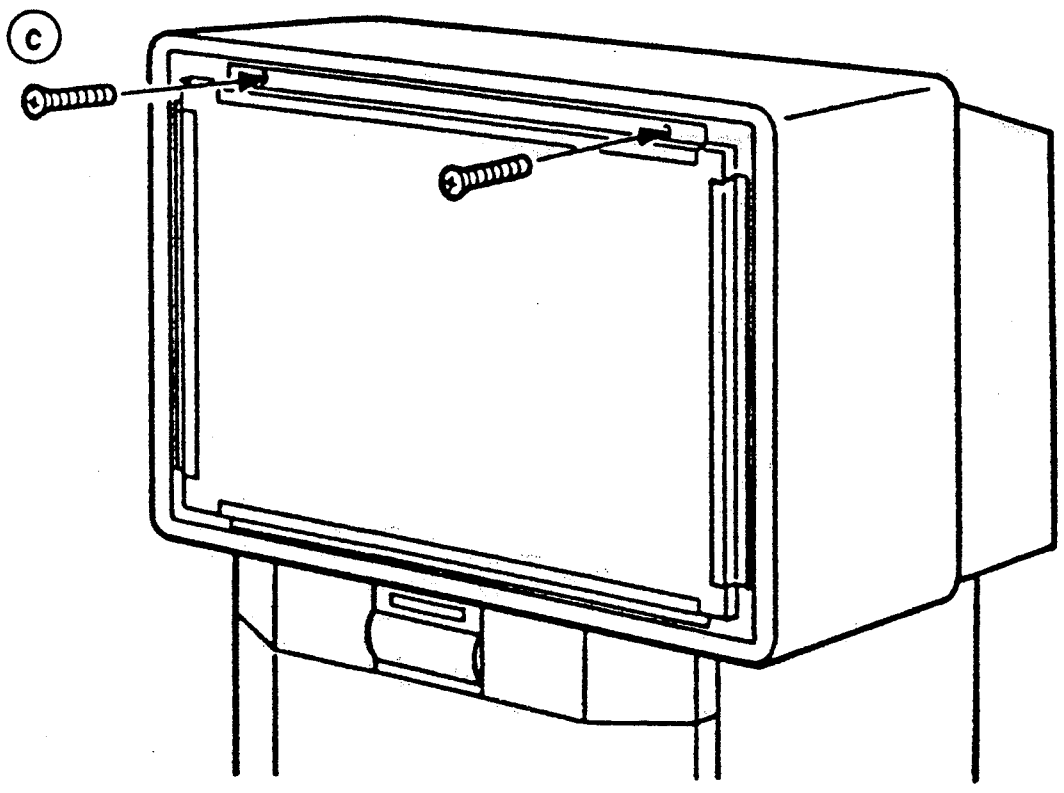

4 Mount the screen frame.

1 **Insert the projections of the screen frame into the holes of the upper cabinet.**
First, start with the center-top.

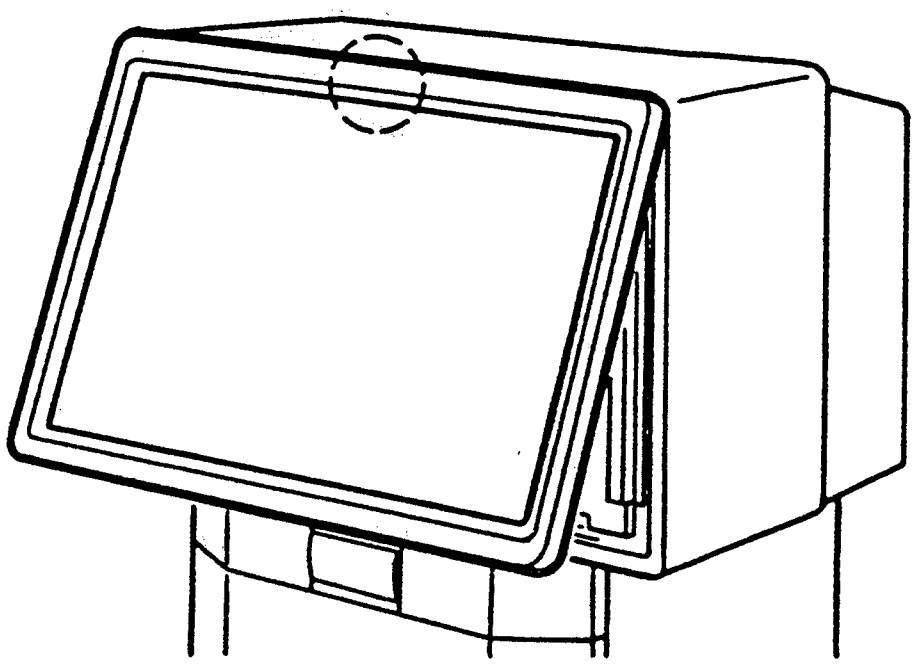

2 **Insert the other seven projections.**

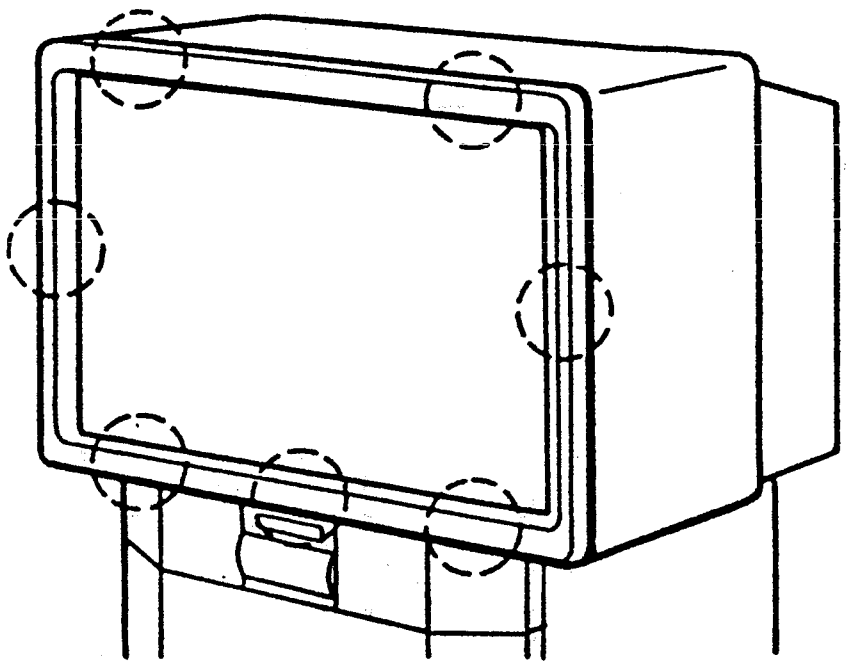

5 Secure with the two stoppers.

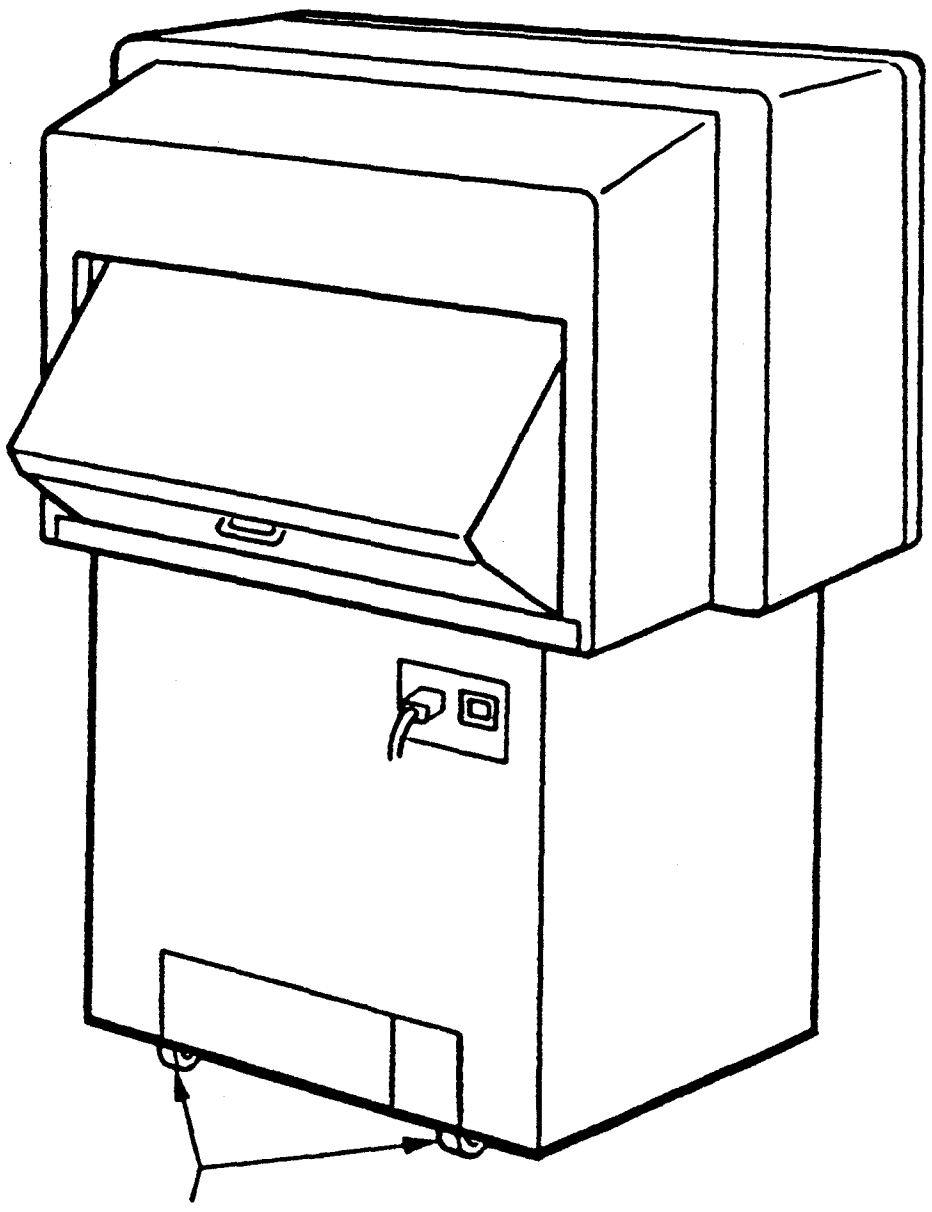

1 Move the cabinet so that the stoppers come to the rear.

2 Lower the stoppers.

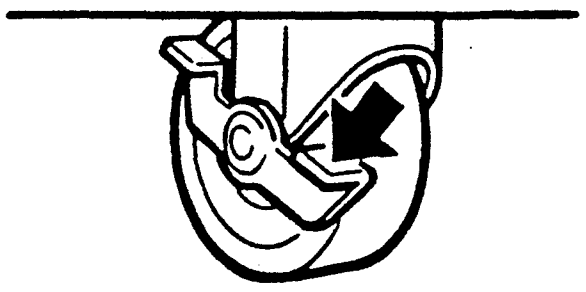

Viewing Area

Vertical viewing area

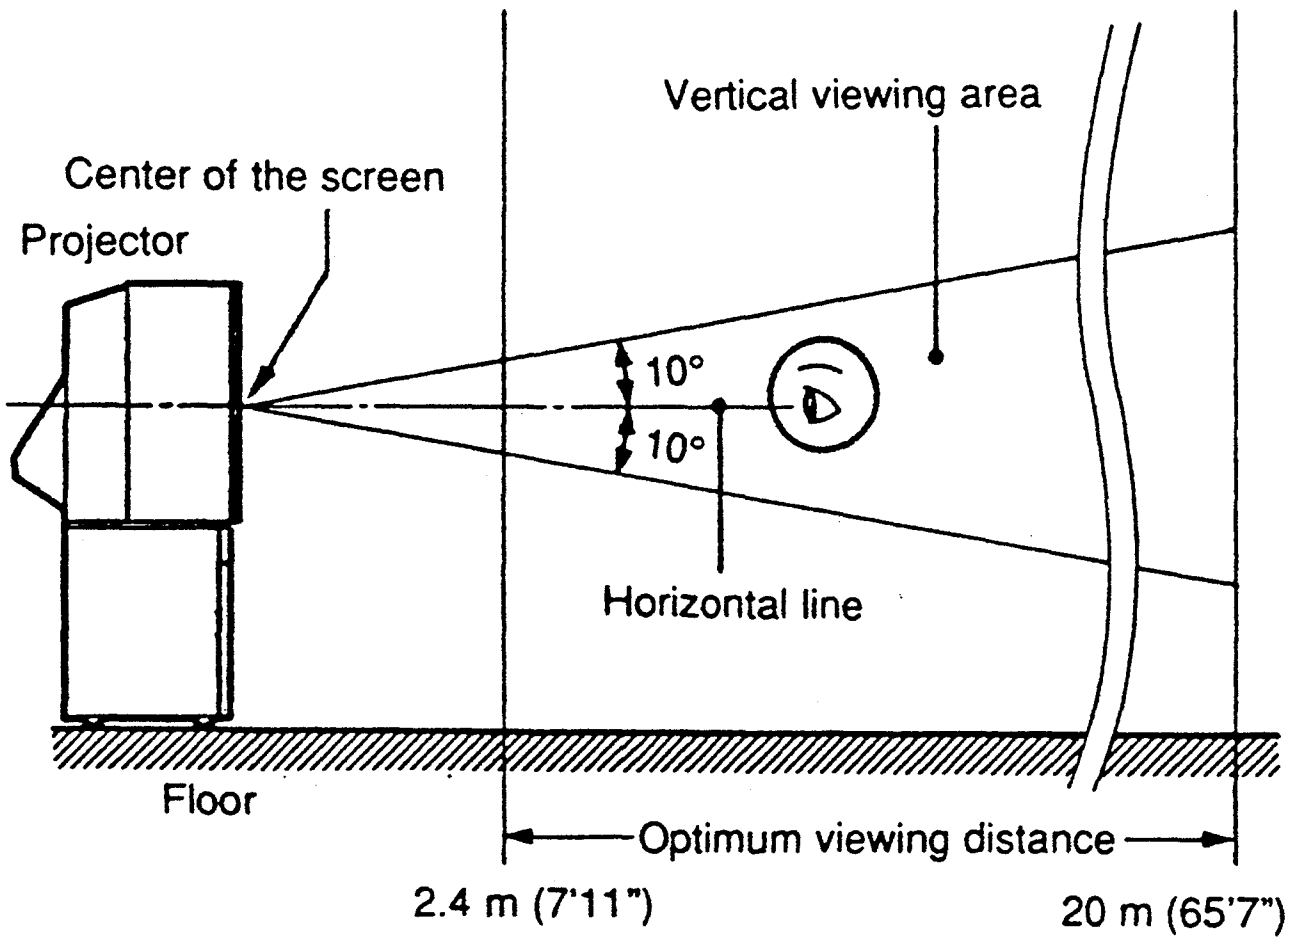
Vertical viewing area
Center of the screen
Projector
10°
10°
Horizontal line
Floor
Optimum viewing distance
2.4 m (7'11")
20 m (65'7")

Margin of error ±1%

Horizontal viewing area

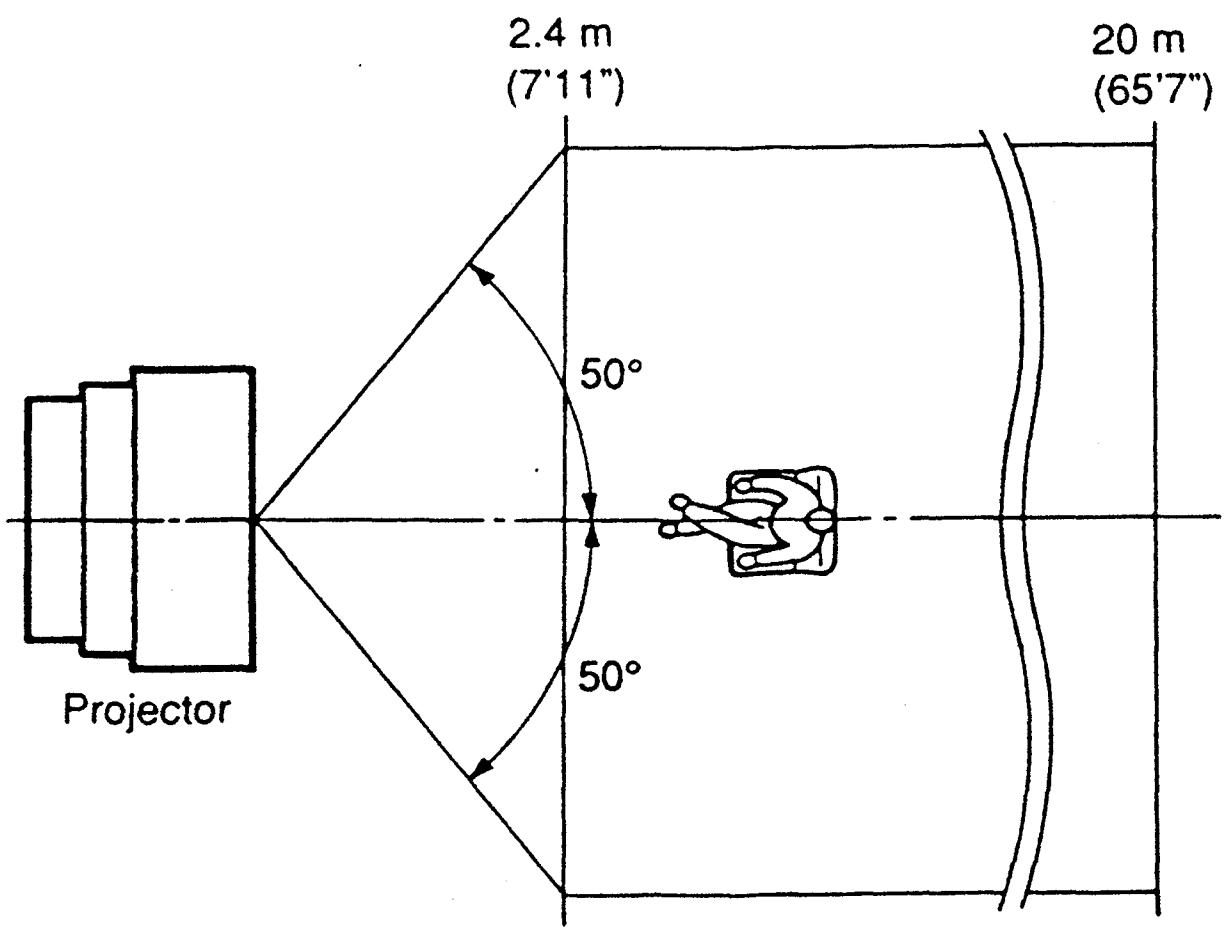
2.4 m
(7'11")
20 m
(65'7")
50°
50°
Projector

SECTION 2
DISASSEMBLY

REMOVE THE CABINET(U)BLOCK ASSEMBLY

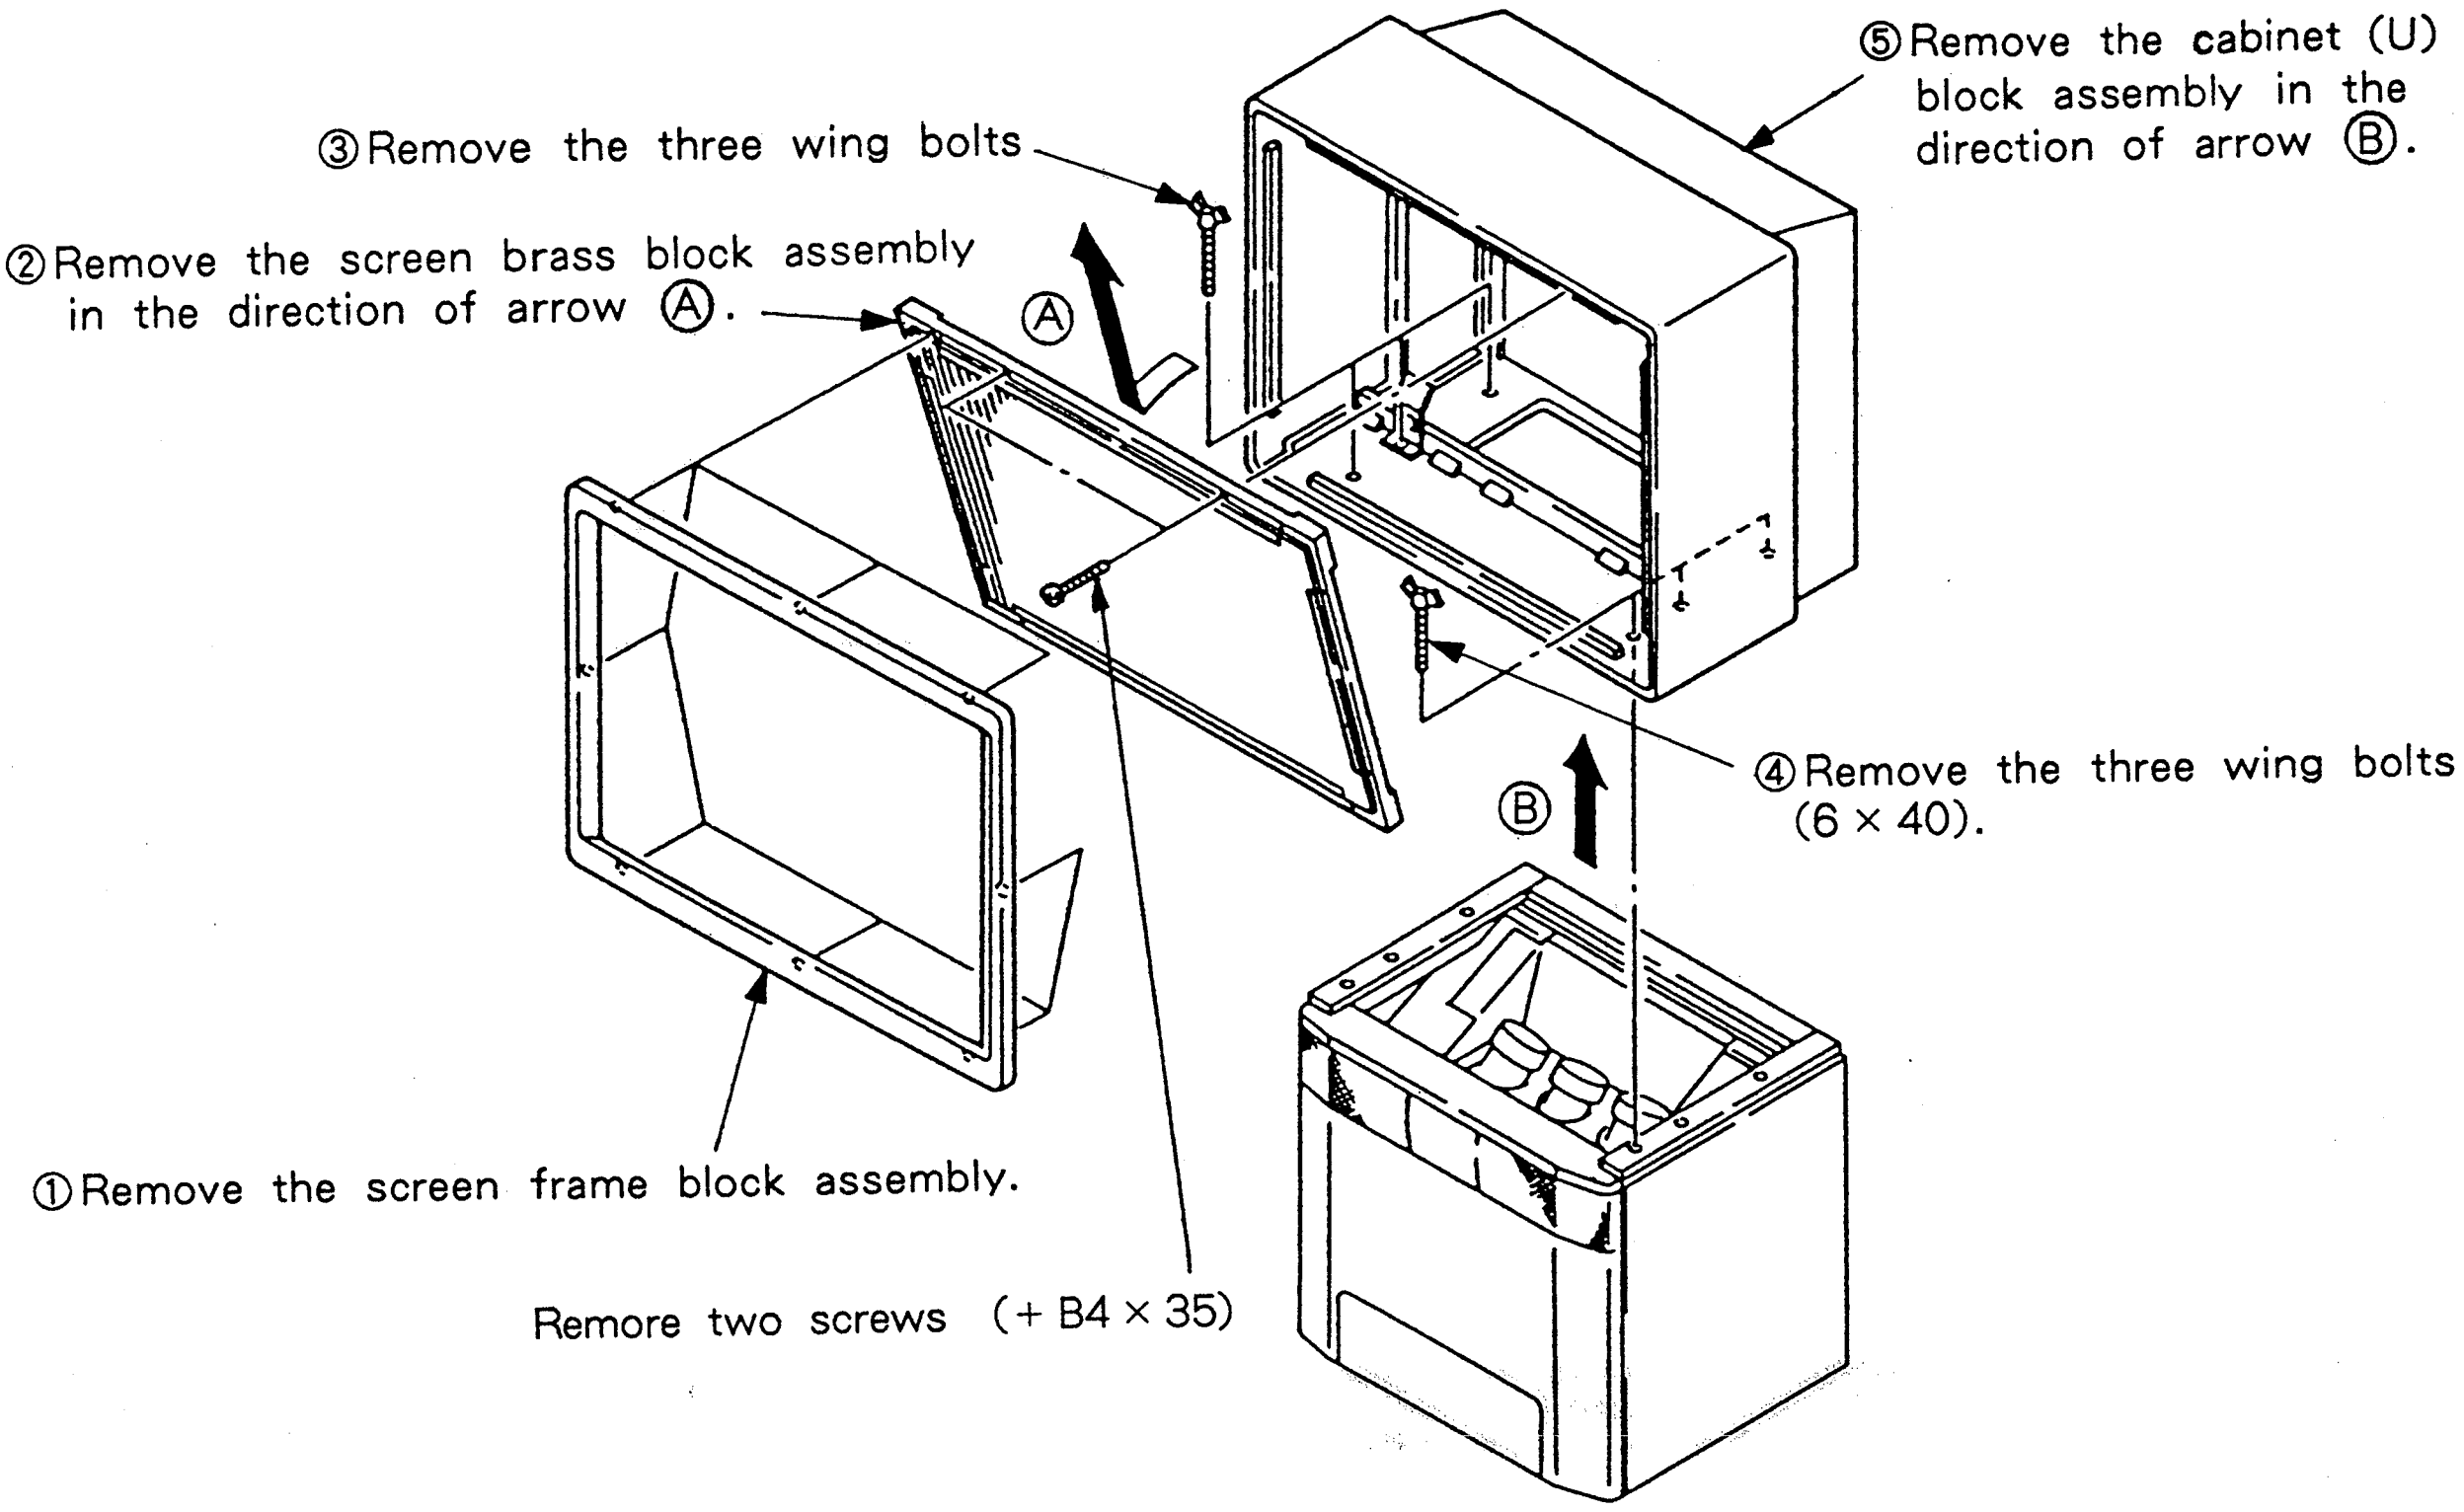
⑤Remove the cabinet (U) block assembly in the direction of arrow Ⓑ.
③Remove the three wing bolts
②Remove the screen brass block assembly in the direction of arrow Ⓐ.
Ⓐ
④Remove the three wing bolts (6 × 40).
Ⓑ
①Remove the screen frame block assembly.
Remore two screws (+ B4 × 35)

SECTION 3
EXPLODED VIEW

NOTE:
- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

CABINET (U) BLOCK

●: 7-685-661-79 +BVTP4×12
■: 7-682-565-09 +B4×16
○: 7-682-245-09 +K3×4
□: 7-682-564-04 SCREW , TERMINAL
△: 7-621-852-25 SCREW, WOOD +K2.7×6.3

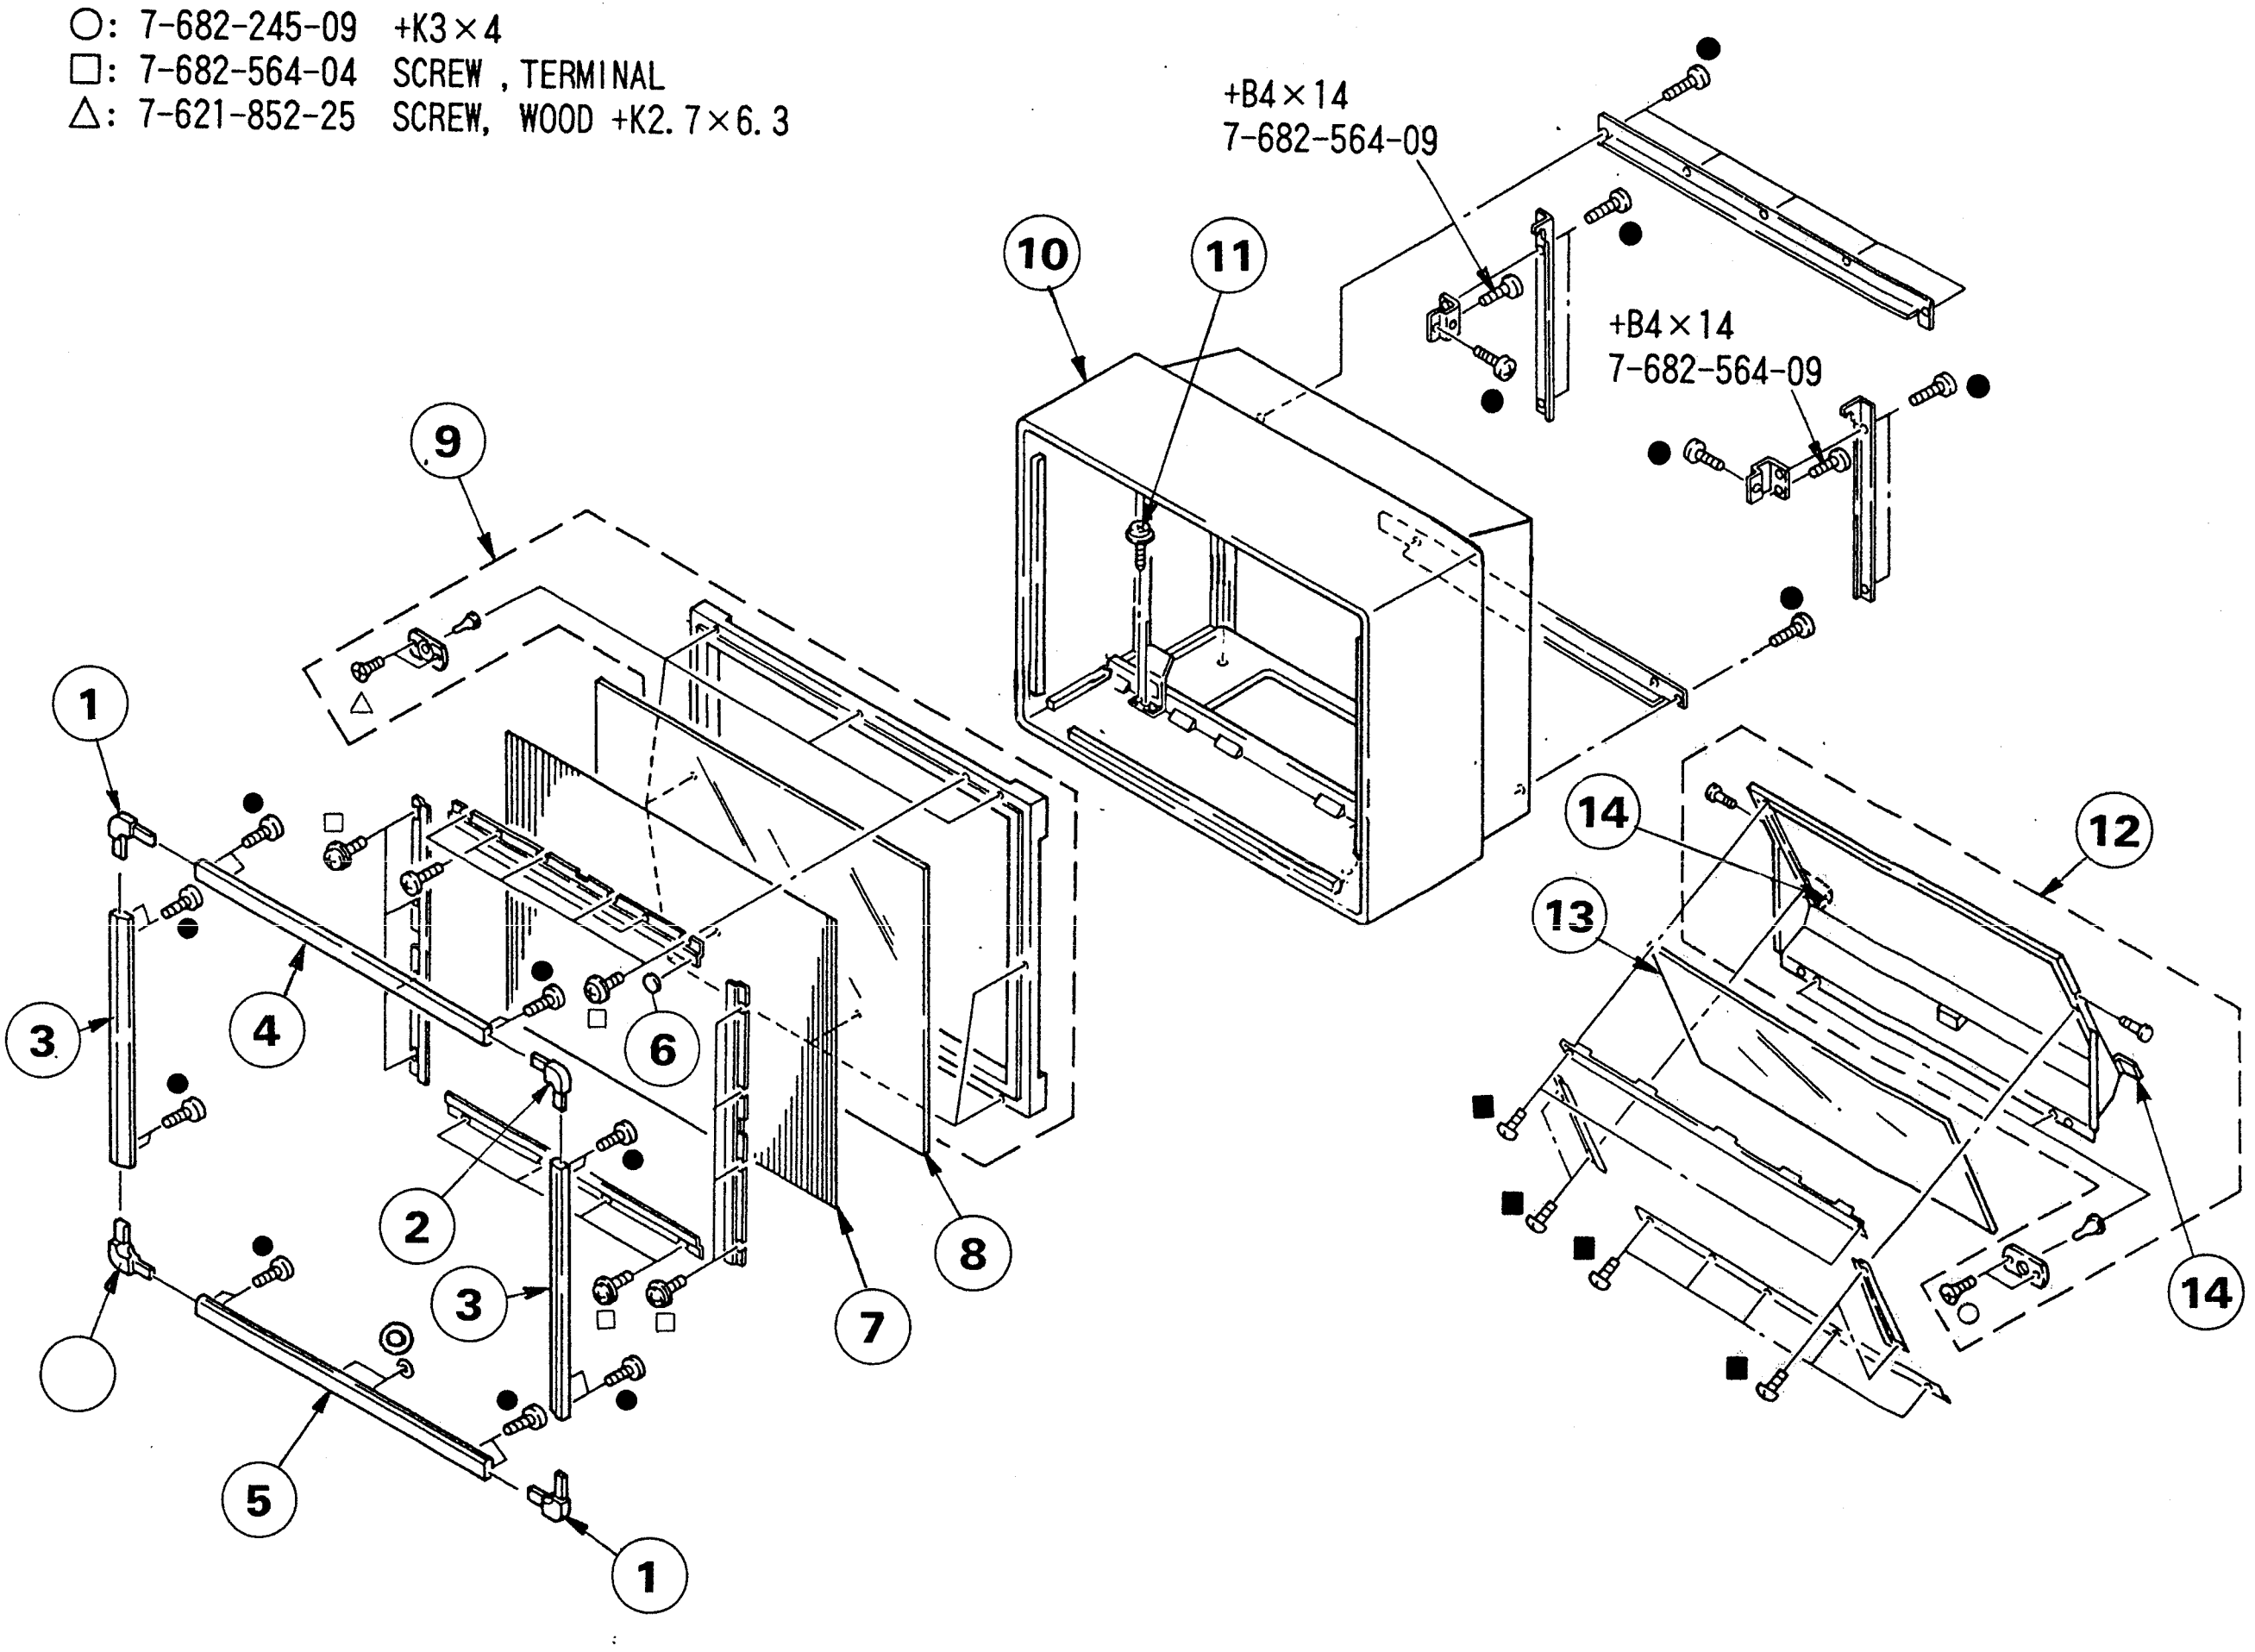

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	4-396-963-01	FRAME (L), SCREEN CORNER	
2	4-396-964-01	FRAME (R), SCREEN CORNER	
3	X-4395-553-1	FRAME (V) ASSY, SCREEN	
4	X-4395-551-1	FRAME (H.L) ASSY, SCREEN	
5	X-4029-035-1	FRAME (L) ASSY, SCREEN	
6	2-270-660-00	MARKER (R)	
7	4-396-959-11	SCREEN (L)	
8	X-4029-162-1	SCREEN (F)	
9	*X-4395-546-1	BRACE ASSY, SCREEN	
10	*X-4029-034-1	CABINET (U) ASSY	11
11	4-378-522-01	SCREW, TAPPING, HEXAGON HEAD	
12	*X-4395-542-1	COVER ASSY, MIRROR	
13	4-396-952-01	MIRROR	
14	4-396-983-01	HOLDER (M)	

SECTION 4
ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : mH, UH : μH

- The components identified by ⧓ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- ✱ : Selected to yield optimum performance.
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF.NO.	PART NO.	DESCRIPTION	REMARK
		ACCESSORIES AND PACKING MATERIALS *********************************	
	A-1470-892-A	COMMANDER ASSY (RM-1270)	
	A-1499-937-A	X BOARD, COMPLETE (INCLUDING THE FOLLOWING PARTS)	
	*1-568-982-11	CONNECTOR, FEMALE 96P	
	*1-568-983-11	CONNECTOR, FEMALE 96P	
	*1-568-984-11	CONNECTOR, MALE 96P	
	*4-353-708-00	HOOK, FINGER	
	*X-4029-463-1	PANEL ASSY	
	*X-4395-584-1	PLATE ASSY, BOTTOM	
⚠	1-559-303-11	CODE, POWER	
	1-575-100-11	CABLE, MINIATURE PLUG	
	*4-356-207-00	BAND ASSY	
	*4-395-902-01	BAG, PROTECTION	
	*4-396-287-01	SPACER	
	*4-396-288-01	BOX, ACCESSORY	
	*4-396-908-01	SPACER	
	*4-396-931-01	BAG, POLYETHYLENE	
	*4-395-932-01	SPACER, SCREEN	
	*4-396-933-02	LID	
	*4-396-936-02	CARTON, SCREEN	
	*4-396-937-02	CUSHION (LEFT UPPER)	
	*4-396-938-02	CUSHION (RIGHT UPPER)	
	*4-396-939-02	CUSHION (LEFT UPPER)	
	*4-396-940-02	CUSHION (RIGHT UPPER)	
	7-682-670-09	SCREW +PSW 4×40	
	7-683-561-17	BOLT, WING 6×15 TYPE2	
	7-683-565-17	BOLT, WING 6×40 TYPE2	
	7-685-134-19	SCREW +P 2.6×8 TYPE2 NON-SLIT	